

ASSEMBLY INSTRUCITION COASTER FINE FURNITURE



Fine Furniture for every stage of life

511072 (B1&B2) Loveseat

REVISION 0: 06/23/2025

COASTERFURNITURE.COM

ITEM: 511072 (B1&B2)

ASSEMBLY INSTRUCTION



ASSEMBLY TIPS:

- 1. Remove hardware form box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING:

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A SOFA



1PC

B RAIL



2PCS

B2 (BOX 2)

C LEG FRAME



2PCS

ITEM: 511072 (B1&B2)

ASSEMBLY INSTRUCTION



ASSEMBLY TIPS:

- 1. Remove hardware form box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING:

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
- 2. This product is for home use only and not intended for commercial establishments.


HARDWARE IDENTIFICATION

Z-B1 (BOX1) - HARDWARE PACKED IS LOCATED IN 511072(B1)


1	LONG BOLT (M6 x 80mm - BLK)	4PCS
2	U-WASHER (15 x 18 x 2mm - RBW)	4PCS
3	SHORT BOLT (M6 x 50mm - BLK)	8PCS
4	LOCK WASHER (1/4mm - BLK)	12PCS
5	BIG FLAT WASHER (2mm - BLK)	8PCS
6	ALLEN WRENCH (M4 x 95mm - BLK)	1PC
7	SMALL FLAT WASHER (1/4mm - BLK)	1PC

ITEM: 511072 (B1&B2) ASSEMBLY INSTRUCTION STEP 1



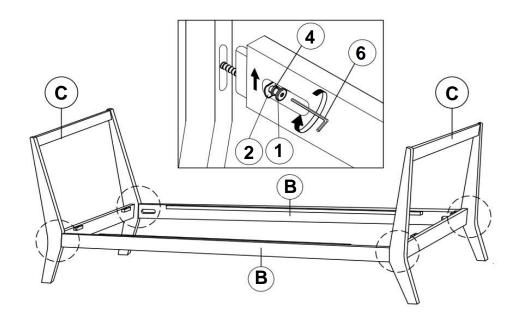


STEP 2

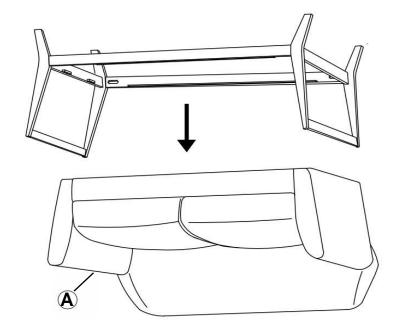


COASTERFURNITURE.COM

ITEM: 511072 (B1&B2) ASSEMBLY INSTRUCTION STEP 3



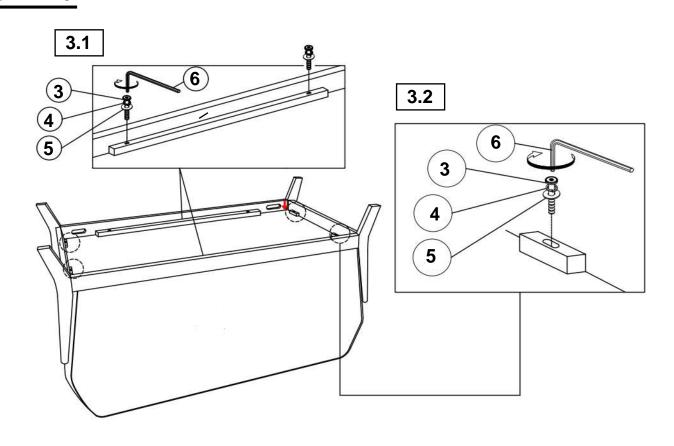


STEP 4 COMPLETE

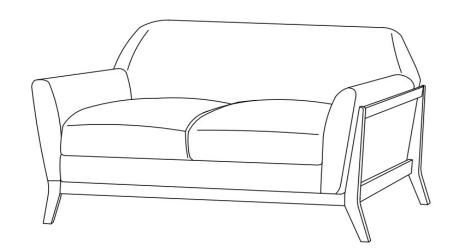



ITEM: 511072 (B1&B2)



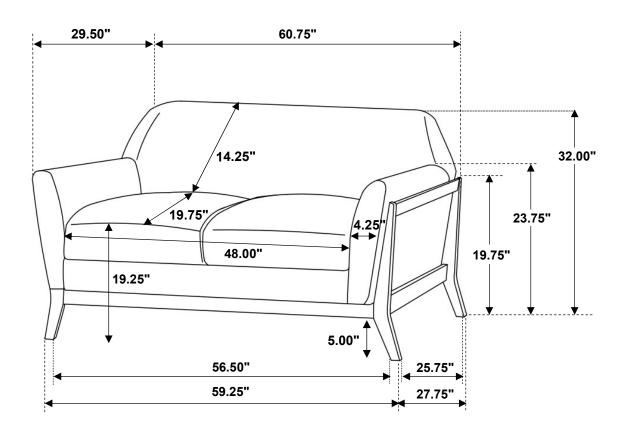

Note: Dimension tolerance ±5%