

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108930 <u>Dining Table</u>

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

### **PART IDENTIFICATION**

A TOP

B LEG

4PCS

C LEG SUPPORT

### **HARDWARE IDENTIFICATION**

1	BOLT (5/16" x 50mm - BLK)	8PCS
2	LOCK WASHER (1.6 x 14mm - BLK)	8PCS
3	FLAT WASHER (1 x 18mm - BLK)	8PCS
4	ALLEN WRENCH (M5 x 70mm - BLK)	1PC
5	FLAT HEAD SCREW (8 x 63mm - BLK)	4PCS


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 108930 ASSEMBLY INSTRUCTIONS

# COASTER

## STEP 1

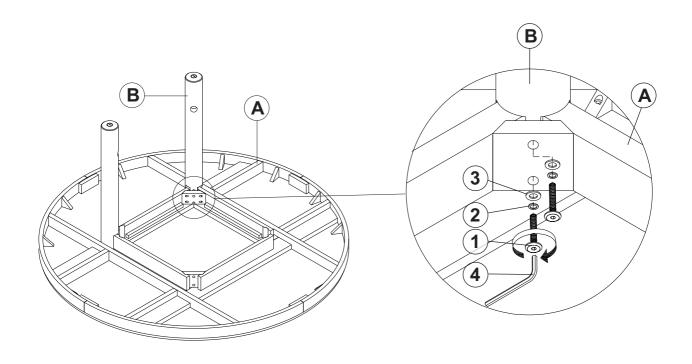


## STEP 2

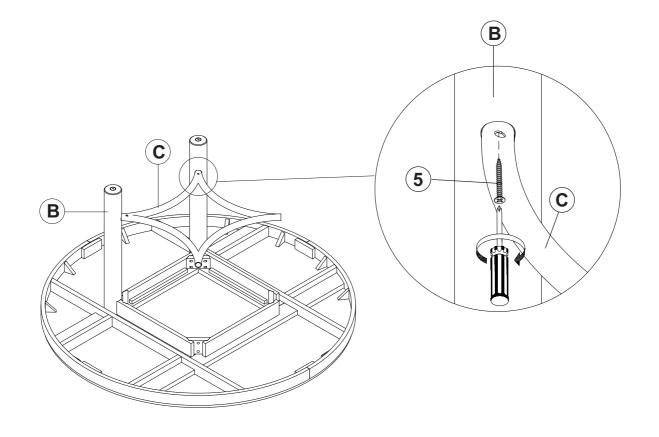

#### **ASSEMBLY INSTRUCTIONS**


# COASTER

### STEP 3

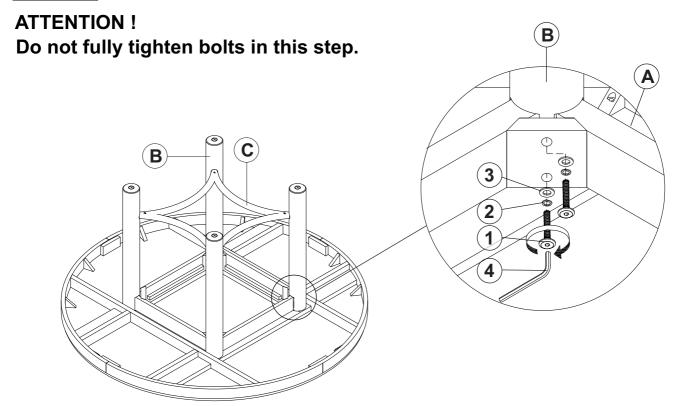

### STEP 4


Please tighten bolts 100% after assembly is complete.

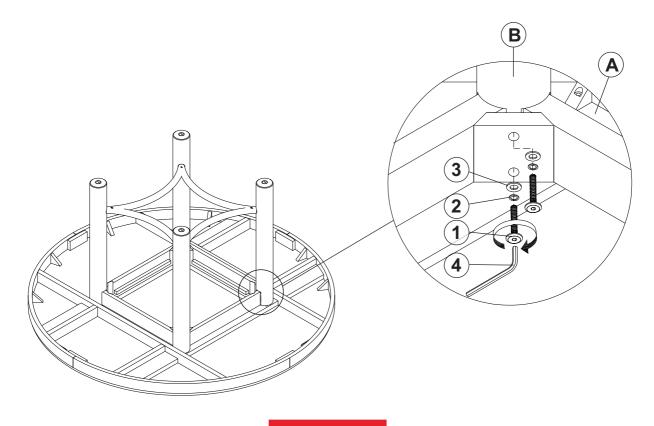


### **ASSEMBLY INSTRUCTIONS**


## STEP 5



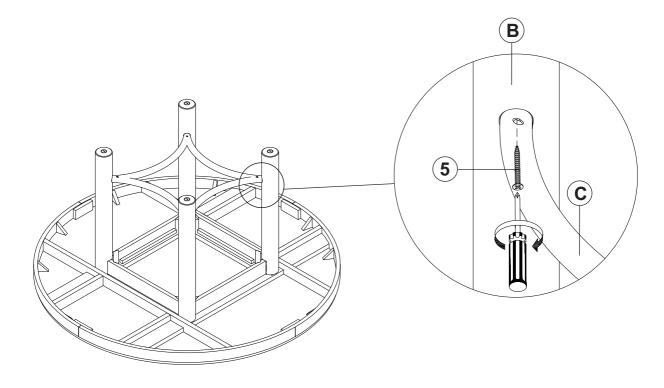

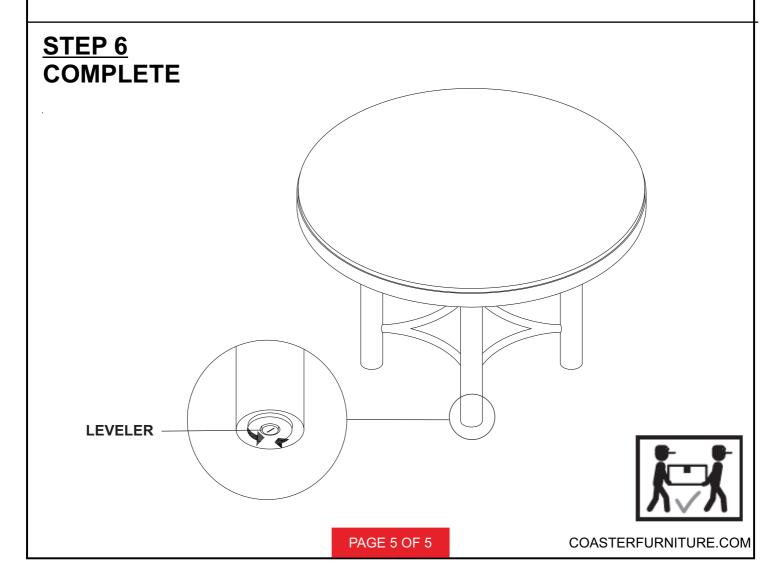



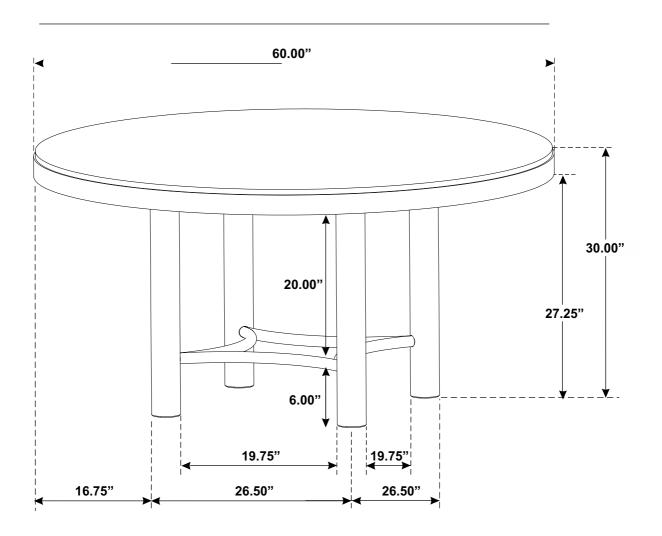

Note: Dimension tolerance ±5%



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108932SWD Side Chair

## ITEM: 108932SWD

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

## **PART IDENTIFICATION**

A	BACK FRAME	1PC
В	SEAT CUSHION WITH FRAME	1PC
С	LEFT FRONT LEG	1PC
D	RIGHT FRONT LEG	1PC
E	SIDE STRETCHER	2PCS

#### **HARDWARE IDENTIFICATION**

1	WOOD DOWEL (10 x 35mm - BRW)		1PC
2	SHORT BOLT (5/16" x 35mm - BLK)		2PCS
3	MEDIUM BOLT (5/16" x 50mm - BLK)		4PCS
4	LONG BOLT (5/16" x 75mm - BLK)		4PCS
5	LOCK WASHER (1.6 x 14mm - BLK)		10PCS
6	FLAT WASHER (1 x 18mm - BLK)		10PCS
7	ALLEN WRENCH (M5 x 70mm - BLK)		1PC
8	PAN HEAD SCREW (6 x 44mm - BLK)	••••••••••••••••••••••••••••••••••••••	4PCS

#### NOTE:


Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 108932SWD ASSEMBLY INSTRUCTIONS



## STEP 1

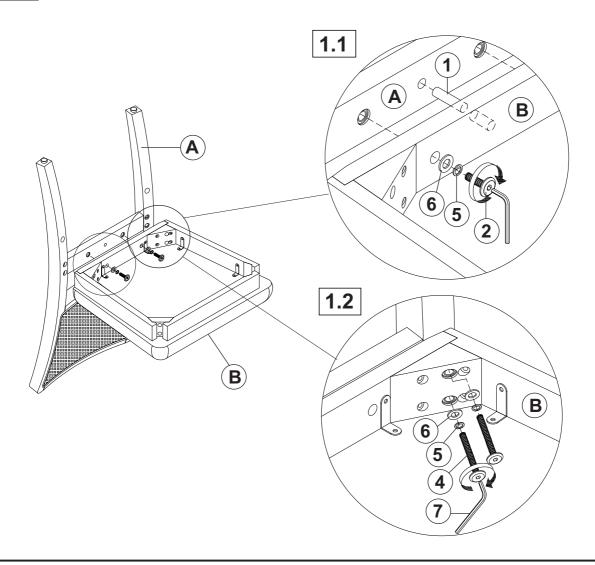

## STEP 2

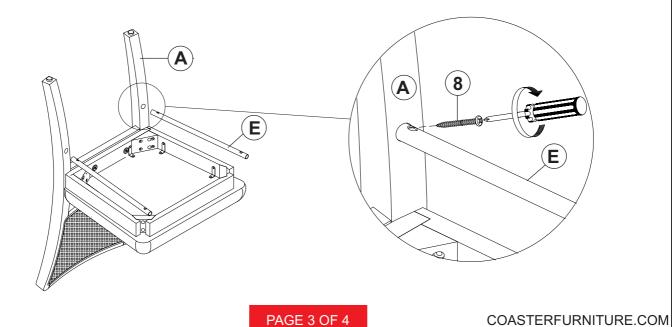


## ITEM: 108932SWD


### **ASSEMBLY INSTRUCTIONS**

## STEP 3



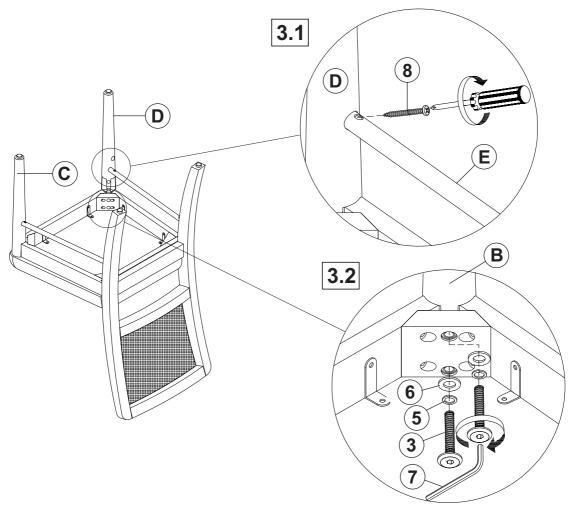


## STEP 4 COMPLETE

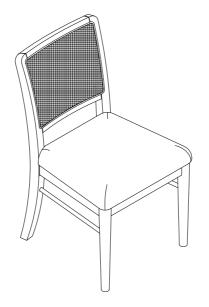



## ITEM: 108932SWD



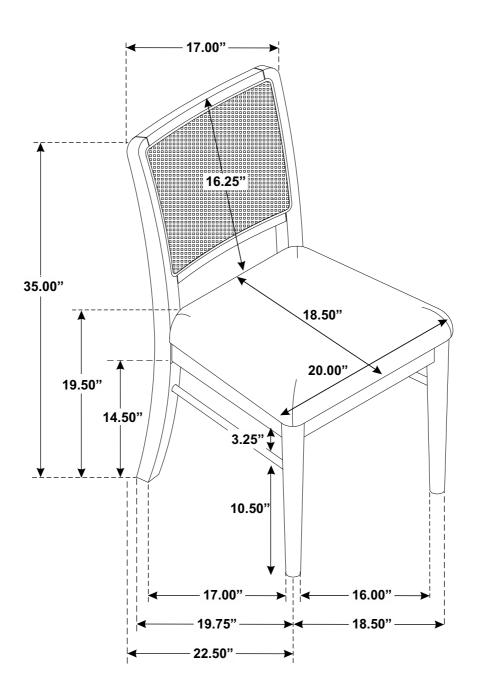

**Note: Dimension tolerance ±5%**