

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108930 <u>Dining Table</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PART IDENTIFICATION

A TOP

B LEG

4PCS

C LEG SUPPORT

HARDWARE IDENTIFICATION

1	BOLT (5/16" x 50mm - BLK)	8PCS
2	LOCK WASHER (1.6 x 14mm - BLK)	8PCS
3	FLAT WASHER (1 x 18mm - BLK)	8PCS
4	ALLEN WRENCH (M5 x 70mm - BLK)	1PC
5	FLAT HEAD SCREW (8 x 63mm - BLK)	4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 108930 ASSEMBLY INSTRUCTIONS

COASTER

STEP 1

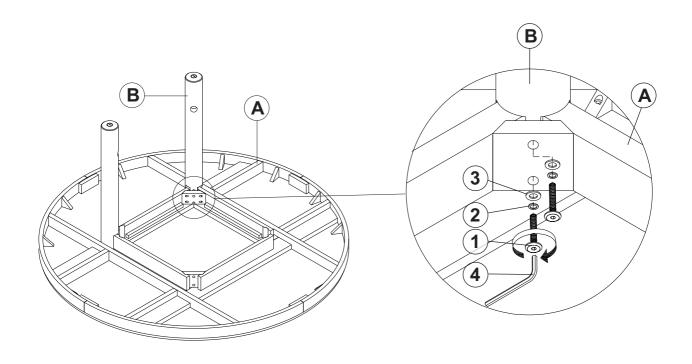


STEP 2

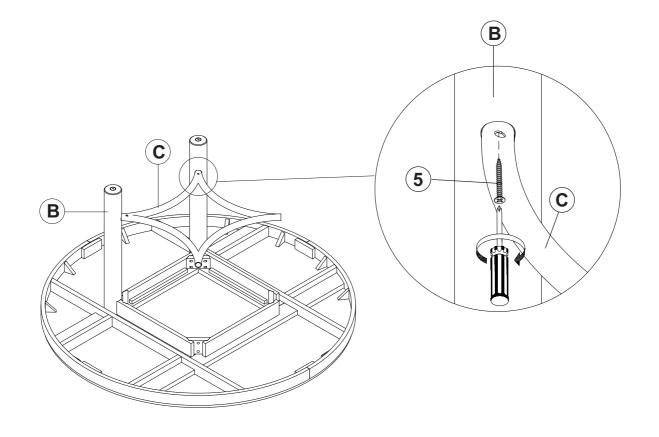

ASSEMBLY INSTRUCTIONS


COASTER

STEP 3

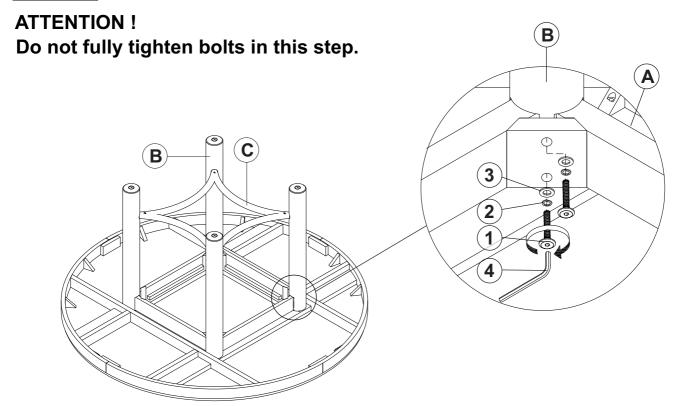

STEP 4


Please tighten bolts 100% after assembly is complete.

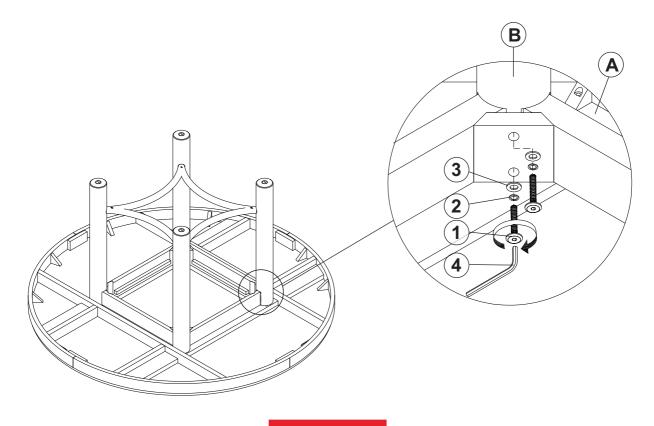


ASSEMBLY INSTRUCTIONS


STEP 5



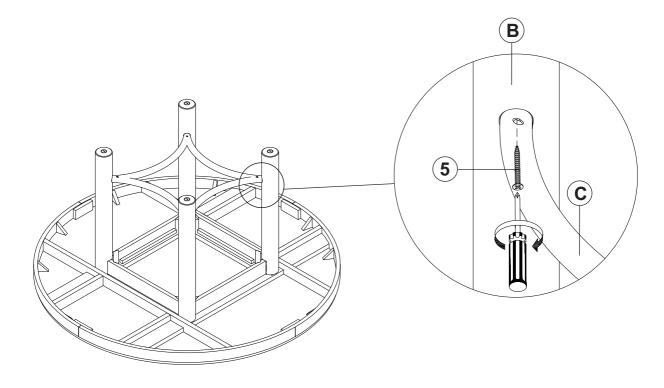

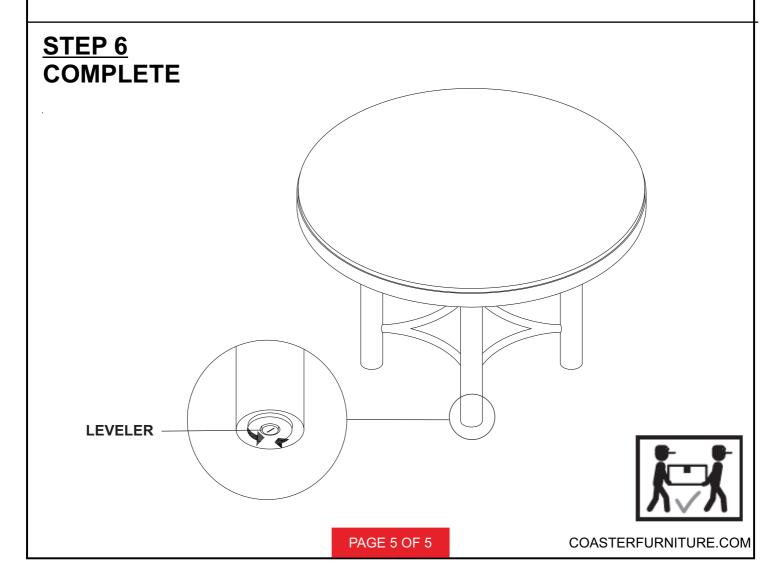



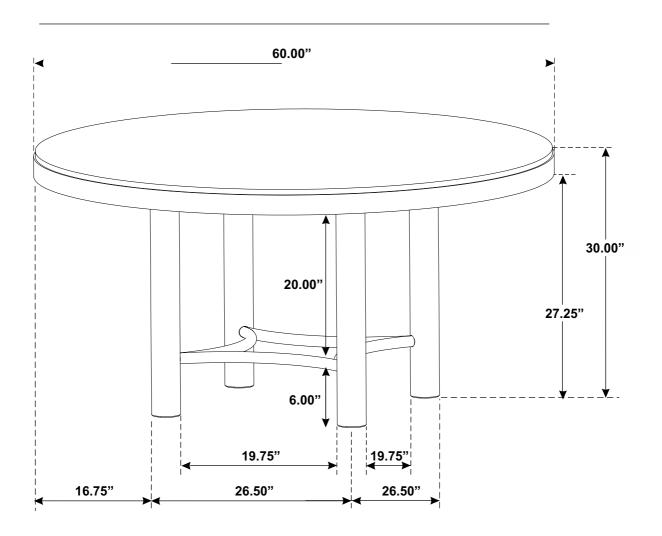

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108932BLK Side Chair

ITEM: 108932BLK

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PART IDENTIFICATION

A	BACK FRAME	1PC
В	SEAT CUSHION WITH FRAME	1PC
С	LEFT FRONT LEG	1PC
D	RIGHT FRONT LEG	1PC
E	SIDE STRETCHER	2PCS

HARDWARE IDENTIFICATION

1	WOOD DOWEL (10 x 35mm - BRW)	1PC
2	SHORT BOLT (5/16" x 35mm - BLK)	2PCS
3	MEDIUM BOLT (5/16" x 50mm - BLK)	4PCS
4	LONG BOLT (5/16" x 75mm - BLK)	4PCS
5	LOCK WASHER (1.6 x 14mm - BLK)	10PCS
6	FLAT WASHER (1 x 18mm - BLK)	10PCS
7	ALLEN WRENCH (M5 x 70mm - BLK)	1PC
8	PAN HEAD SCREW (6 x 44mm - BLK)	 4PCS

NOTE:


Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 108932BLK ASSEMBLY INSTRUCTIONS

COASTER

STEP 1

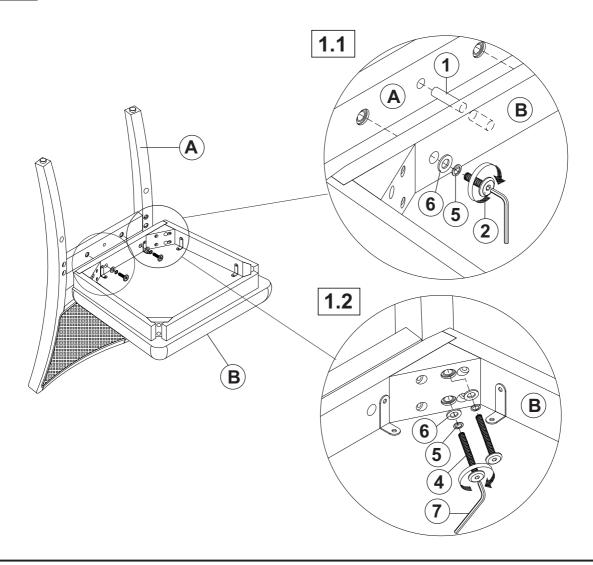

STEP 2

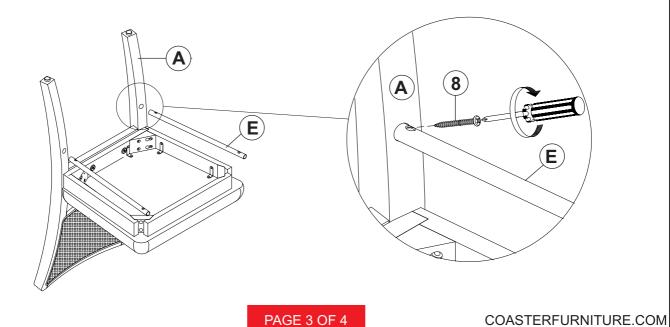


ITEM: 108932BLK


ASSEMBLY INSTRUCTIONS

STEP 3



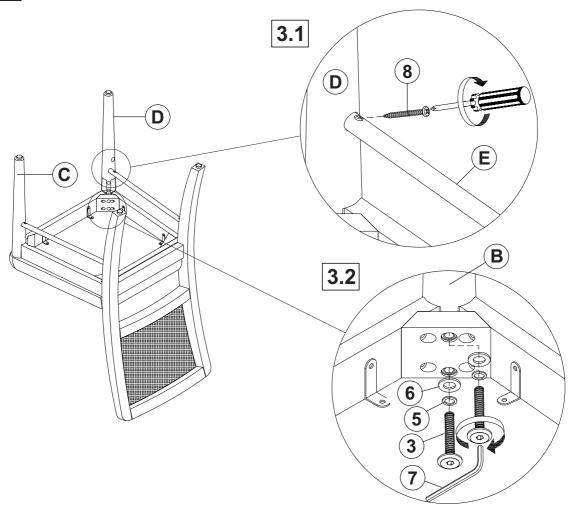


STEP 4 COMPLETE

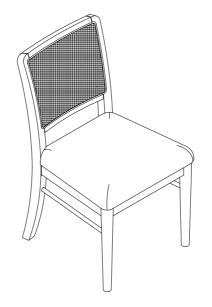



ITEM: 108932BLK



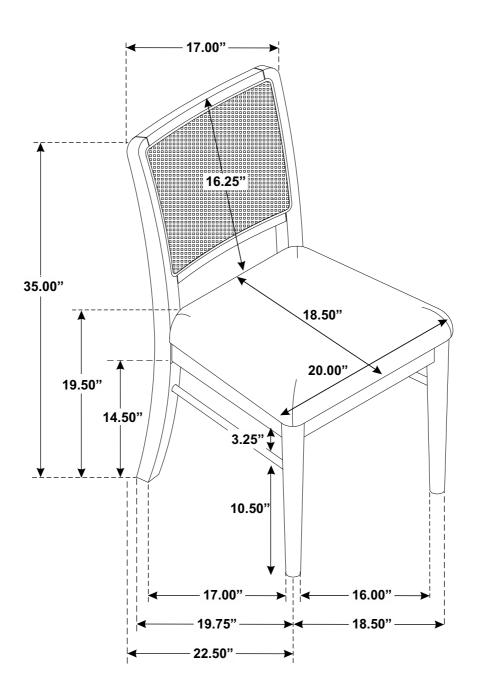

Note: Dimension tolerance ±5%