

ASSEMBLY INSTRUCTIONS

ITEM NO: 194S1053DG/BU/GY-1

Accent Chair



 

Legs and hardware are stored in the bottom of the seat, please take them out for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC
B		Front Wooden Leg 3-1/4"x3-1/4"x8-3/4"	2 PCS
C		Rear Wooden Leg 3-1/4"x3-1/4"x8-1/3"	2 PCS

PART	DRAWING	DESCRIPTION	QTY
1		Bolt Ø5/16"×1"	12 PCS
2		Spring Washer Ø5/16"	12 PCS
3		Flat Washer Ø5/16"×3/4"	12 PCS
4		Allen Key M4	1 PC

STEP 1:

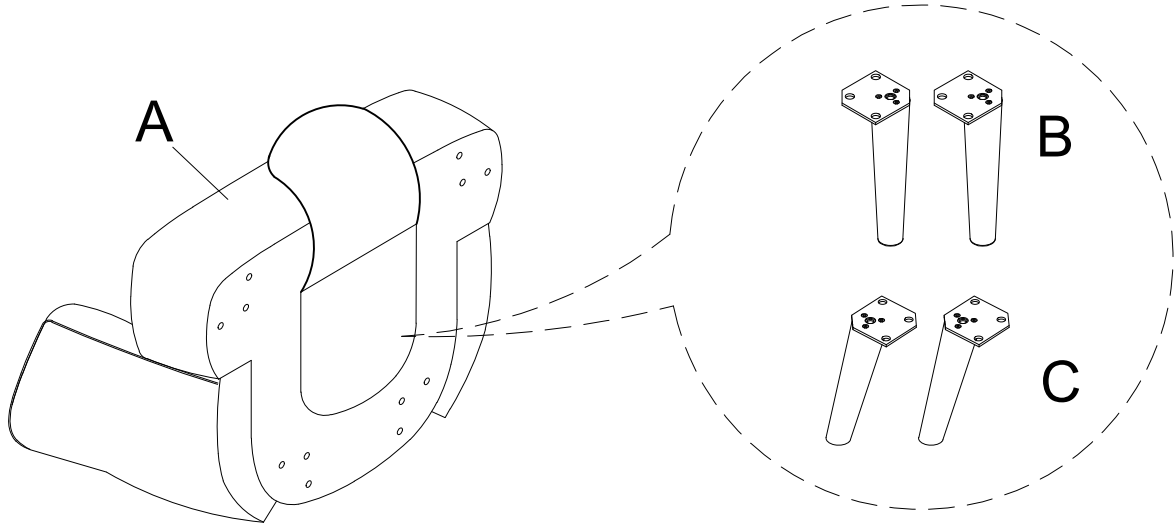


x12



x12



 x12




x1

ASSEMBLY INSTRUCTIONS


ITEM NO: 194S1053DG/BU/GY-1

Accent Chair

STEP 2:

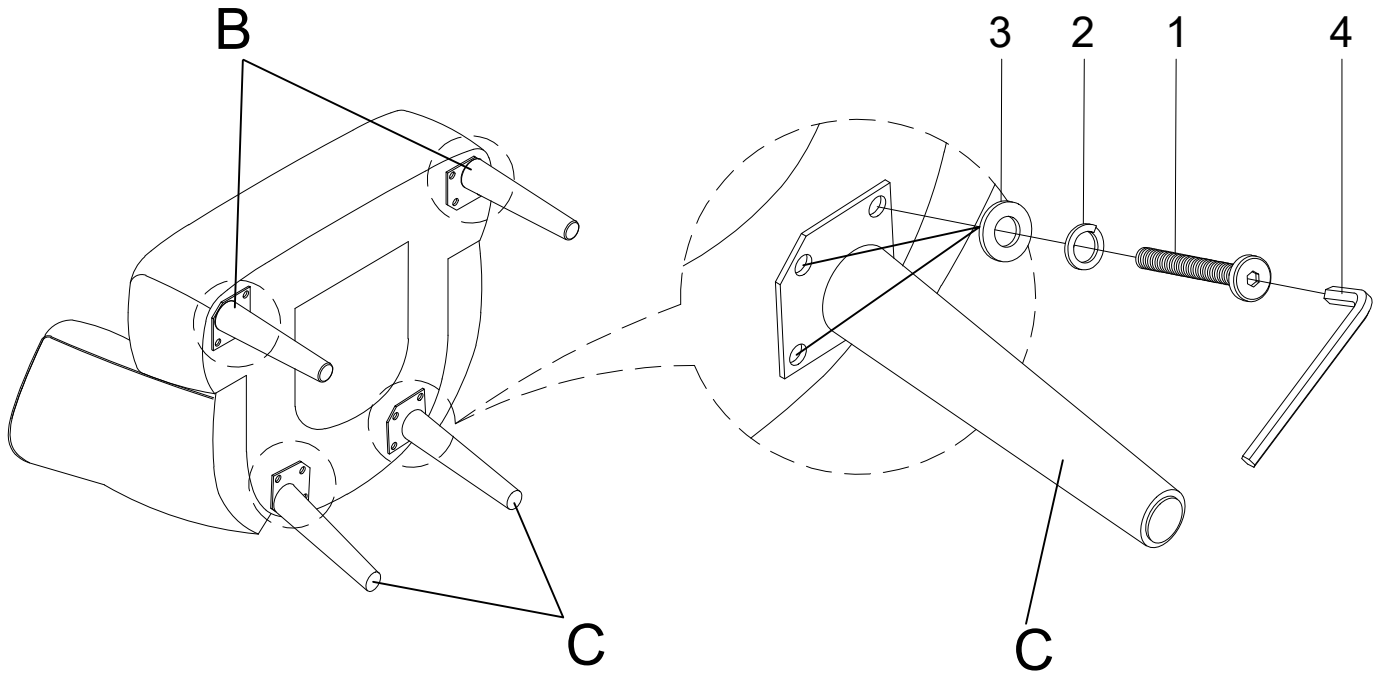

COMPLETED

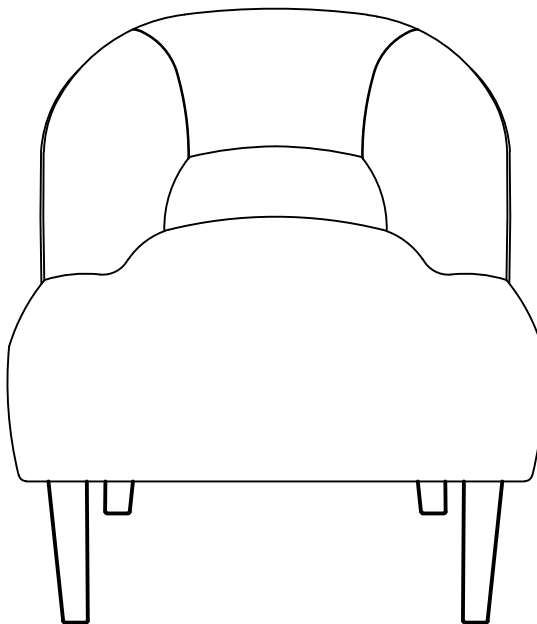

Care Instruction for Velvet Furniture:

In order to maintain the original appearance of your velvet furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
- Sunlight and/or exposure to heating and air conditioning outlets will fade/damage velvet.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary



For item use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.