 

 

 







# ASSEMBLY INSTRUCTION

ITEM NO: 194S1042DG -1  
ACCENT CHAIR

NO.	PARTS LIST	QTY	DESCRIPTION	NO.	PARTS LIST	QTY	DESCRIPTION
A		1	Seat Frame	F		8	Allen Bolt ØM8*30
B		1	Back Rest	G		8	Flat Washer M8*Ø22*1.5mm
C		2	Wooden Rear Leg	H		8	Lock Washer M8
D		2	Wooden Front Leg	I		1	Allen Key M5*100*50mm
E		8	Allen Bolt ØM8*60				

## STEP 1:

Unzip the dust cover, take out all the parts for assembly.

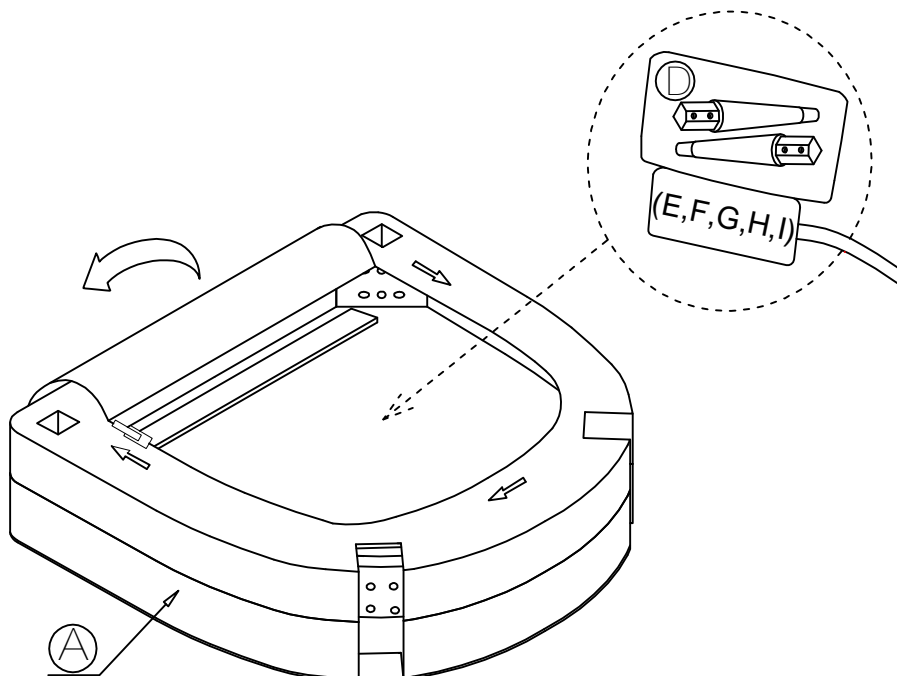

# ASSEMBLY INSTRUCTION


ITEM NO: 194S1042DG -1  
ACCENT CHAIR

## STEP 2:

**Align both rear legs (C) to the seat frame back opening. Make sure both legs are fixed in the position properly.**

**Insert bolt (E), washer (G), (H) to the rear legs, tighten with Allen key I, DO NOT FULLY TIGHTEN at this step.**

**Align and attach the back rest to the leg C bracket, make sure back rest pre-drilled holes are aligned to the leg bracket pre-drilled holes. Insert bolt (F) onto the bracket, tighten with Allen key I. DO NOT FULLY TIGHTEN IT.**

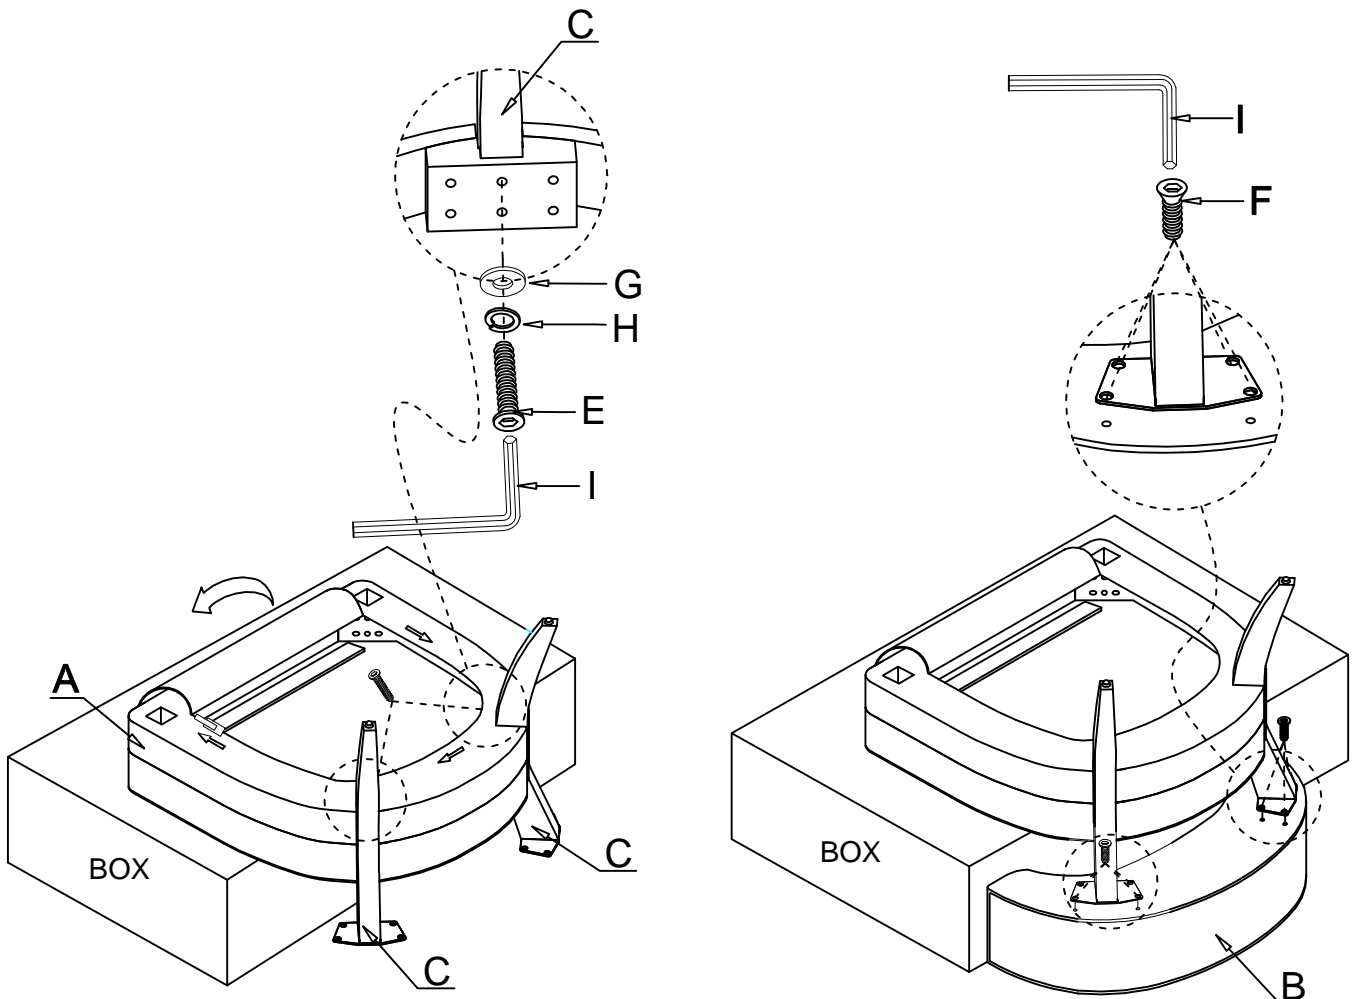


# ASSEMBLY INSTRUCTION

ITEM NO: 194S1042DG -1  
ACCENT CHAIR


## STEP 3:

Align front leg (D) to the seat frame front opening, insert bolt (E), washer (G), (H), tighten with Allen key I.  
Check all the bolts, washers from step 1 and 2, fully tighten all bolts and washers.

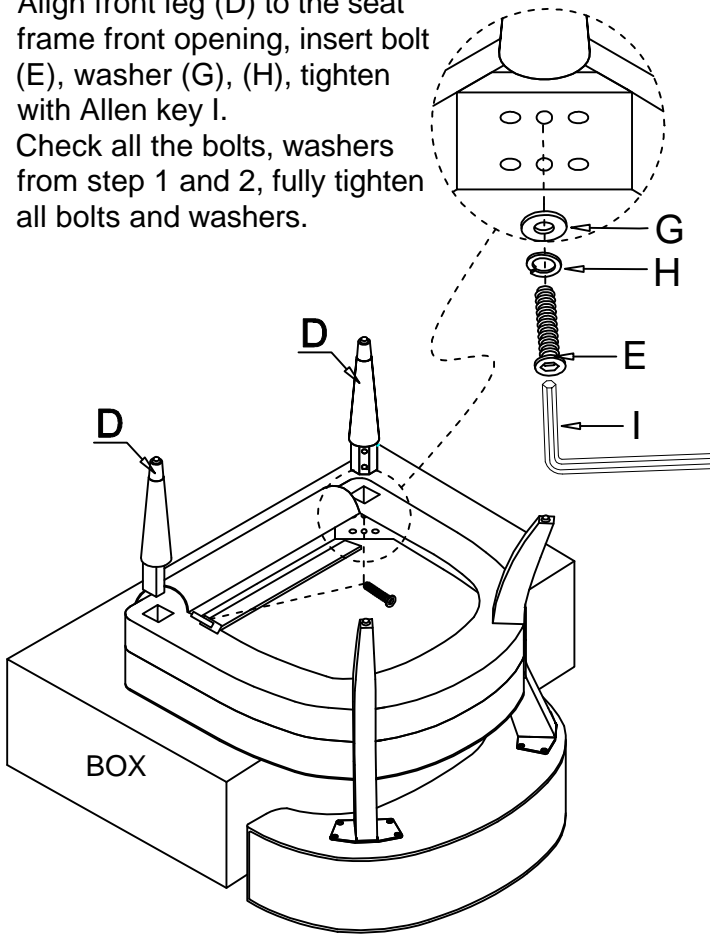


## STEP 4:

Zipper the bottom cover.

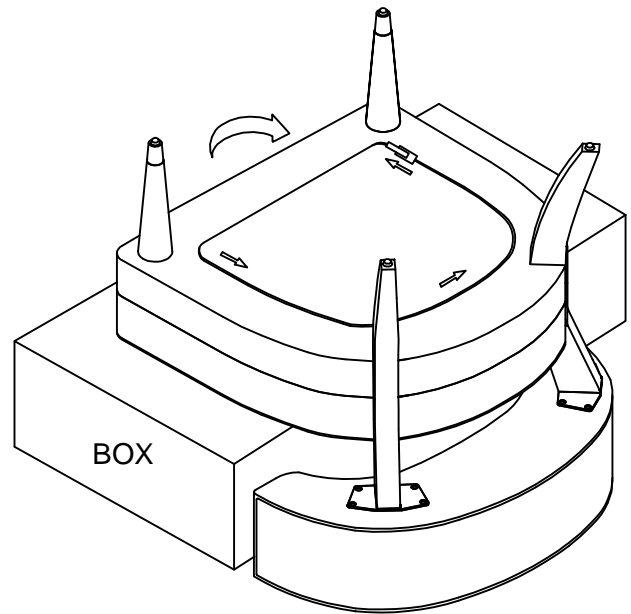

## STEP 5: Complete

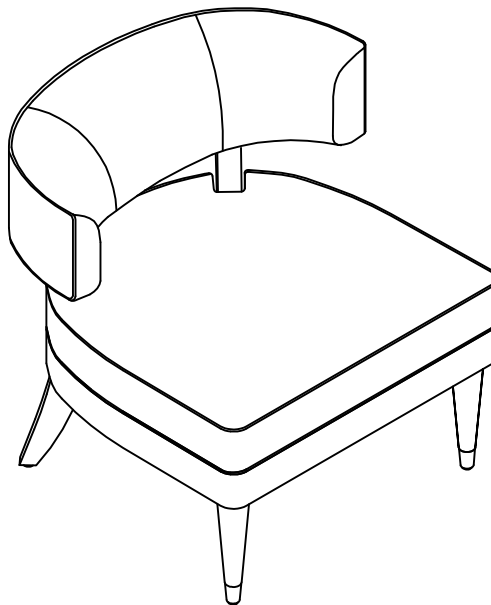

### CARE INSTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures.

°Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage fabric.

°Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.