

ASSEMBLY INSTRUCTIONS

ITEM NO: 194S1250F1S/F2S/F3S/F4S


Accent chair



Legs and Hardware are packed and stored in the bottom of the seat, please take out for assembly
Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY	PART	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC	1		Bolt Ø5/16"×1-1/4"	8 PCS
B		Front/Rear LSF Metal Leg 3-2/3"×2"×8-1/2"	2 PCS	2		Spring Washer Ø5/16"	8 PCS
C		Front/Rear RSF Metal Leg 3-2/3"×2"×8-1/2"	2 PCS	3		Flat Washer Ø5/16"×3/4"	8 PCS
				4		Allen Key M4	1 PC

STEP 1:

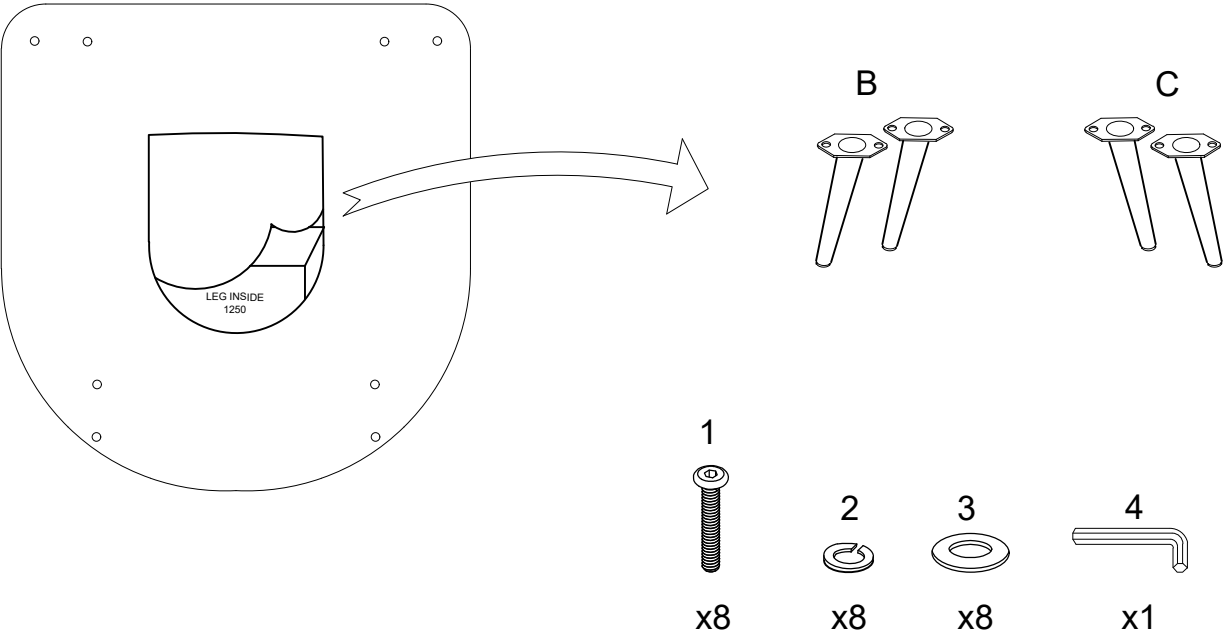


ASSEMBLY INSTRUCTIONS


ITEM NO: 194S1250F1S/F2S/F3S/F4S

Accent chair

STEP 2:

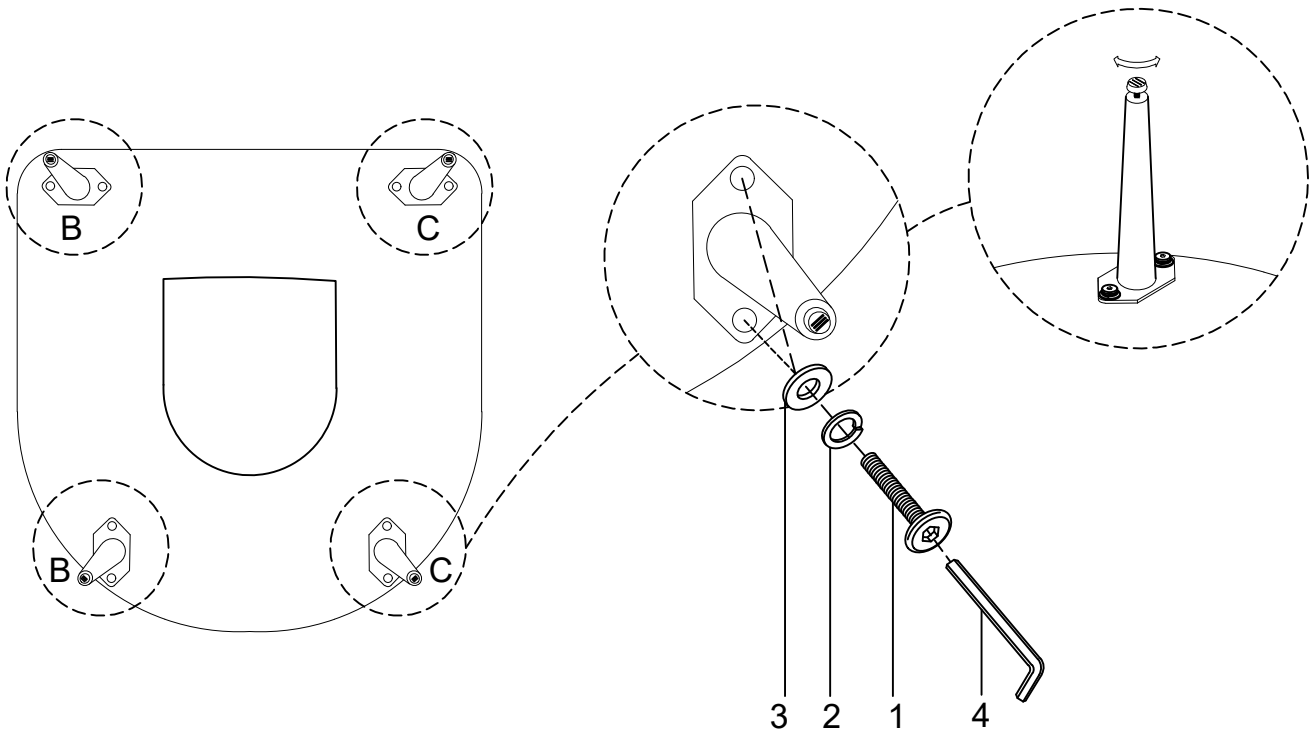

COMPLETE

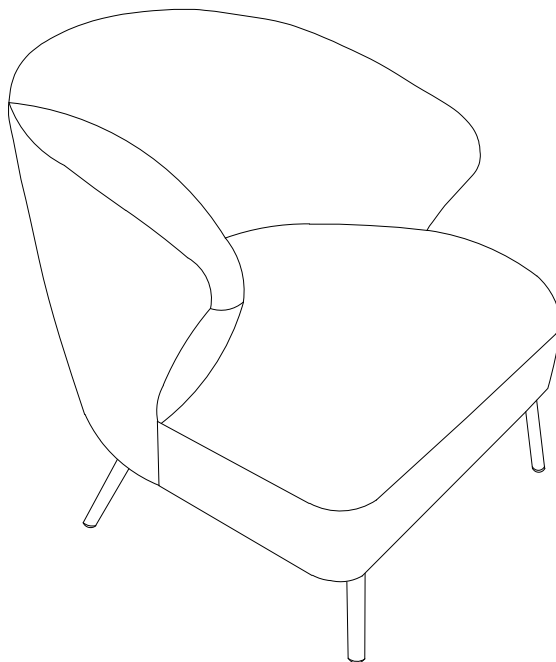

Care Instruction for Boucle Furniture:

In order to maintain the original appearance of your boucle furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage boucle.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary



For item use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.