

 
 
 

 



ASSEMBLY INSTRUCTIONS

ITEM NO: 194S1004GRY/BEG/BUE/DGY/GRN-1


Accent Chair



Legs & hardware are stored under the seat cushion, please take out the legs and hardware for assembly
 Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY	PART	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC	1		Bolt Ø5/16"×1"	12 PCS
B		Front Wood Leg 3-1/2"×3-1/2"×8-3/4"	2 PCS	2		Spring Washer Ø5/16"	12 PCS
C		Rear Wood Leg 3-1/2"×3-1/2"×8-3/4"	2 PCS	3		Flat Washer Ø5/16"×19	12 PCS
D		Seat Cushion	1 PC	4		Allen Key M4	1 PC

STEP 1

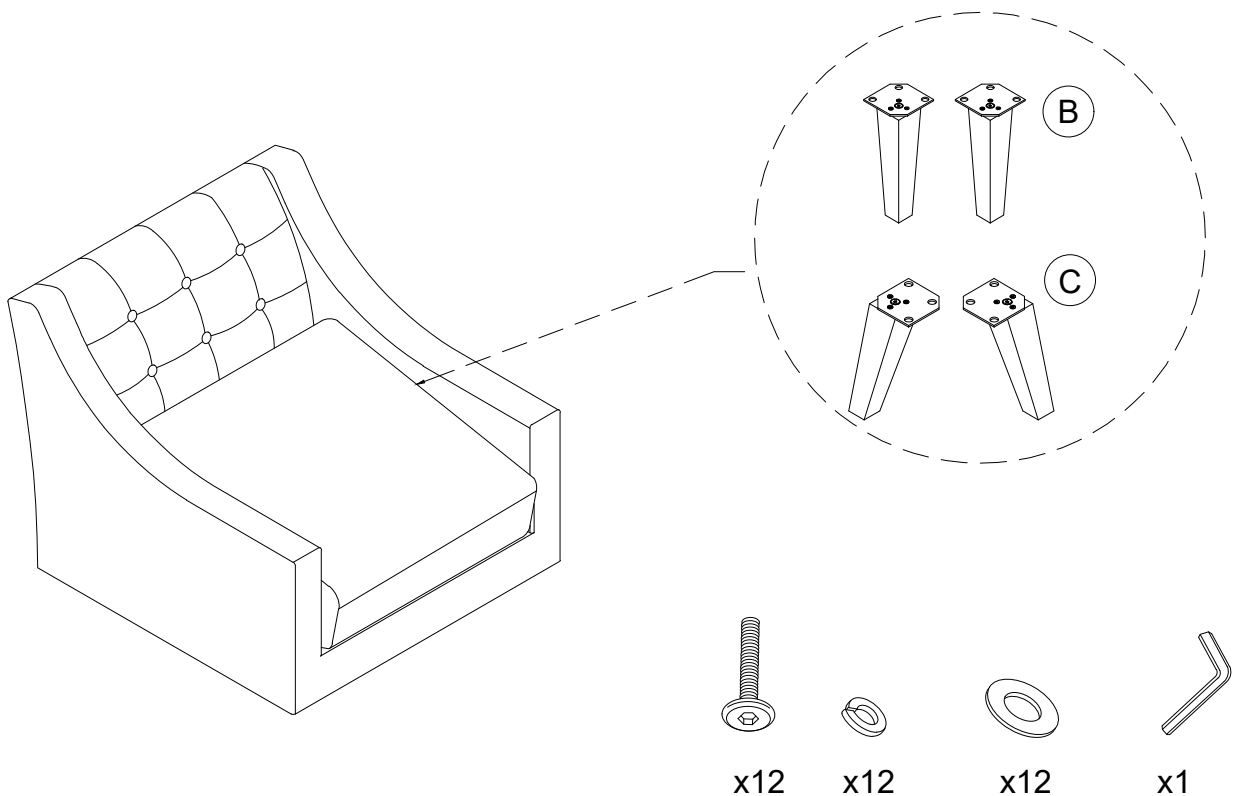


ASSEMBLY INSTRUCTIONS


ITEM NO: 194S1004GRY/BEG/BUE/DGY/GRN-1

Accent Chair

STEP 2

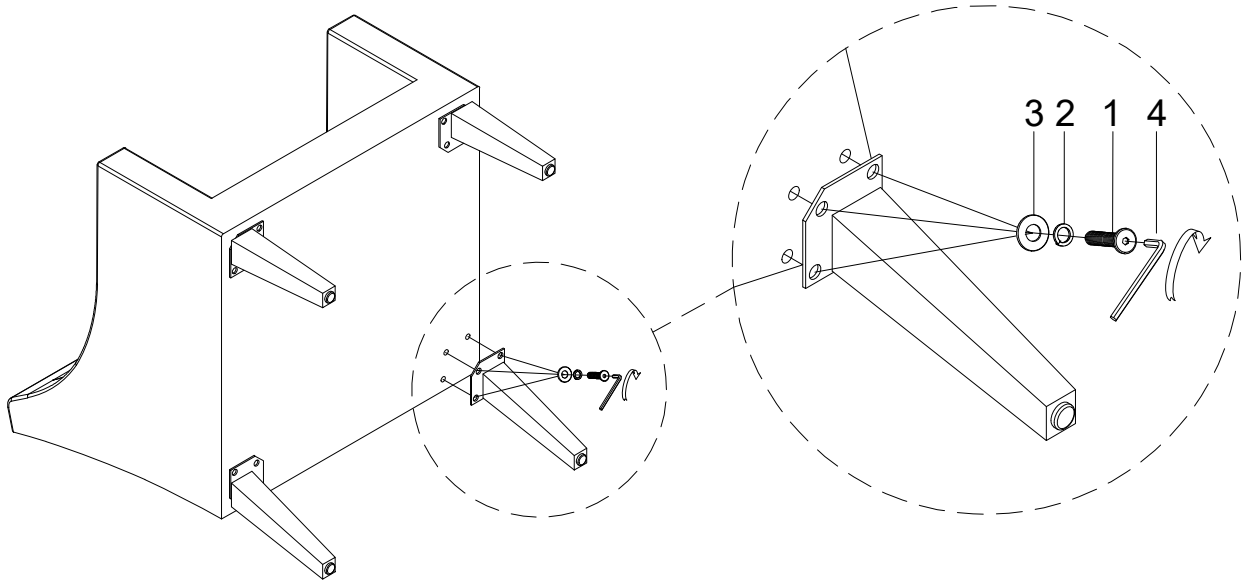

STEP 3

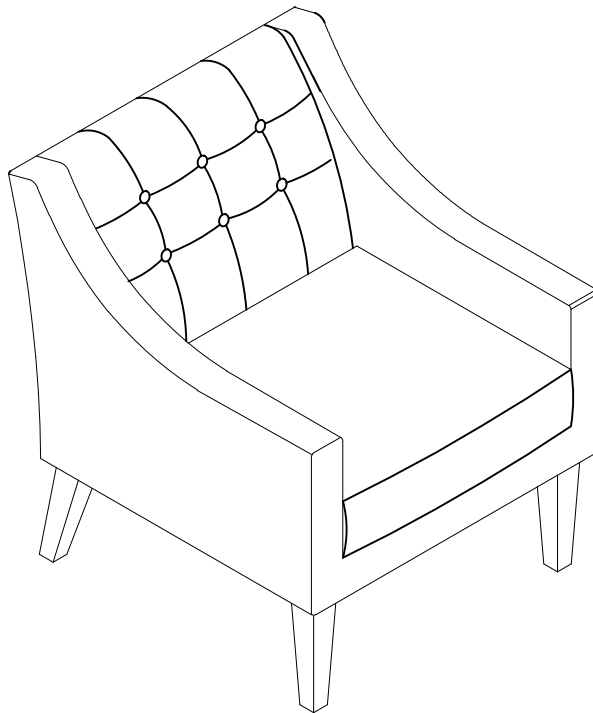

Care Instruction for Textured Furniture:

In order to maintain the original appearance of your textured furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage textured furniture.
 - Vacuum or wipe with a soft cloth to remove dust.
 - Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary
- ⚠ For item use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.