 


ASSEMBLY INSTRUCTIONS

30 INCH CABINET

 
 
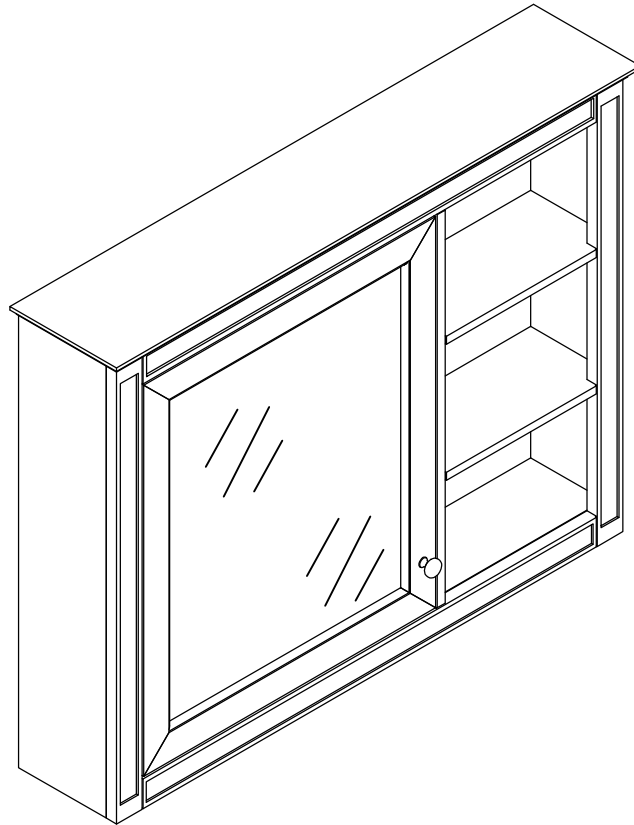 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

 
Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

 
*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

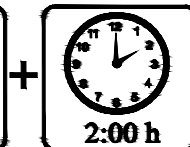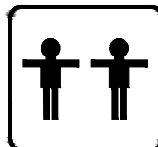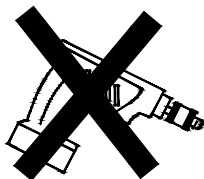

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step until assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not maliciously push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase our products,

I wish you a happy life.

Before Installation

 
 
 
 
 
 
 
 
 
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

 
- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

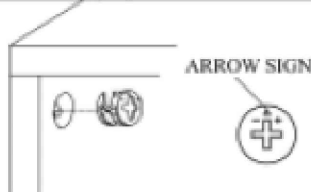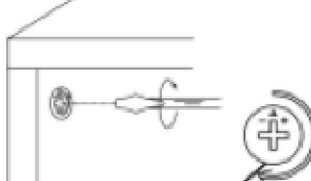 



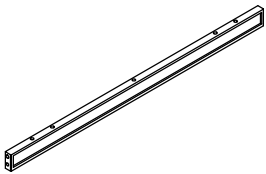 
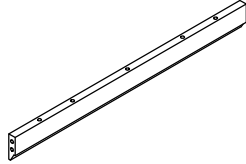 
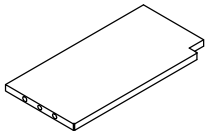 
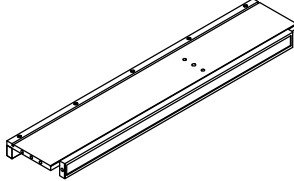 
 
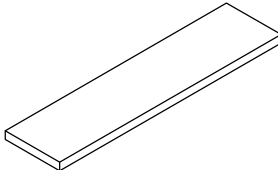 

 
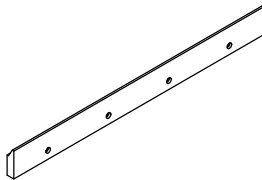 
		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

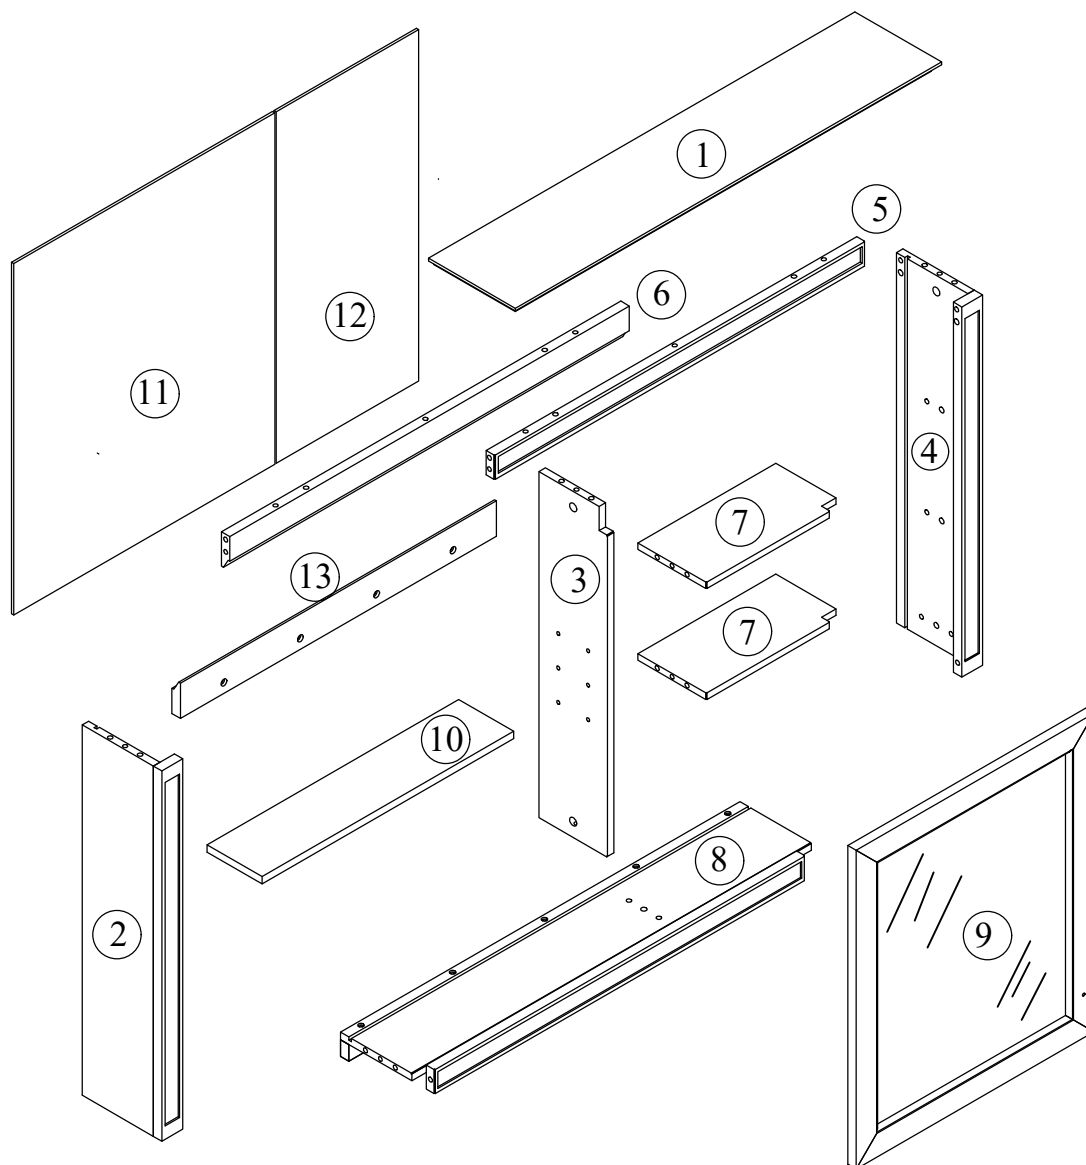Detail View - CABINET

 




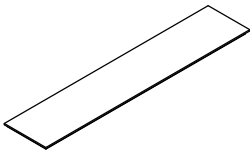

 
 
 





Identifying the Hardware-Identify the hardware using the illustrations below.

Part List - N710P322791

 
1	 Top Panel - 1pc	2	 Side Panel Left - 1pc
3	 Mid Panel (A) - 1pc	4	 Side Panel Right - 1pc
5	 Top Bar Front - 1pc	6	 Rear Bar Top - 1pc
7	 Mid Panel (B) - 2pcs	8	 Bottom Panel - 1pc
9	 Door Cabinet - 1pc	10	 Adjustable Shelf - 1pc
11	 Left Back Panel - 1pc	12	 Right Back Panel - 1pc
13	 Connect Bar - 1pc		

Hardware List - N710P322791

 
 
<div>A</div>  <p>ø6x35mm</p>	<div>B</div>  <p>ø14.5x12mm</p>	<div>C</div>  <p>ø14.5x9.5mm</p>
<p>Three in one bolts (20pcs)</p>	<p>Three in one lock (16pcs)</p>	<p>Three in one lock (4pcs)</p>
<div>D</div>  <p>ø10xø5x50mm</p>	<div>E</div>  <p>ø12x55mm</p>	<div>F</div> 
<p>Flat head screw (4pcs)</p>	<p>Plastic stopper (4pcs)</p>	<p>Handle (1pc)</p>
<div>G</div>  <p>ø5/32"x25mm</p>	<div>H</div> 	<div>I</div>  <p>ø7xø3.5x15mm</p>
<p>Handle screw (1pc)</p>	<p>Damping hinge (2pcs)</p>	<p>Flat head screw (12pcs)</p>
<div>J</div> 	<div>K</div>  <p>ø8x30mm</p>	<div>L</div>  <p>ø7xø3.5x15mm</p>
<p>Laminate pad(4pcs)</p>	<p>Wood dowel (22pcs)</p>	<p>Round head screw (2 pcs)</p>
<div>M</div>  <p>ø6x30mm</p> <p>Wood dowel (8pcs)</p>		

STEP: 1

 
A



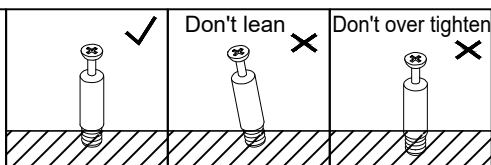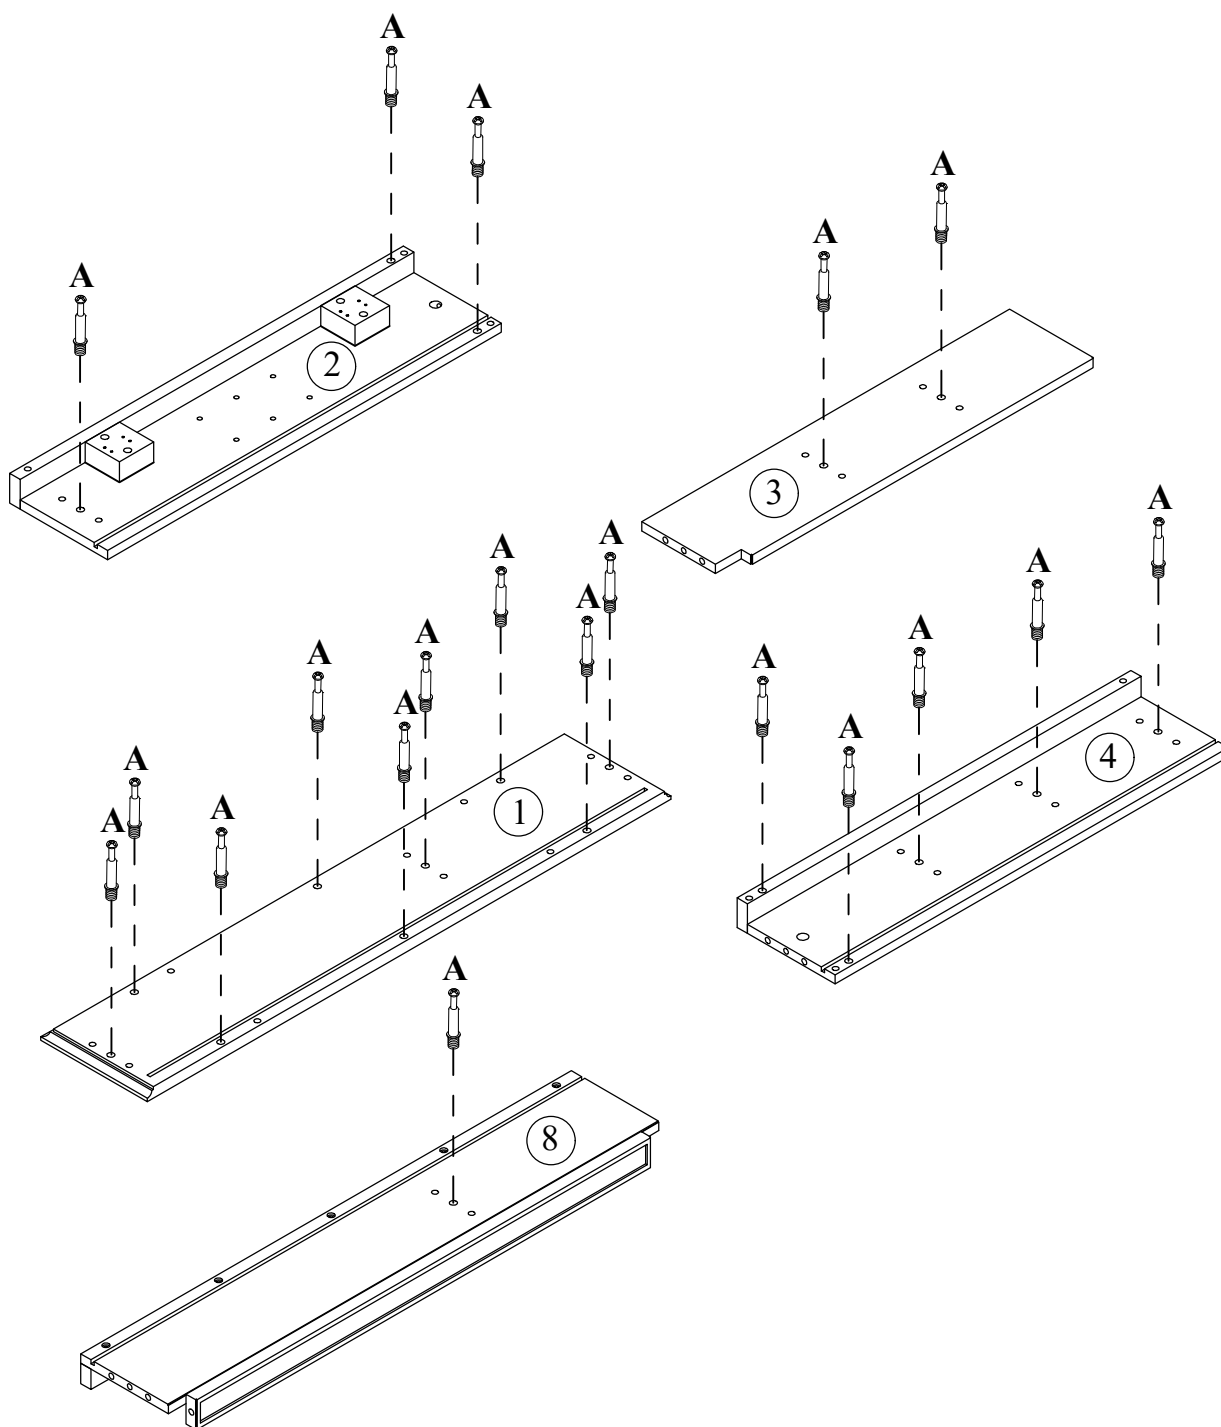

 
20PCS

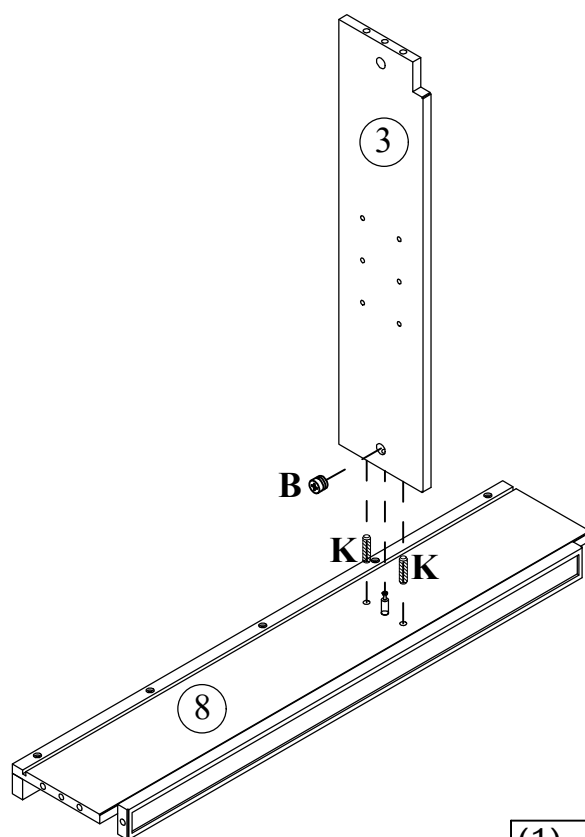

 
STEP: 2



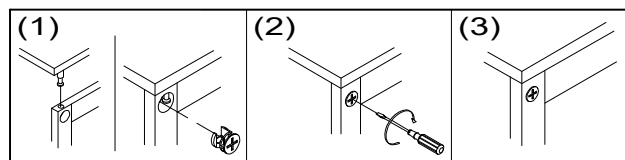

B		K	
1PC		2PCS	

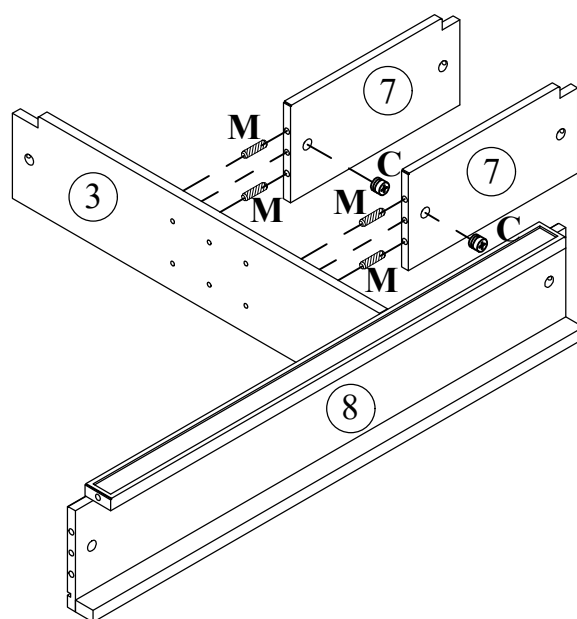 


STEP: 3

 


C		M	
2PCS		4PCS	

 
STEP: 4

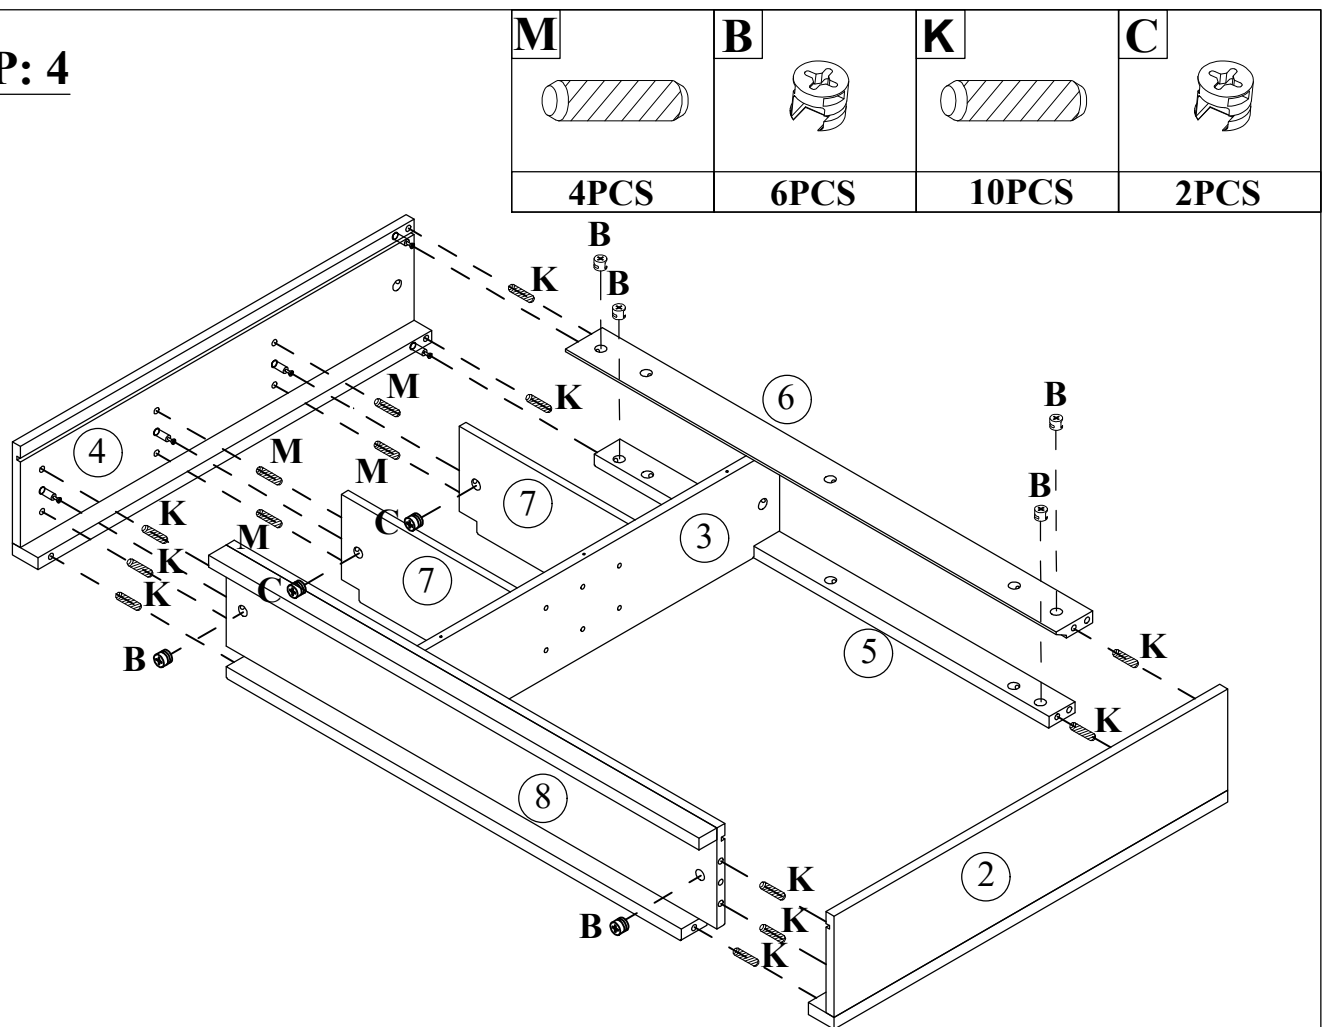

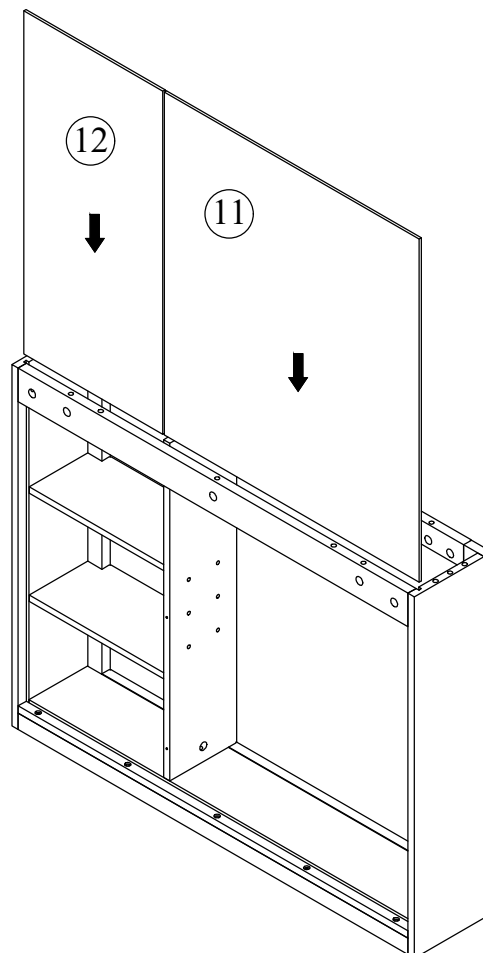

STEP: 5

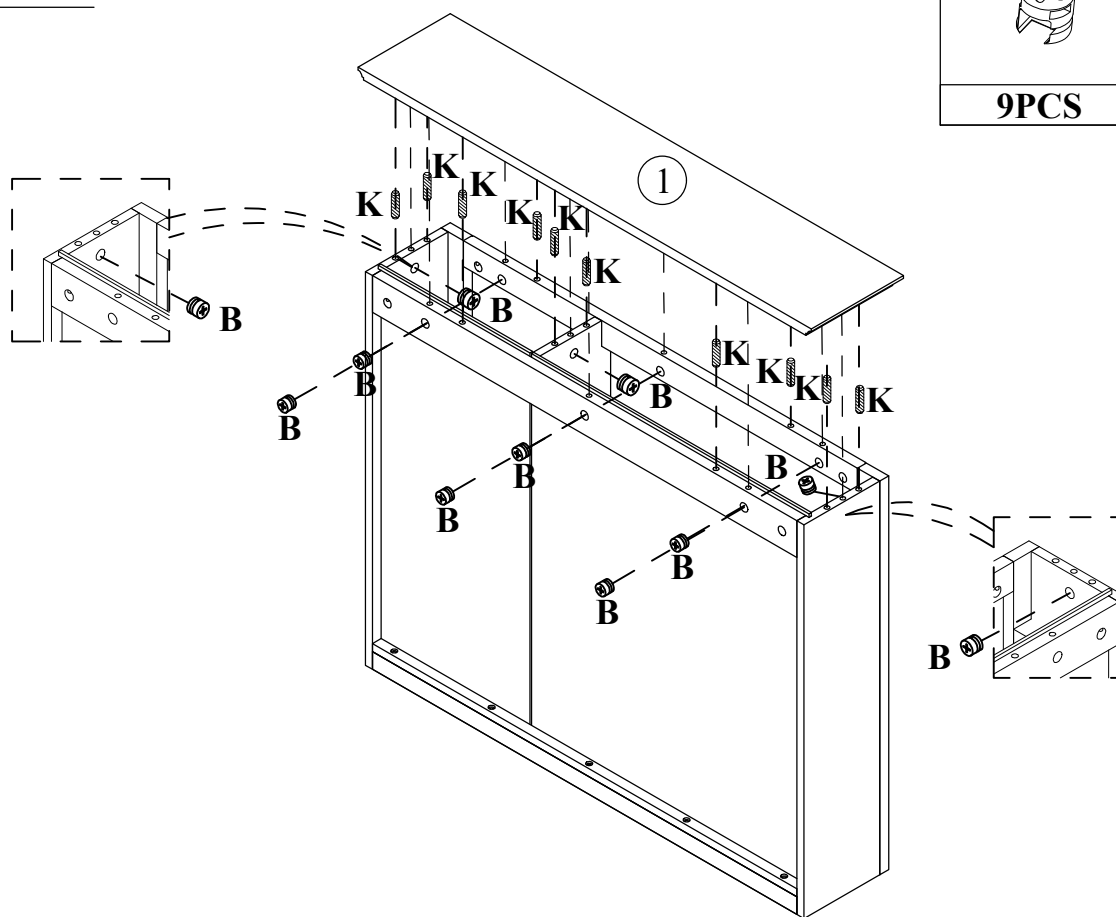 



STEP: 6




 

 
B	K
	
9PCS	10PCS

 
STEP: 7

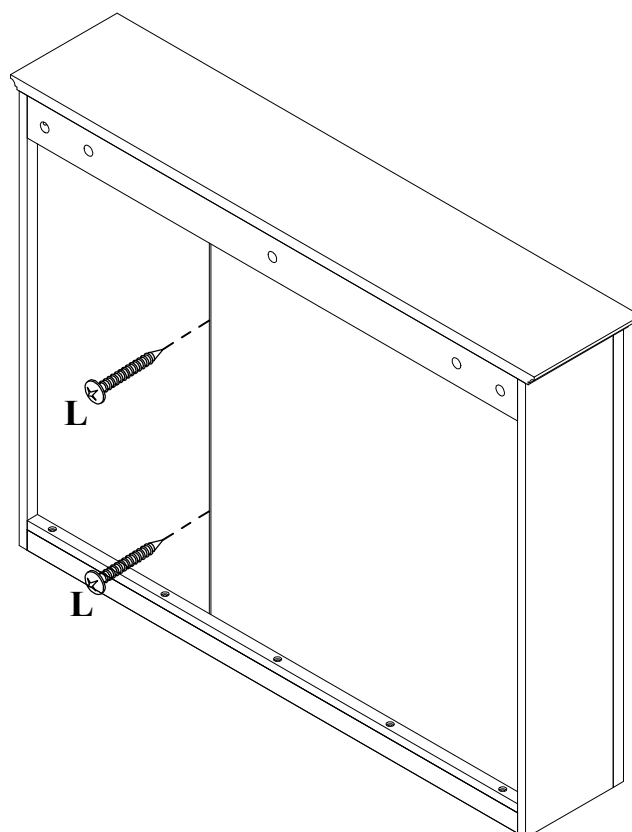

 
L

2PCS

 
STEP: 8

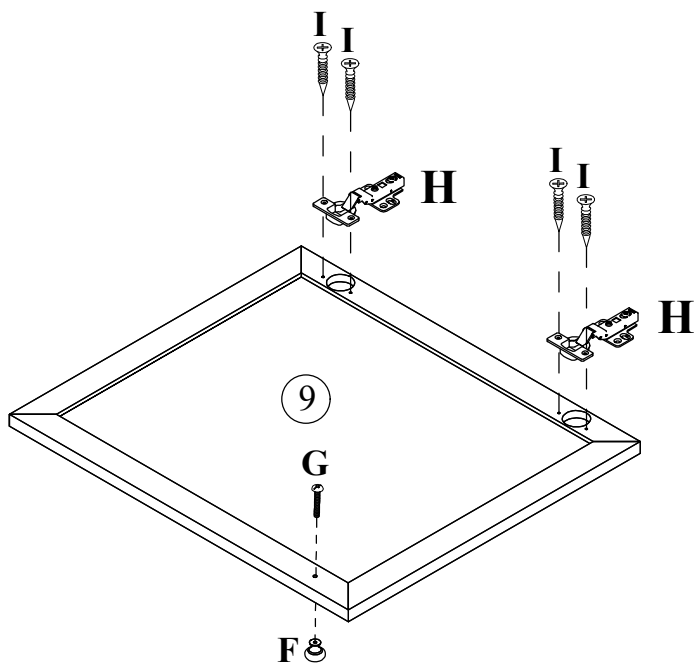F		G		H		I	
1PC		1PC		2PCS		4PCS	



 
 
STEP: 9

I	
8PCS	

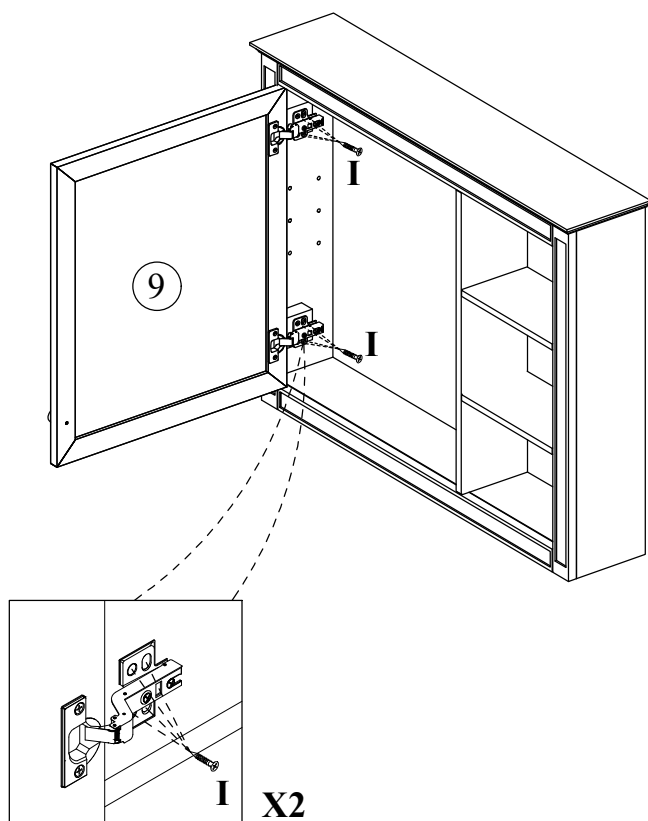

 
 
Use the screws to adjust up or down

Use the screws to permanent

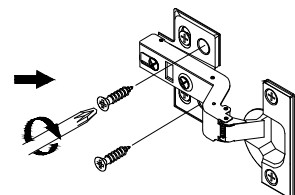 
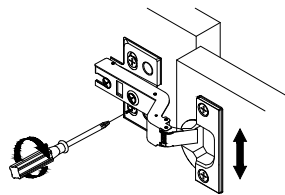 


Use the screws to adjust left or right

 
Use the screws to adjust in or out

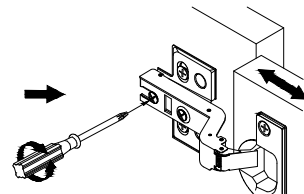 
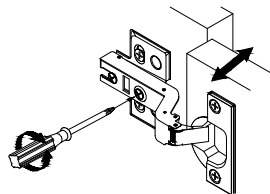 


STEP: 10

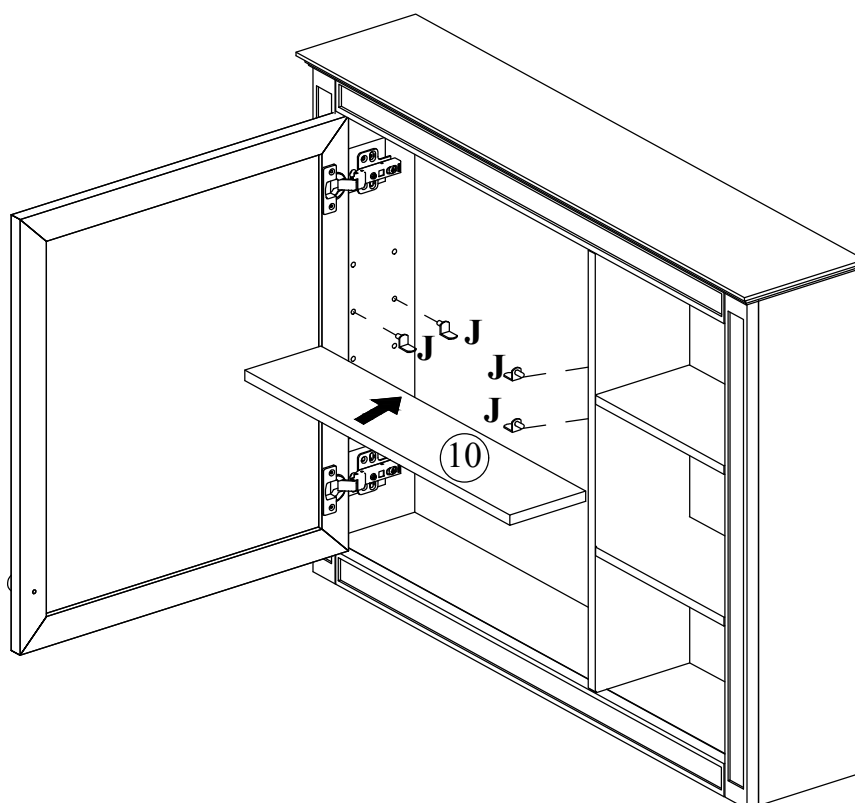J

4PCS


STEP: 11

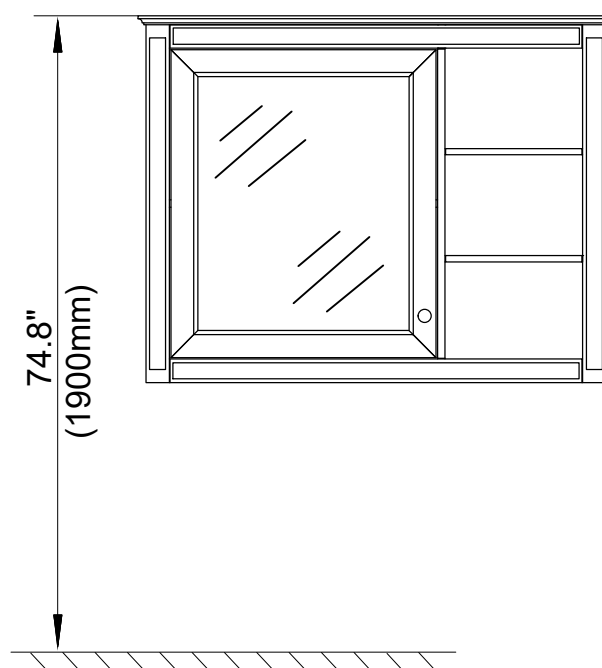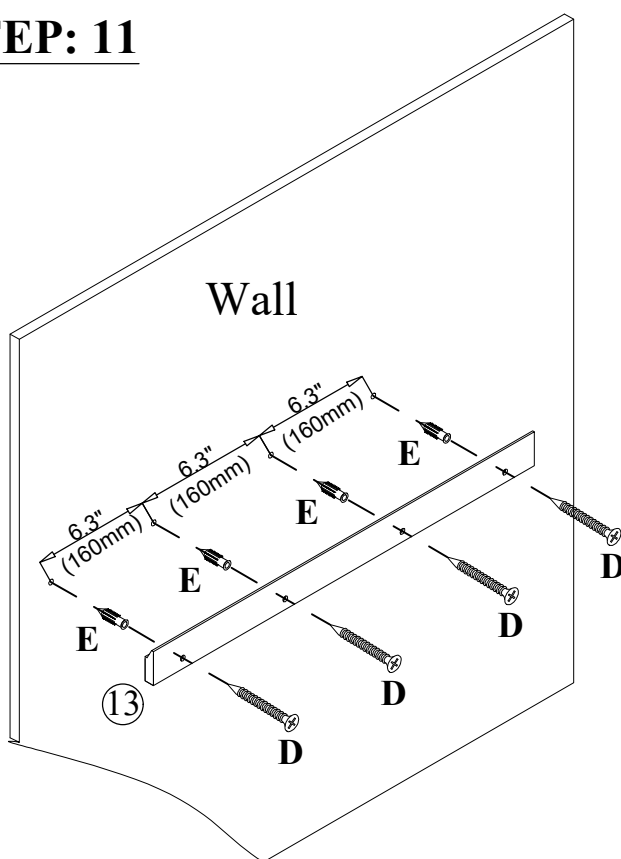 
D

4PCS
E

4PCS


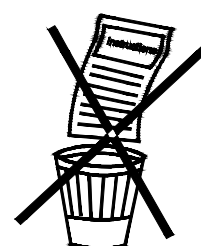 
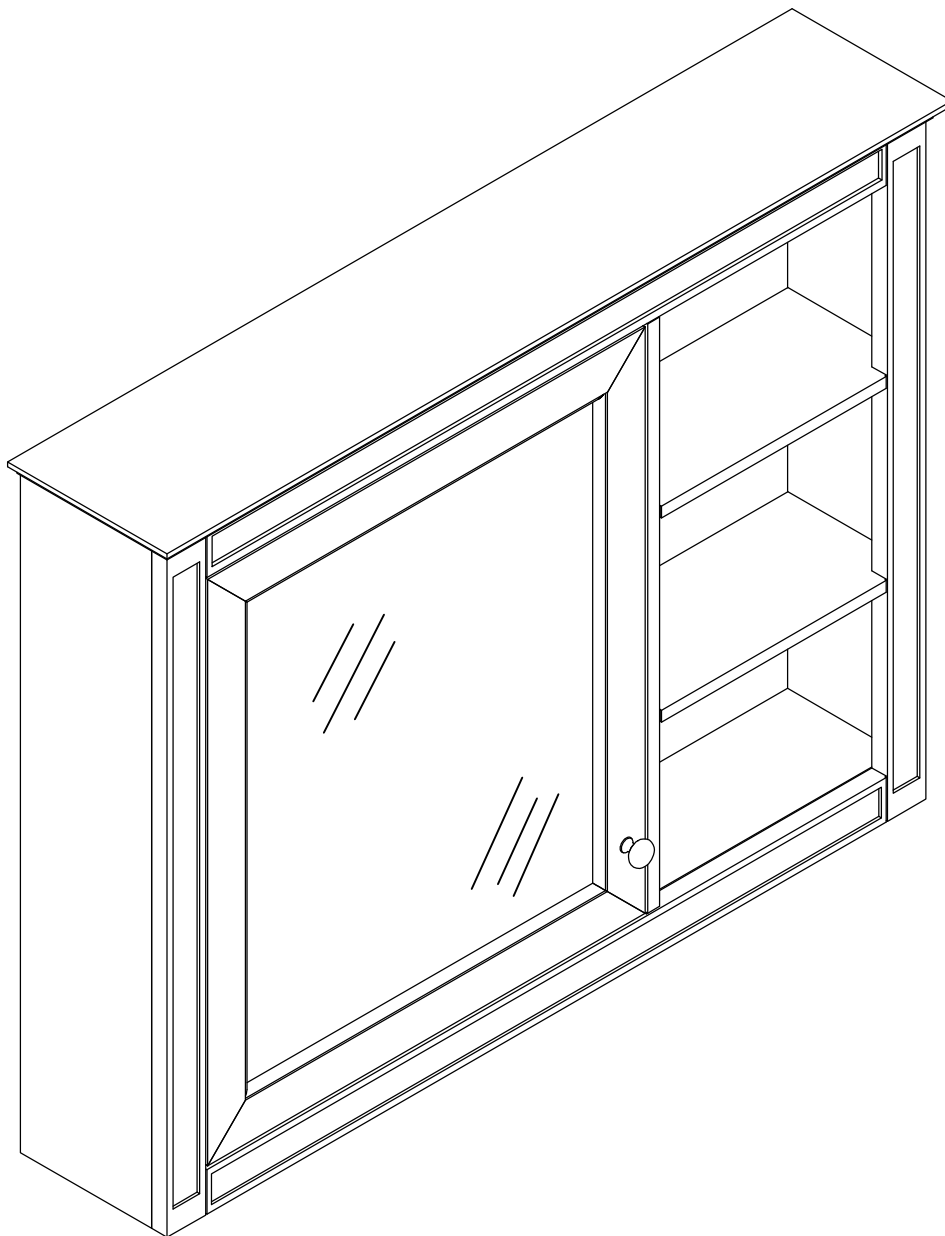 
Draw the spacing between the walls and the No.7, punch holes in the wall, and fix the No.7 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".

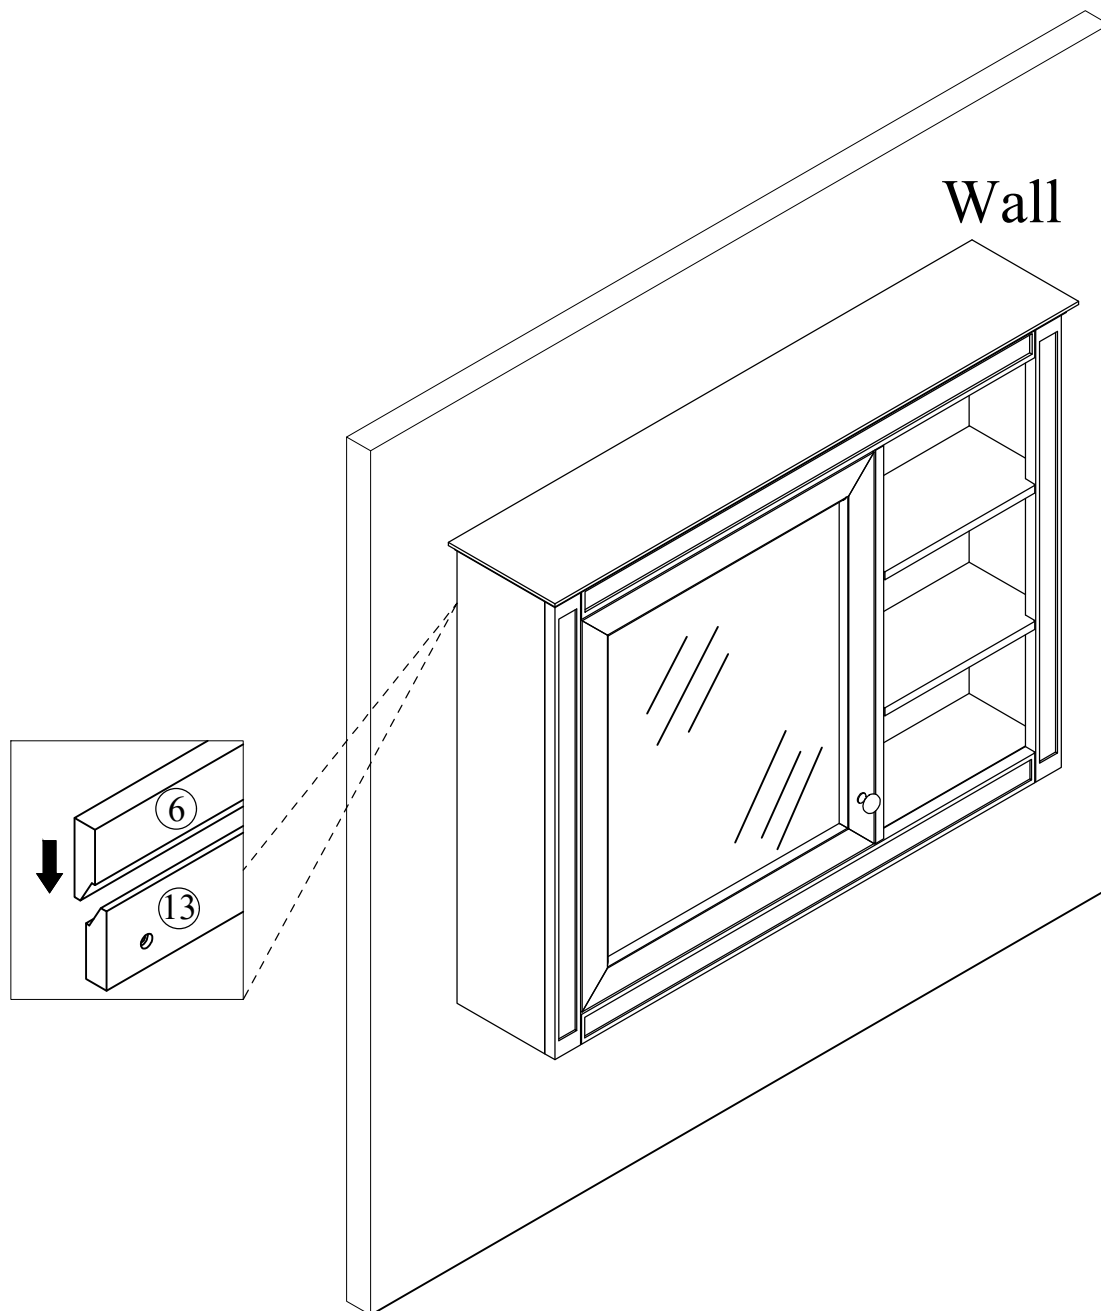 
STEP: 12



STEP: 13



HINGE ADJUSTMENTS

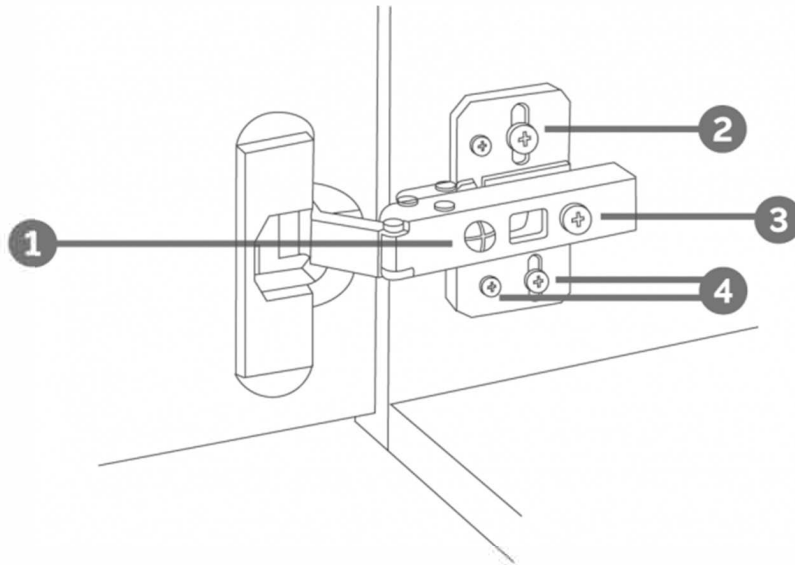 


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

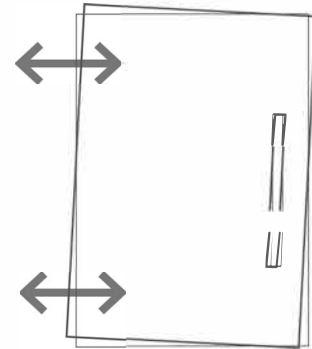 


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

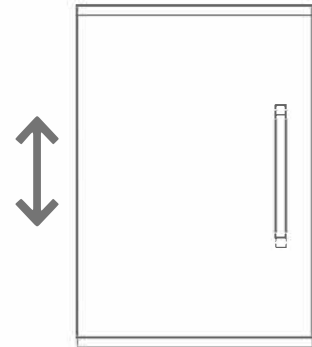

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

