
ASSEMBLY INSTRUCTIONS BATH VANITY-CABINET

 
GIGA-N710P332061

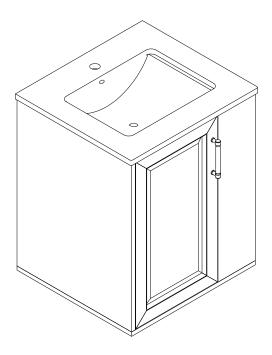

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

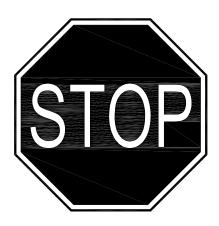

Please do not return this product to the retailer!! We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important- Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

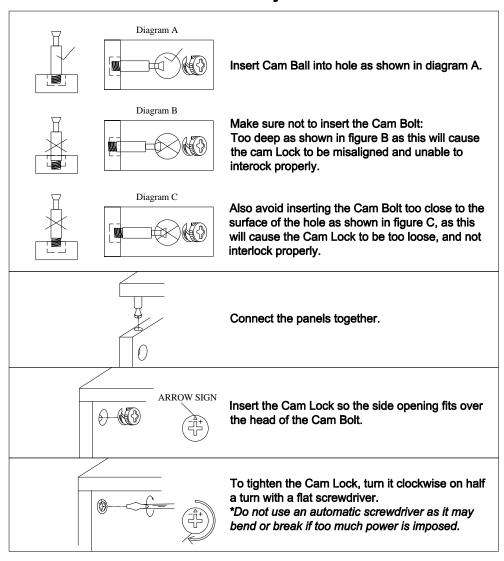


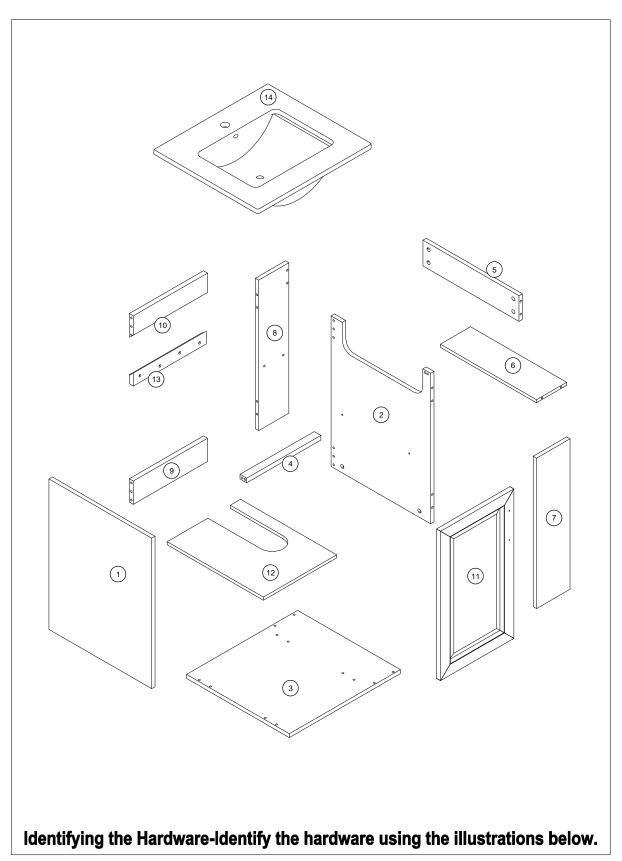



Part Lists N710P332061			
1	2		
Side frame (R) - 1pc	Mid Panel - 1pc		
3	4		
Bottom Panel - 1pc	Front Rear Crossbar - 1pc		
5	6		
Side Pamel - 1pc	Mid Panel (L) - 1pcs		
7	8		
Front Rear Panel - 1pc	Back Rear Panel - 1pc		
Bottom Rear Crossbar - 1pc	Top Rear Crossbar - 1pc		
11	12		
Door Cabinet - 1pc	Adjustable Shelf - 1pc		
13	14		
Hanging Rail - 1pc	Sink - 1pc		


Hardware Lists N710P332061		
A	B	C
Ø8*30mm	Ø6*32mm	Ø14.5*9.5mm
Wood dowel (18 pcs)+1pc	Three in on bolt (22pcs) +1pc	Three in one lock (22pcs) +1pc
D Sto Motor was	E	F GO GO STAGO
Ø13xM6*30mm Hex-Head bolt (4pcs)+1pc	Flat washer (4 pcs)+1pc	Ø8xØ3.5*10mm Flat head screw (9pcs)
G K4mm	H	I Ø8xM4*22mm
Allen key (2pc)	Handle (1pc)	Handle screw (2pcs)
J Ø8xØ6*50mm	K	L
Flat head screw (8pcs)+1pc	Wall Plug (8pcs)+1pc	L Bracket (2 pcs)
M	N 1801 But	
Pin shelf (4pcs)	Damping hinge (2 sets)	

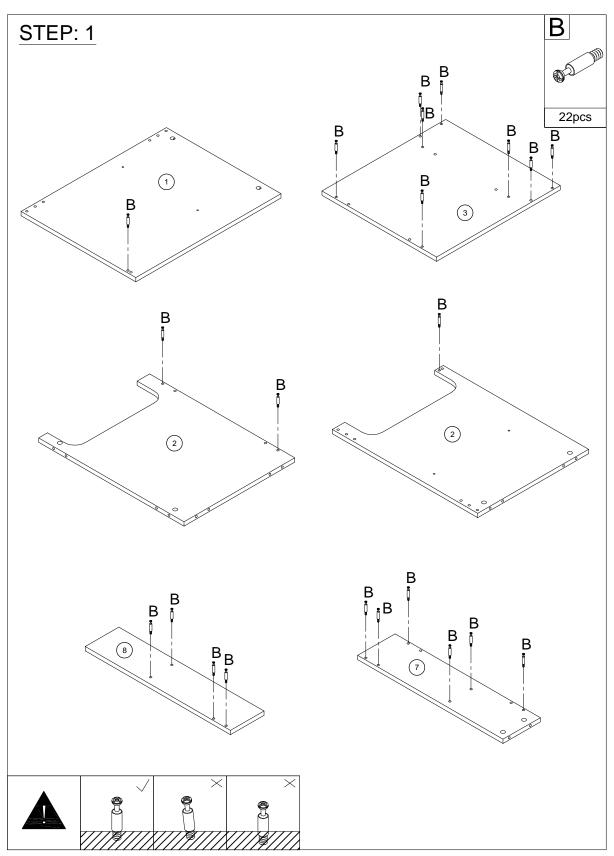


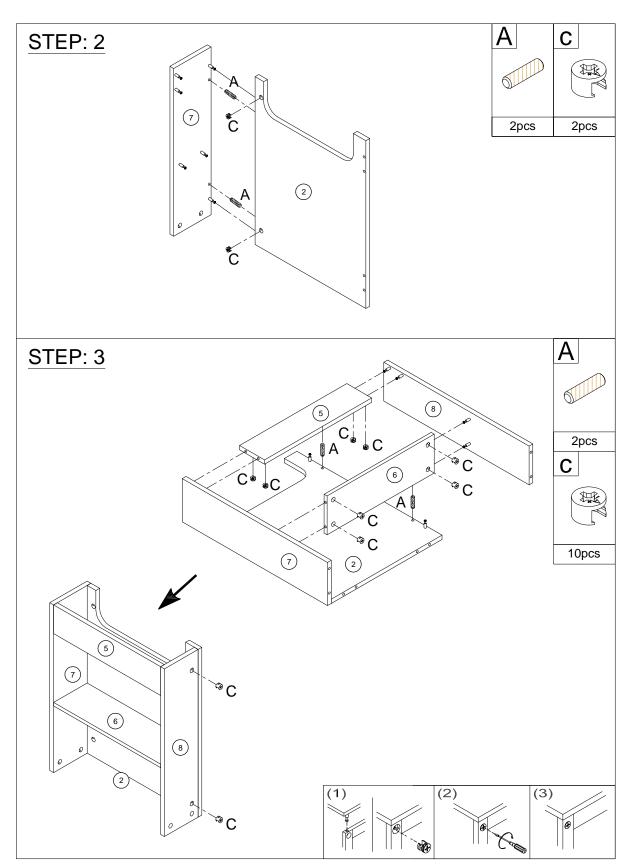


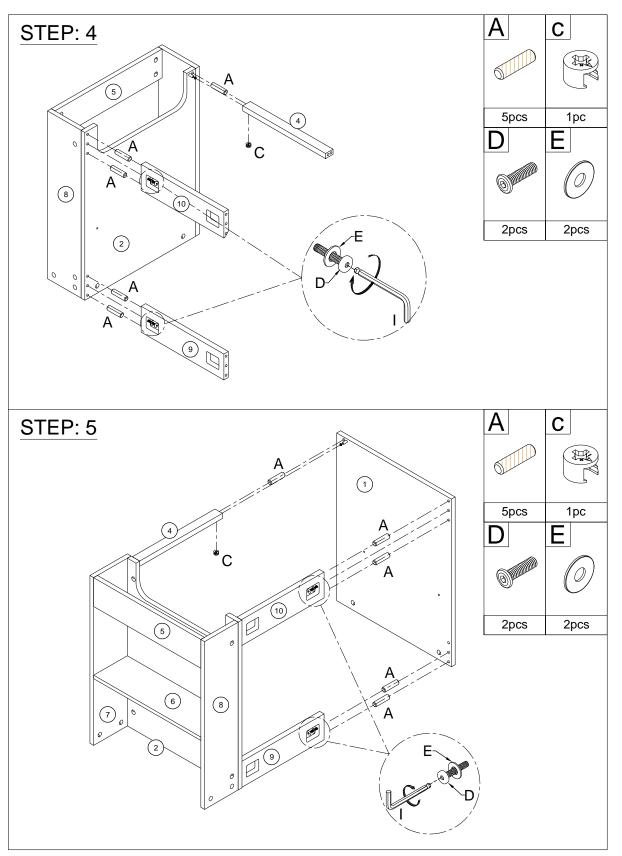

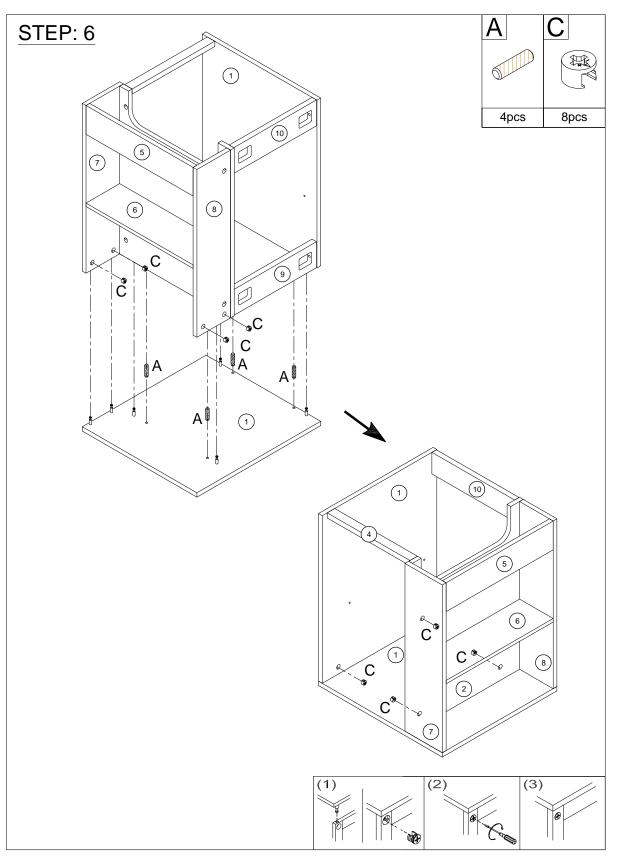


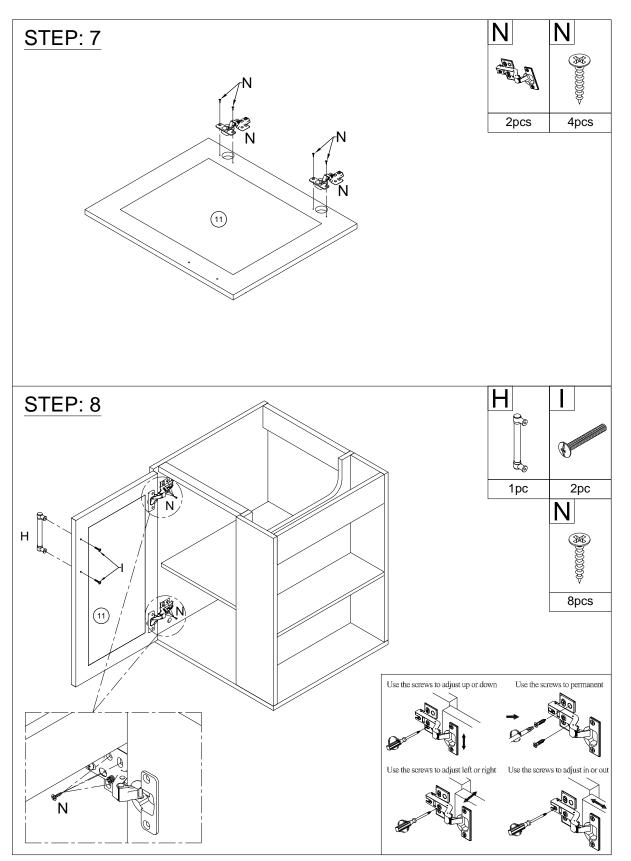

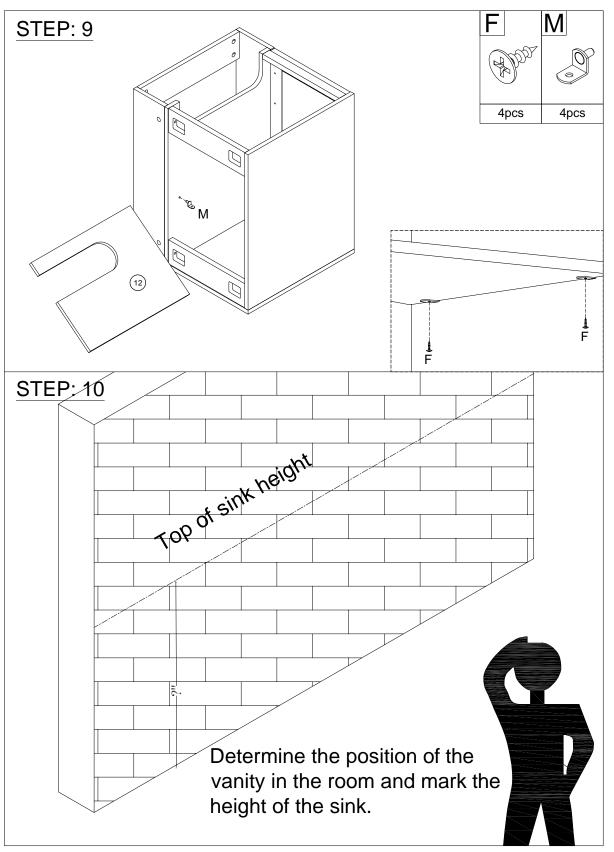

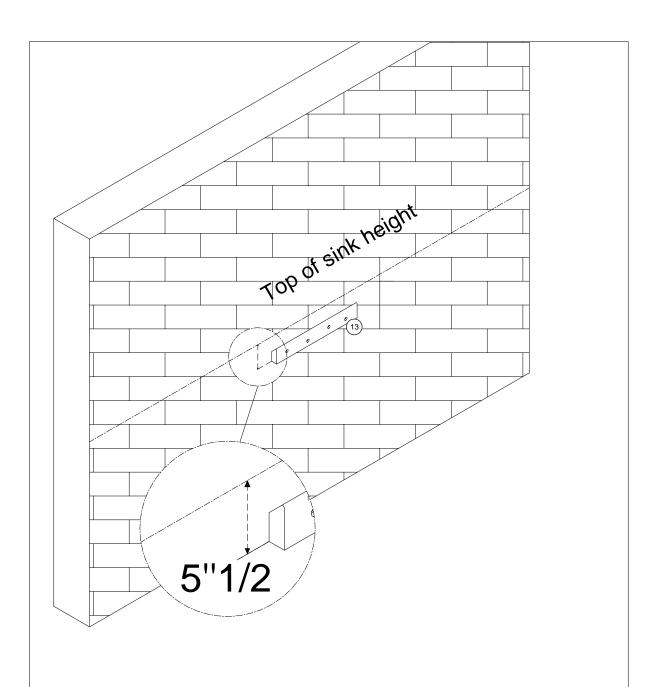

Place part 20 in the described position and mark the drilling holes.

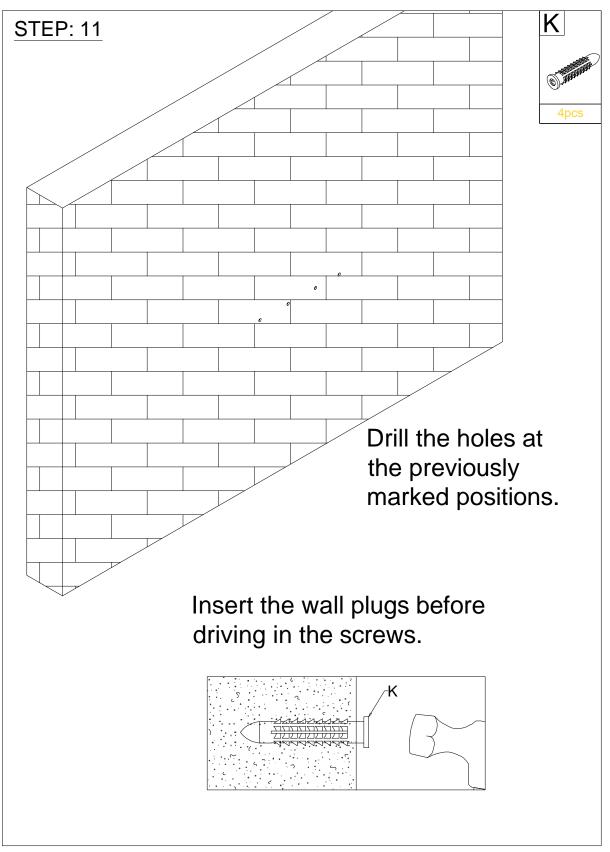

Wall attached item only:

A guide to wall mouting and fixings




Warning

Wall fixing screws are not included, since different wall materials require different types of screws/ fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.

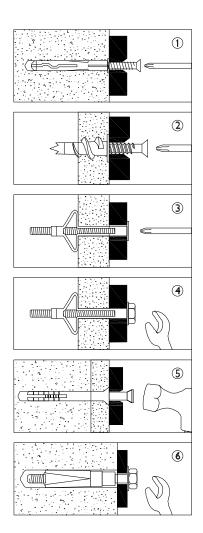

Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

1. Genral Purpose wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.

2. Plasterboard wall plug

For use when attaching light loads on to plasterboard partitions.

3. Cavity Fixing wall plug

For use when attaching light loads on to plasterboard partitions.

4. Cavity Fixing - Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

6. Shield Anchor wall plug - Heavy loads

For use with heavier load such as TV and HI-Fi speskers and satellite dishes etc.



Care and maintenance

Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

