NOTICE

- *Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- *Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

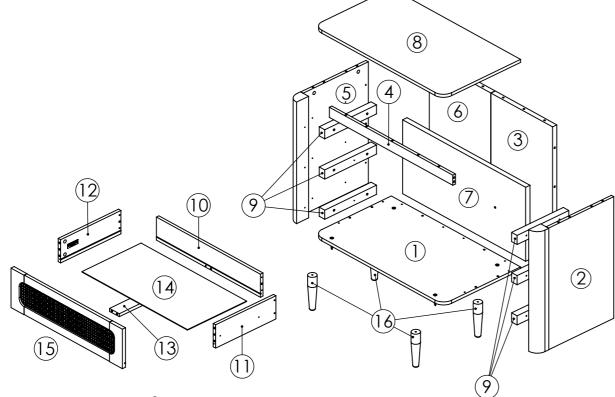



Model# CHS3100C

Product Dimensions: W 31.49" x D 17.71" x H 31.49"

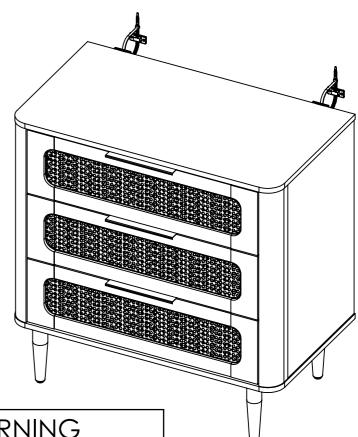

M WARNING

WEIGHT CAPACITY
Top Load Limit: 38 lbs
Drawer Load Limit: 11 lbs

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover: -ALWAYS install Anti-tip device

-NEVER put a TV on this product. -NEVER allow children to stand, climb or hang on drawers, doors, or shelves.


-NE drai -Pla drai


-NEVER open more than one drawer at a time. -Place heaviest items in the lowest

This is a permanent label. Do not remove!

Hardware List

L4

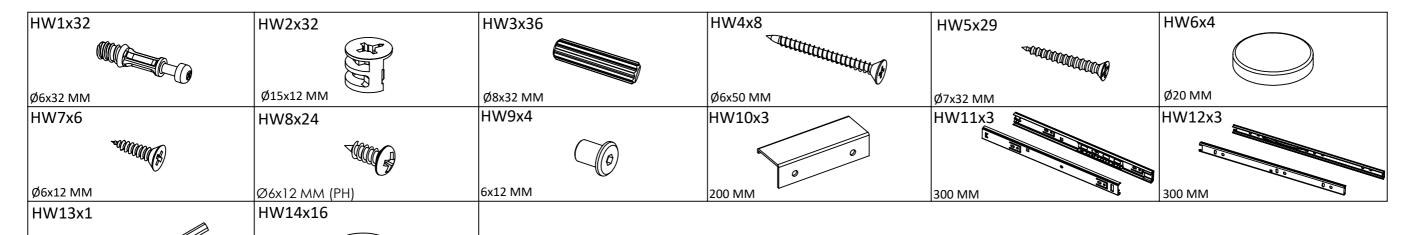

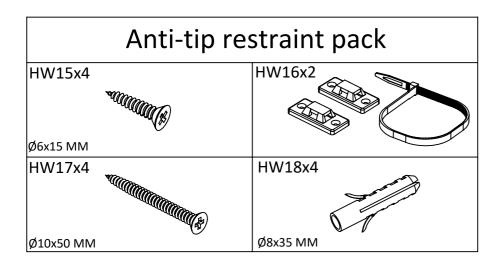

Ø20 MM

Part List & HW


Piece	Description	Qty	Carton Call
1	Bottom Panel	1	1 of 1
2	Side Panel - Right	1	1 of 1
3	Back Cover - Right	1	1 of 1
4	Front Appron	1	1 of 1
5	Side Panel - Left	1	1 of 1
6	Back Cover - Left	1	1 of 1
7	Back Cover Support	1	1 of 1
8	Top Panel	1	1 of 1
9	Stopper	6	1 of 1
10	Drawer Back	3	1 of 1
11	Drawer Side - Right	3	1 of 1
12	Drawer Side - Left	3	1 of 1
13	Drawer Base Support	3	1 of 1
14	Drawer Base	3	1 of 1
15	Drawer Front	3	1 of 1
16	Legs	4	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt	32	1 of 1
HW2	Camlock	32	1 of 1
HW3	Wooden Dowel	36	1 of 1
HW4	Screw M 6 x 50 mm	8	1 of 1
HW5	Screw M 7 x 32 mm	29	1 of 1
HW6	Foot Pads	4	1 of 1
HW7	Screw M 6 x 12 mm	6	1 of 1
HW8	Screw M 6 x 12 mm (PH)	24	1 of 1
HW9	Cap Nut	4	1 of 1
HW10	Handle	3	1 of 1
HW11	Metal Runner 1	3	1 of 1
HW12	Metal Runner 2	3	1 of 1
HW13	Allen Key	1	1 of 1
HW14	Cover Cap Sticker	16	1 of 1
HW15	Screw M 6 x 15 mm	4	1 of 1
HW16	Anti-tip	2	1 of 1
HW17	Screw M10 x 50 mm	4	1 of 1
HW18	Fisher "S" 8	4	1 of 1


Special Tips for Fitting Minifix Cam (Cam-Lock), and Minifix Bolt (Cam-Bolts)

CAM-BOLT

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

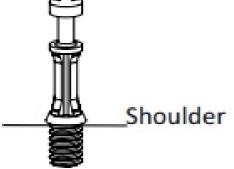

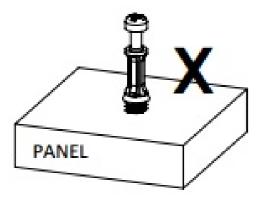


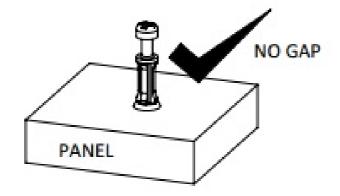







WHEN TIGHTTENING CAM-LOCK
Trun the Cam-lock Clockwise Until
The Arrow Points in the Position as bellow

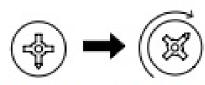

STARTING POSITION

FULLY LOCK

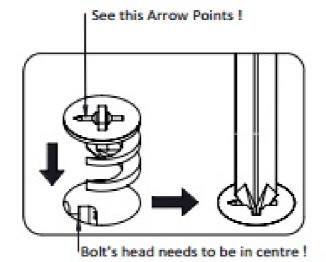


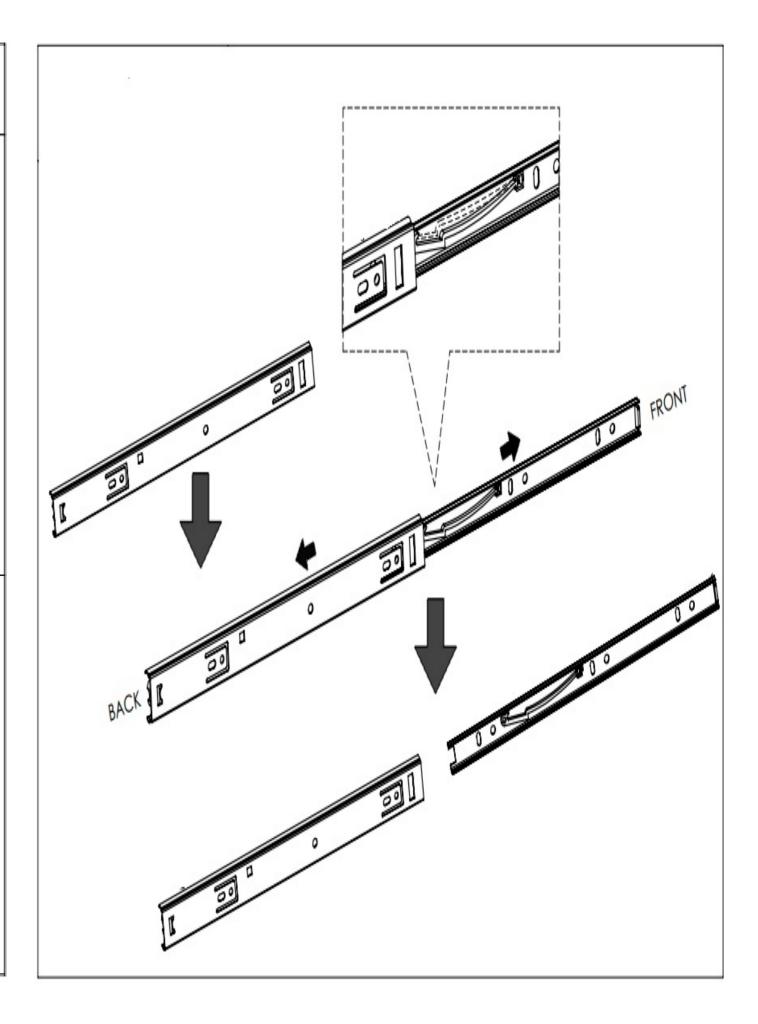


PREPARATION

Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 60 minutes.

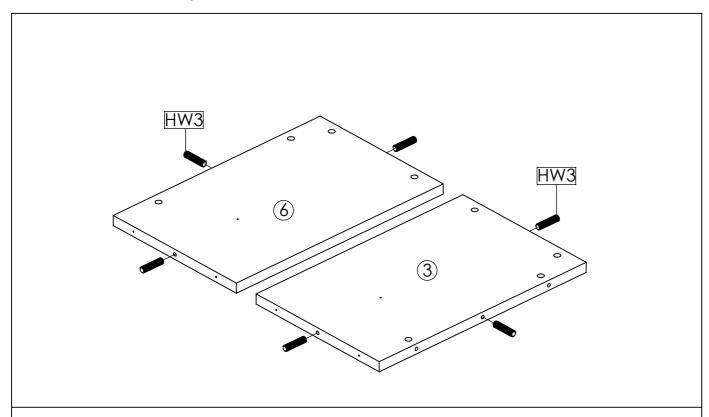


STEP1. Insert Wooden Dowel (HW3), Into Back Cover (Right) (3), and Back Cover (Left) (6)

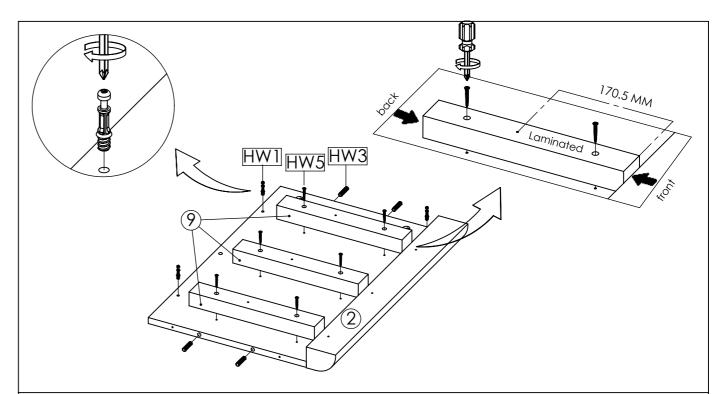


STEP2. Insert Stopper (9), Into Side Panel - Right (2), Secure with screw M7x32 mm (HW5). Insert Cambolt (HW1) into Side Panel - Right (2), Insert Wooden Dowel (HW3) into Right Side Panel (2).

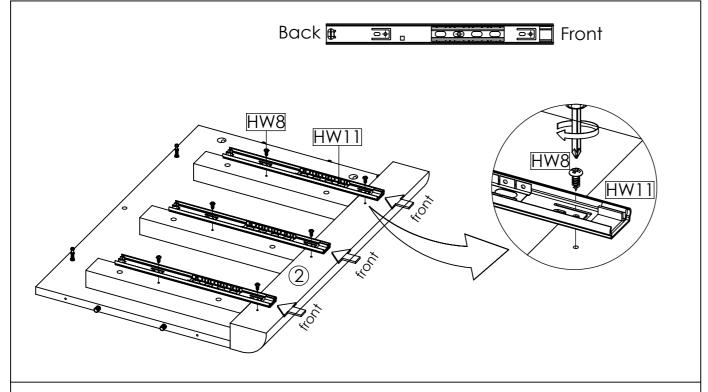


STEP3. Install the metal runner 1 (HW11) into position as the above image, using screw M6x12mm PH (HW8) And Tighten It Using Screwdriver.

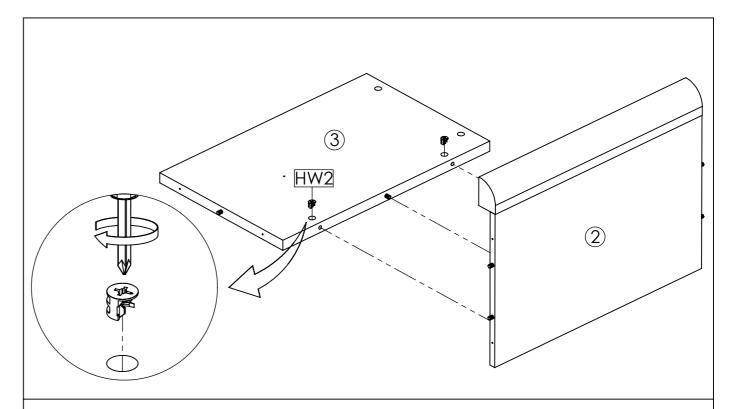


STEP4. Insert Side Panel - Right (2) Into Back Cover - Right (3) Secure with Camlock (HW2) and tighten it using screwdriver.

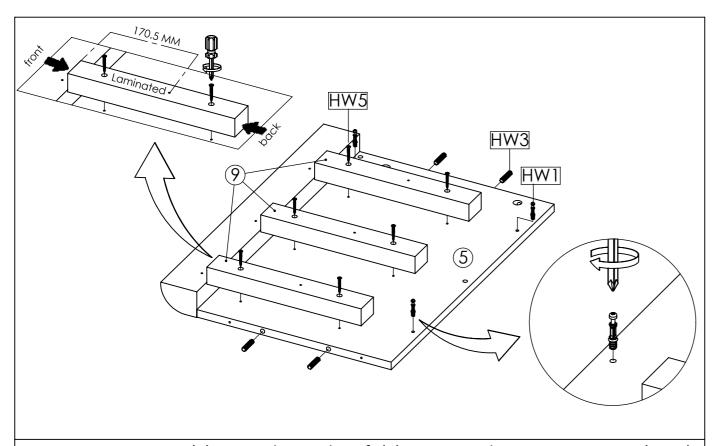


STEP5. Insert Stopper (9), Into Side Panel - Left (5), Secure with screw M7x32 mm (HW5), Insert Cambolt (HW1) into Side Panel - Left (5), Insert Wooden Dowel (HW3) into Side Panel - Left (5).

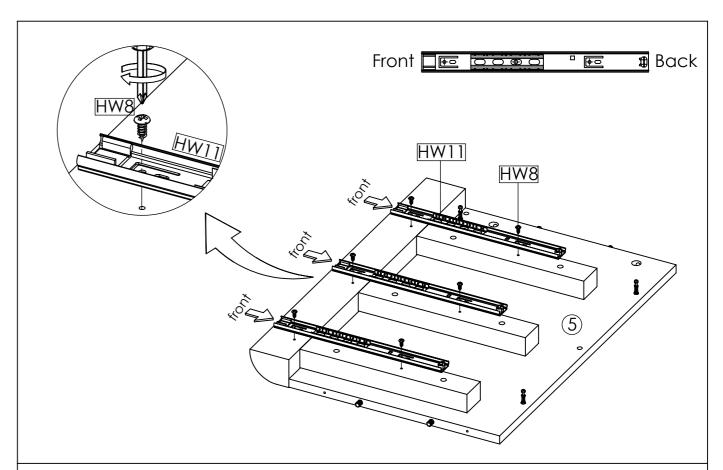


STEP6. Install the metal runner 1 (HW11) into position as the above image, using screw M6x12mm PH (HW8) And Tighten It Using Screwdriver.

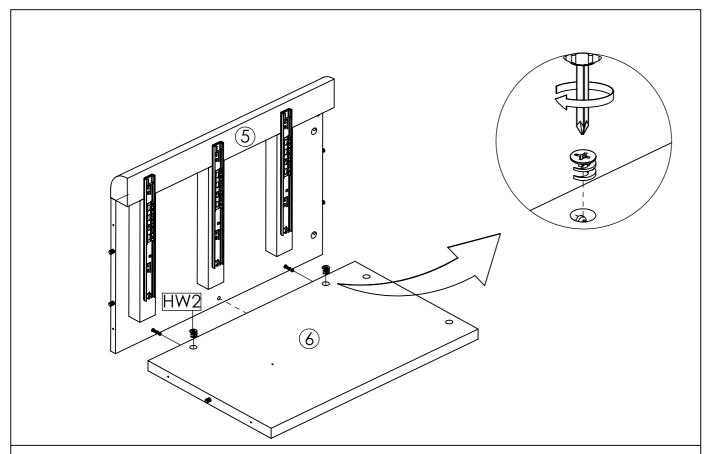

STEP7. Insert Side Panel - Left (5) Into Back Cover -Left (6) Secure with Camlock (HW2) and tighten it using screwdriver.

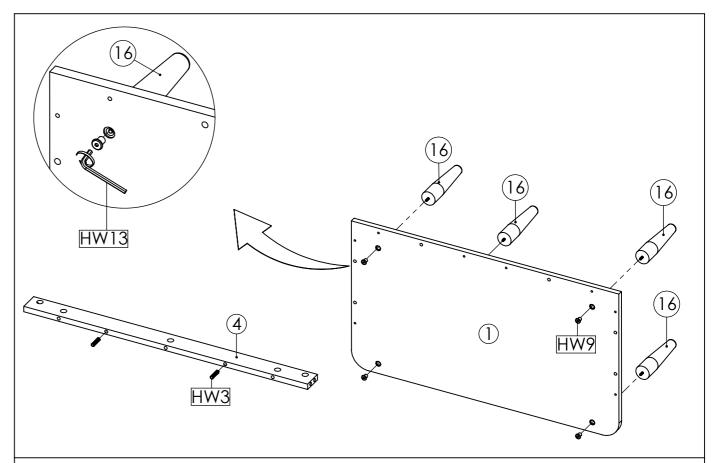


STEP8. Insert Wooden Dowel (HW3), Into Front Appron (4), Insert Legs (16), Into Bottom Panel (1), Secure with Cap Nut (HW9) and tighten it using Allen Key (HW13).

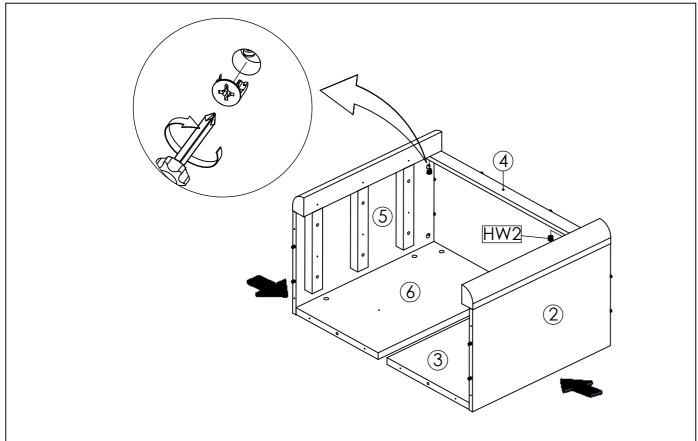


STEP9. Attach Side Panel - Right (2) and Side Panel - Left (5) Into Front Appron (4),
Secure with Camlock (HW2) and tighten it using screwdriver.


STEP10. Attach Bottom Panel Cover - Left (6), and Side Panel It Using Screwdriver.

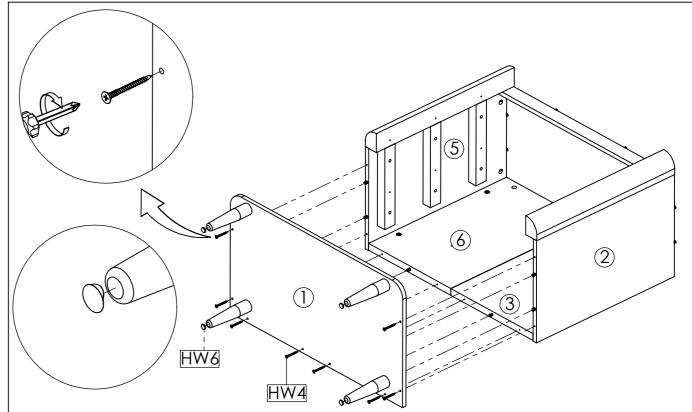



STEP10. Attach Bottom Panel (1) Into Side Panel - Right (2), Back Cover - Right (3), Back Cover - Left (6), and Side Panel - Left (5), Secure with Screw M6x50mm (HW4) And Tighten It Using Screwdriver. Attach Foot Pads (HW6) Into Legs (16).

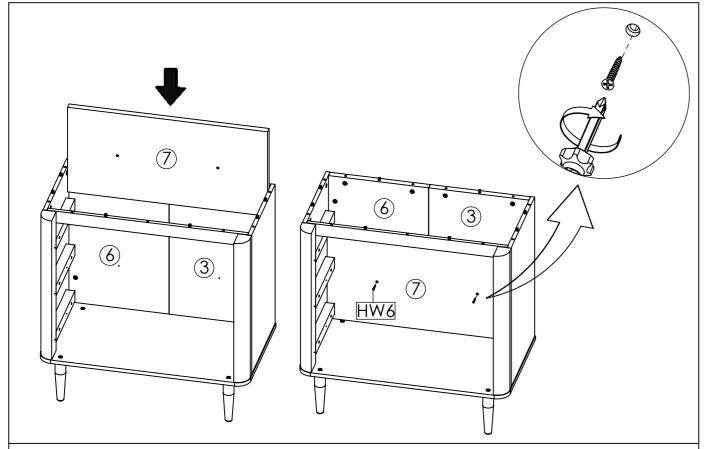


STEP11. Insert Back Cover Support (7), secure with screw M6x32mm (HW6) And Tighten It Using Screwdriver.

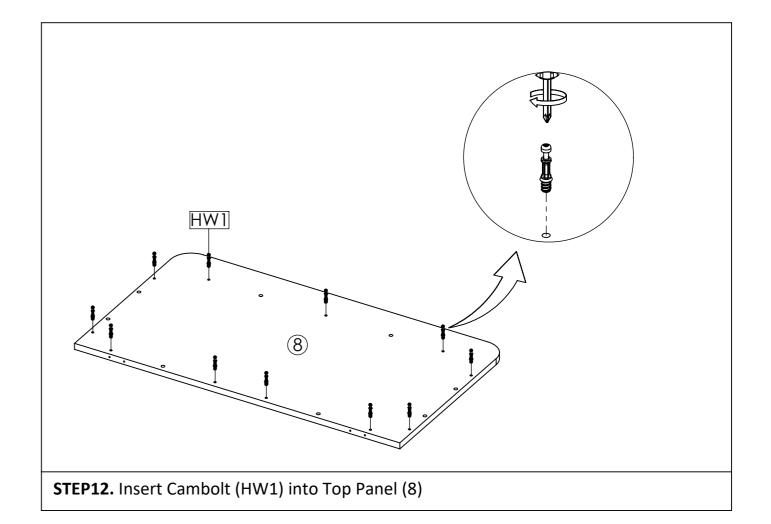

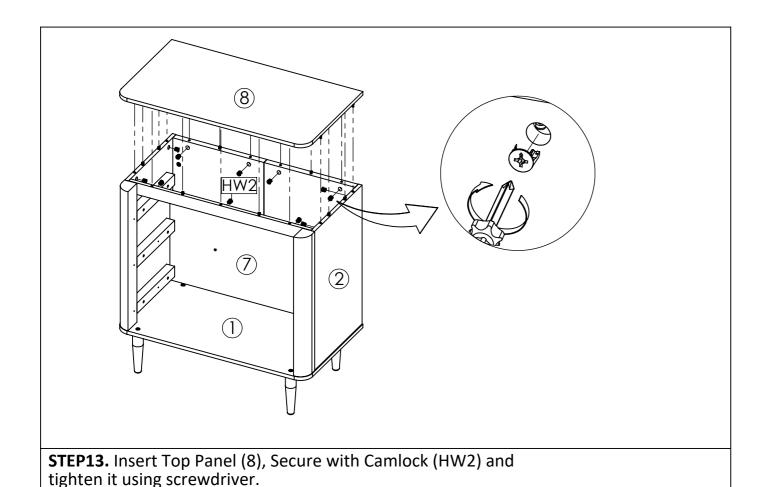

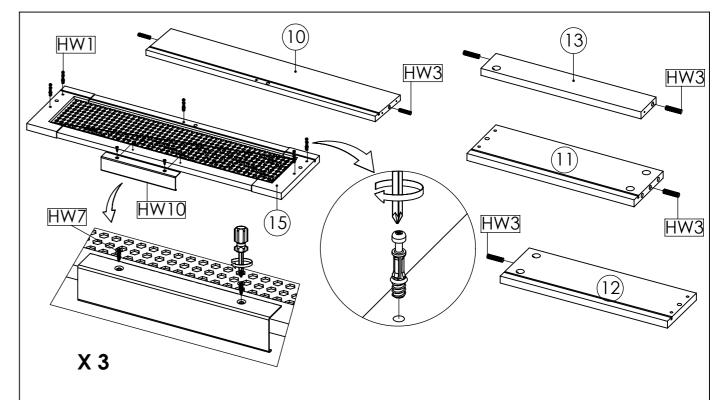


STEP14.Insert Cambolt (HW1) into Drawer Front (15), Insert Wooden Dowel (HW3) into Drawer Side-Right (11), Drawer Side - Left(12), drawer back(10), and drawer base support (13). Attach Handle (HW10) into Drawer Front (15) secure with screw M6x12mm (HW7) And Tighten It Using Screwdriver.

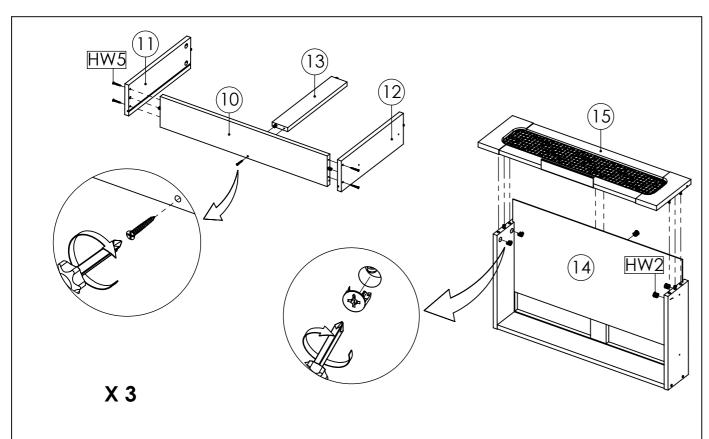


(15)then tighten camlock (HW2) it using screwdriver.

STEP15: Combine Drawers Side (11 & 12) and Drawer Base Support (13) into Drawer Back (10) secure with screw M7x32mm (HW5). Insert Drawer Base (14), then put Drawer Front with screw M6x12mm PH (HW8) And Tighten It Using Screwdriver.


X 3

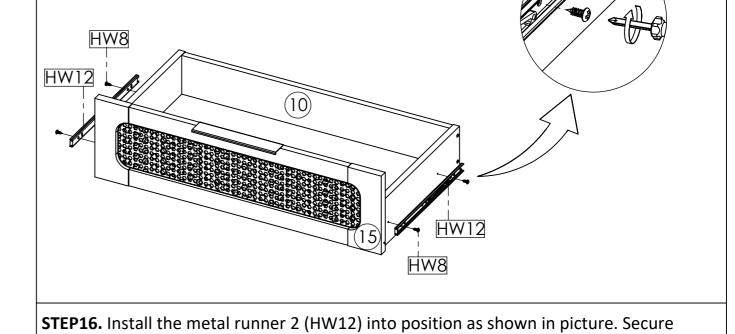

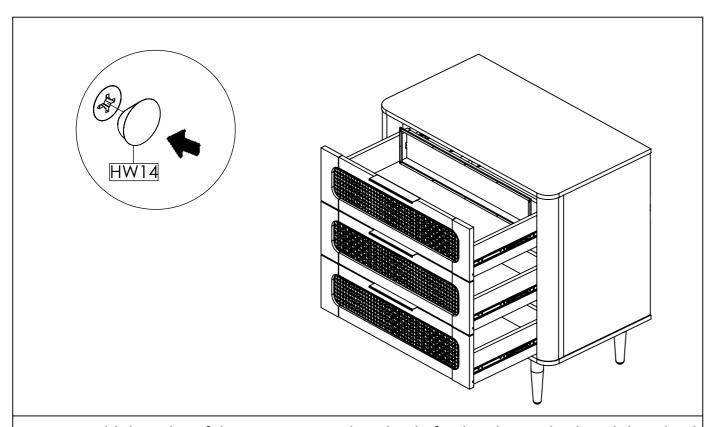

STEP17. Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards, according to the image. Slide in the drawers one by one into the cabinet.

Attach Cover Cap Sticker (HW14) to the panel that has lamination.

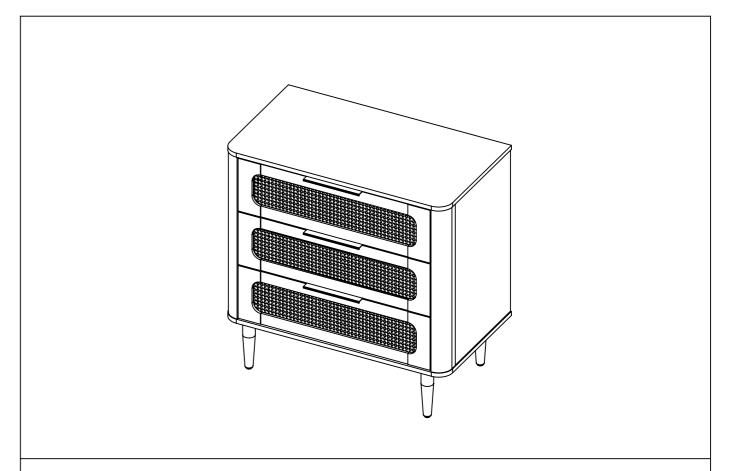

STEP18. Assembly is complete



ANTI-TIP RESTRAINT INSTALLATION




WARNING!

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- · Place heaviest items in the lower drawers.



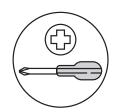


REQUIRED TOOL 8MM / 5/16" DRILL BIT

REQUIRED TOOL


Hardware (HW18/HW17) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

ANTI-TIP RESTRAINT PACK					
ID	DESCRIPTION		QTY		
HW16	BRACKET		4		
HW15	M6 × 15MM SCREW	Anno.	4		
HW18	M8 × 35MM PLUG		4		
HW17	M10 × 50MM SCREW	anna	4		
HW16	STRAP		2		

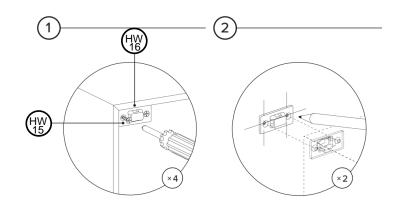


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

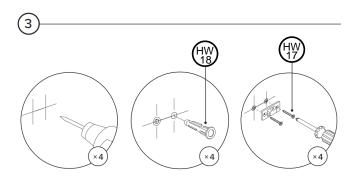

Drill holes in wall using 8mm / 5/16" drill bit.

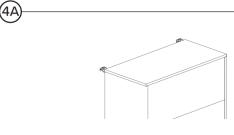

Align brackets on unit with brackets on wall.

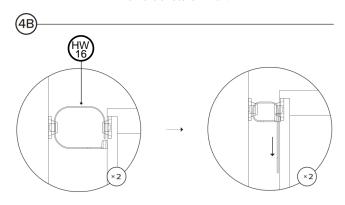

Pull strap down until it snap-locks.