

Please organize all accessories before installation



Body of car



Front wheel



Front handlebar



Seat



1. Install the front wheel upward from under the body



2. Install the front wheels into the car body



3. Remove the front handlebar



4. Remove the screws in the front handlebar




5. Install the front handlebar into the front fork




6. Align the screw hole when installing to the bottom



7. Thread the screw through the screw hole

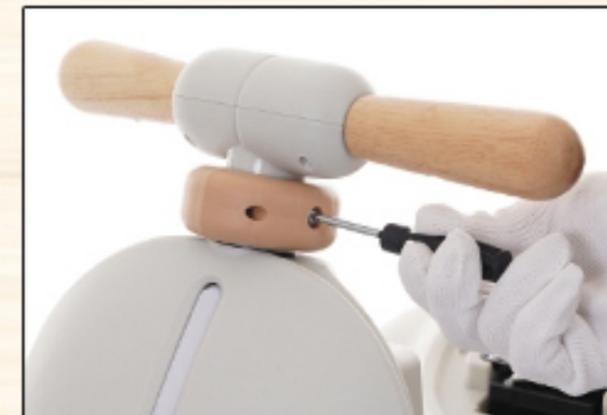

8. Tighten the nut to secure it firmly

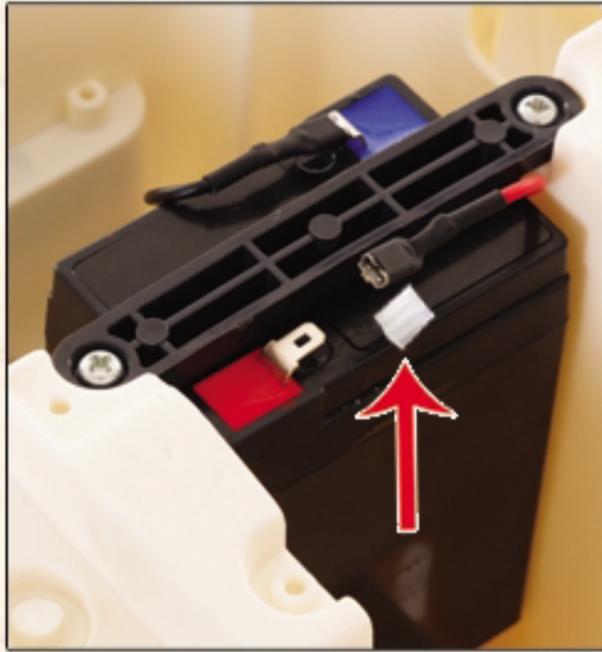

9. Remove the white insulation cap from the battery



10. Connect the battery wire




11. Unscrew the screws in the back of the seat



12. Snap the front of the seat into the car body



13. Ensure the seat is fully installed

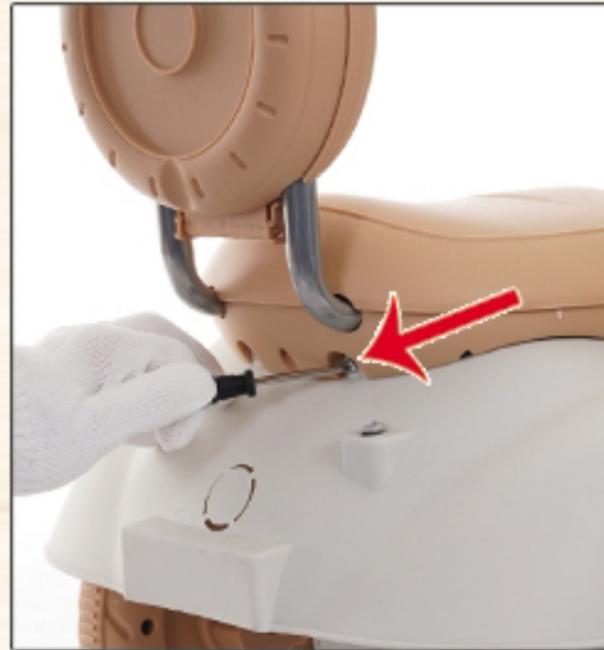

14. Tighten the screws to secure firmly



15. The charging port is located on the back side of the seat



16. The switch is located below the handlebar

Maintenance and Care

1. Charge the battery promptly when the toy car is moving slowly, for 4-6 hours. Do not exceed 10 hours.
2. Charging must be done under adult supervision. A slight warming of the charger and battery during charging is normal.
3. This product must be assembled by an adult or checked by an adult for correct assembly before use.
4. Store the packaging bag properly after assembly. Keep it out of reach of children as there is a choking hazard.
5. Never short-circuit the positive and negative terminals of the battery. This poses a risk of burns and fire.
6. Used batteries should be disposed of by a recycling company.
7. Do not operate the forward/reverse switches while riding, as this may damage components. To change direction, release the foot pedal switch first, then operate the forward/reverse switch.
8. When not riding, set the forward, stop, and reverse switches to the "neutral" position. Turn off the power switch (Note: This switch only controls the drive mechanism).
9. For electrical safety, the maximum current of the fuse on this toy car is 5A. Do not change these parameters arbitrarily.
10. When plugging in or unplugging the charger, hold the plug vertically and apply force; do not pry it left or right.
11. When using the device, adults or older children are prohibited from pushing it from behind to prevent damage to the motor.
12. The maximum load capacity of this toy car is 30KG. In case of overload or road congestion, the toy car's built-in electronic fuse will automatically stop the toy car and automatically resume operation after 5-10 seconds.
13. As instructed in the manual, the power cord, plug casing, and other components should be inspected periodically for damage. If any damage is found, stop using the toy car until it is repaired.

Precautions for Use (Warnings)

1. It is strictly prohibited to drive and play in dangerous places such as streets, road slopes and swimming pools.
2. Please use on well paved roads only. Avoid using on smooth surfaces such as marble or ceramic tiles.
3. This product is for one person only. Do not overload. Maximum load is 66lbs.
4. Children must ride under adult supervision, and the guardian must not leave during the ride.
5. Do not modify the wiring or add any electrical devices.
6. Do not use in water. Do not pour water or other liquids onto the toy car.
7. Do not block the toy car while it is in motion to avoid damaging the components. If a blockage occurs, immediately release the foot pedal switch, remove the obstruction, and then continue riding.
8. Charge the battery promptly when riding at a slow speed. Excessive riding time will shorten the battery life.
9. When not in use, turn off the power switch. If not used for a long period, disconnect the battery connector.
10. Do not ride in rainy weather.

Charging Precautions (Warning):

1. When using the electric toy car for the first time, ensure the battery is fully charged for 6 hours! Otherwise, the battery will be permanently damaged and irreparable.
2. When charging, first insert the DC plug of the charger into the charging socket (located at the front of the seat), then plug the charger into the power outlet.
3. After each period of continuous use, the battery must be charged promptly. Normal charging time is 4-6 hours.
4. Each charging session should not exceed 10 hours.
5. Charging the battery requires an adult.
6. If the electric toy car is not used for an extended period, it must be charged at least once a month.

Please read the instruction manual before using this product. This instruction manual provides the correct operating methods and installation steps to prevent damage to the product or injury to your baby due to incorrect operation. Please keep this manual safe for future reference.

WARNING:

1. Not for use on public roads. Use under adult supervision.
2. For adult assembly only.
3. The illustrations in this manual are for illustrating product operation and structure. In case of slight differences between the illustrations and the actual product, please refer to the actual product.