
 

 
 
 
 
 
 
 
 
 

 






 


 
 

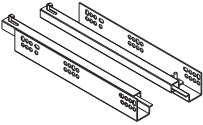 


 
 

 
 
 
 
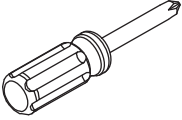 

 


ASSEMBLY INSTRUCTIONS

1		x1	13		x1
2		x1	14		x1
3		x2	15		x1
4		x2	16		x2
5		x2	17		x2
6		x2	18		x2
7		x1	19		x2
8		x1	20		x1
9		x1	21		x1
10		x2	22		x2
11		x1	23		x2
12		x1			


ASSEMBLY INSTRUCTIONS

A	 Ø6x26mm	x130	J		x2
B	 Ø15x9mm	x130	K		x2
C	 Ø3.5x14mm	x94	L		x6
D		x2	M	 big bend	x4
E		x2	N	 middle bend	x4
F		x2	O		x8
G	 Ø4x25mm	x6	P		x1
H	 M4 x22mm	x12			
I		x6			


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL

 
Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

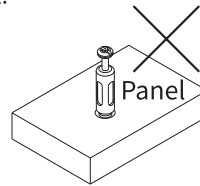

 The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

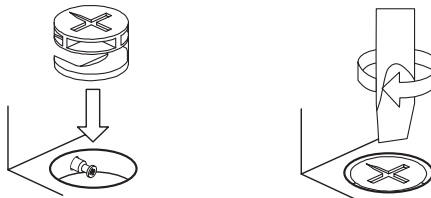


Turn the cam lock clockwise to tighten.


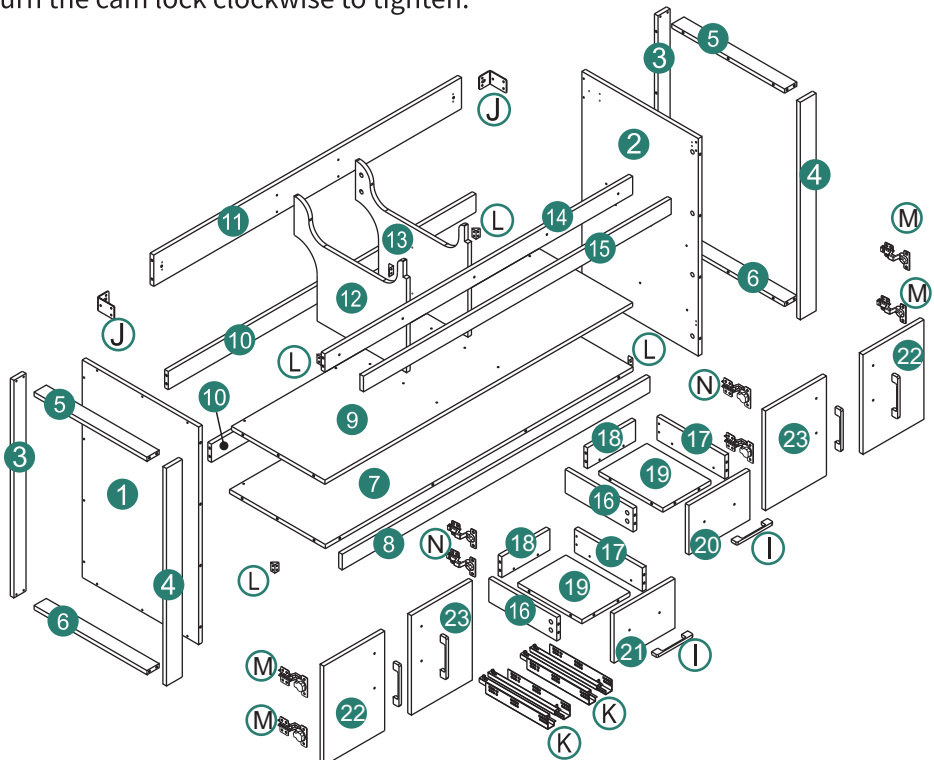 


ASSEMBLY INSTRUCTIONS




 
1



  The floor needs to be covered with paper or carpet protective material before installation!

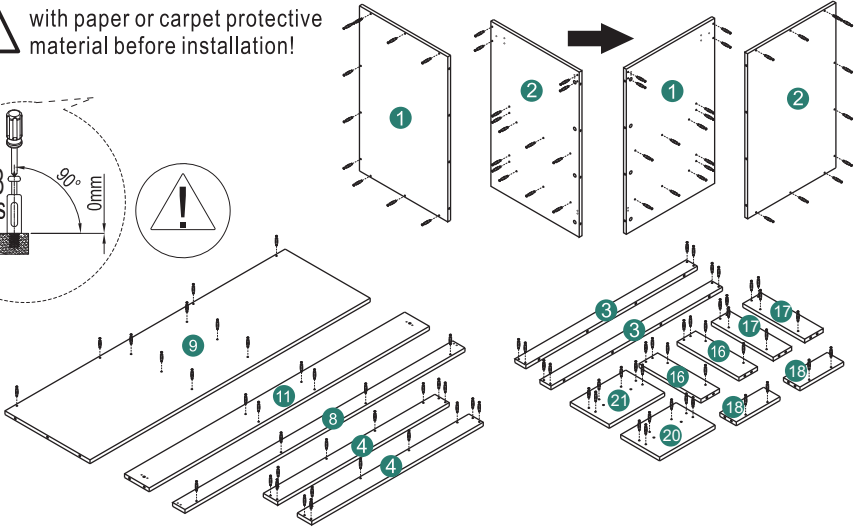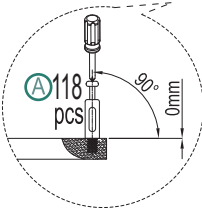

2

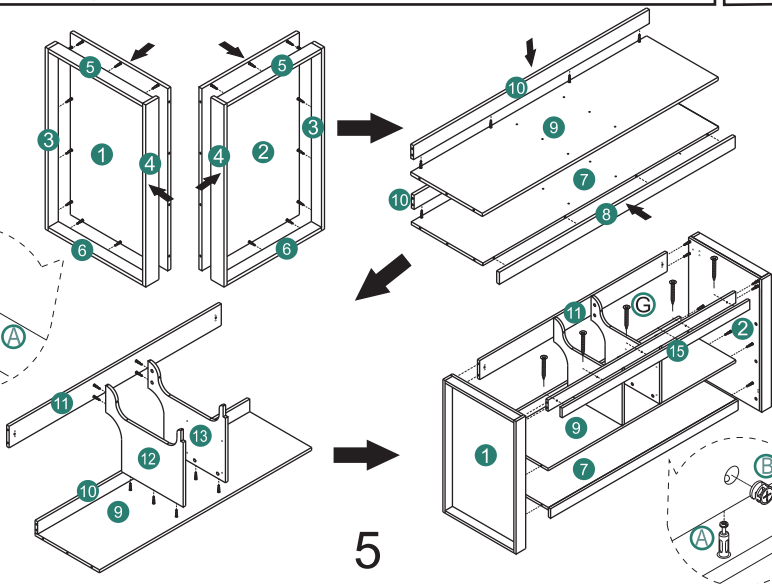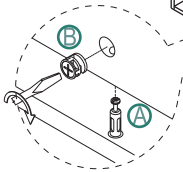    



5

ASSEMBLY INSTRUCTIONS

3

16 2pc 17 2pc 18 2pc 19 2pc 20 1pc 21 1pc

  B 32pcs C 42pcs L 6pcs H 4pcs I 2pcs J 2pcs K 2pcs

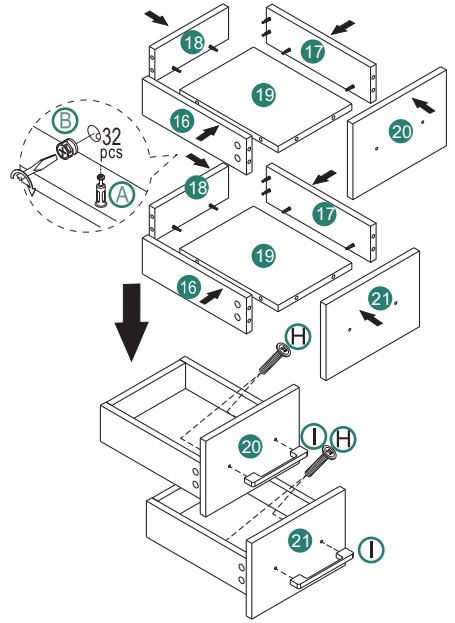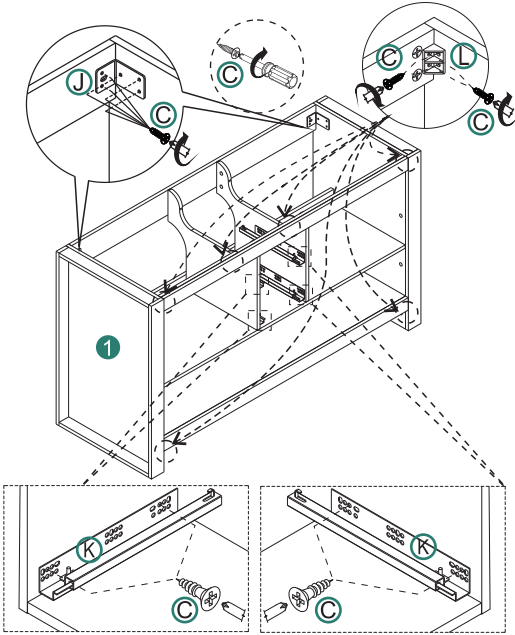



4

22 2pc 23 2pc

C 16pcs H 8pcs I 4pcs M 4pcs N 4pcs

D 2pcs

  Bring your own tools

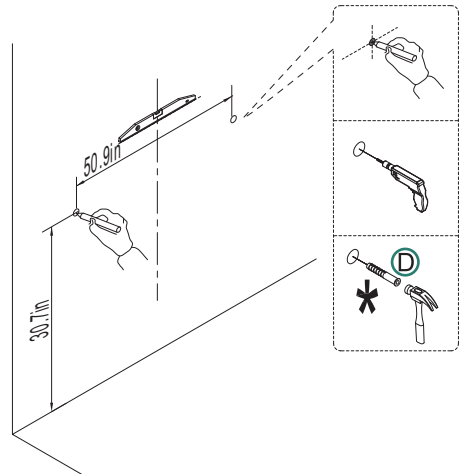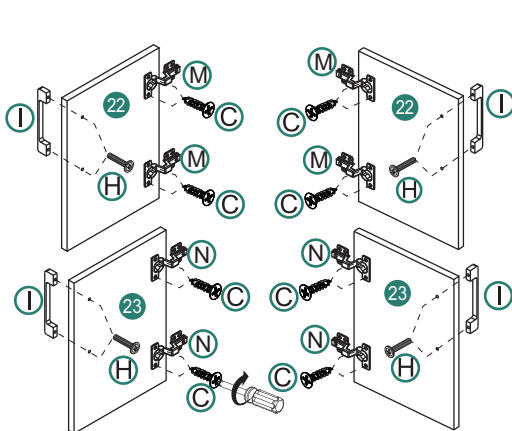

ASSEMBLY INSTRUCTIONS

5



Ⓢ40pcs



 
 
Ⓢ2pca



Ⓢ2pca




Ⓢ8pca

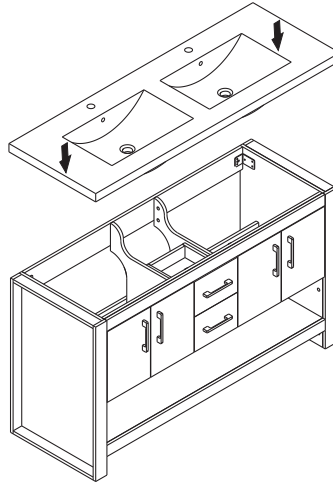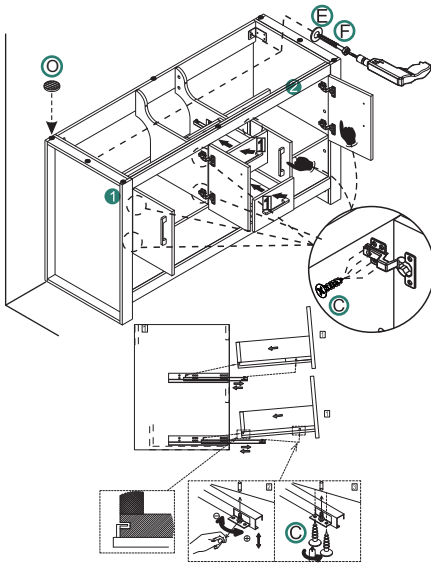


HINGE ADJUSTMENT AND REMOVAL INSTRUCTION

 DOOR INSTALL

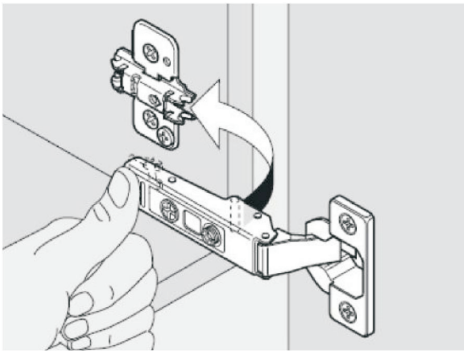


DOOR REMOVE

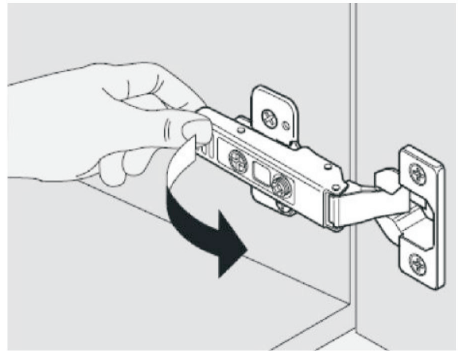 


PIVOT-PRO side adjustment

 Side adjustment of the door is made by using the indicated screw.

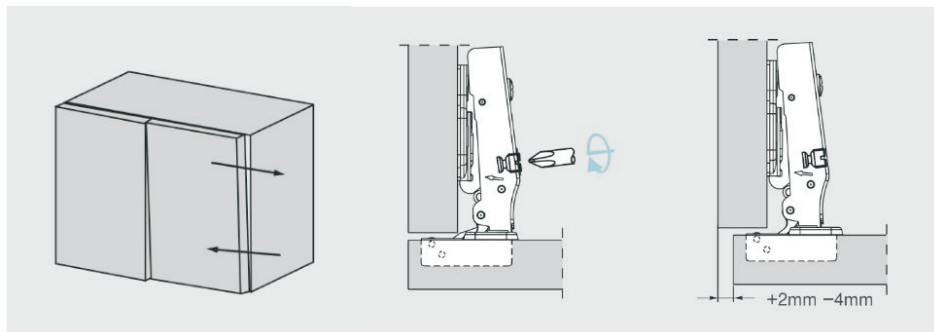

PIVOT-PRO Depth Adjustment

 Depth adjustment is made without loosening any screw. The door can be moved in or out by rotating the cam adjuster on the hinge arm.

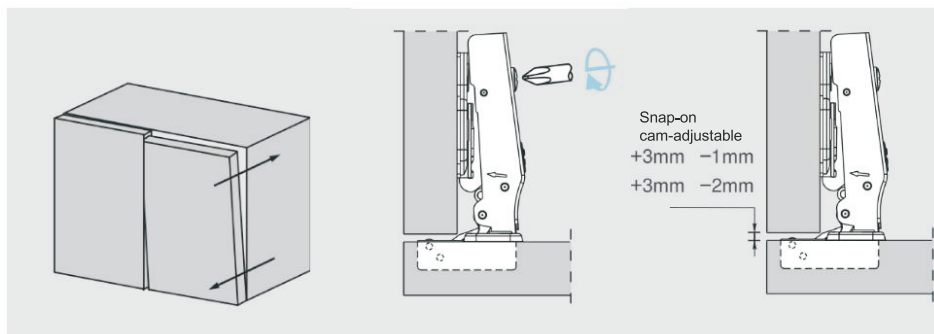

PIVOT-PRO Height Adjustment

By loosening the two fixing screws to allow the mounting plate to slide up or down, the door can be adjusted vertically by $\pm 2\text{mm}$. After retightening the screws, the Depth adjustment is done.

