

1	x1	9	x1
2	x1	10	x1
3	x1	1	x1
4	x1	12	x1
5	x1	13	x1
6	x1	14	x1
7	x2	15	x1
8	x2		

A	Ø6x26mm	x54	(1)		x1
B	Ø15x9mm	x54	J		x2
©	Ø3.5x14mm	x49	K		x2
(D)		х4			x8
E		x4	M	Ø 4x20mm	x4
E		x4	N		x2
G		x1	0		x1
\oplus		x2			

Use the Cam Lock and Eccentric Wheel

 
ECCENTRIC WHEEL

Tighten the bolt until the shoulder is aligned with the panel.


Be sure not to tighten too much or too little.









  The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.





Turn the cam lock clockwise to tighten.

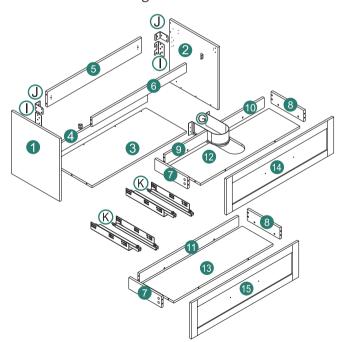

WARNING: To prevent tipping over, this product must beused with the included wall mounting device. WARNING: Evaluate the suitability of the wall to ensure thatthe fixtures can withstand the forces that occur.

