

*PlumChef*

# TOASTER: KRT-6061 USER MANUAL

Household Use Only   Please Read The Manual Carefully Before Use



# LONG SLOT TOASTER

## KRT-6061

---

POWER

120V~ 60Hz 1400W



---

**For your safety and continued enjoyment of this product,  
always read the instruction manual carefully before  
using.**

# IMPORTANT SAFEGUARDS

---

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Always Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
3. Do not touch hot surfaces, use handles or knobs.
4. To protect against electrical shock, do not immerse cord, plugs, or any part of the toaster in water or other liquids. See instructions for cleaning.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the manufacturer may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than intended use.
12. Oversize foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls and the like when in operation. Do not operate under wall cabinets.
14. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
15. To void possibility of fire, Do not operate unattended.
16. To disconnect, push the Stop button, then remove plug from wall outlet.
17. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
18. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
21. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
22. Preheating of the appliance is not necessary
23. Extension Cord:
  - a) A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
  - b) Extension cords are available and may be used if care is exercised in their use.
  - c) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
  - d) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally;

# WARNING

---

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.

2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.


4. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.



**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# FEATURES AND BENEFITS

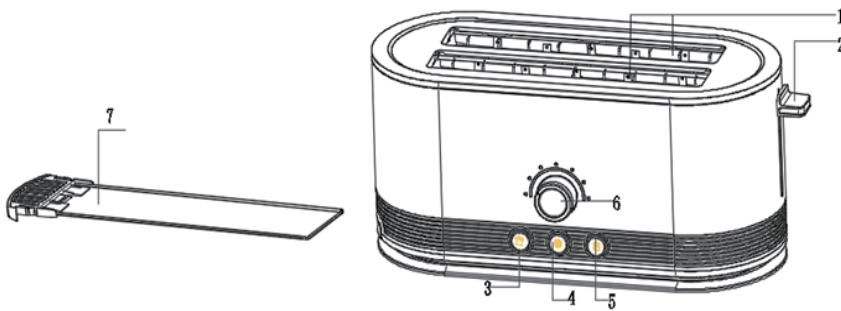

## 1. Slot size:

260(L)x35(W)x110(D)mm

Wide and deep slot toast a wide variety of items.

## 2. High lift carriage control lever

For 80mm high loaf slice, the top edge is not less than 20mm above toaster surface after the carriage pops up.

## 3. Reheat button

Reheats without browning or toasting. LED lights when selected.

## 4. Defrost button

Adds extra time to the cycle for toasting frozen bread.

## 5. Stop button

Interrupts toasting process.

## 6. Browning control knob

Sets selected shade. Six browning levels toast from light to dark.

## 7. Removable crumb tray

Pulls out to clean crumbs that collect in bottom of toaster.

## 8. Cord storage (not shown)

Takes up excess cord and keeps countertop neat.

## NOTE

---

**10 SECONDS BEFORE THE END OF THE WORK,  
THE LIGHT STRIP WILL FLASH.**

# USE AND CARE

---

**Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots.**

**Plug power cord into the wall outlet.**

**1. Insert slice(s) of bread**

**2. Set the browning control**

Turn the knob to select desired toast shade:

| Browning control setting | Shade  |
|--------------------------|--------|
| 1-2                      | Light  |
| 2-4                      | Medium |
| 5-6                      | dark   |

## Some notes on browning

Toasting is a combination of cooking and drying the bread. Therefore, to achieve the same shade, the bread different in moisture level needs varying toasting time.

- \* For slightly dry bread, use a lower setting than you normally would.
- \* For very fresh bread or whole wheat bread, use a higher setting than normal.
- \* Breads with very uneven surfaces will require a higher toast setting.
- \* Thickly cut pieces of bread will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- \* When toasting raisin or other fruit breads, remove any loose raisins, etc. from the surface of the bread before putting into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking to the guide wires in the slot.

## Single slice toasting

If you are toasting a single slice of bread, set the browning knob to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you won't over toast.

## Frozen waffles, pancakes, French toast and frozen bagels

These breads and pastries should be warmed using the Defrost button.

## Toaster pastries

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

# USE AND CARE

---

## 3. To begin toasting

Press the carriage lever until it locks into the down position.

## 4. To stop toasting

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Stop button.

## TIPS

- \* **Never force foods into the toasting slot. Foods should fit freely between the guide wires.**
- \* **Do not place buttered breads or pastries with fillings or frostings in the toaster, as this could create a fire hazard.**
- \* **Uneven toasting is usually due to bread slices of uneven thickness.**
- \* **After use, unplug your toaster from the electrical outlet.**

# USE AND CARE

---

## - Defrost button

The Defrost button is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

### 1. Insert slice(s) of bread.

Be sure that multiple slices do not overlap and the carriage is in the up position.

### 2. Set the browning knob.

#### \* Settings 1-2

For refrigerated breads and thinner frozen items such as frozen pancakes.

#### \* Settings 3-4

For toaster pastries, frozen waffles and (thin) French toast, and refrigerated bagels.

#### \* Settings 5-6

For thicker frozen items such as bagels, hand-cut bread and thick French toast.

### 3. To begin toasting

Press the carriage lever until it locks into the down position.

### 4. Press the Defrost button, Feature is activated.

## - To stop cycle

When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Stop button to interrupt. After use, unplug the toaster from the electrical outlet.

## - Reheat button

The reheat feature allows you to reheat bread without browning or toasting.

### 1. Insert slice(s) of bread.

Be sure that multiple slices do not overlap and the carriage is in the up position.

### 2. To begin reheating

Press the carriage lever until it locks into the down position.

### 3. Press the Reheat button. Feature is activated.

## - To stop cycle

4. When the reheat cycle is completed, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Stop button to interrupt.

# CLEANING AND MAINTENANCE

---

## **Always allow the toaster to cool completely before cleaning.**

1. Always unplug the toaster from the electrical outlet before cleaning.
2. Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean the replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the under-side of the toaster.
6. Any other servicing should be performed by an authorized service representative.

# TROUBLE-SHOOTING

---

## **The handle can't be pressed down and locked.**

1. Check whether the power plug is energized.
2. Check whether the handle is fully pressed.

## **CANCEI light is off, but the bread does not pop up.**

1. Unplug the power plug first, and wait for the body to cool down
2. Check if the notch is stuck by food or the food exceeds the capacity.

## **Odor and smoke appear.**

1. Pull out the plug immediately, wait for the product to cooldown, and check whether the slot is stuck by the food or the food exceeds the size.
2. The product has worked for too long. Wait for 15 minutes before working again.

# REPAIR AND MAINTENANCE INFORMATION

## THANK YOU FOR PURCHASING OUR PRODUCTS !

- | Your satisfaction and support mean everything to us.
- | To offer you the best shopping experience, we provide a **12-month warranty** for our products.
- | If you have any issues with our products, please feel free to contact the seller or E-mail: 
- | our customer support team are at your service 7 days/ 24 hours and will try our best to solve your problem.
- | We also look forward to receiving any advice from you about our products or service and we will make efforts to make them better.



***PlumChef***  
**Electrical Appliance Co., Limited**

# **LIMITED WARRANTY**

---

## **LIMITED WARRANTY**

Plum Chef warrants to the original consumer or purchaser this Product is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, Plum Chef at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: E-mail [plumchef@outlook.com](mailto:plumchef@outlook.com). Please have your Product's model number, date code(on rating label), your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW. IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S.DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE. INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE, SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

## **THIS LIMITED WARRANTY DOES NOT APPLY TO :**

1. Failure of product to perform during power failures and interruptions or inadequate electrical service.
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
5. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance as described in the user's manual.
7. Use of accessories or components that are not compatible with this product.

A close-up portrait of a male chef with dark hair and a serious expression. He is wearing a white chef's jacket with a high collar. The collar is decorated with a variety of international flags, including China, Sweden, and Canada. The background is a solid dark grey.

# PlumChef

Plum-tastic  
Start With PlumChef.

*Your Culinary Partner.*