



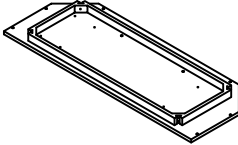
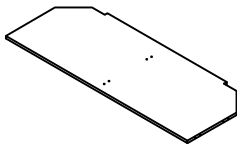
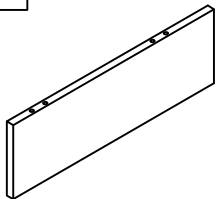
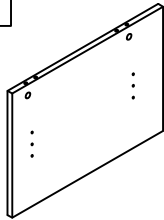
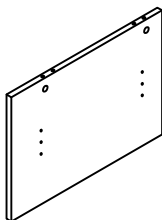







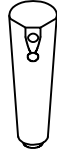


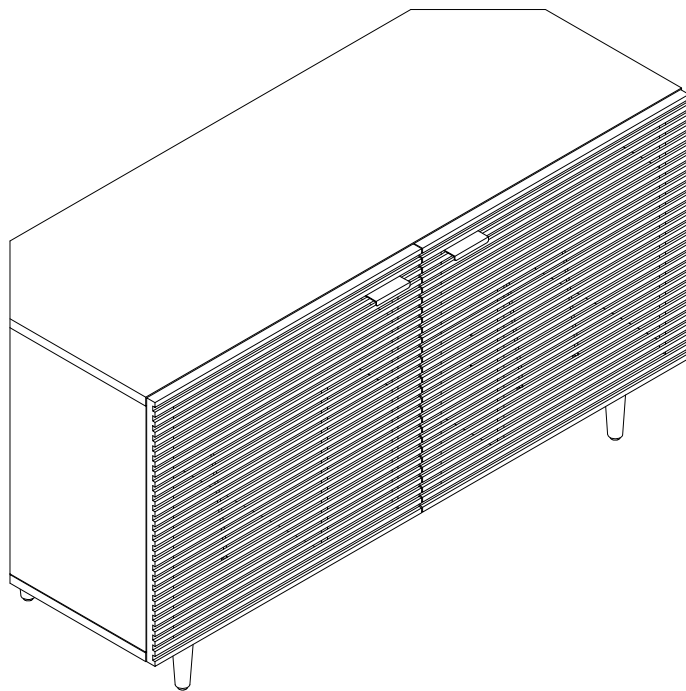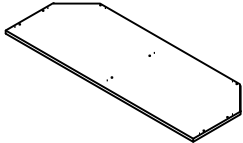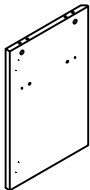

CROSLEY
FURNITURE




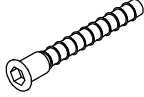
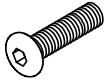




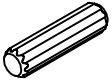


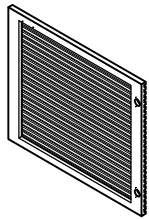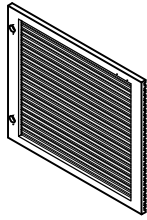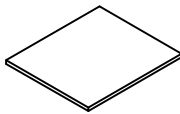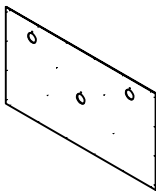





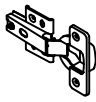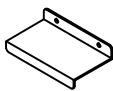

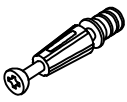Corner Media Console
CF1177



PARTS LIST

 
<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Middle Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>I</div> 	<div>J</div> 
Upper Partition Panel 1 PC	Left Lower Partition Panel 1 PC	Right Lower Partition Panel 1 PC	Left Vertical Panel 1 PC	Right Vertical Panel 1 PC
<div>K</div> 	<div>L</div> 	<div>M</div> 	<div>N</div> 	<div>O</div> 
Left Door 1 PC	Right Door 1 PC	Adjustable Shelf 1 PC	Middle Back Panel 1 PC	Side Back Panel 2 PCS
<div>P</div> 	<div>Q</div> 	<div>R</div> 		
Leg 4 PCS	Cover 3 PCS	Metal Wire 4 PCS		

HARDWARE LIST

#1 	#2 	#3 	#4  7*38mm	#5  1/4"*45mm
Door Hinge 4 PCS	Handle 2 PCS	Shelf Holder 4 PCS (Extra 1)	Tapping Bolt 12 PCS (Extra 1)	Bolt 4 PCS (Extra 1)
#6  1/4"*11mm	#7  1/4"*13mm	#8 	#9 	#10  8*30mm
Spring Washer 4 PCS (Extra 1)	Flat Washer 4 PCS (Extra 1)	Cam Bolt 16 PCS (Extra 1)	Cam Lock 16 PCS (Extra 1)	Wood Dowel 28 PCS (Extra 1)
#11  M6	#12 	#13  7*3.5*15mm	#14  6*3*12mm	#15  8*3*12mm
Hex Nut 8 PCS (Extra 1)	Binding Post 3 SETS (Extra 1)	Long Screw 24 PCS (Extra 1)	Short Screw 4 PCS (Extra 1)	Round Head Screw 48 PCS (Extra 1)
#16 	#17  M2	#18  M4	#19 	#20 
Cam Sticker 14 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC	Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please adjust hinges as needed for proper door alignment.

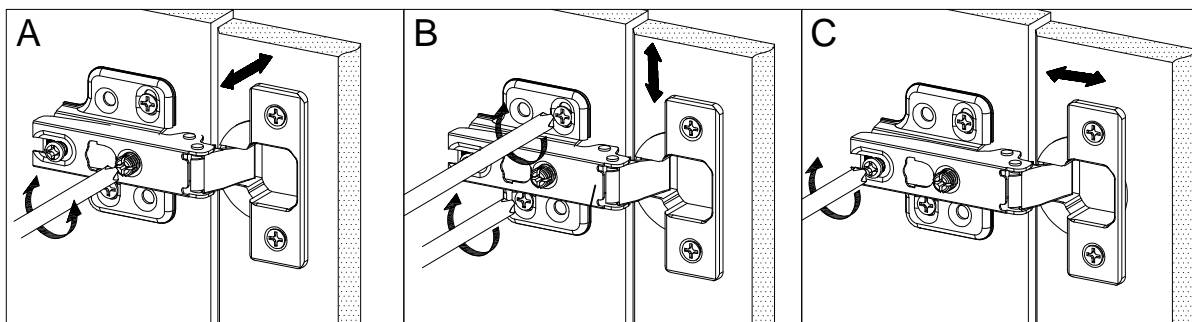


Step 1. Insert cam bolts (part #8) into pre-drilled holes of panels (parts A, B, C & E) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

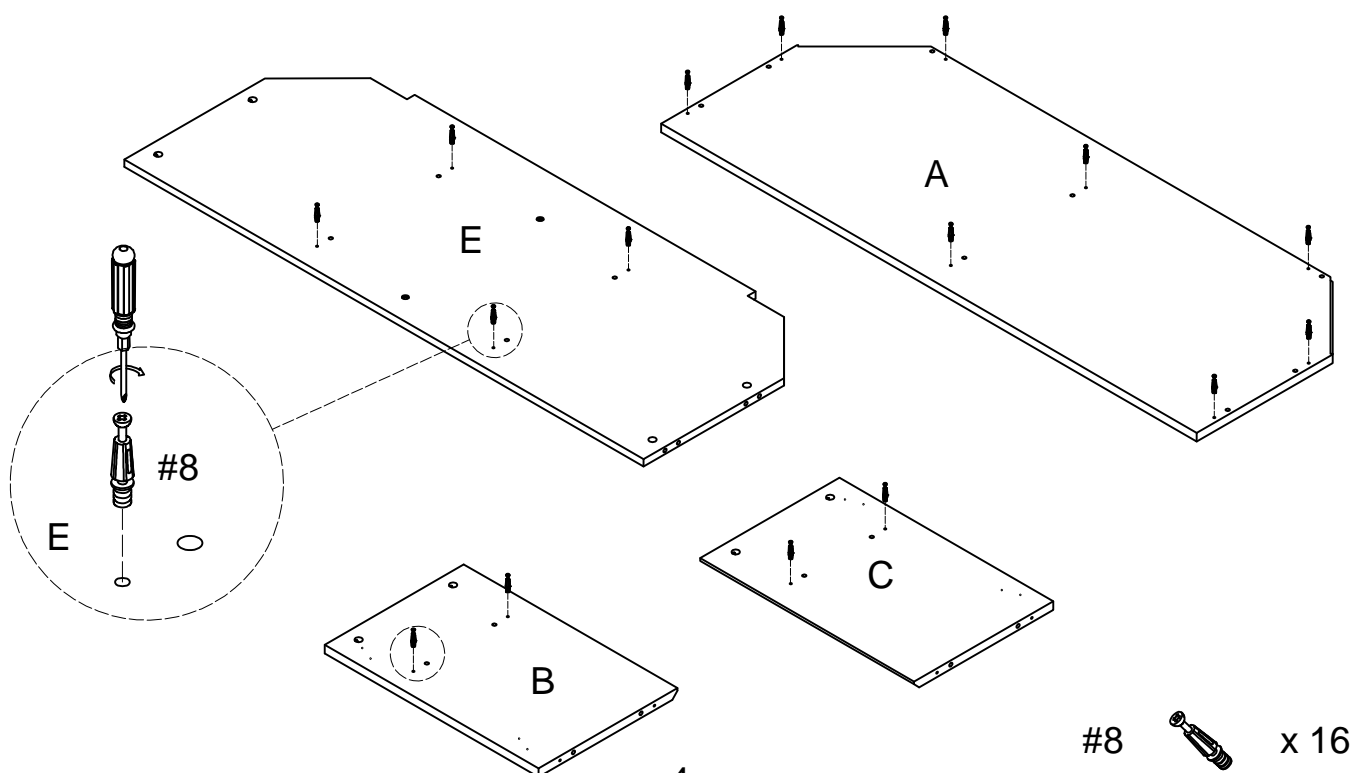




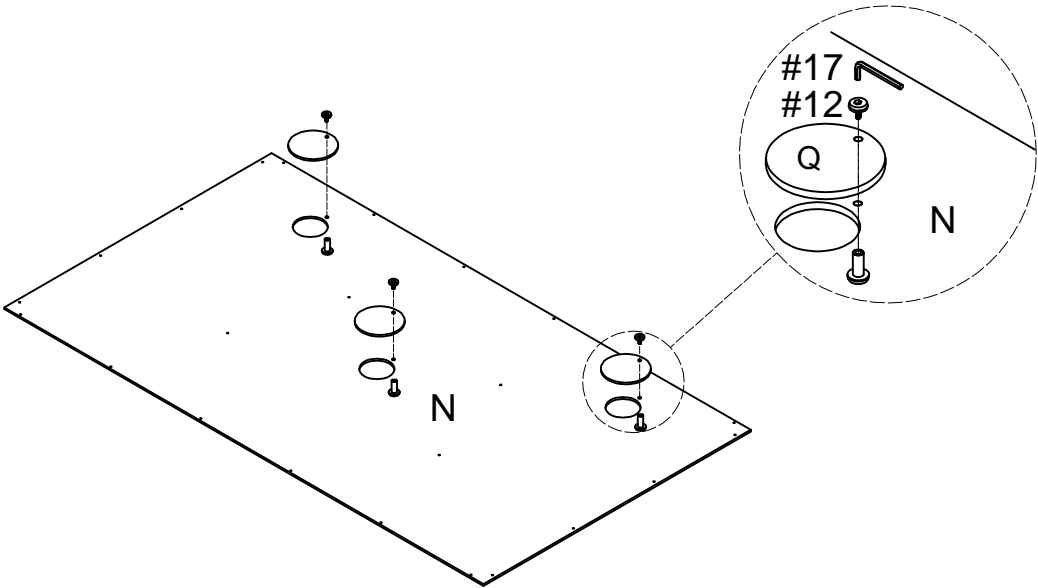

Step 2. Attach covers (part Q) to middle back panel (part N) using binding posts (part #12) and small allen wrench (part #17).

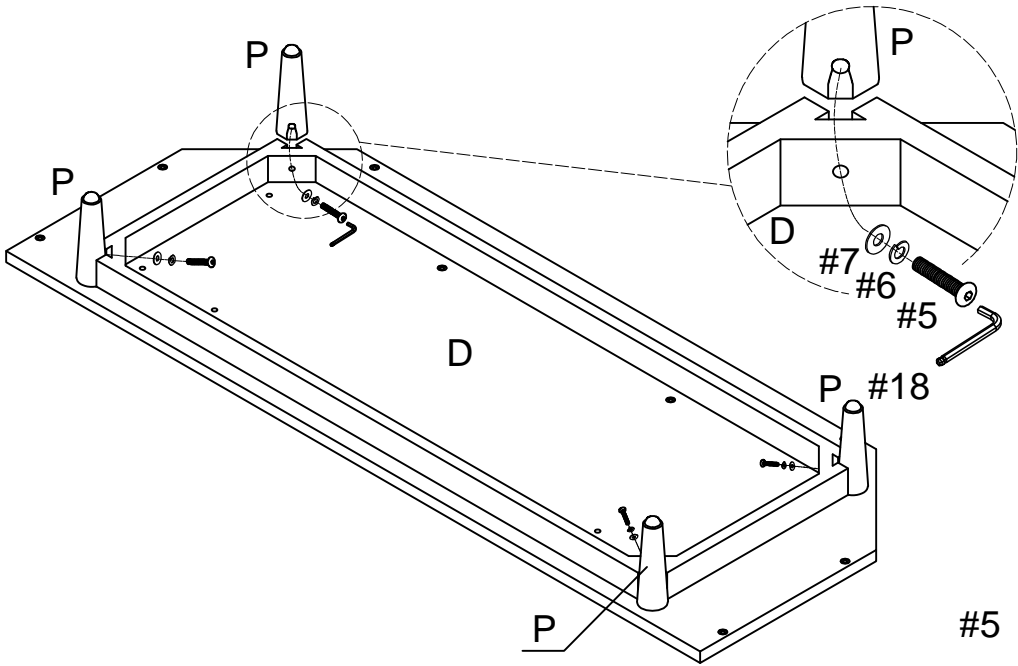


- | | | |
|-----|---|-----|
| #12 |  | x 3 |
| #17 |  | x 1 |

Step 3. Attach legs (part P) to bottom panel (part D) using bolts (part #5), spring washers (part #6), flat washers (part #7) and allen wrench (part #18).




- | | | |
|-----|---|-----|
| #5 |  | x 4 |
| #6 |  | x 4 |
| #7 |  | x 4 |
| #18 |  | x 1 |


Step 4. Attach metal wires (part R) to bottom panel (part D) using hex nuts (part #11) and wrench (part #19).

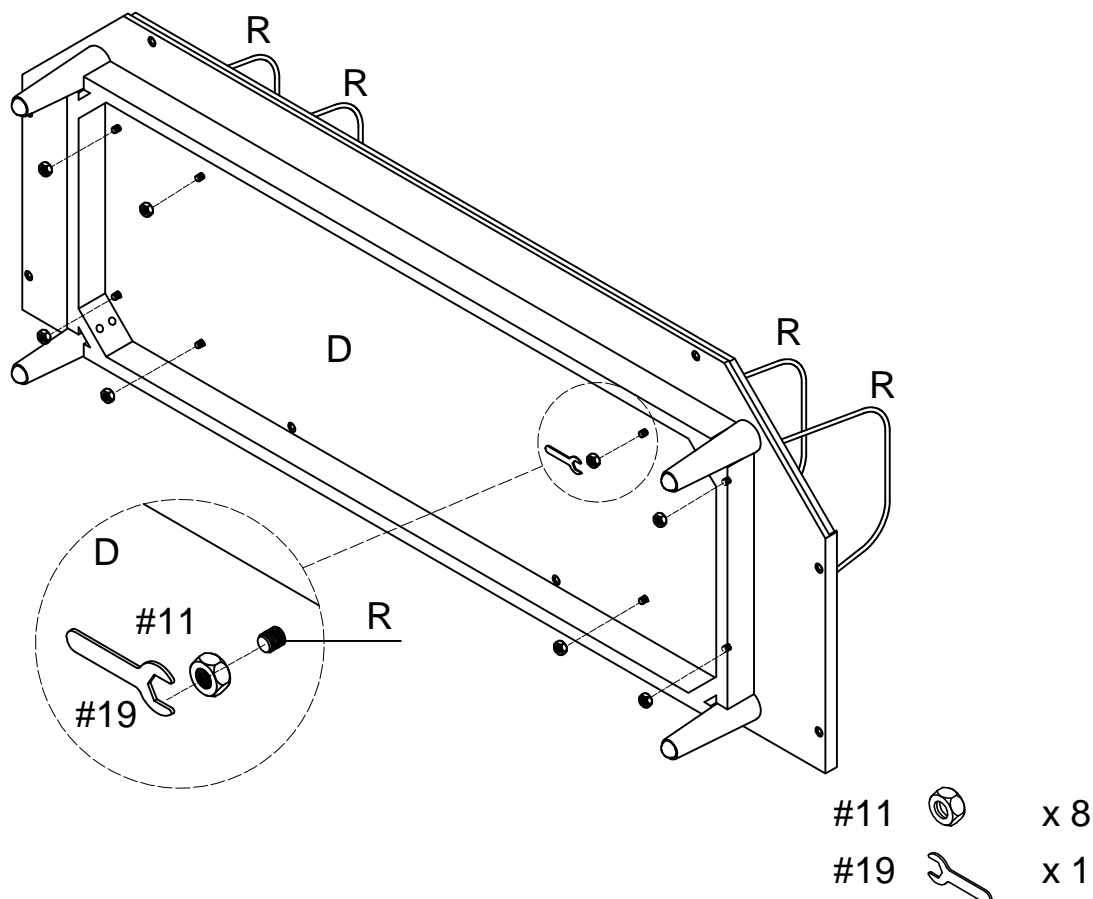

 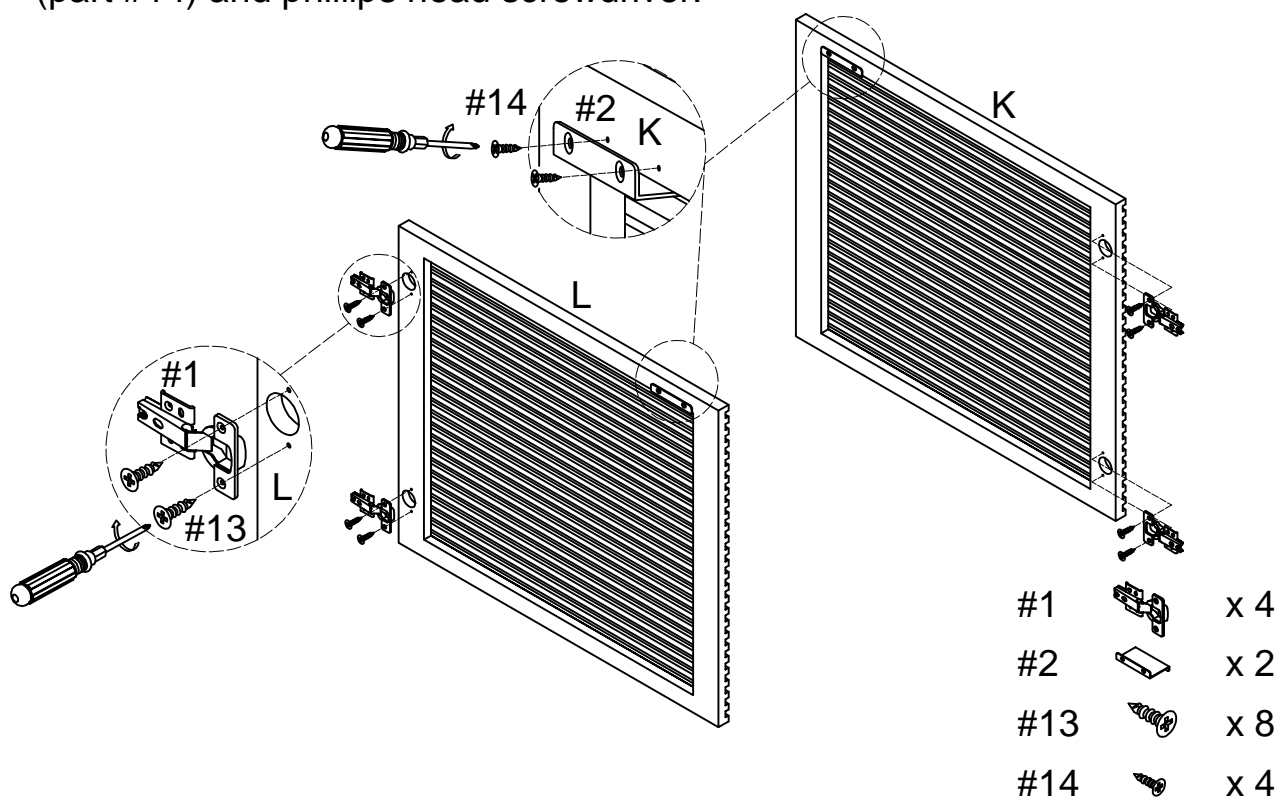


Step 5. Attach door hinges (part #1) to doors (parts K & L) using long screws (part #13) and phillips head screwdriver. Attach handles (part #2) to doors (parts K & L) using short screws (part #14) and phillips head screwdriver.

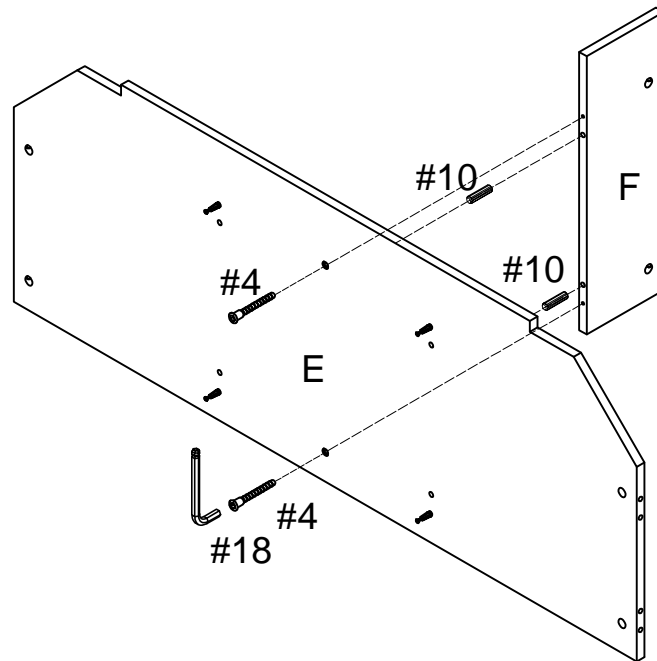



Step 6. Attach middle panel (part E) to upper partition panel (part F) using tapping bolts (part #4), wood dowels (part #10) and allen wrench (part #18).





#4		x 2
#10		x 2
#18		x 1

Step 7. Attach panels (parts G & H) to middle panel (part E) using cam locks (part #9), wood dowels (part #10) and phillips head screwdriver.

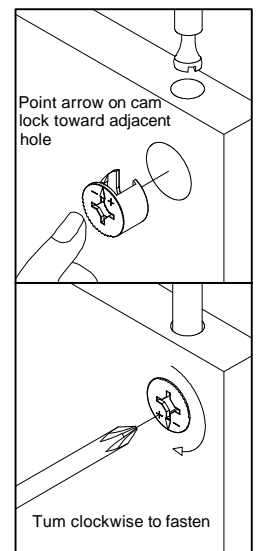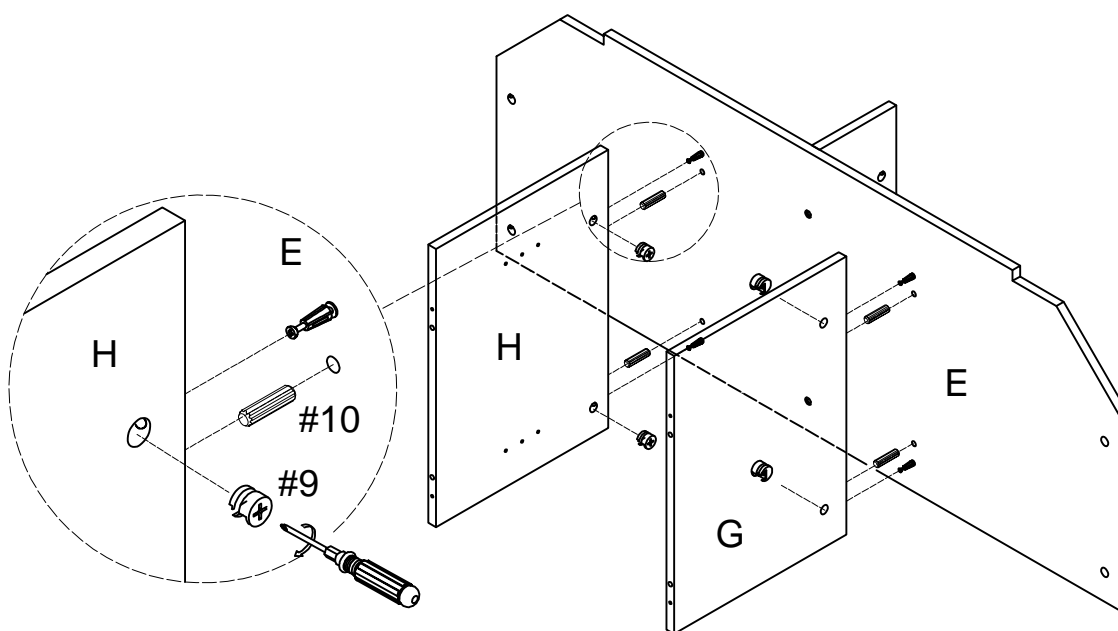
Note: Cam locks must rotate a full 180°. See pictured insert.



#9		x 4
#10		x 4

Step 8. Attach left panel (part B) and right panel (part C) to middle panel (part E) using cam locks (part #9), wood dowels (part #10) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

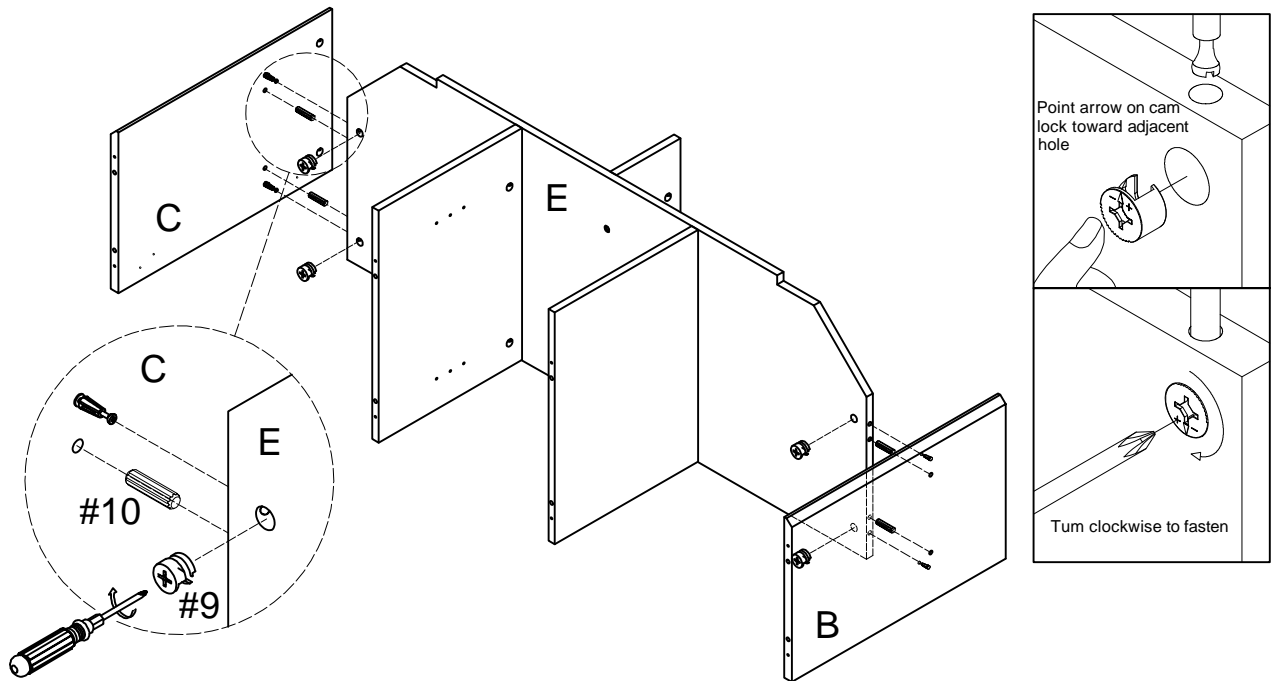


#9  x 4

#10  x 4

Step 9. Attach top panel (part A) to assembled unit (parts B, C & F) using cam locks (part #9), wood dowels (part #10) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

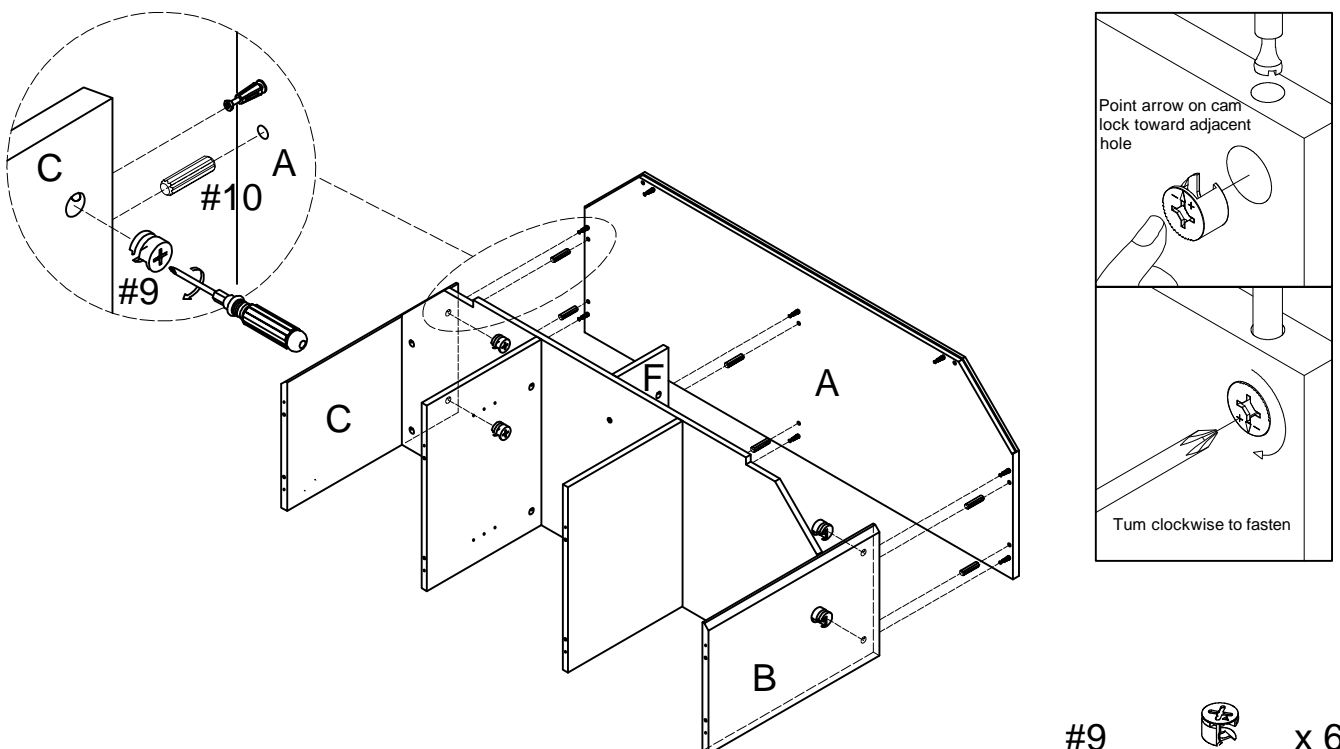


#9  x 6


#10  x 6

Step 10. Attach vertical panels (parts I & J) to top panel (part A) using cam locks (part #9), wood dowels (part #10) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.

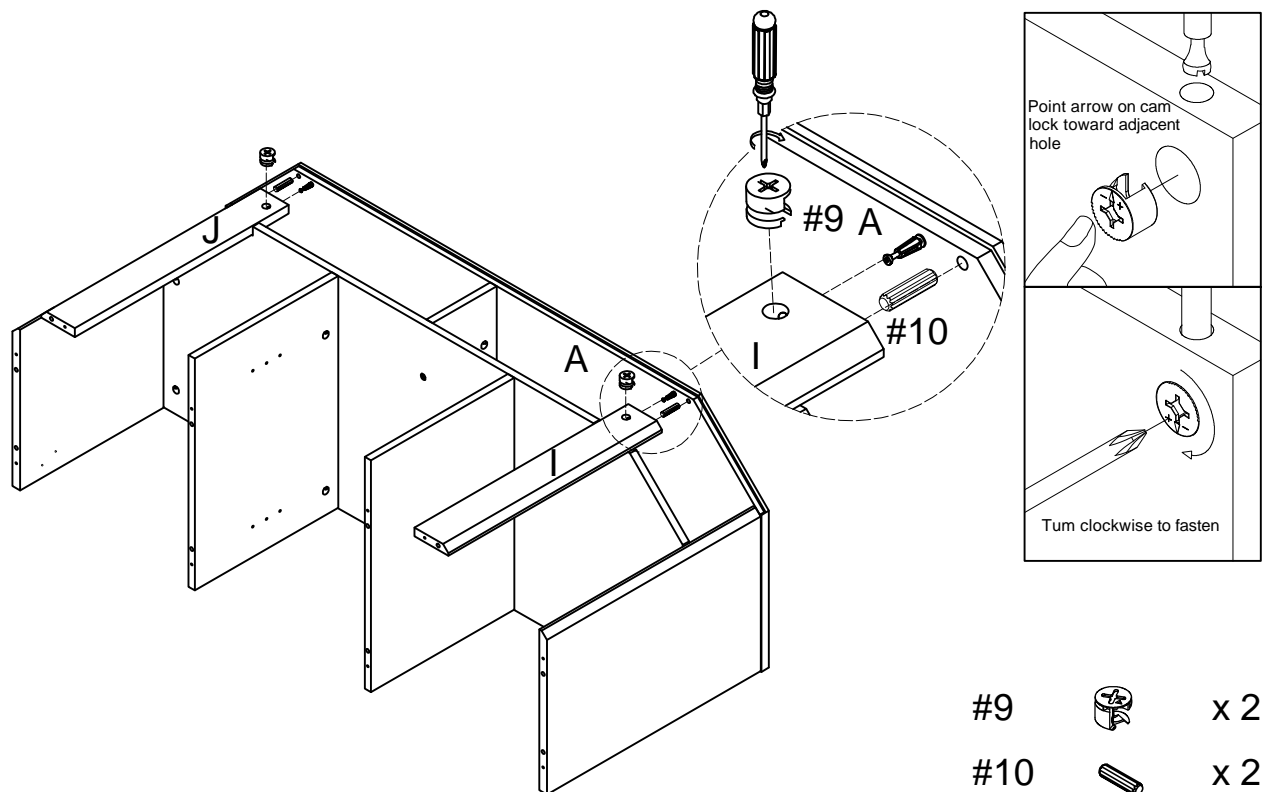

Step 11. Attach bottom panel (part D) to assembled unit (parts B, C, G, H, I & J) using tapping bolts (part #4), wood dowels (part #10) and allen wrench (part #18).

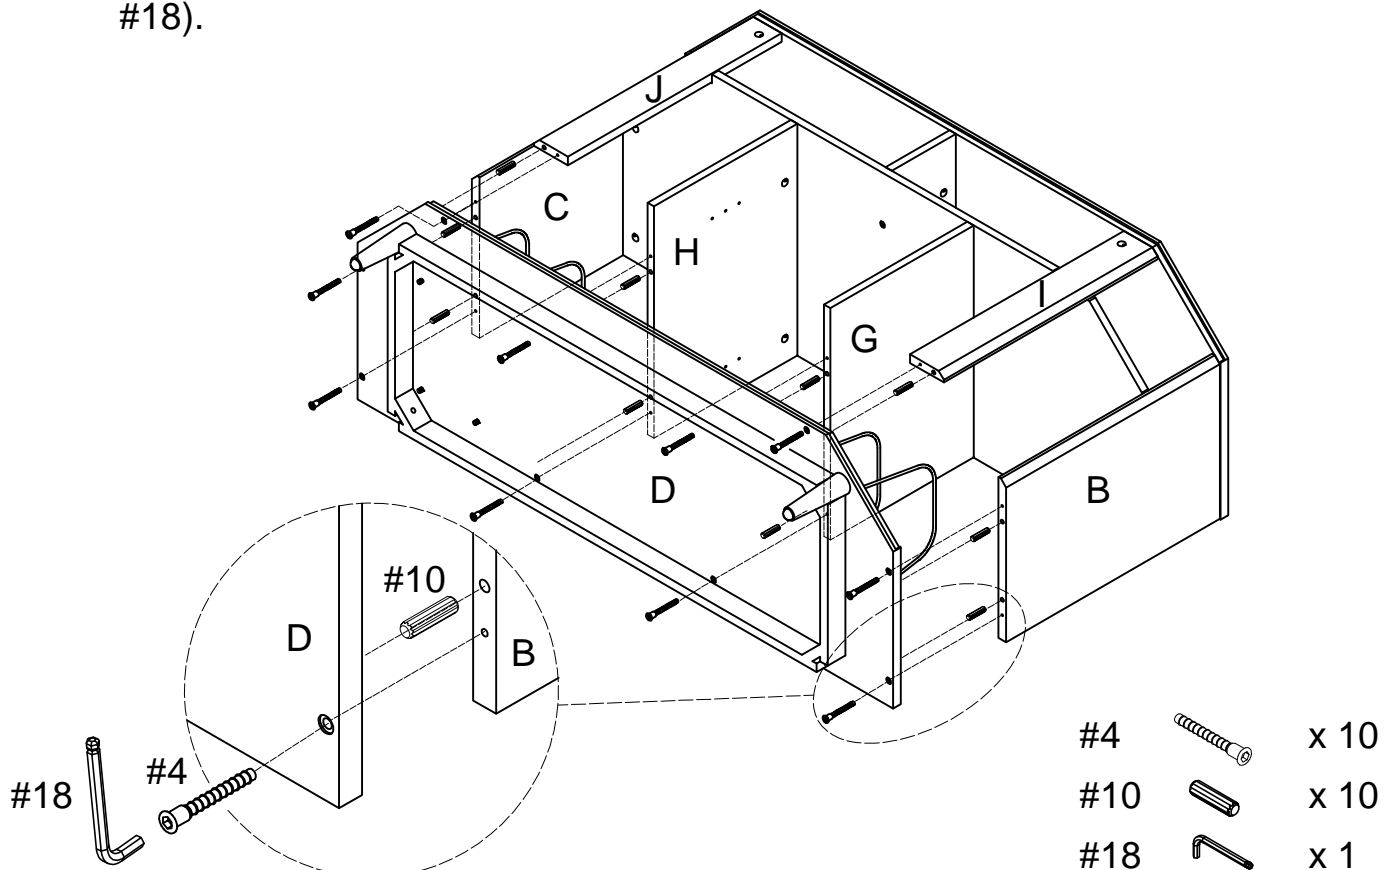


Step 12. Attach back panels (parts N & O) to assembled unit (parts A, B, C, D, E, G, H, I & J) using round head screws (part #15) and phillips head screwdriver.

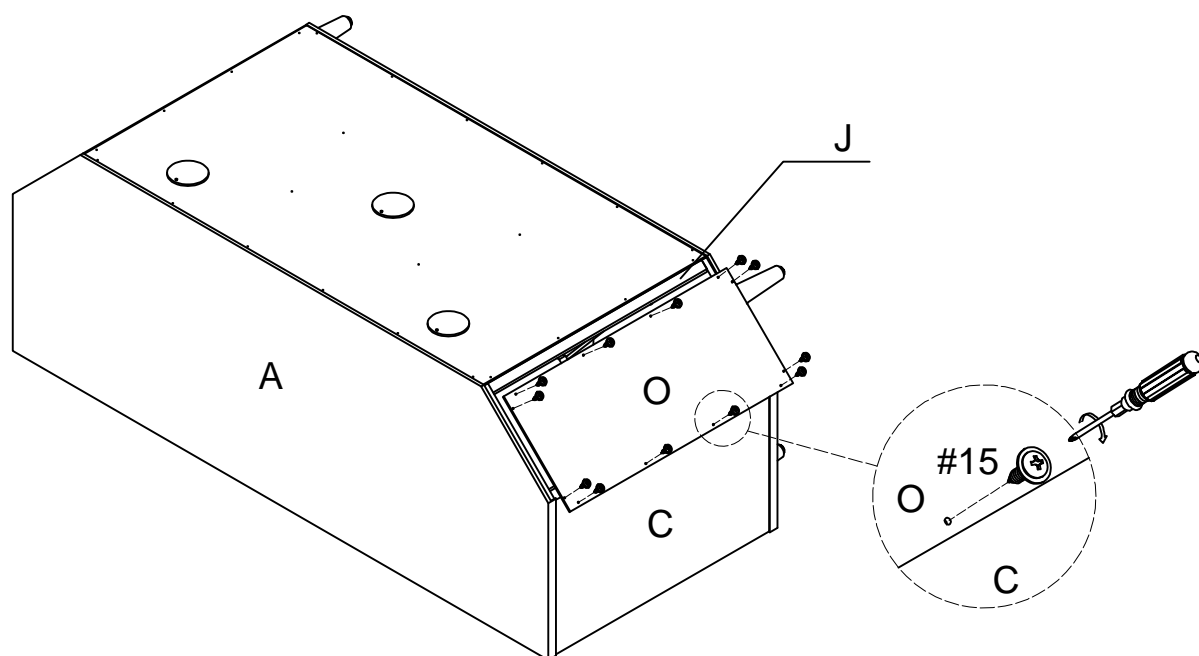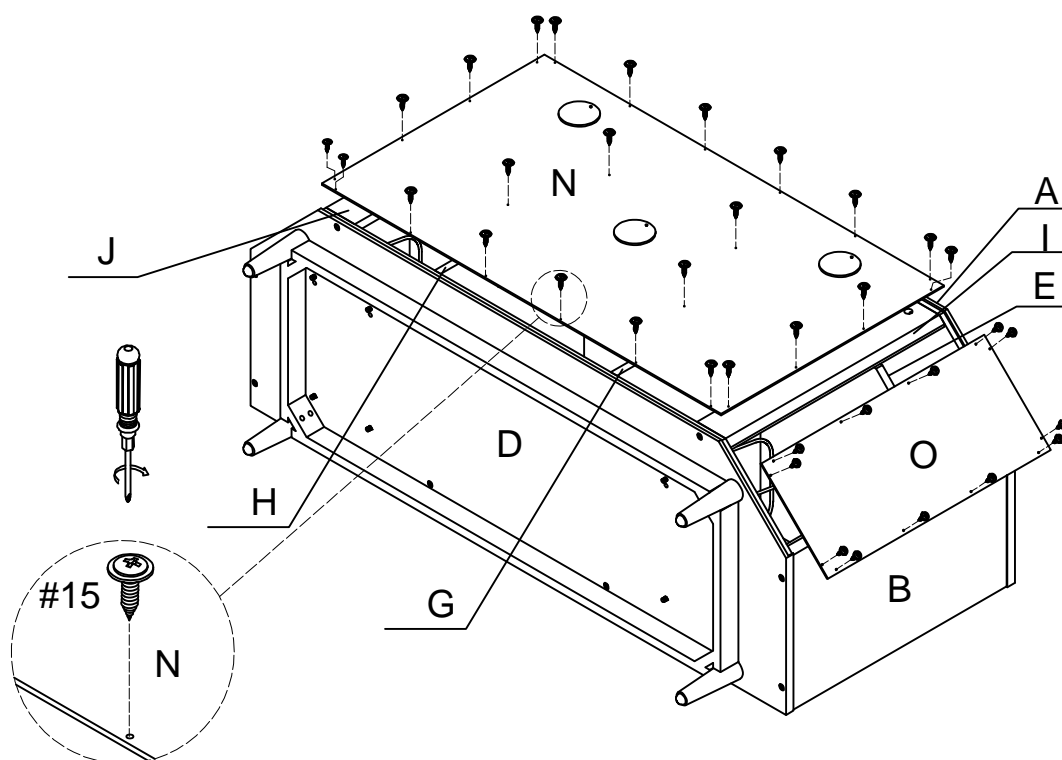


#15  x 48

Step 13. Carefully turn unit upright. Attach doors (parts K & L) to assembled unit (parts B & C) using long screws (part #13) and phillips head screwdriver.

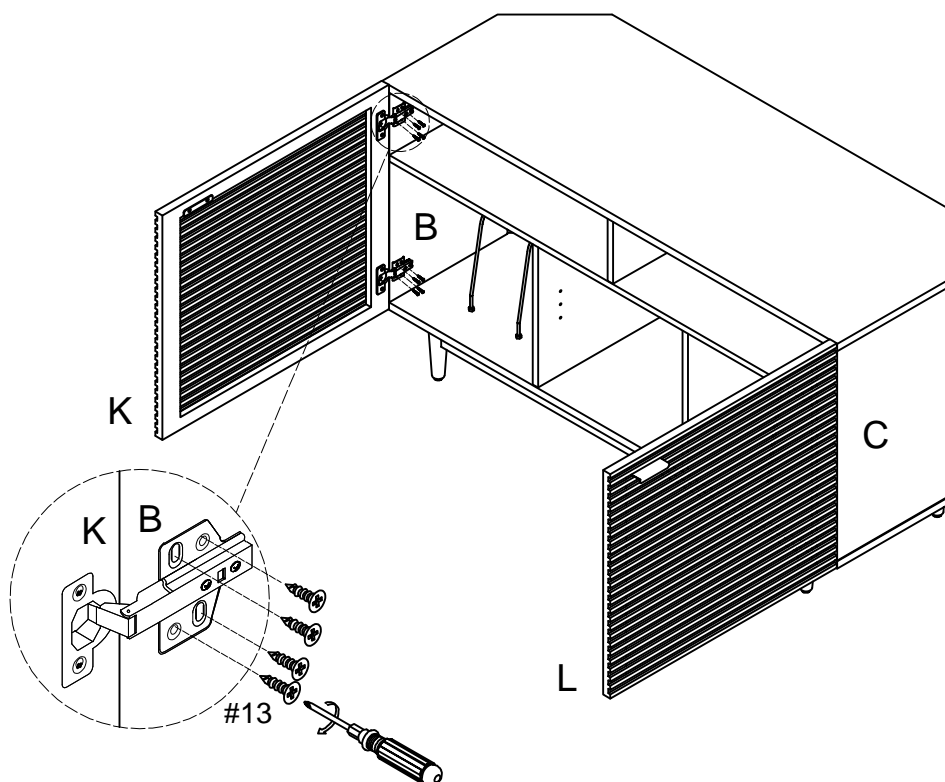

#13  x 16

Step 14. Place shelf holders (part #3) into desired position and slide adjustable shelf panel (part M) into place.


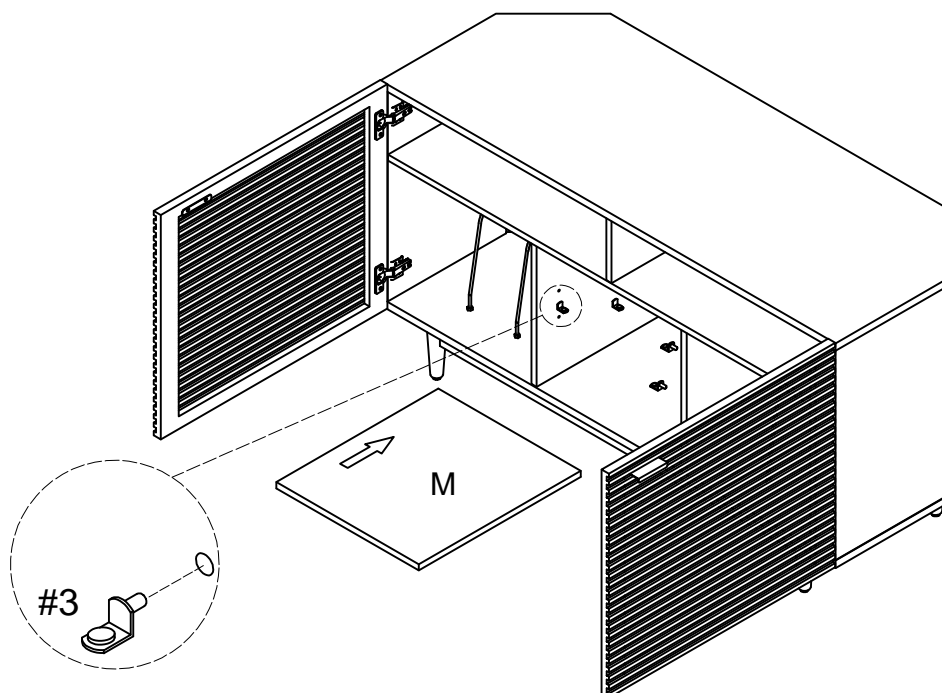


#3  x 4


Step 15. Using cam stickers (part #16) cover all cam locks (part #9).




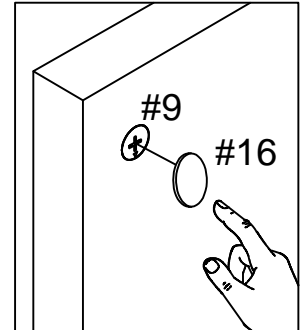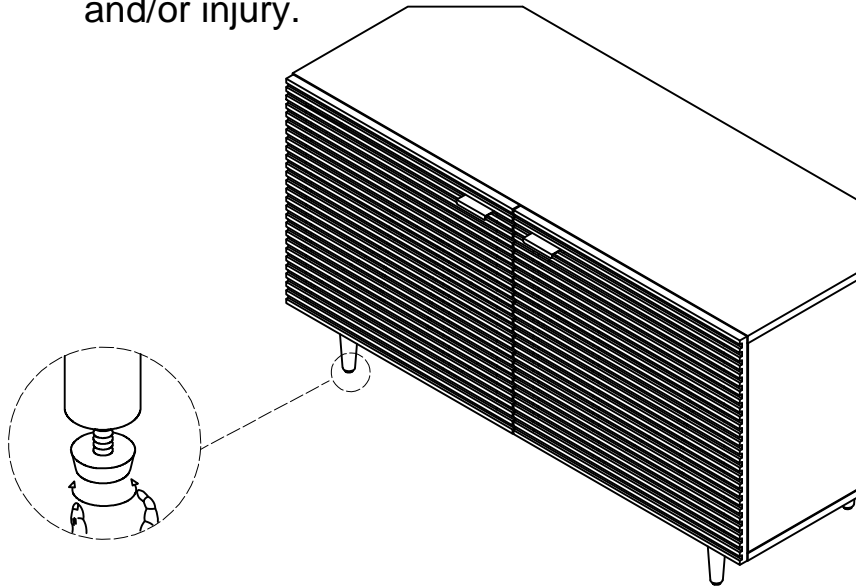


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #20) must be installed to prevent tipping damage and/or injury.

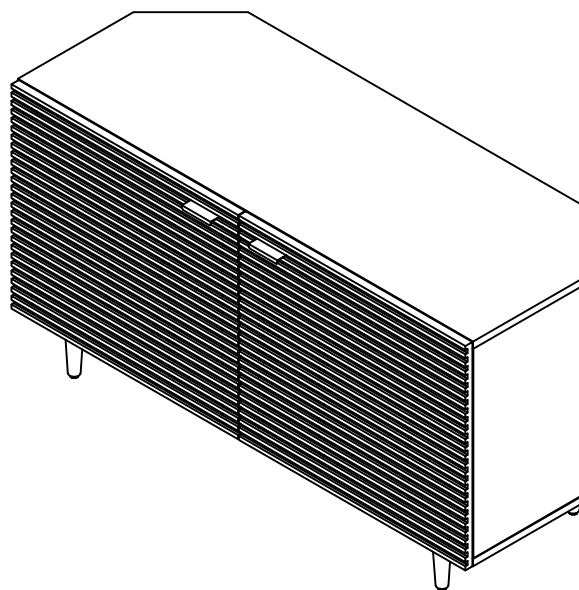
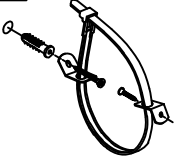
#16  x 14

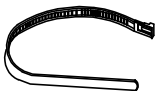


#20	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

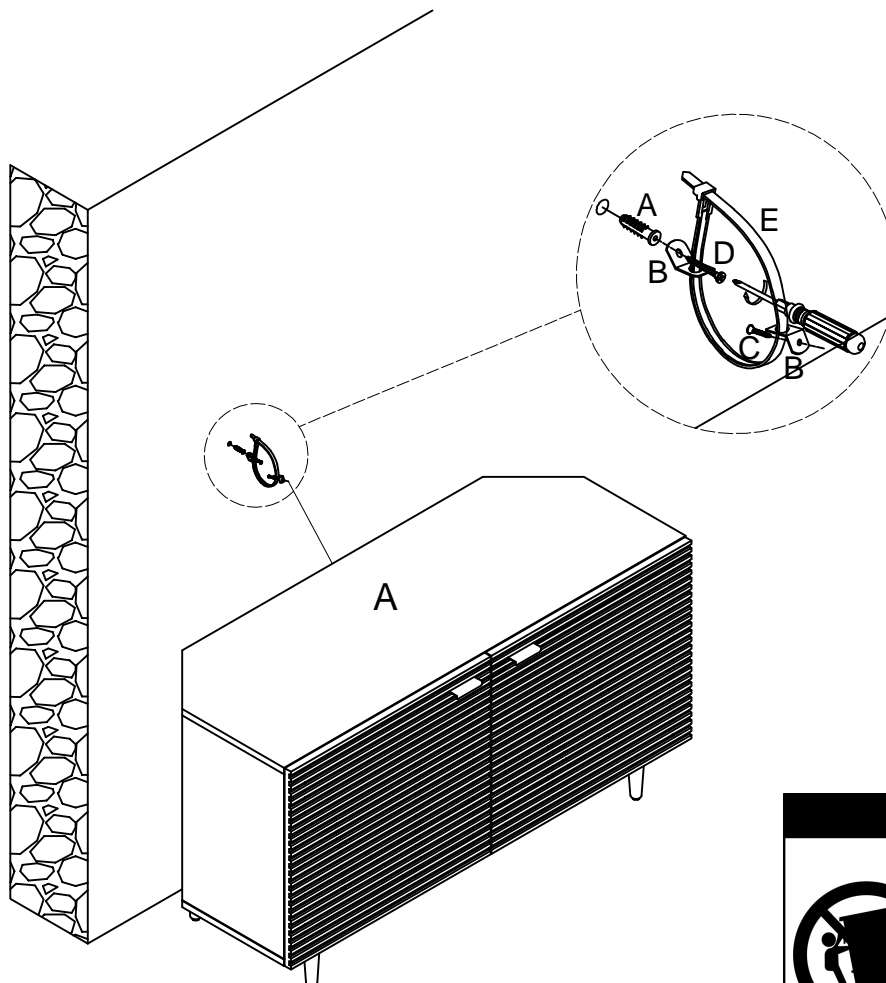

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!