 
 


Assembly Instruction

Item: GMB03

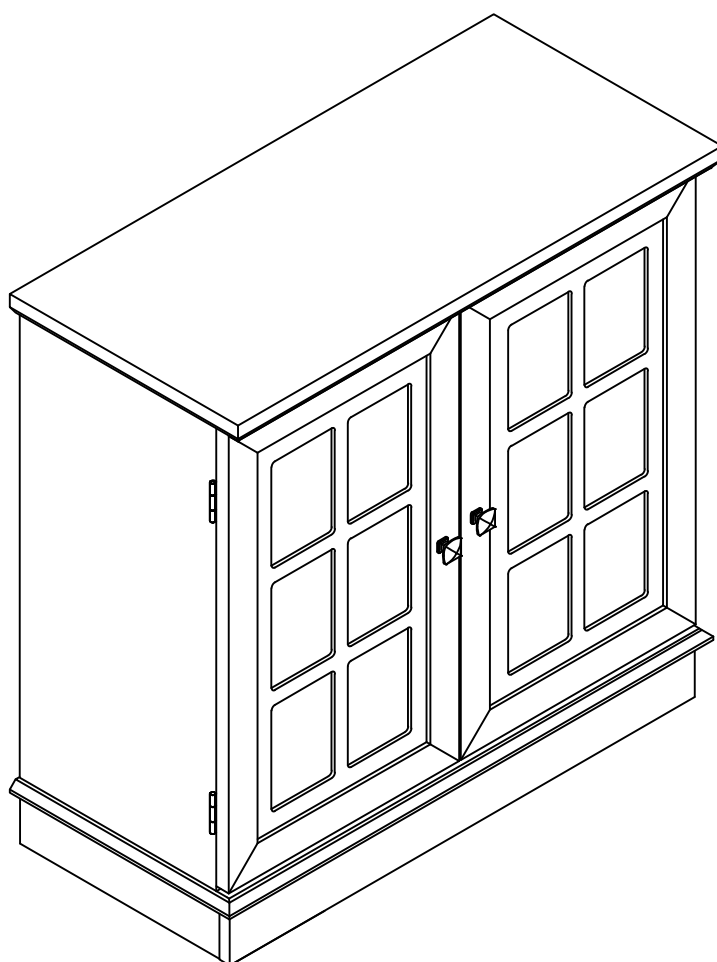 


ASSEMBLY INSTRUCTION

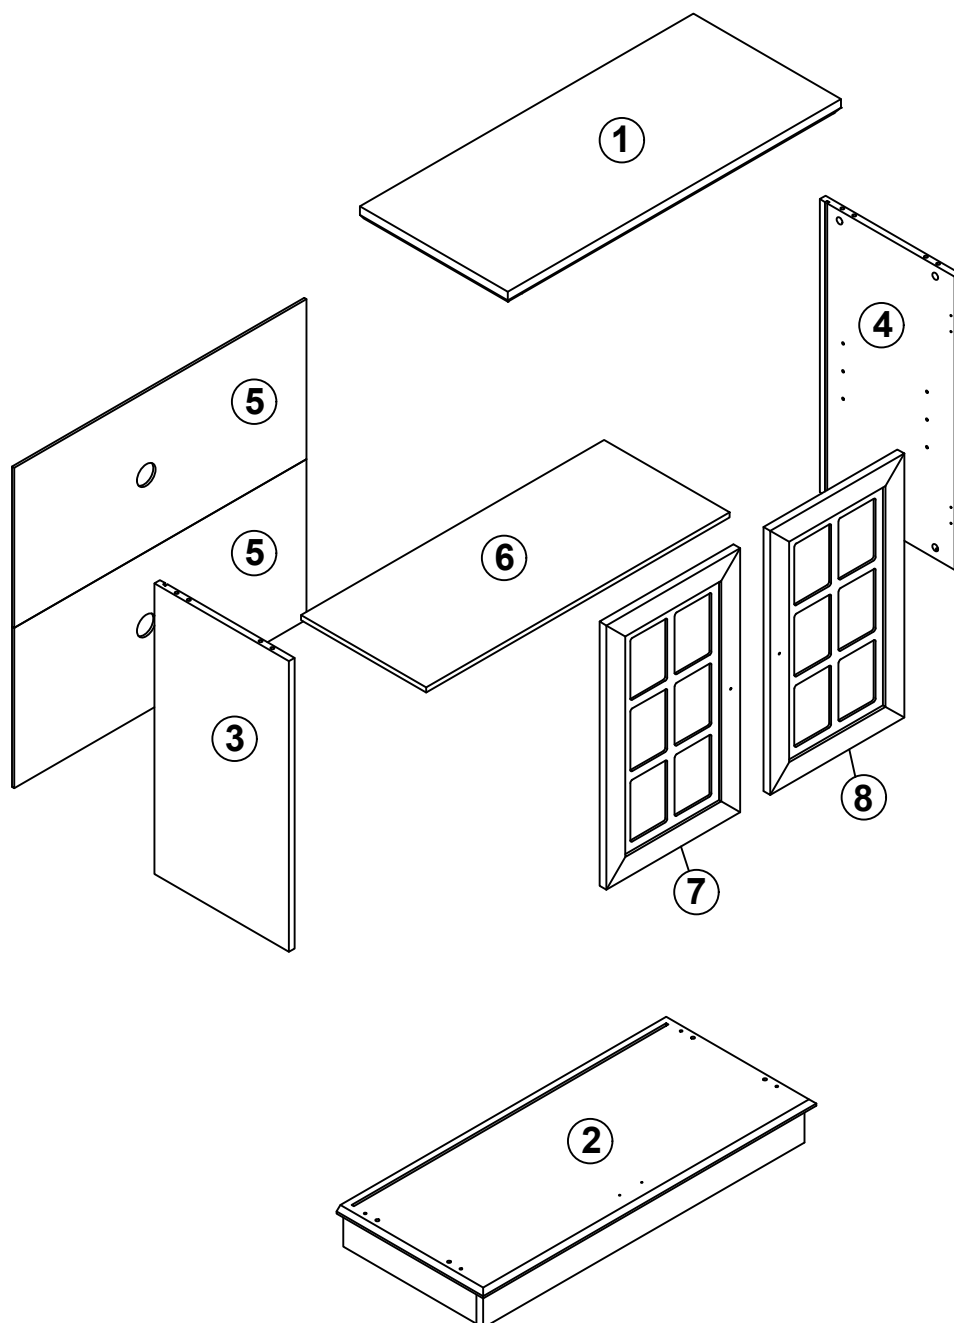

HARDWARE

A x 8+1spare




Ø6 x 32mm

B x 8+1spare



Ø15 x 10mm

 C x 8+1spare



Ø8*30mm

D x 24+2spare



 
Ø3.5*14mm

E x 10+2spare




Ø3*18mm

F x 2

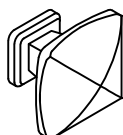


31 *31mm

 G x 2




M4*22mm

 H x 2




71*15*12mm

 I x 6+1spare



J x 4+1spare

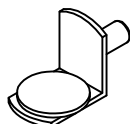 


K x 9




Ø20mm

 L x 2

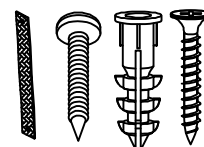


M x 4

 


ASSEMBLY INSTRUCTION

Installation of Cams and Pins

 Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

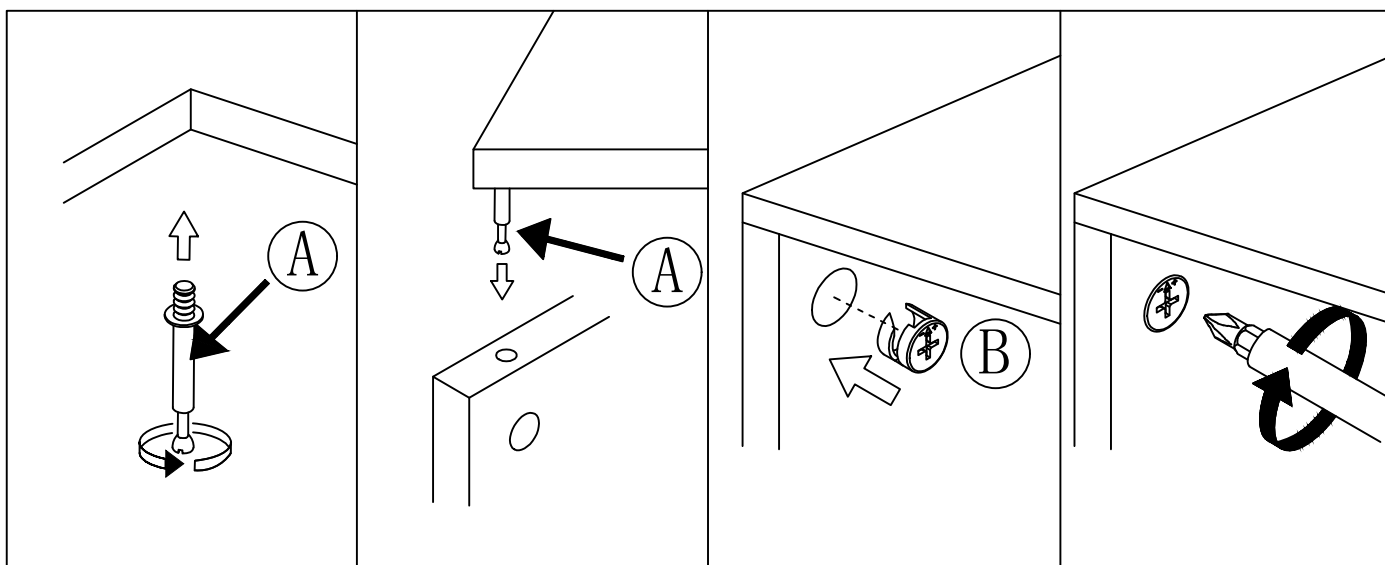


 Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

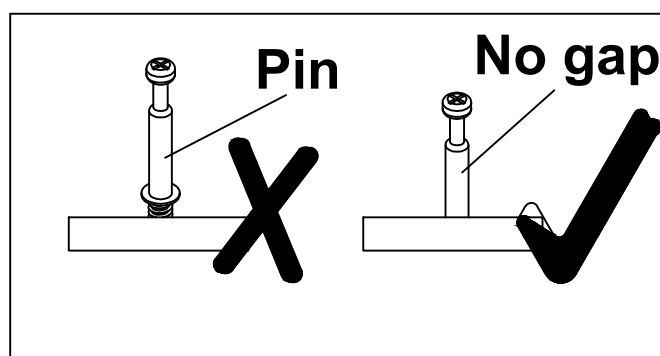





ASSEMBLY INSTRUCTION

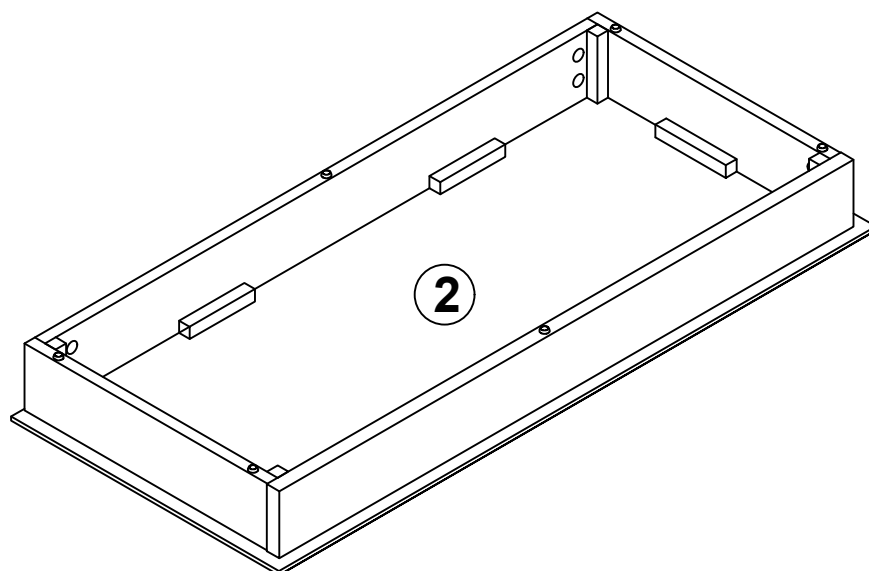  STEP 1





 STEP 2

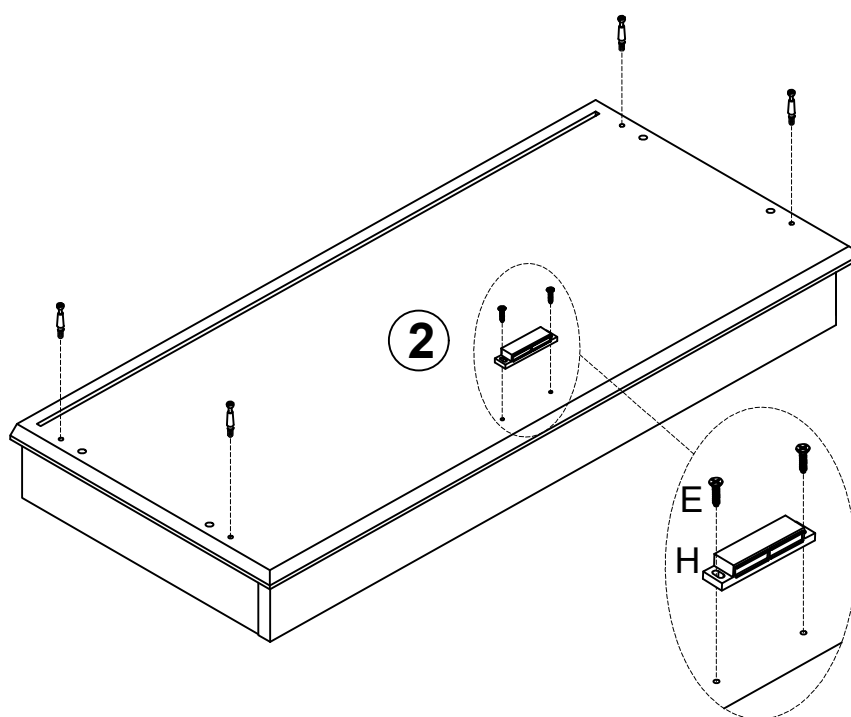
A:		4PCS
E:		2PCS
H:		1PCS



ASSEMBLY INSTRUCTION


STEP 3

B:		4PCS
C:		4PCS

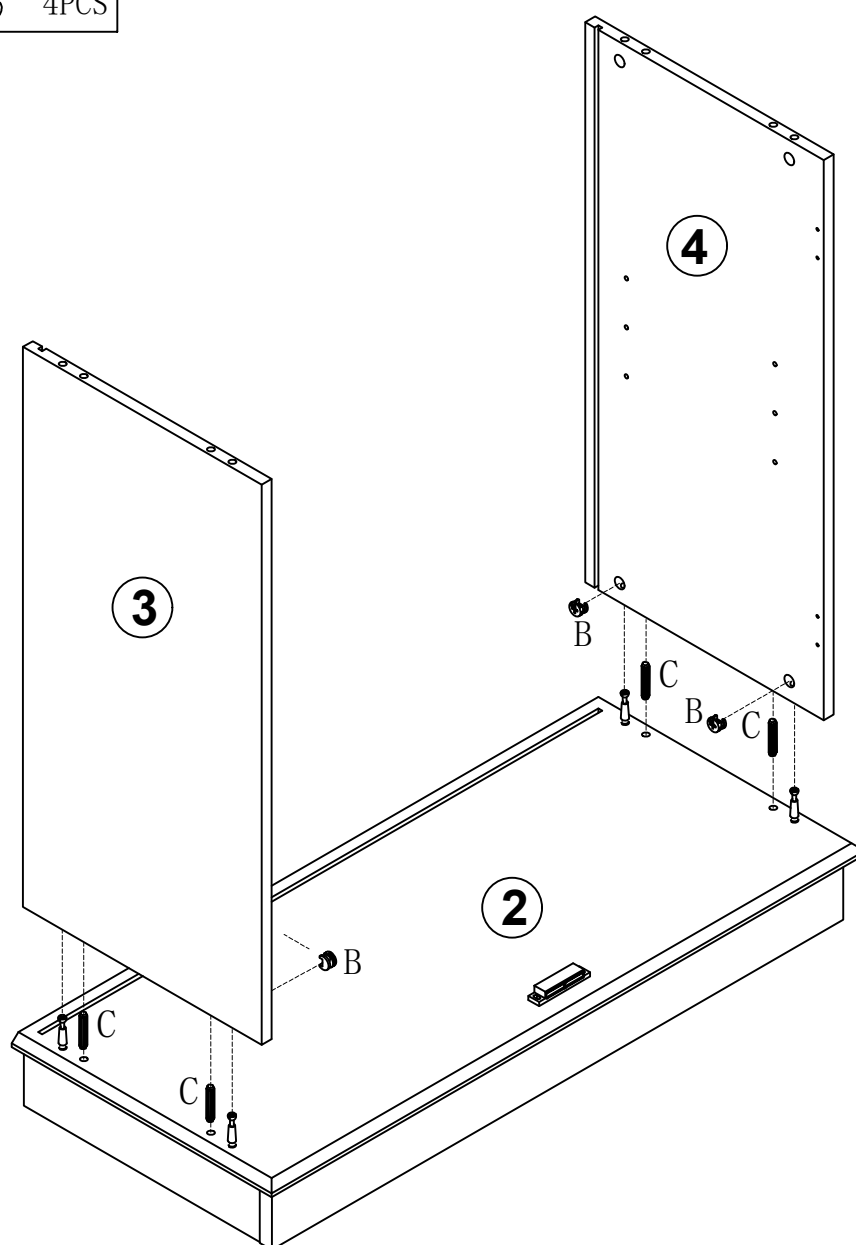 

 
 

ASSEMBLY INSTRUCTION


STEP 4

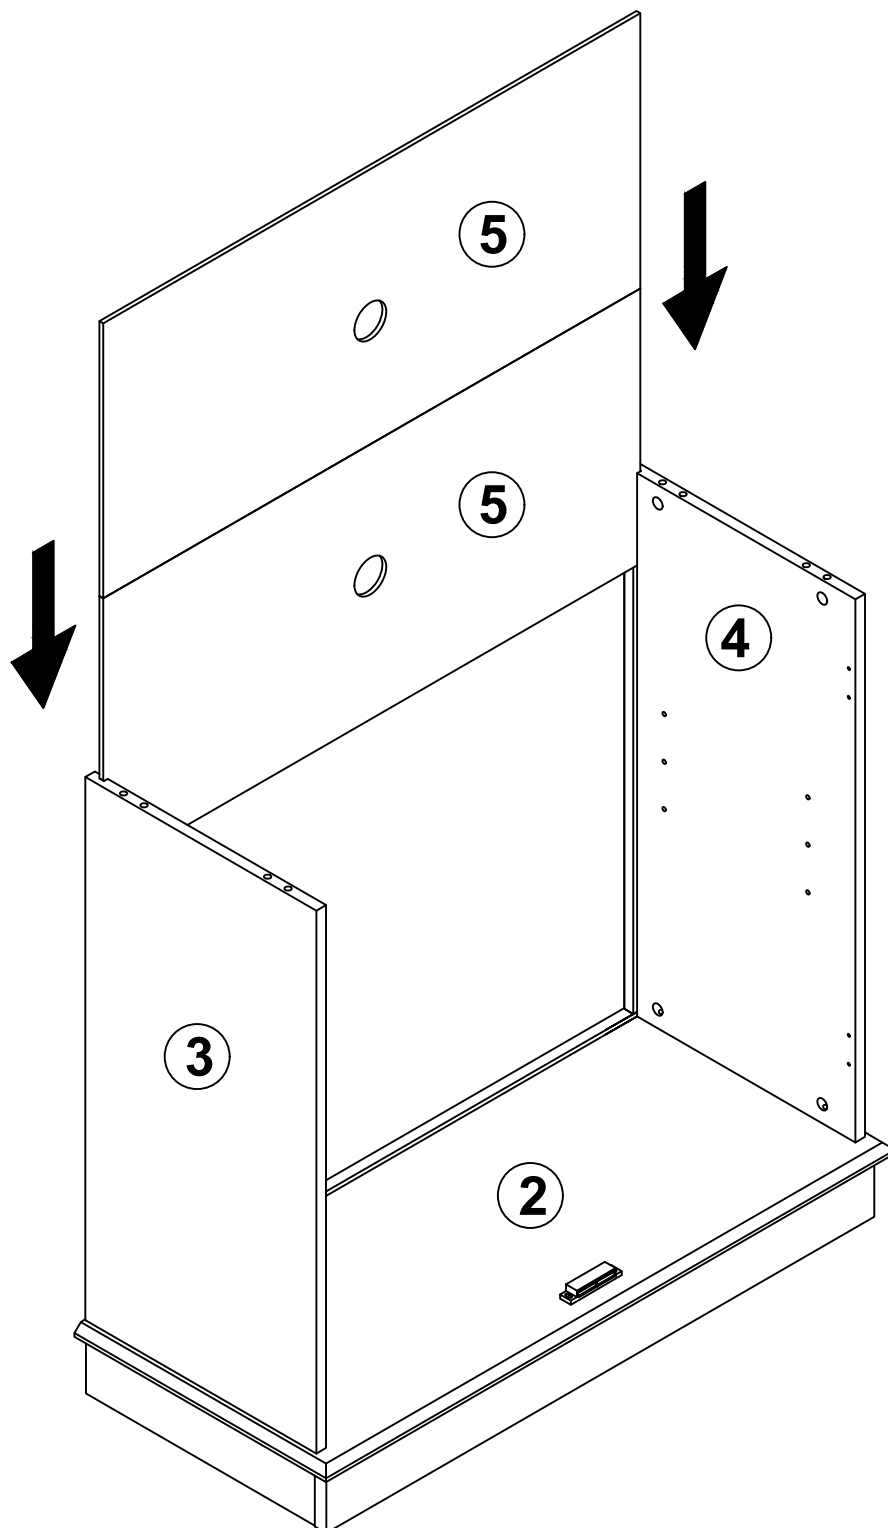

ASSEMBLY INSTRUCTION



 STEP 5

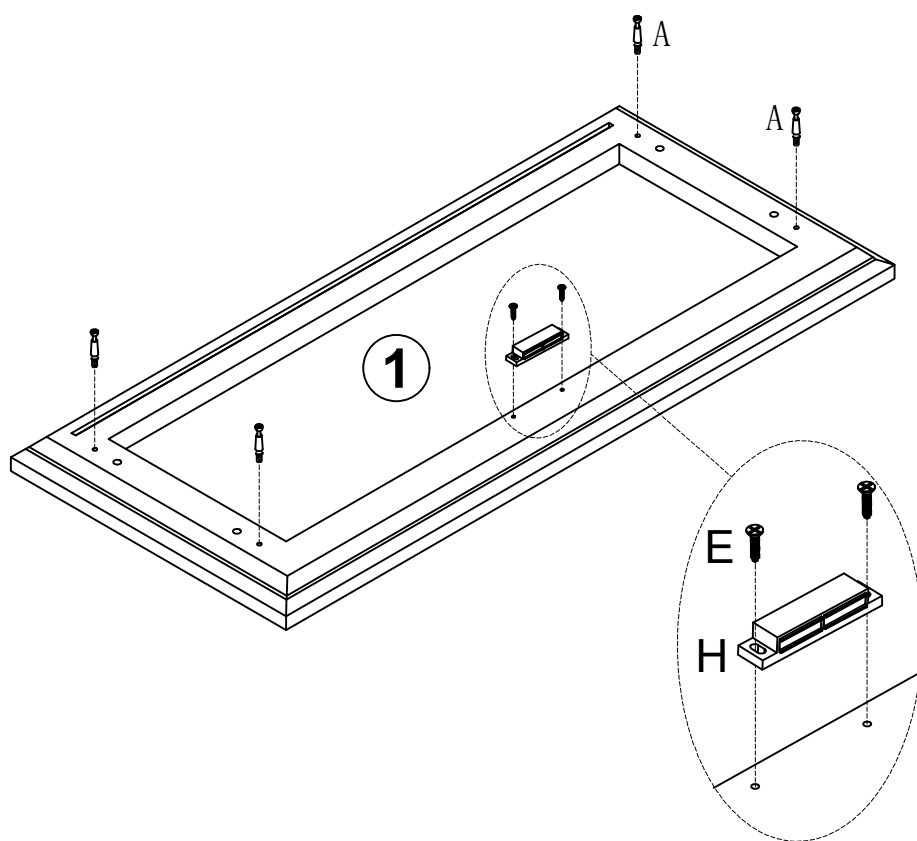
A:		4PCS
E:		2PCS
H:		1PCS



ASSEMBLY INSTRUCTION


STEP 6


B:		4PCS
C:		4PCS

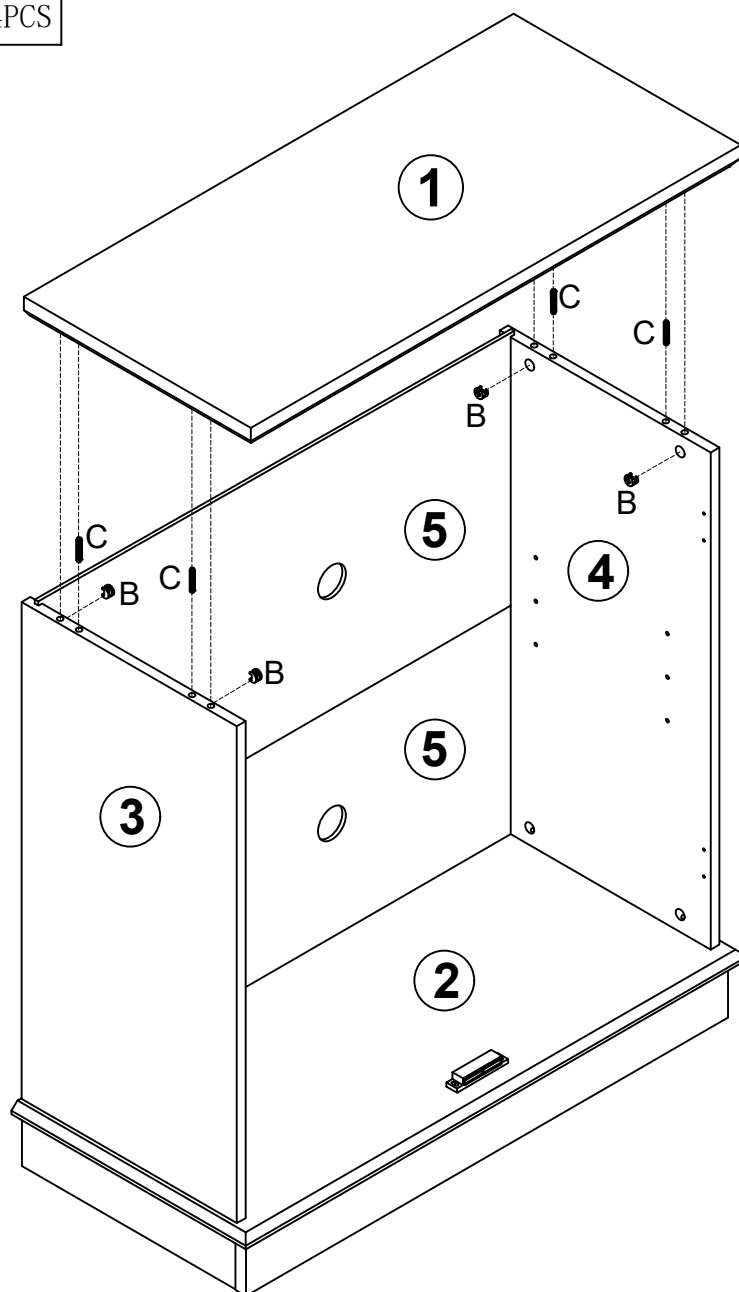 

ASSEMBLY INSTRUCTION



 STEP 7

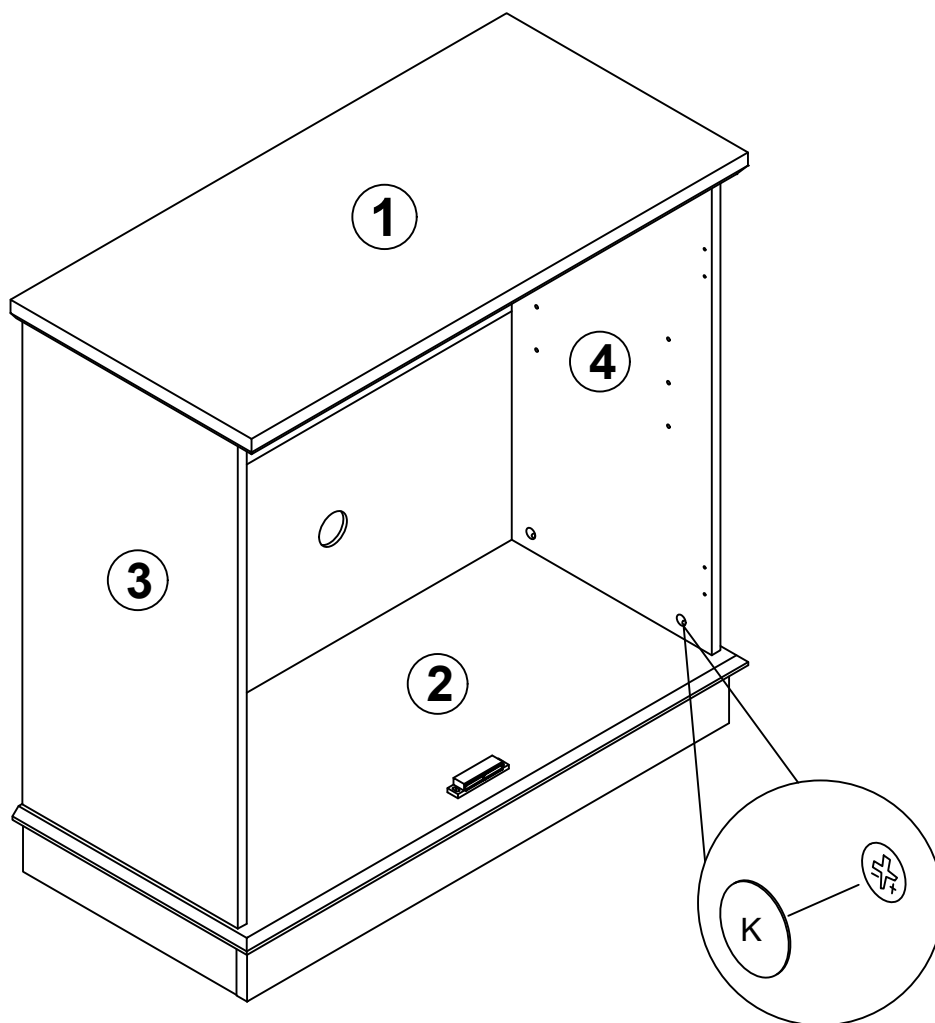
K:  9PCS



ASSEMBLY INSTRUCTION


STEP 8



M:		4PCS
D:		8PCS

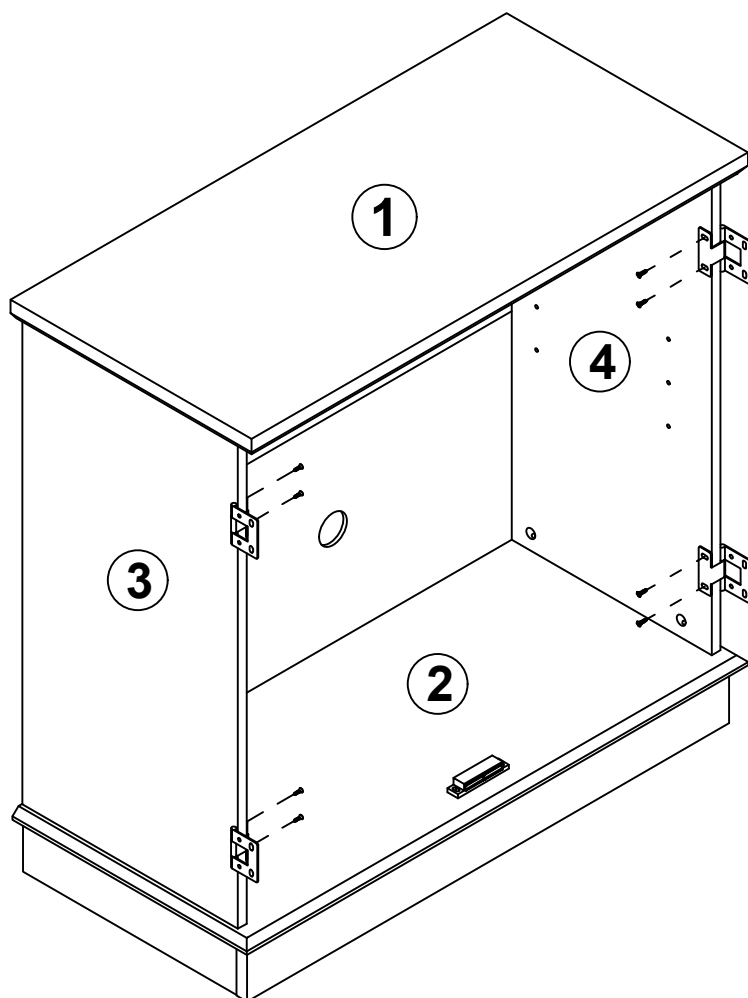 

ASSEMBLY INSTRUCTION



  STEP 9

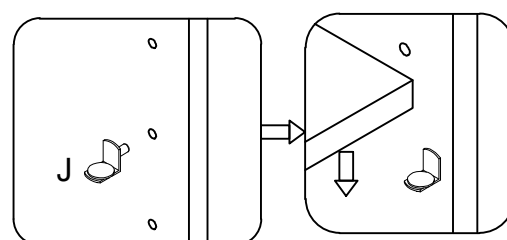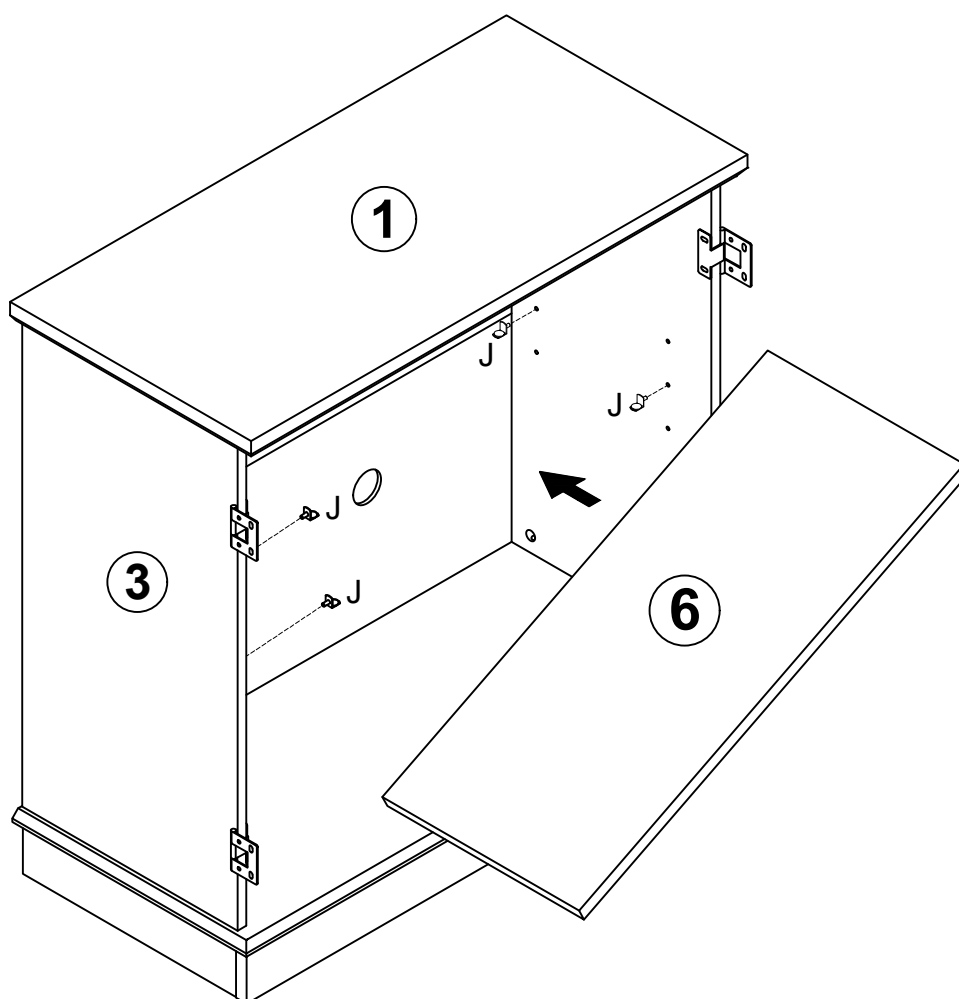
J:  4PCS



ASSEMBLY INSTRUCTION


STEP 10

F:		2PCS
G:		2PCS

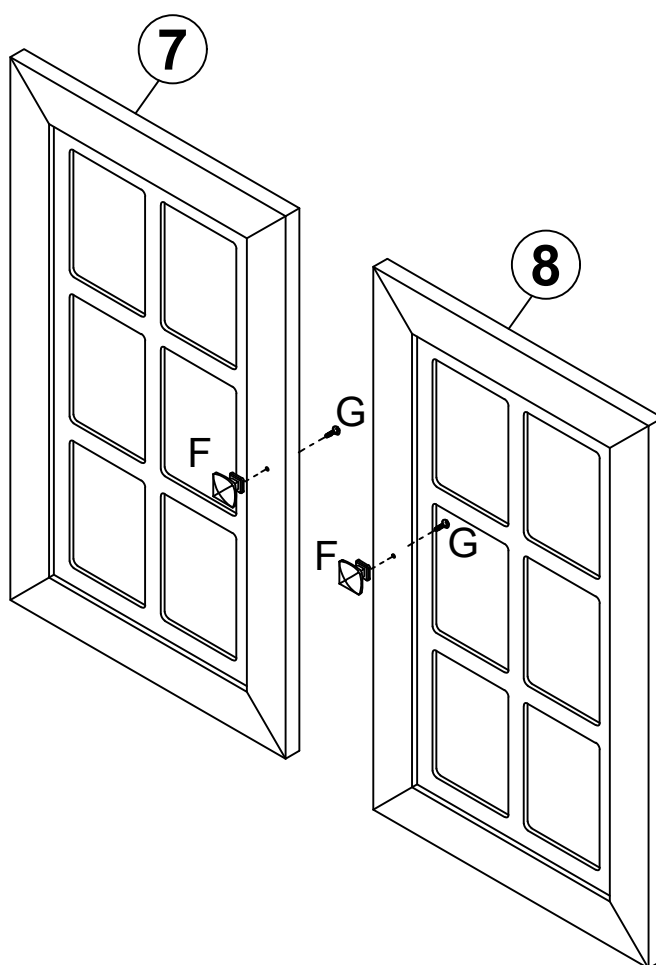 

ASSEMBLY INSTRUCTION

 

STEP 11

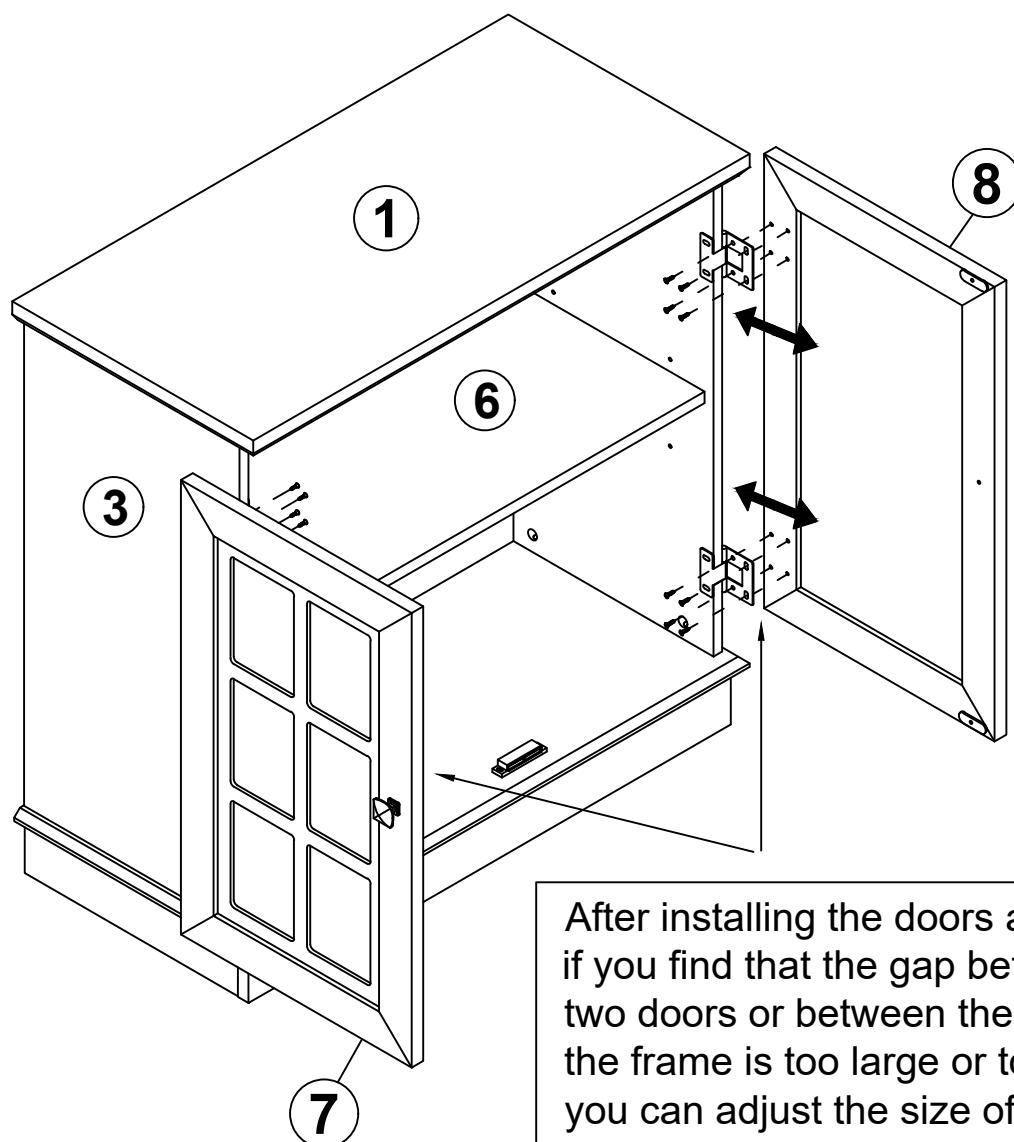
D:  16PCS

After installing the doors and hinges, if you find that the gap between the two doors or between the door and the frame is too large or too small, you can adjust the size of the gap by slightly adjusting the screws of the hinges.

ASSEMBLY INSTRUCTION

 STEP 12



E:		6PCS
I:		6PCS

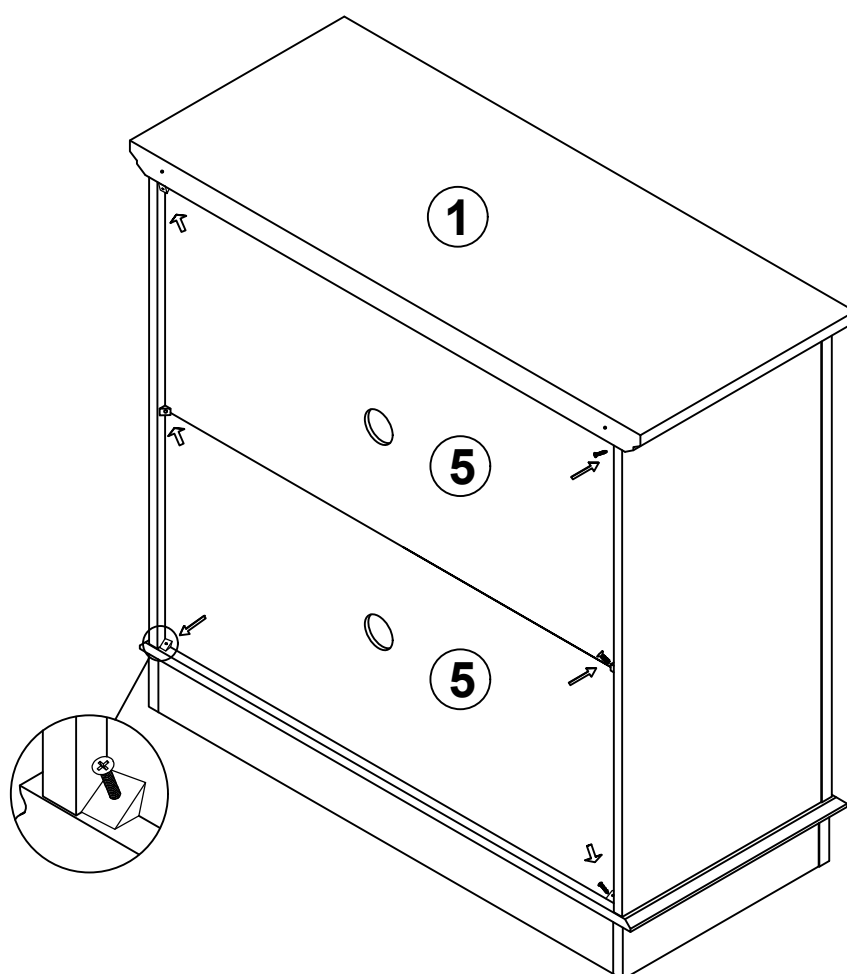 

ASSEMBLY INSTRUCTION

STEP 13

  L x 2

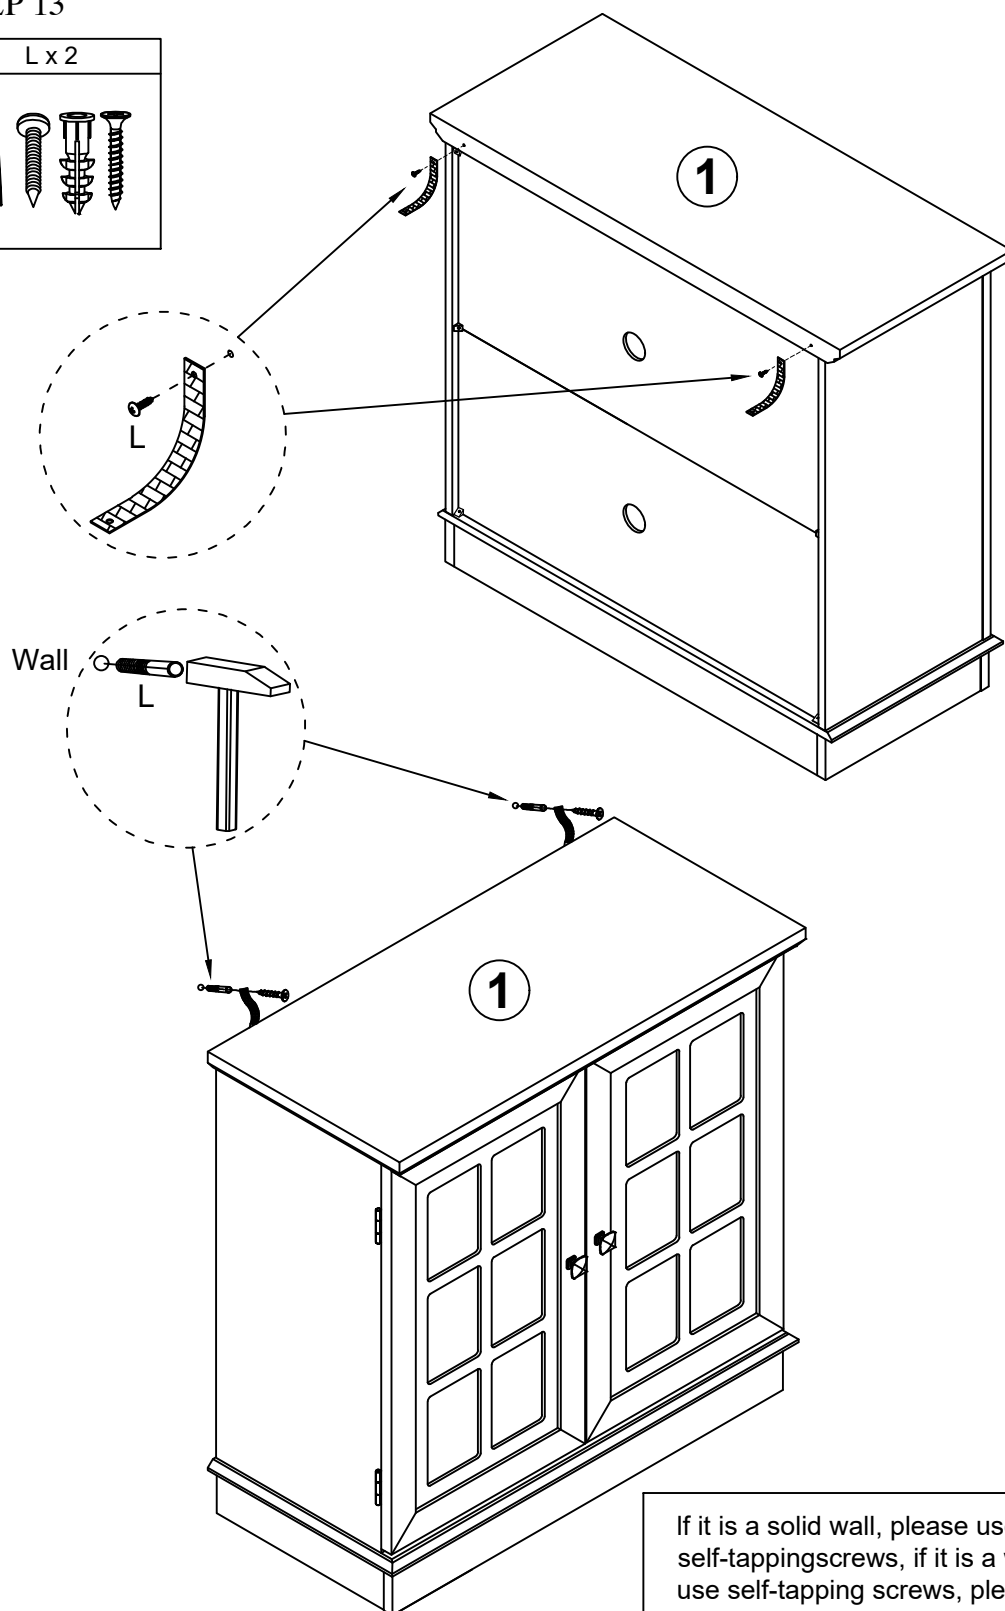

If it is a solid wall, please use expansion and self-tappingscrews, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws