 


TV STAND

USER MANUAL

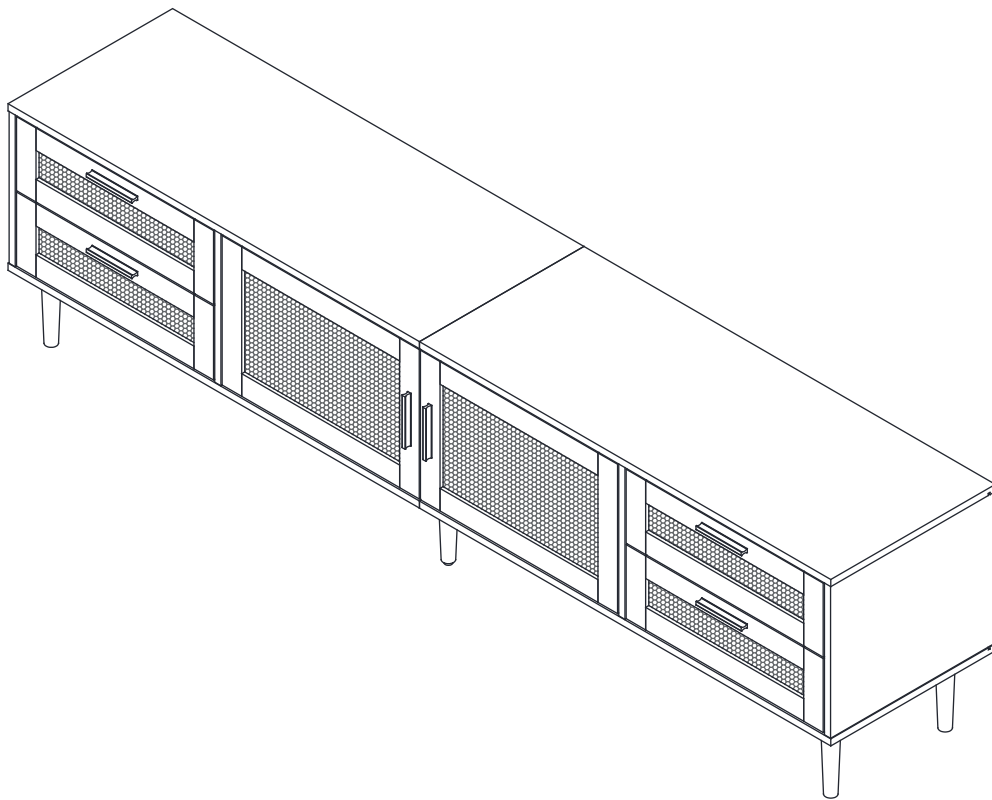

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

**If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.**







Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

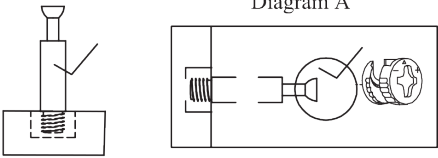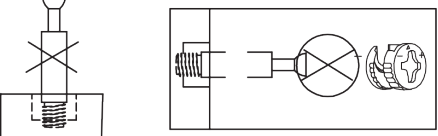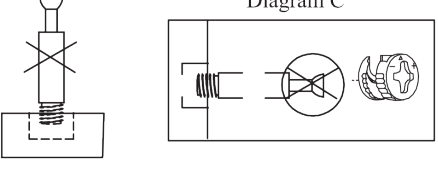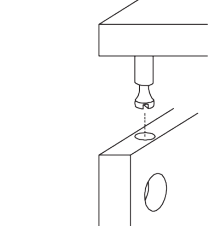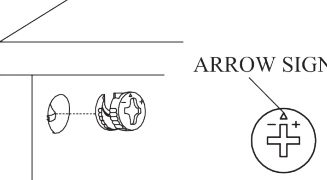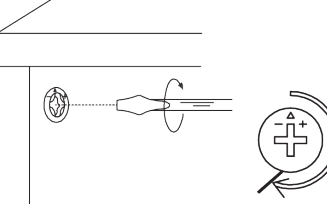      	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
 Connect the panels together.	
 ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.	
 To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>	

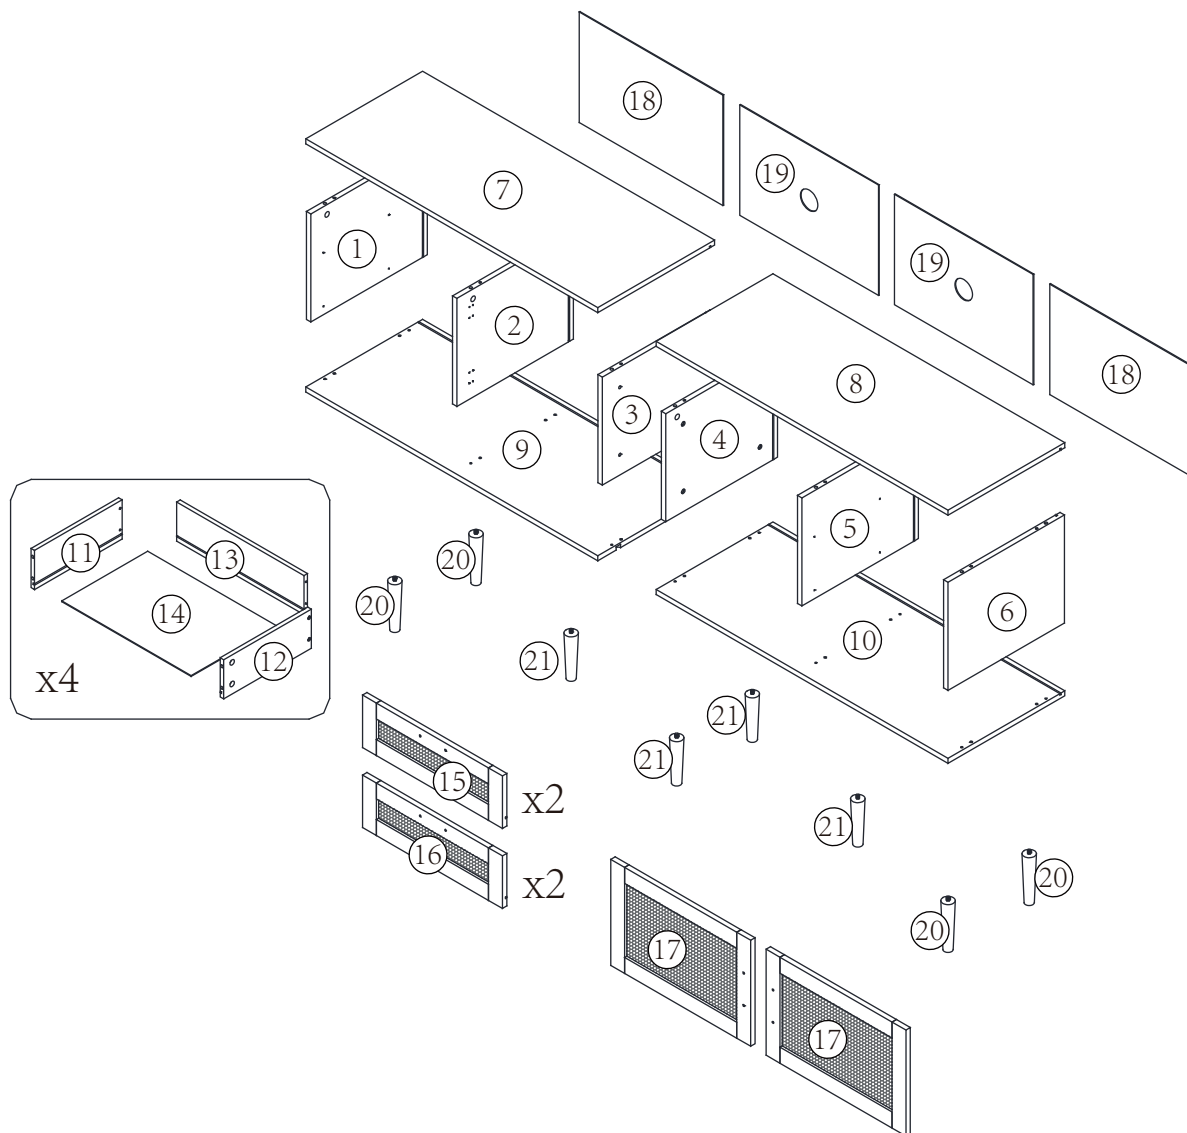 

Ax28



Bx28



Cx24



M6x30

Dx12



M4x40

Ex16




M4x30

Fx32



M3x12

 Gx34



M4x12

Hx16



M3x14

Ix6




Jx4



M6x18

 Kx2



M4x35

Lx24




M4x14

Mx4



 Nx8




Ox12



M4x18

 Px2



Qx2



Rx4



Sx8



Tx4



Ux2



CRx4




300mm

CLx4




300mm

 DLx4





300mm

 DRx4







300mm



 
 
STEP 1

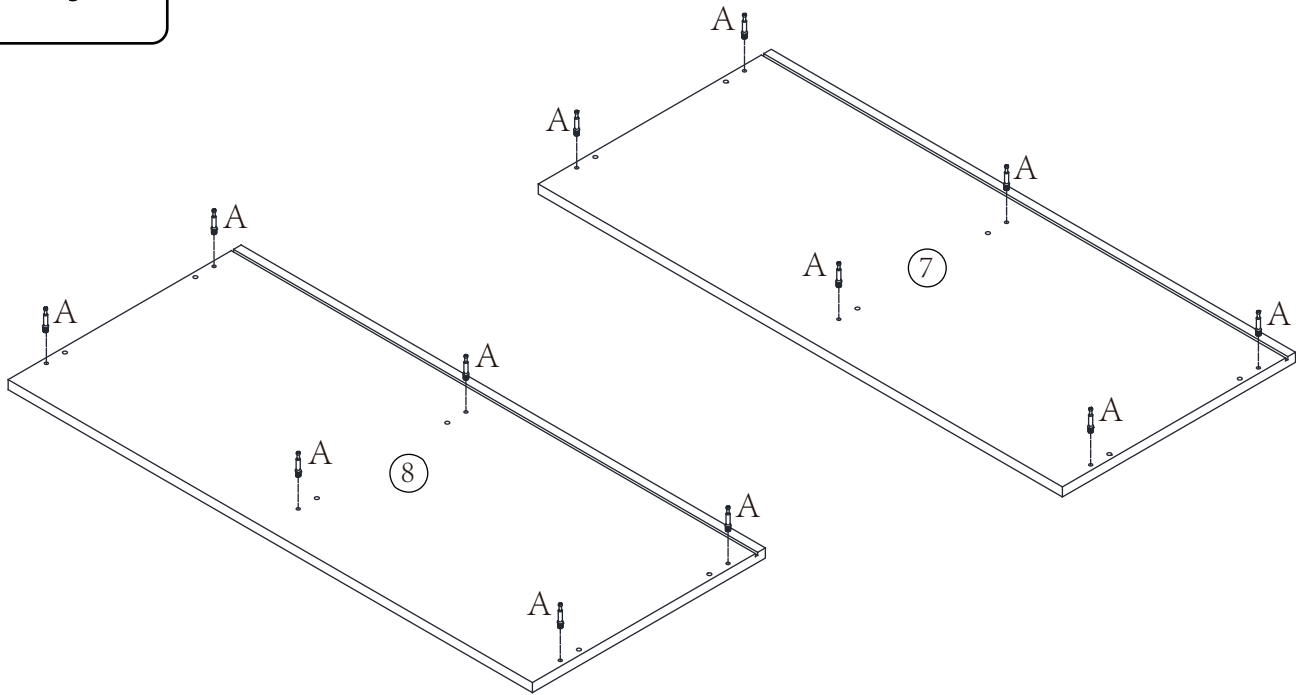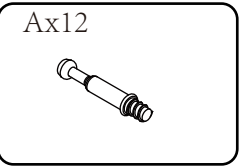

  
 
 
STEP 2

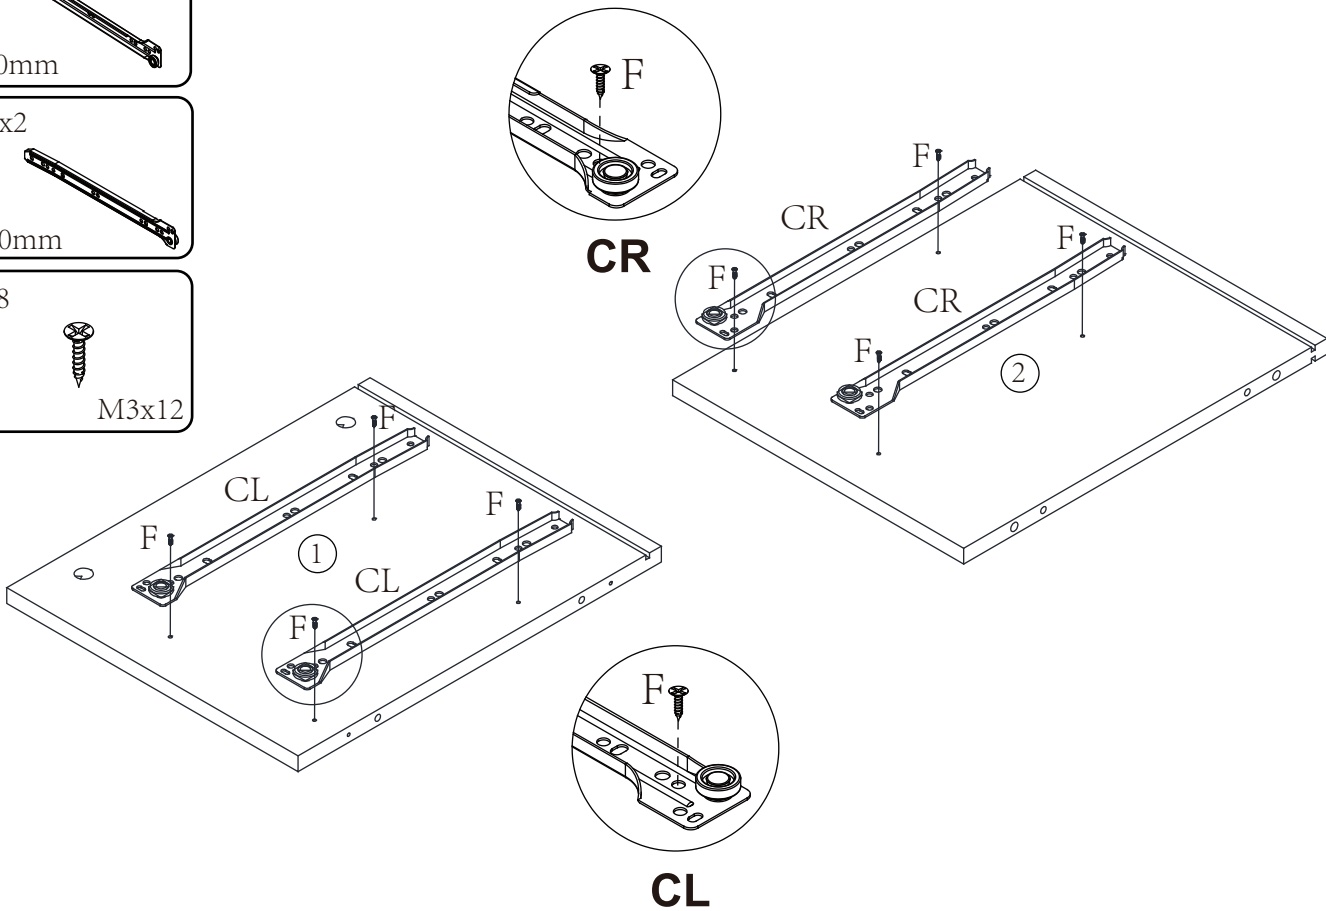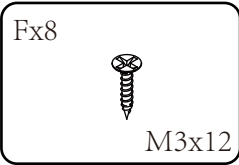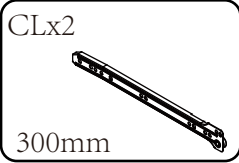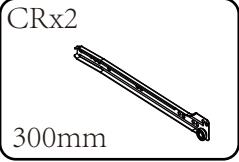

    STEP 3

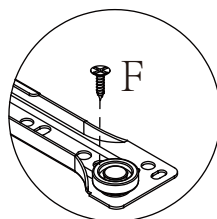
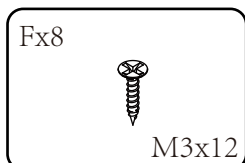
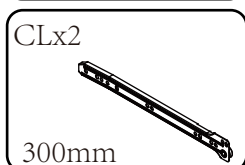
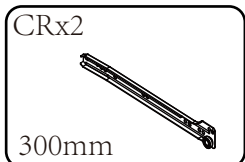


CR

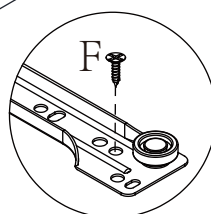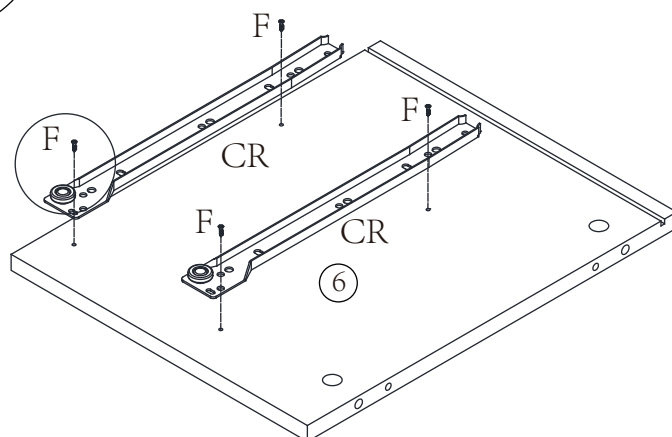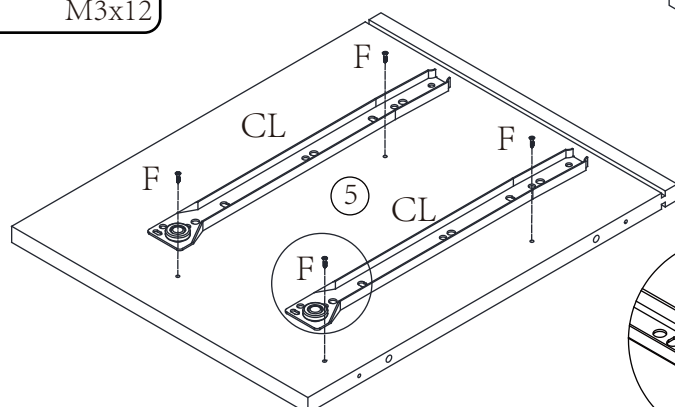   


CL

  
 
 
STEP 4

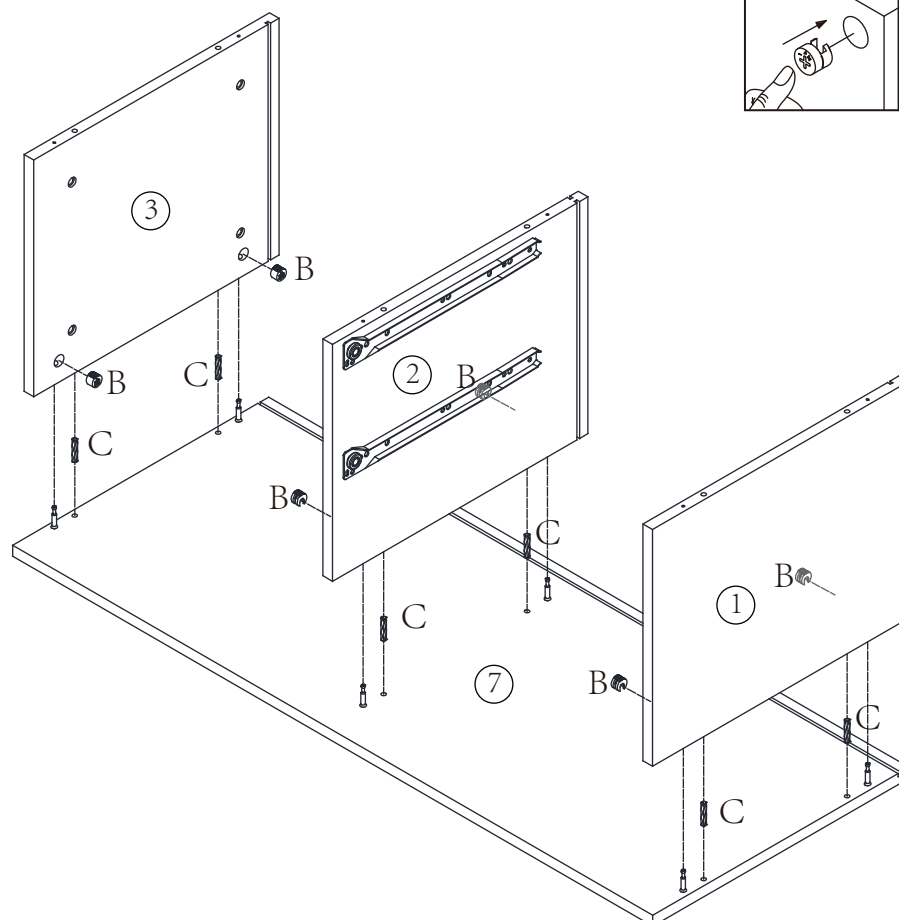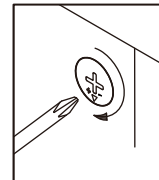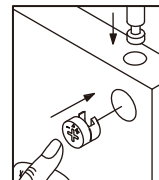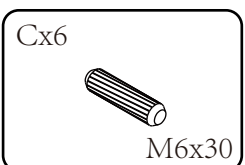

 STEP 5

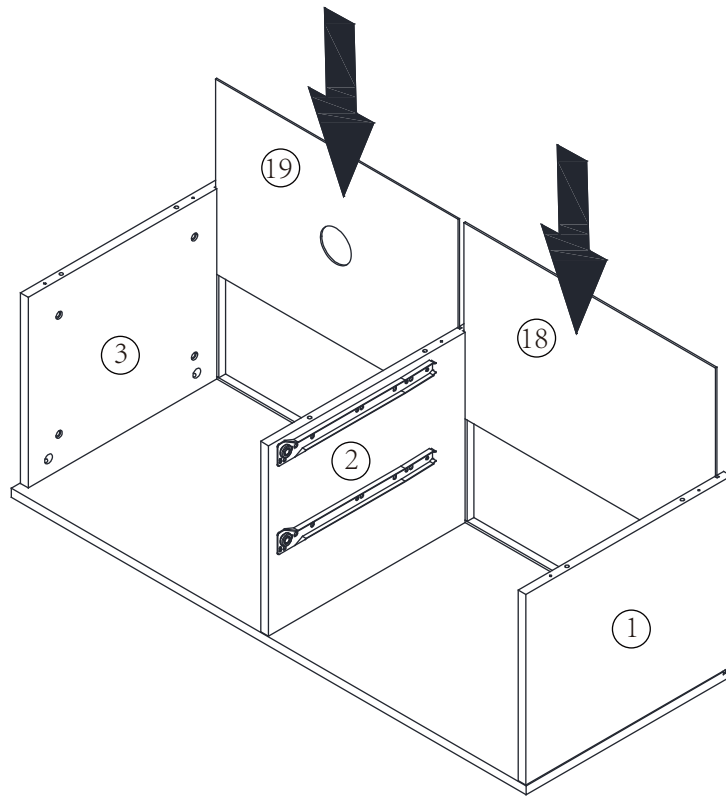

   STEP 6

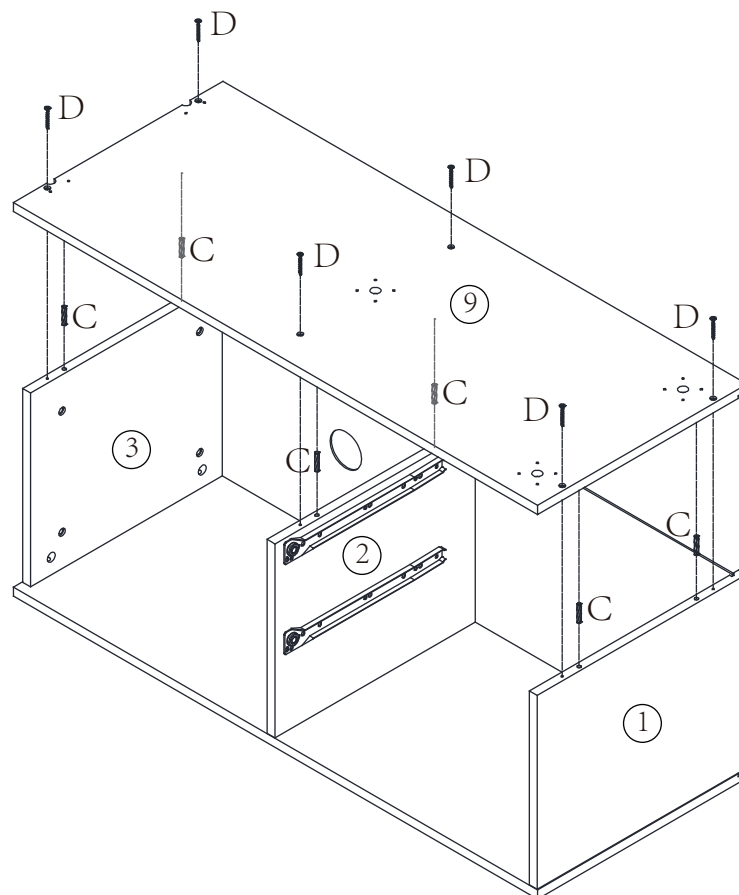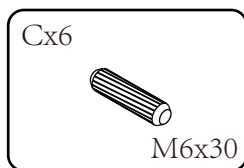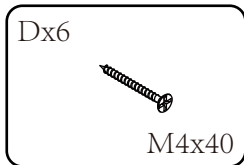

STEP 7




Bx6




Cx6



   M6x30

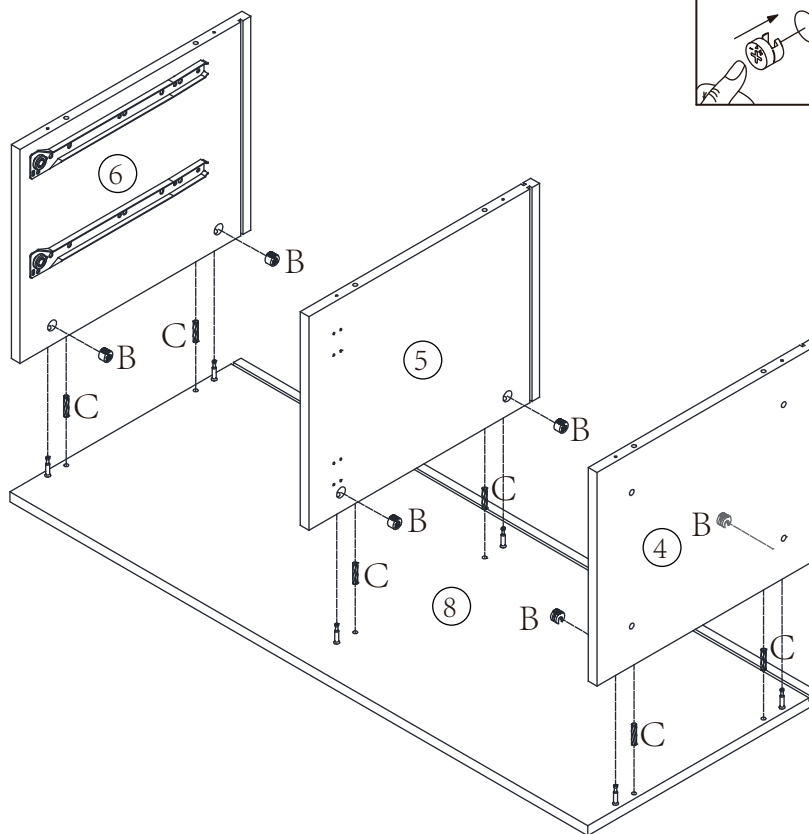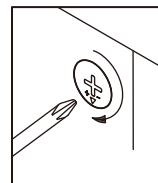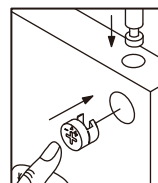

 STEP 8

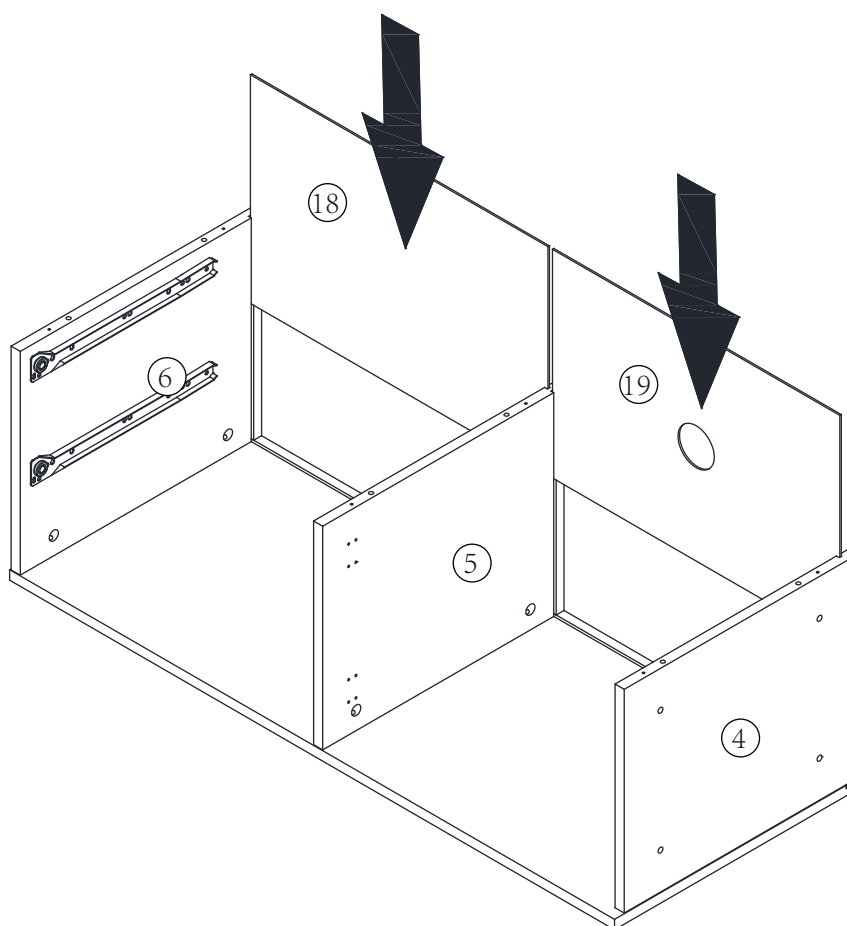

STEP 9

Dx6




M4x40

Cx6




 M6x30

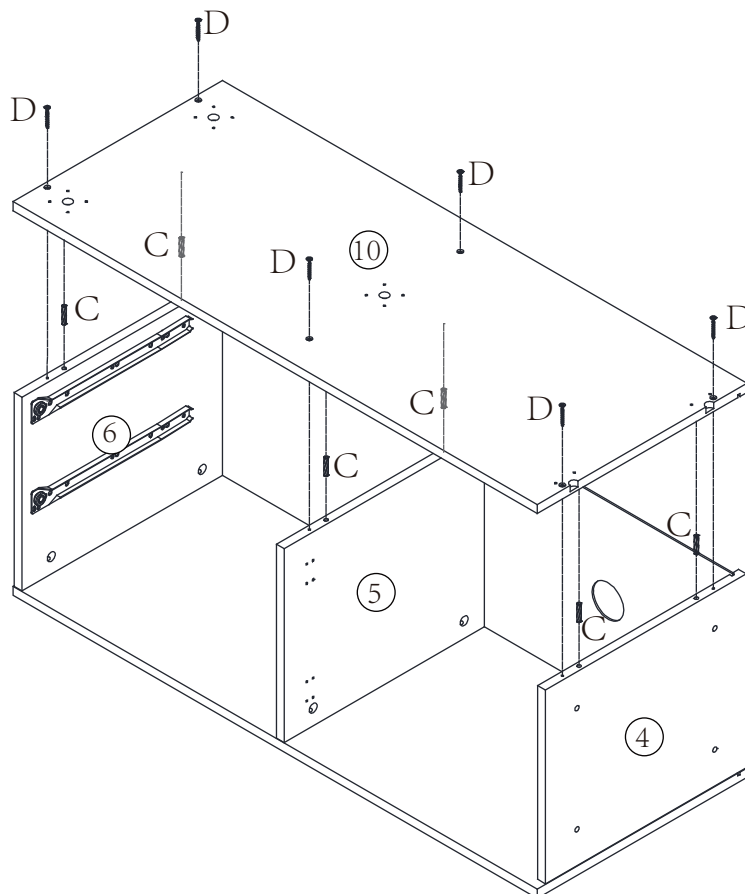


STEP 10

 Jx4





M6x18


 
Ux2

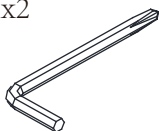



Sx8

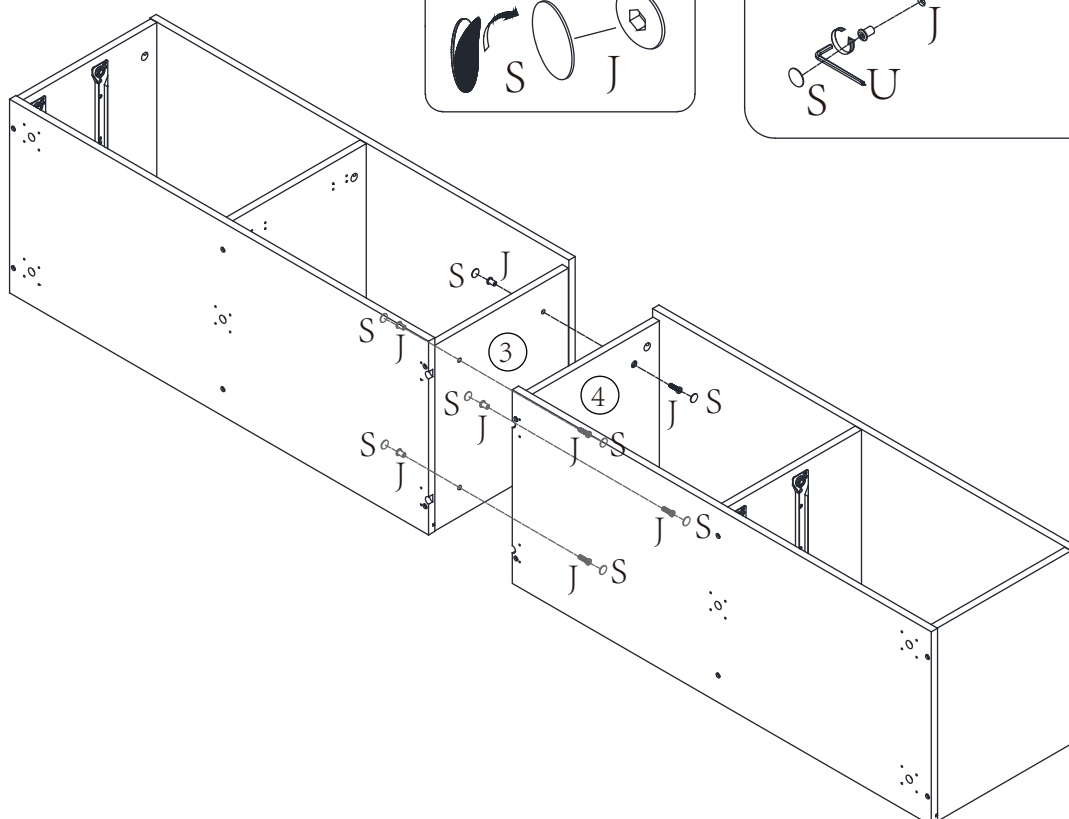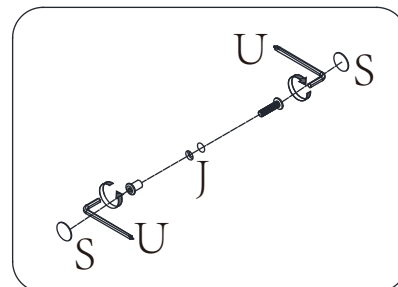  

  STEP 11

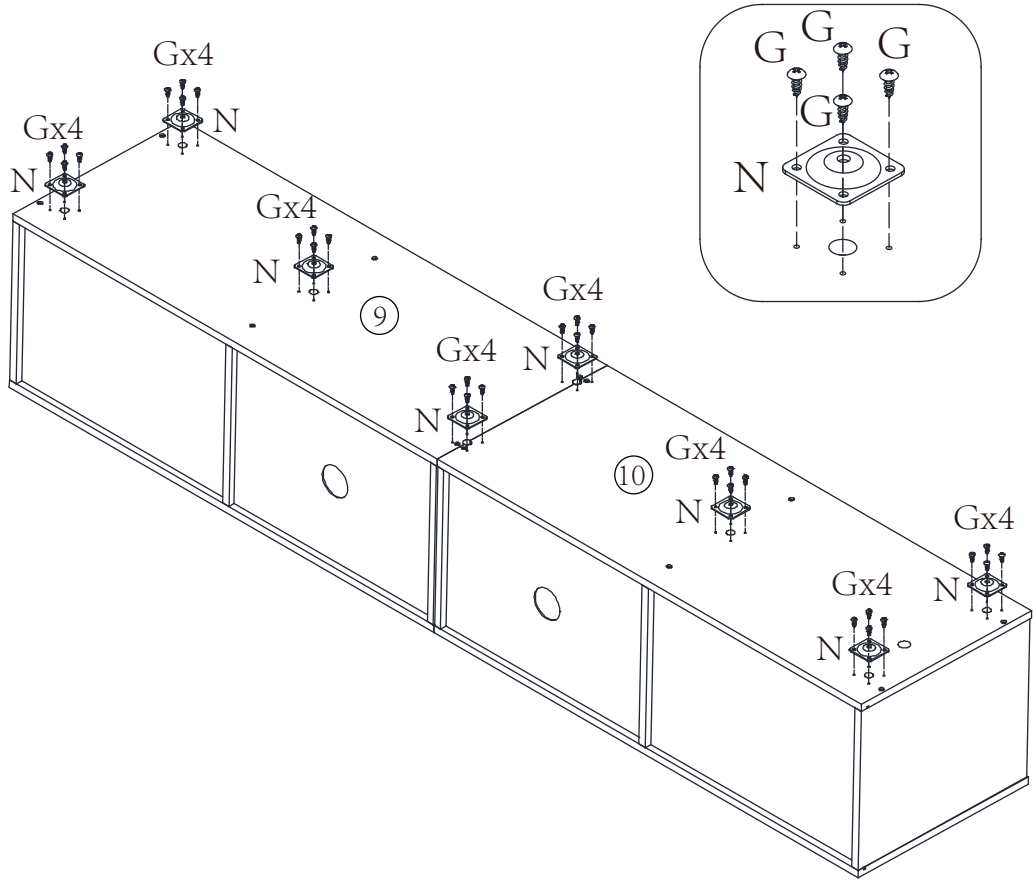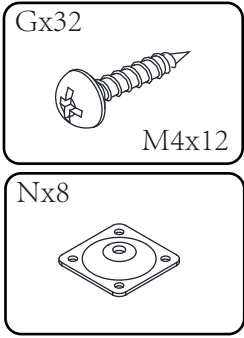

  STEP 12

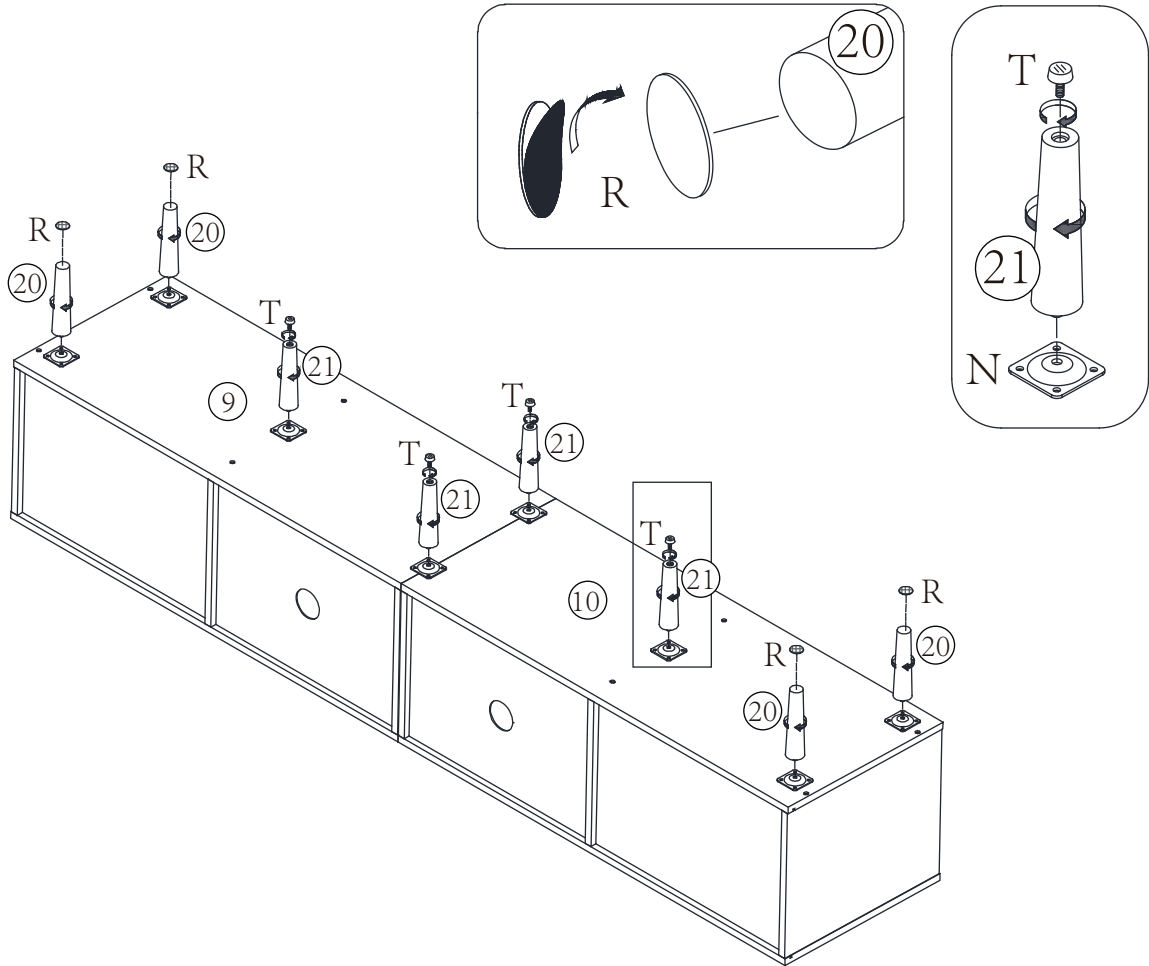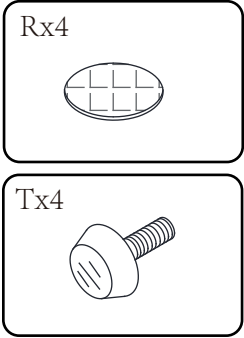

STEP 13

Mx4



Ix2



Ox4




M4x18

Lx8



 M4x14


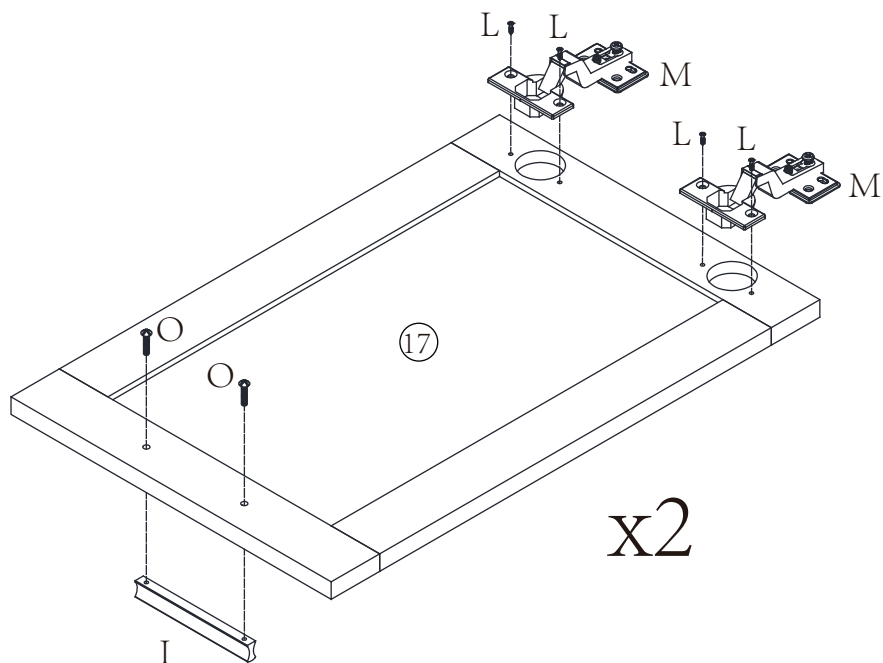


STEP 14

Lx16



  M4x14

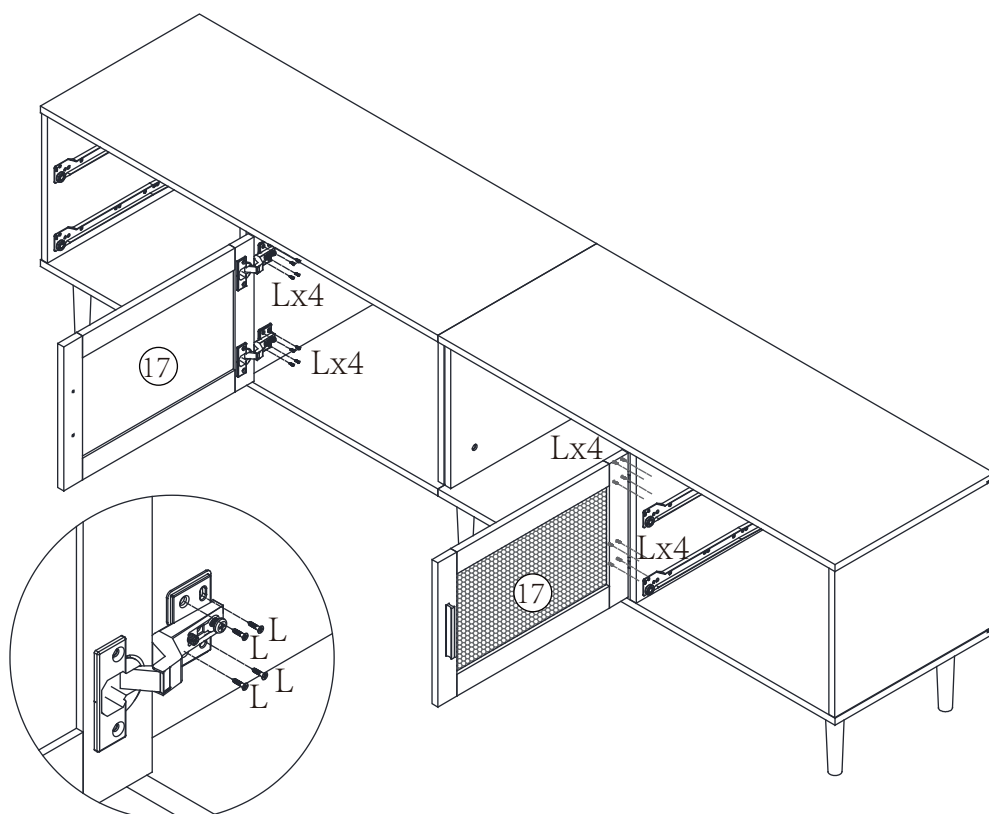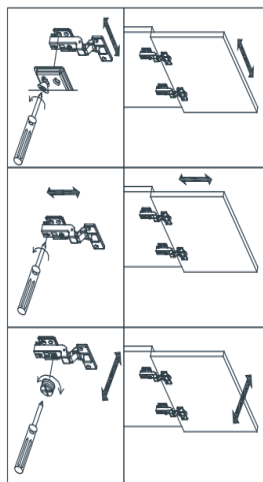



(For detailed hinge adjustment instructions, please refer to the last page.)

STEP 15

Ex16



  M4x30

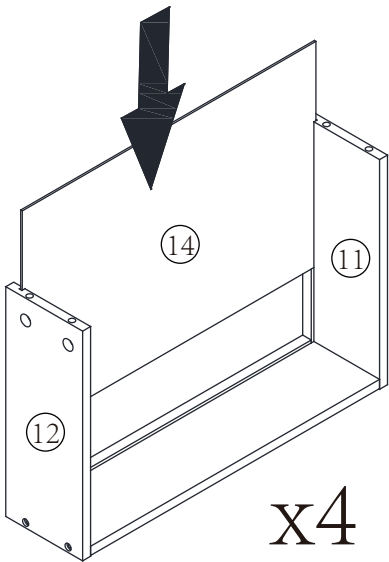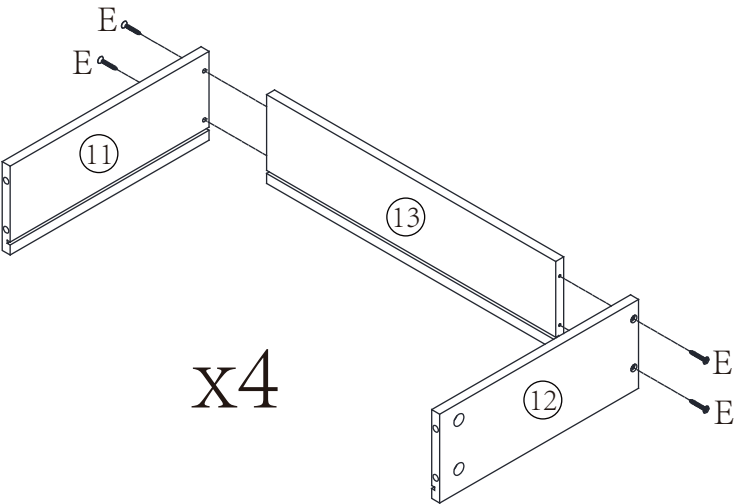

STEP 16

Ax16




Ix4



Ox8







 M4x18

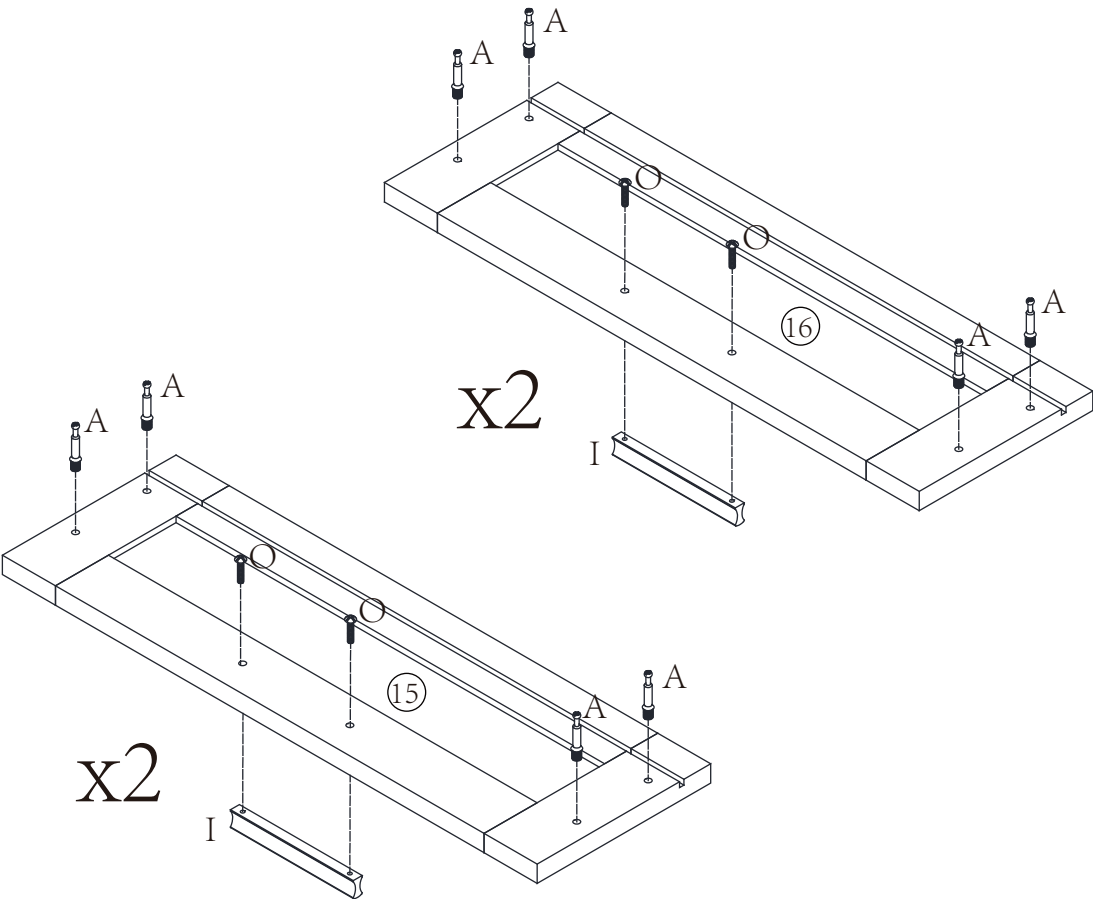


STEP 17

    Bx16

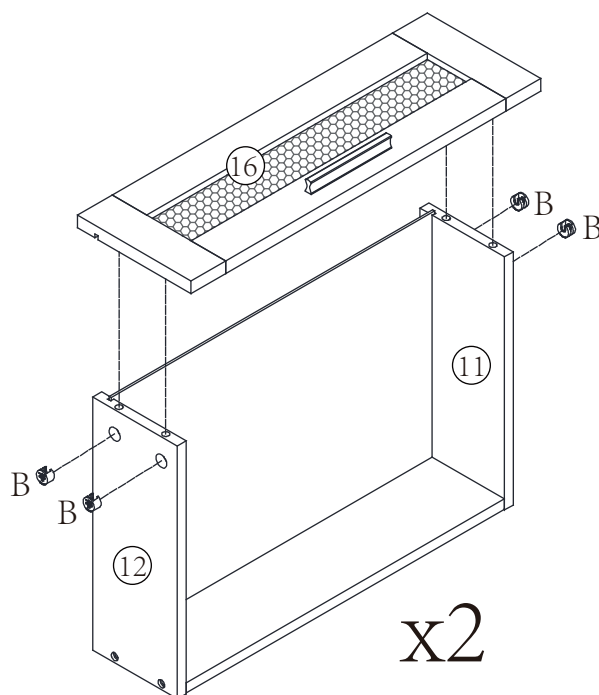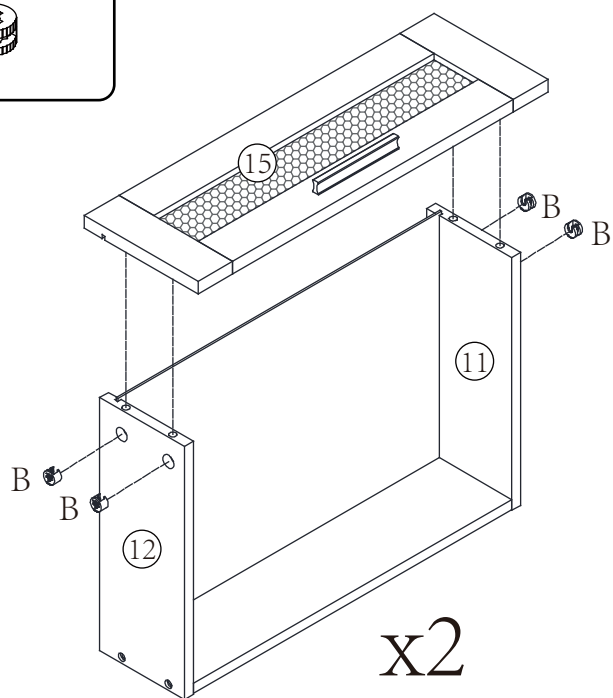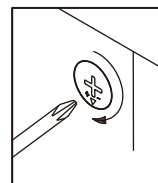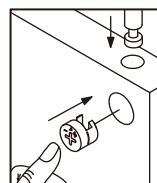


STEP 18

 DRx4



300mm

 DLx4






300mm


Fx16




 
 
 
M3x12

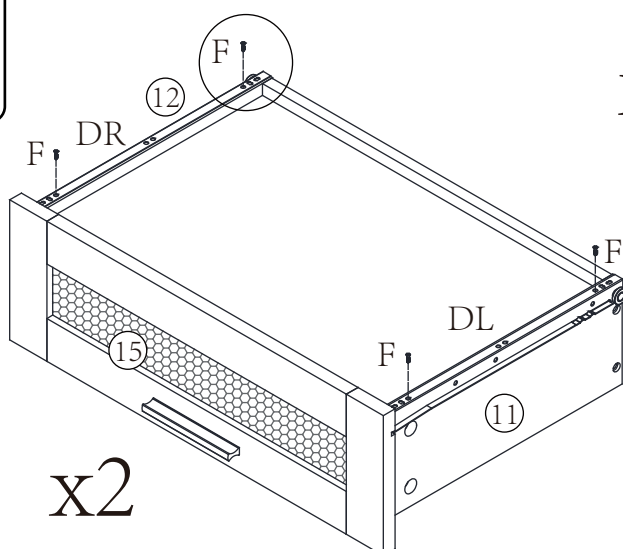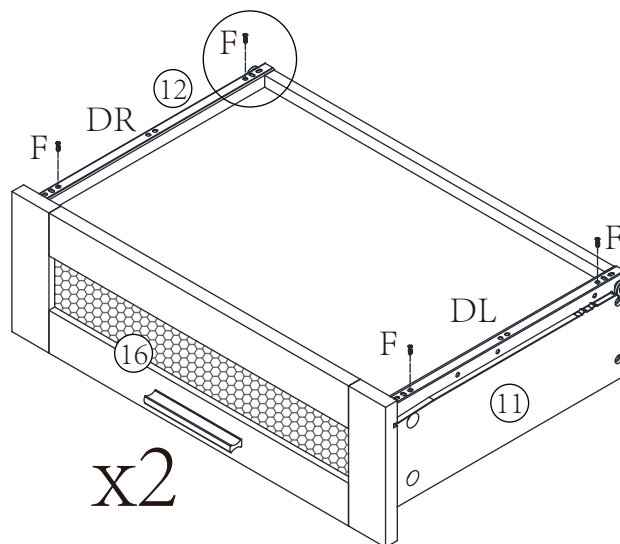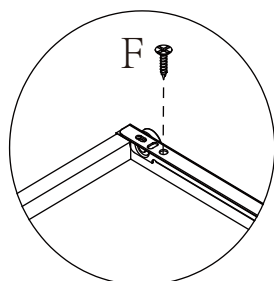

 STEP 19

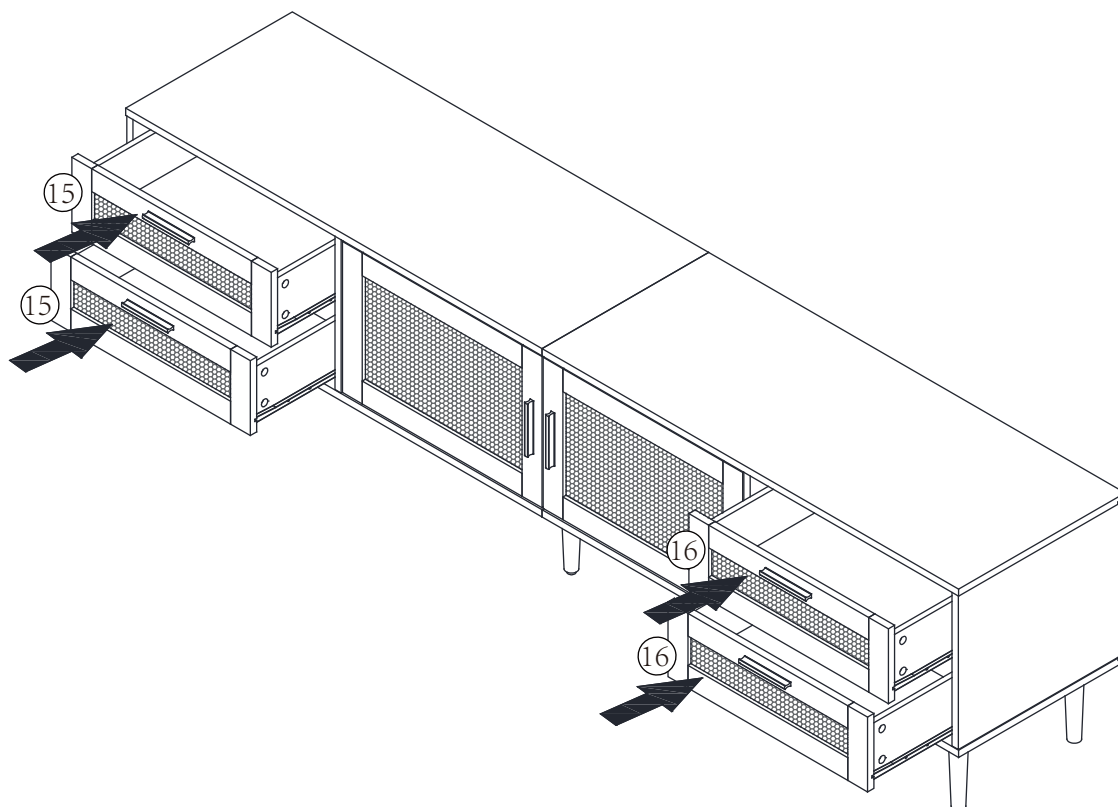

    STEP 20

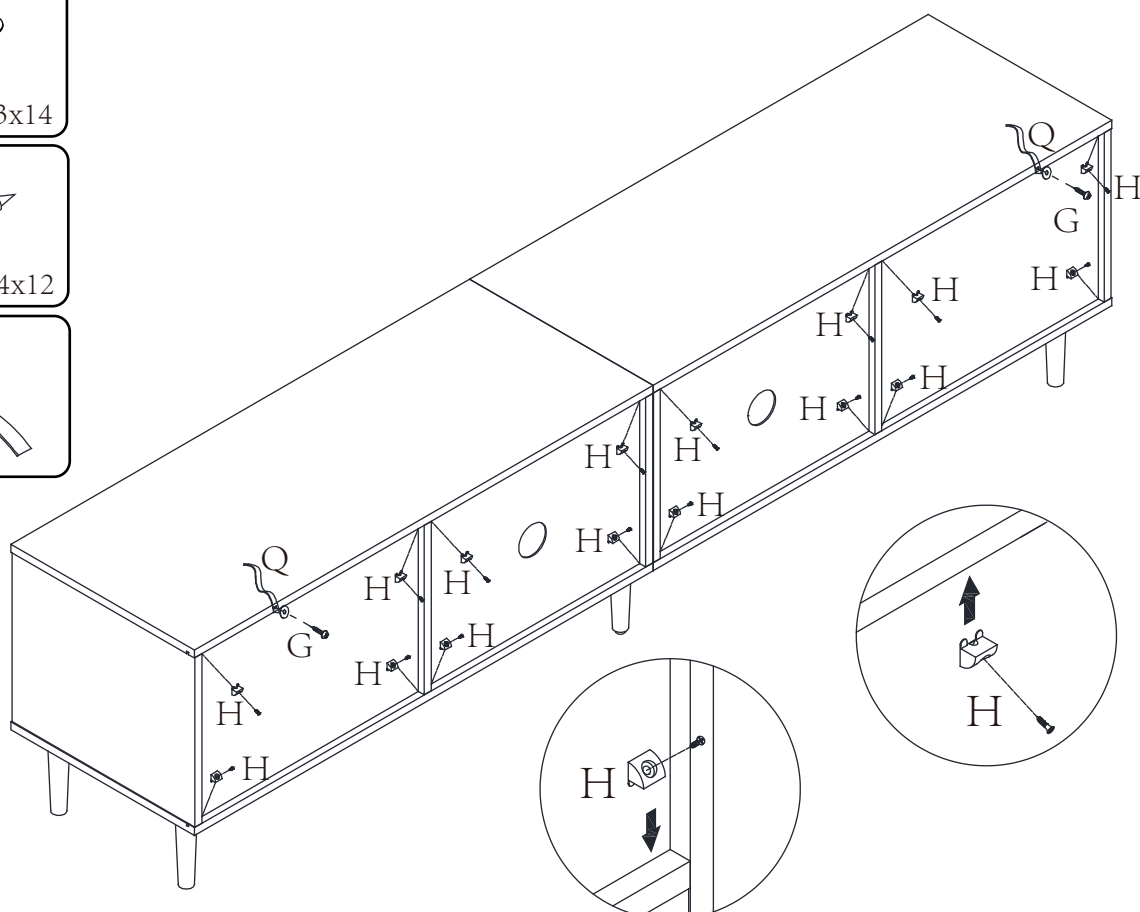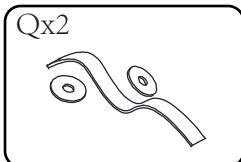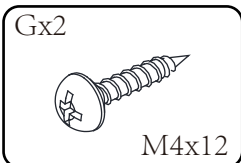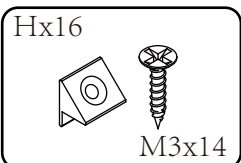



STEP 21

Kx2




M4x35

  
Px2

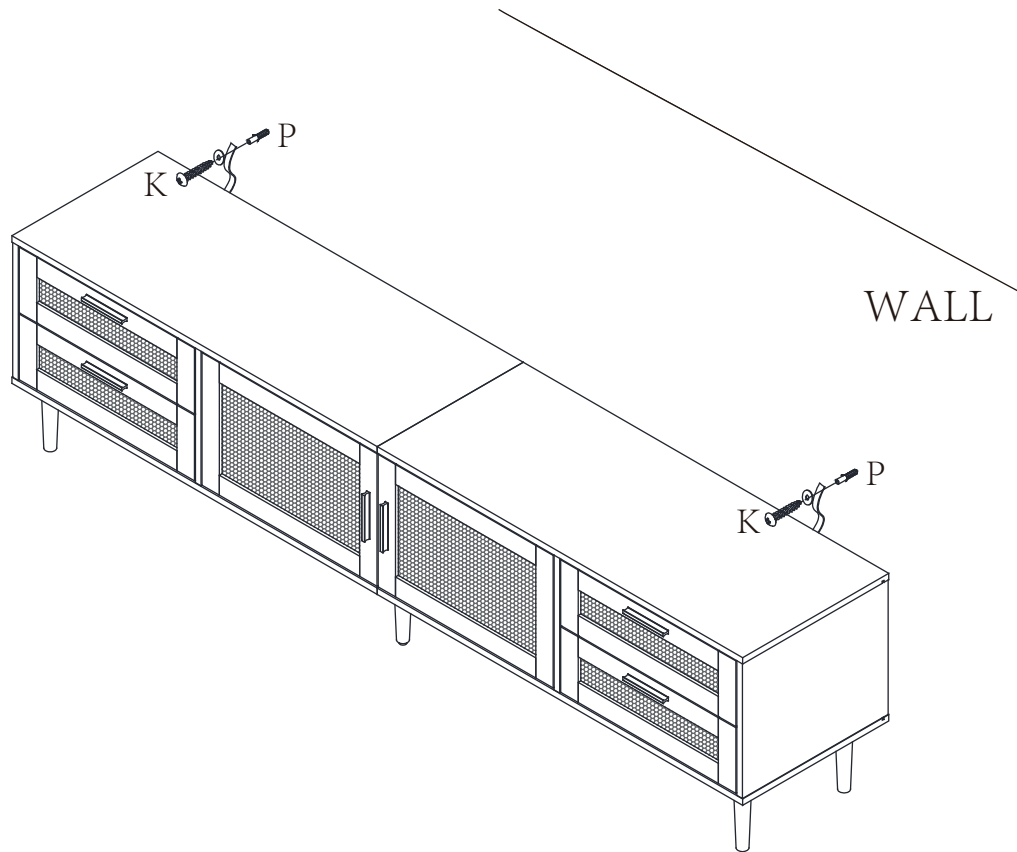

 STEP 22

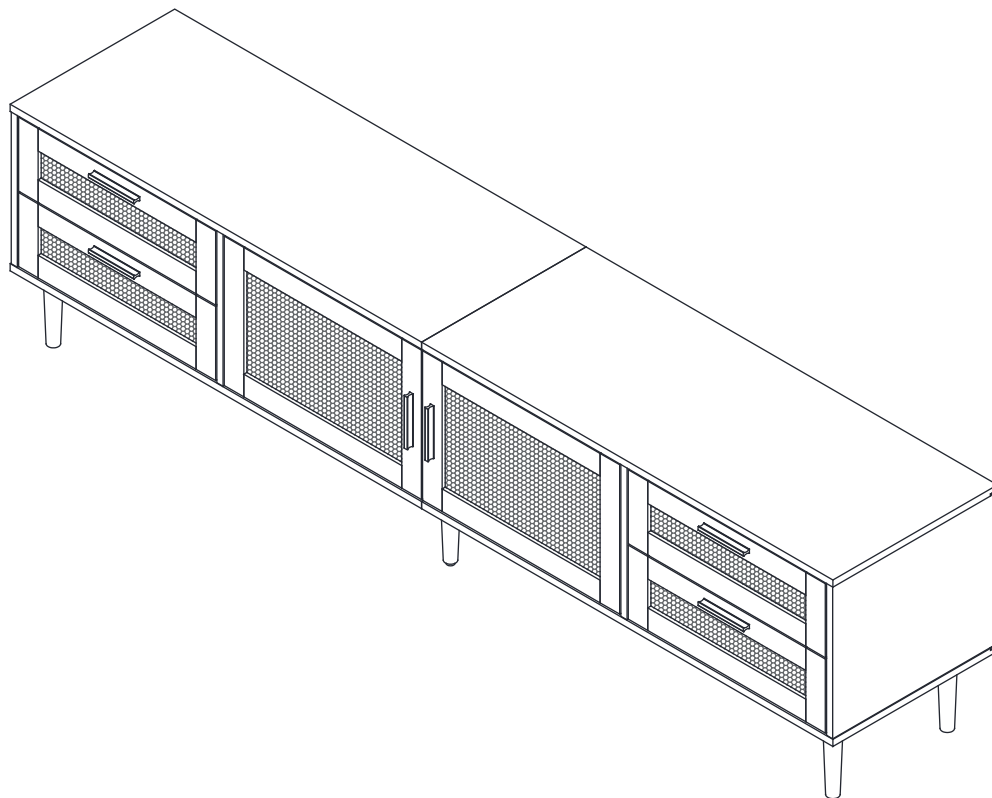


HINGE ADJUSTMENTS

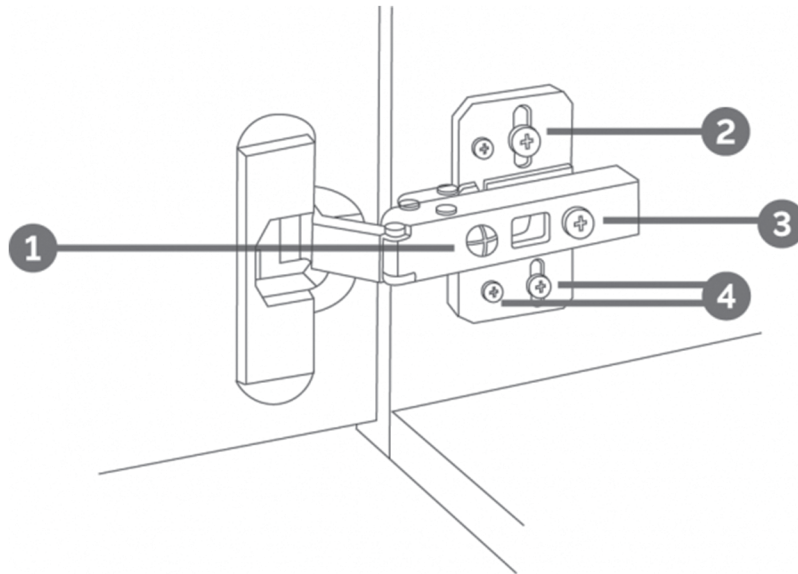 


① Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

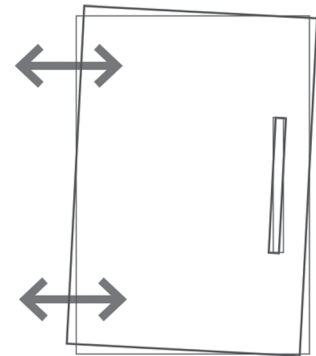

② ④ Height adjustment

 While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

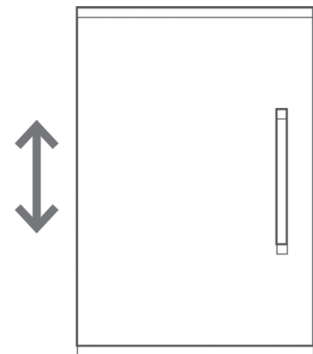

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

