 


TV STAND

USER MANUAL

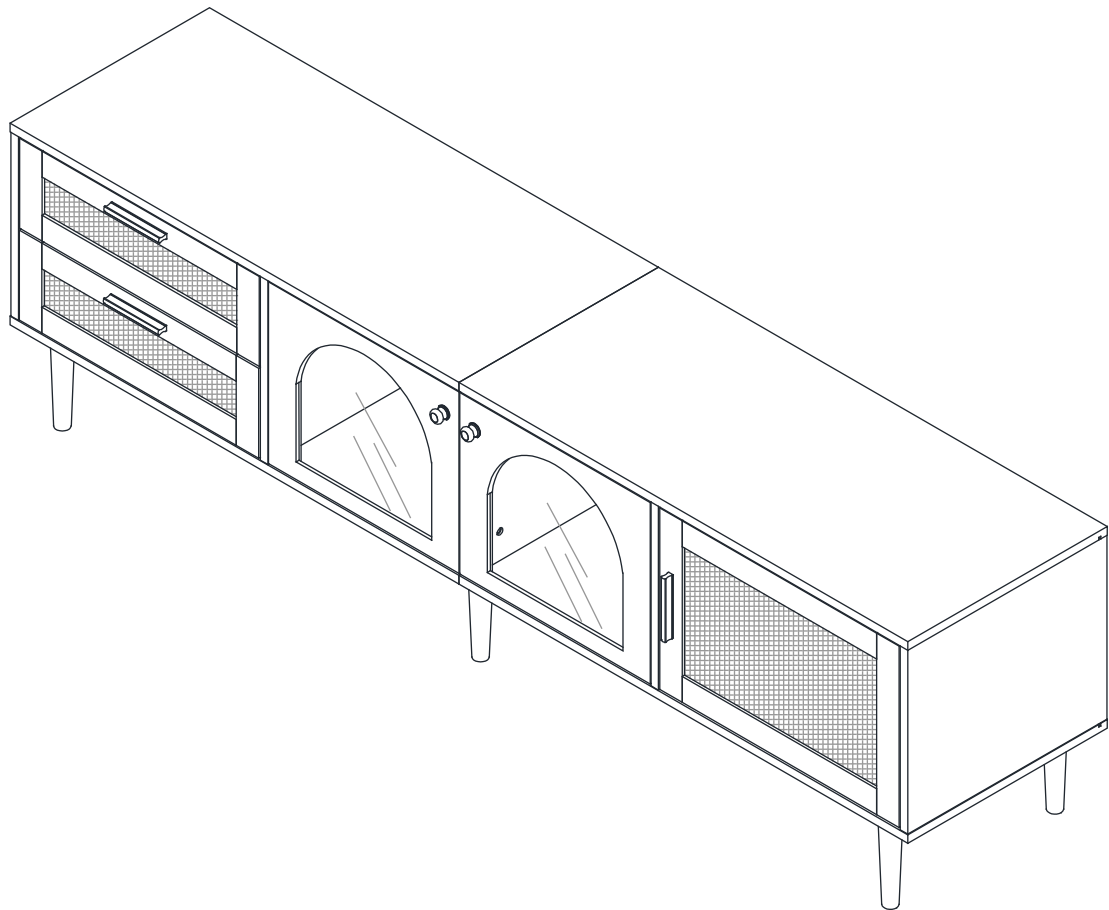

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

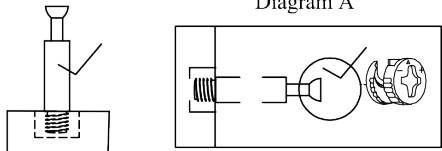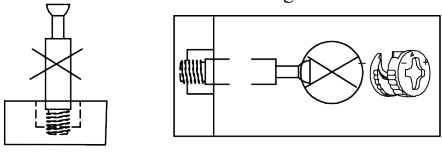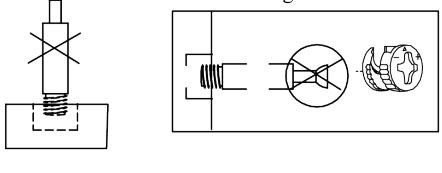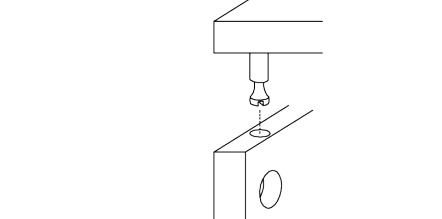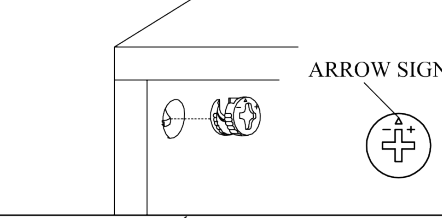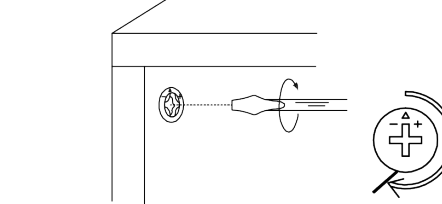      	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

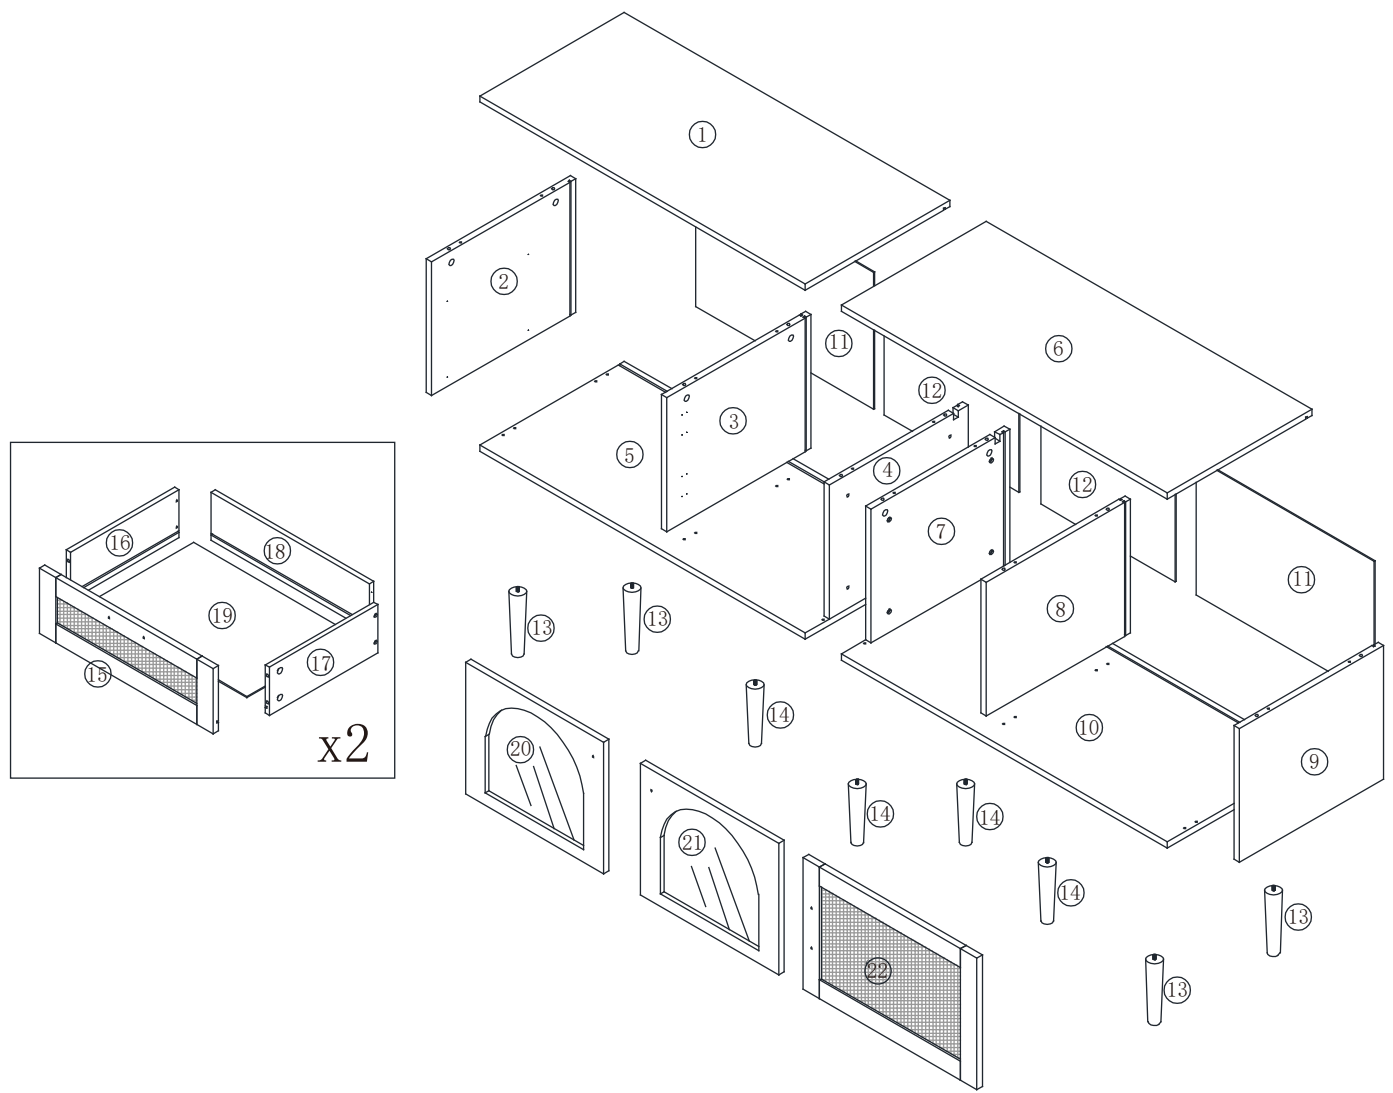 

Ax20	Bx20	Cx24 M6x30	Dx12 M4x40	Ex 8 M4x30	Fx16 M3x12
Gx18 M3x14	Hx36 M4x14	Ix32 M4x12	Jx8	Kx 8 M6x18	Lx1
Mx6	Nx2 M4x35	Ox 8 M4x18	Px3	Qx2	Rx4
Sx4	Tx20	Ux16	Vx2	Yx1	CRx2 300mm
CLx2 300mm	DRx2 300mm	DLx2 300mm	Xx2		

STEP 1



Ax12



Gx2



  Lx1

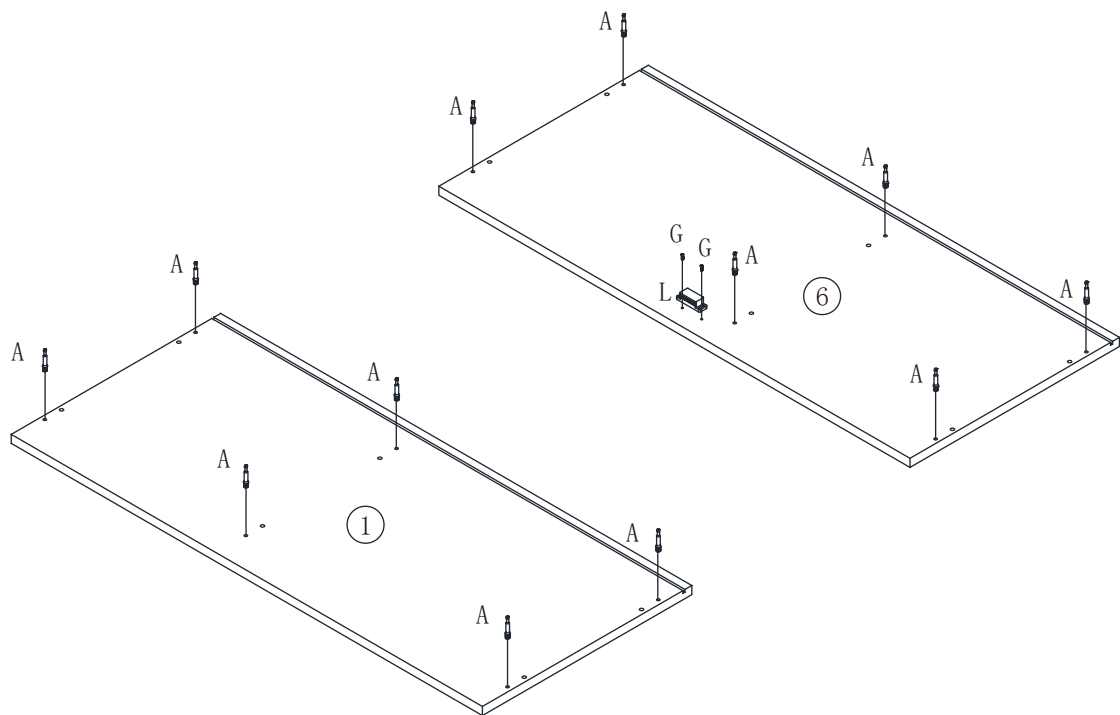

STEP 2





Fx8









CLx2



    
CRx2

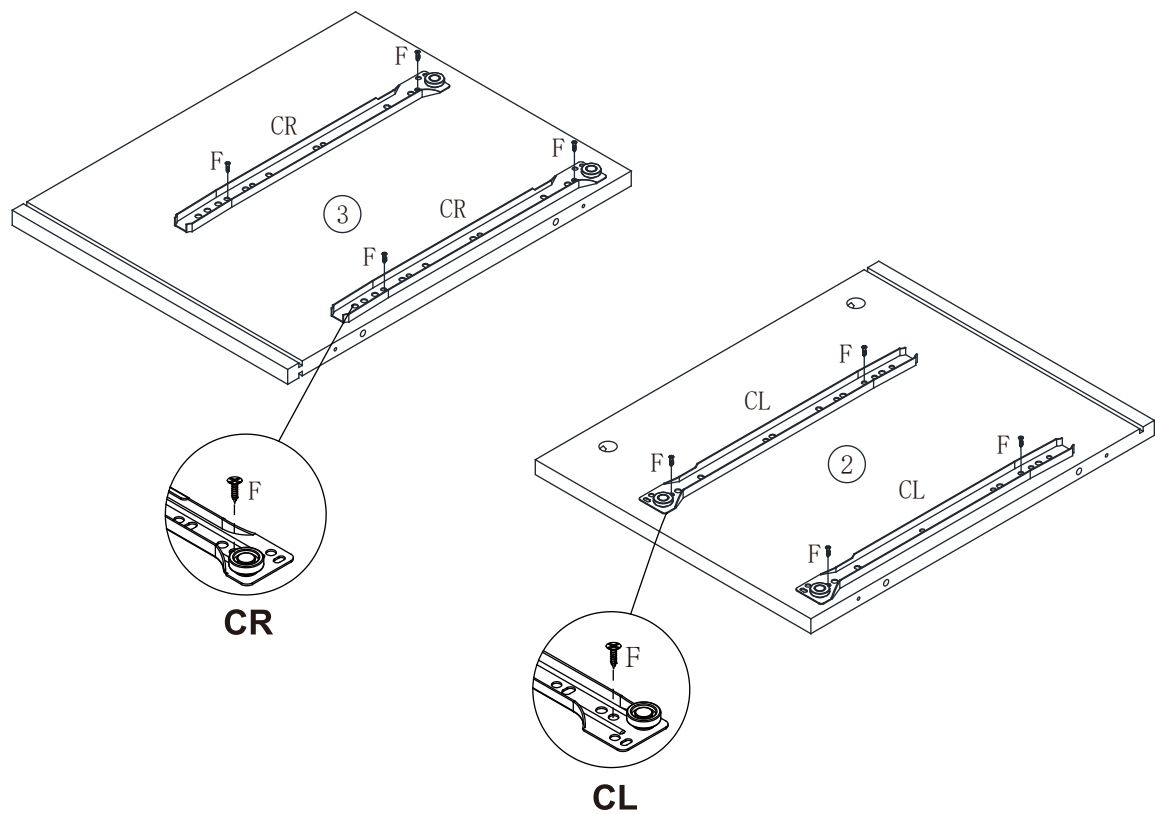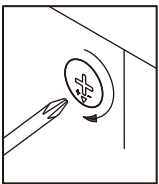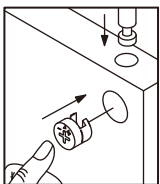

      STEP 3

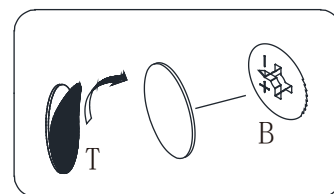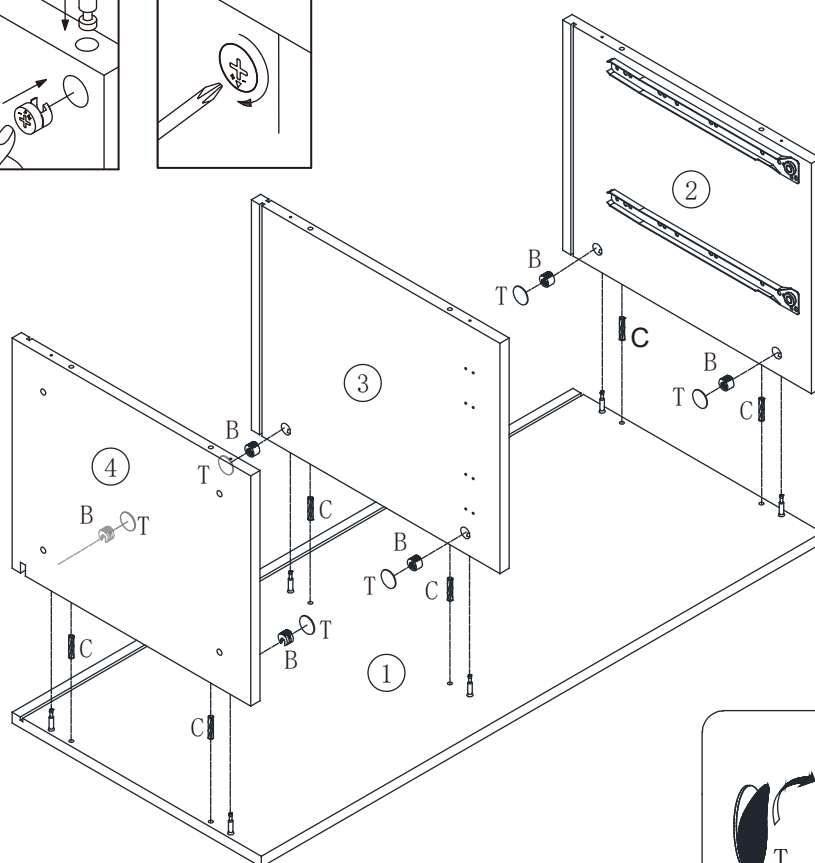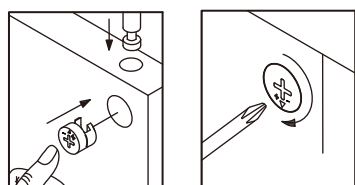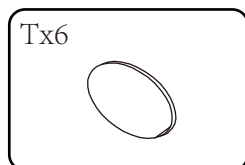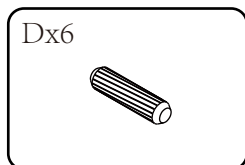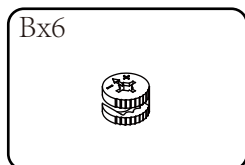

 STEP 4

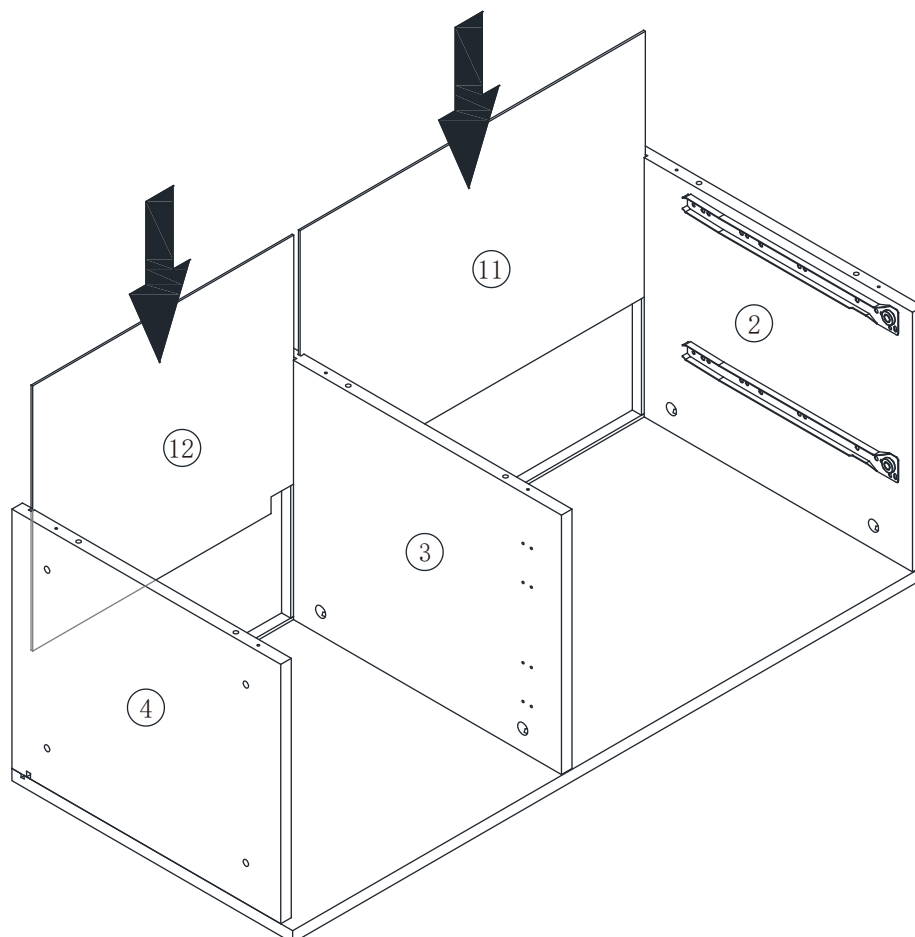


STEP 5

Dx6



 Cx6

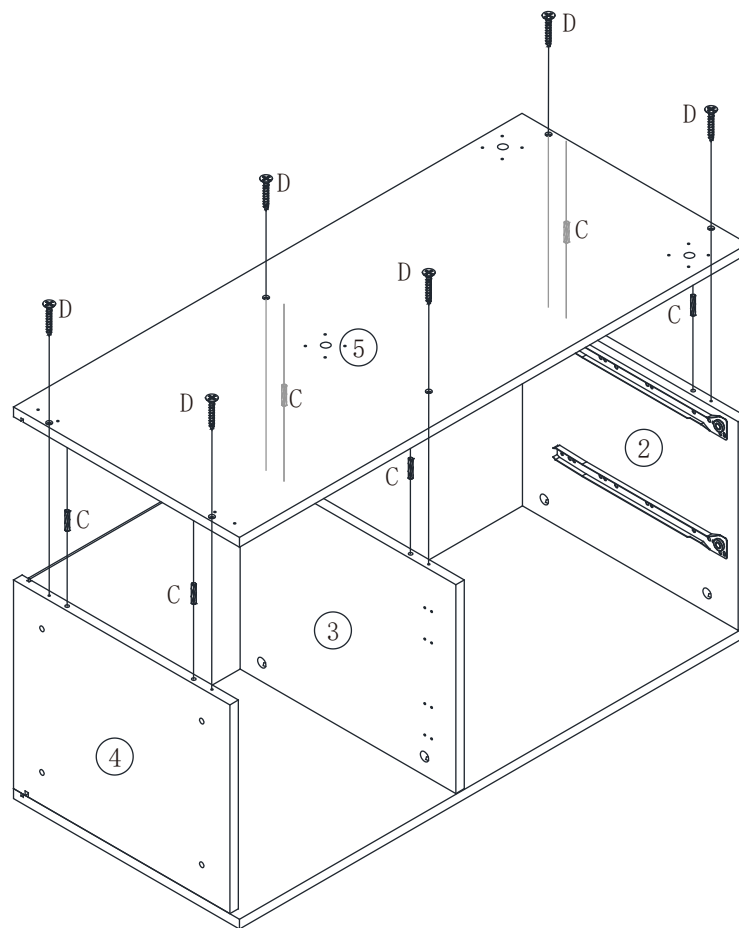

STEP 6

Bx6







Dx6




M6x30

   
 
Tx6

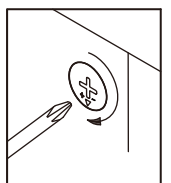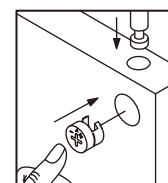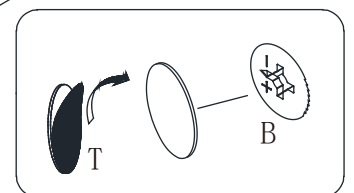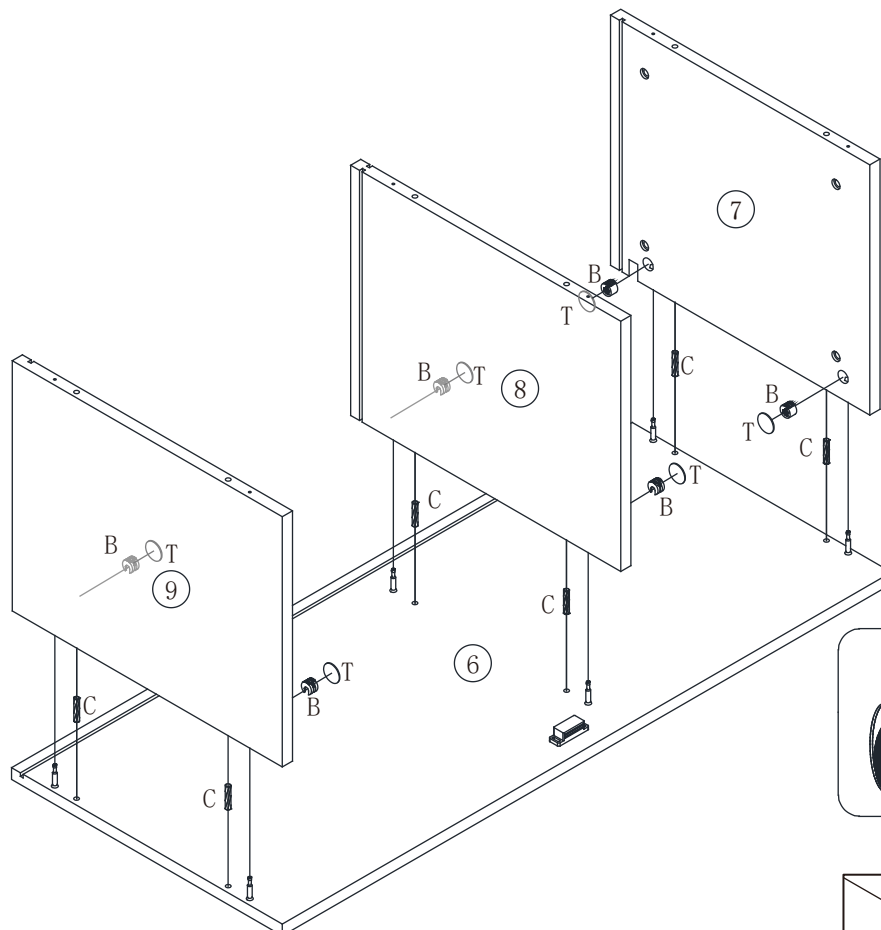


 
STEP 7

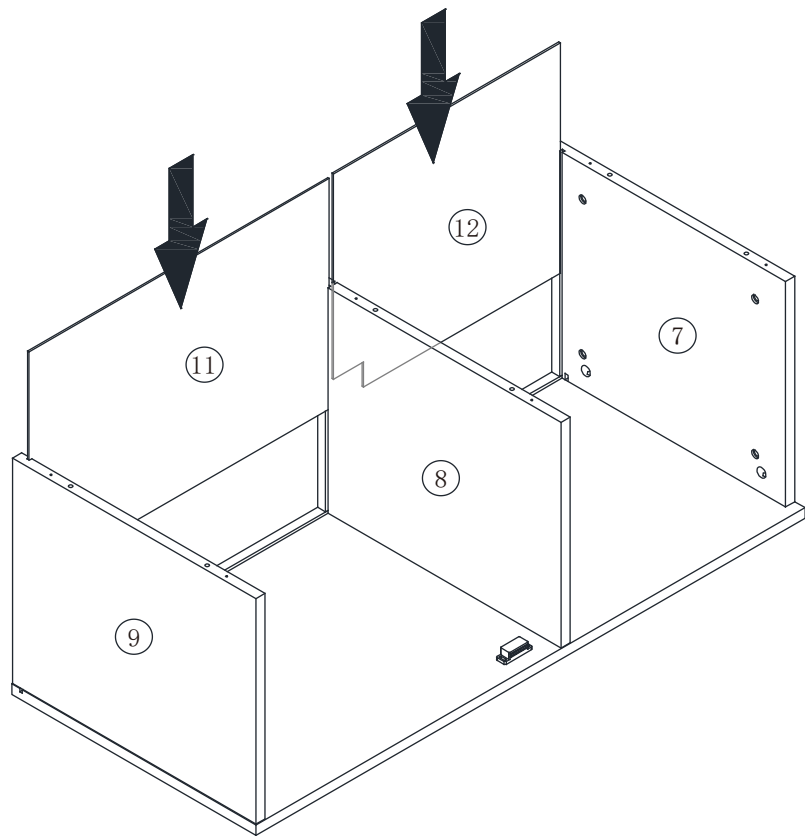

 
 
STEP 8

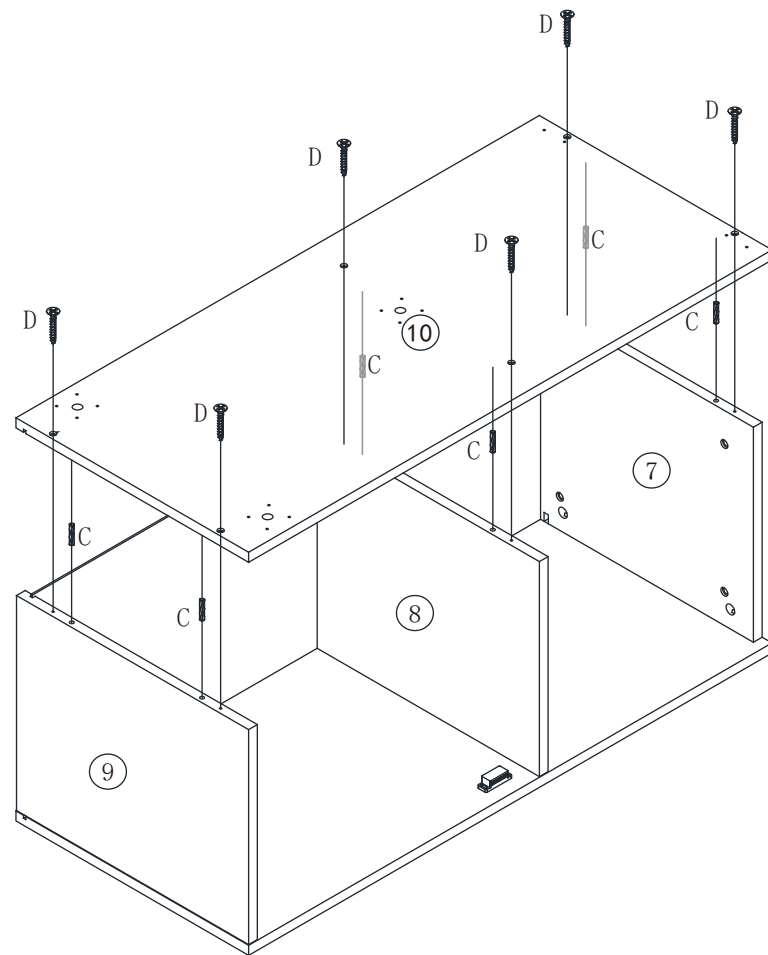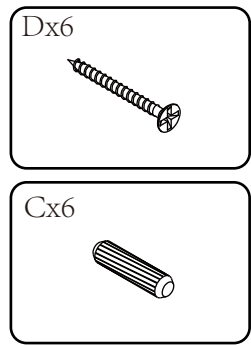

  STEP 9

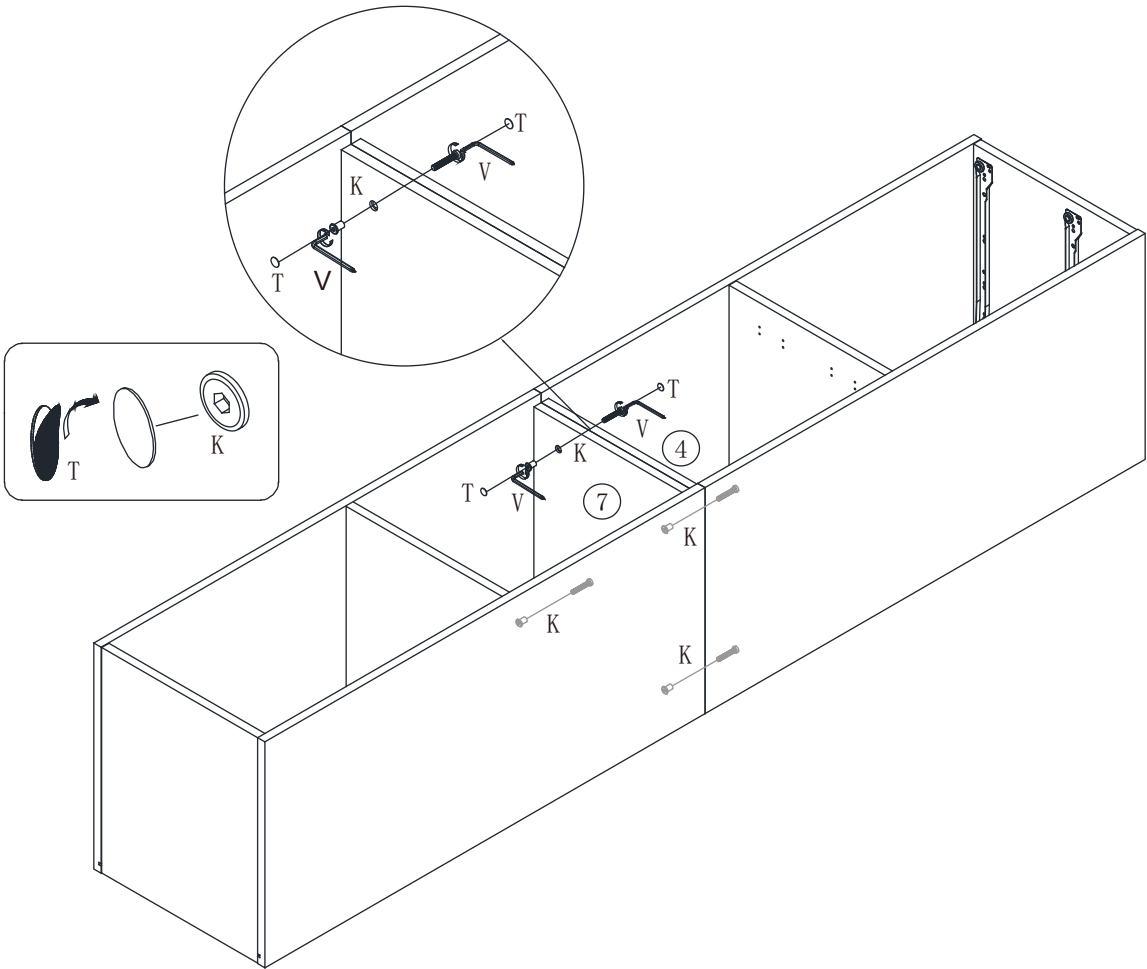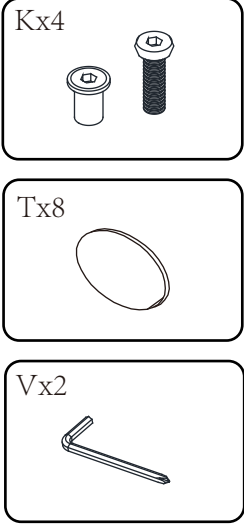

  STEP 10

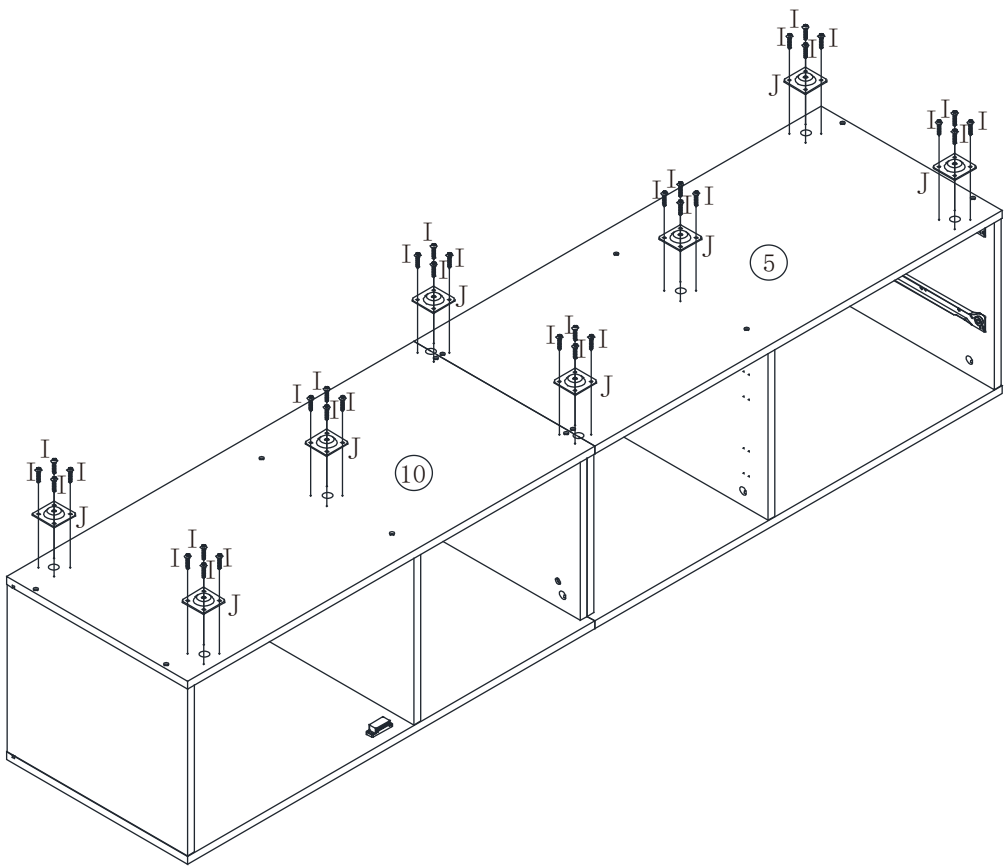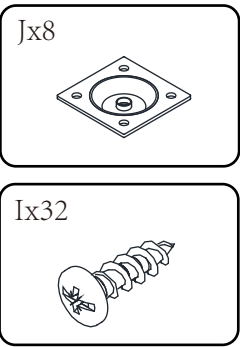


STEP 11

Sx4




 Rx4

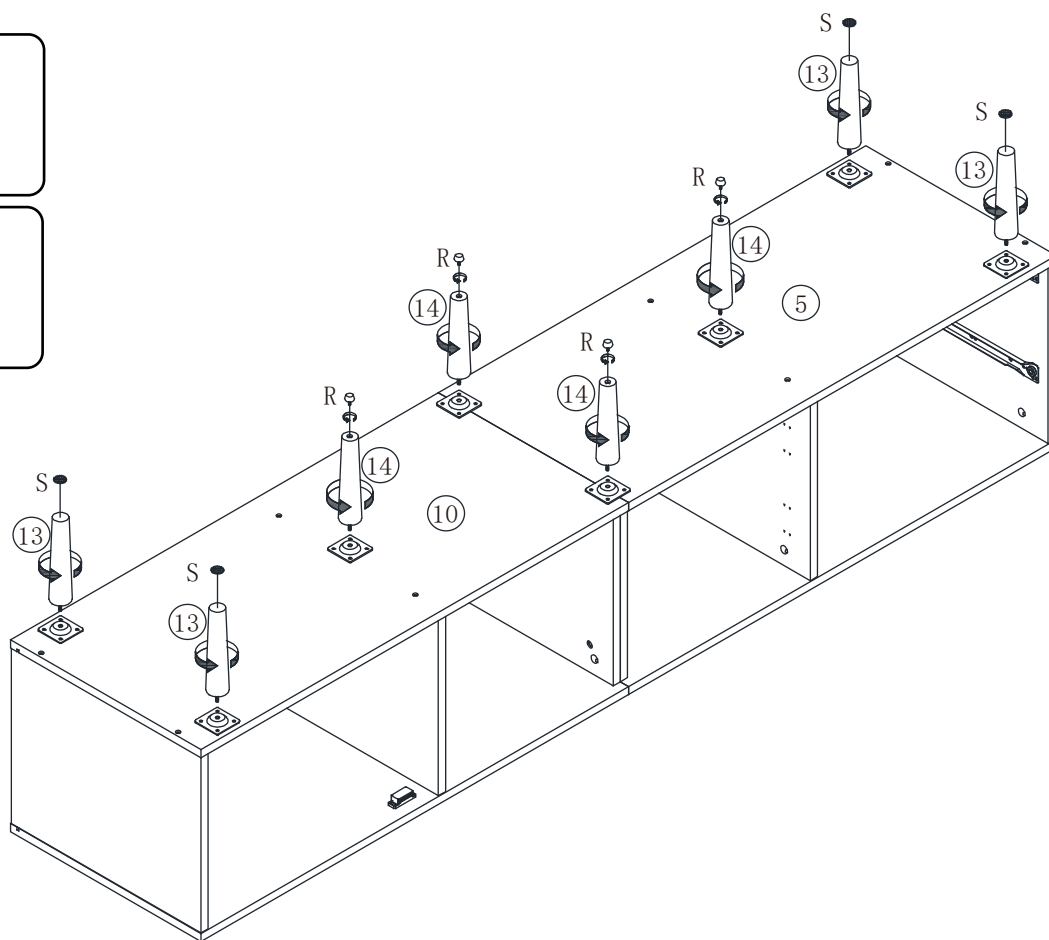

STEP 12

 Yx1

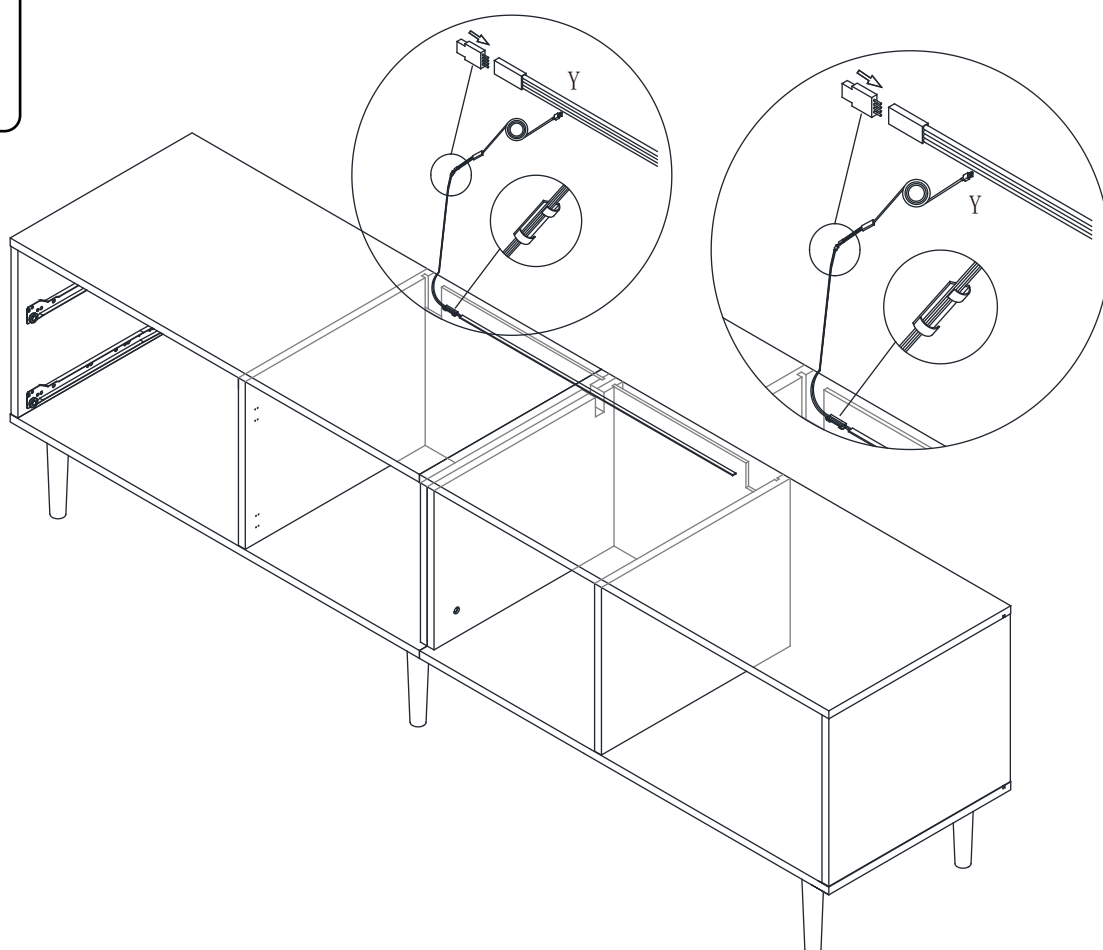


STEP 13


Hx12



 Ox4




Mx16

 

Px1





 Qx2

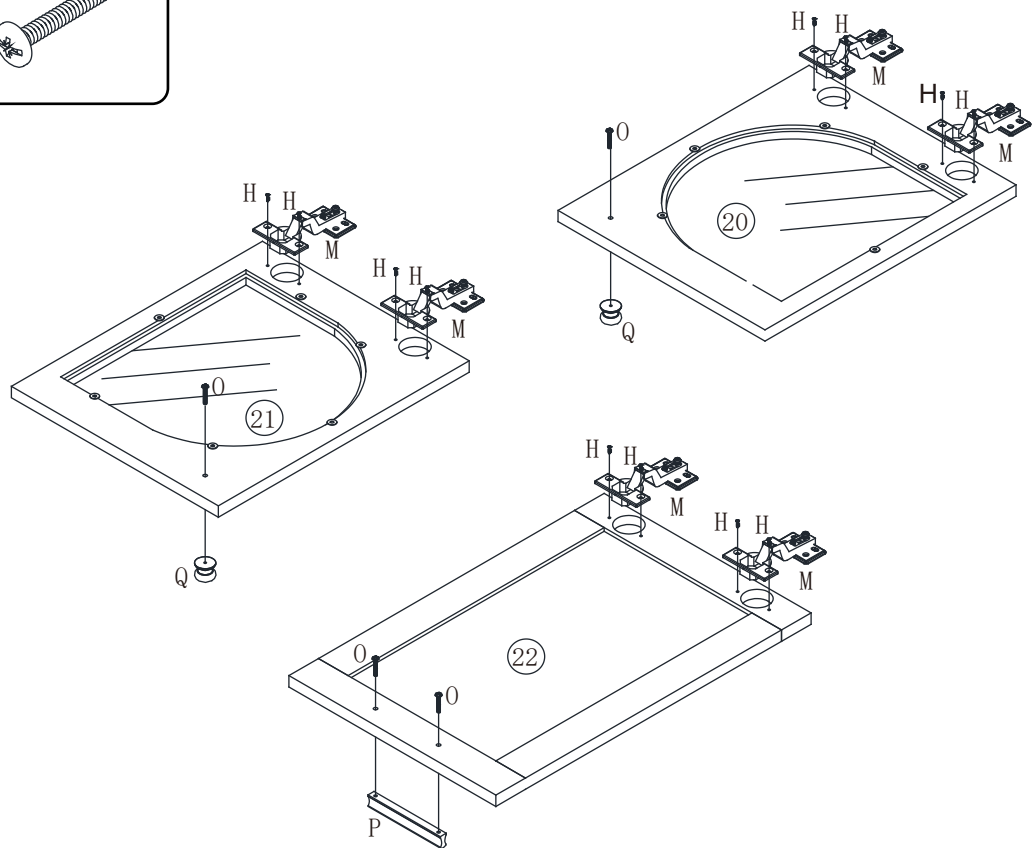





STEP 14

  Hx24

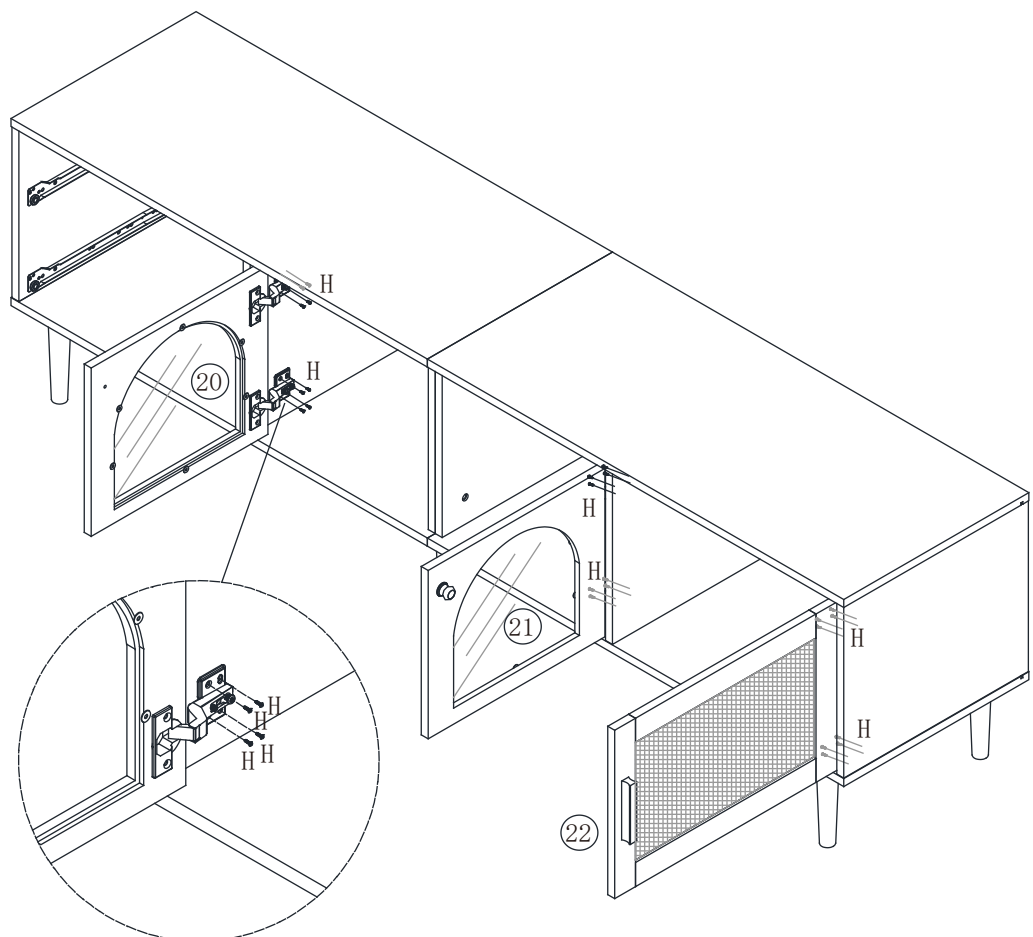
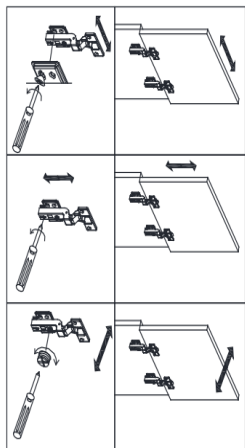


(For detailed hinge adjustment instructions, please refer to the last page.)

    
STEP 15

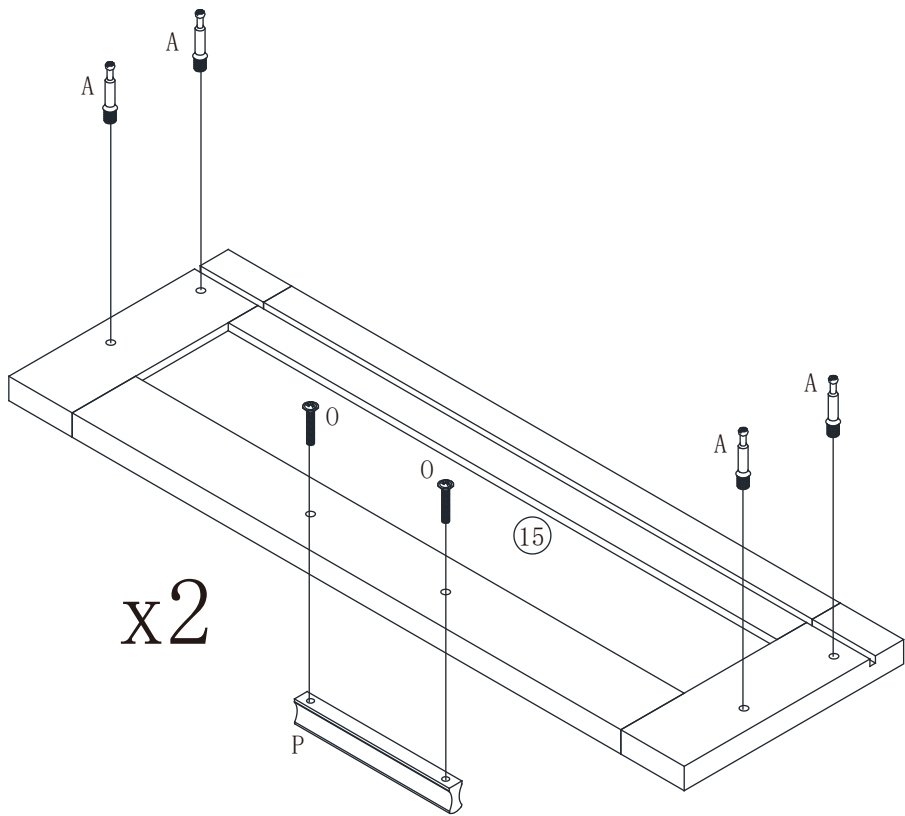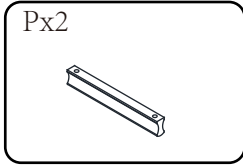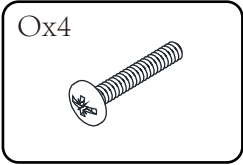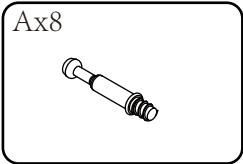



 
 
STEP 16

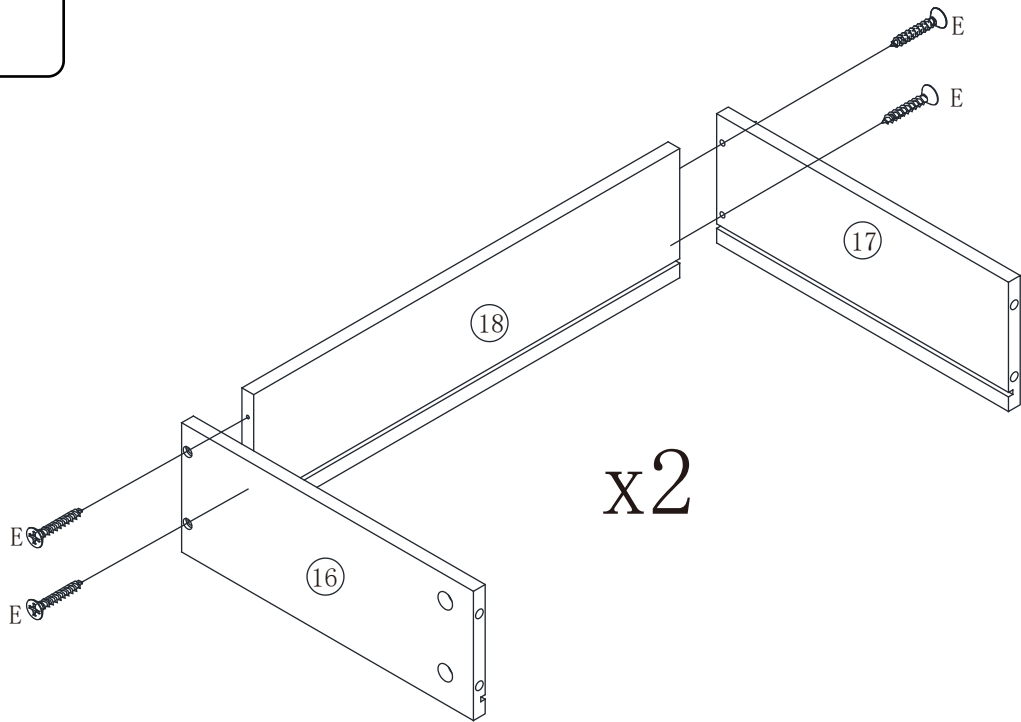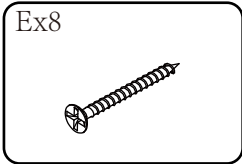


 
STEP 17

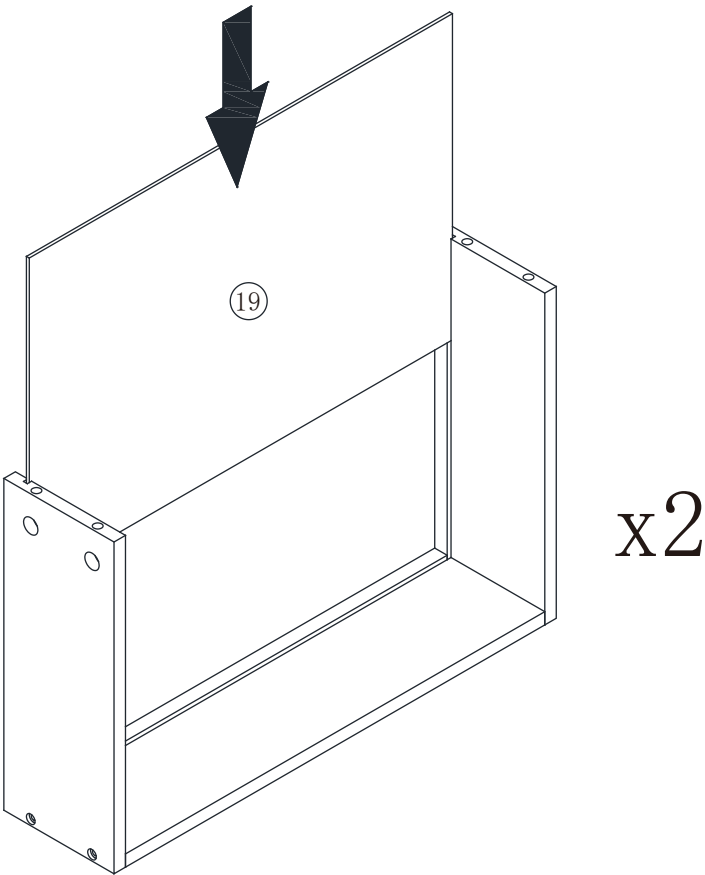

    
STEP 18

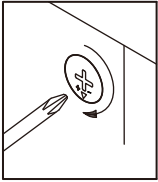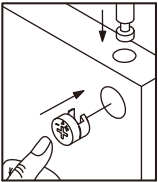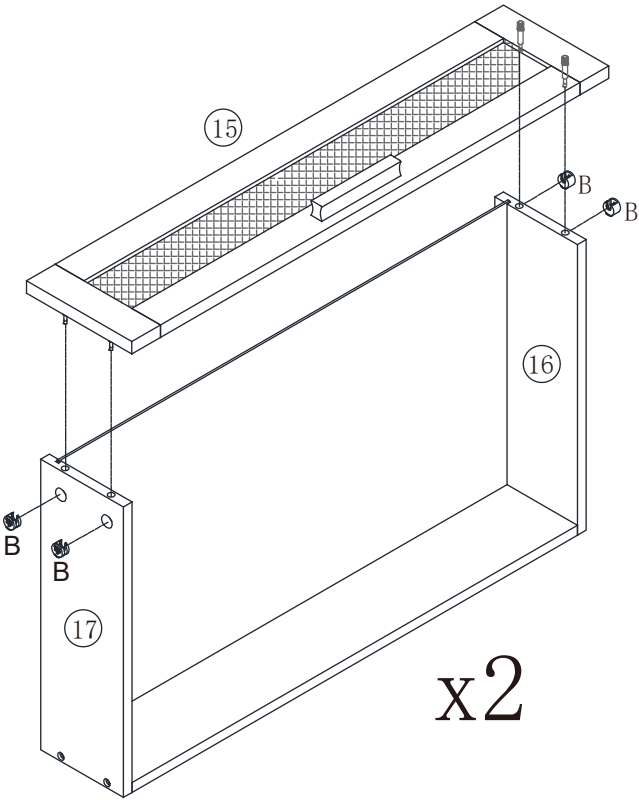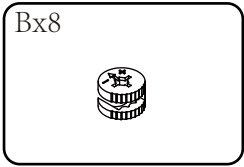

  
STEP 19

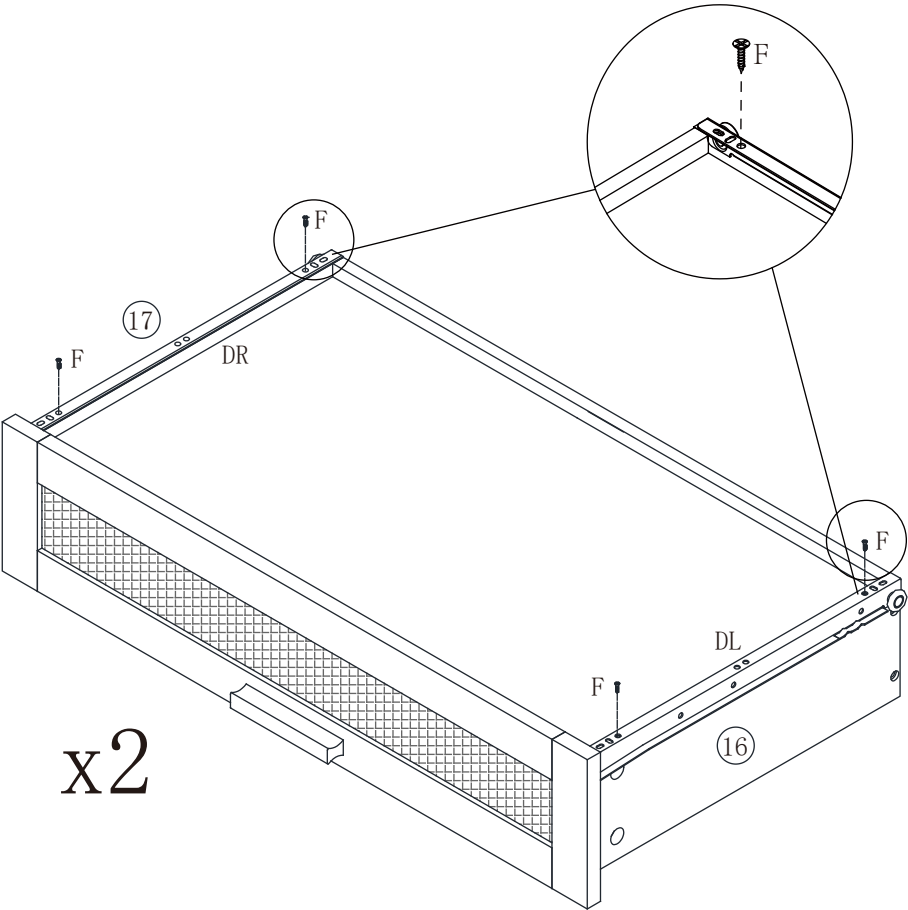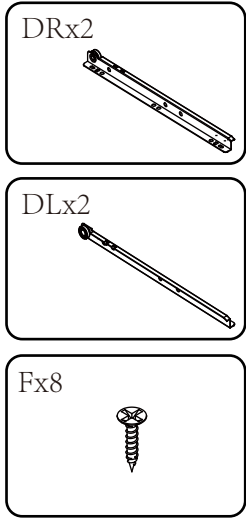

 STEP 20

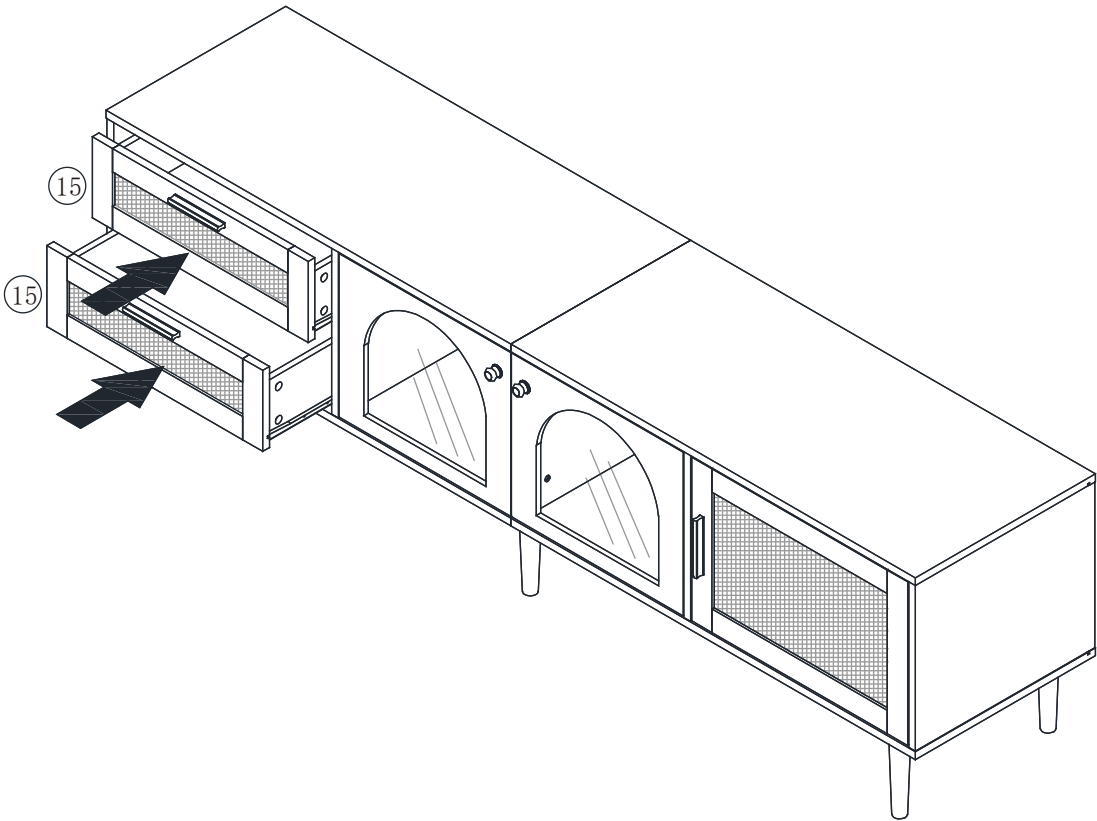


HINGE ADJUSTMENTS

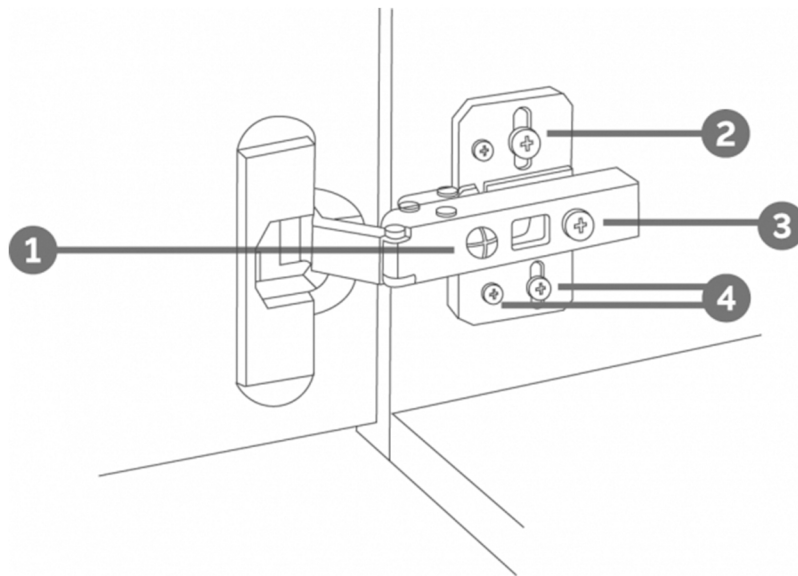 


① Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

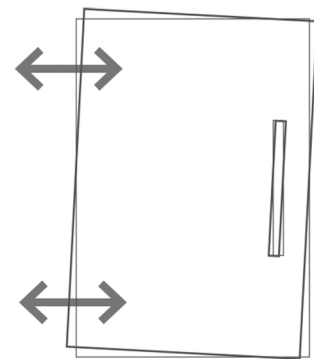


② ④ Height adjustment

 While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down





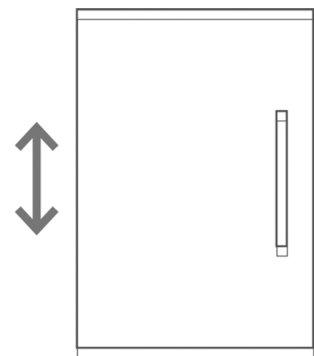


③ Forward and back adjustment

 If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

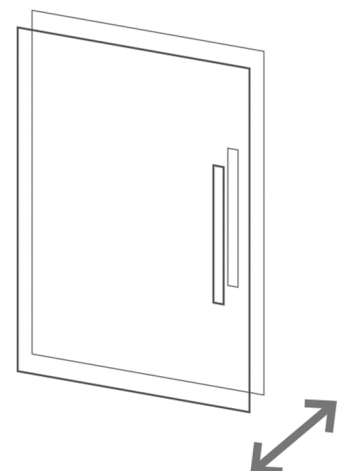

     STEP 21

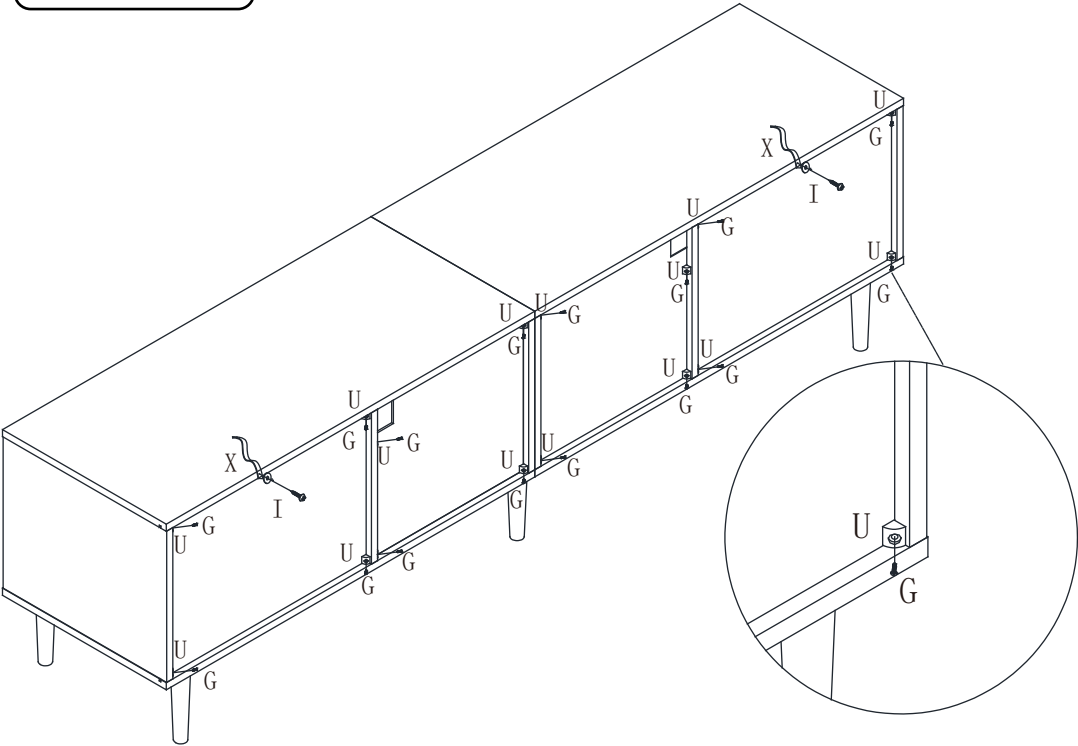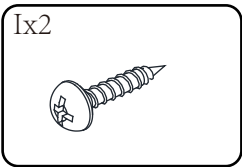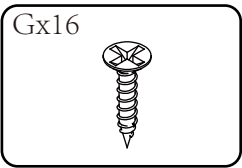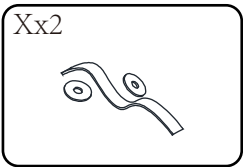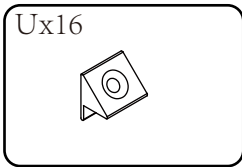

STEP 22

