 


TV STAND

USER MANUAL

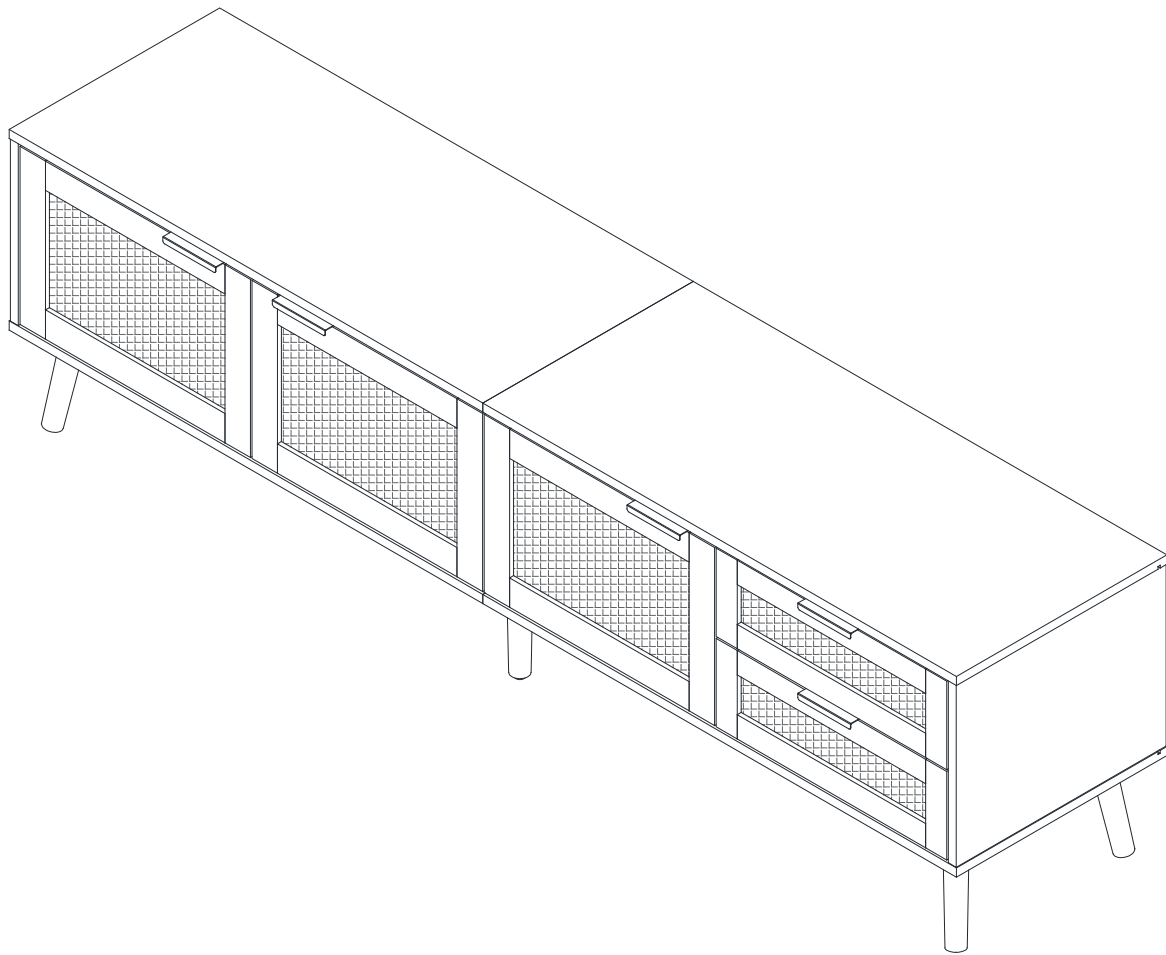

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

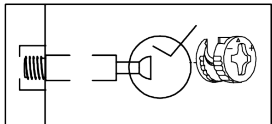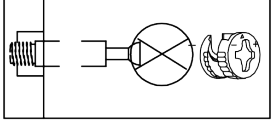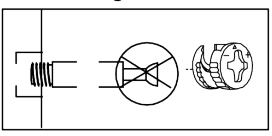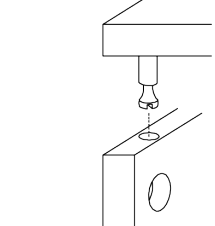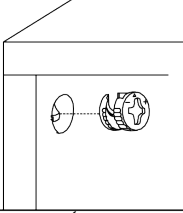        
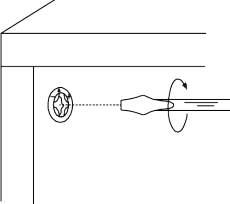 
 	Diagram A Insert Cam Bolt into hole as shown in diagram A.
 	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
 	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
 Connect the panels together.	
 ARROW SIGN	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
 	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

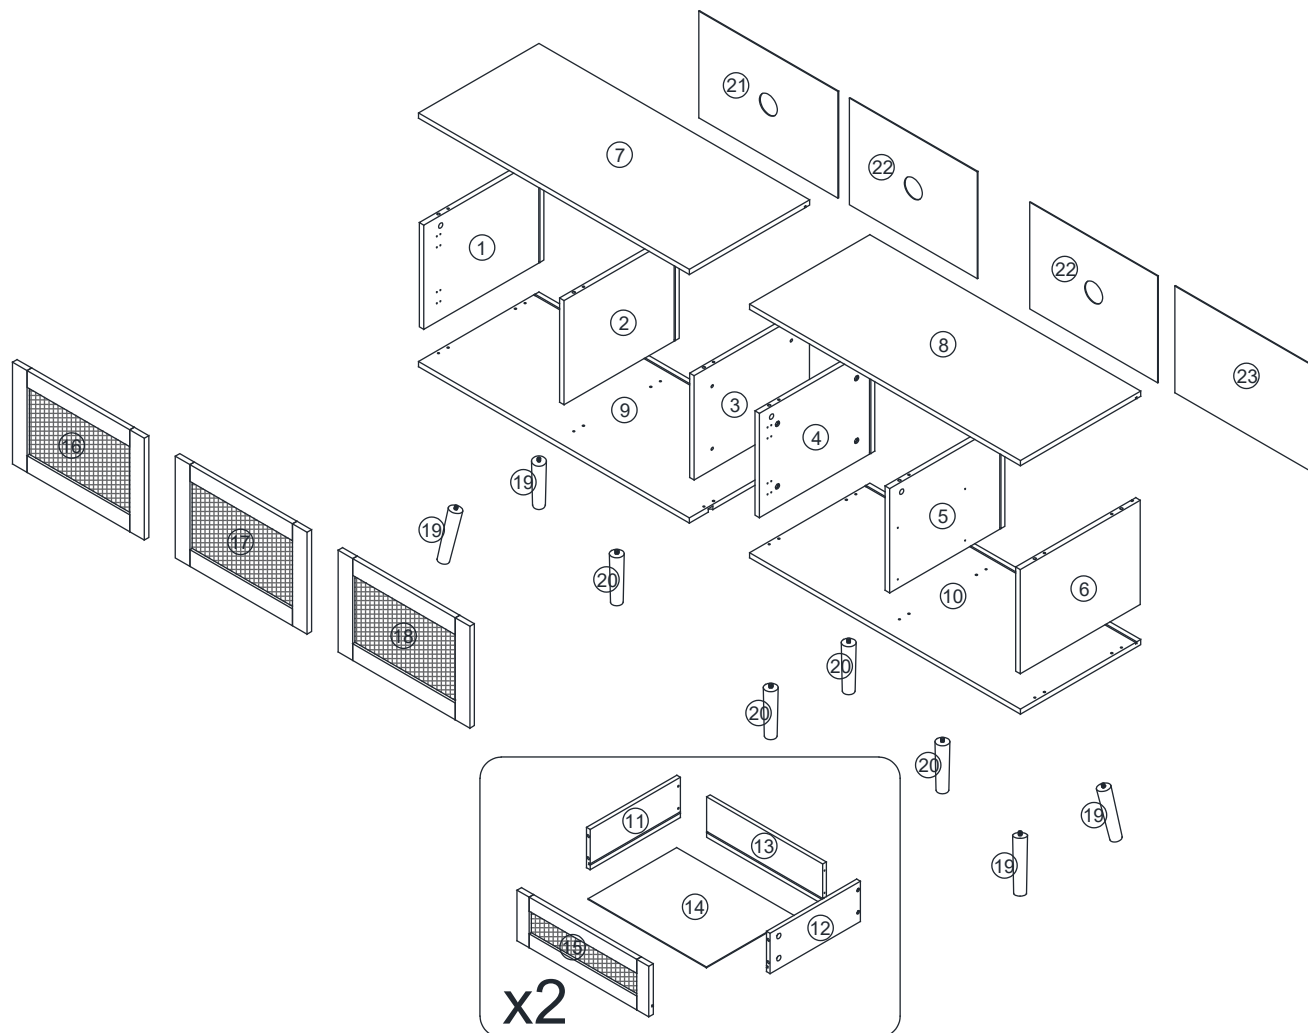 

Ax20	Bx20	Cx24 M6x30	Dx12 M4x40	Ex 8 M4x30	Fx26 M3x12
Gx38 M4x12	Hx16 M3x14	Ix5	Jx4 M6x18	Kx 2 M4x35	Lx36 M4x14
Mx 2	Nx4	Ox4	Px2	Qx2	Rx4
Sx8	Tx4	Ux2	Vx4	CLx2 300mm	CRx2 300mm
DLx2 300mm	DRx 2 300mm				

STEP 1

  Ax12


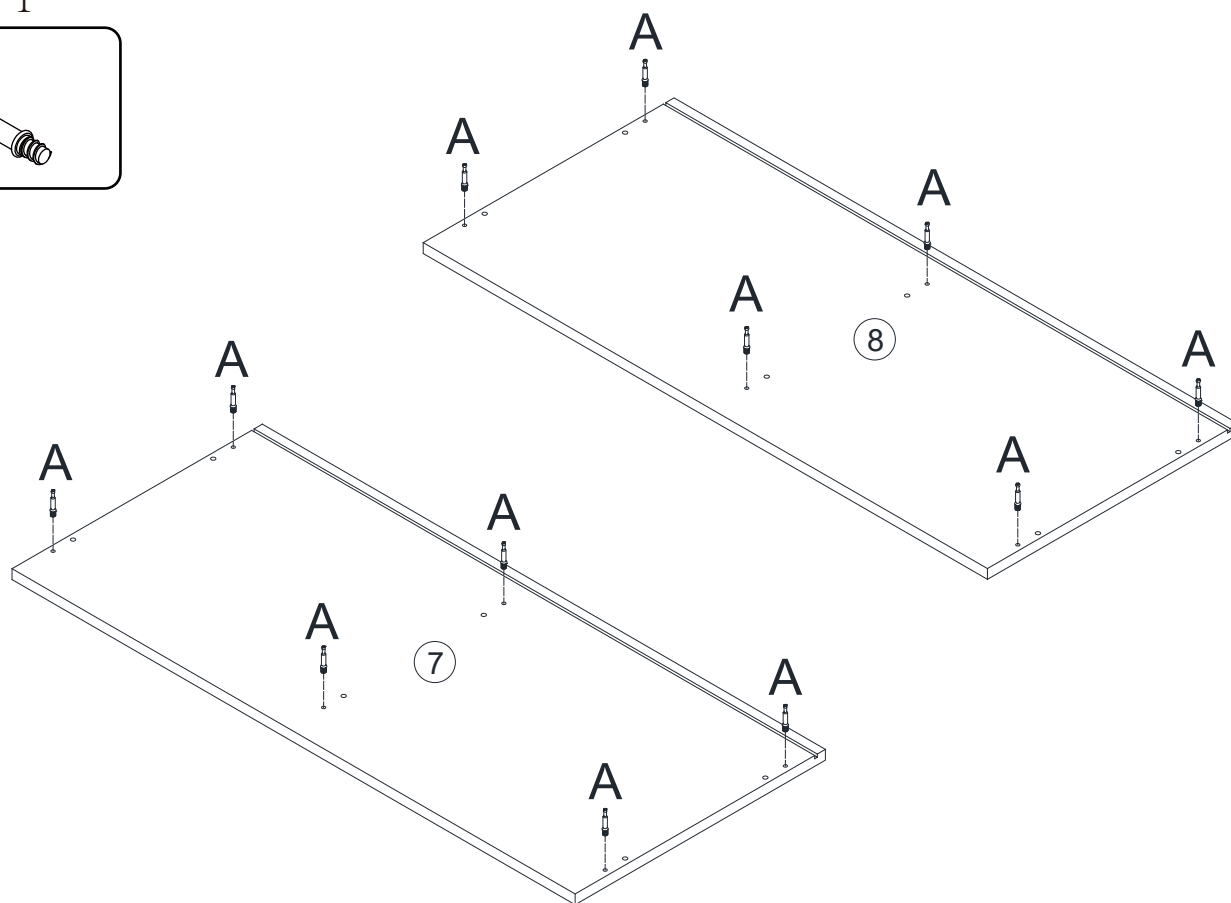



STEP 2


Bx6



   Cx6

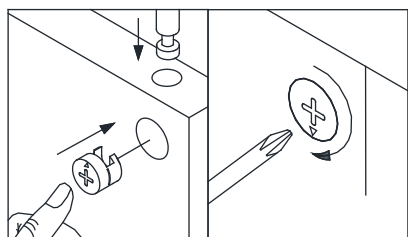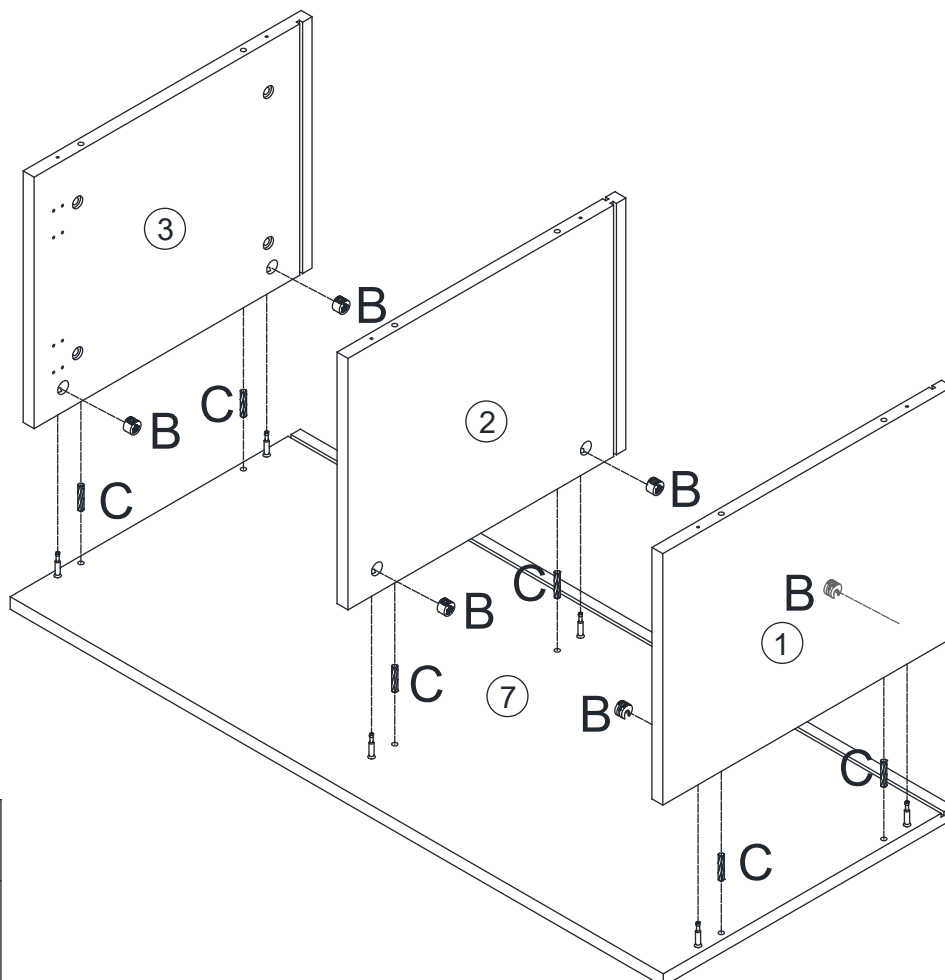

 STEP 3

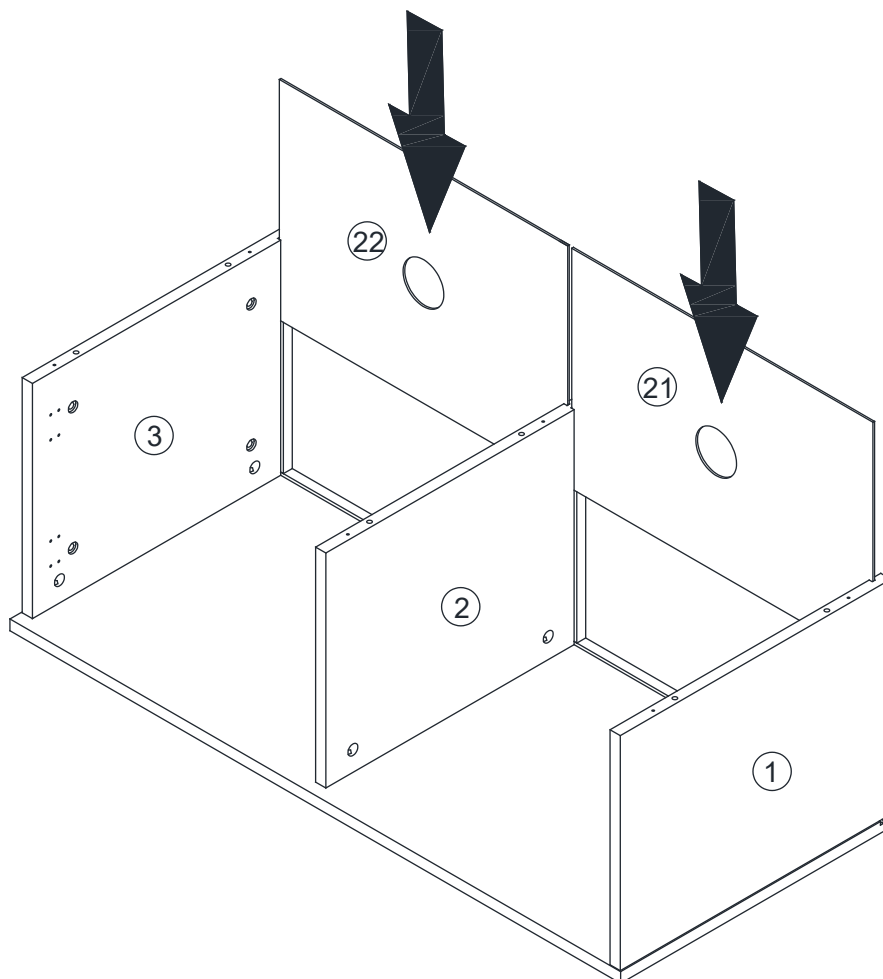


STEP 4

Dx6



 Cx6

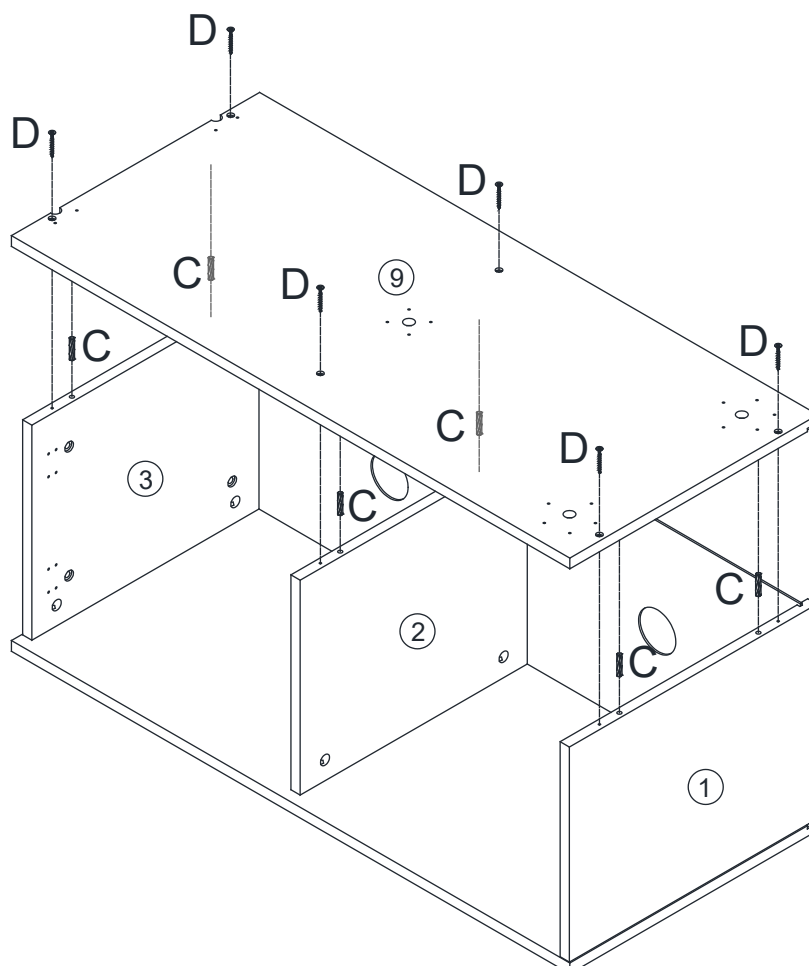


STEP 5

Fx8



 CLx2





300mm

CRx2



  300mm


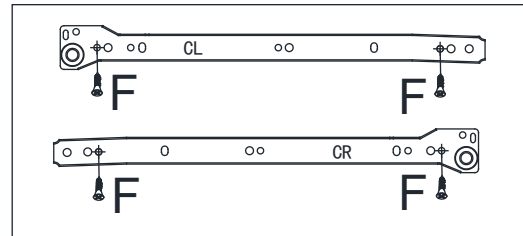
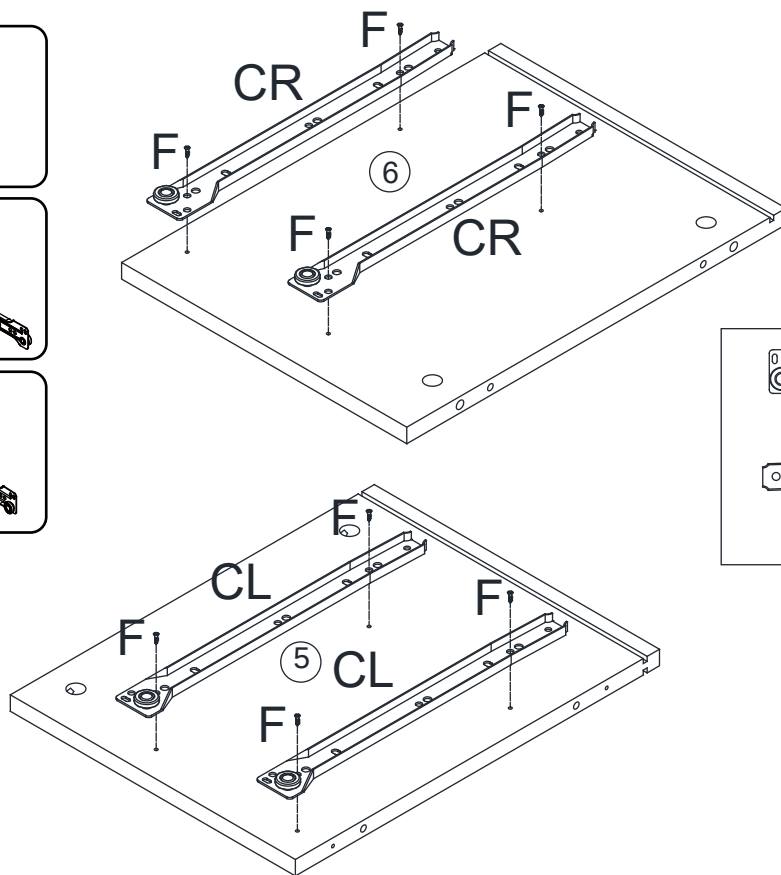


STEP 6


Bx6



 
 
 
Cx6

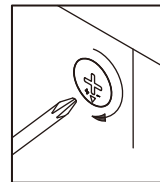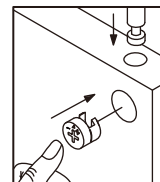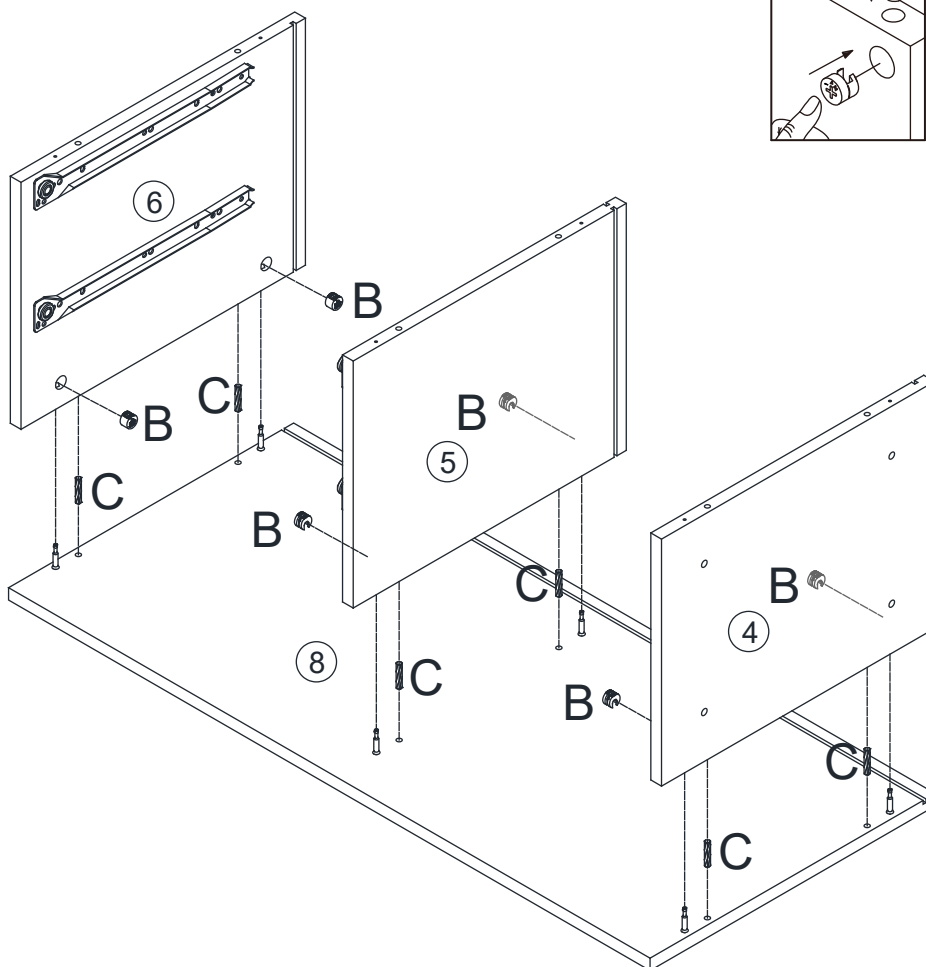






 
STEP 7

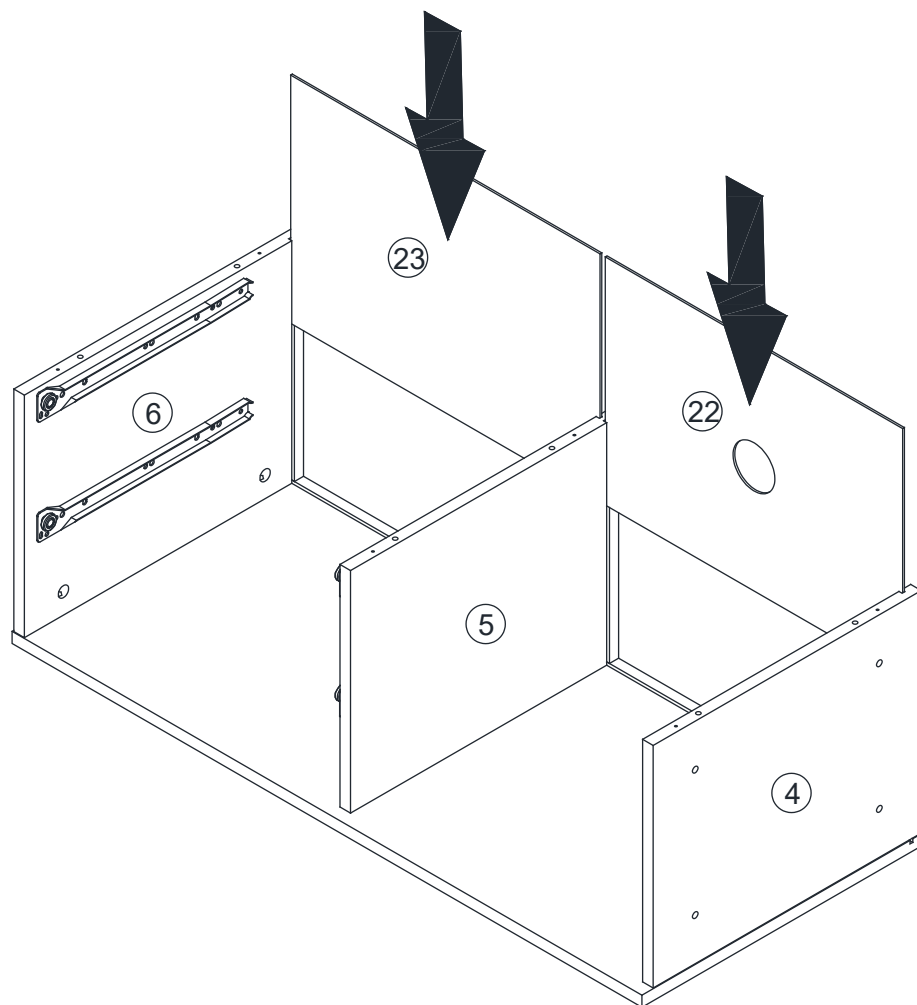


 
 
 
STEP 8

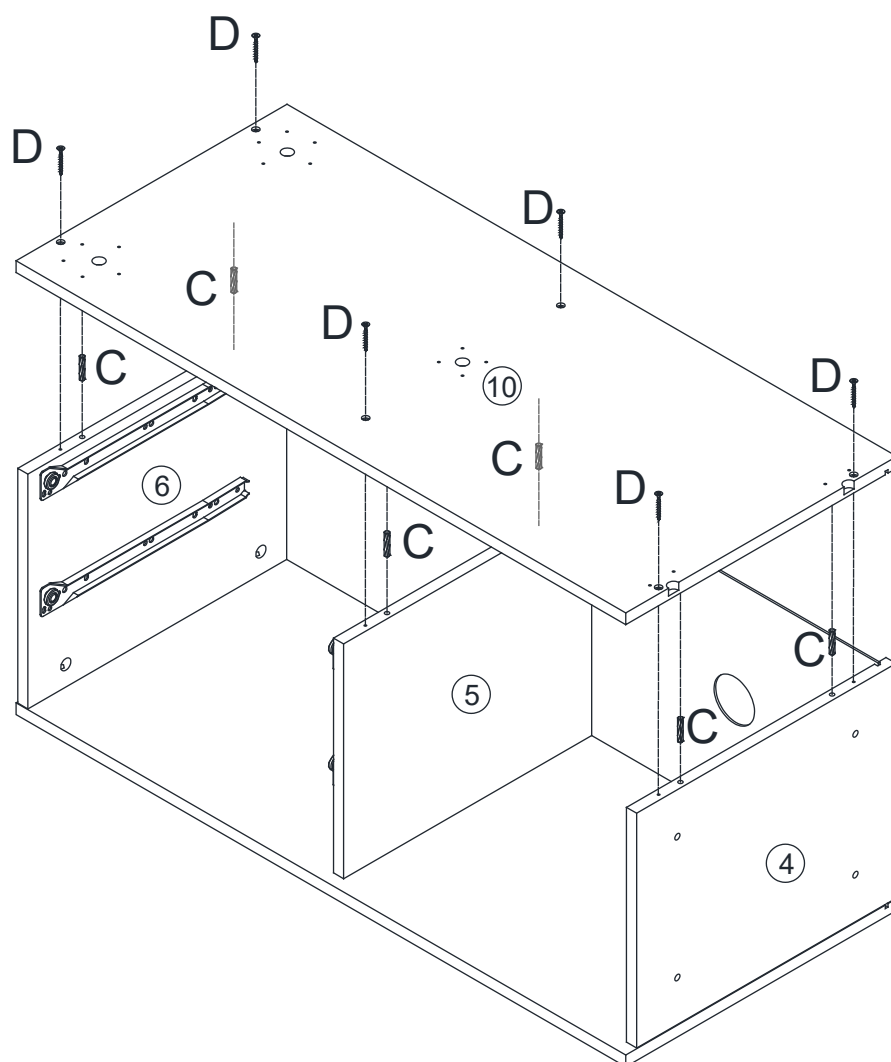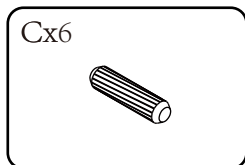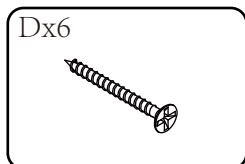

      STEP 9

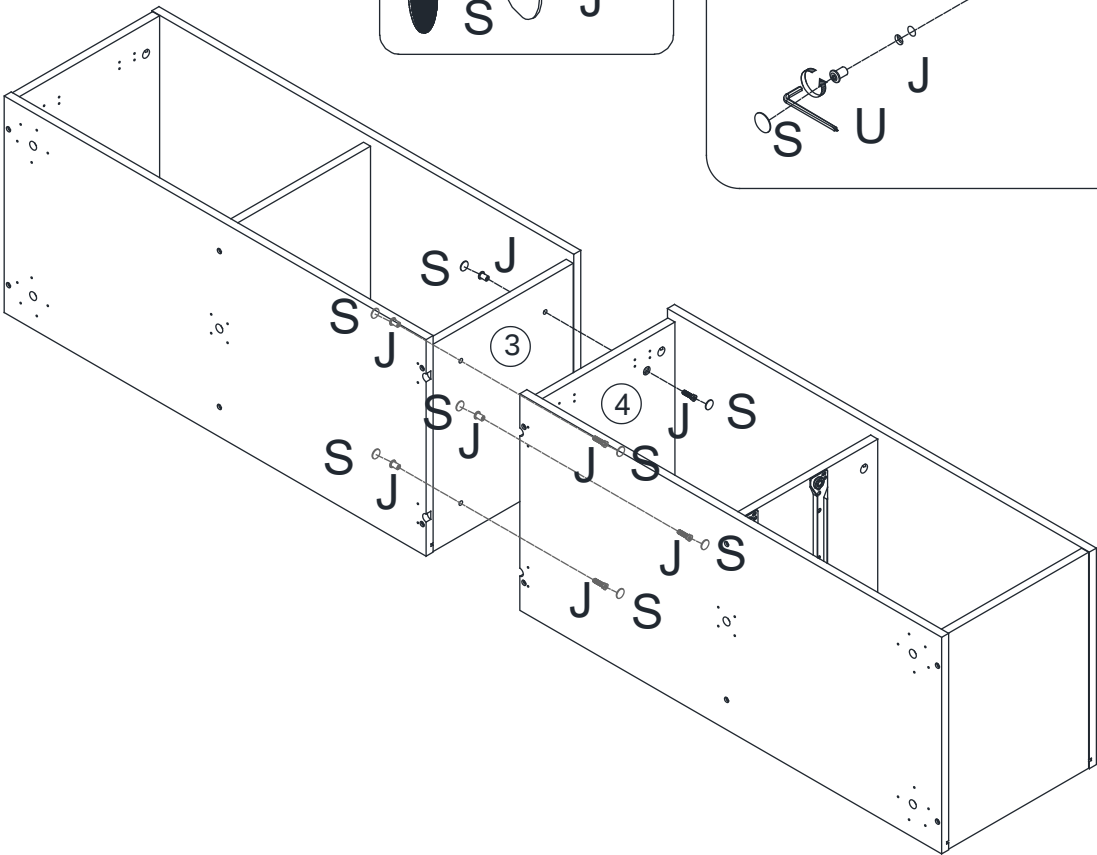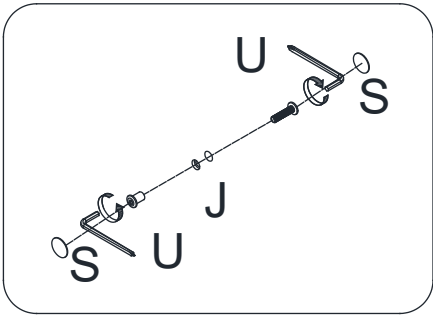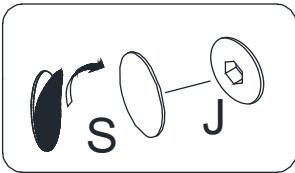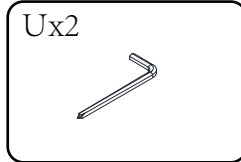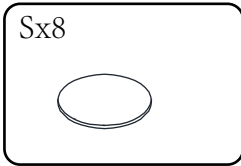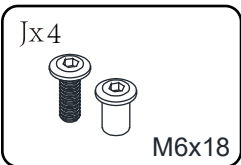

    
STEP 10

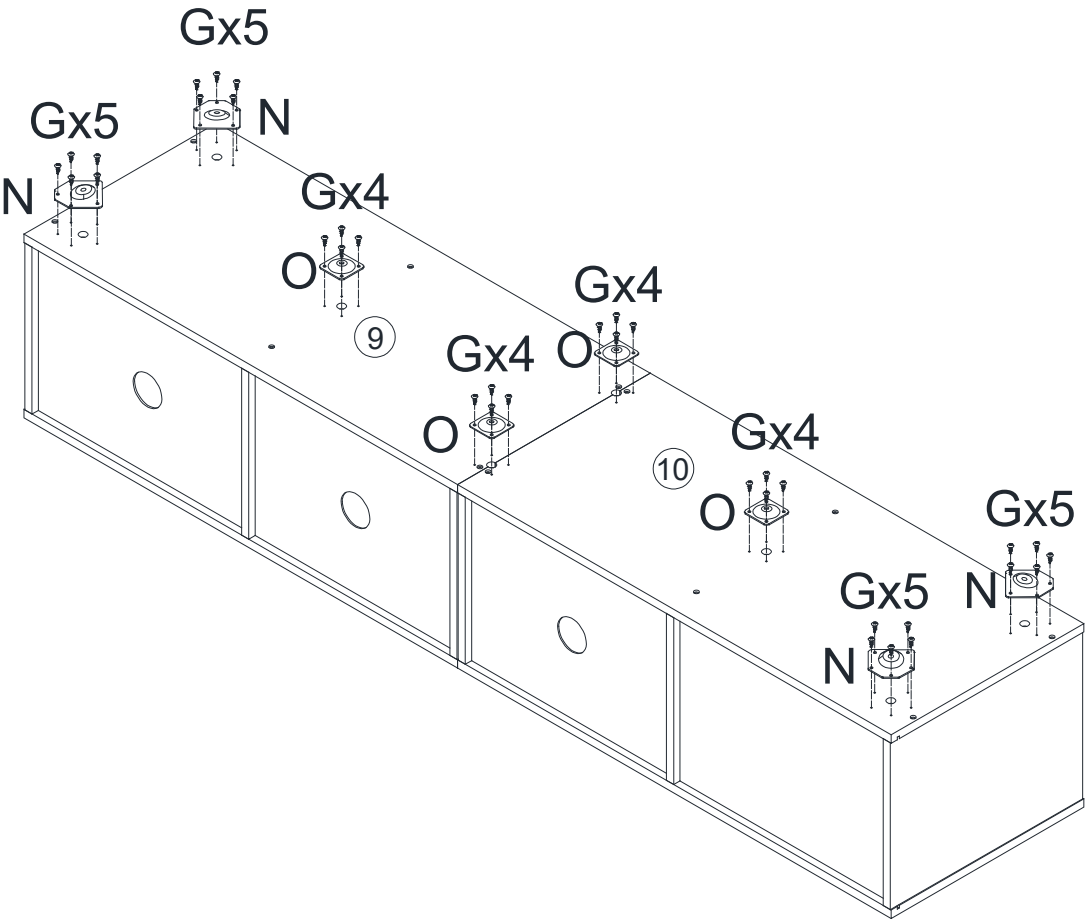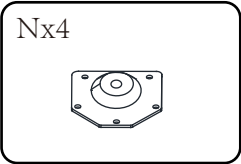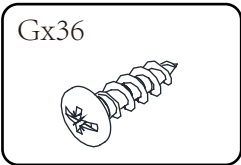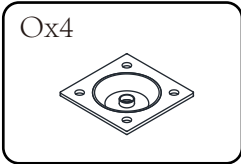

STEP 11

Rx4

 
Tx4

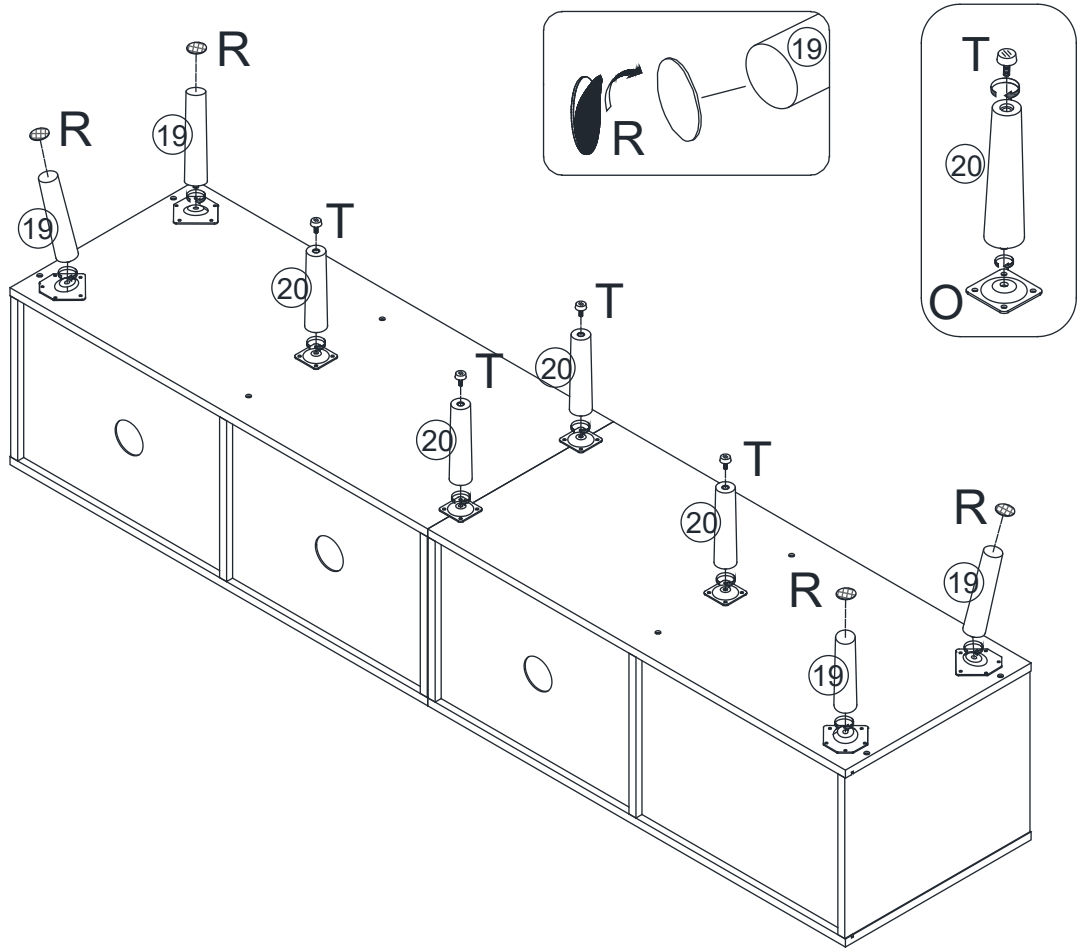
STEP 12

Mx2


Lx12


M4x14

 Vx4





Ix3


Fx6



 
M3x12

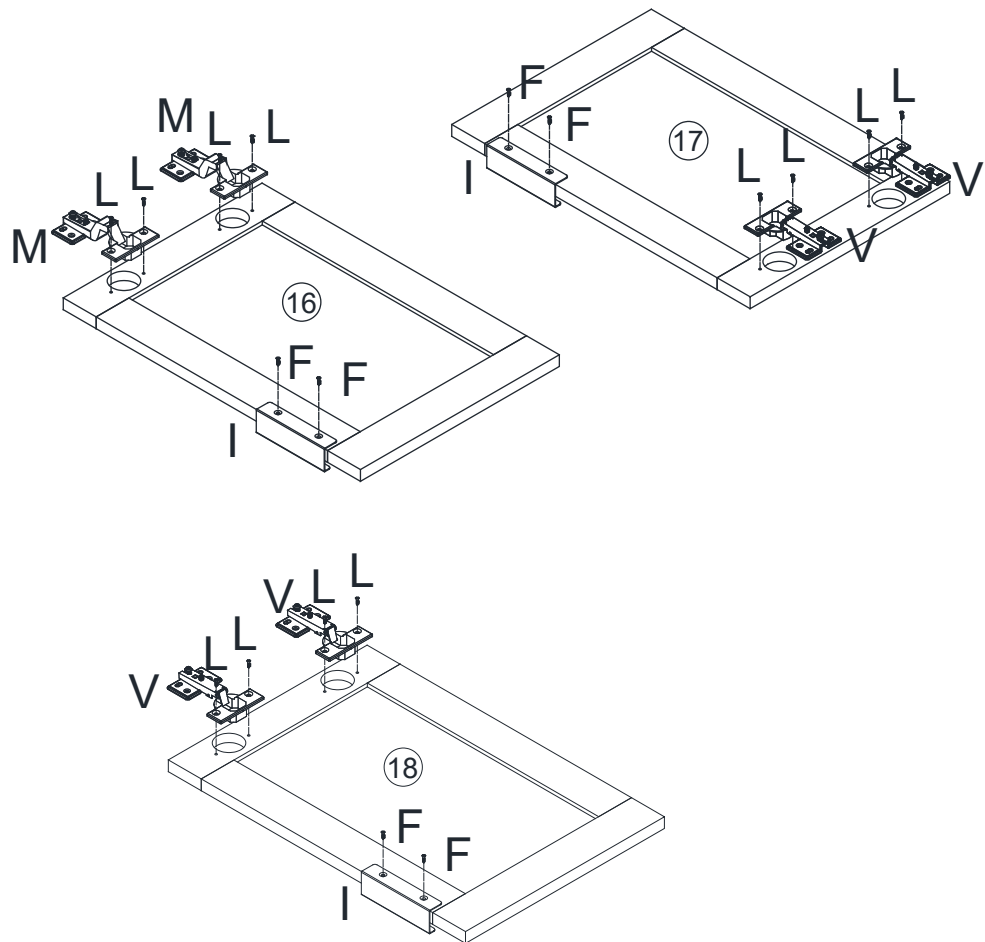

 
 
 
STEP 13

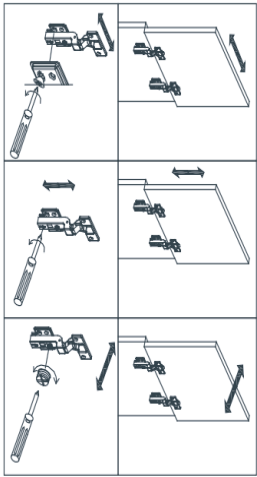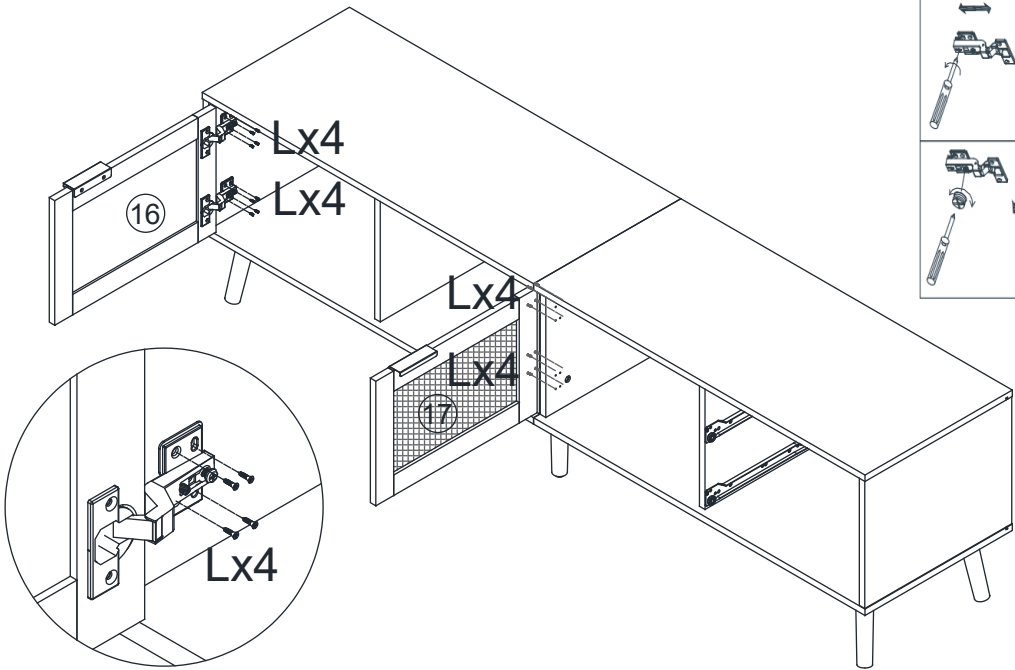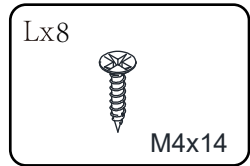




 
 
 
STEP 14

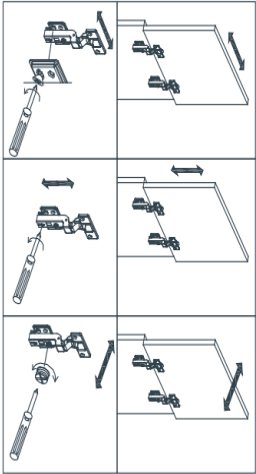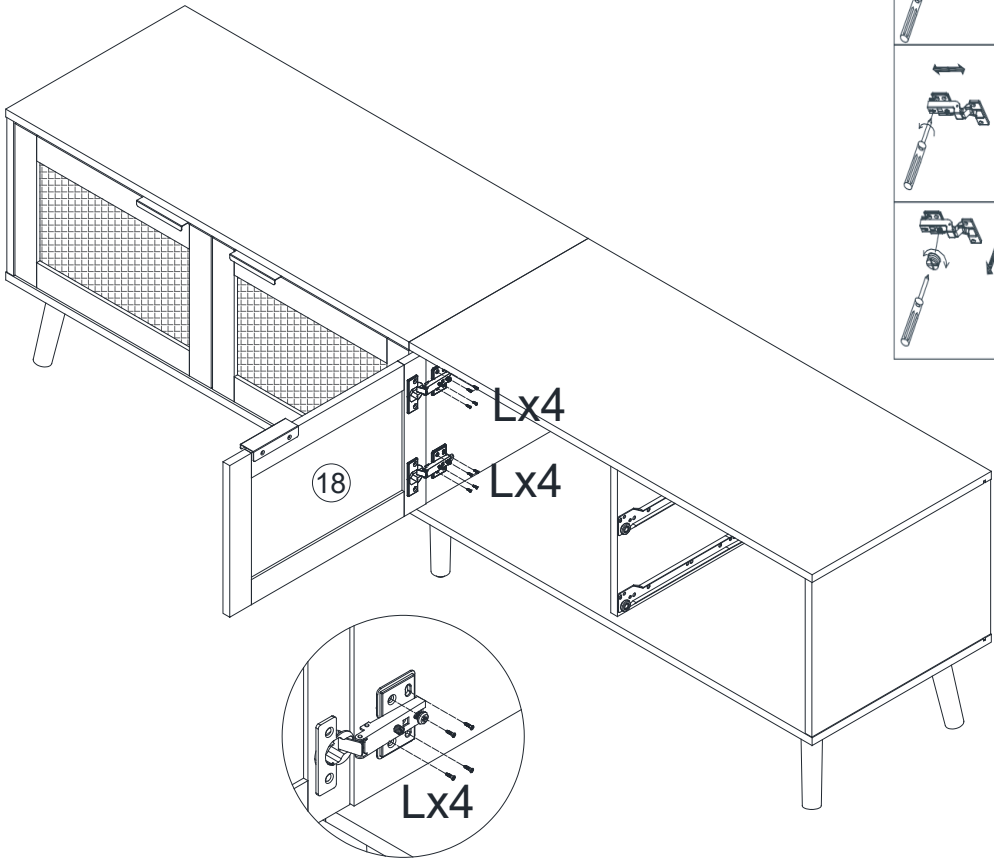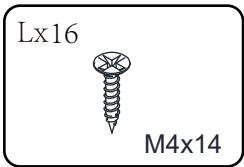

   STEP 15

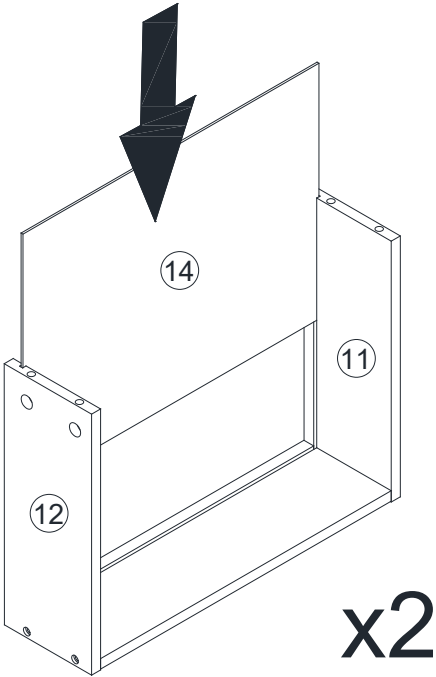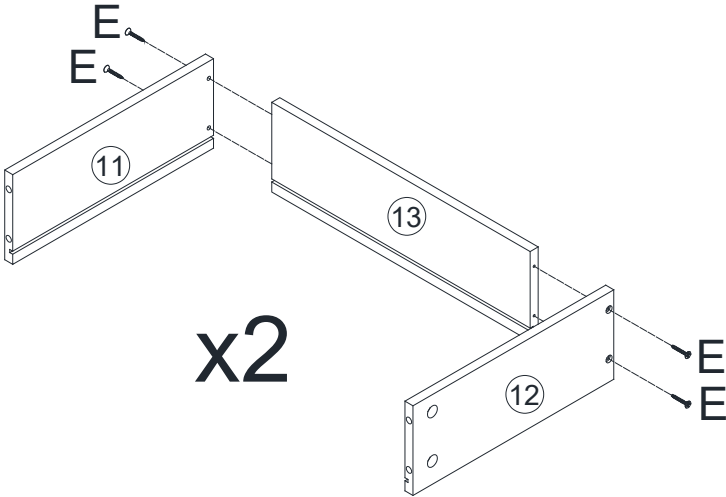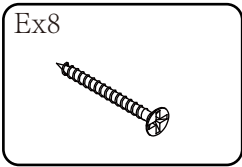


      STEP 16

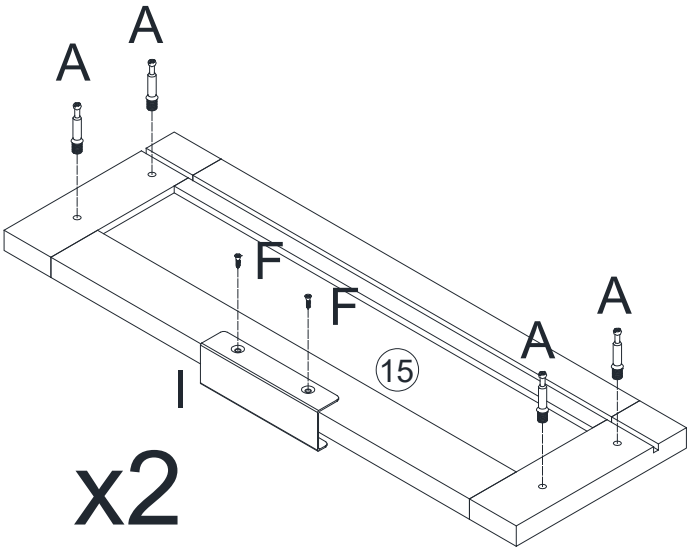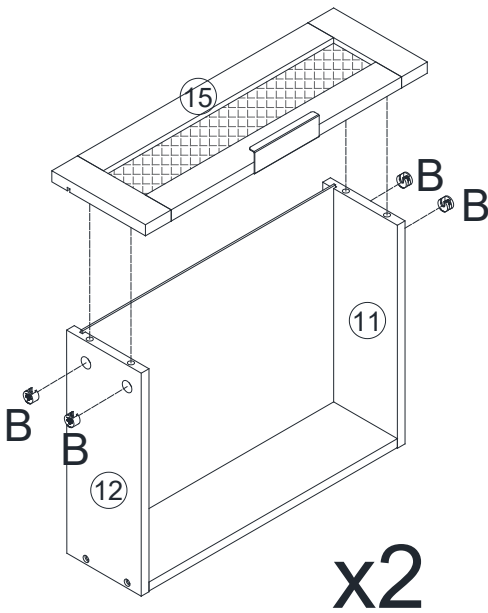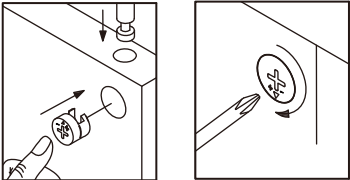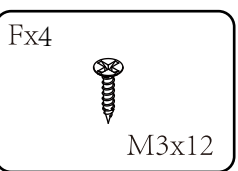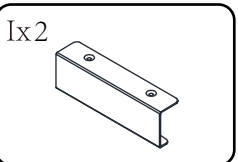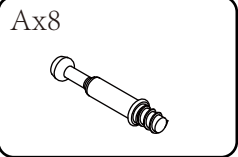


STEP 17


 
DRx2




DLx2

 

Fx8

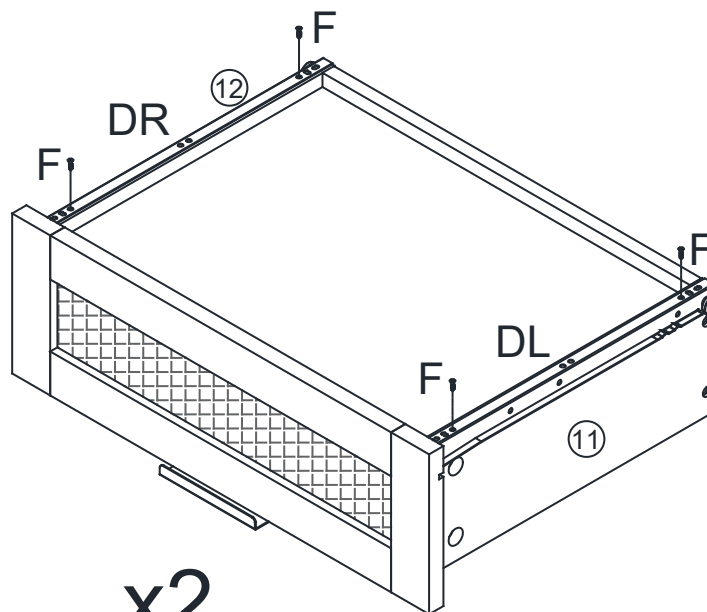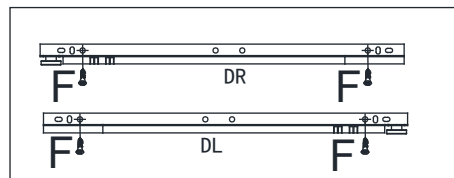  

 STEP 18

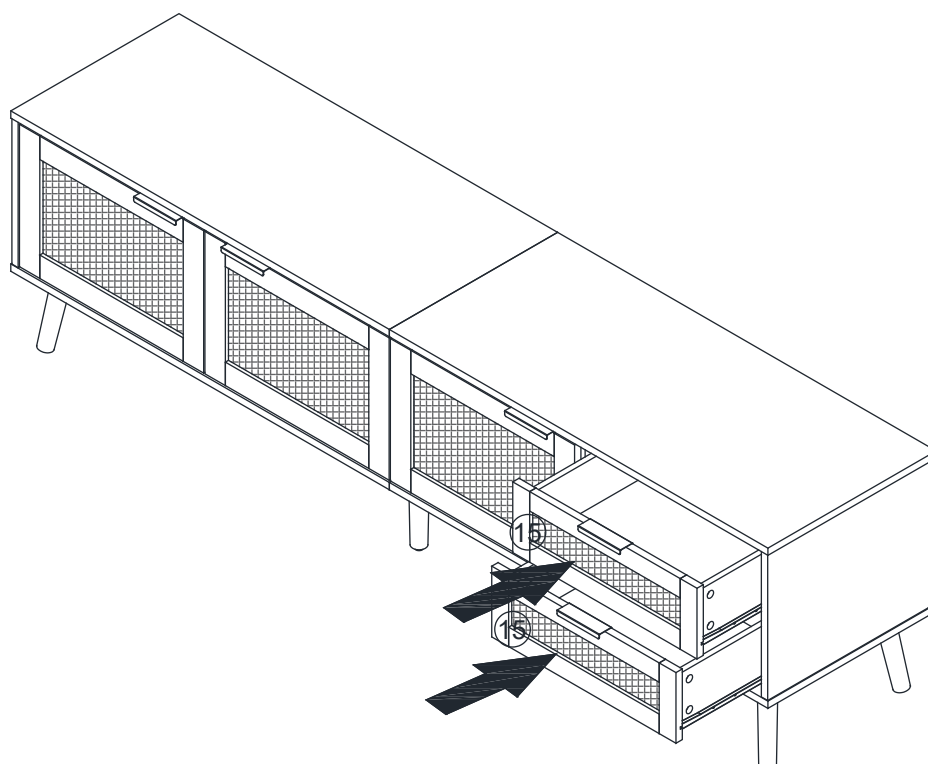

STEP 19


Gx2



Qx2



 Hx16

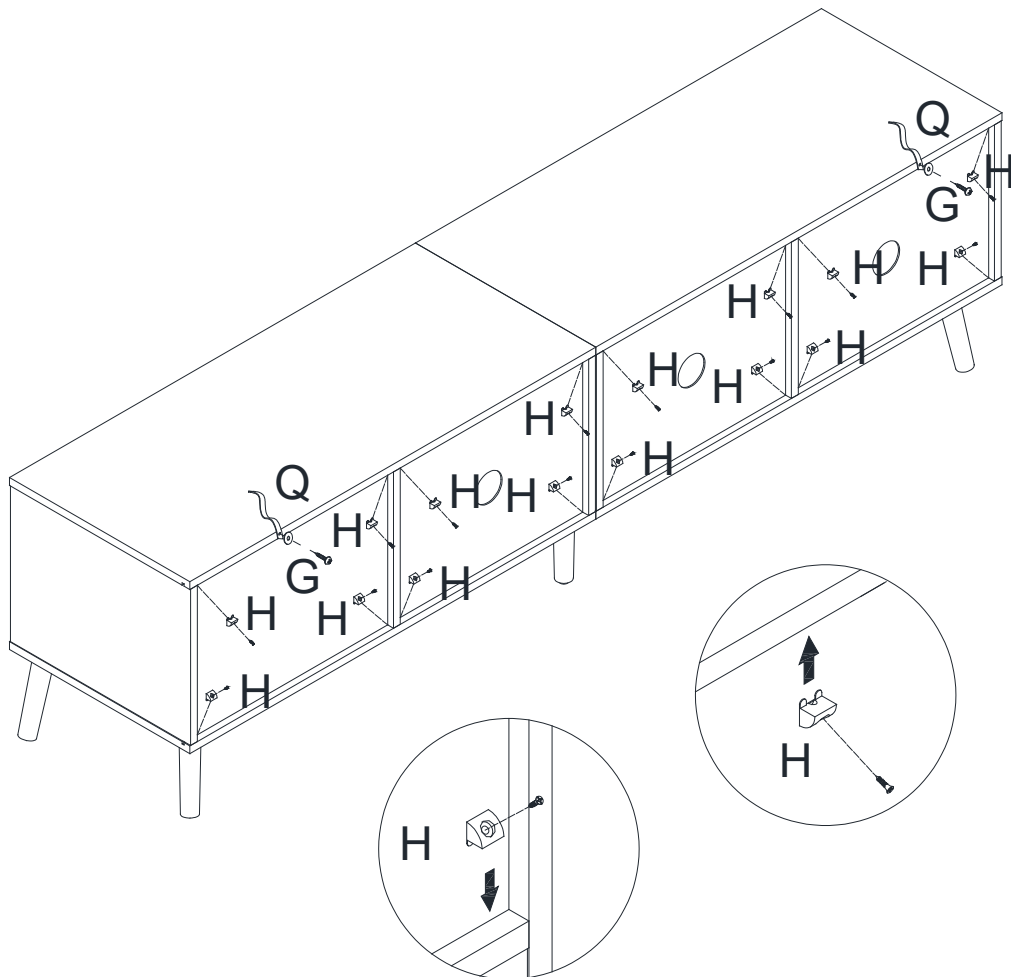


STEP 20


Kx2



 Px2

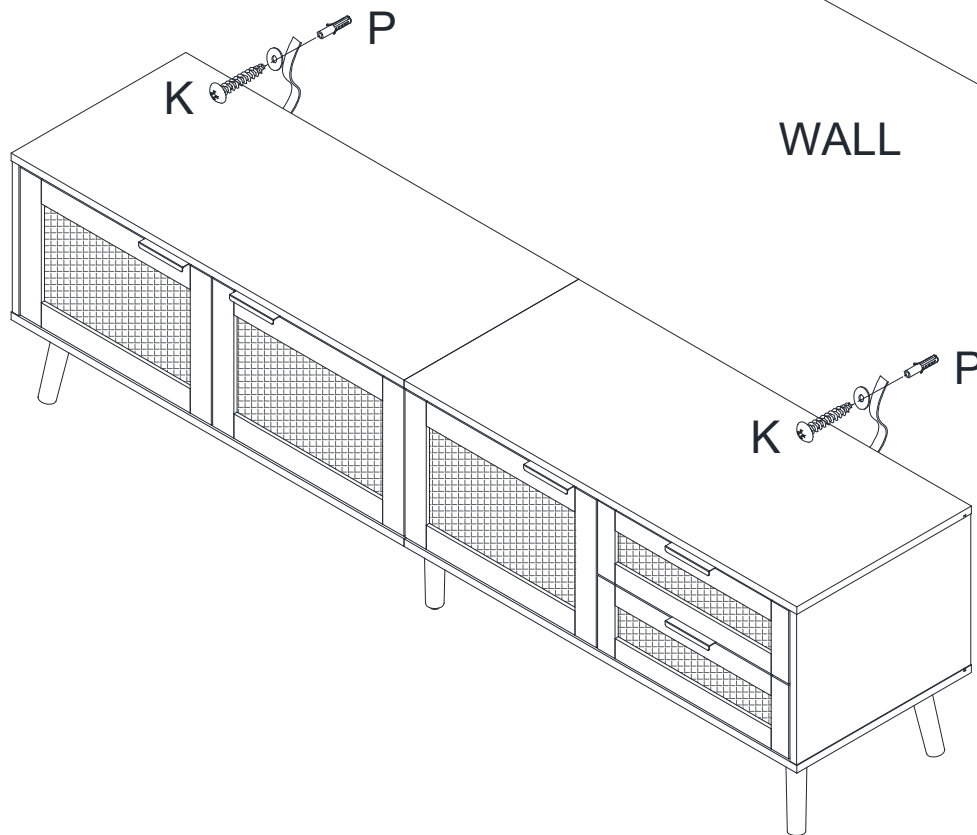


HINGE ADJUSTMENTS

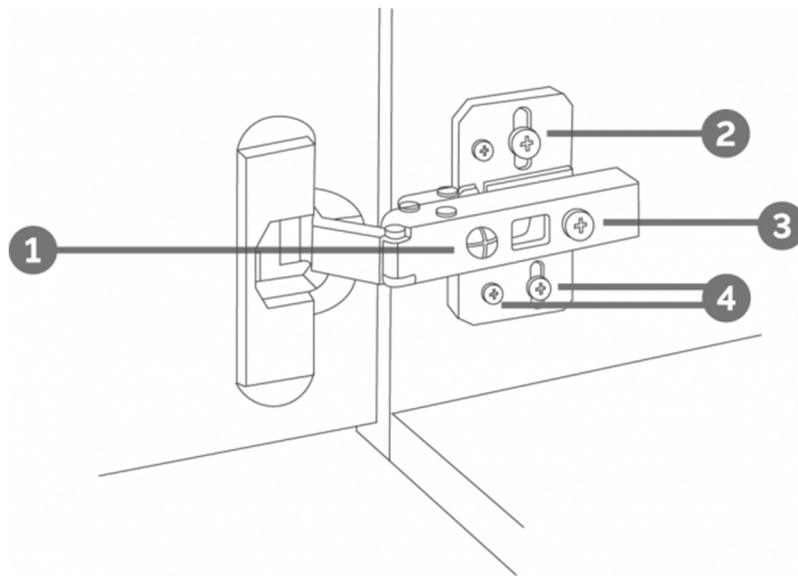 


① Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

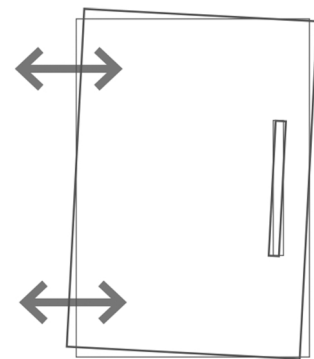

② ④ Height adjustment

 While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

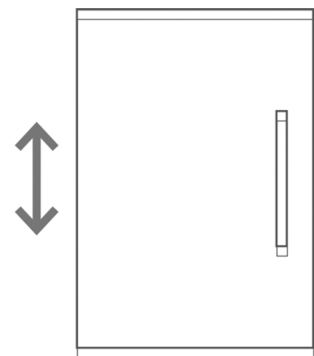

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

