






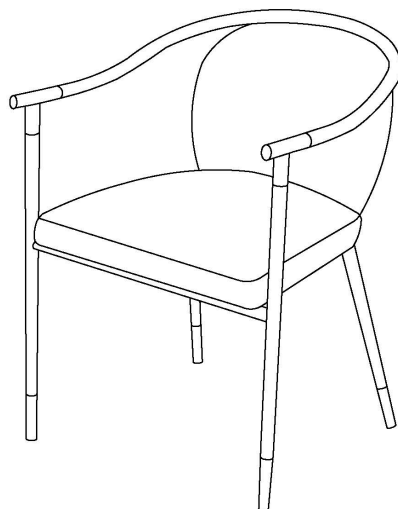
Assembly Instructions

Caution : You must read this before you proceed



Care & Maintenance

- | | |
|---|---|
| ⊘  | ● Not for commercial use. For residential use only. |
| ✓  | ● Furniture may scratch floors. We recommend using furniture pads to protect your floors. |
| ⊘  | ● Do not put hot items directly on furniture surface. |
| ⊘  | ● Do not clean furniture with harsh cleansers or polish. |
| ⊘  | ● Do not place furniture under direct sunlight. |
| ⊘  | ● Do not place furniture near heating or cooling vents. |
| ⊘  | ● Do not write on furniture without a padded barrier to protect the surface. |
| ⊘  | ● Do not place furniture outside . For indoor use only. |
| ⊘  | ● Stains may be removed with mild soap solution and damp cloth. |
| ⊘  | ● Children should not climb or jump on the furniture. |
-
- | | |
|---|--|
| ✓  | ● Dust and pick-up spills using a clean, non-colored, lint-free cloth. |
|---|--|





Dining Chair



Parts List


Label	Picture	Description	QTY
A		Seat and Backrest	1
B		Back Leg	1

 Hardware

Label	Picture	Description	QTY
①		Bolt (M6*35mm)	5
②		Spring Washer(M6)	5
③		Washing Ring	5
④		Allen Wrench	1

Assembly Preparation

Before
Beginning
Assembly:

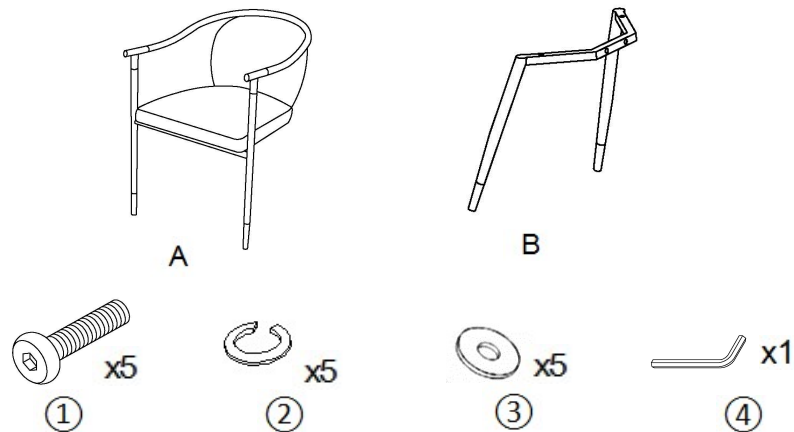

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

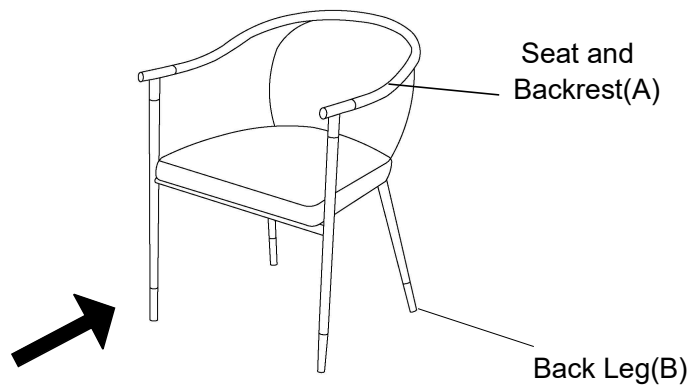


FRONT FACING

This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Leisure Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

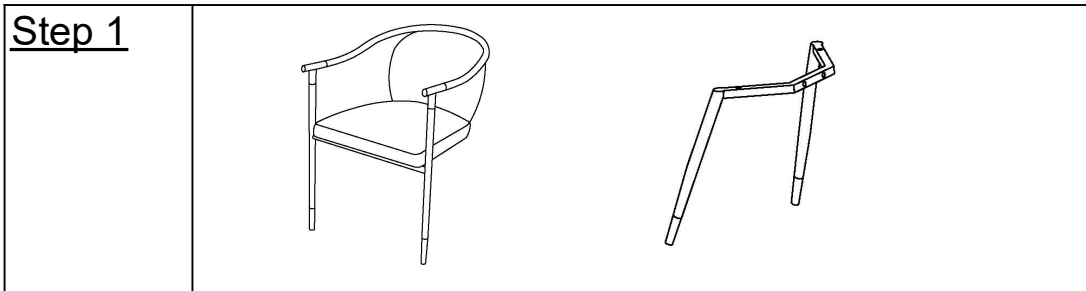


Unpack and place all parts on a clean, non-marring surface.

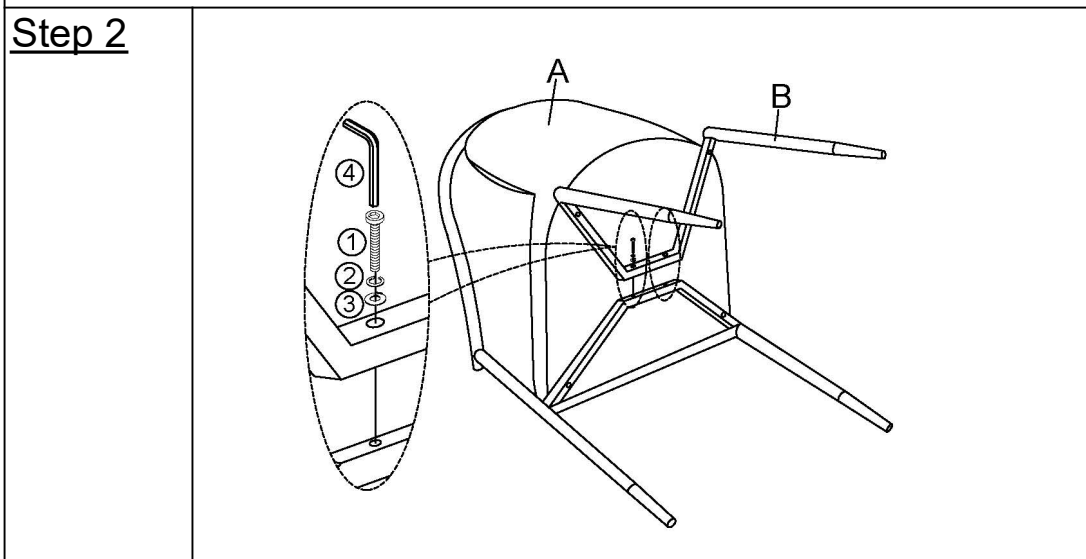


Attach Back Leg(B) to the Seat and Backrest(A) using Bolt(①), Spring Washer(②), Washing Ring(③) With Allen Wrench(④) as shown above. After all Bolts are in place, use Allen Wrench(④) to tighten Bolts on Back Leg(B) fully.

Note: Do not fully tighten the Bolts in this step.

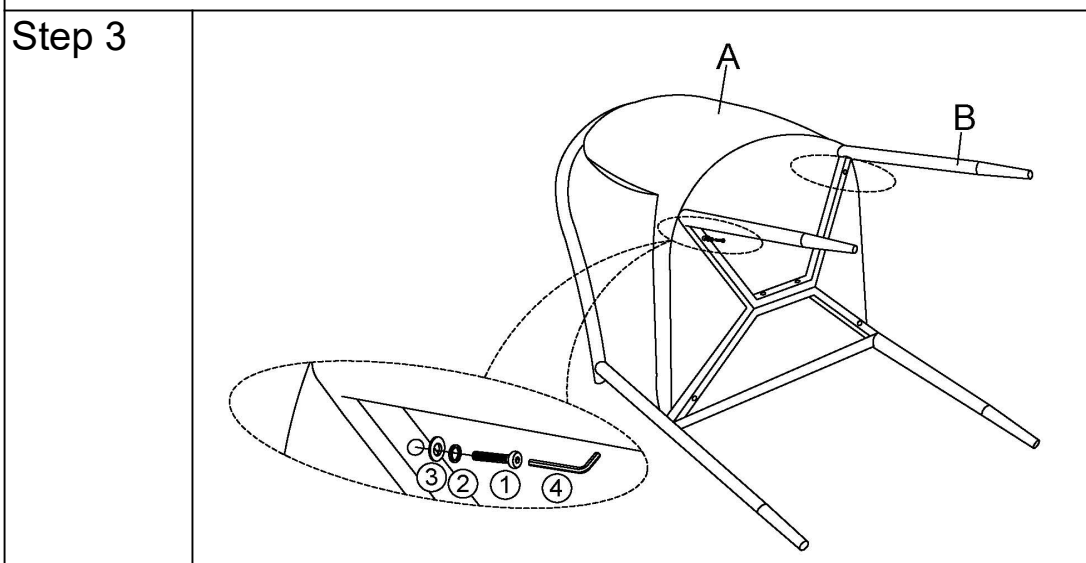


Using Bolt(①), Spring Washer(②), Washing Ring(③) With Allen Wrench(④) to fix Back Leg(B) to the Seat and Backrest(A) as shown above.
After all Bolts are in place,use Allen Wrench(④) to tighten Bolts on Back Leg(B) fully.

Step 4

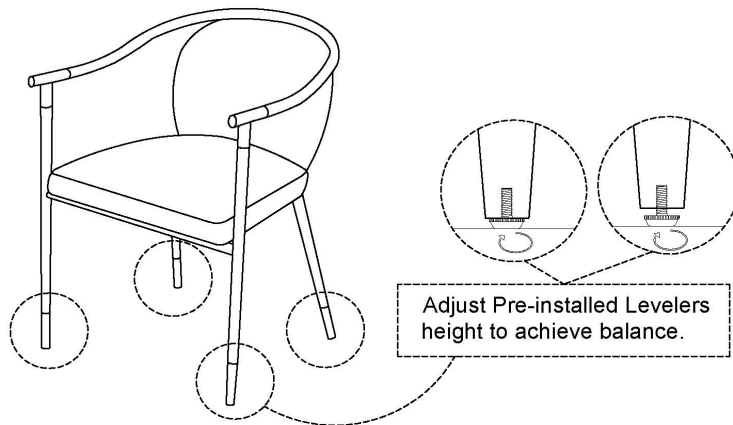

With assistance from your adult partner, stand the Dining chair up. Adjust the Pre-installed Levelers at the bottom of Leg until the Chair is level with the ground.
Tighten all bolts sequentially.

Step 5

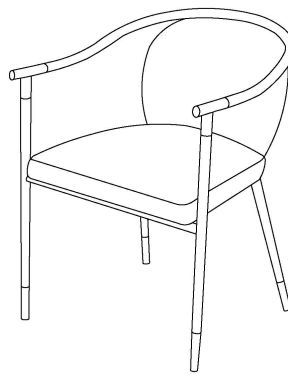

Your Chair is ready for use.
This Chair can only be used on a flat, level surface.