

C4029WD ASSEMBLY INSTRUCTION

We believe you will absolutely love your new furniture. Please immediately examine this product carefully. Any request for missing part or damage replacement must be received within 90 days of your receipt of the product. For some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service team can answer most concerns and can assist you with any questions you may have about your new product.

Please contact us first by emailing service@casepiece.com

Have these ready when you email:

- Item Number
- PO #
- Purchaser Name
- Proof of Purchase
- Description of the problem and/or the Part Number needed

Replacements for missing or damaged parts or hardware are normally shipped within 3 to 5 business days and we thank you for your patient.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

90-Day Limited Warranty Statement for Manufacturing Defects

Please read this Limited Warranty carefully. To maintain your Warranty, you will need to comply with the conditions stated here.

This warranty is for manufacturing defects only and does not cover damages as a result of misuse.

1. Our products sold comply with the description contained in this Warranty. All parts and products are warranted 90-Day from the original date of delivery except: parts and products used for commercial, contract, rental trade, institutional, or any other non-residential purposes; parts and products that have not been maintained in accordance with the care recommendations provided; parts and products damaged resulting from the consumer's improper assembly; or parts and products that are damaged or defective due to normal wear and tear.

 

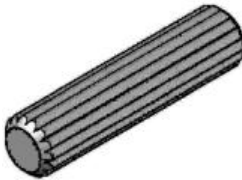 

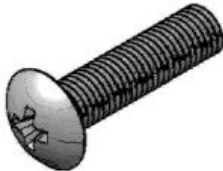 
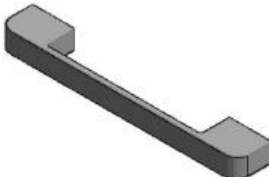 




2. To exercise rights under this warranty, proper documentation, i.e., photography, purchase order number, manufacturer's bar code label, and or any other pertinent information upon request is required. We reserve the right to repair or replace the product within the warranty period based upon the documentation received as support of a claim for consideration. We will not replace or repair any product if improper maintenance, improper handling, or improper use caused the damage. Any product sold from or modified by a Non-Authorized Dealer, Seller or Consumer will void the Warranty.

3. Cost of packaging and shipping to and from us is not covered by the warranty unless expressly arranged by us. This warranty does not extend to furniture that has been exchanged or replaced by us as settlement of an original claim of defective merchandise. This warranty does not extend to furniture that has been moved from delivery location on original purchase order.

We appreciate your business!


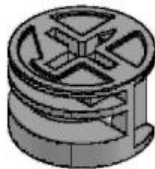


C4029WD ASSEMBLY INSTRUCTION

HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		36 PCS
B	MINIFIX CAM BOLT		36 PCS
C	WOOD DOWEL (M6 x 25MM)		24 PCS
D	WOOD DOWEL (M8 x 25MM)		16 PCS
E	TRUSS M-SCREW (18MM)		6 PCS
F	HANDLE		3 PCS
G	6/8" NAIL		18 PCS
H	JCBC SCREW (M6 x 35MM)		6 PCS
I	JCBC SCREW (M6 x 15MM)		4 PCS
J	PANHEAD SCREW (M4 x 32MM)		4 PCS




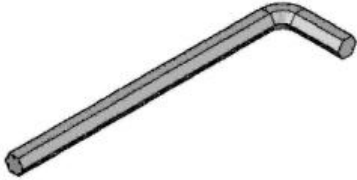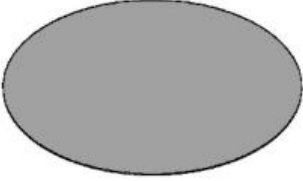  





C4029WD ASSEMBLY INSTRUCTION

 HARDWARES LIST

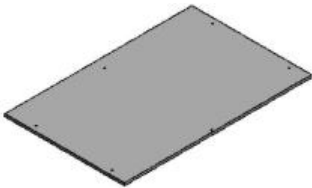ITEM	DESCRIPTION	DRAWING	QTY
K	M4 ALLEN KEY (65MM)		1 PC
L	STICKER		8 PCS
M	JCBC SCREW (M6 x 45MM)		4 PCS
22	LEG		4 PCS

   

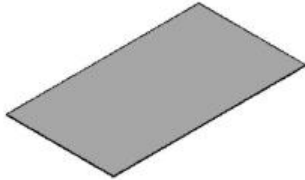 


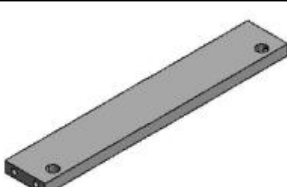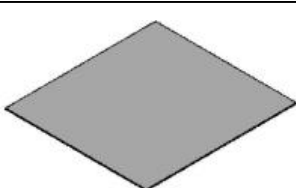


C4029WD ASSEMBLY INSTRUCTION

PARTS LIST COFFEE TABLE

ITEM	DESCRIPTION	DRAWING	QTY
1	TABLE TOP		1 PC
2	TOP PANEL		1 PC
3	MIDDLE PANEL		1 PC
4	BOTTOM PANEL		1 PC
5	SIDE LEFT PANEL		1 PC
6	SIDE RIGHT PANEL		1 PC
7	VERTICAL PANEL		3 PCS
8	SUPPORT PANEL		2 PCS
9	DRAWER BOTTOM PANEL		3 PCS

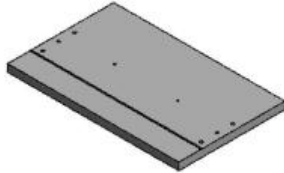C4029WD ASSEMBLY INSTRUCTION

 
PARTS LIST END TABLE

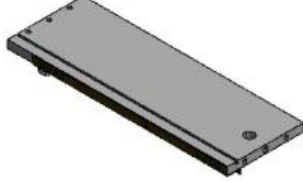ITEM	DESCRIPTION	DRAWING	QTY
10	DRAWER HEAD		3 PCS
11	DRAWER BACK PANEL		3 PCS
12	BACK PANEL		1 PC
13	(X) METAL SUPPORT LEG		1 PC
14	LONG METAL LEG		2 PCS
15	SIDE METAL LEG		2 PCS
19	DRAWER LEFT PANEL		3 PCS
20	DRAWER RIGHT PANEL		3 PCS


*Note: All parts needed are shown in above picture.
Numbers only indicate the specific parts for easy assembly.

ASSEMBLY TOOLS REQUIRED

 1. Screwdriver (not provide)




 2. Hammer (not provide)




C4029WD ASSEMBLY INSTRUCTION

 NOTE : - The outer board is for protection of packaging only, not part of furniture. Please throw it before assembly.


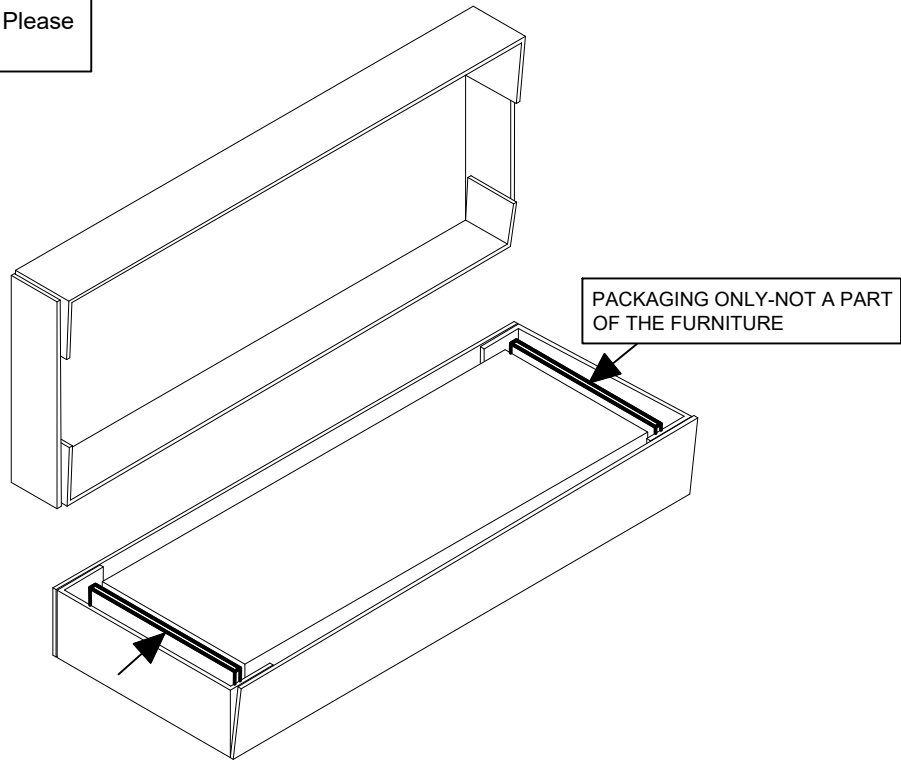


 STEP 1

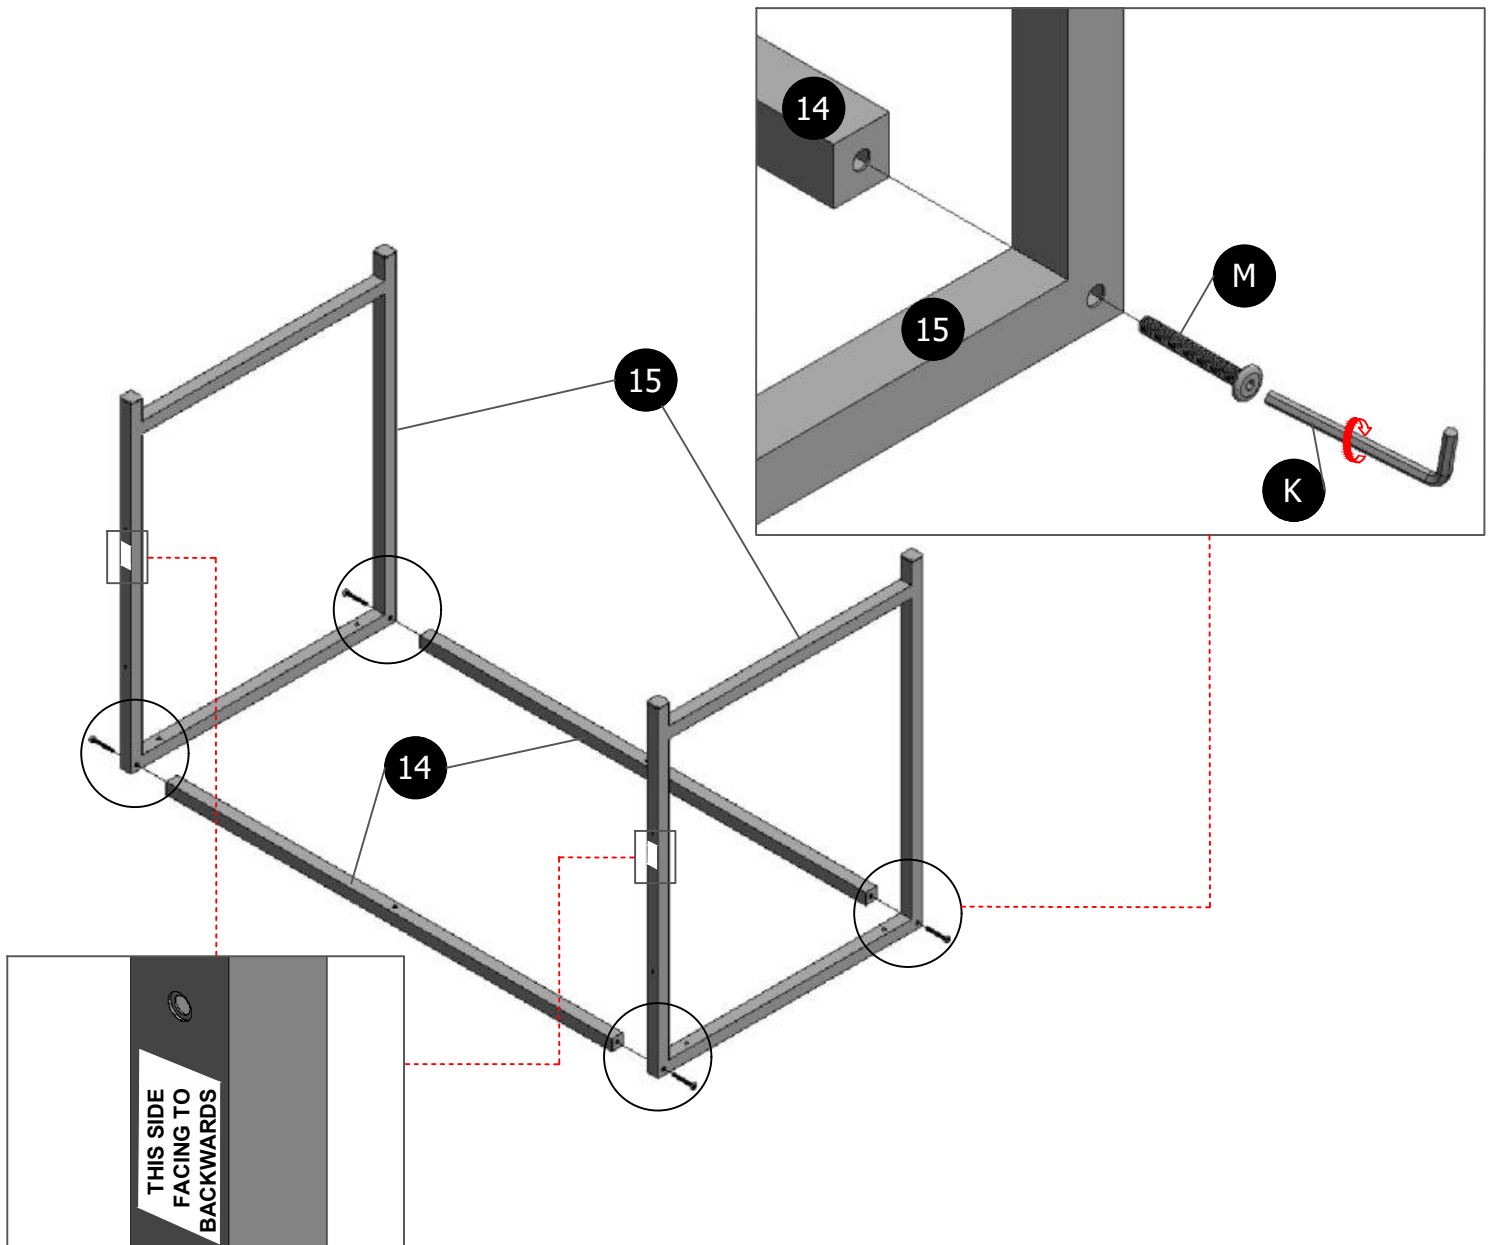



C4029WD ASSEMBLY INSTRUCTION

  STEP 2

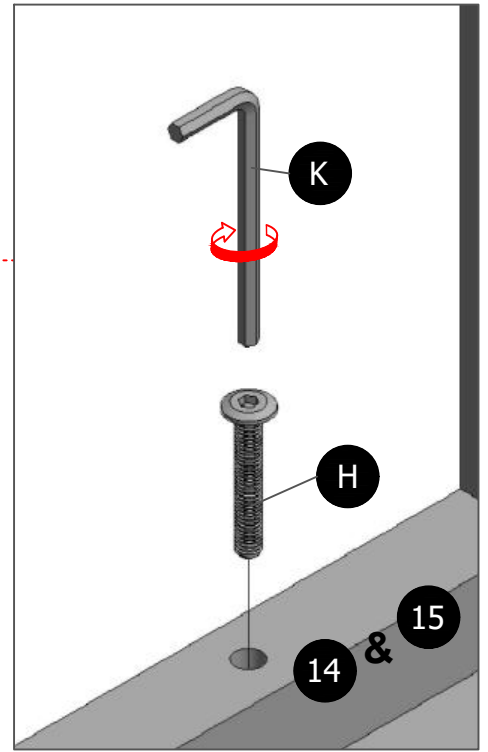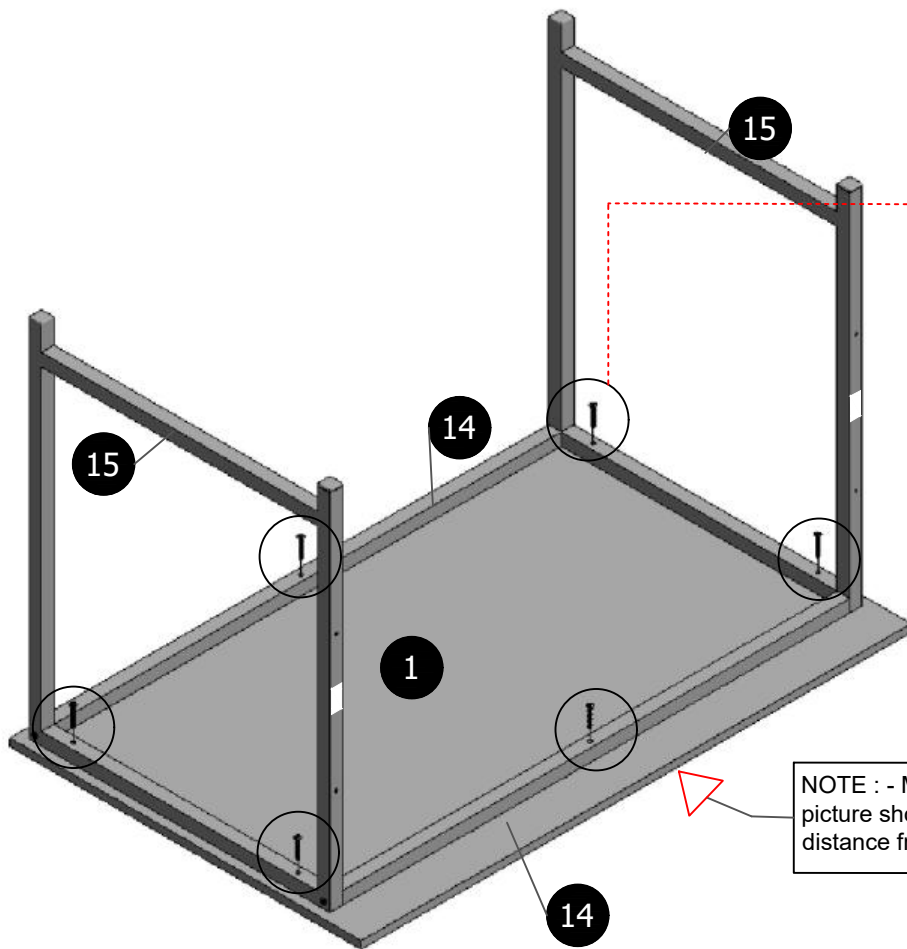

NOTE : - Make sure side metal leg (15) facing like picture shown. The back table top (1) had a big distance from long metal (14)

  STEP 3

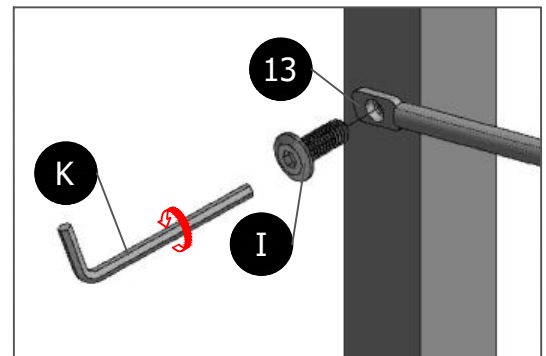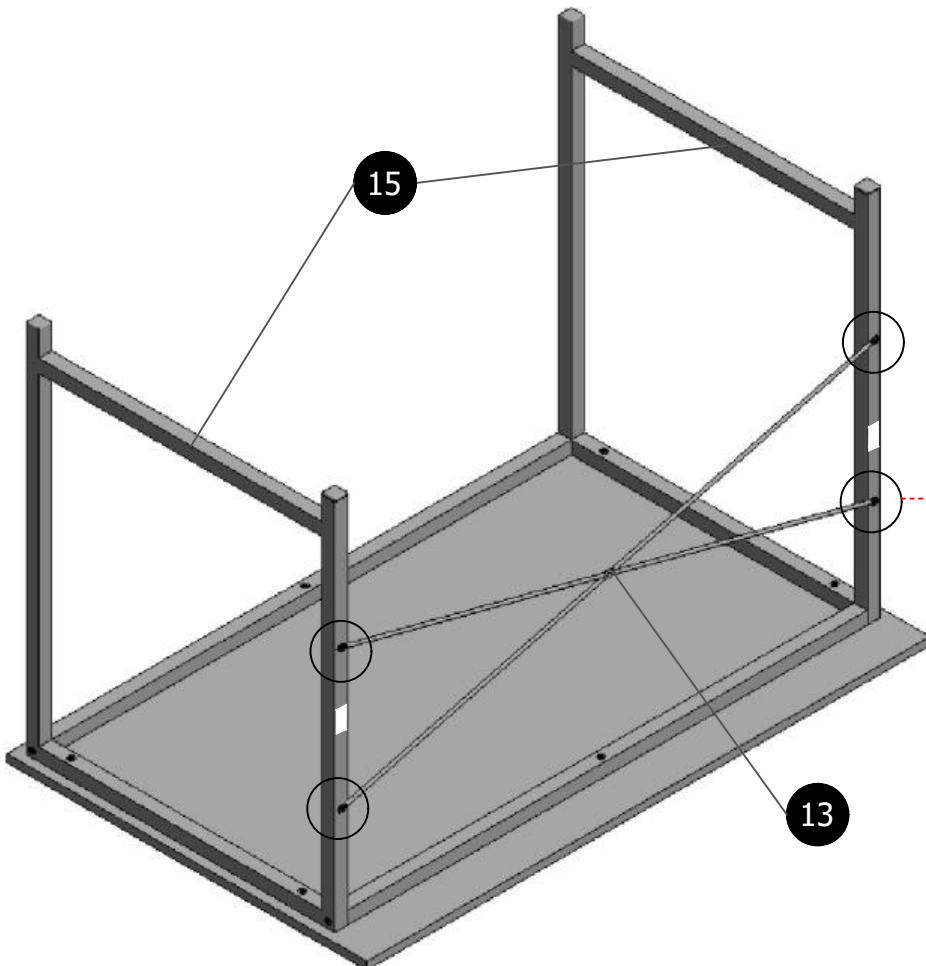


C4029WD ASSEMBLY INSTRUCTION

STEP 4




 STEP 5

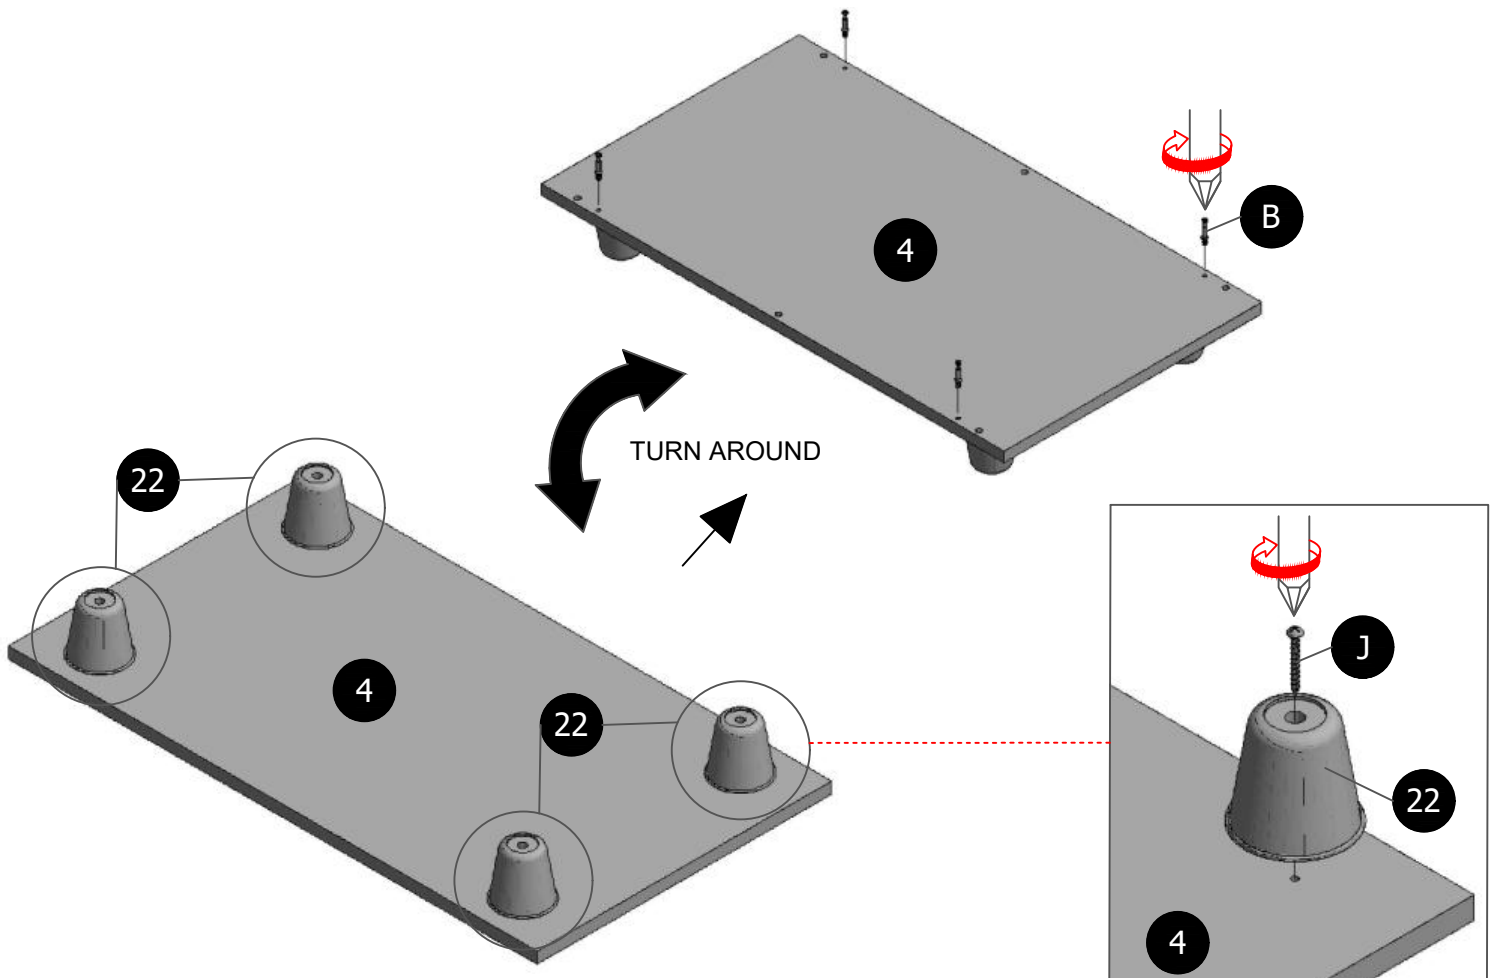


C4029WD ASSEMBLY INSTRUCTION

 STEP 6

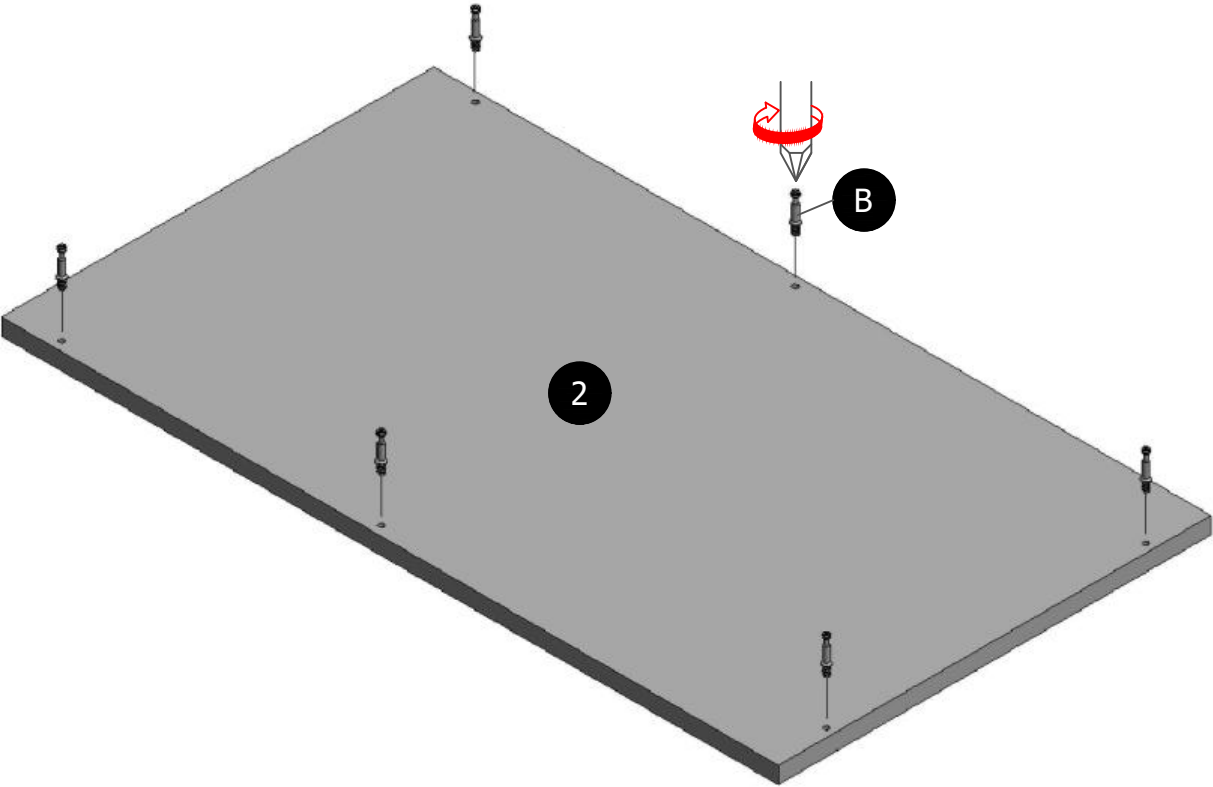

 
STEP 7

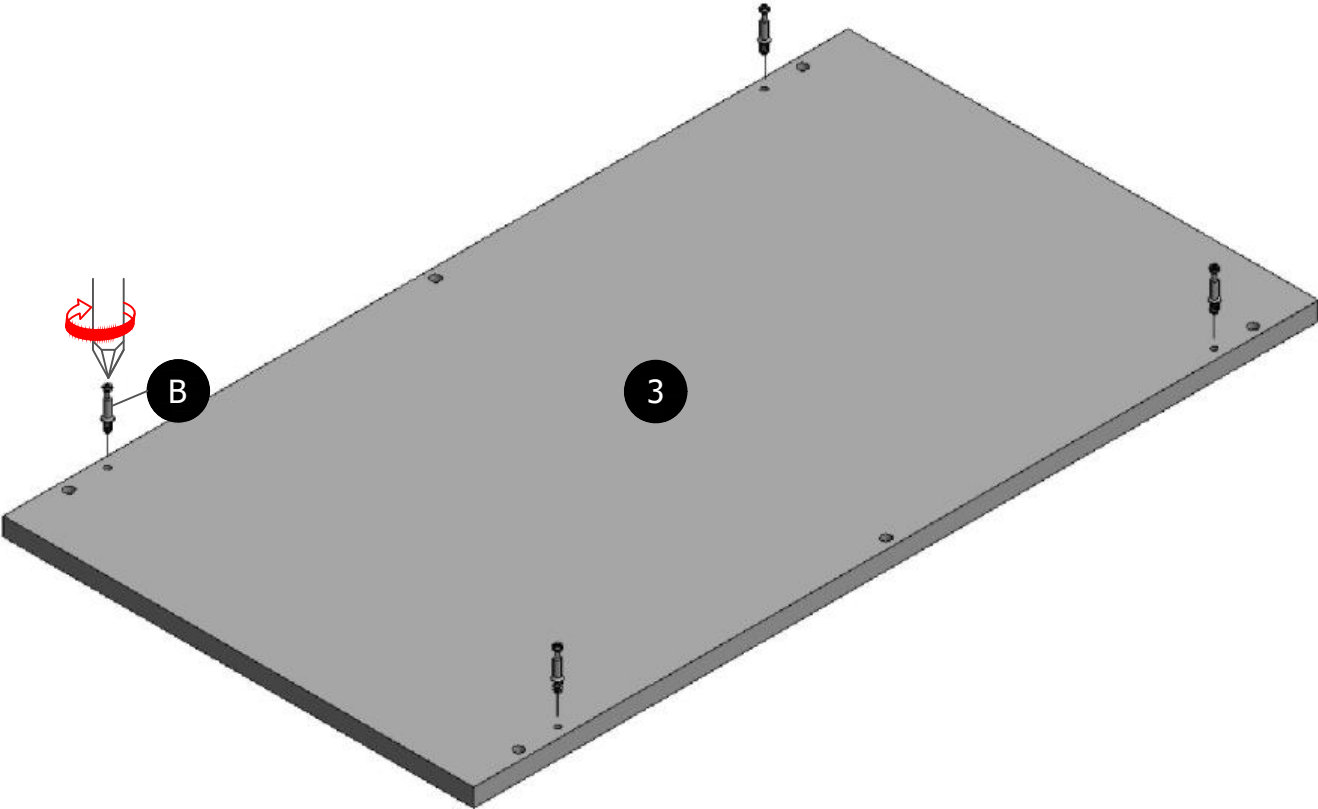

C4029WD ASSEMBLY INSTRUCTION


STEP 8

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

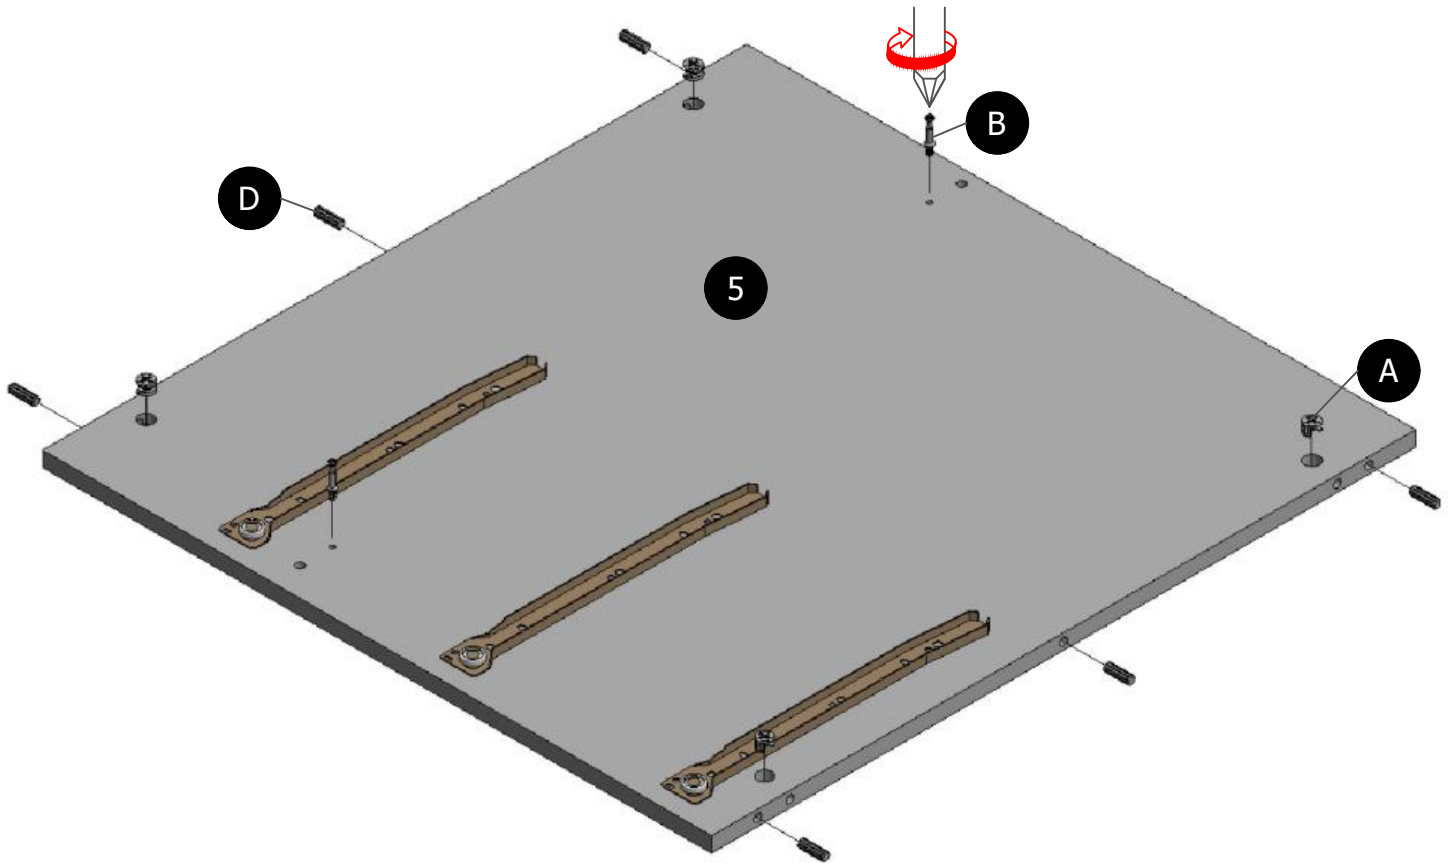

STEP 9

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

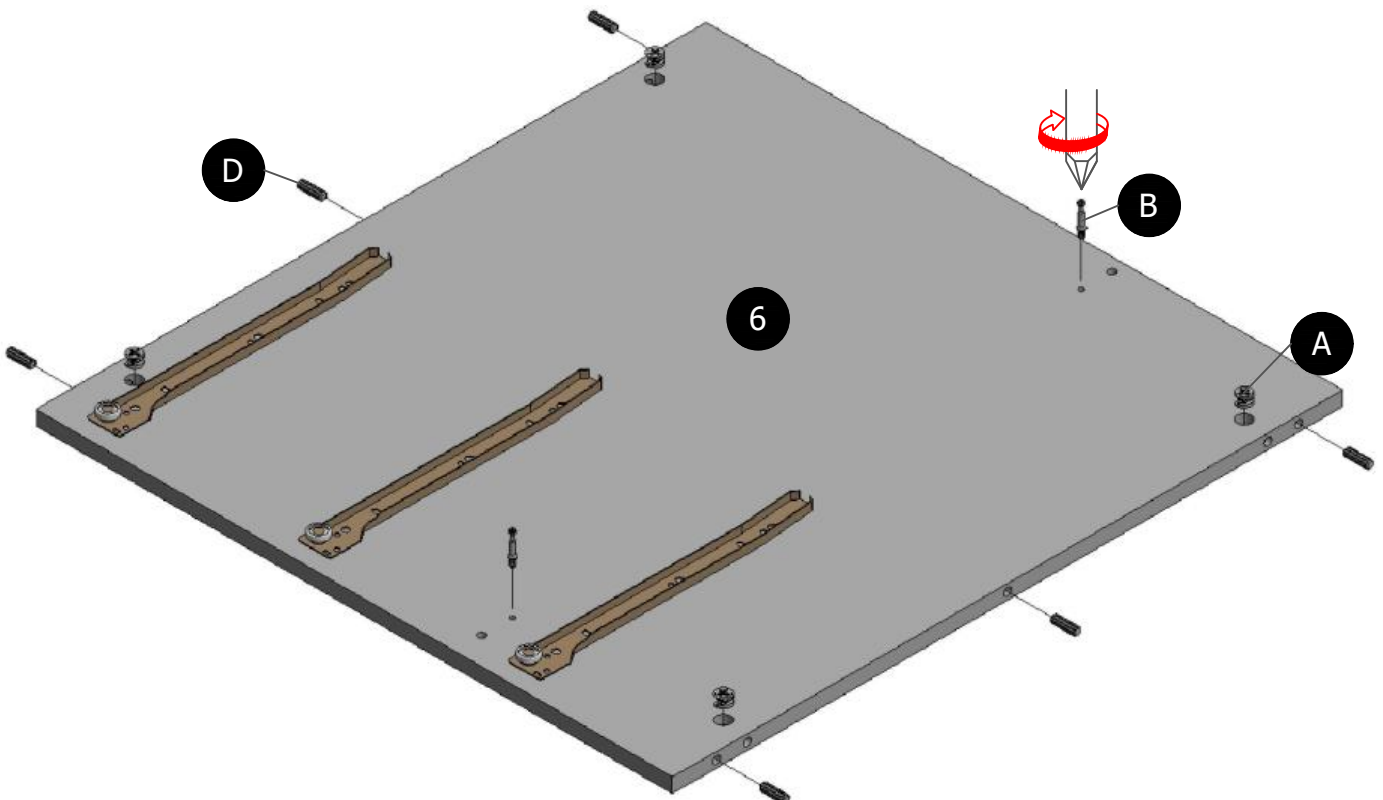


C4029WD ASSEMBLY INSTRUCTION

STEP 10

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 3

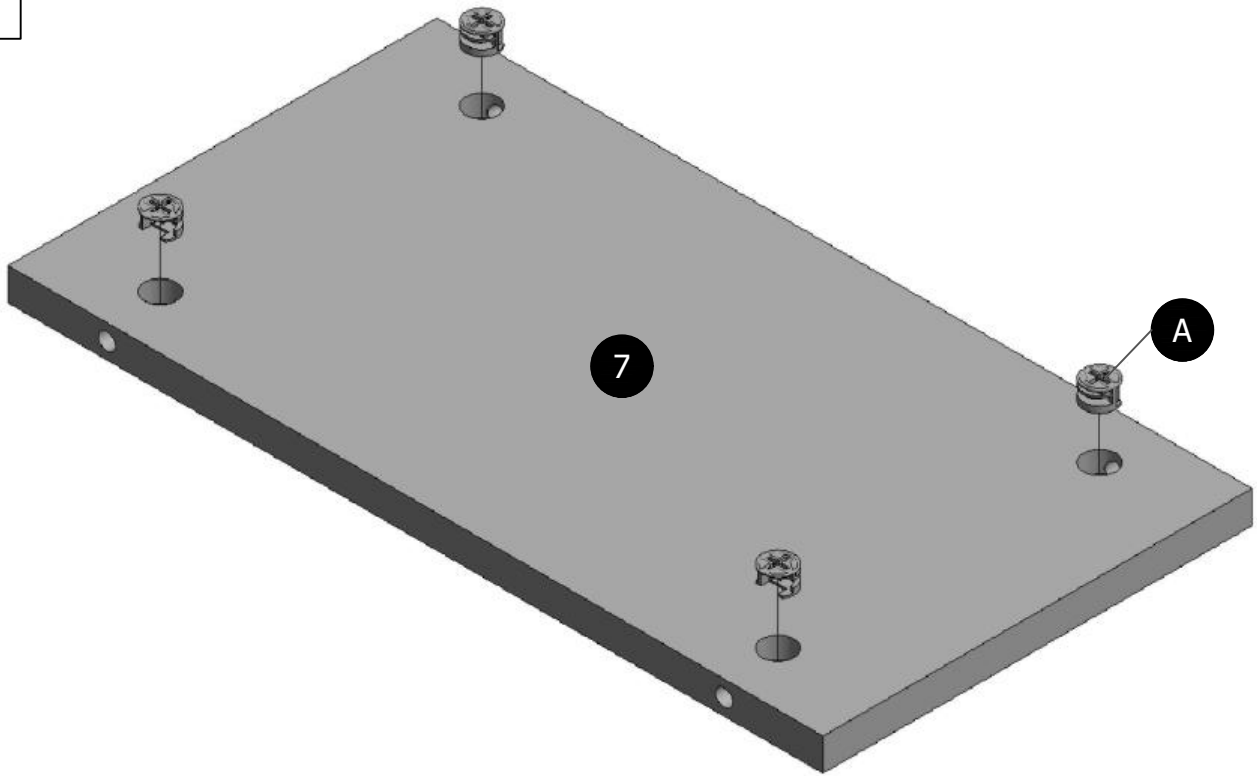

STEP 11


NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 x 2

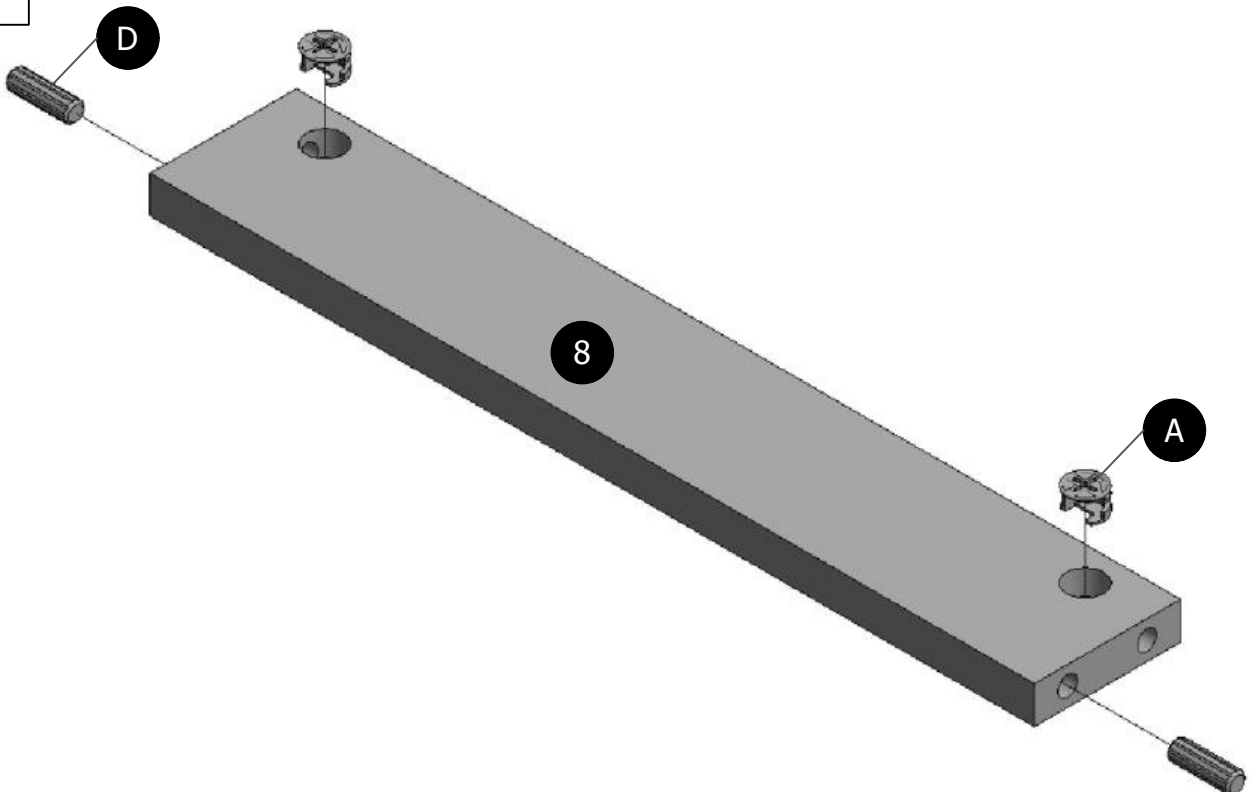


C4029WD ASSEMBLY INSTRUCTION

 STEP 12

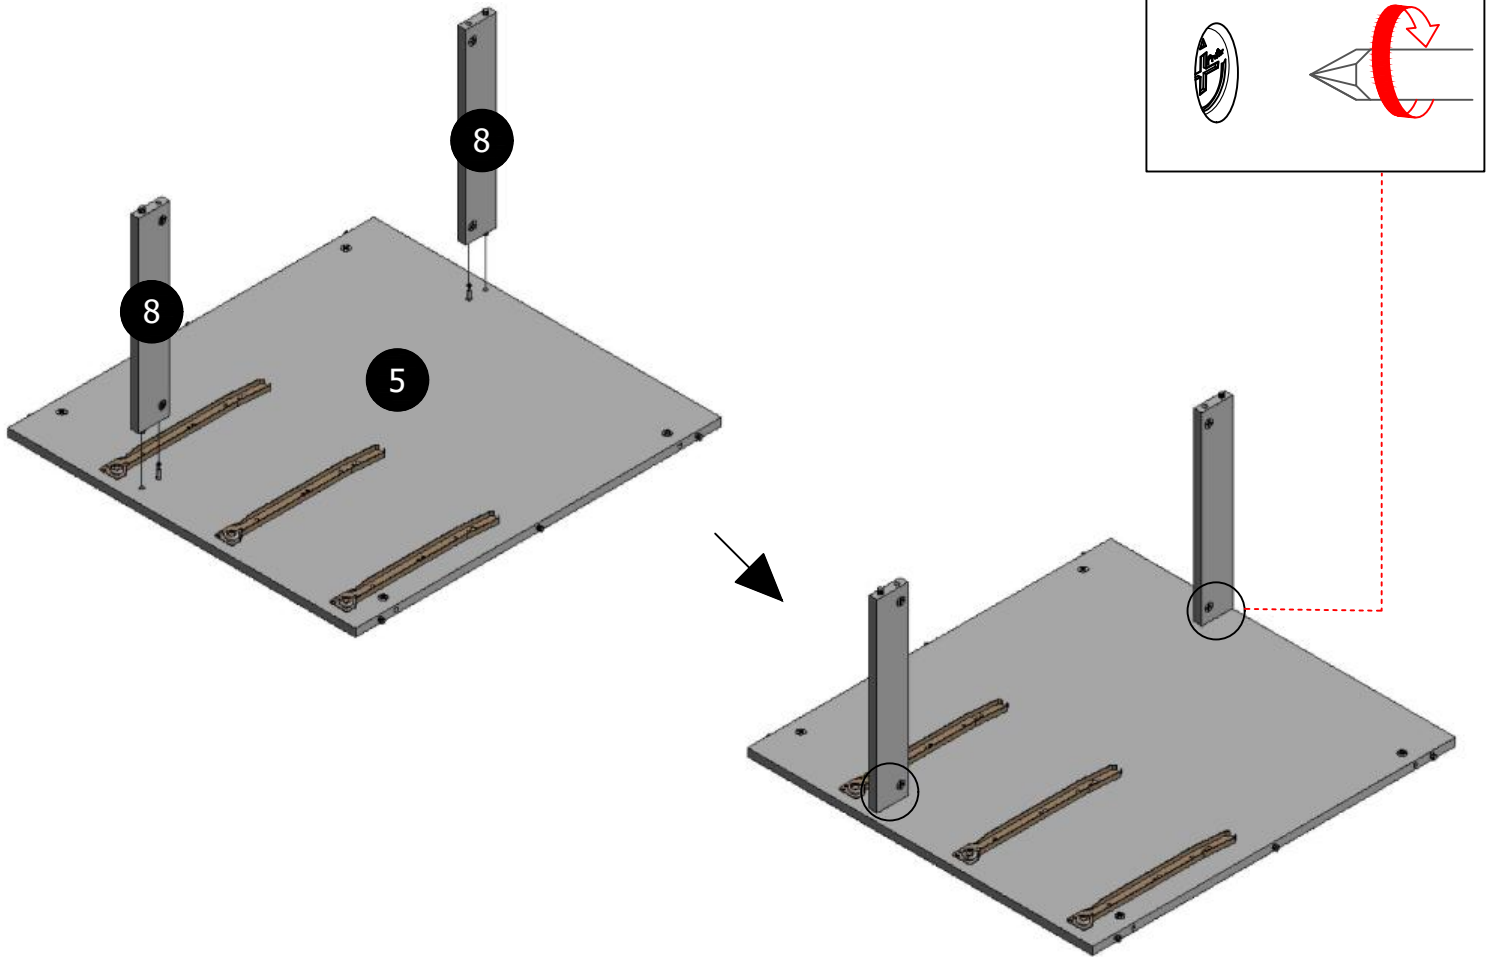


 STEP 13

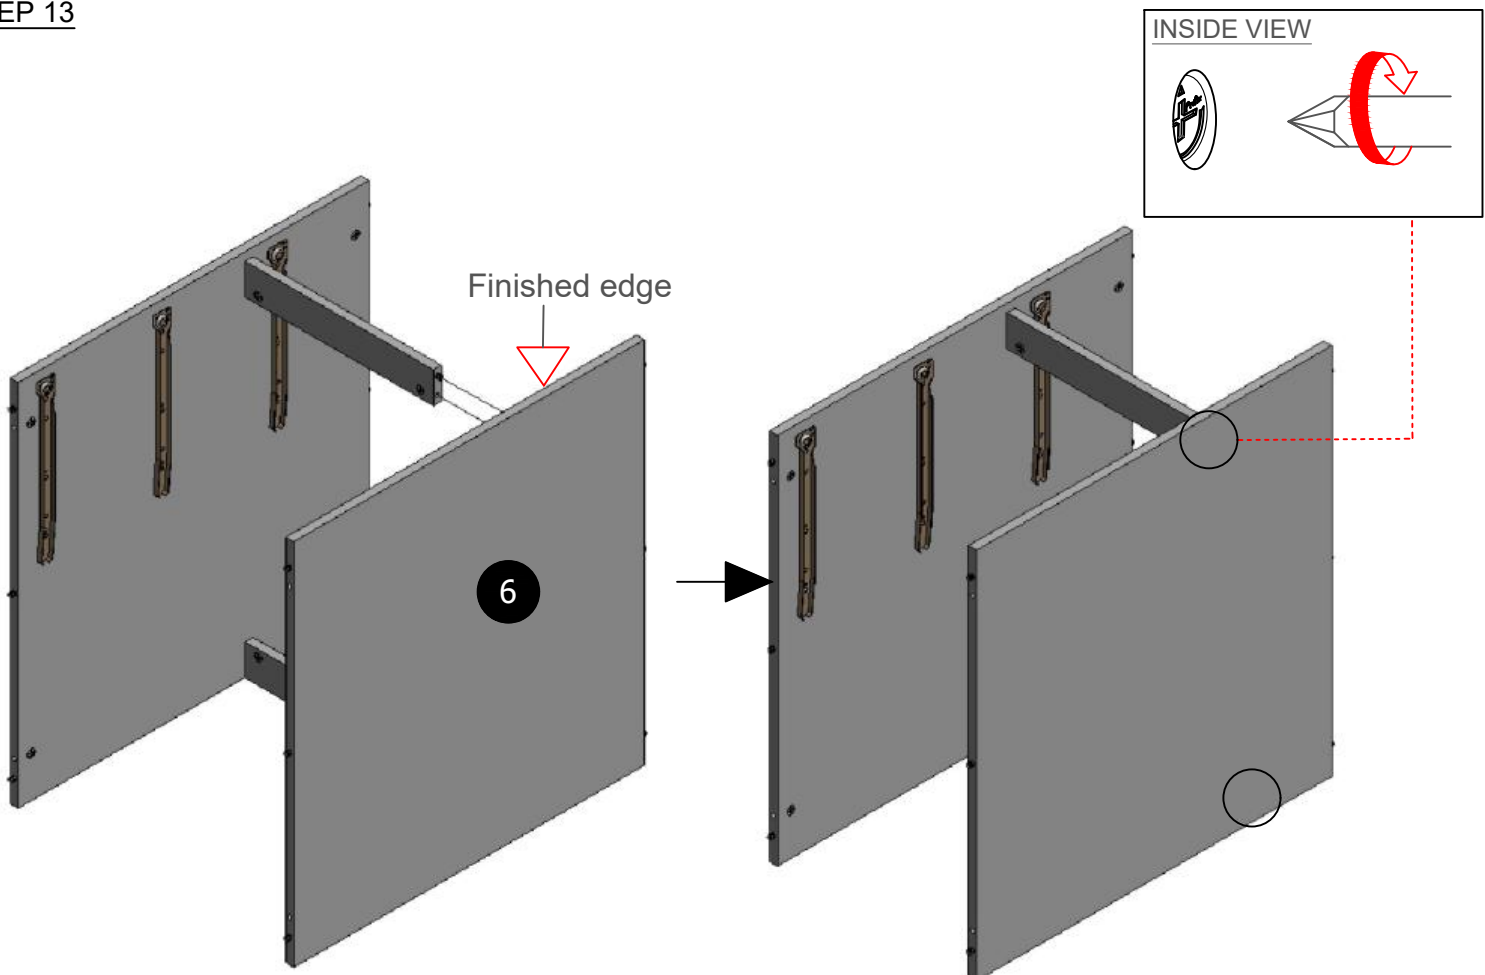


C4029WD ASSEMBLY INSTRUCTION

 STEP 14

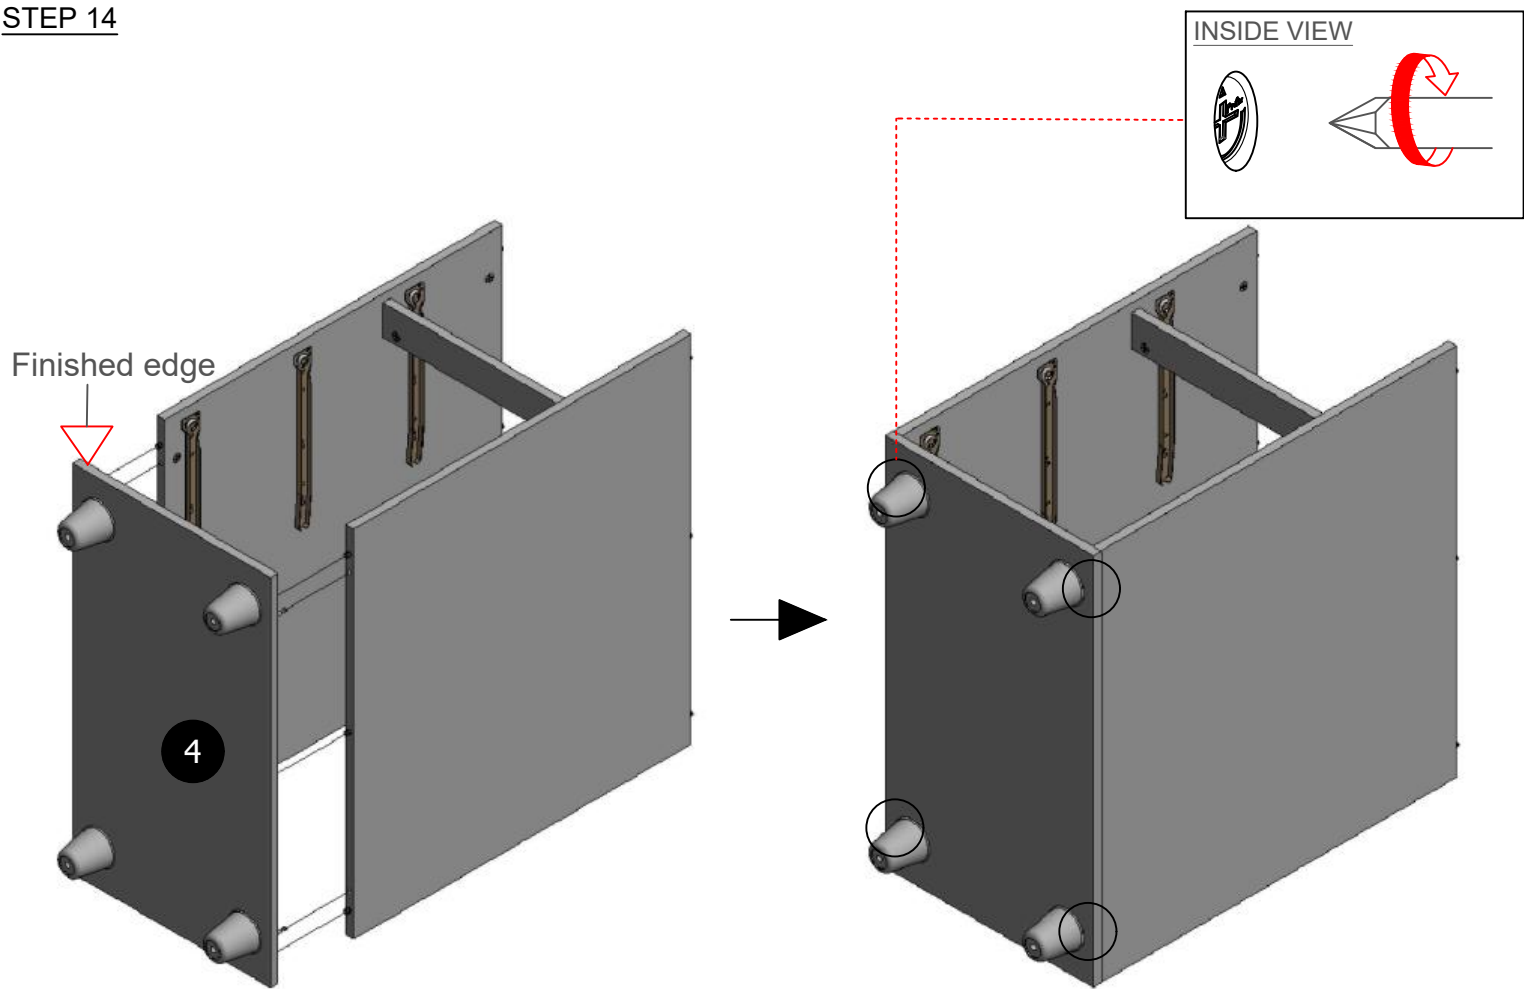

 
STEP 15

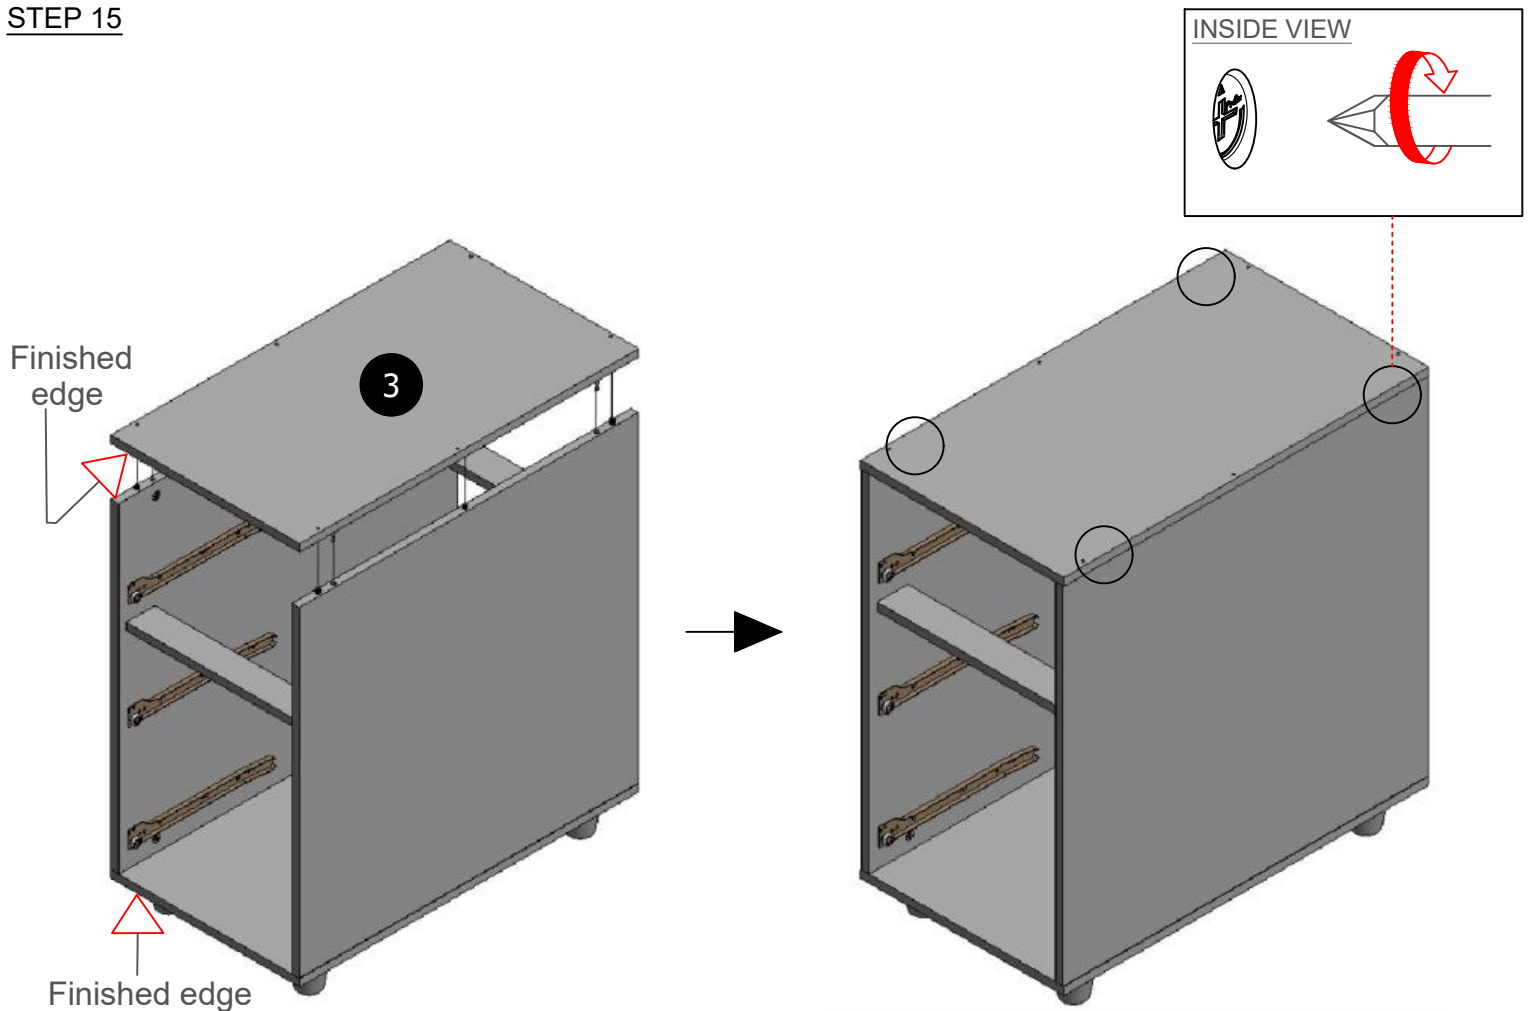


C4029WD ASSEMBLY INSTRUCTION

STEP 16

 Side with color paper must be the same.


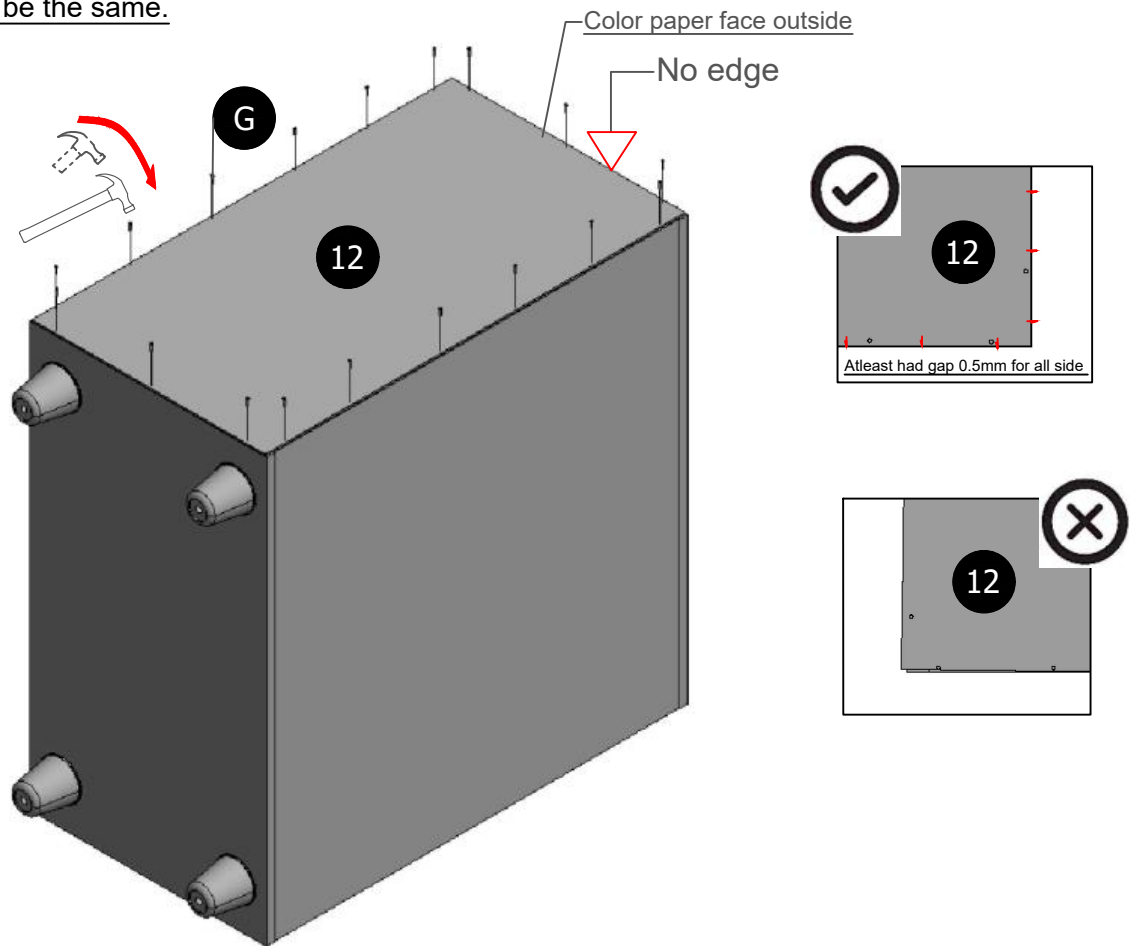


 STEP 17


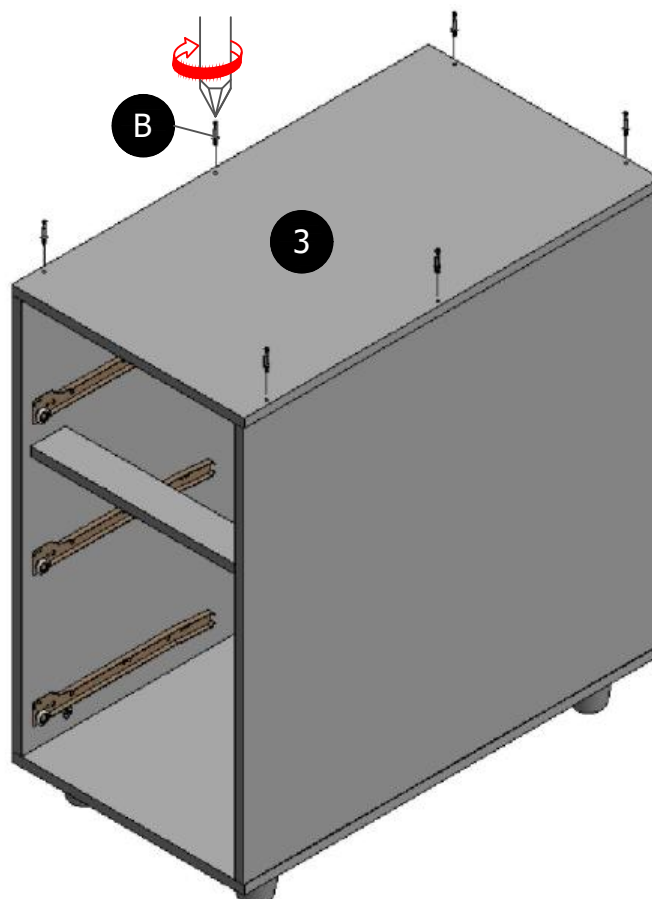


C4029WD ASSEMBLY INSTRUCTION

  STEP 18

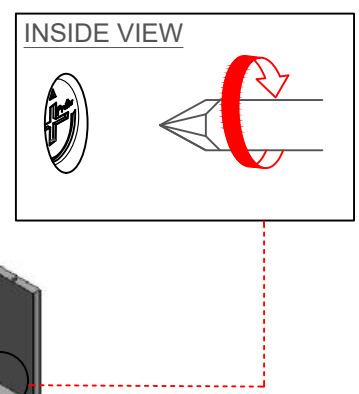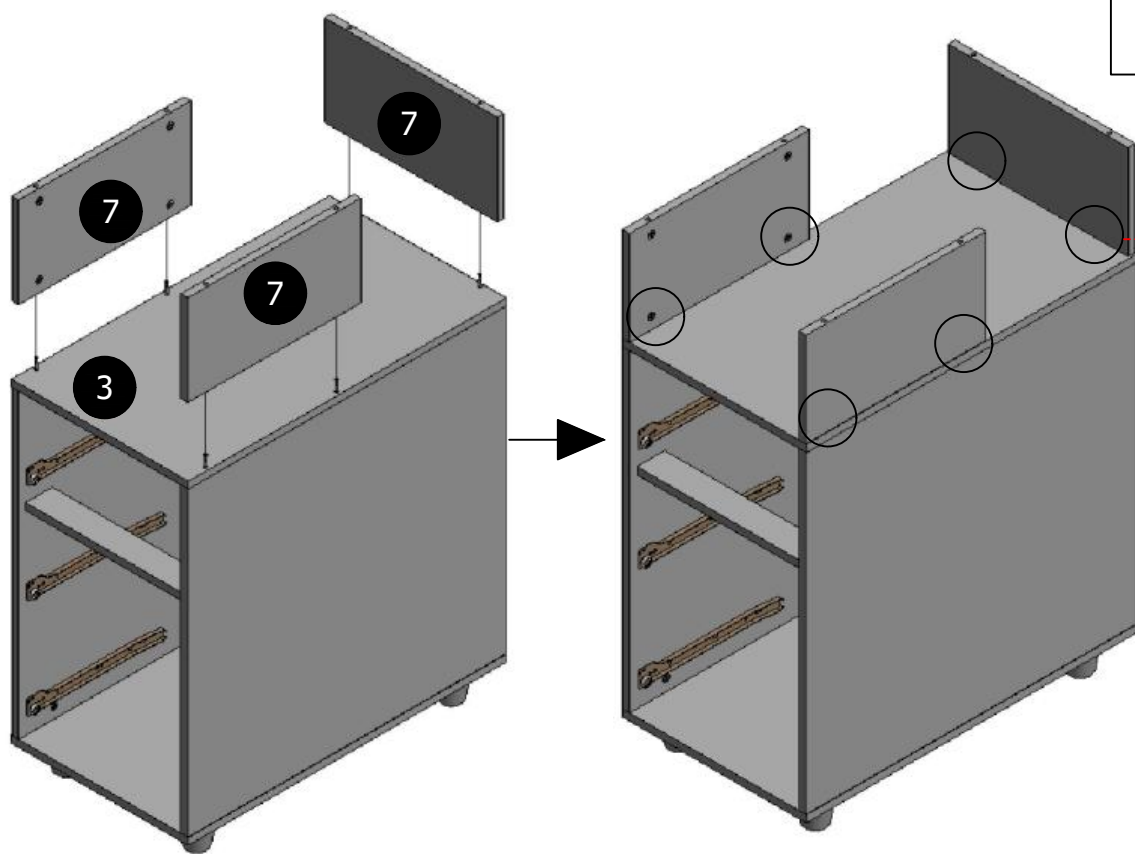

  
STEP 19

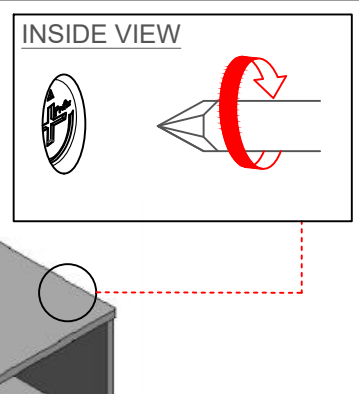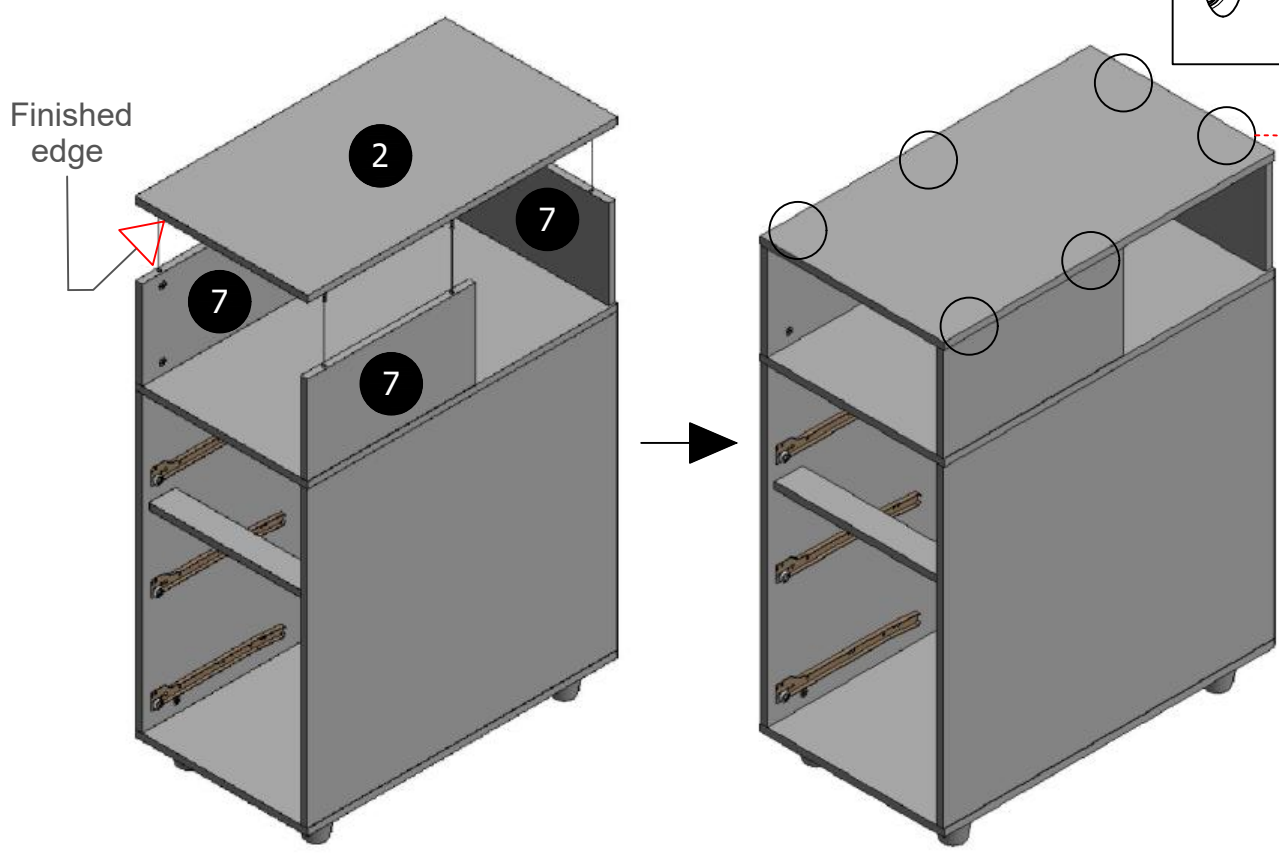

C4029WD ASSEMBLY INSTRUCTION

STEP 20

 
x 3

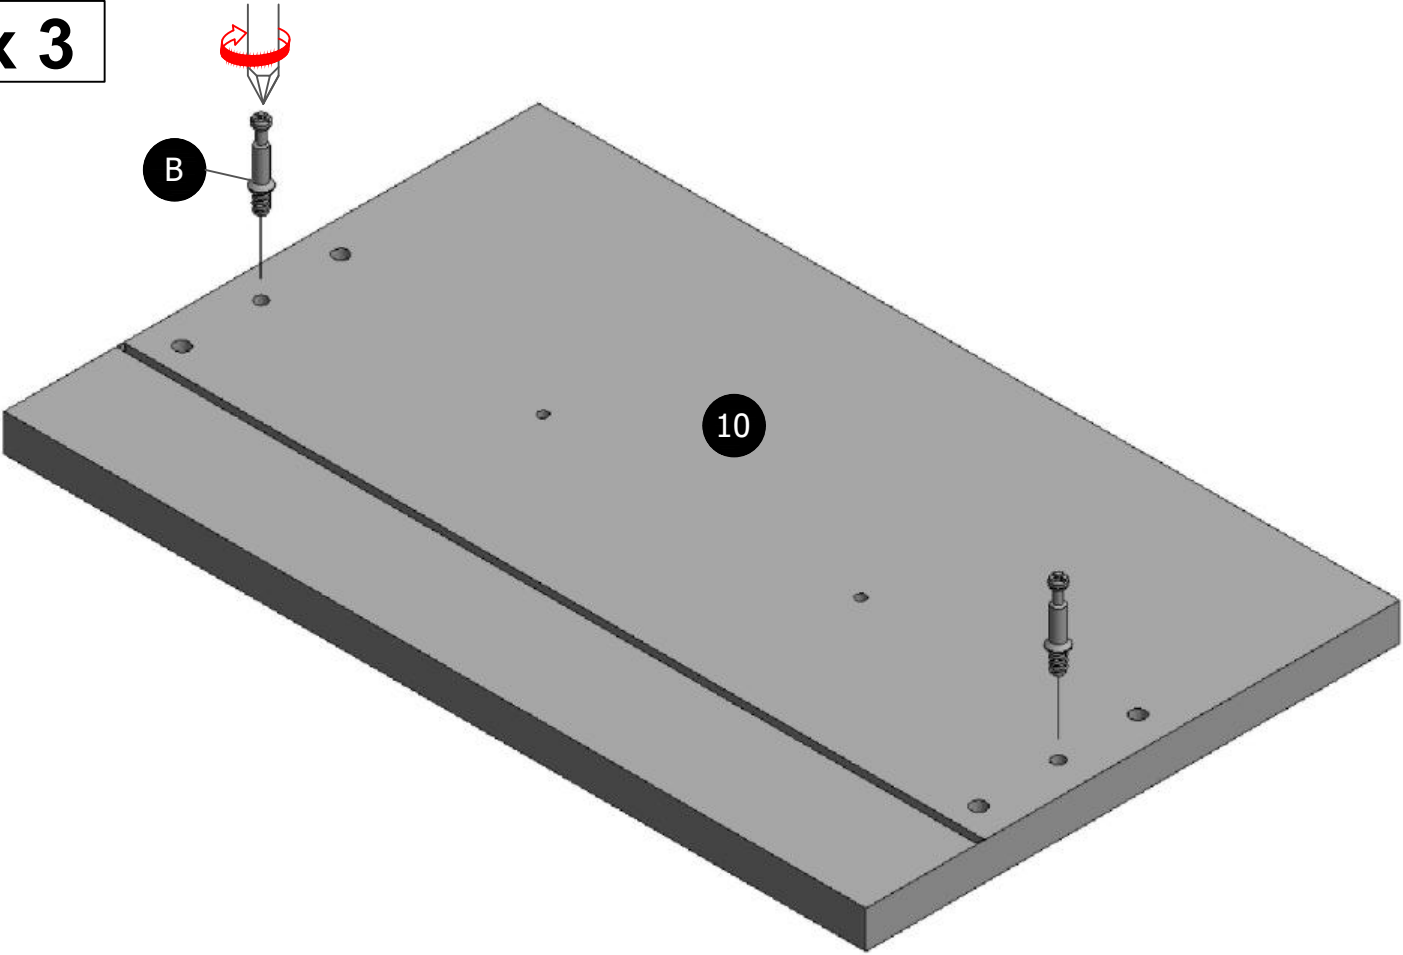

STEP 21

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 x 3

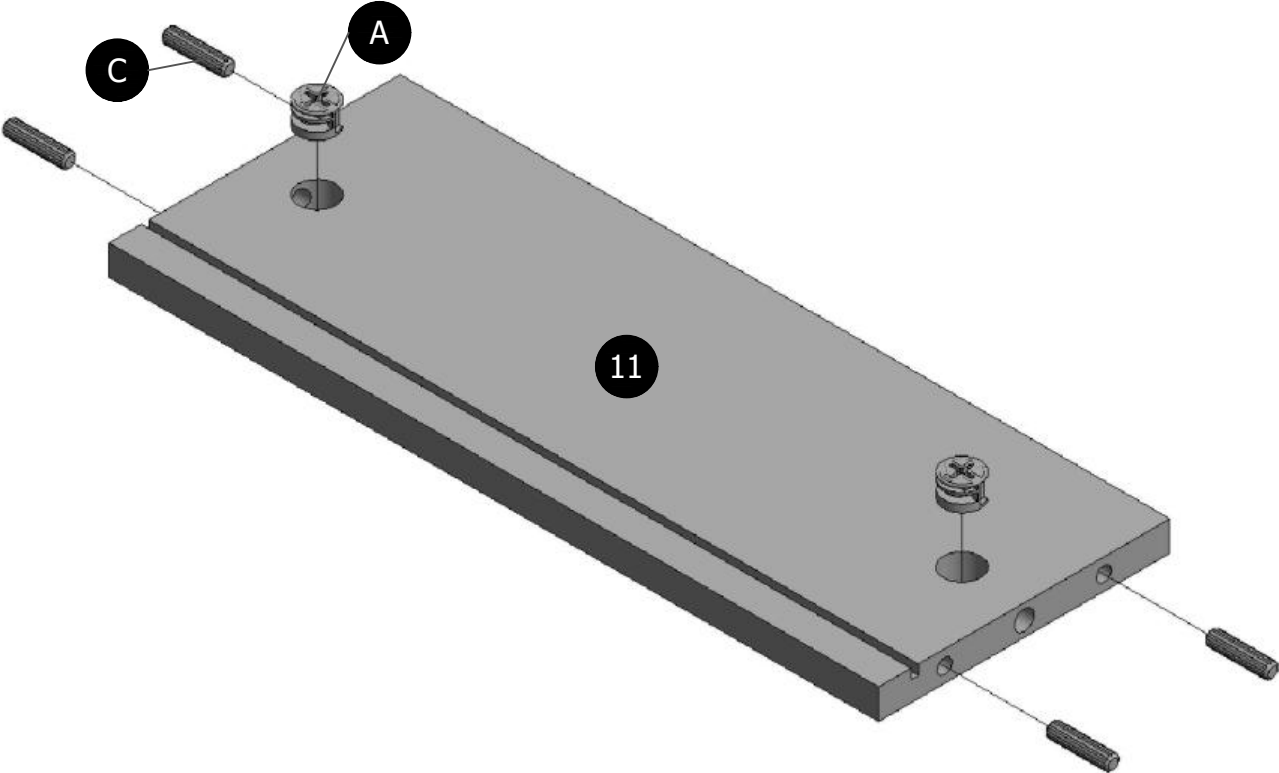


C4029WD ASSEMBLY INSTRUCTION

STEP 22

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 3

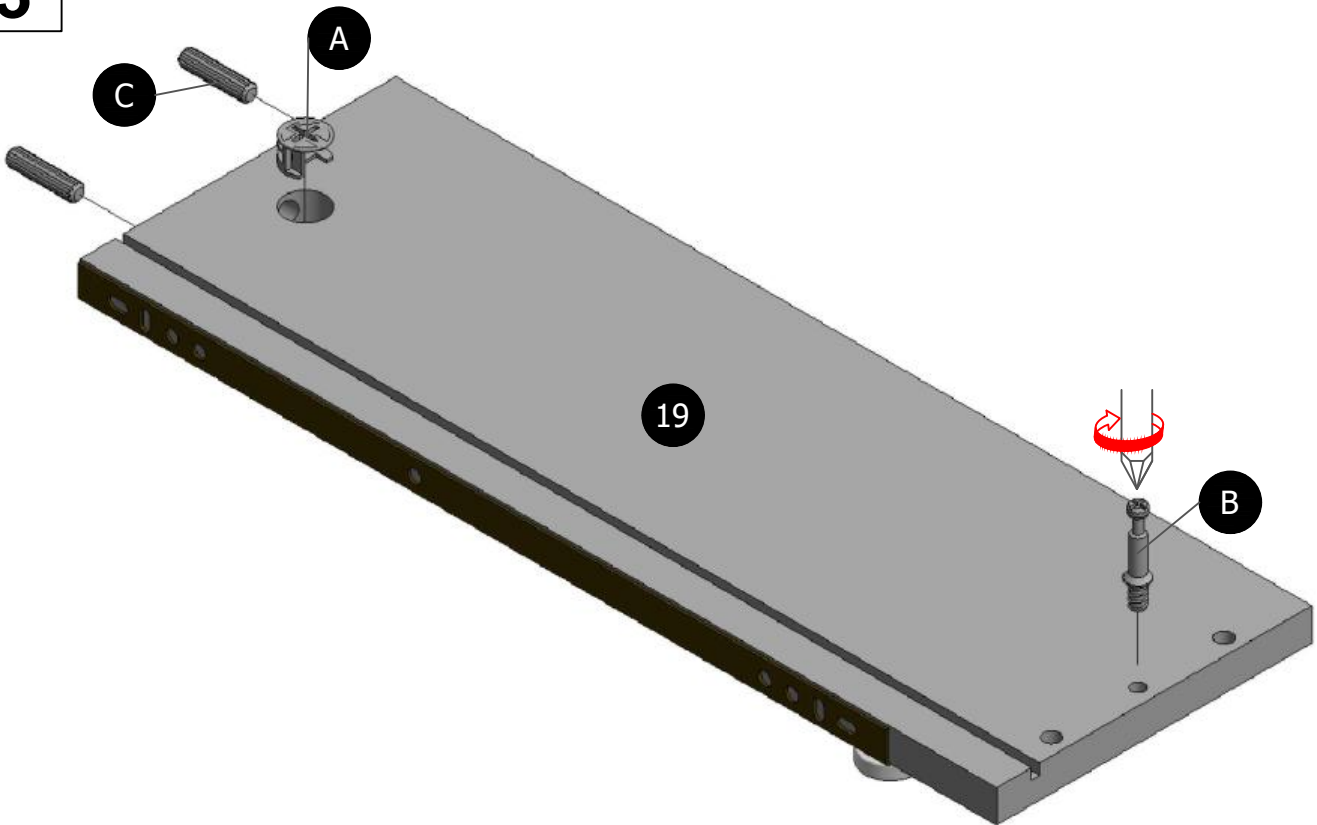

STEP 23

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 3

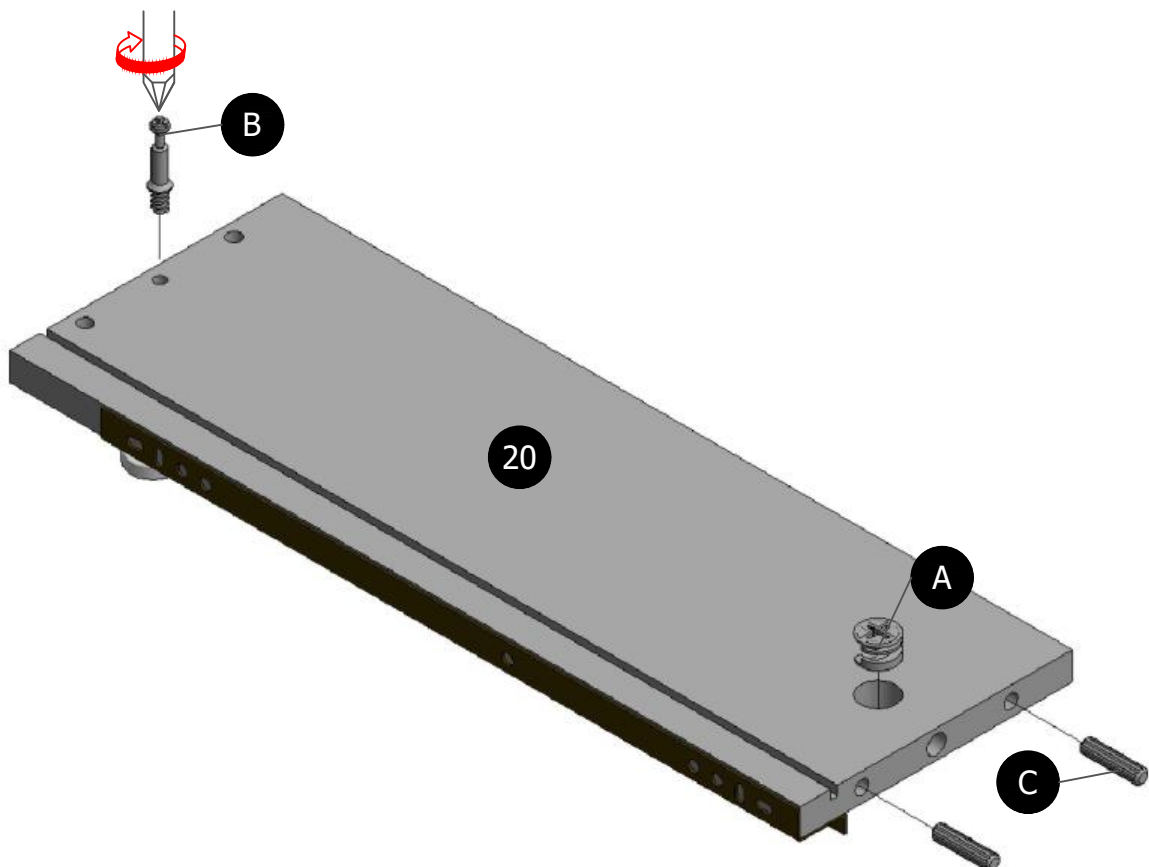

C4029WD-DGY/LGY/LOK ASSEMBLY INSTRUCTION


STEP 24

 x 3

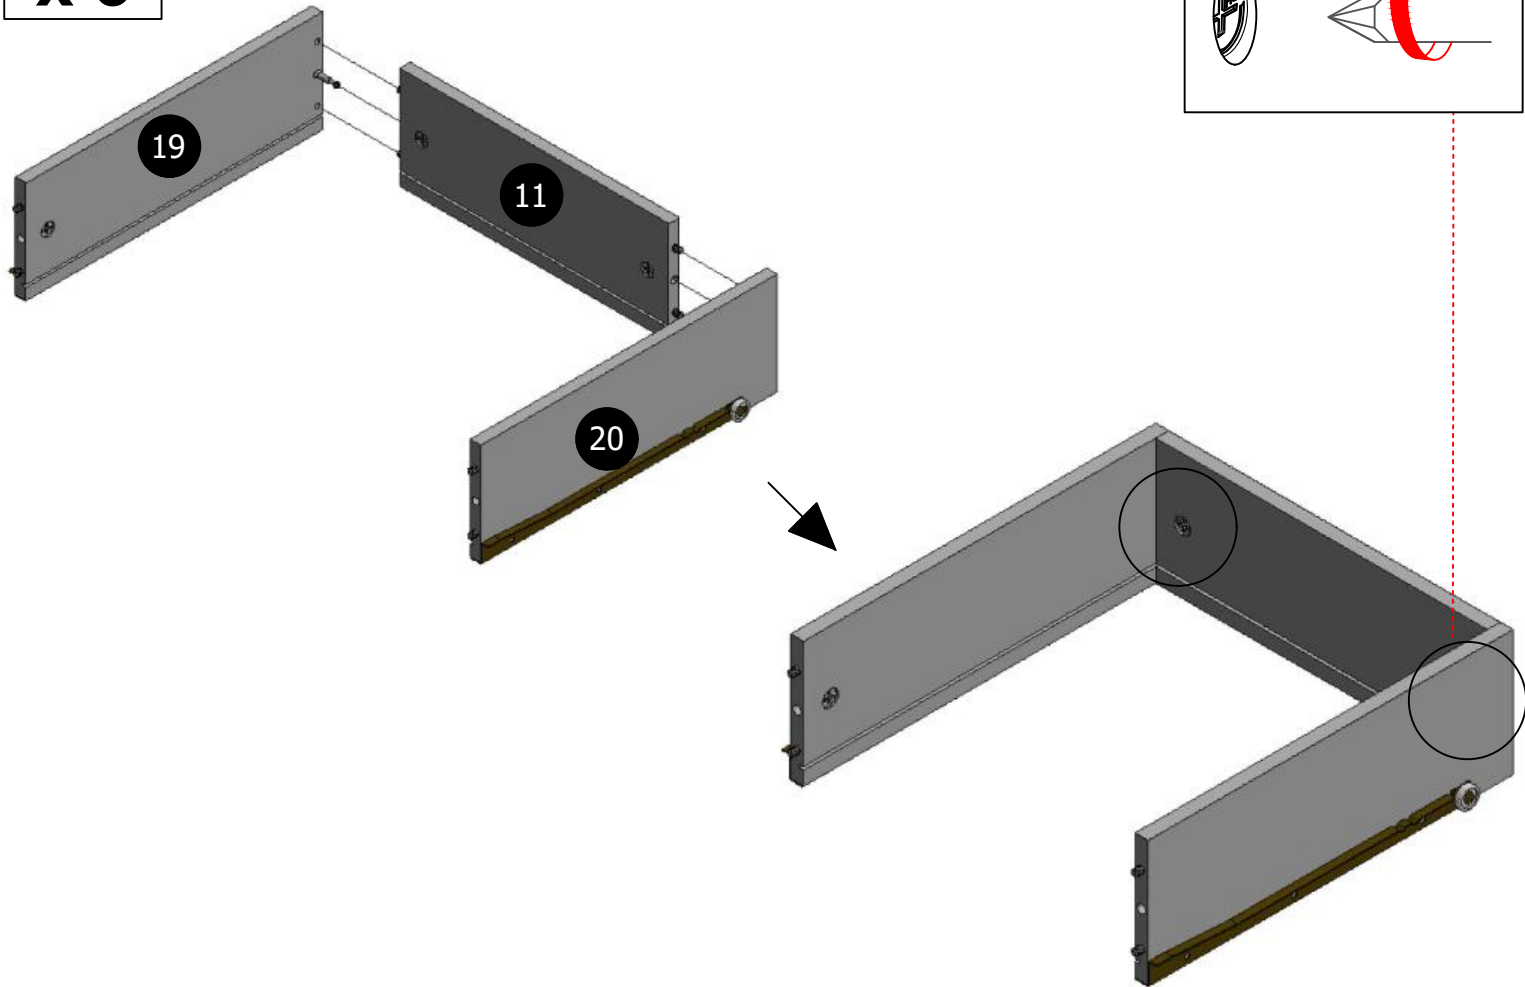

STEP 25

 x 3



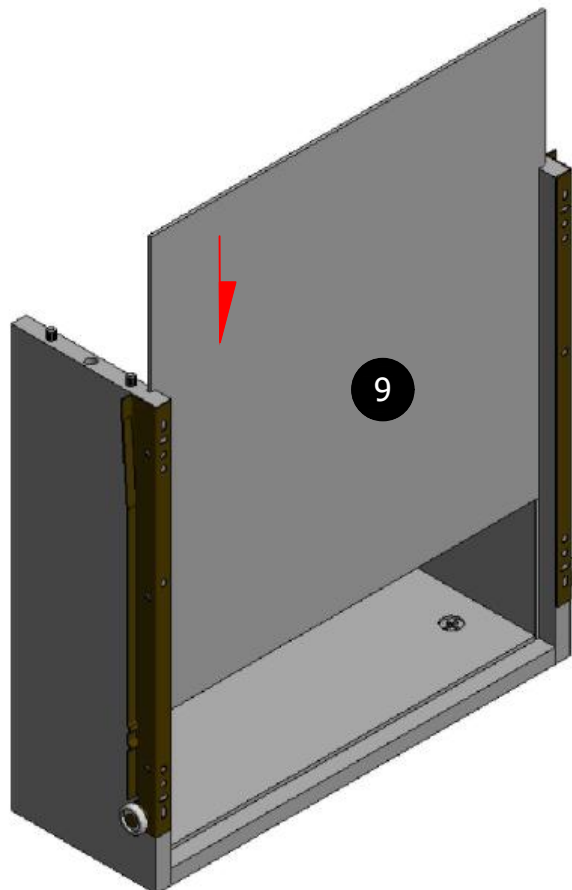


C4029WD ASSEMBLY INSTRUCTION

STEP 26



x 3

   INSIDE VIEW

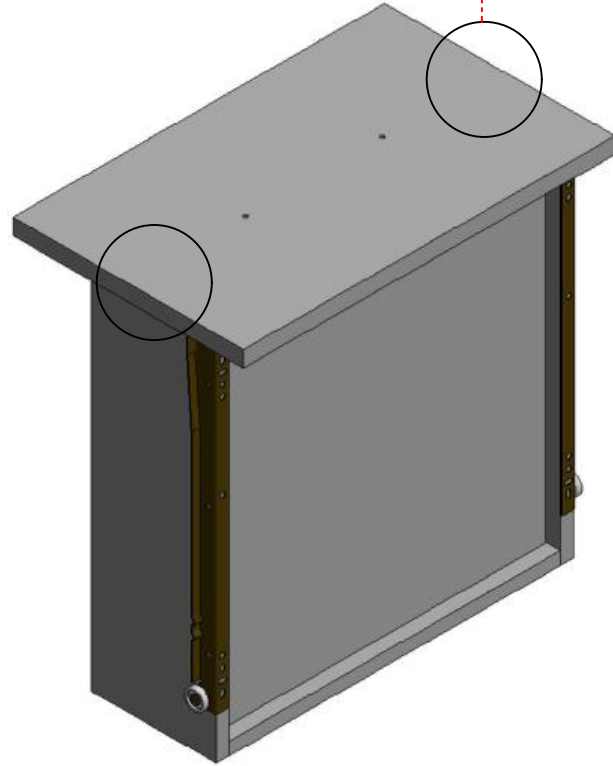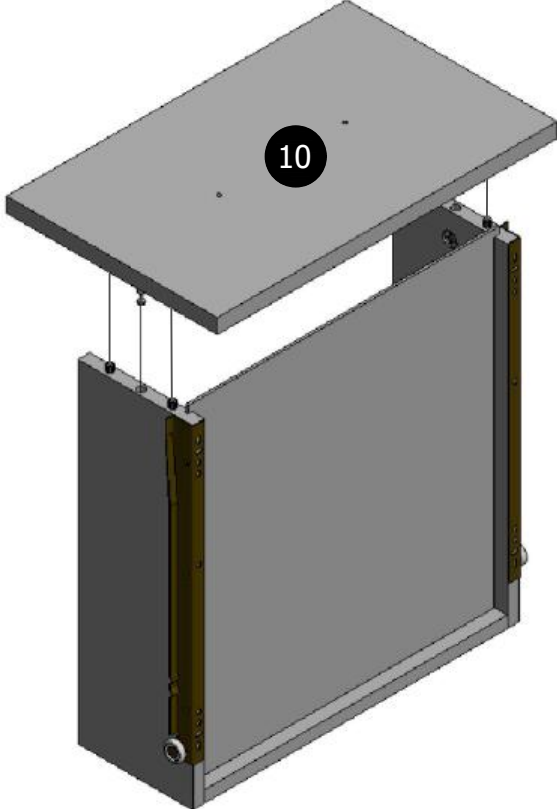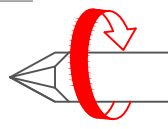



STEP 27

  x 3

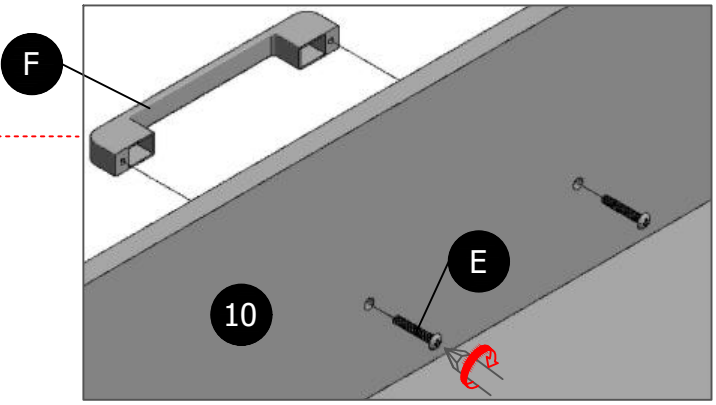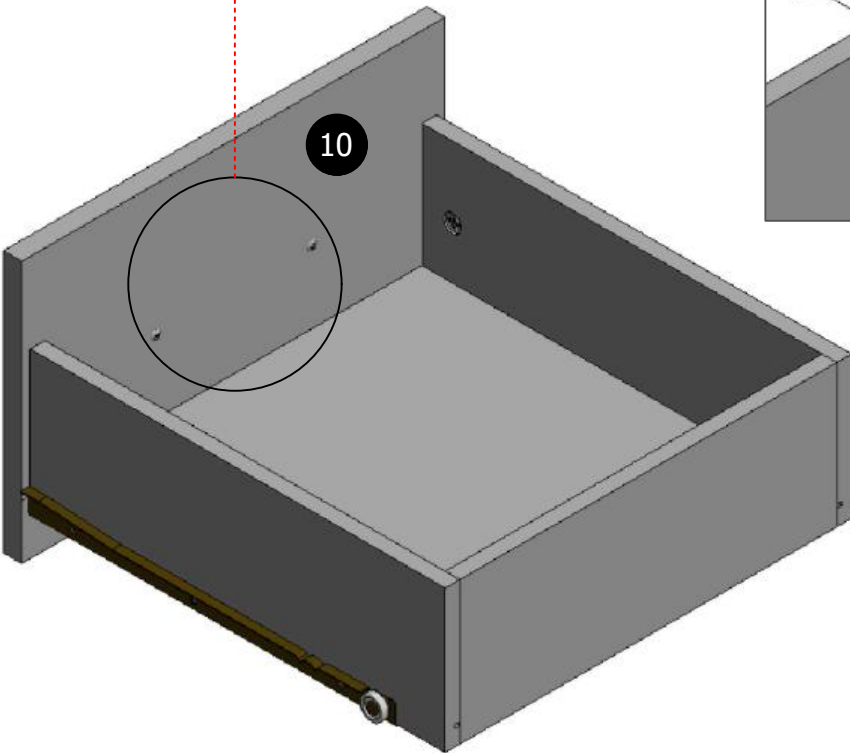


C4029WD ASSEMBLY INSTRUCTION

  STEP 28

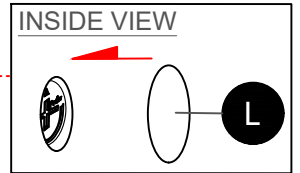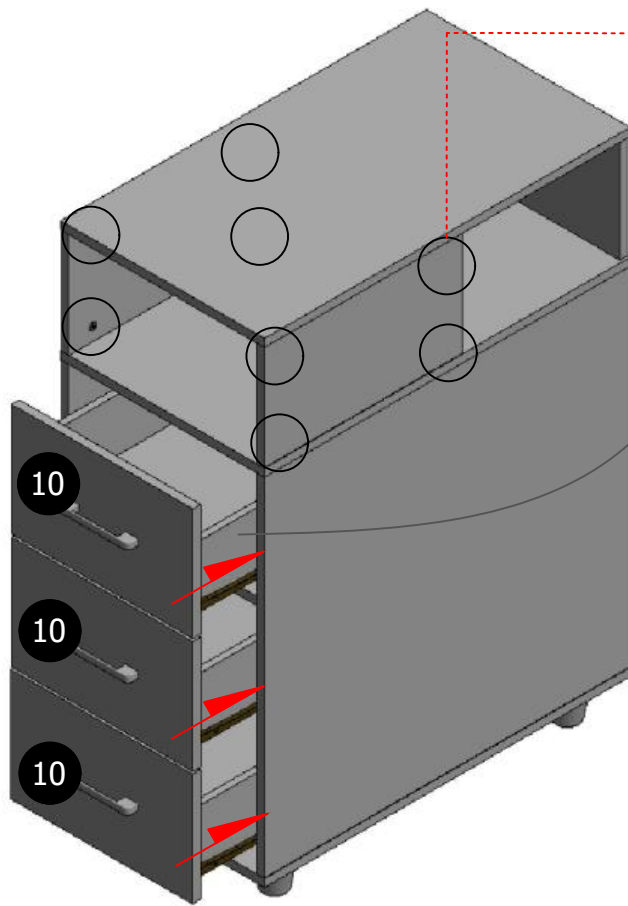

One of (20) with sticker
place it to the top of right side.

 STEP 29

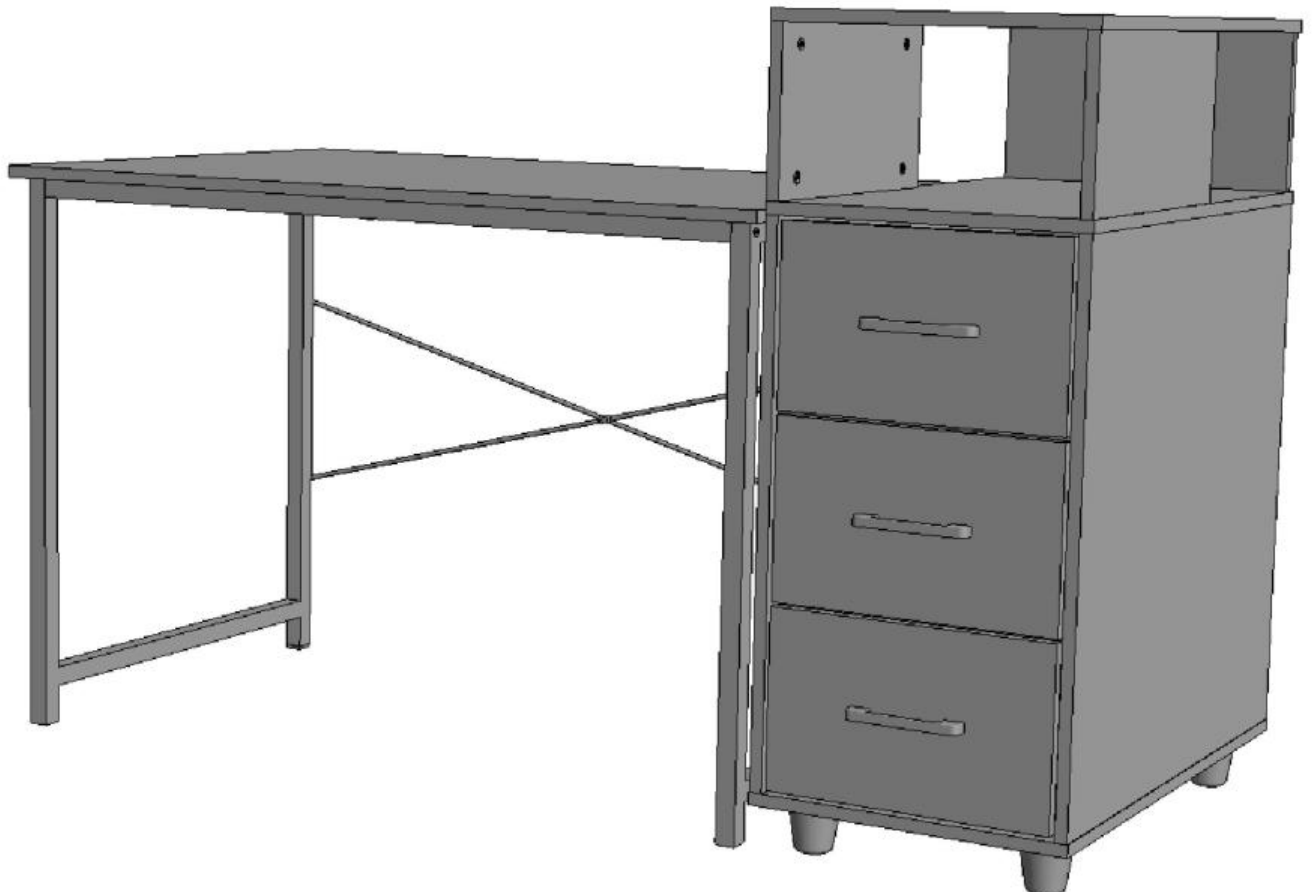

ASSEMBLY COMPLETED