

C4026TV ASSEMBLY INSTRUCTION

We believe you will absolutely love your new furniture. Please immediately examine this product carefully. Any request for missing part or damage replacement must be received within 90 days of your receipt of the product. For some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service team can answer most concerns and can assist you with any questions you may have about your new product.

Please contact us first by emailing service@casepiece.com

Have these ready when you email:

- Item Number
- PO #
- Purchaser Name
- Proof of Purchase
- Description of the problem and/or the Part Number needed

Replacements for missing or damaged parts or hardware are normally shipped within 3 to 5 business days and we thank you for your patient.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

90-Day Limited Warranty Statement for Manufacturing Defects

Please read this Limited Warranty carefully. To maintain your Warranty, you will need to comply with the conditions stated here.

This warranty is for manufacturing defects only and does not cover damages as a result of misuse.

1. Our products sold comply with the description contained in this Warranty. All parts and products are warranted 90-Day from the original date of delivery except: parts and products used for commercial, contract, rental trade, institutional, or any other non-residential purposes; parts and products that have not been maintained in accordance with the care recommendations provided; parts and products damaged resulting from the consumer's improper assembly; or parts and products that are damaged or defective due to normal wear and tear.

 


 


 
 

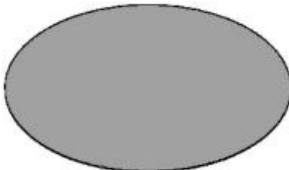 
2. To exercise rights under this warranty, proper documentation, i.e., photography, purchase order number, manufacturer's bar code label, and or any other pertinent information upon request is required. We reserve the right to repair or replace the product within the warranty period based upon the documentation received as support of a claim for consideration. We will not replace or repair any product if improper maintenance, improper handling, or improper use caused the damage. Any product sold from or modified by a Non-Authorized Dealer, Seller or Consumer will void the Warranty.

3. Cost of packaging and shipping to and from us is not covered by the warranty unless expressly arranged by us. This warranty does not extend to furniture that has been exchanged or replaced by us as settlement of an original claim of defective merchandise. This warranty does not extend to furniture that has been moved from delivery location on original purchase order.

We appreciate your business!

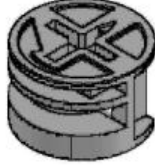 

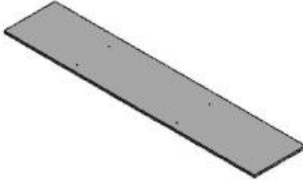 
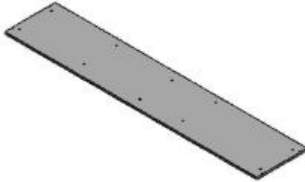 


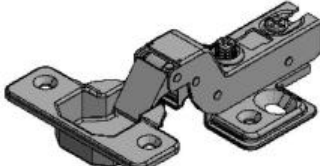
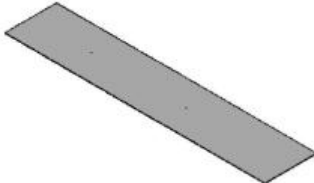 
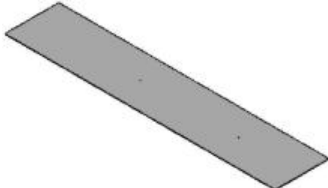 
C4026TV ASSEMBLY INSTRUCTION

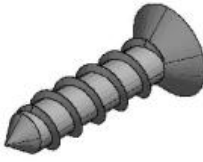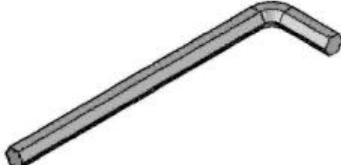HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		28 PCS
B	MINIFIX CAM BOLT		28 PCS
C	6/8" NAIL		36 PCS
D	SOFT CLOSE - HINGES		8 PCS
E	PLASTIC STRIP (H-SHAPE)		1 PC
F	JCBC SCREW (M6 x 25MM)		9 PCS
G	CSK SCREW (M3.5 x 12MM)		48 PCS
H	M4 ALLEN KEY (65MM)		1 PC
I	TIPPING RESTRAINT		1 PC
J	STICKER		30 PCS




C4026TV ASSEMBLY INSTRUCTION

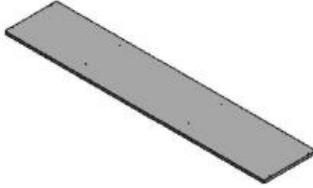PARTS LIST

ITEM	DESCRIPTION	DRAWING	QTY
1	TOP PANEL		1 PC
2	LEFT & RIGHT PANEL		2 PCS
3	MIDDLE PANEL		1 PC
4	BOTTOM PANEL		1 PC
5	VERTICAL PANEL		4 PCS
6	SHORT DOOR PANEL		2 PCS
7	LONG DOOR PANEL		2 PCS
8A	TOP BACK PANEL		1 PC
8B	BOTTOM BACK PANEL		1 PC


C4026TV ASSEMBLY INSTRUCTION

  PARTS LIST

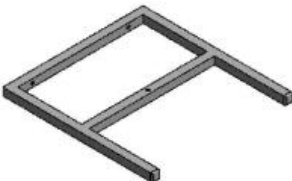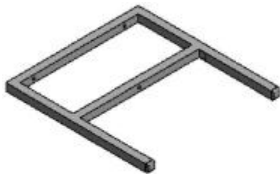
ITEM	DESCRIPTION	DRAWING	QTY
9	LEFT & RIGHT METAL LEG		2 PCS
10	CENTER METAL LEG		1 PC
11	SUPPORT LONG METAL LEG		1 PC

ASSEMBLY TOOLS REQUIRED

 1. Screwdriver (not provide)




 2. Hammer (not provide)




C4026TV ASSEMBLY INSTRUCTION

 NOTE : - The outer board is for protection of packaging only, not part of furniture. Please throw it before assembly.

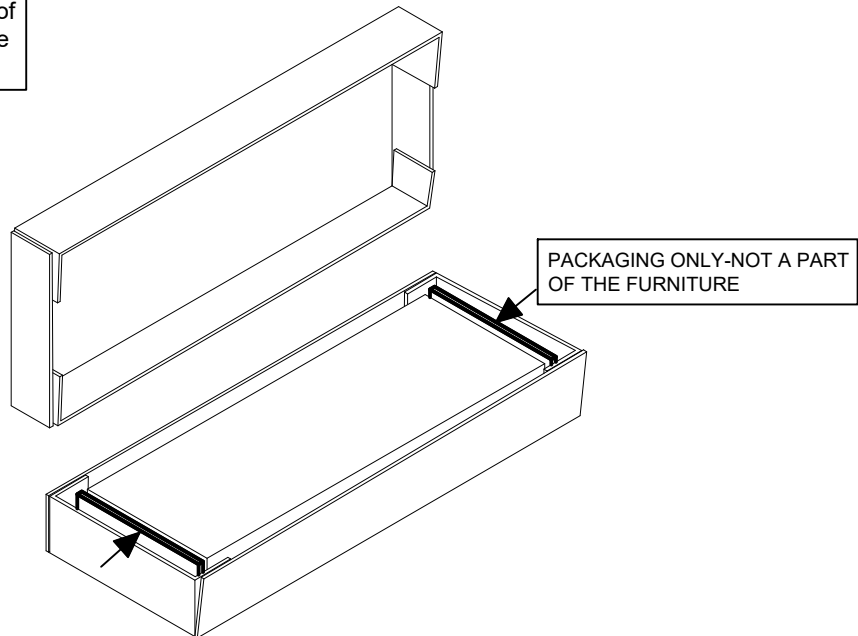

 
STEP 1

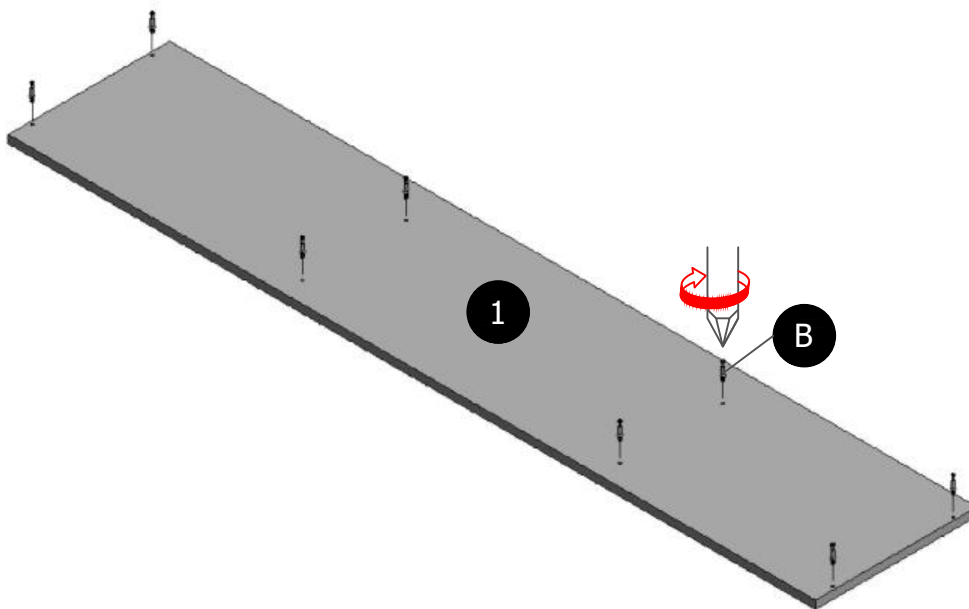

STEP 2

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 2

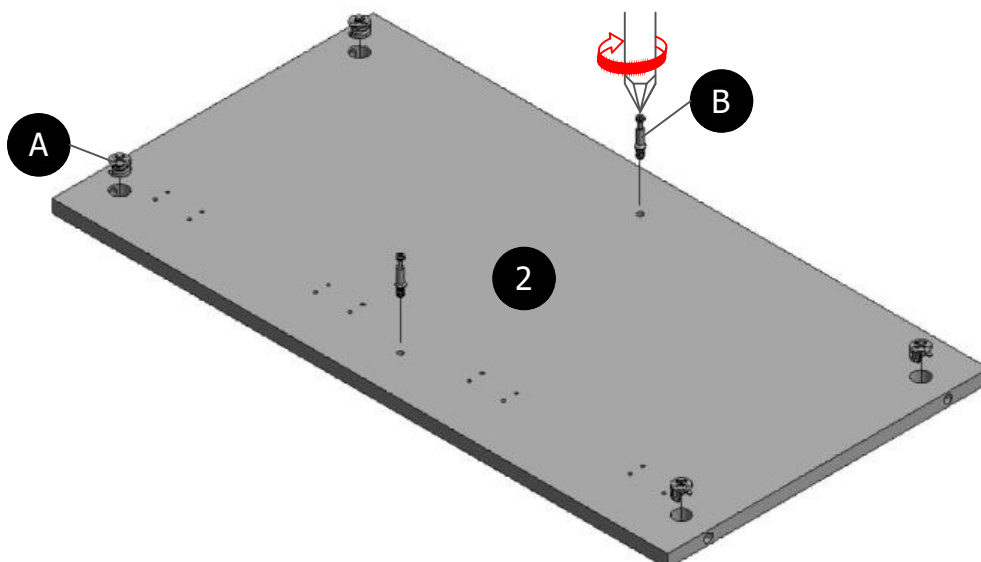


C4026TV ASSEMBLY INSTRUCTION

STEP 3

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

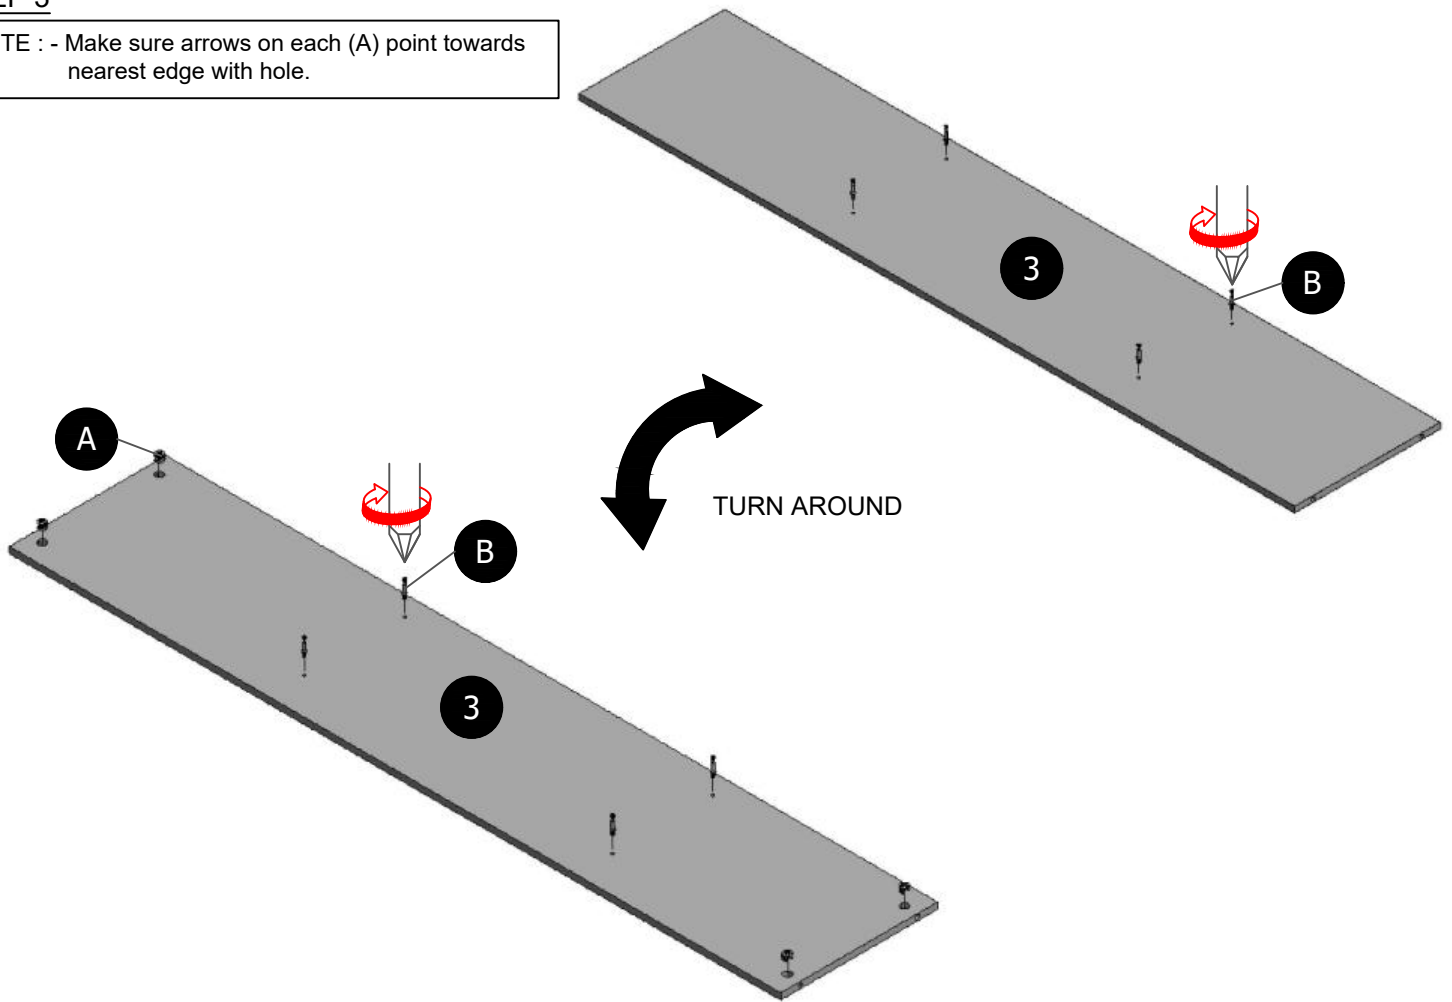

 STEP 4

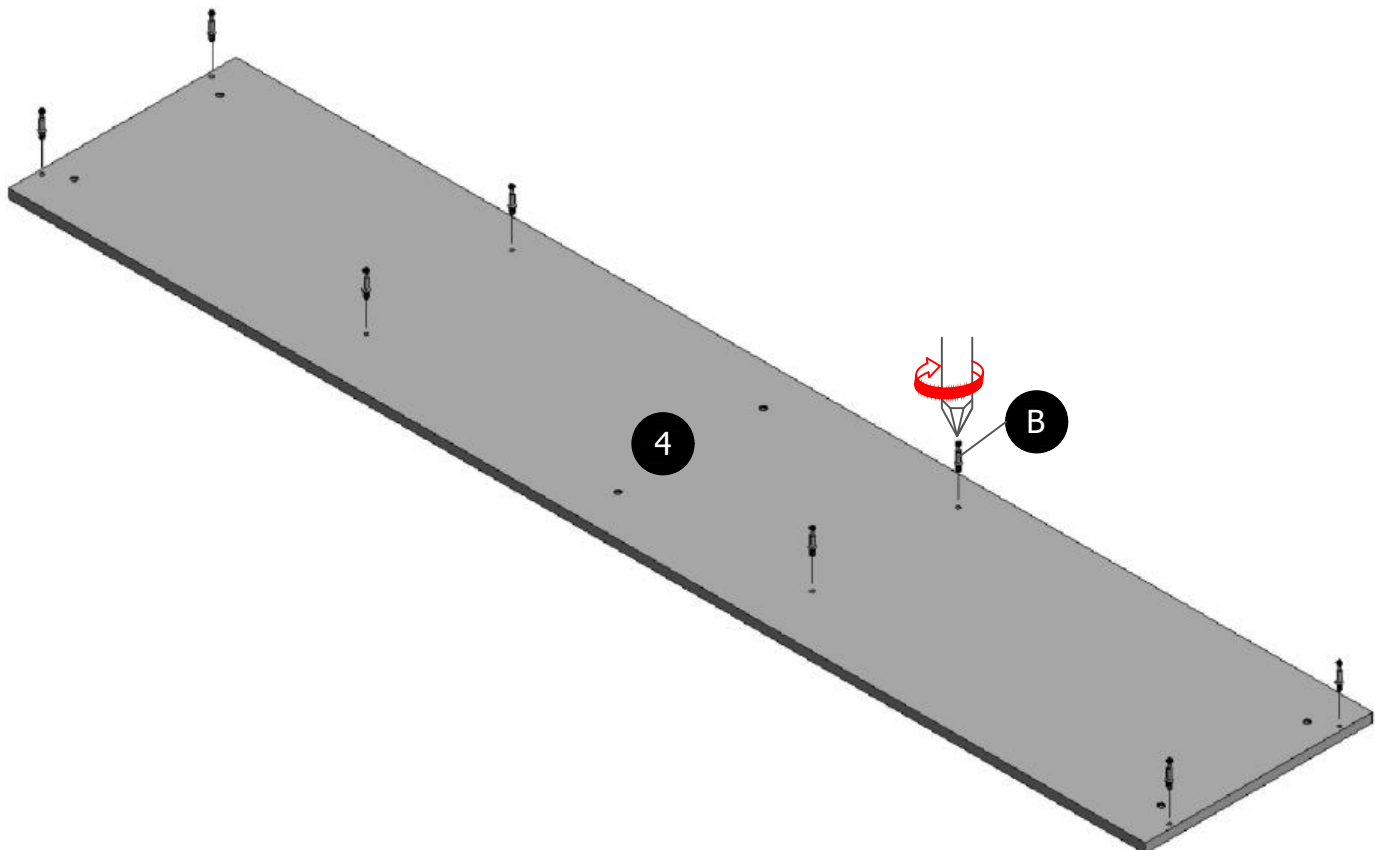


C4026TV ASSEMBLY INSTRUCTION


STEP 5

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 x 4

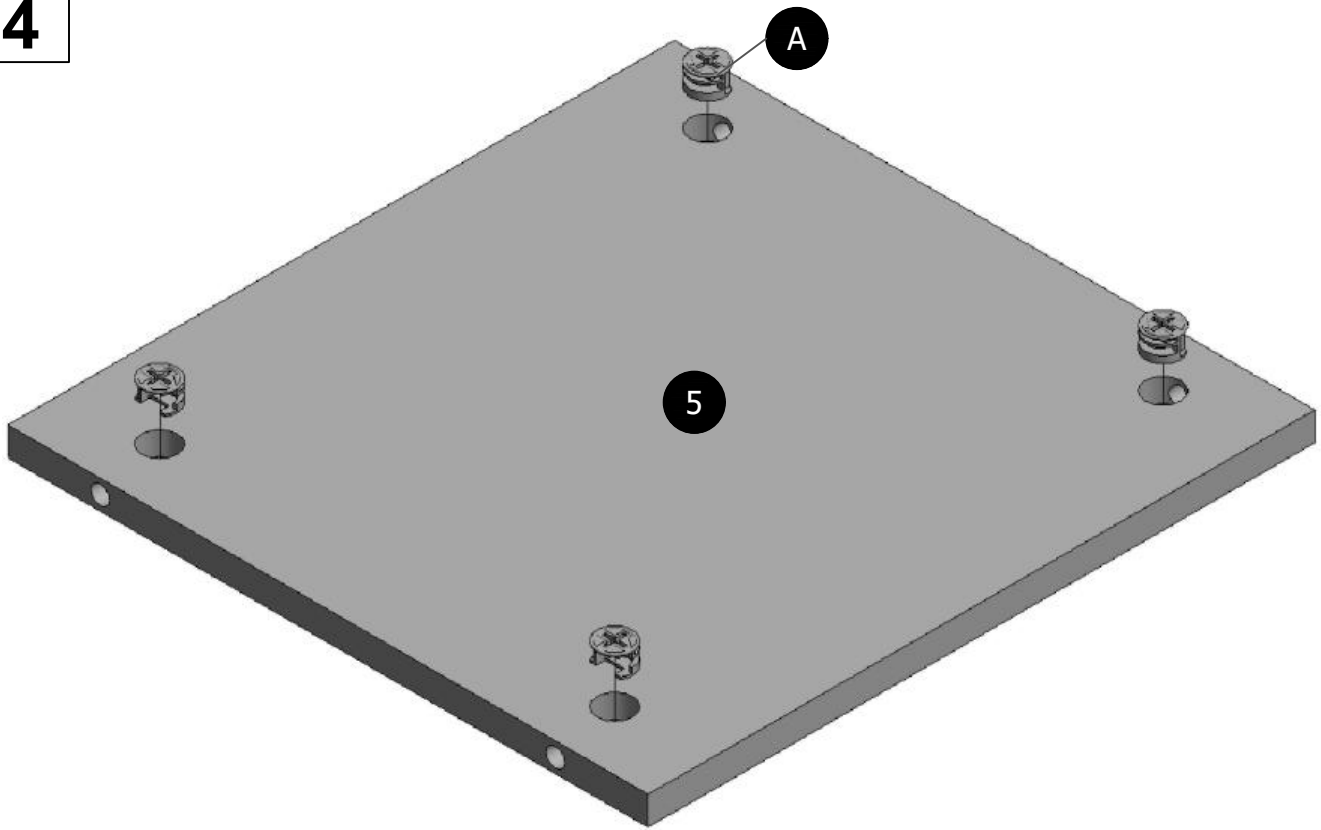


 STEP 6

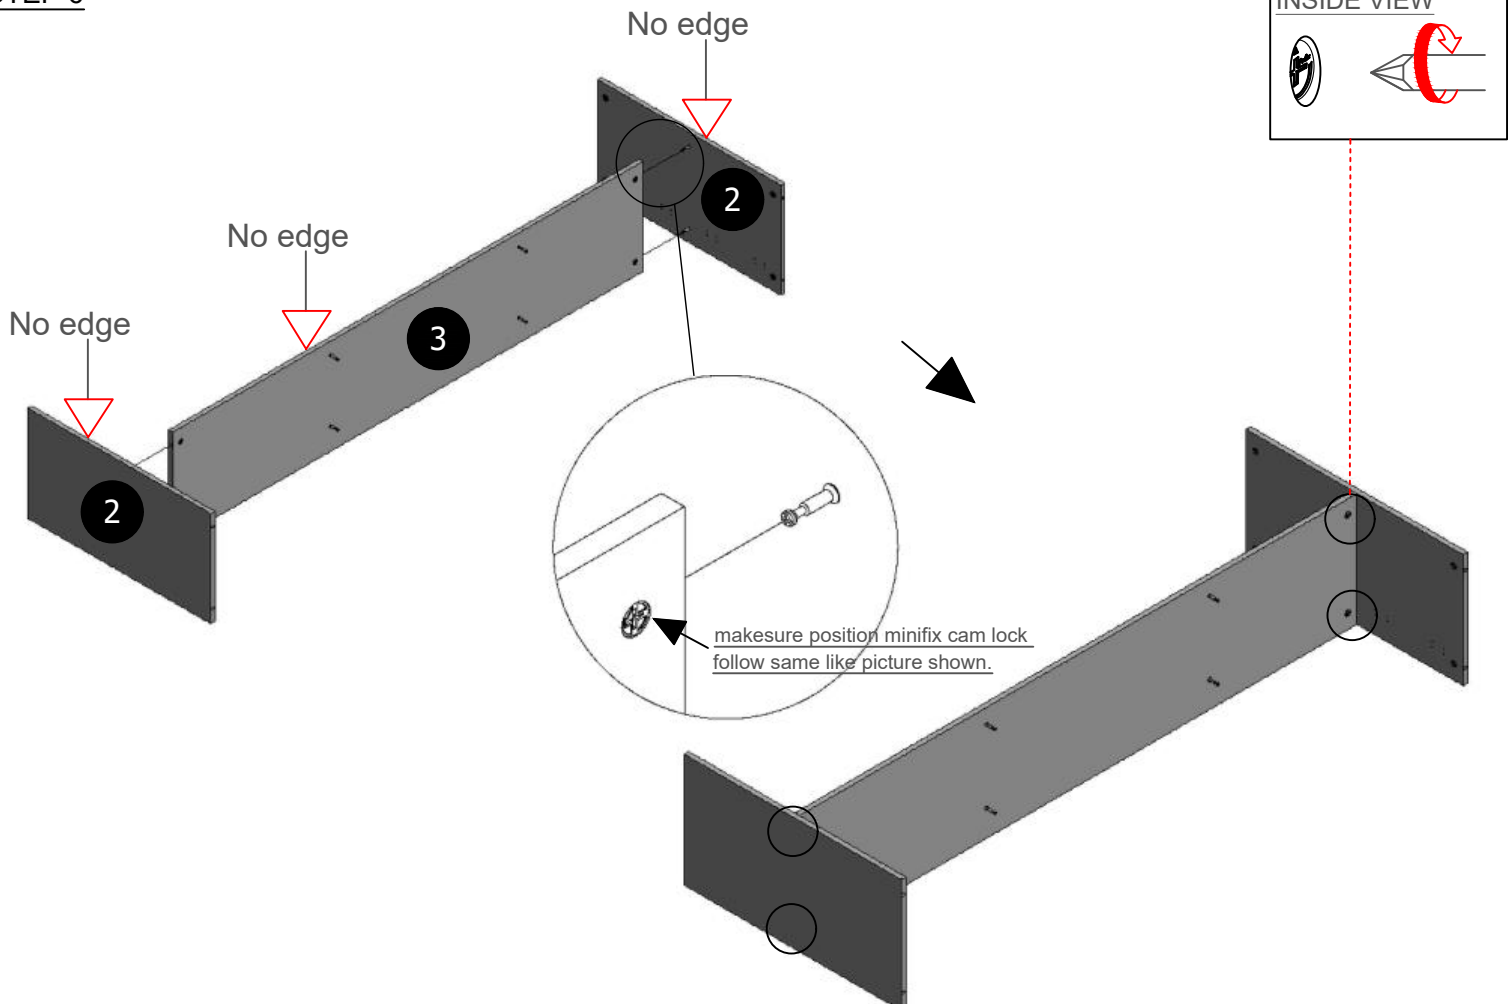


C4026TV ASSEMBLY INSTRUCTION

 STEP 7

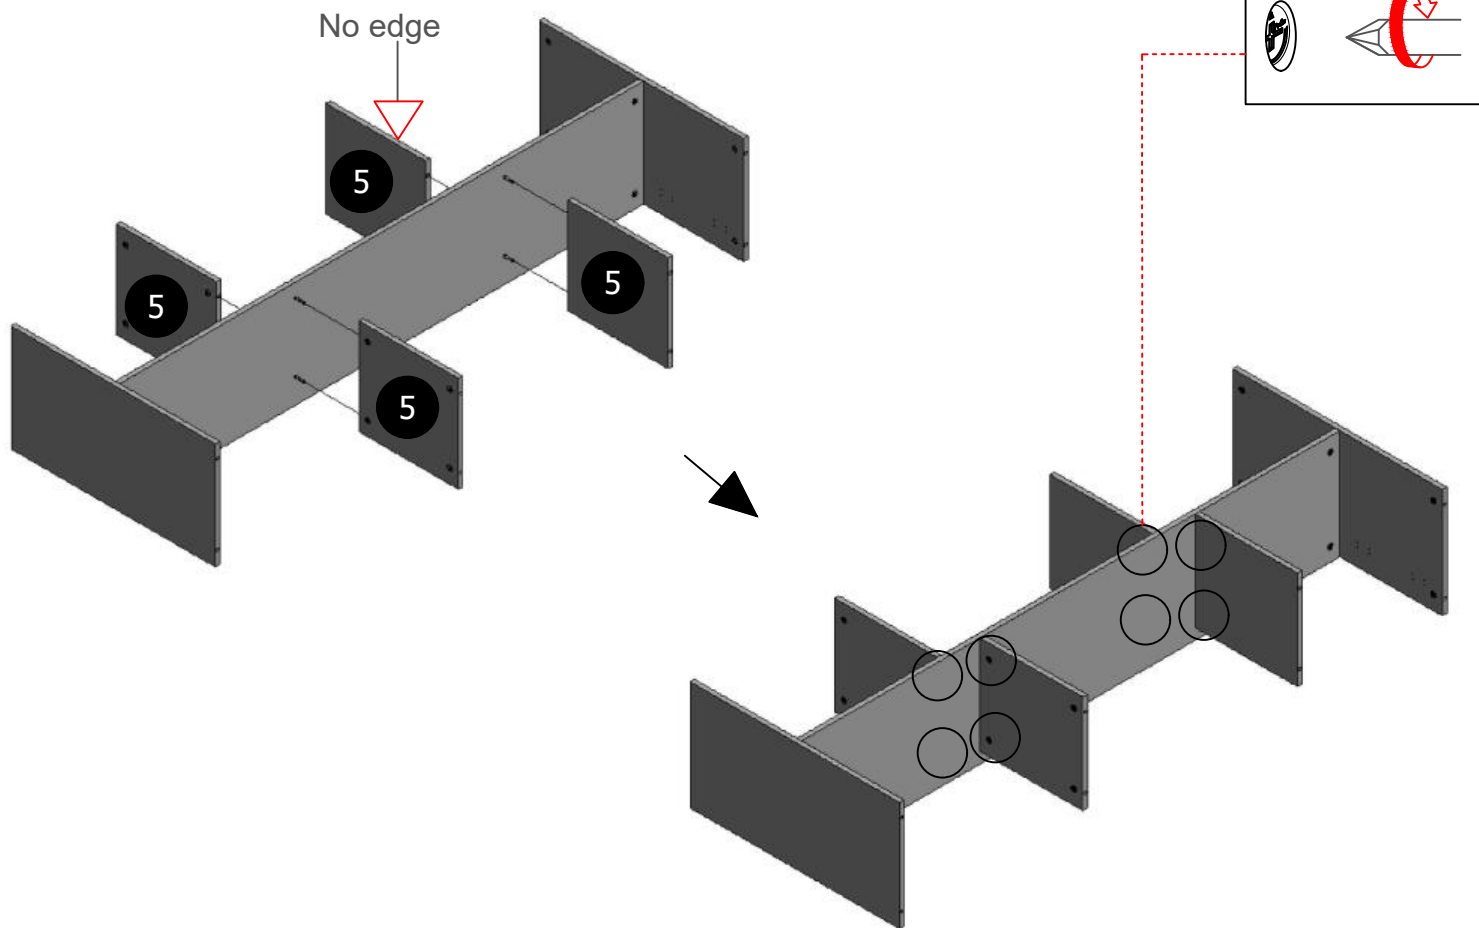


 STEP 8

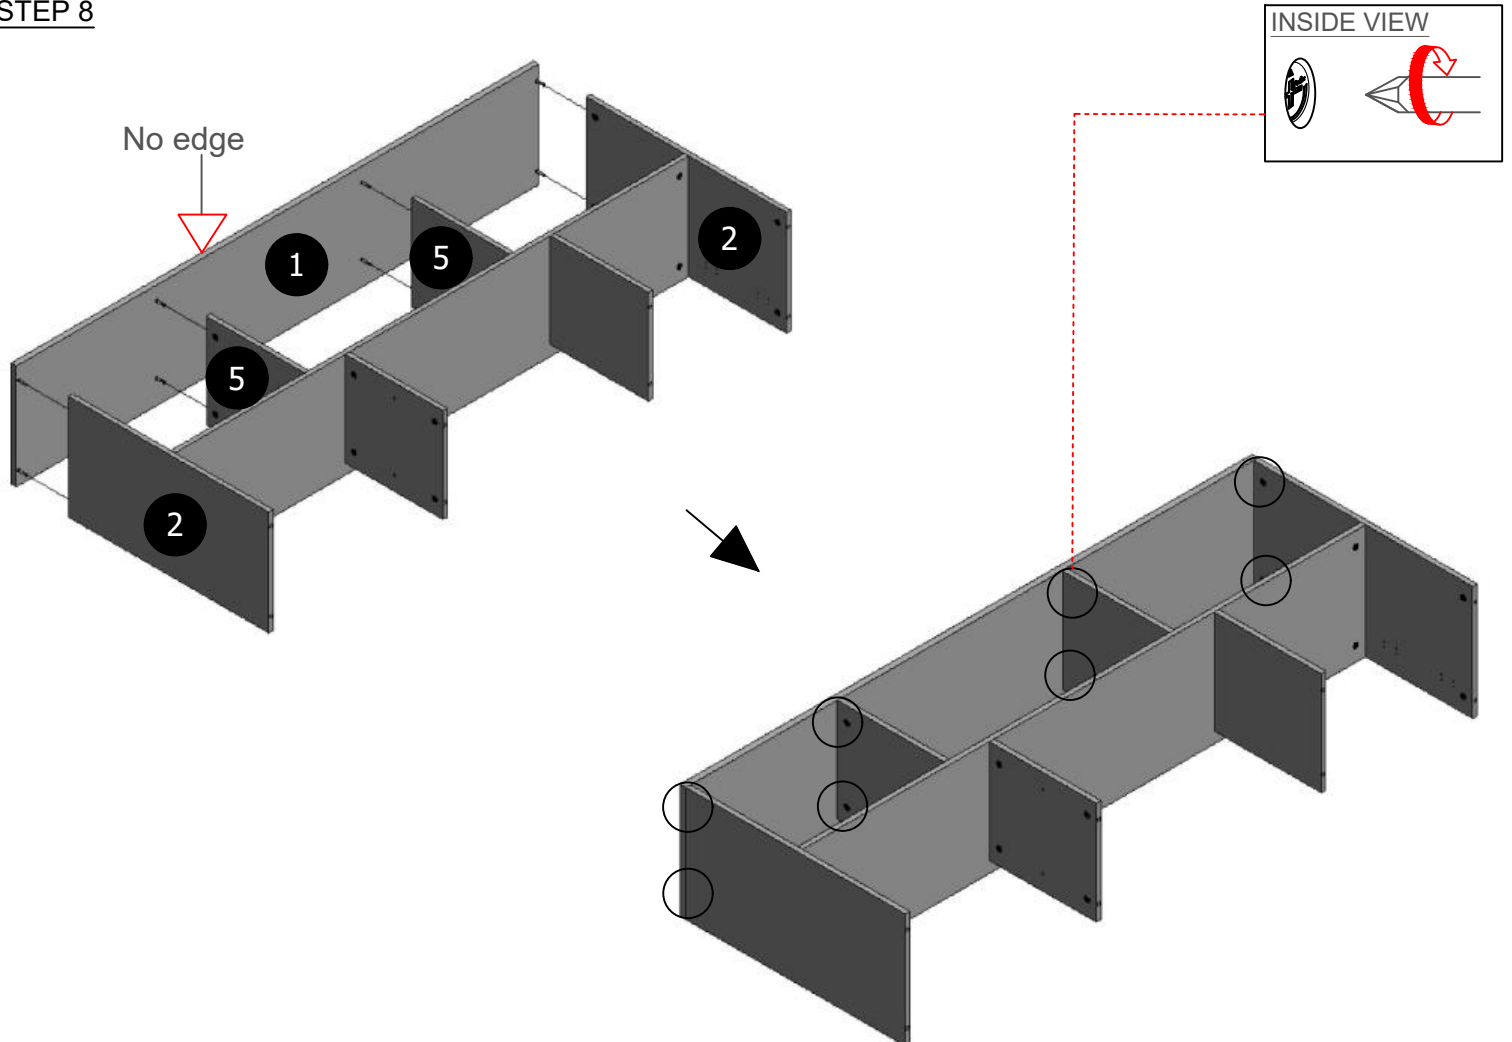


C4026TV ASSEMBLY INSTRUCTION

 STEP 9

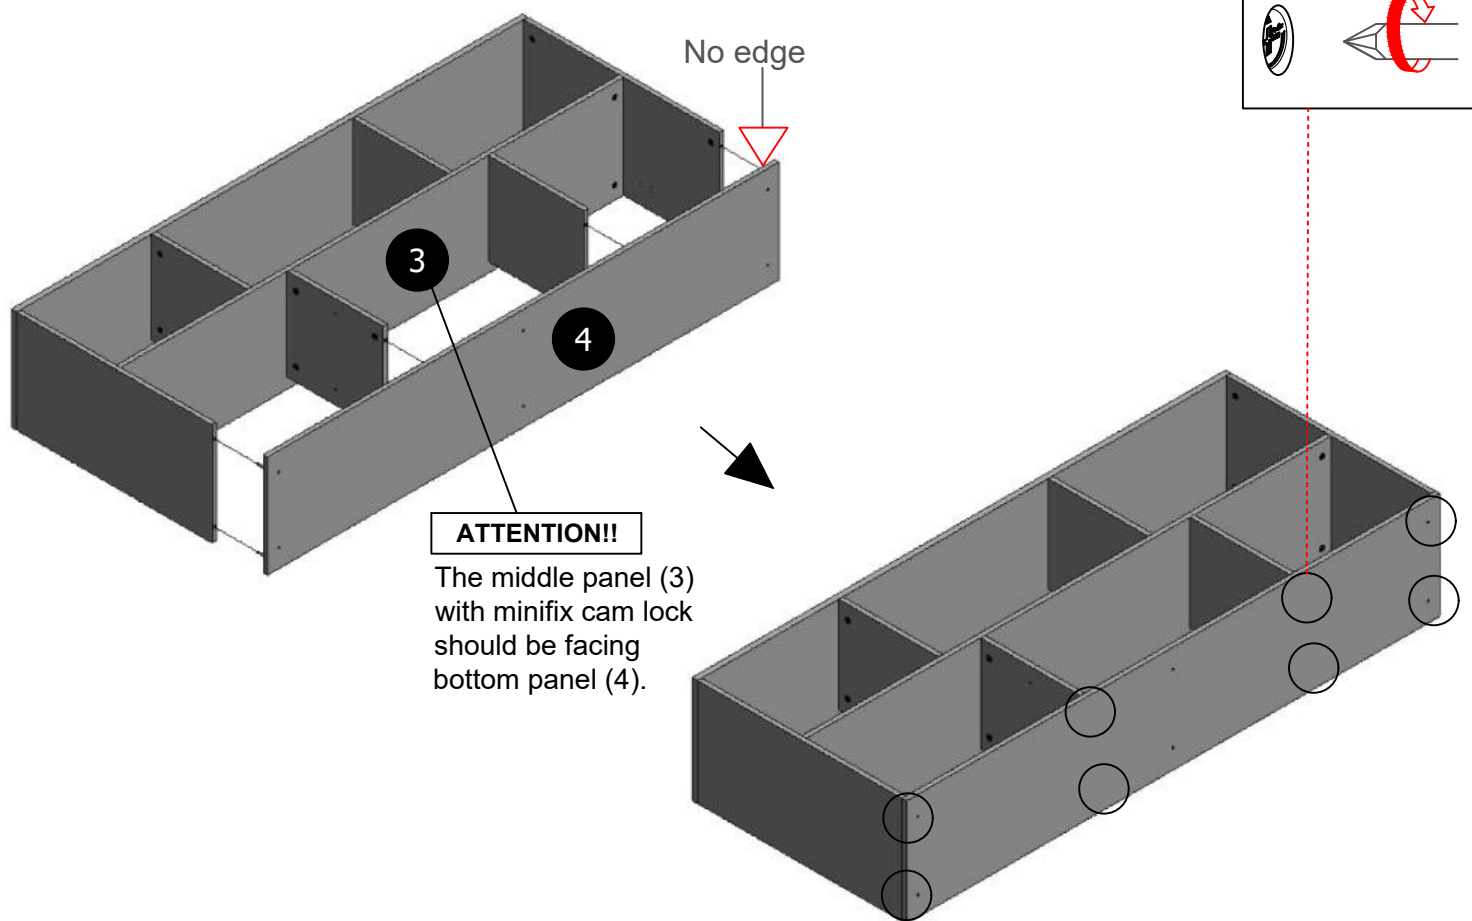


STEP 10

 Side with color paper must be the same.

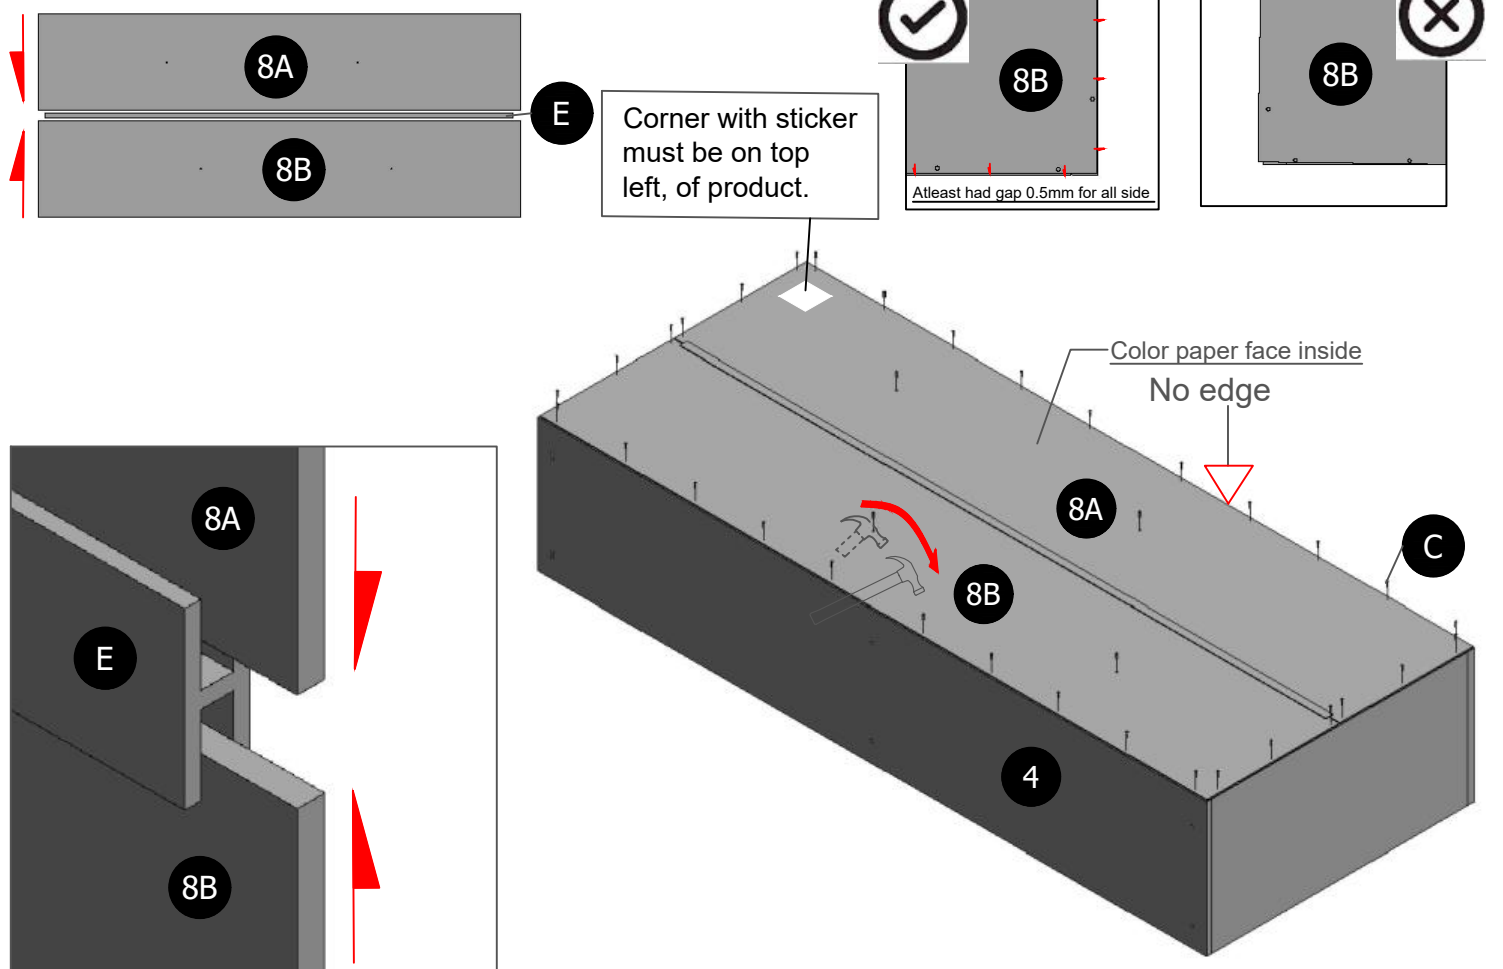


C4026TV ASSEMBLY INSTRUCTION

 STEP 11

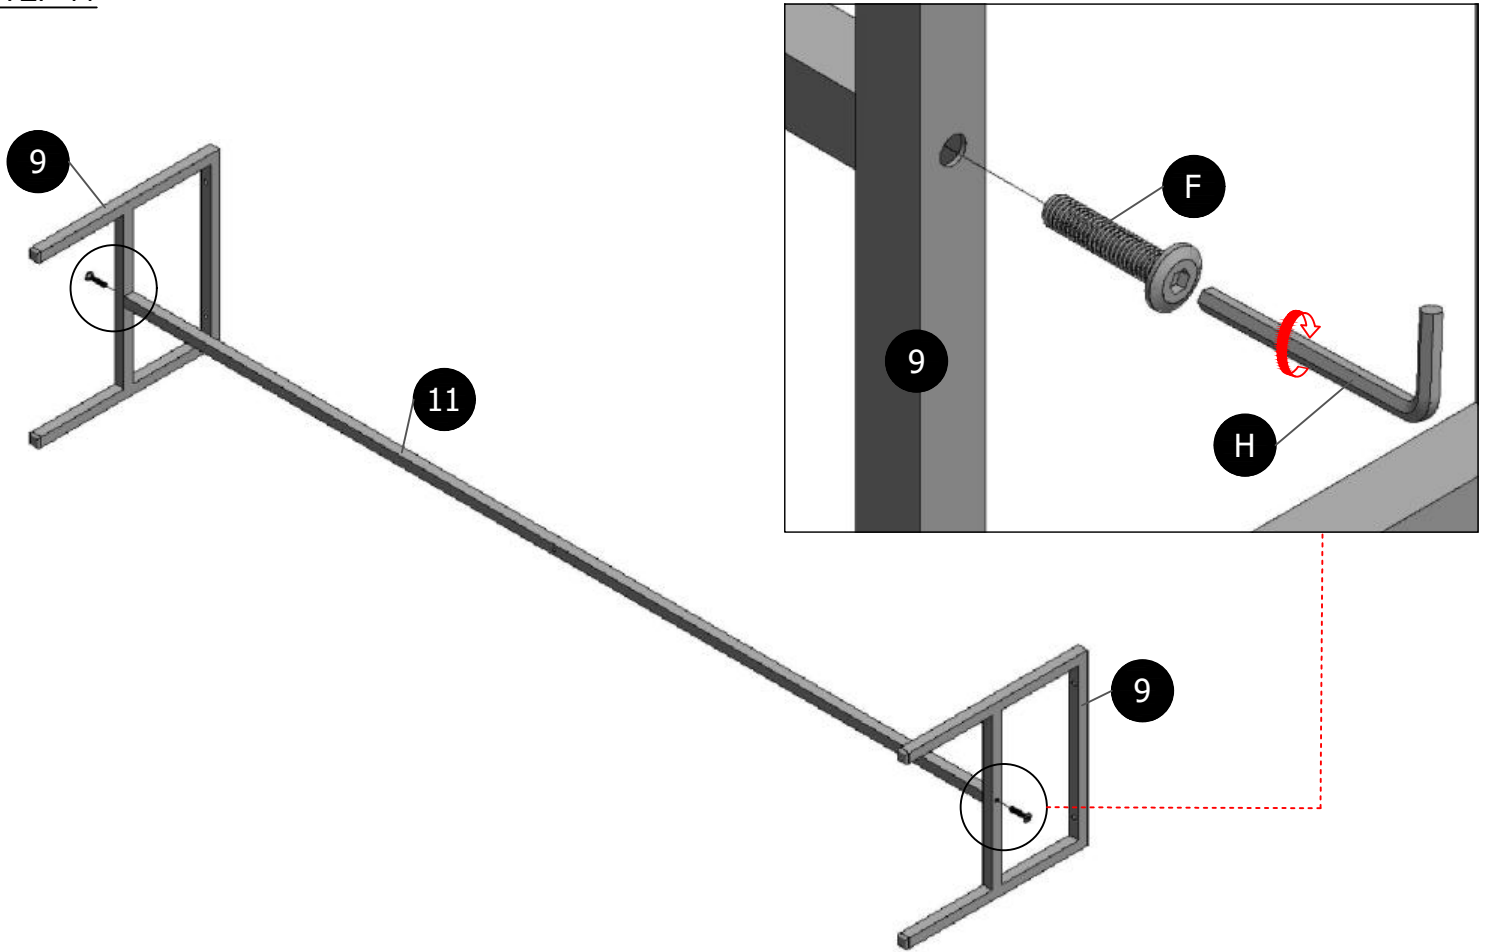


 STEP 12

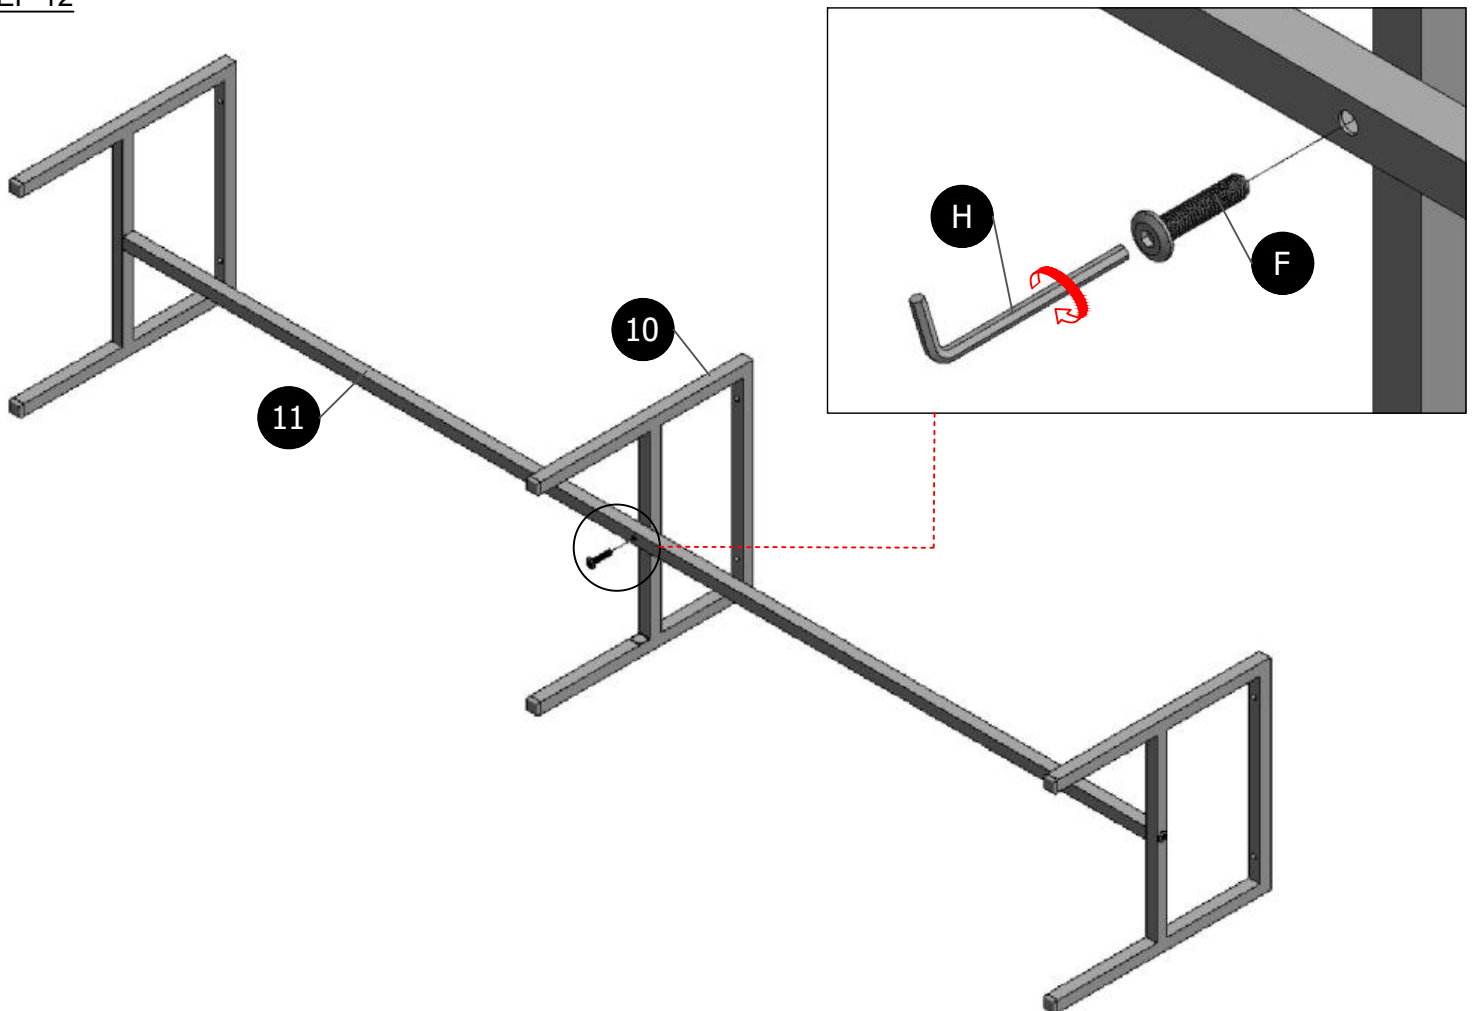


C4026TV ASSEMBLY INSTRUCTION

 STEP 13

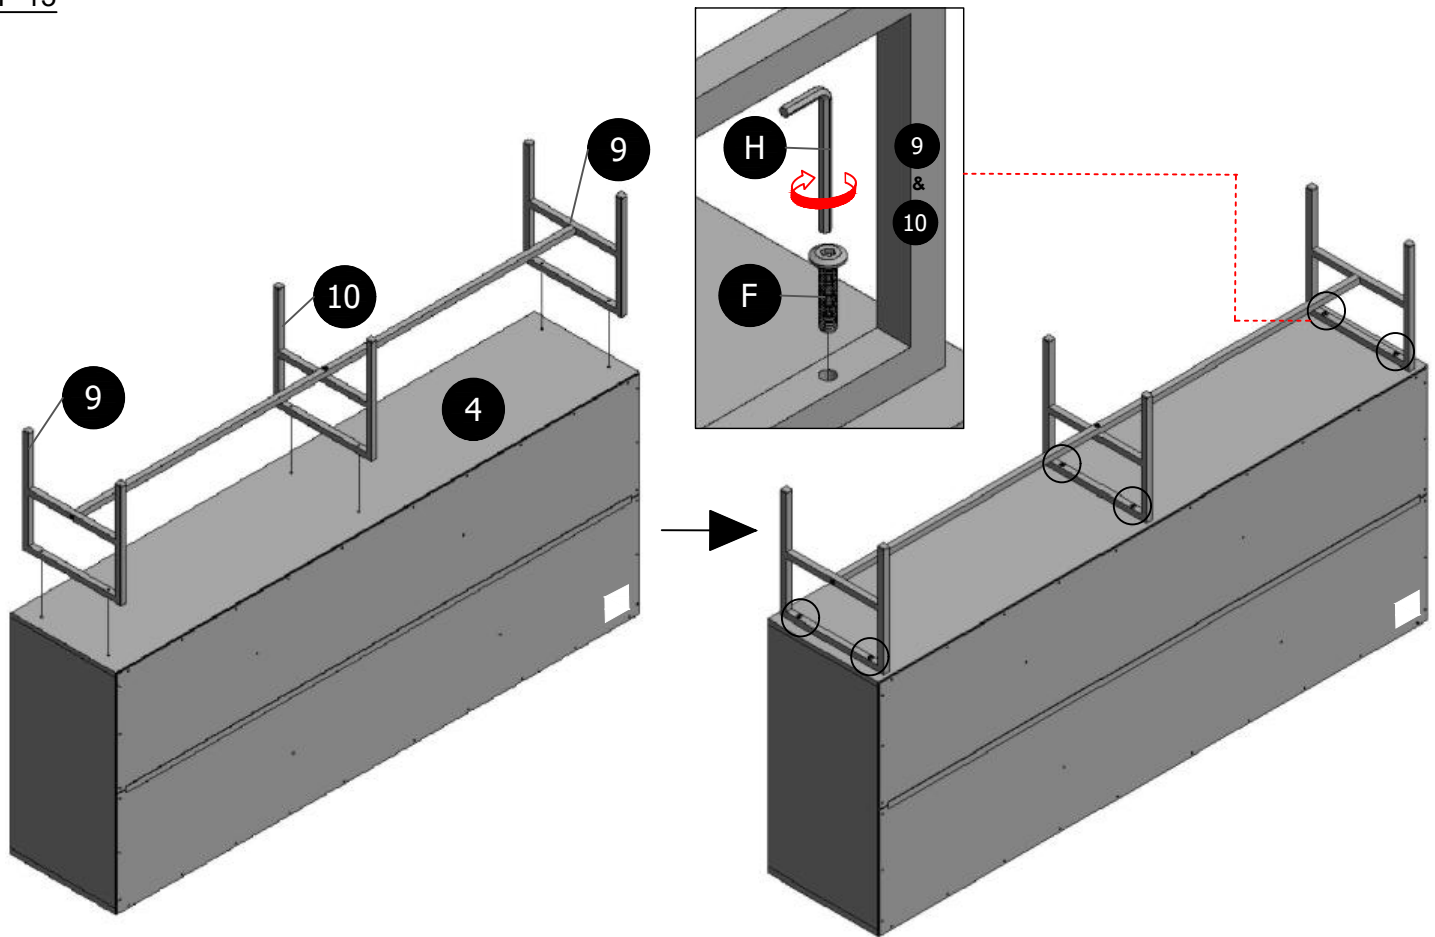


STEP 14


 
STEP 14.1

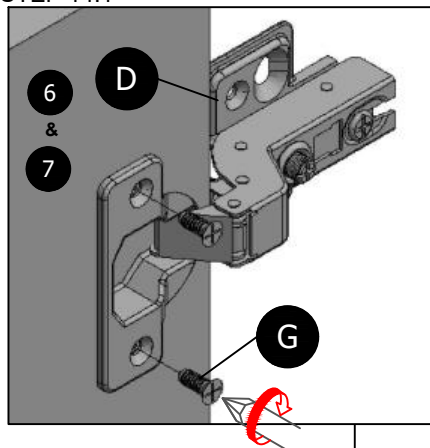

 STEP 14.2

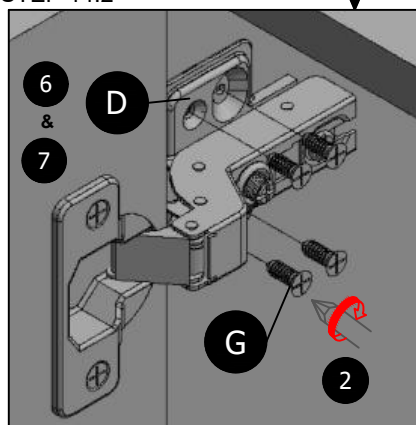

  STEP 14.3

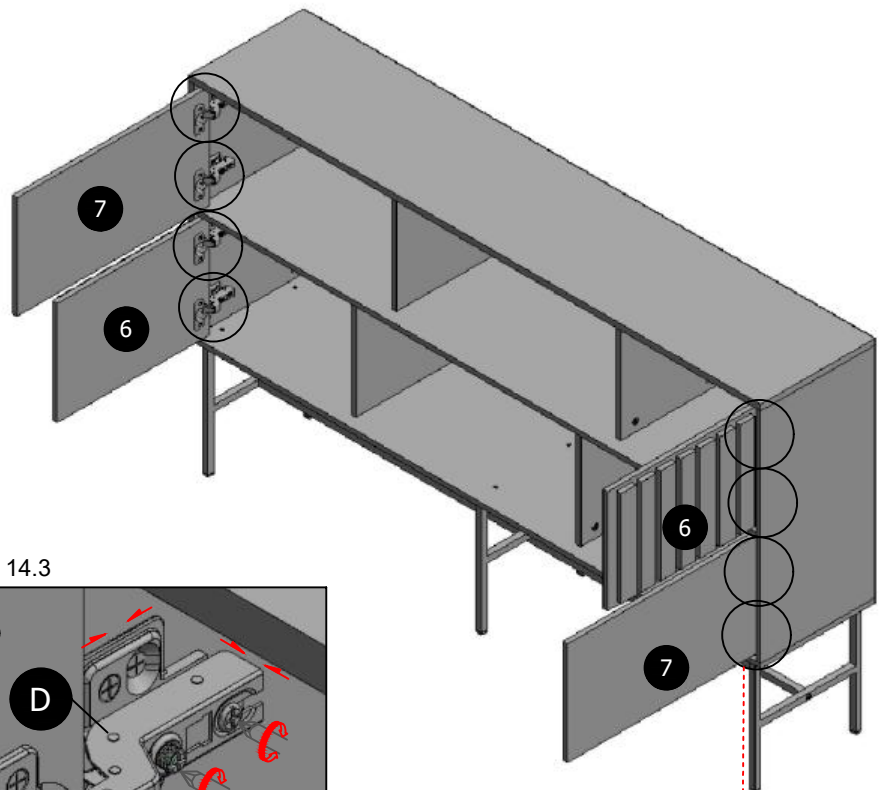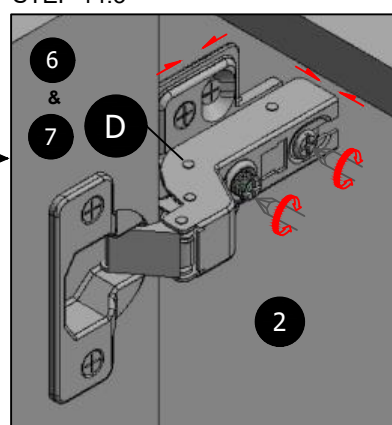

C4026TV ASSEMBLY INSTRUCTION

STEP 15

