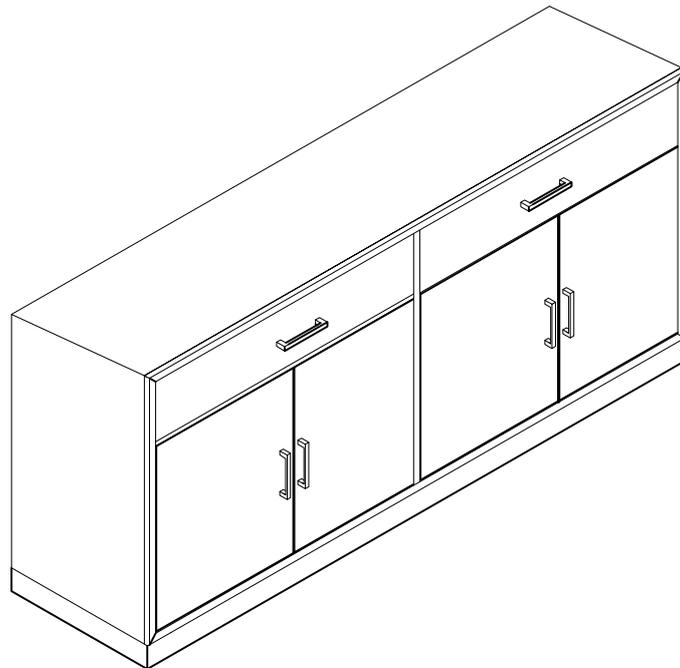





















CROSLEY

FURNITURE






Sideboard
CF4223



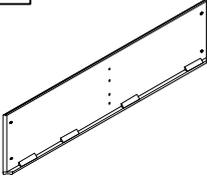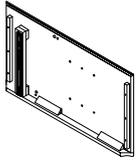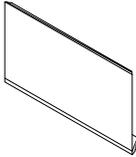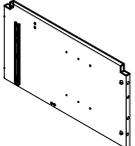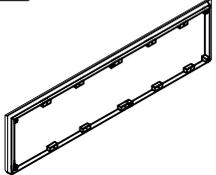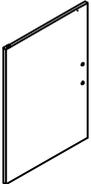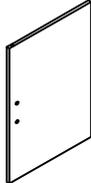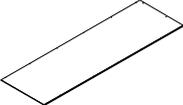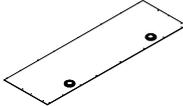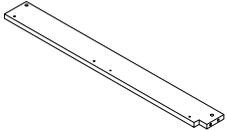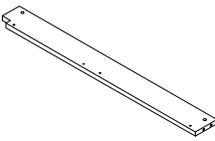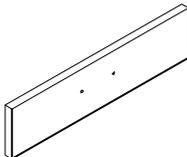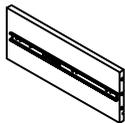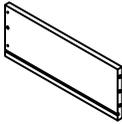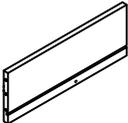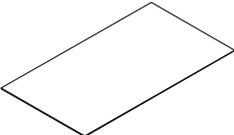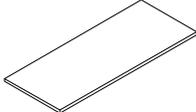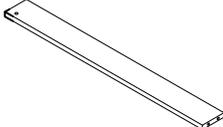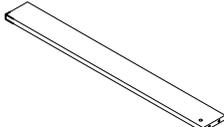PART LIST

<p>A2</p> 	<p>B2</p> 	<p>C2</p> 	<p>D2</p> 	<p>E2</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Partition Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>
<p>F2</p> 	<p>G2</p> 	<p>H2</p> 	<p>I2</p> 	<p>J2</p> 
<p>Left Door 2 PCS</p>	<p>Right Door 2 PCS</p>	<p>Top Back Panel 1 PC</p>	<p>Bottom Back Panel 1 PC</p>	<p>Left Cross Rail 1 PC</p>
<p>K2</p> 	<p>L2</p> 	<p>M2</p> 	<p>N2</p> 	<p>O2</p> 
<p>Right Cross Rail 1 PC</p>	<p>Drawer Front Panel 2 PCS</p>	<p>Drawer Left Panel 2 PCS</p>	<p>Drawer Right Panel 2 PCS</p>	<p>Drawer Back Panel 2 PCS</p>
<p>P2</p> 	<p>Q2</p> 	<p>R2</p> 	<p>S2</p> 	<p>T2</p> 
<p>Drawer Bottom Panel 2 PCS</p>	<p>Drawer Bottom Rail 2 PCS</p>	<p>Adjustable Shelf 2 PCS</p>	<p>Left Back Rail 1 PC</p>	<p>Right Back Rail 1 PC</p>
<p>U</p>  <p>Cover 2 PCS</p>				

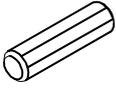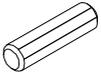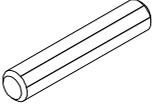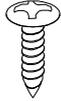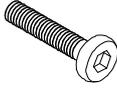HARDWARE LIST

 Ø8*30mm	 Ø6*30mm	 Ø8*50mm		
Short Wood Dowel 8 PCS (Extra 1)	Wood Dowel 8 PCS (Extra 1)	Long Wood Dowel 3 PCS (Extra 1)	Double Magnet 2 PCS	Round Head Screw 4 PCS (Extra 1)
				
Handle 6 PCS	Round Head Bolt 12 PCS (Extra 1)	Bolt 8 PCS (Extra 1)	Shelf Holder 8 PCS (Extra 1)	Screw 40 PCS (Extra 1)
				 M2
Cam Bolt 30 PCS (Extra 1)	Cam Lock 30 PCS (Extra 1)	Binding Post 2 PCS (Extra 1)	Cam Sticker 30 PCS (Extra 1)	Small Allen Wrench 1 PC
 M4				
Allen Wrench 1 PC	Safety Strap Kit 1 SET			

ADDITIONAL TOOLS (Not Provided)

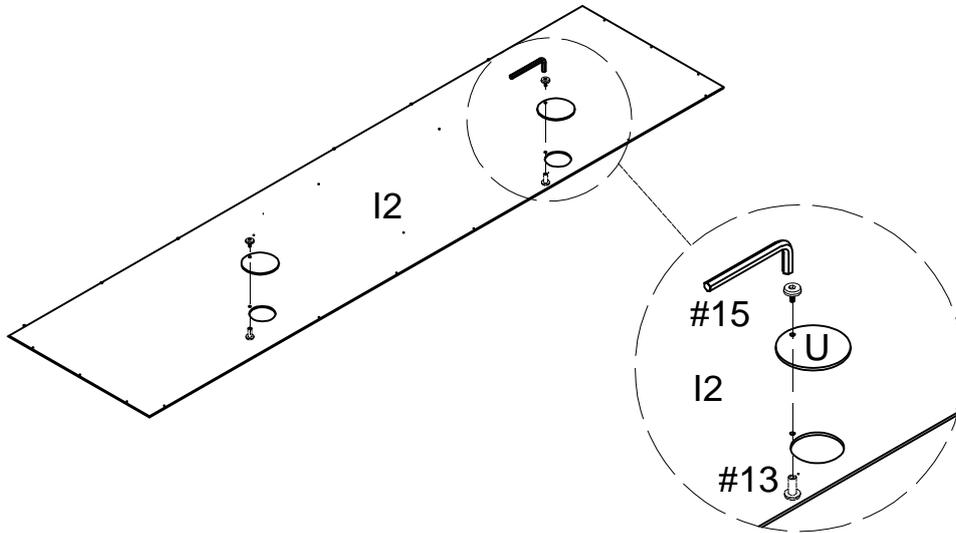
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach covers (part U) to bottom back panel (part I2) using binding posts (part #13) and small allen wrench (part #15).



- #13  x 2
- #15  x 1

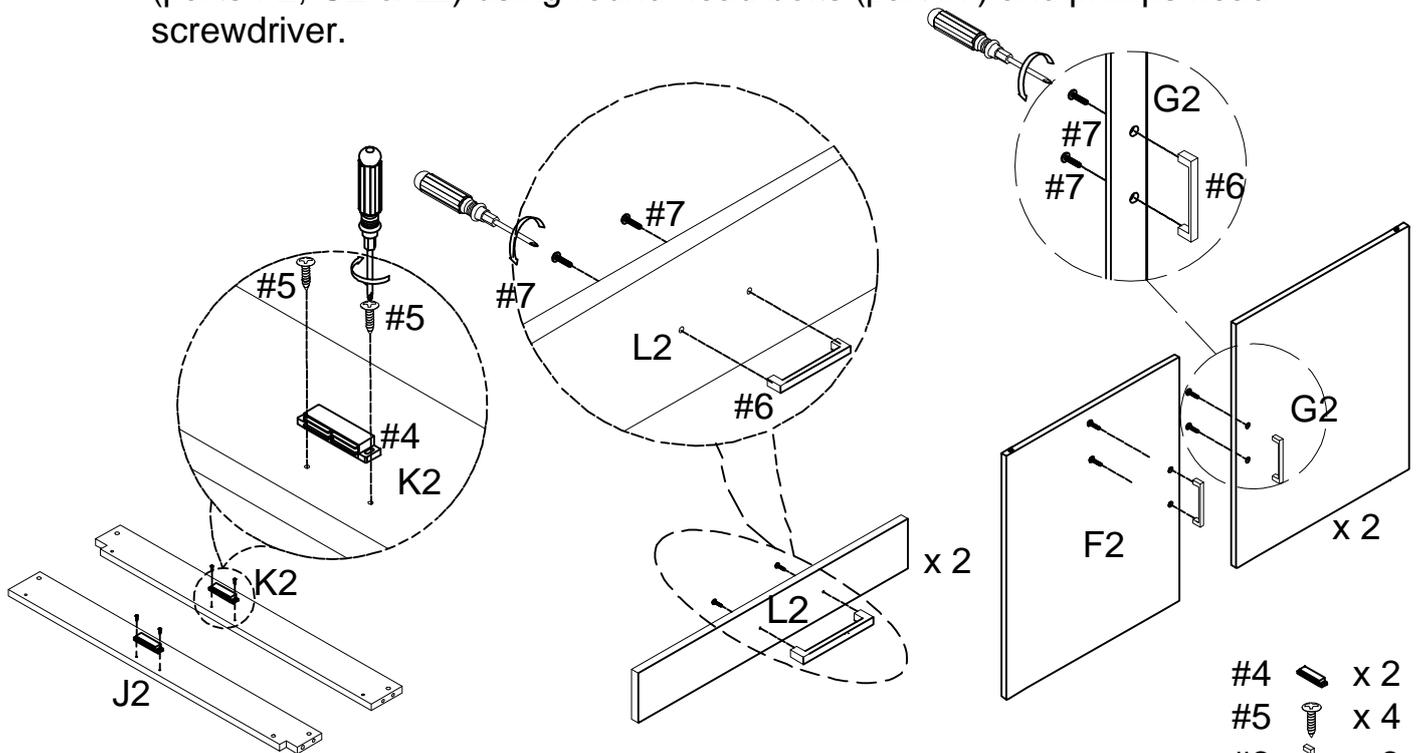
Step 2. Attach double magnets (part #4) to rails (parts J2 & K2) using round head screws (part #5) and phillips head screwdriver. Attach handles (part #6) to panels (parts F2, G2 & L2) using round head bolts (part #7) and phillips head screwdriver.



- #4  x 2
- #5  x 4
- #6  x 6
- #7  x 12


Step 3. Insert cam bolts (part #11) into pre-drilled holes of panels (parts A2, B2, C2, D2, E2, L2, M2, N2 & O2) using phillips head screwdriver.

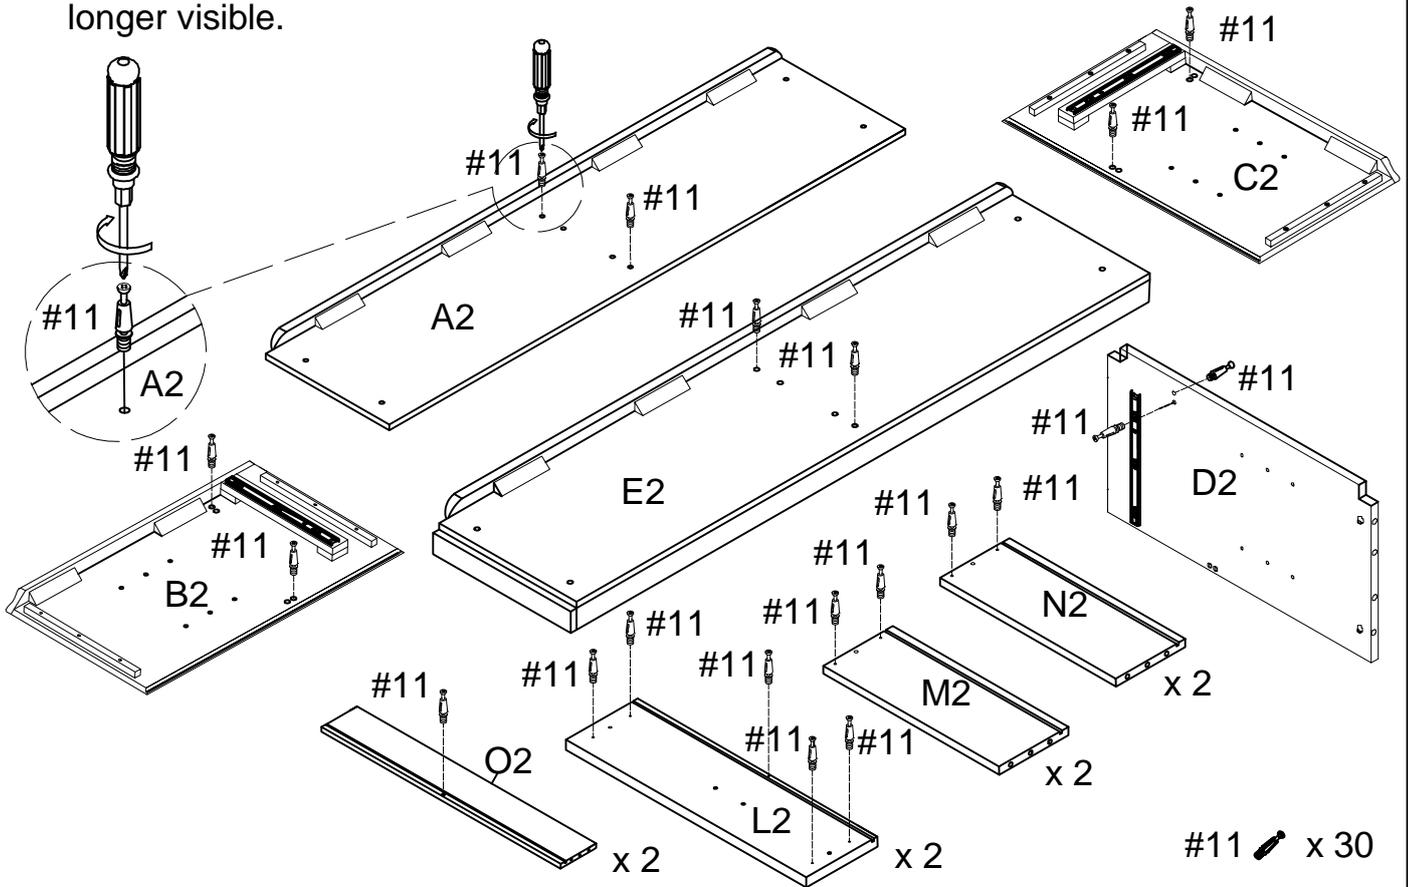Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.





Step 4. Attach drawer panels (parts M2 & N2) to drawer back panel (part O2) using wood dowels (part #2), cam locks (part #12) and phillips head screwdriver. Slide drawer bottom panel (part P2) into grooves of assembled unit (parts M2, N2 & O2). Attach drawer bottom rail (part Q2) to drawer back panel (part O2) using cam lock (part #12) and phillips head screwdriver. Attach drawer front panel (part L2) to assembled unit (parts M2, N2, O2, P2 & Q2) using wood dowels (part #2), cam locks (part #12) and phillips head screwdriver. Repeat for remaining drawer.

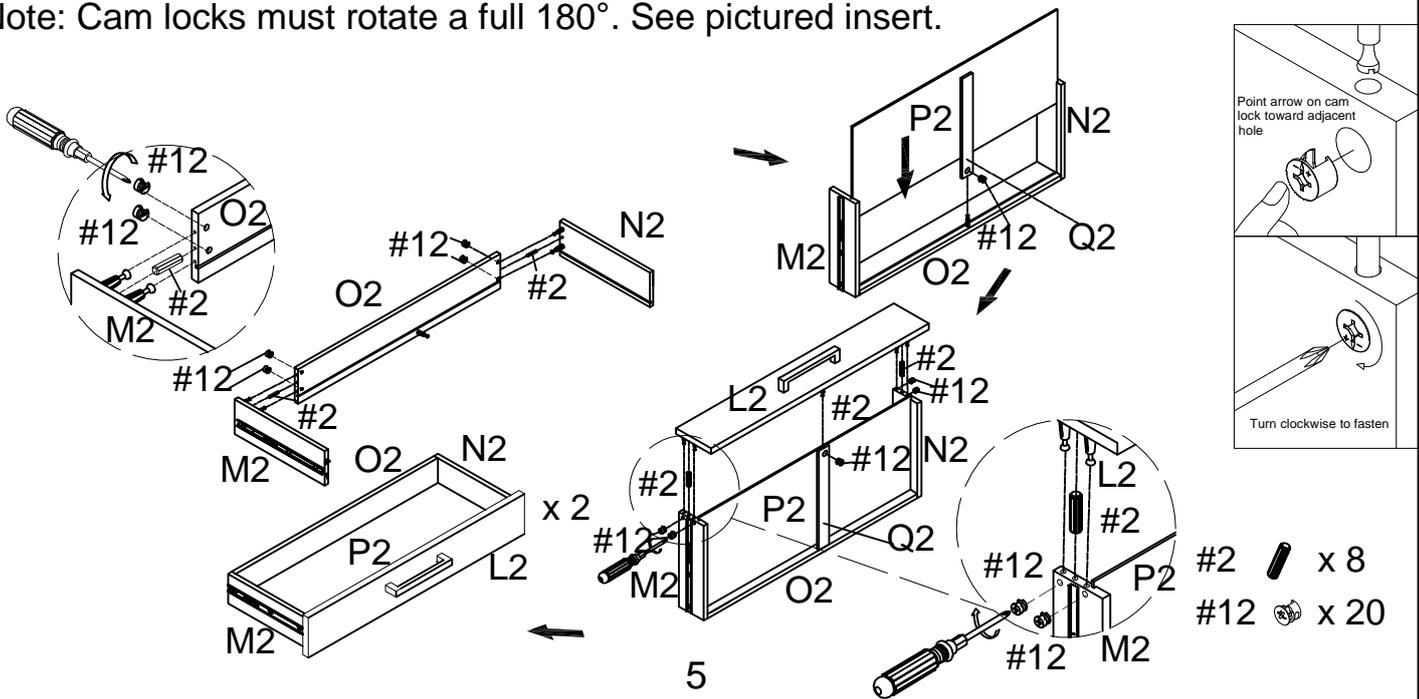Note: Cam locks must rotate a full 180°. See pictured insert.



Step 5. Attach rails (parts J2 & S2) to panels (parts B2 & D2) using cam locks (part #12), short wood dowels (part #1), long wood dowels (part #3) and phillips head screwdriver.

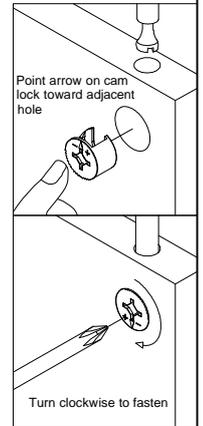
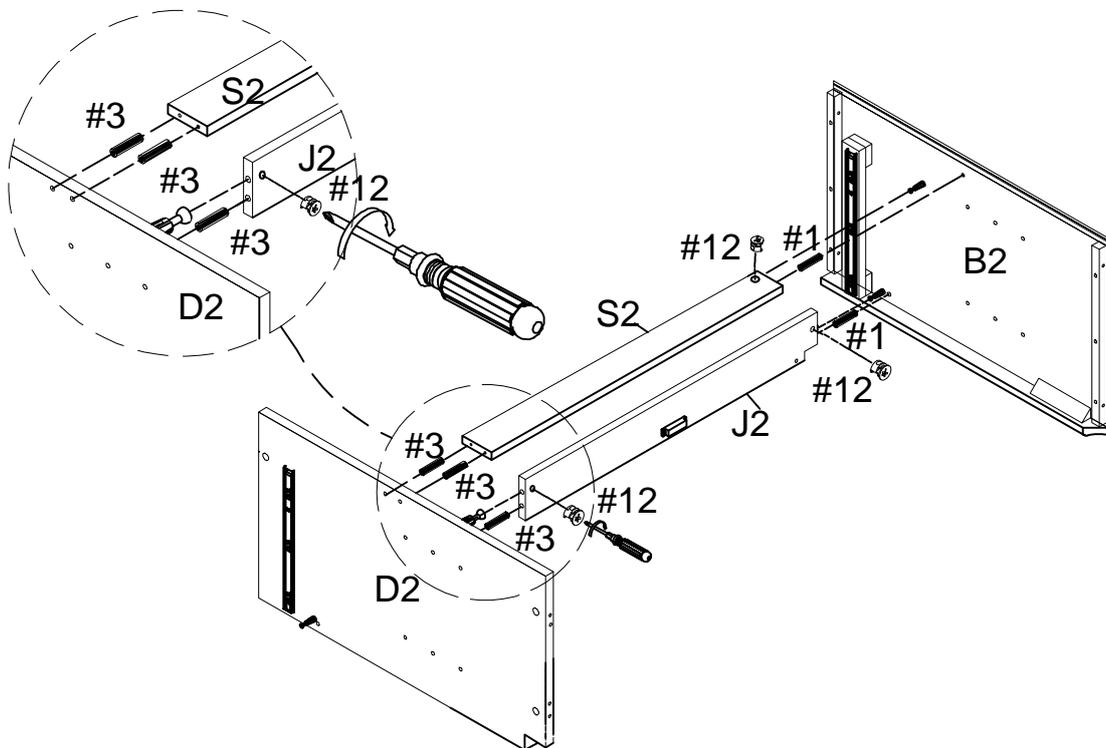
Note: Cam locks must rotate a full 180°. See pictured insert.



- #1  x 2
- #3  x 3
- #12  x 3

Step 6. Attach rails (parts K2 & T2) to panels (parts C2 & D2) using short wood dowels (part #1), cam locks (parts #12) and phillips head screwdriver.

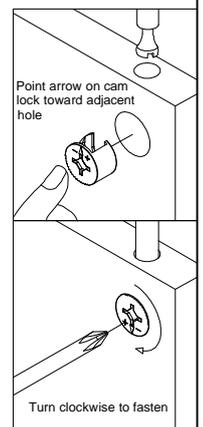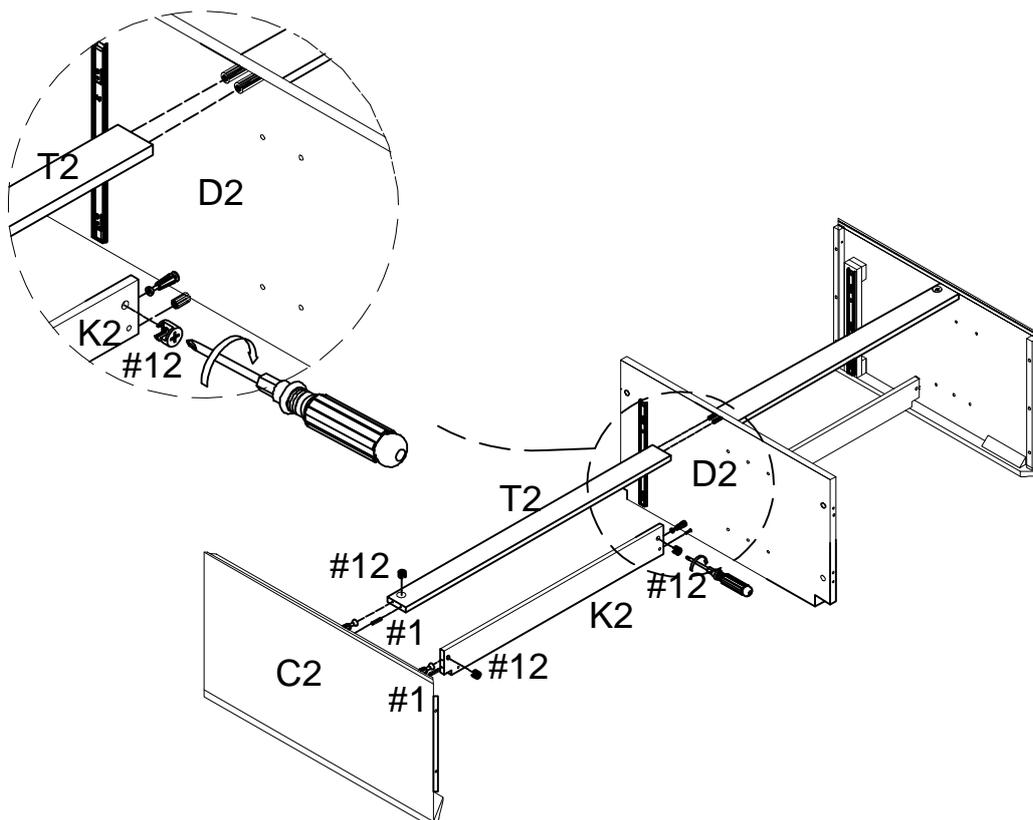
Note: Cam locks must rotate a full 180°. See pictured insert.



- #1  x 2
- #12  x 3


Step 7. Attach bottom panel (part E2) to assembled unit (parts B2, C2 & D2) using short wood dowels (part #1), bolts (part #8), cam locks (part #12) and allen wrench (part #16).

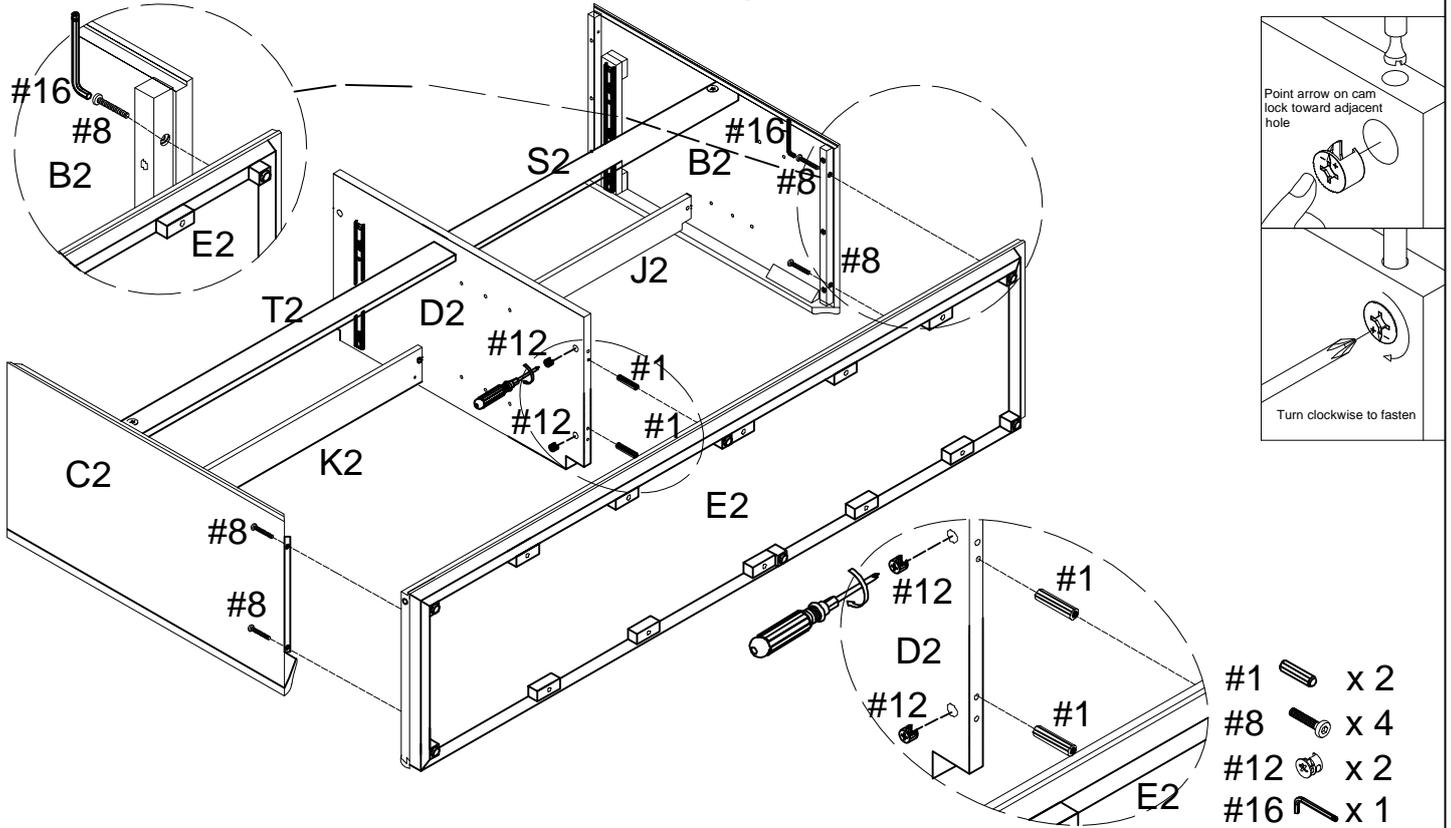Note: Cam locks must rotate a full 180°. See pictured insert.




Step 8. Attach top panel (part A2) to assembled unit (parts B2, C2 & D2) using short wood dowels (part #1), bolts (part #8), cam locks (part #12), allen wrench (part #16) and phillips head screwdriver.

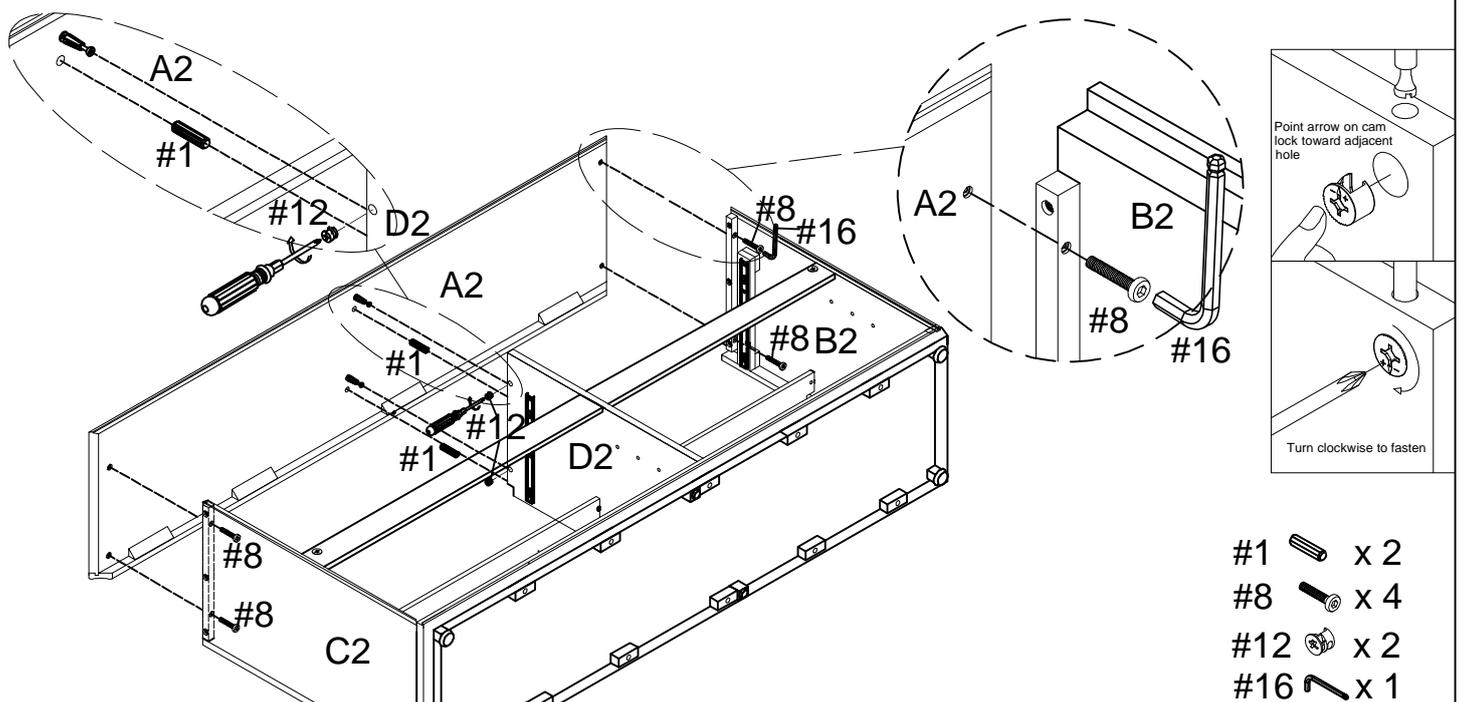Note: Cam locks must rotate a full 180°. See pictured insert.




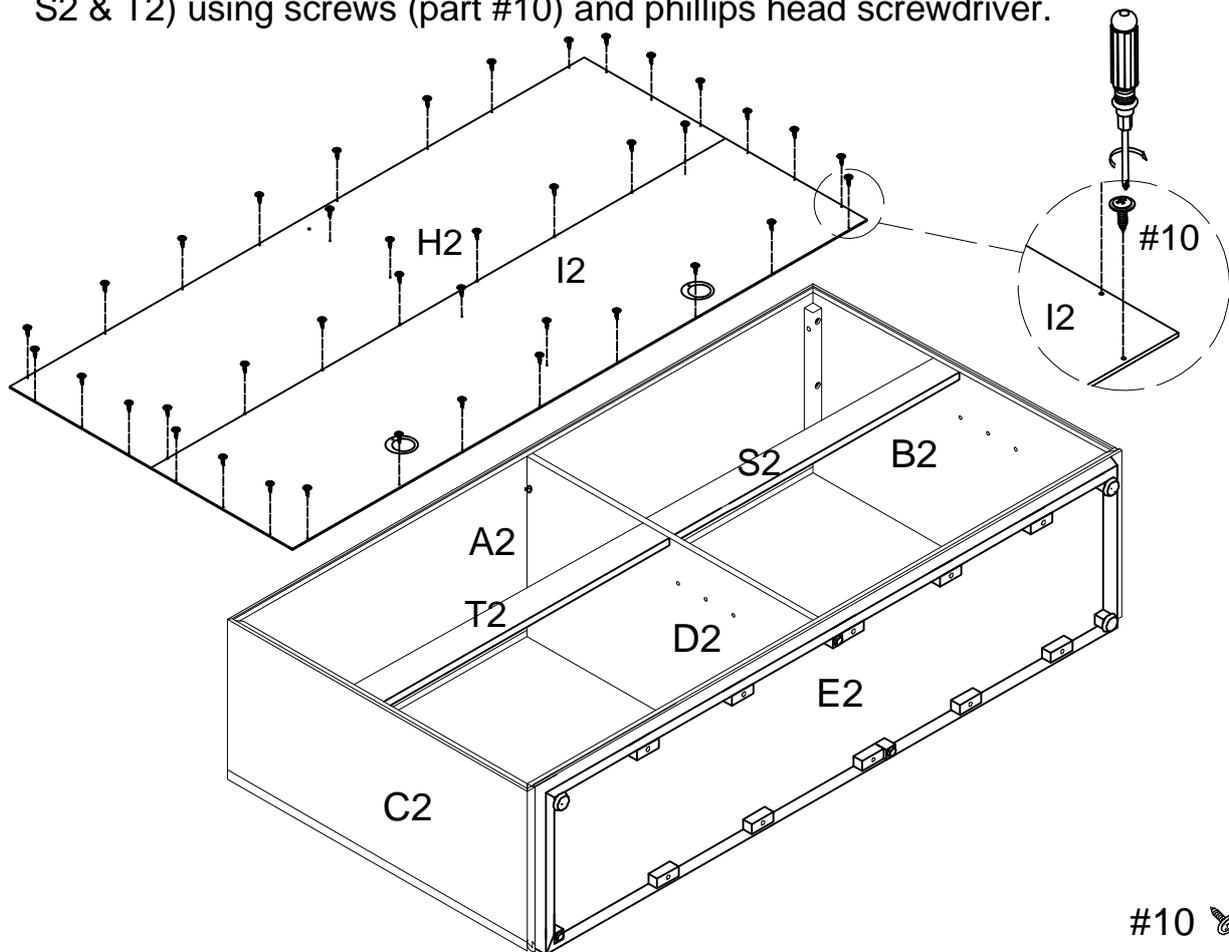Step 9. Attach back panels (parts H2 & I2) to assembled unit (parts A2, B2, C2, D2, E2, S2 & T2) using screws (part #10) and phillips head screwdriver.




#10  x 40

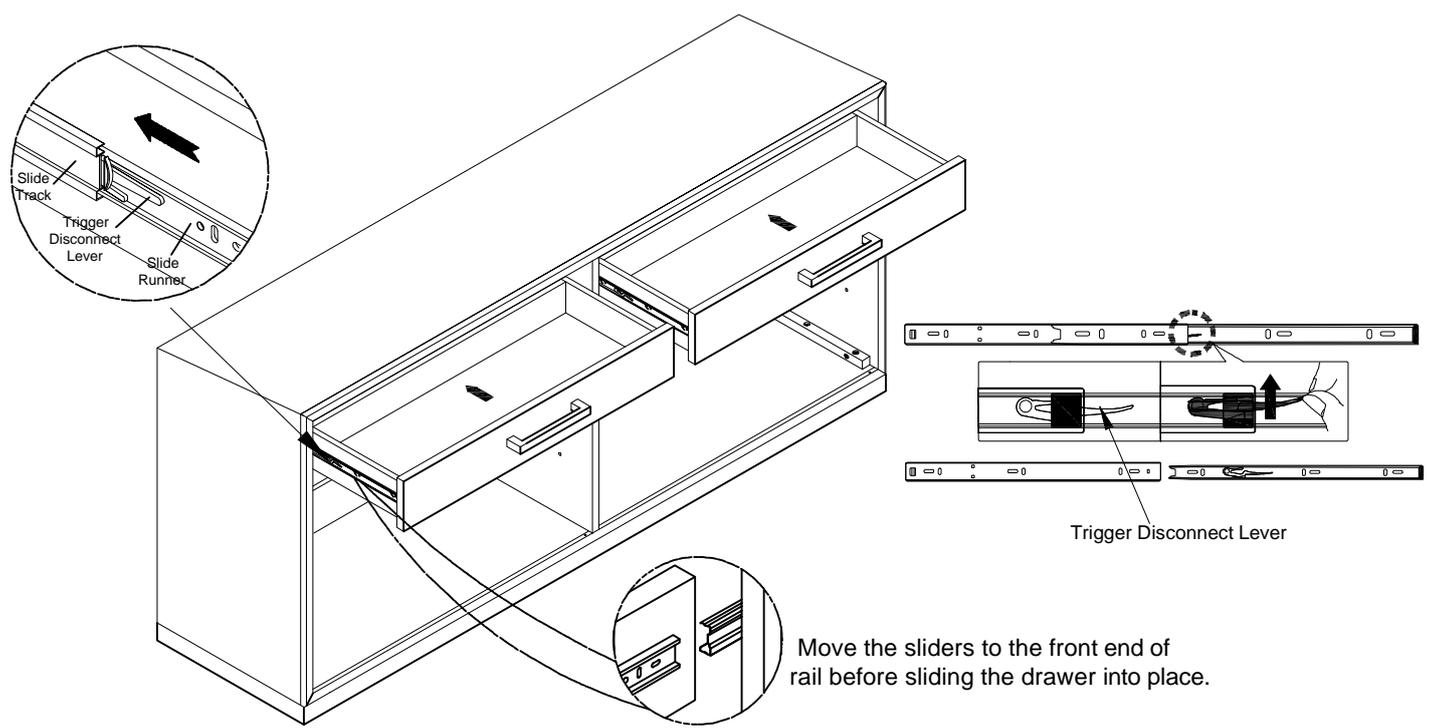Step 10. Carefully turn unit upright. Slide assembled drawers into place.
 Note: To release trigger disconnect levers push one side up and the other down.



Move the sliders to the front end of rail before sliding the drawer into place.

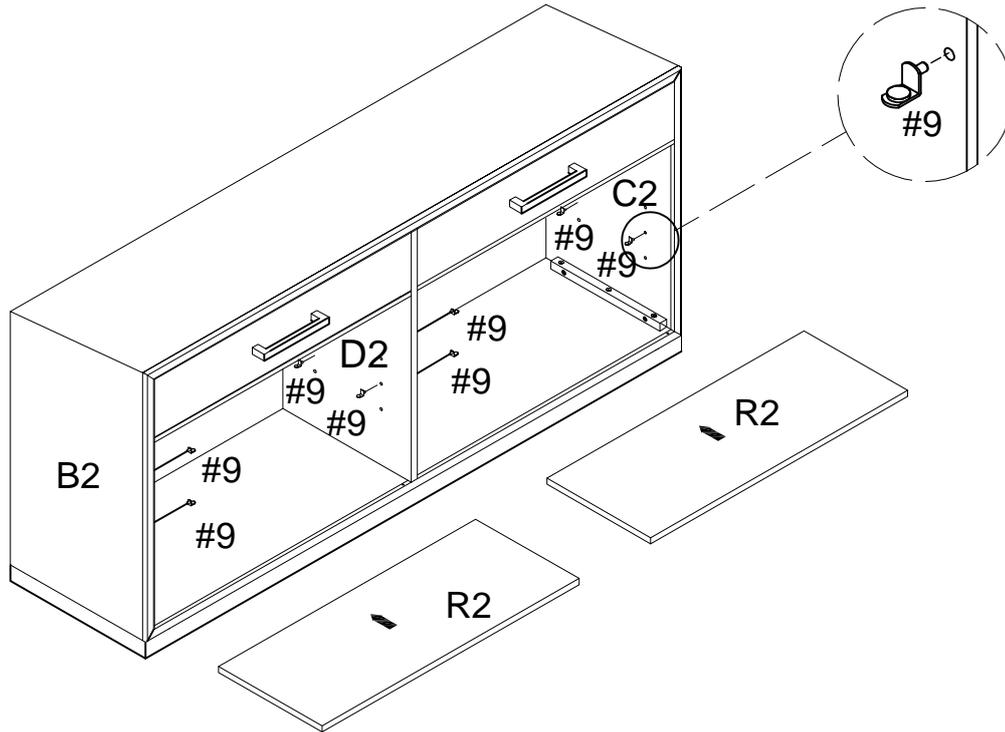Step 11. Place shelf holders (part #9) into desired position and then slide adjustable shelves (part R2) into place.




#9  x 8

Step 12. Attach doors (parts F2 & G2) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part E2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of cross rails (parts J2 & K2). Using cam stickers (part #14) cover all cam locks (part #12).


NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

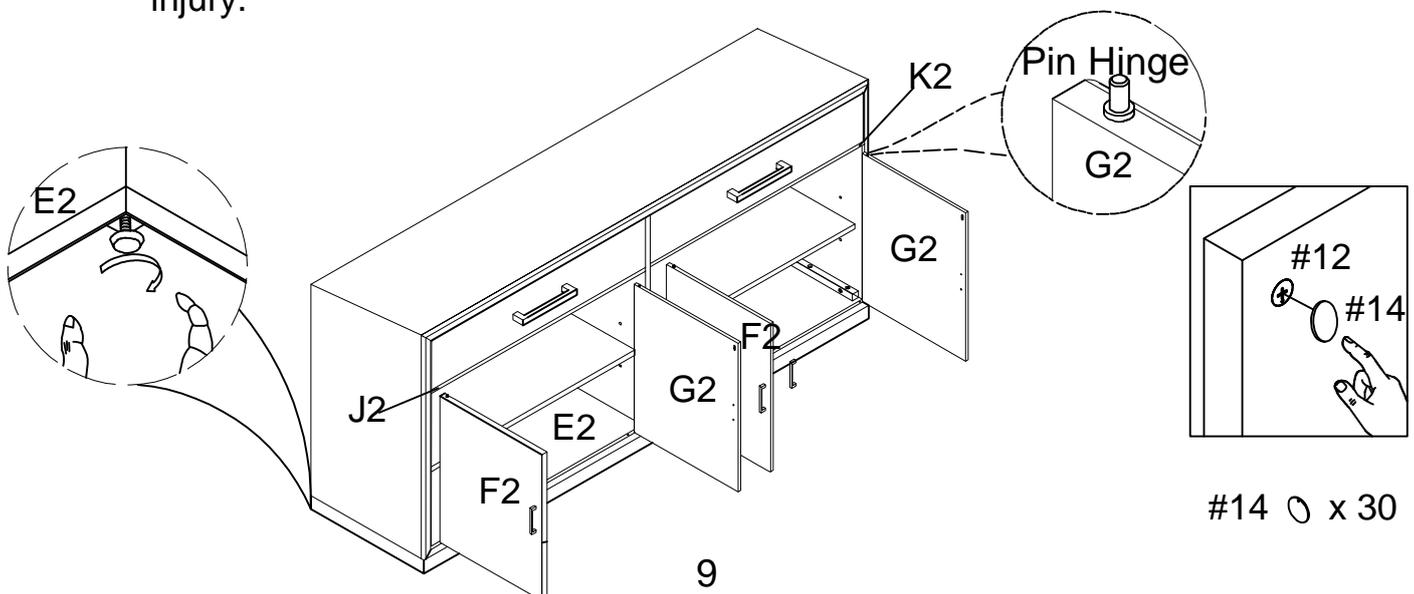Important: Safety strap kit (part #17) must be installed to prevent tipping, damage and/or injury.



#14  x 30

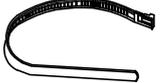
#17	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

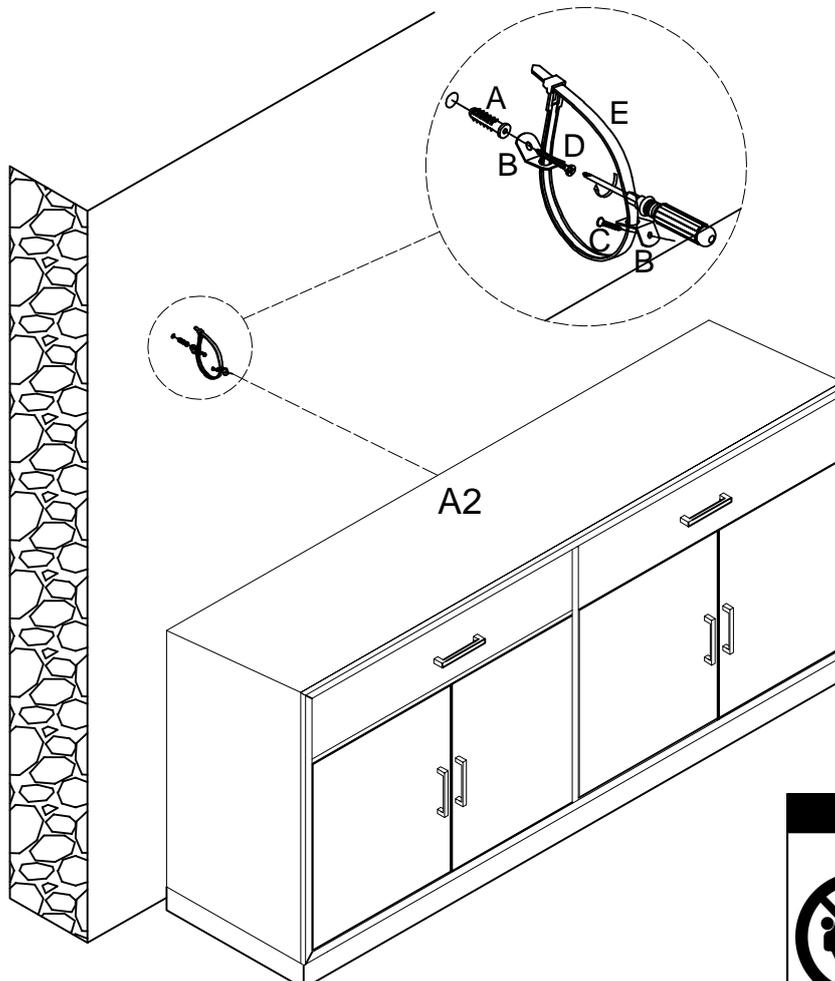Note: This item is not intended for clothing storage use.



▲ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!