
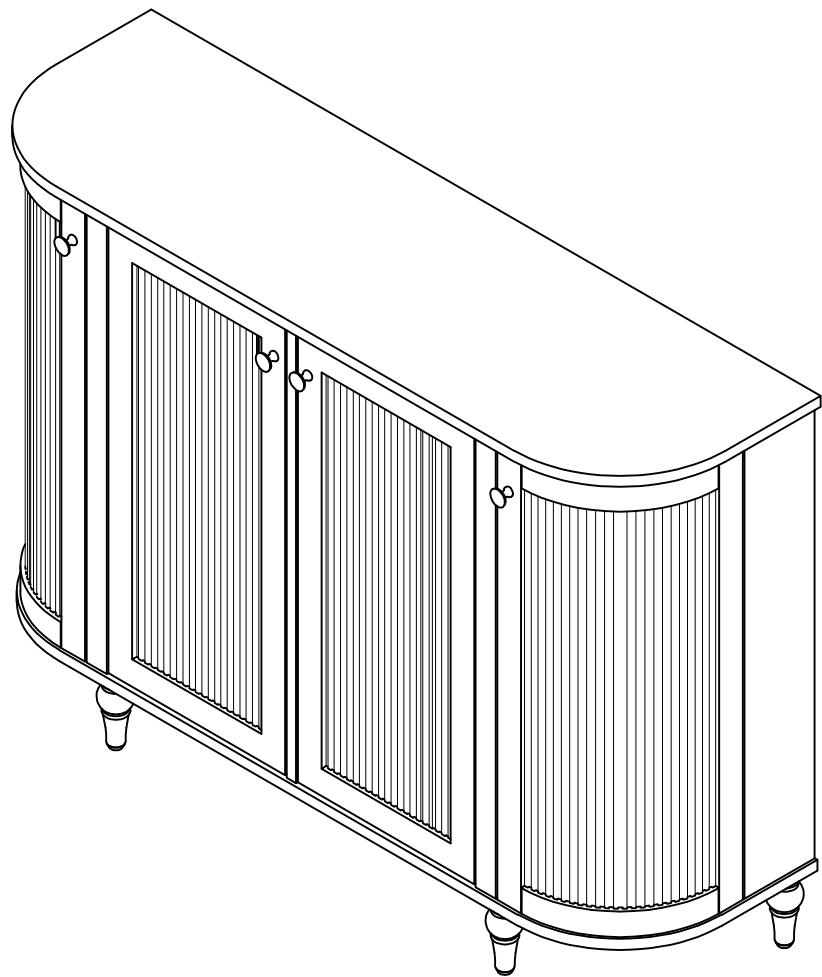
 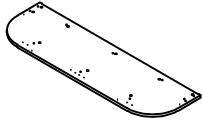
 
 
 

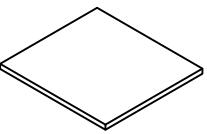
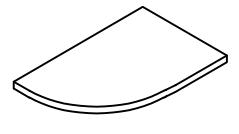 
 
 
 
 
 


**CROSLEY**  
FURNITURE




Sideboard  
CF4236



## PARTS LIST

  A	B	C	D	E
				
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC
F	G	H	I	J
				
Middle Panel 1 PC	Bottom Panel 1 PC	Middle Adjustable Shelf 4 PCS	Side Adjustable Shelf 4 PCS	Left Door 1 PC
K	L	M	N	O
				
Right Door 1 PC	Middle Left Door 1 PC	Middle Right Door 1 PC	Side Back Panel 2 PCS	Middle Back Panel 2 PCS
P	Q	R		
				
Leg 4 PCS	Support Leg 1 PC	Cover 2 PCS		

## HARDWARE LIST
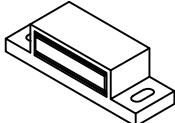
#1		#2		#3		#4		#5	
Knob 4 PCS		Magnet 8 PCS		Shelf Holder 32 PCS (Extra 1)		Bolt 10 PCS (Extra 1)		Spring Washer 10 PCS (Extra 1)	
#6		#7		#8		#9		#10	
1/4"**13mm		7*38mm		8*30mm		5/32"**20mm		6*3*15mm	
Flat Washer 10 PCS (Extra 1)		Tapping Bolt 10 PCS (Extra 1)		Wood Dowel 18 PCS (Extra 1)		Round Head Bolt 4 PCS (Extra 1)		Long Screw 16 PCS (Extra 1)	
#11		#12		#13		#14		#15	
8*3*12mm		Binding Post 2 SETS (Extra 1)		Small Allen Wrench 1 PC		Allen Wrench 1 PC		Safety Strap Kit 1 SET	

## ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach knobs (part #1) to doors (parts J, K, L & M) using round head bolts (part #9) and phillips head screwdriver.

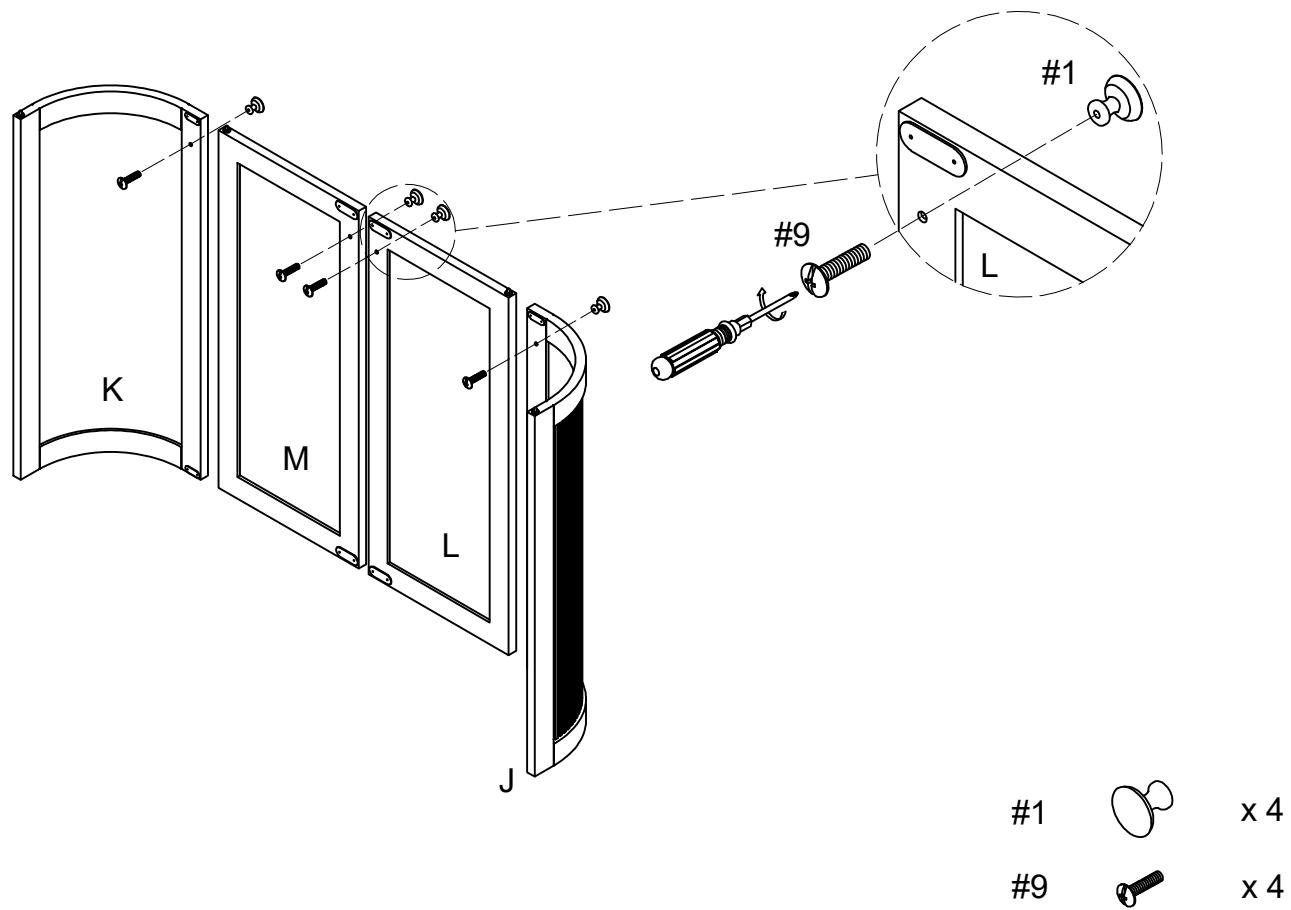


Step 2. Attach covers (part R) to middle back panels (part O) using binding posts (part #12) and small allen wrench (part #13).

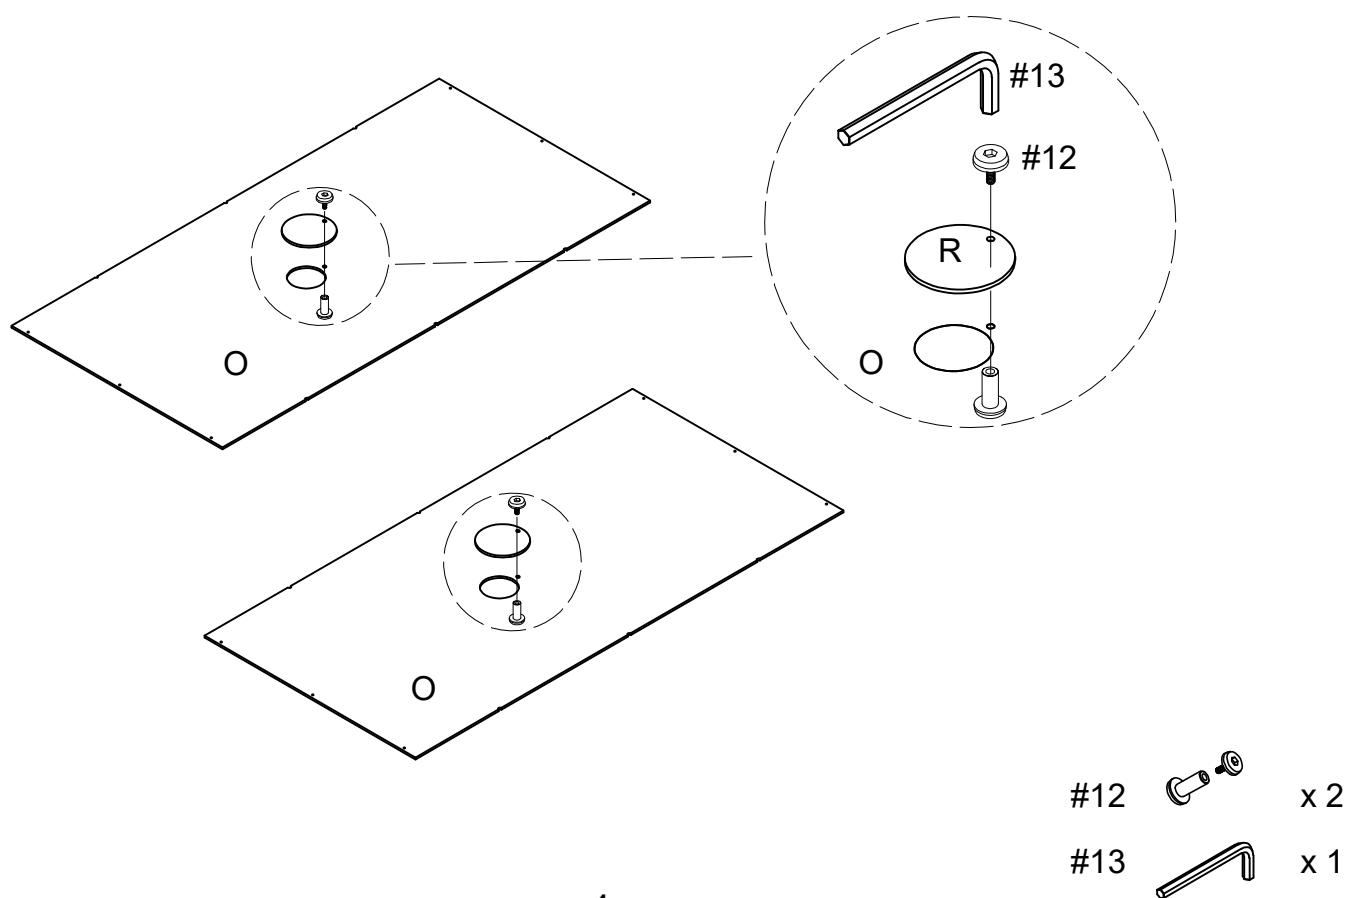


Step 3. Attach magnets (part #2) to panels (parts A & G) using long screws (part #10) and phillips head screwdriver.

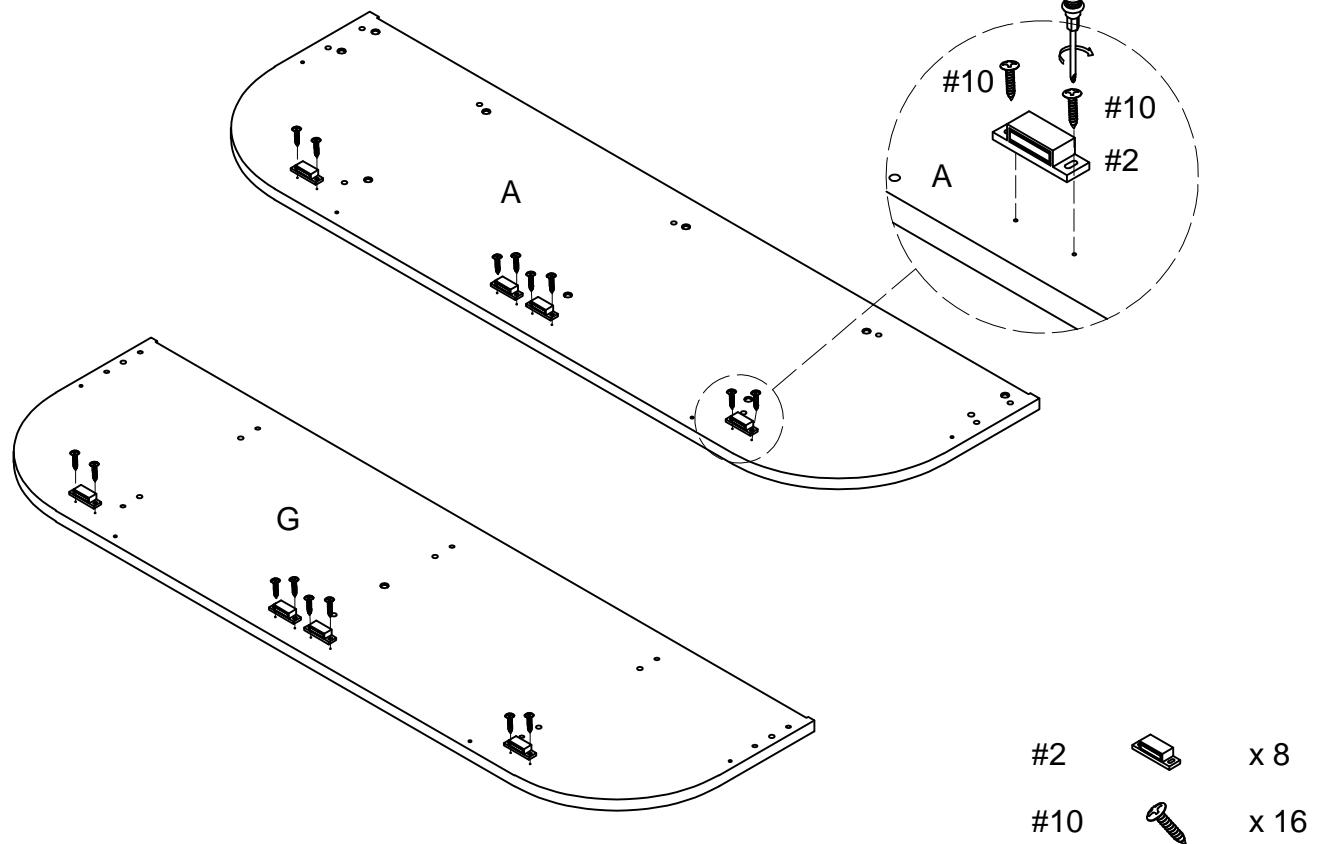


Step 4. Attach panels (parts B, C, D, E & F) to top panel (part A) using bolts (part #4), spring washers (part #5), flat washers (part #6), wood dowels (part #8) and allen wrench (part #14).

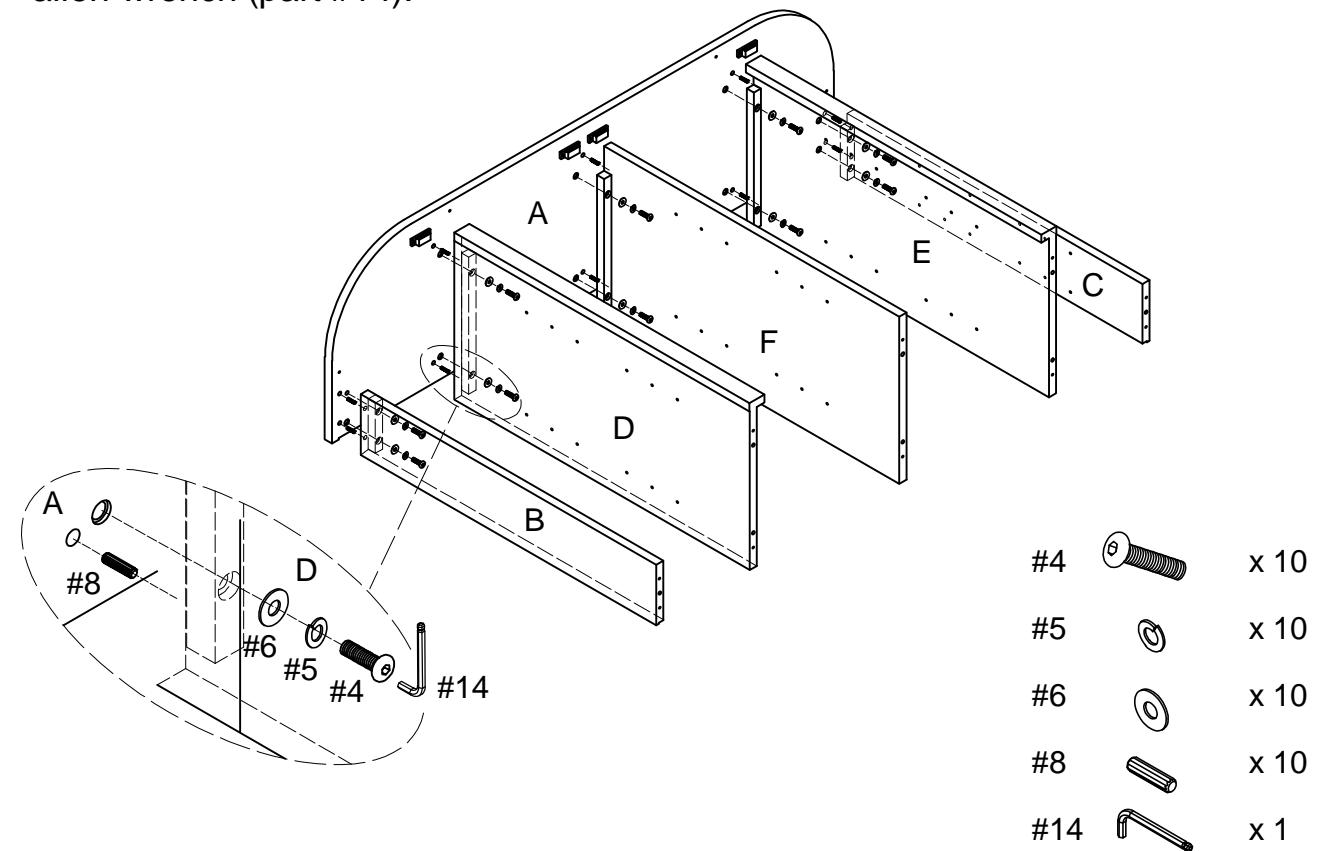


Step 5. Attach bottom panel (part G) to assembled unit (parts B, C, D, E & F) using tapping bolts (part #7), wood dowels (part #8) and allen wrench (part #14).

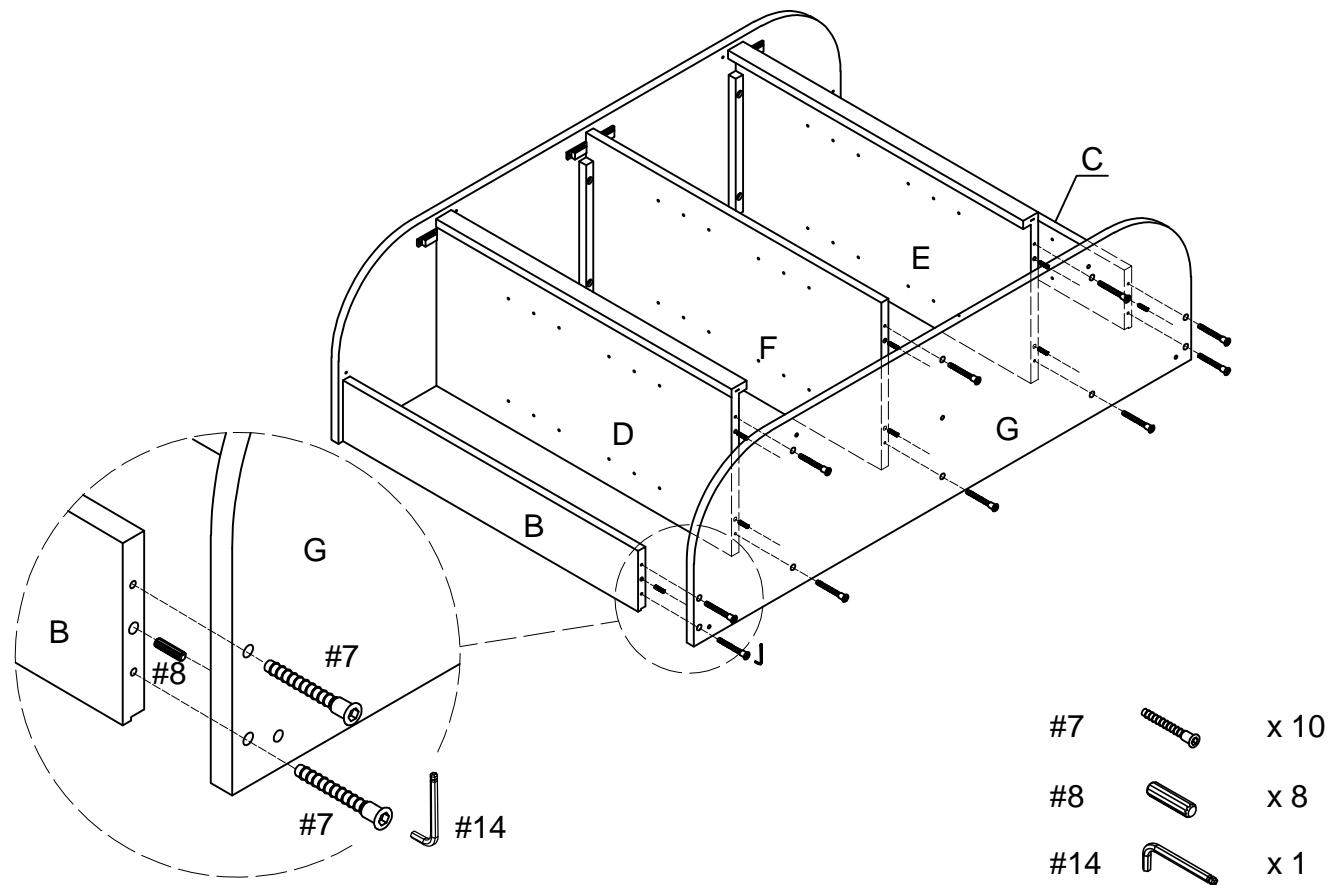

Step 6. Attach legs (parts P & Q) to bottom panel (part G).

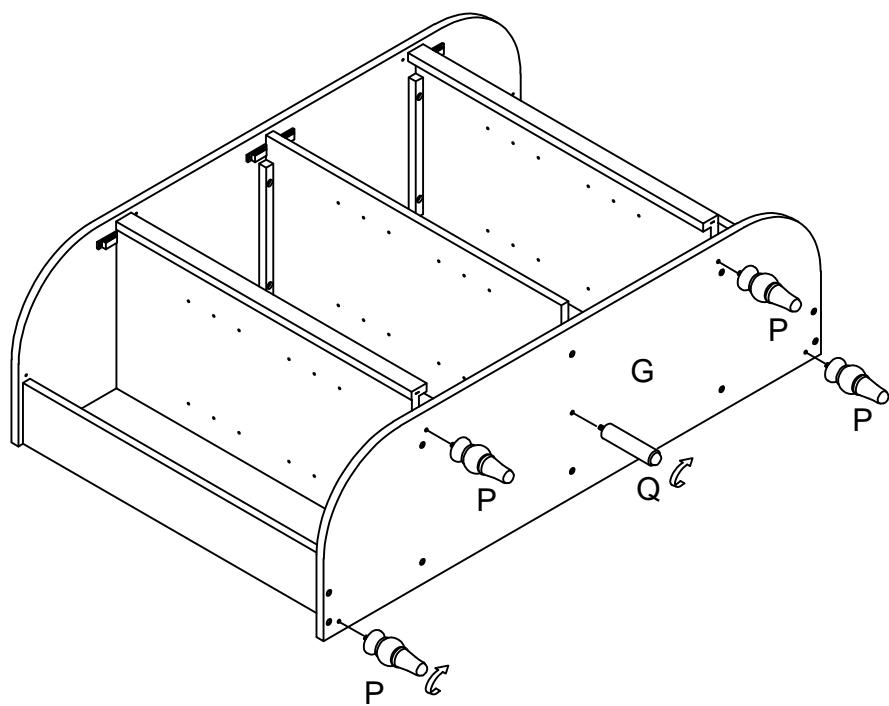


Step 7. Carefully turn to the other side. Attach back panels (parts N & O) to assembled unit (parts A, B, C, D, E, F & G) using short screws (part #11) and phillips head screwdriver.

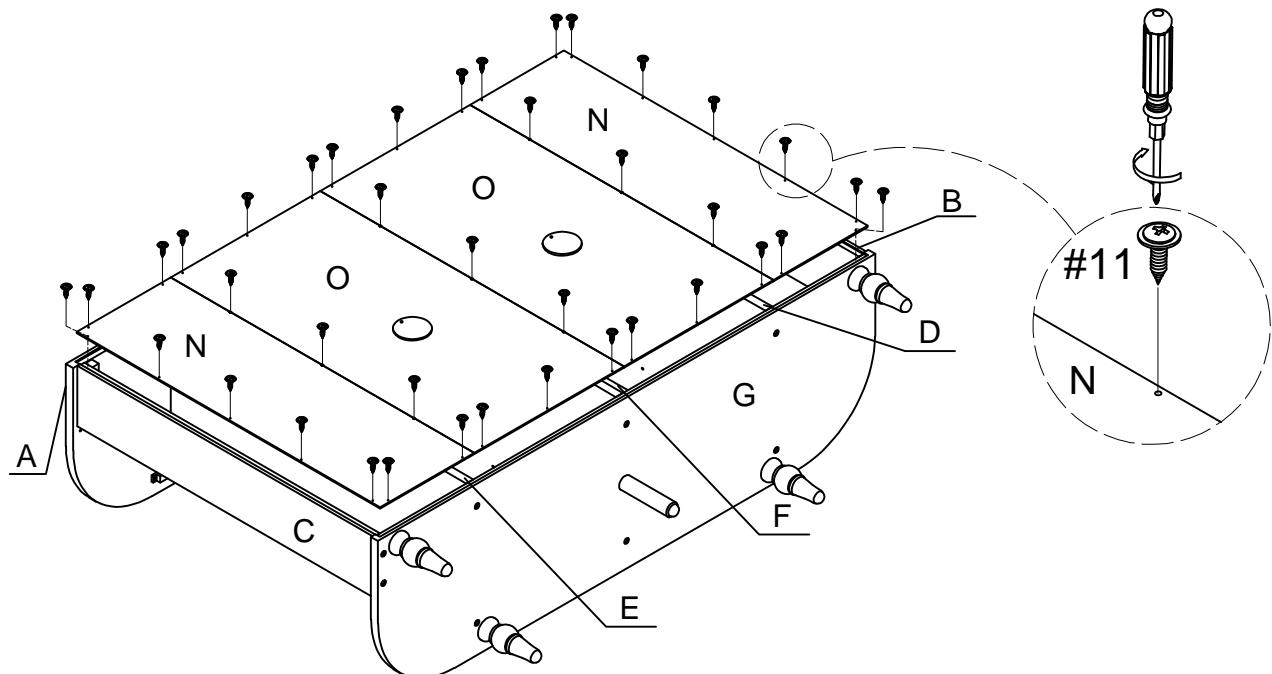


#11  x 39

Step 8. Carefully turn unit upright. Insert shelf holders (part #3) and slide adjustable shelves (parts H & I) into place.

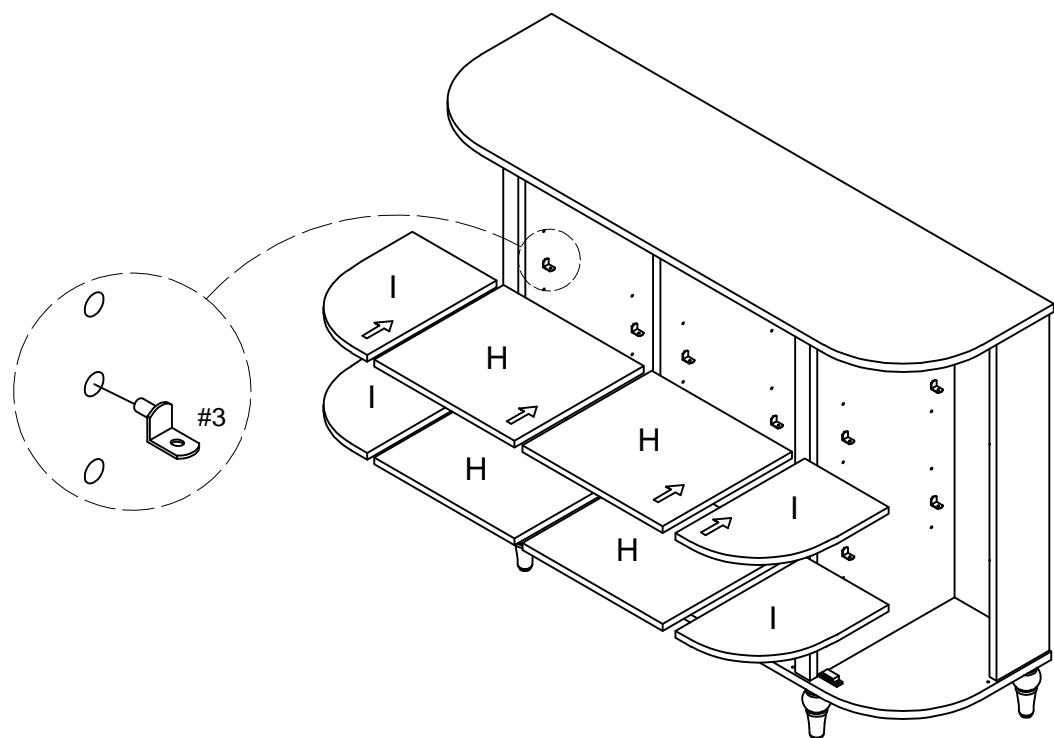


#3  x 32

Step 9. Attach short screws (part #11) to shelf holders (part #3) and side adjustable shelves (part I) using phillips head screwdriver.

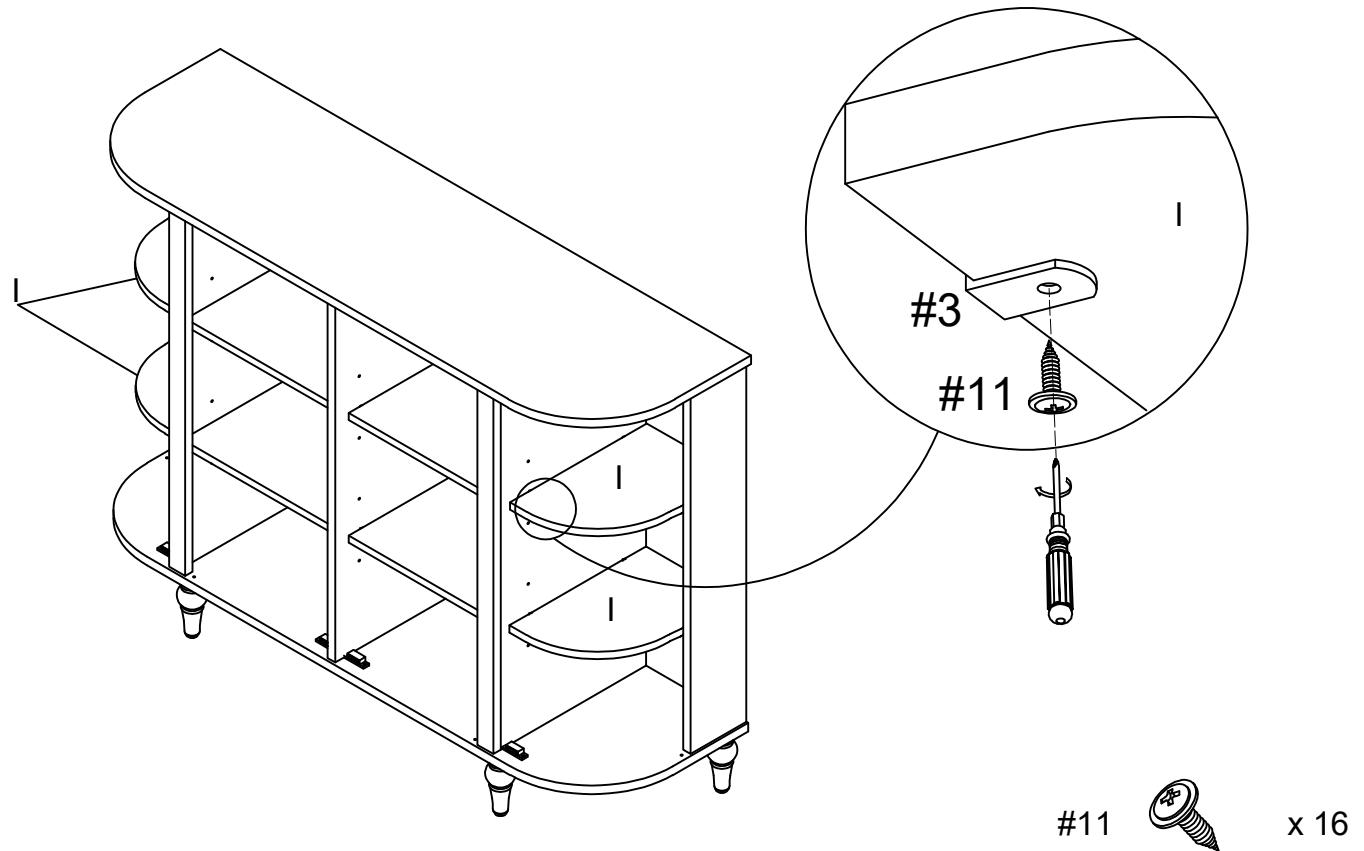


Step 10. Attach doors (parts J, K, L & M) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part G). Then depress the top spring-loaded pin hinge in the pre-drilled hole of top panel (part A).

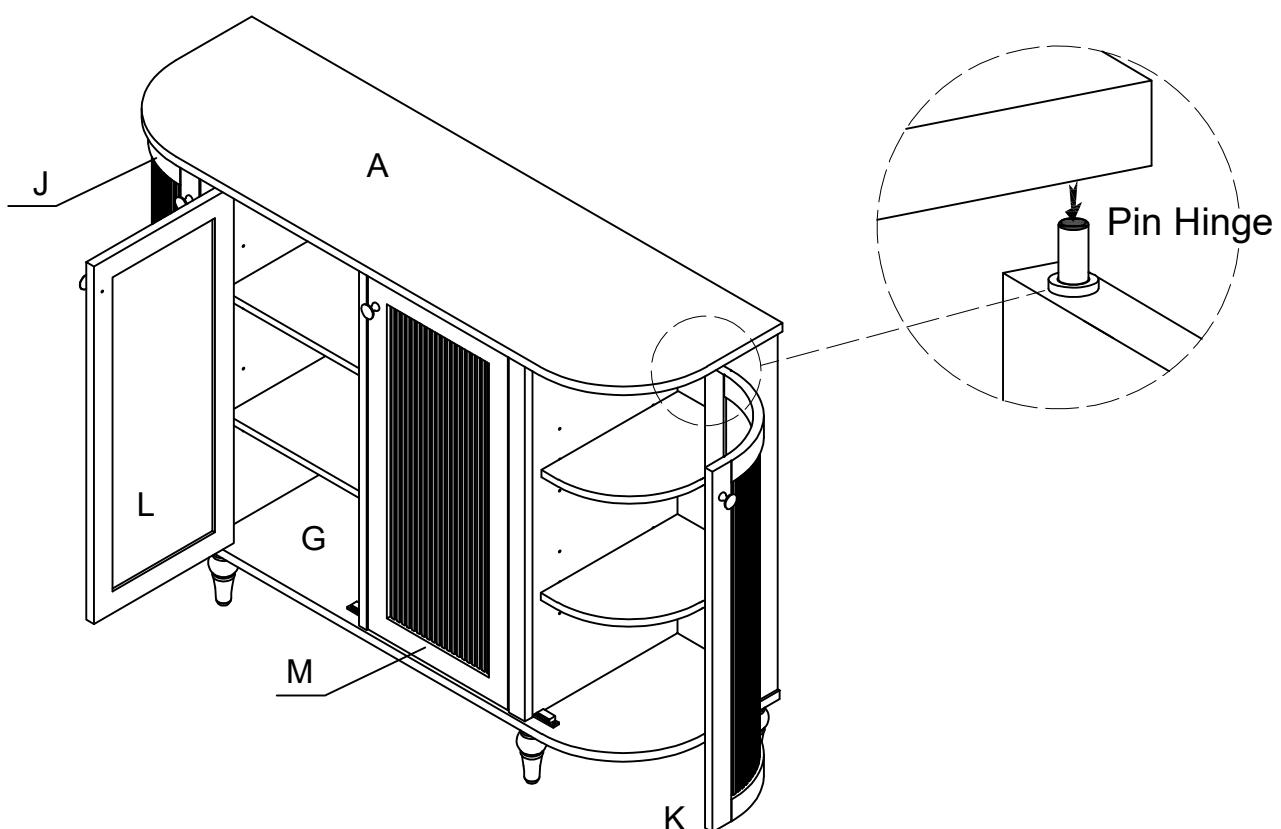

**NOTE:** It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

**Important:** Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.

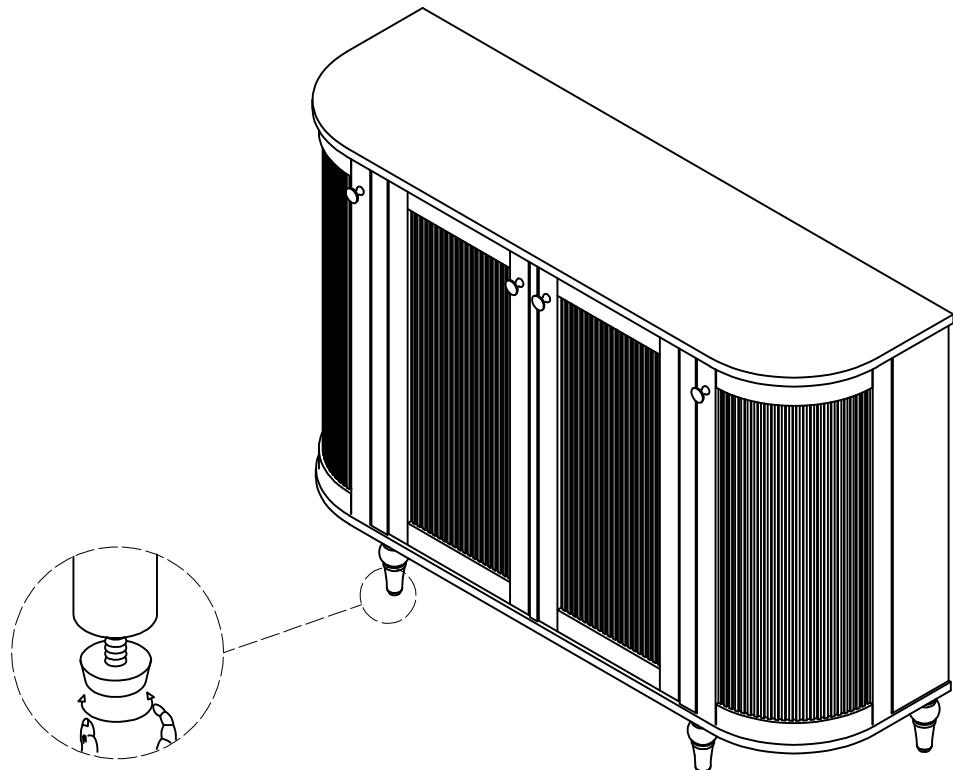


#15	A	B	C	D	E
Safety Strap Kit 1 SET	1 PC	2 PCS	8*3*15mm	8*4*35mm	1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

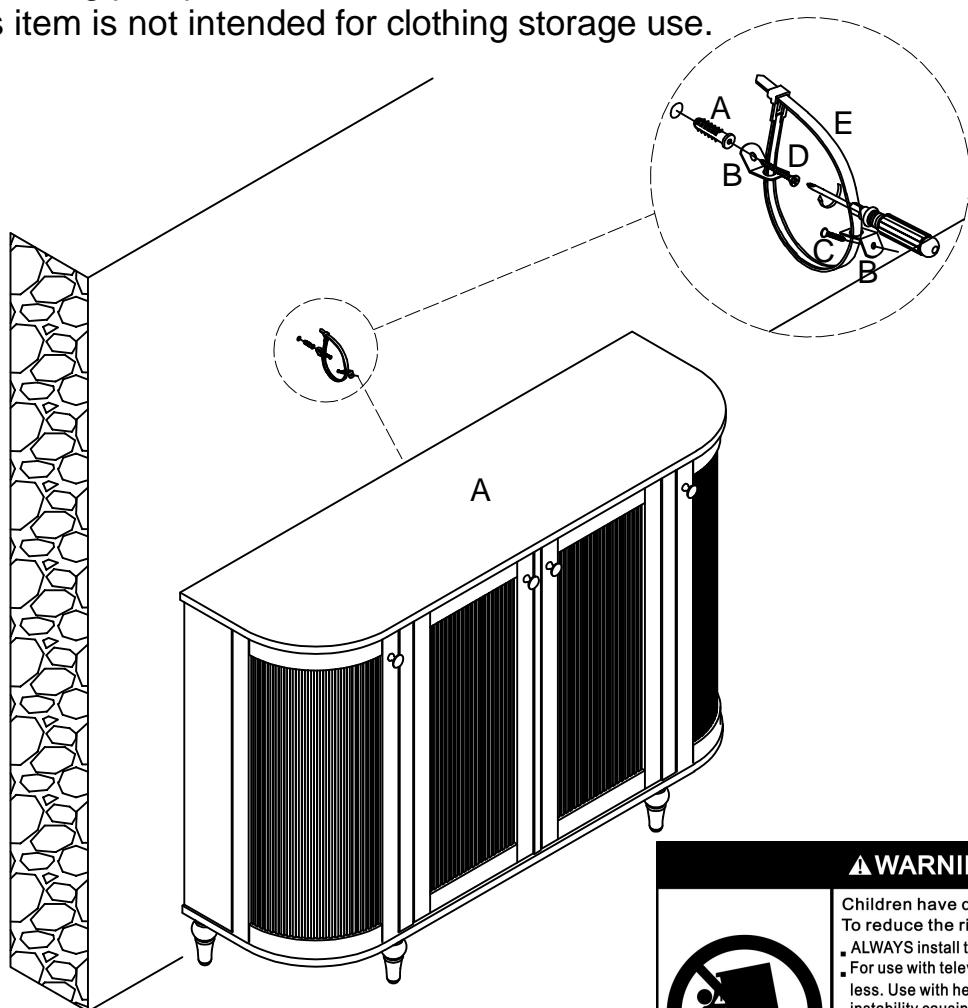

### ⚠️ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label. Do not remove!*