


ASSEMBLY INSTRUCTIONS

20 INCH MIRROR CABINET

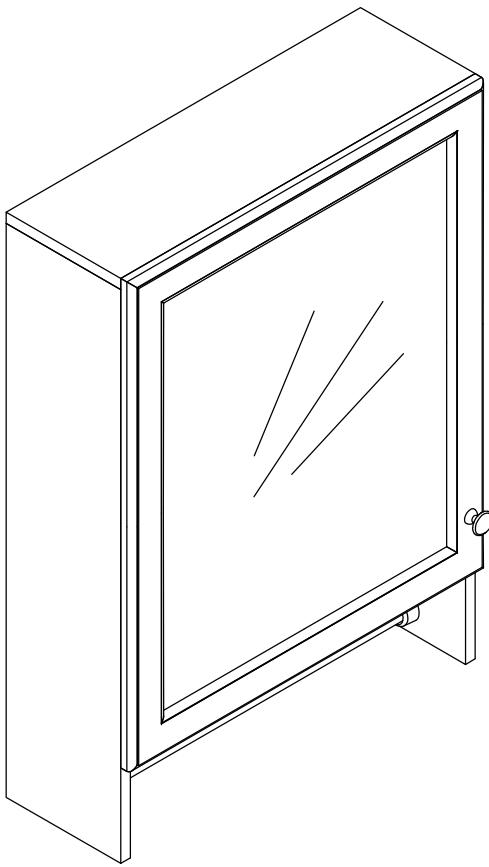




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"




* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

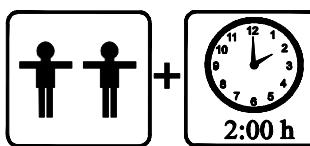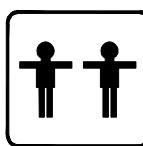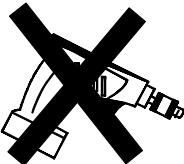

Tools Required

 

(Not included)

 


(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

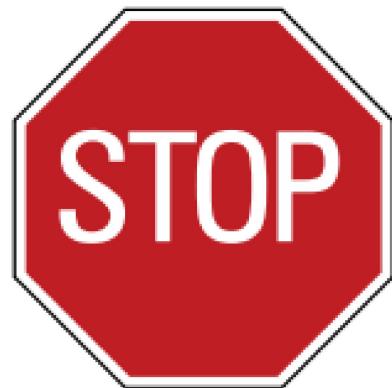

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation


Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions








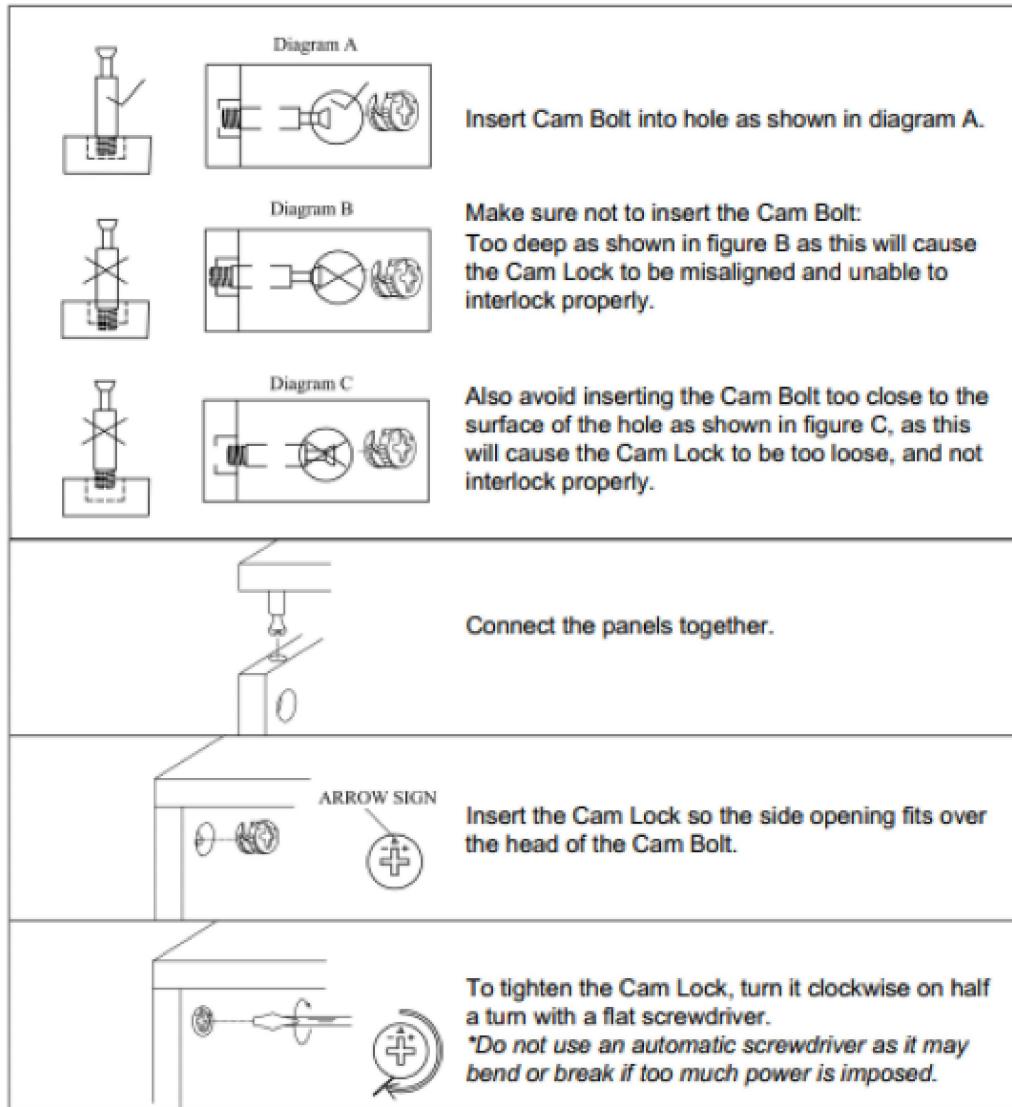


Detail View - CABINET





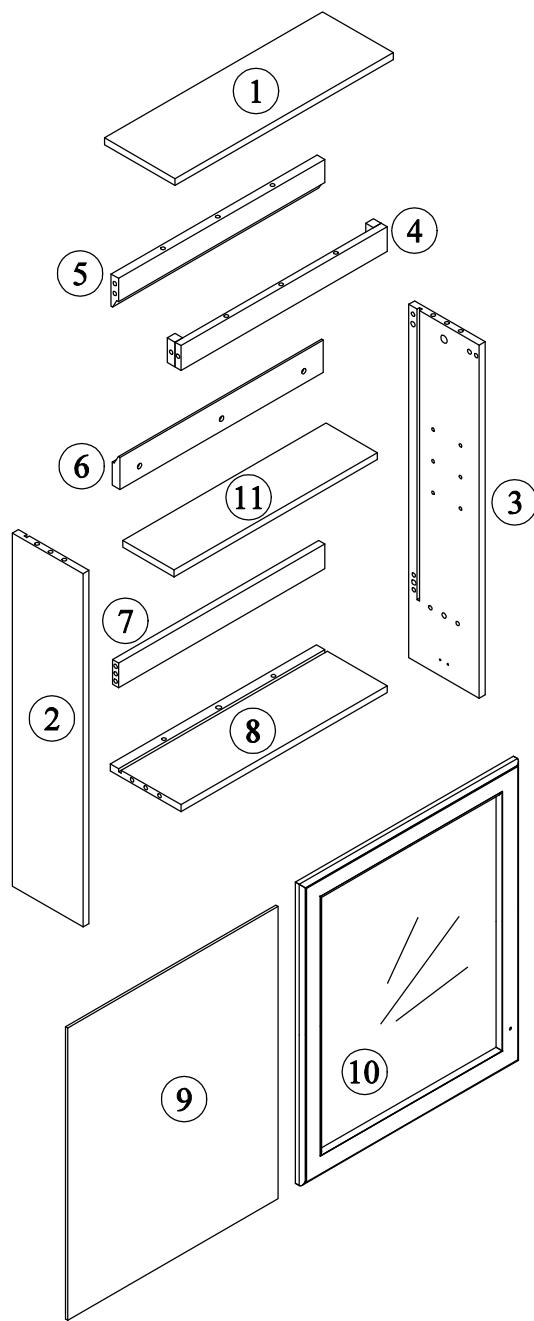


Identifying the Hardware-Identify the hardware using the illustrations below.

        
Part List - N710P388096

1		2	
3		4	
5		6	
7		8	
9		10	
11			

    Hardware List - N710P388096




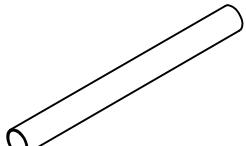
A	B	C
 ø6x35mm	 ø14.5x12mm	 ø13x1/4"x28mm
Three in one bolts (11pcs)	Three in one lock (11pcs)	Hex-Head bolts (2pcs)
D	E	F
 ø1/4"x16x1mm	 ø10xø5x60mm	 ø12x55mm
Washer (2pcs)	Flat head screw (3pcs)	Plastic stopper (3pcs)
G	H	I
 Handle (1pc)	 ø5/32"x25mm	 Damping hinge (2pcs)
J	K	L
 ø7xø3.5x12mm	 Laminate pad(4pcs)	 ø8x30mm
Flat head screw (12pcs)	Laminate pad(4pcs)	Wood dowel (20pcs)
M	N	O
 Steel Pipe (1pc)	 Pipe Bracket (2pcs)	 ø6xø3x12mm
P		
 4mm Allen key (1pc)		

Expand hardware (M) into two separate parts

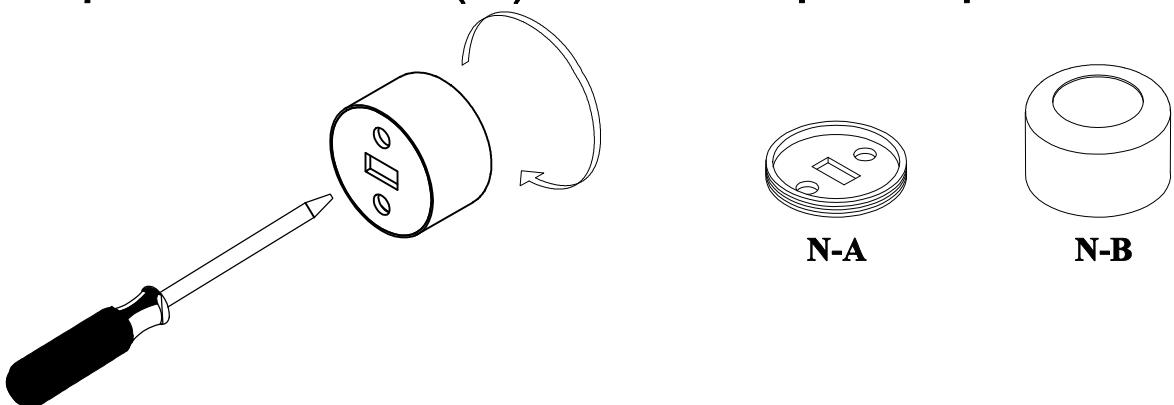




STEP: 1

A	N	O
11PCS	2PCS	4PCS

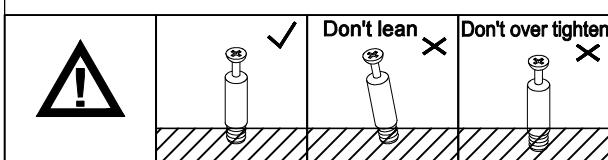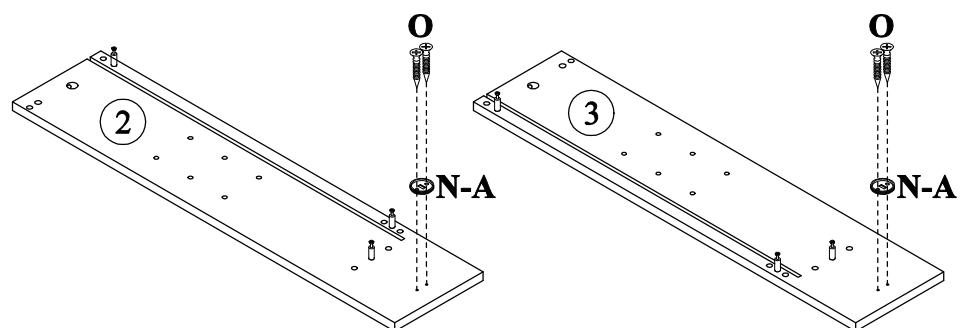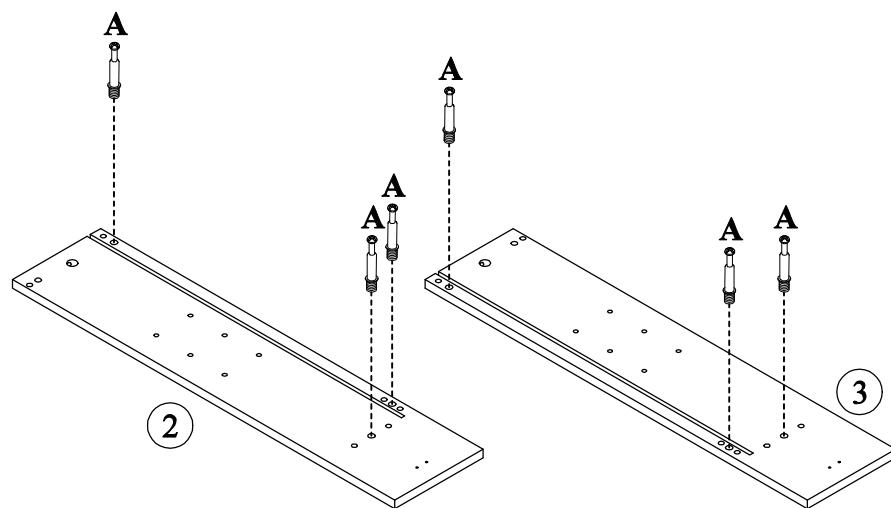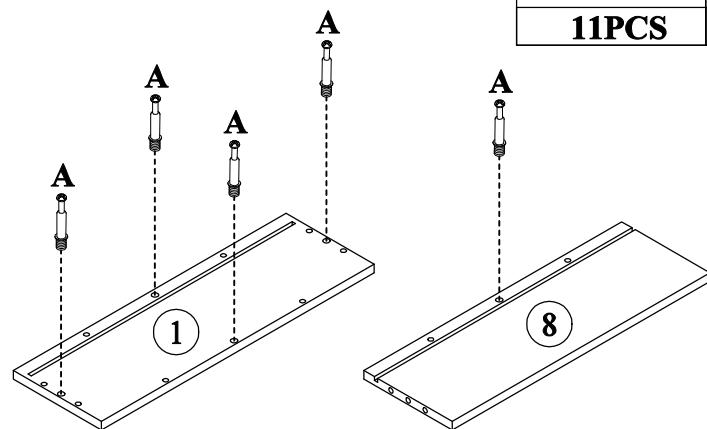


STEP: 2

 
B		L	
1PC		2PCS	

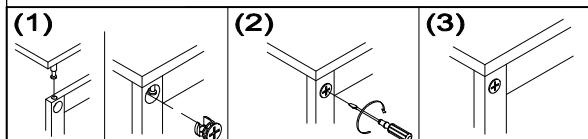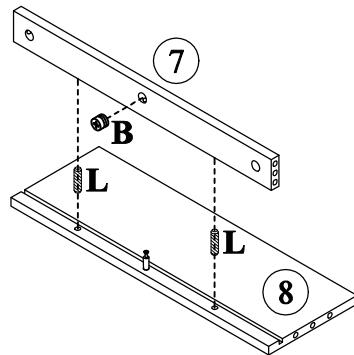


STEP: 3

 B		C		D		L	
6PCS		2PCS		2PCS		12PCS	


P	
1PC	

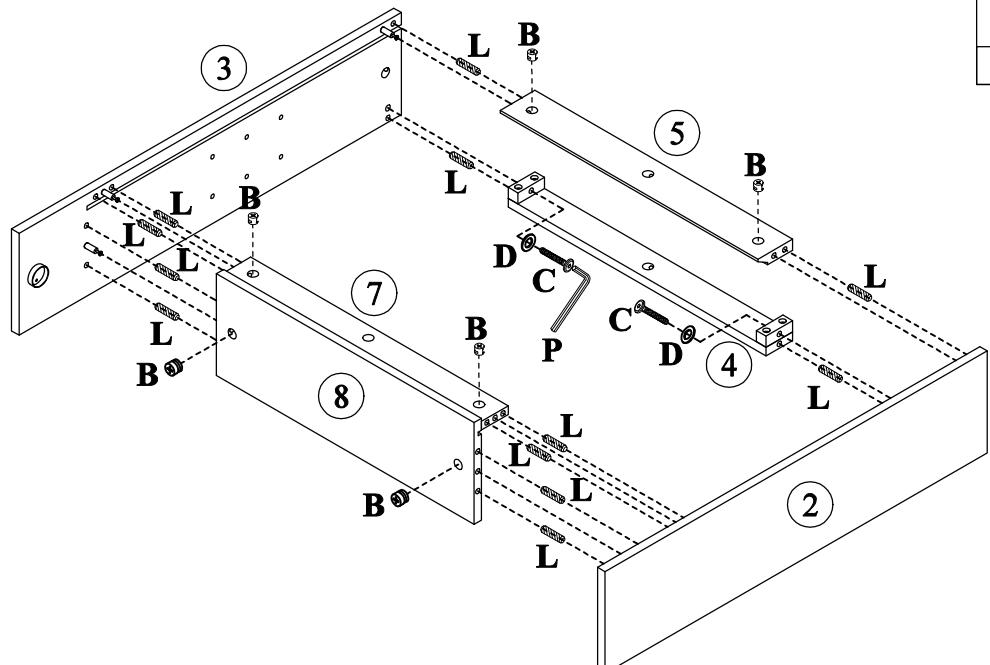


STEP: 4

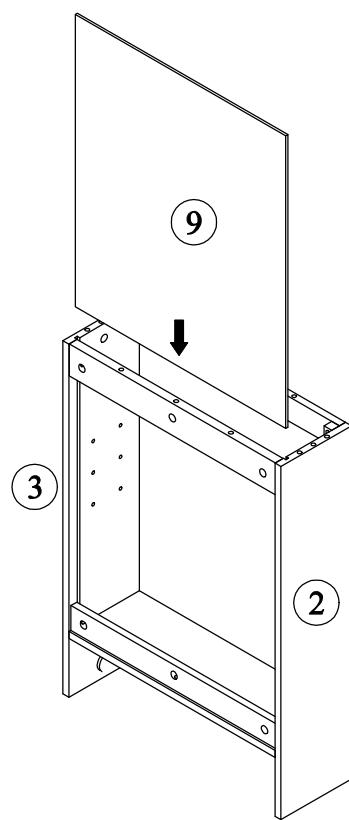



STEP: 5

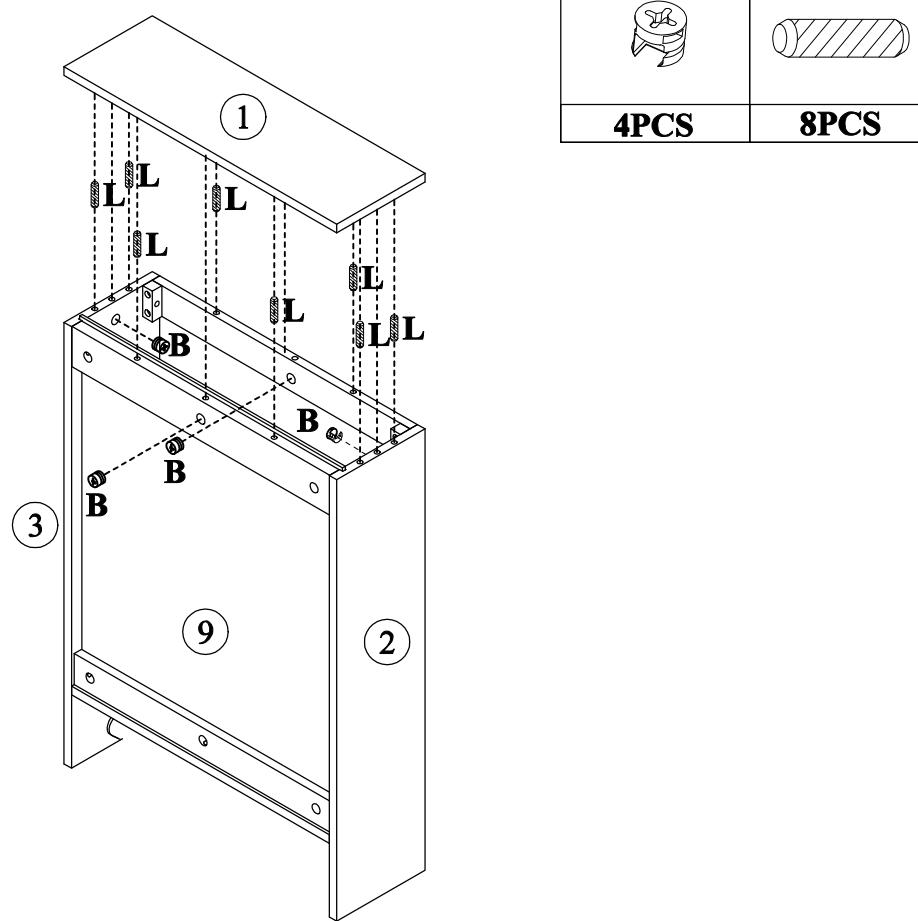

STEP: 6


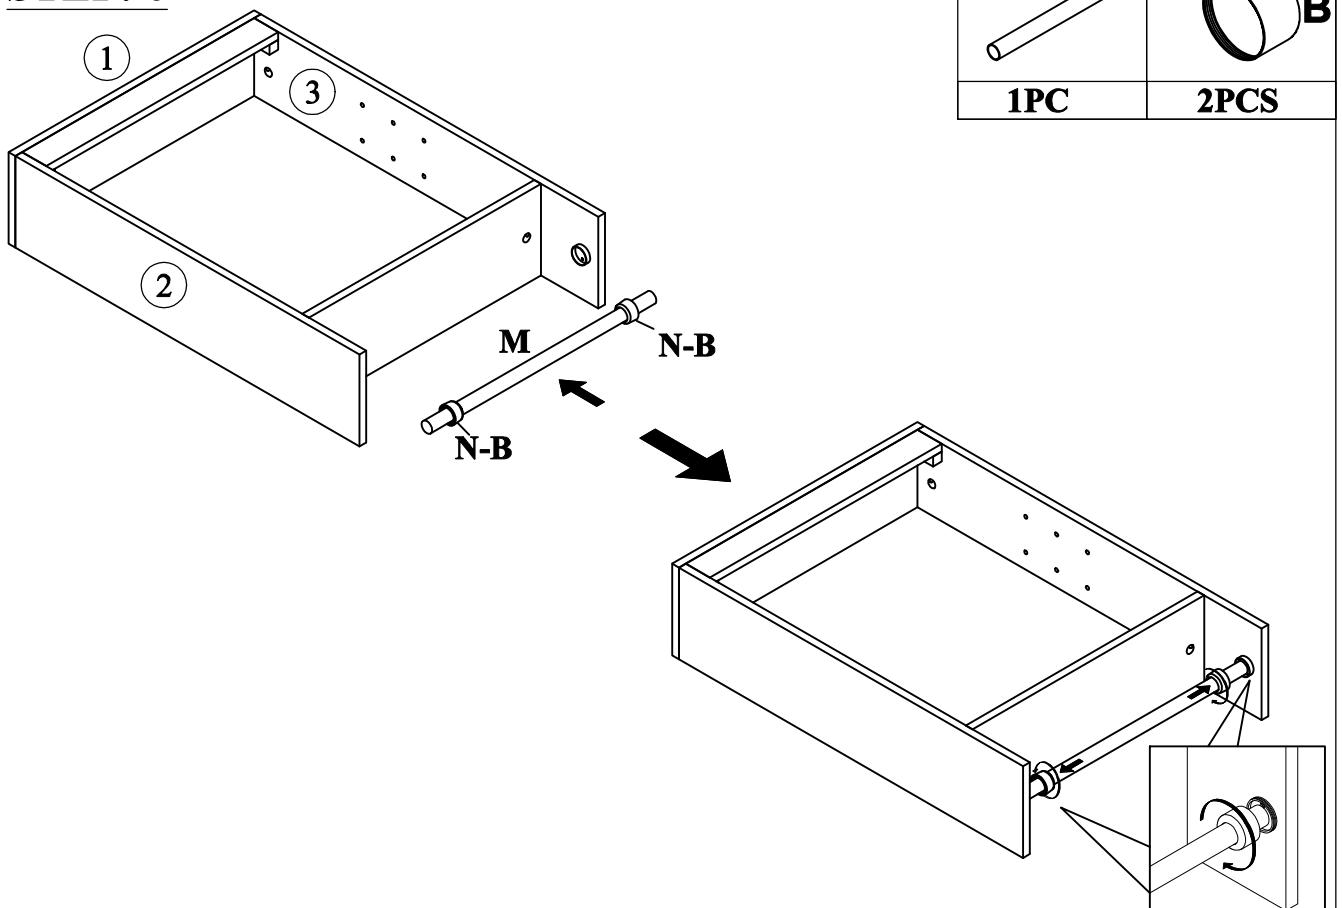


STEP: 7

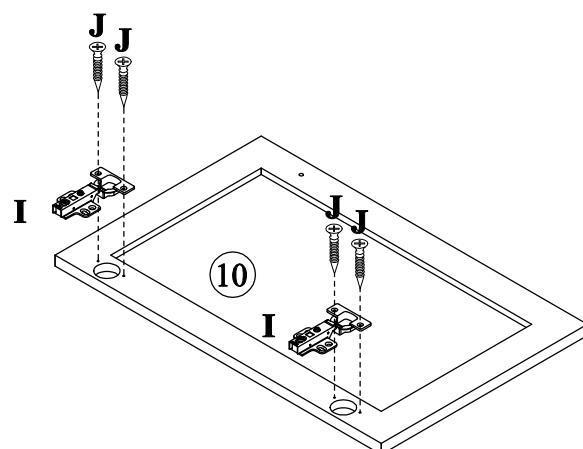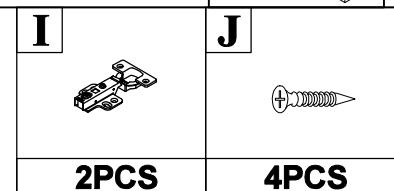


STEP: 8

G 	H 	J
1PC	1PC	8PCS

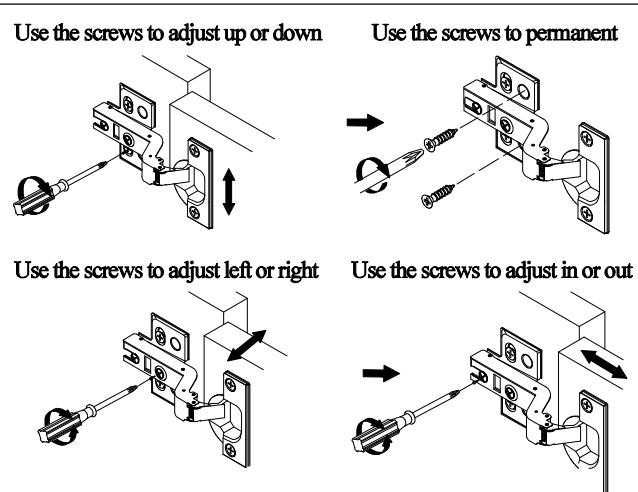
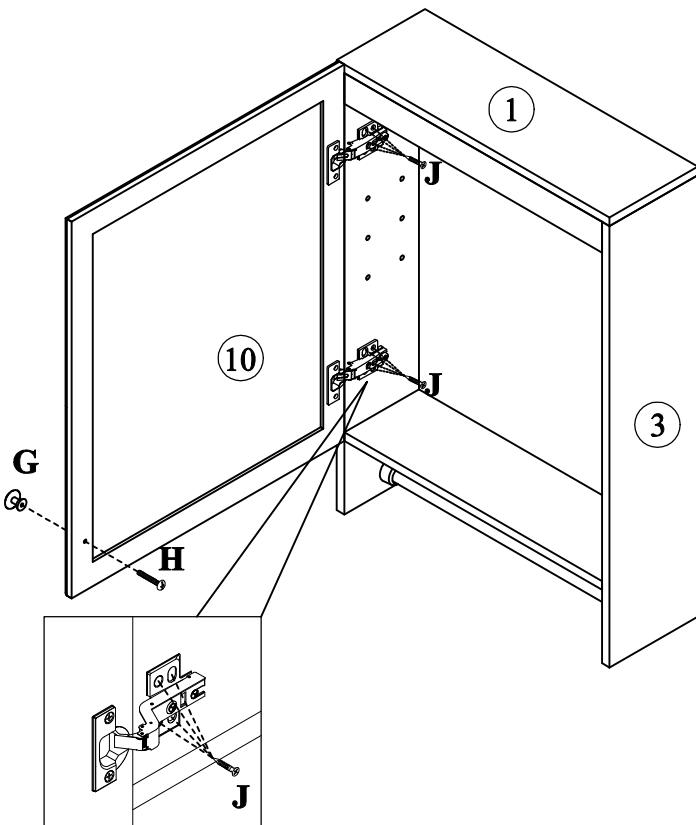


STEP: 9

K 	4PCS
--------------	-------------

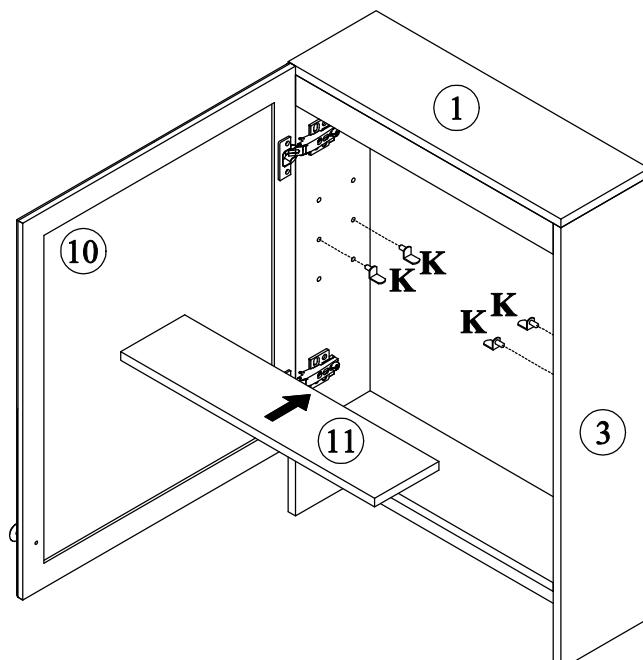


STEP: 10

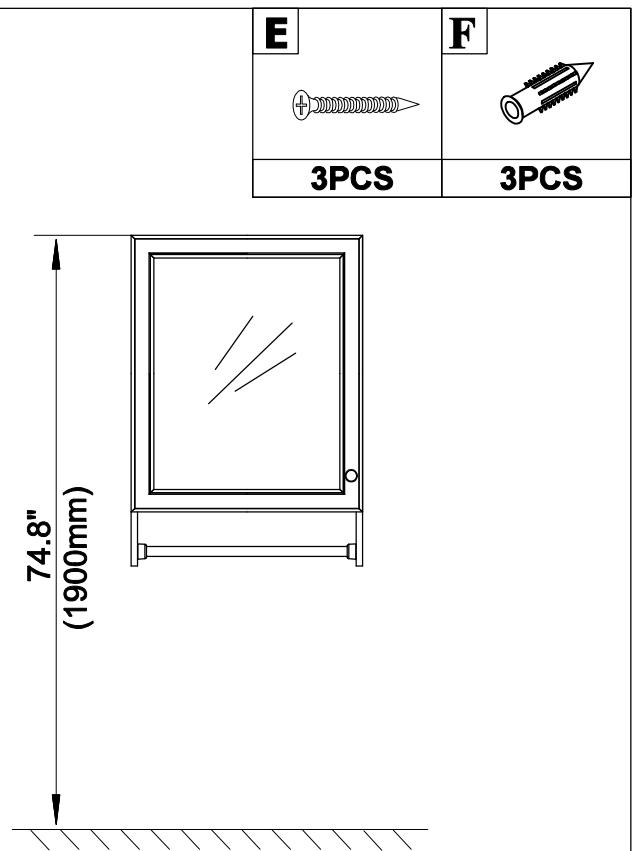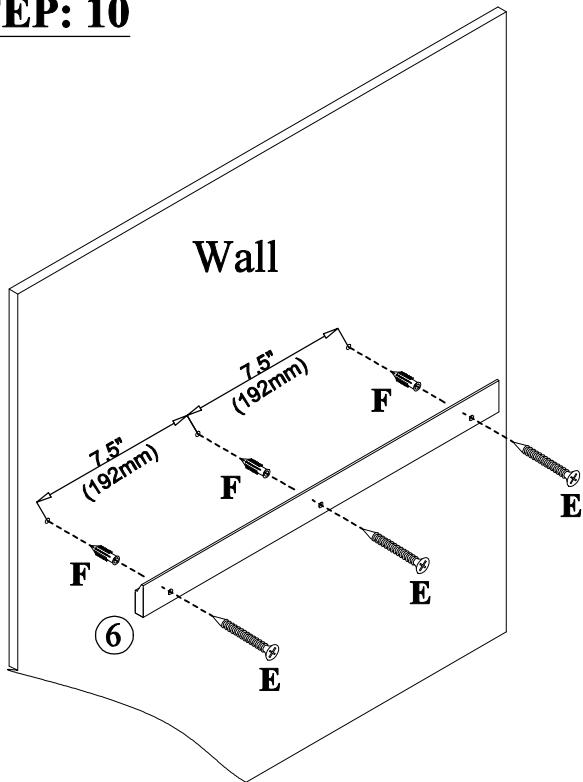


Draw the spacing between the walls and the No.6, punch holes in the wall, and fix the No.6 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".


STEP: 11

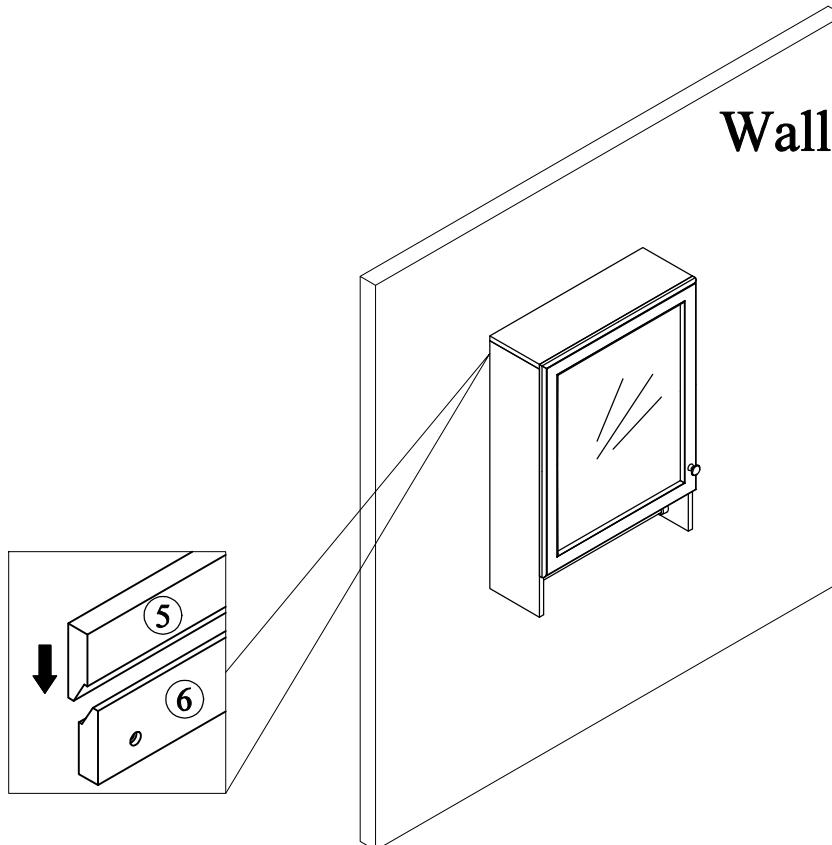

STEP: 12

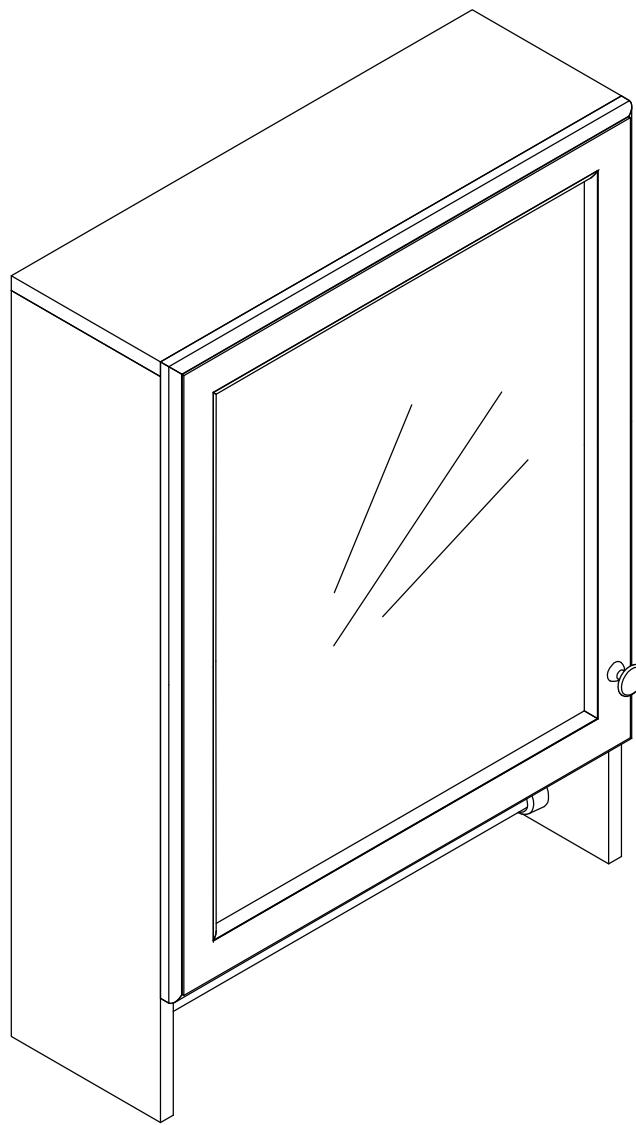


HINGE ADJUSTMENTS

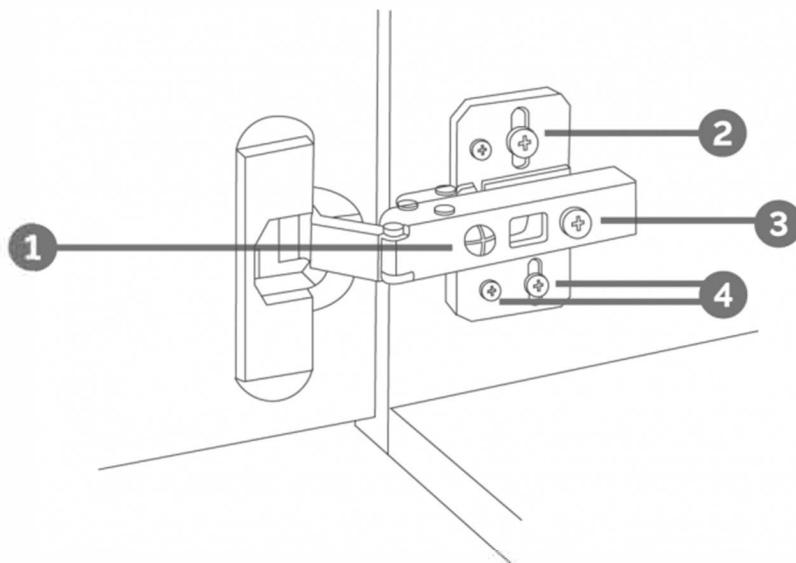


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

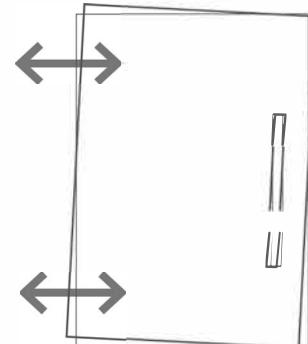

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

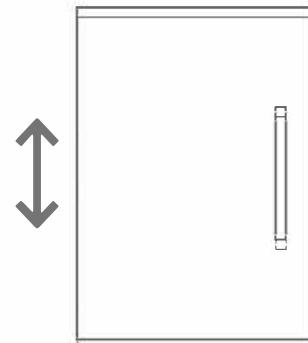

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

