


# Entertainment Center

## Assembly Instructions - Please keep for future reference

N724P371326 / N724P371327 / N724P371328

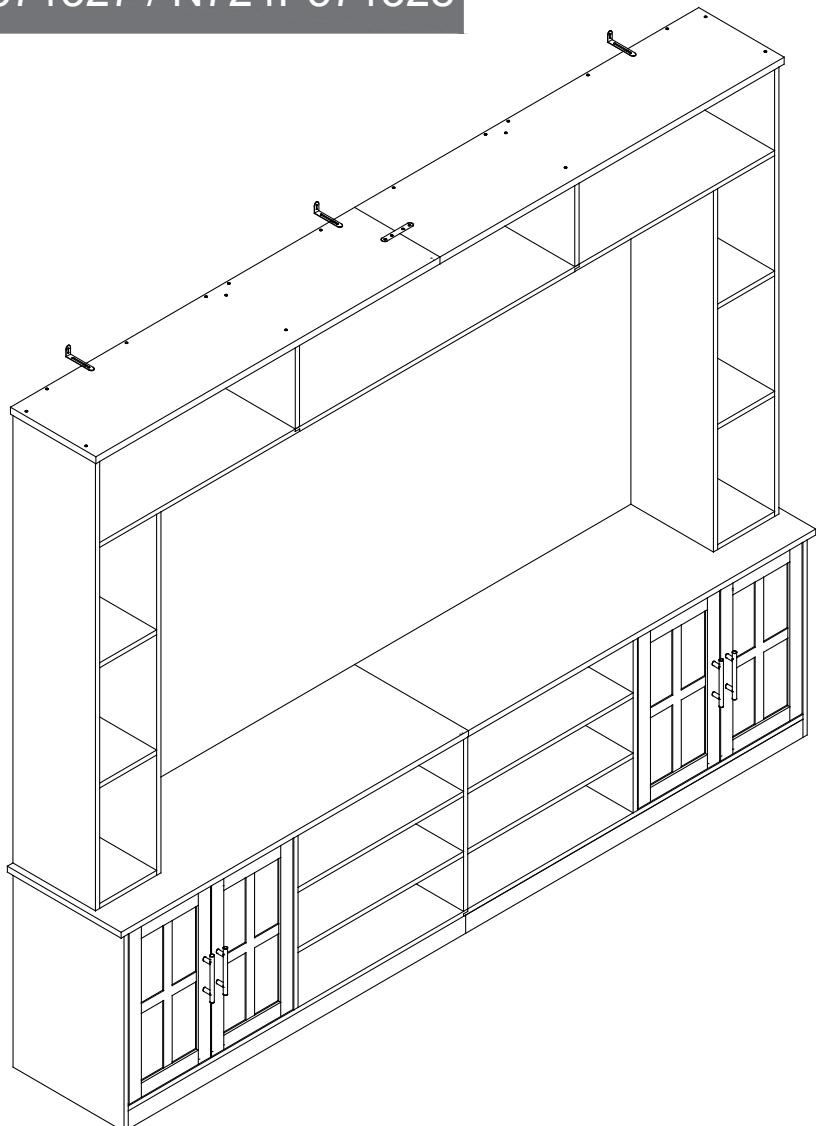

### Dimensions

Width- 95.5inch

Depth- 15.75inch

Height- 78.75inch



### WARNING



This product is NOT a Clothing Storage Unit (CSU).  
DO NOT use it for clothing storage.  
Improper use may cause furniture tipover.

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

## WARNING

**In order to help prevent overturning – please follow these instructions**

To help prevent product toppling over please follow the below steps:-

 

 







 
 

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

# Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

## HARDWARE BOX INSIDE BOX 1

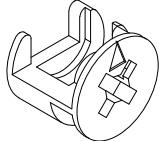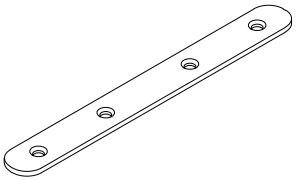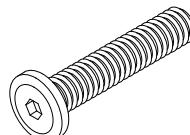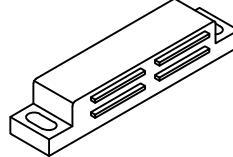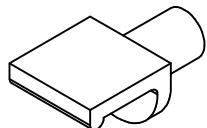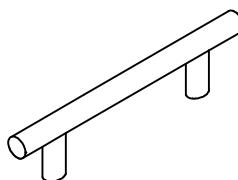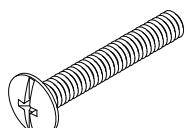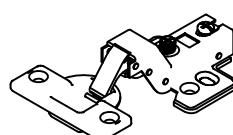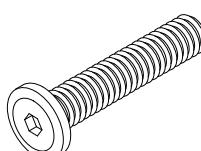A QTY: 82+2	B QTY: 82+2	C QTY: 82+2	D QTY: 9
			
CAM BOLT	WOOD DOWEL	CAM LOCK	BOLT
E QTY: 6	F QTY: 48+2	G QTY: 4	H QTY: 7
			
L BRACKET	FLAT HEAD SCREW	FLAT HEAD SCREW	IRON SHEET
I QTY: 45+2	J QTY: 4	K QTY: 2	L QTY: 6
			
FLAT HEAD SCREW	BOLT	MAGNET	WOOD DOWEL
M QTY: 8	N QTY: 4	O QTY: 8	P QTY: 8
			
SHELF SUPPORT PIN	HANDLE	HANDLE BOLT	HINGE
Q QTY: 36	R QTY: 36	S QTY: 4	T QTY: 8
			
CONNER BLOCK	FLAT HEAD SCREW	MAGNET PLATE	BOLT

# Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

## HARDWARE BOX INSIDE BOX 1

U	QTY: 3	V	QTY: 3	W	QTY: 34	X	QTY: 3
ANTI-TIP L BRACKET		PAN HEAD SCREW	Ø7*15mm	FLAT HEAD SCREW	Ø6*12mm	ANCHOR	
Y	QTY: 46+2	Z	QTY: 1				
PERFECT FIT		HEX KEY					


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

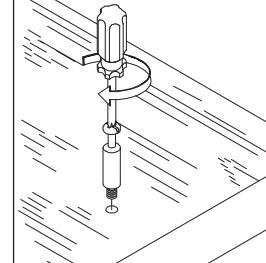

## Step 2

Push the male camlock into the entry hole.

2

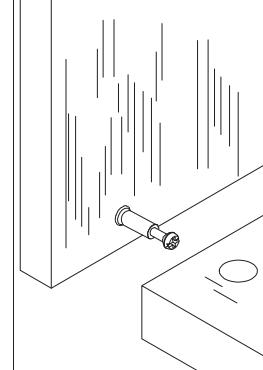


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

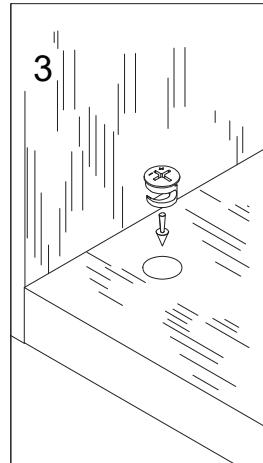


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

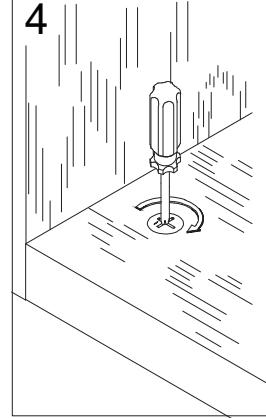

# Assembly Instructions

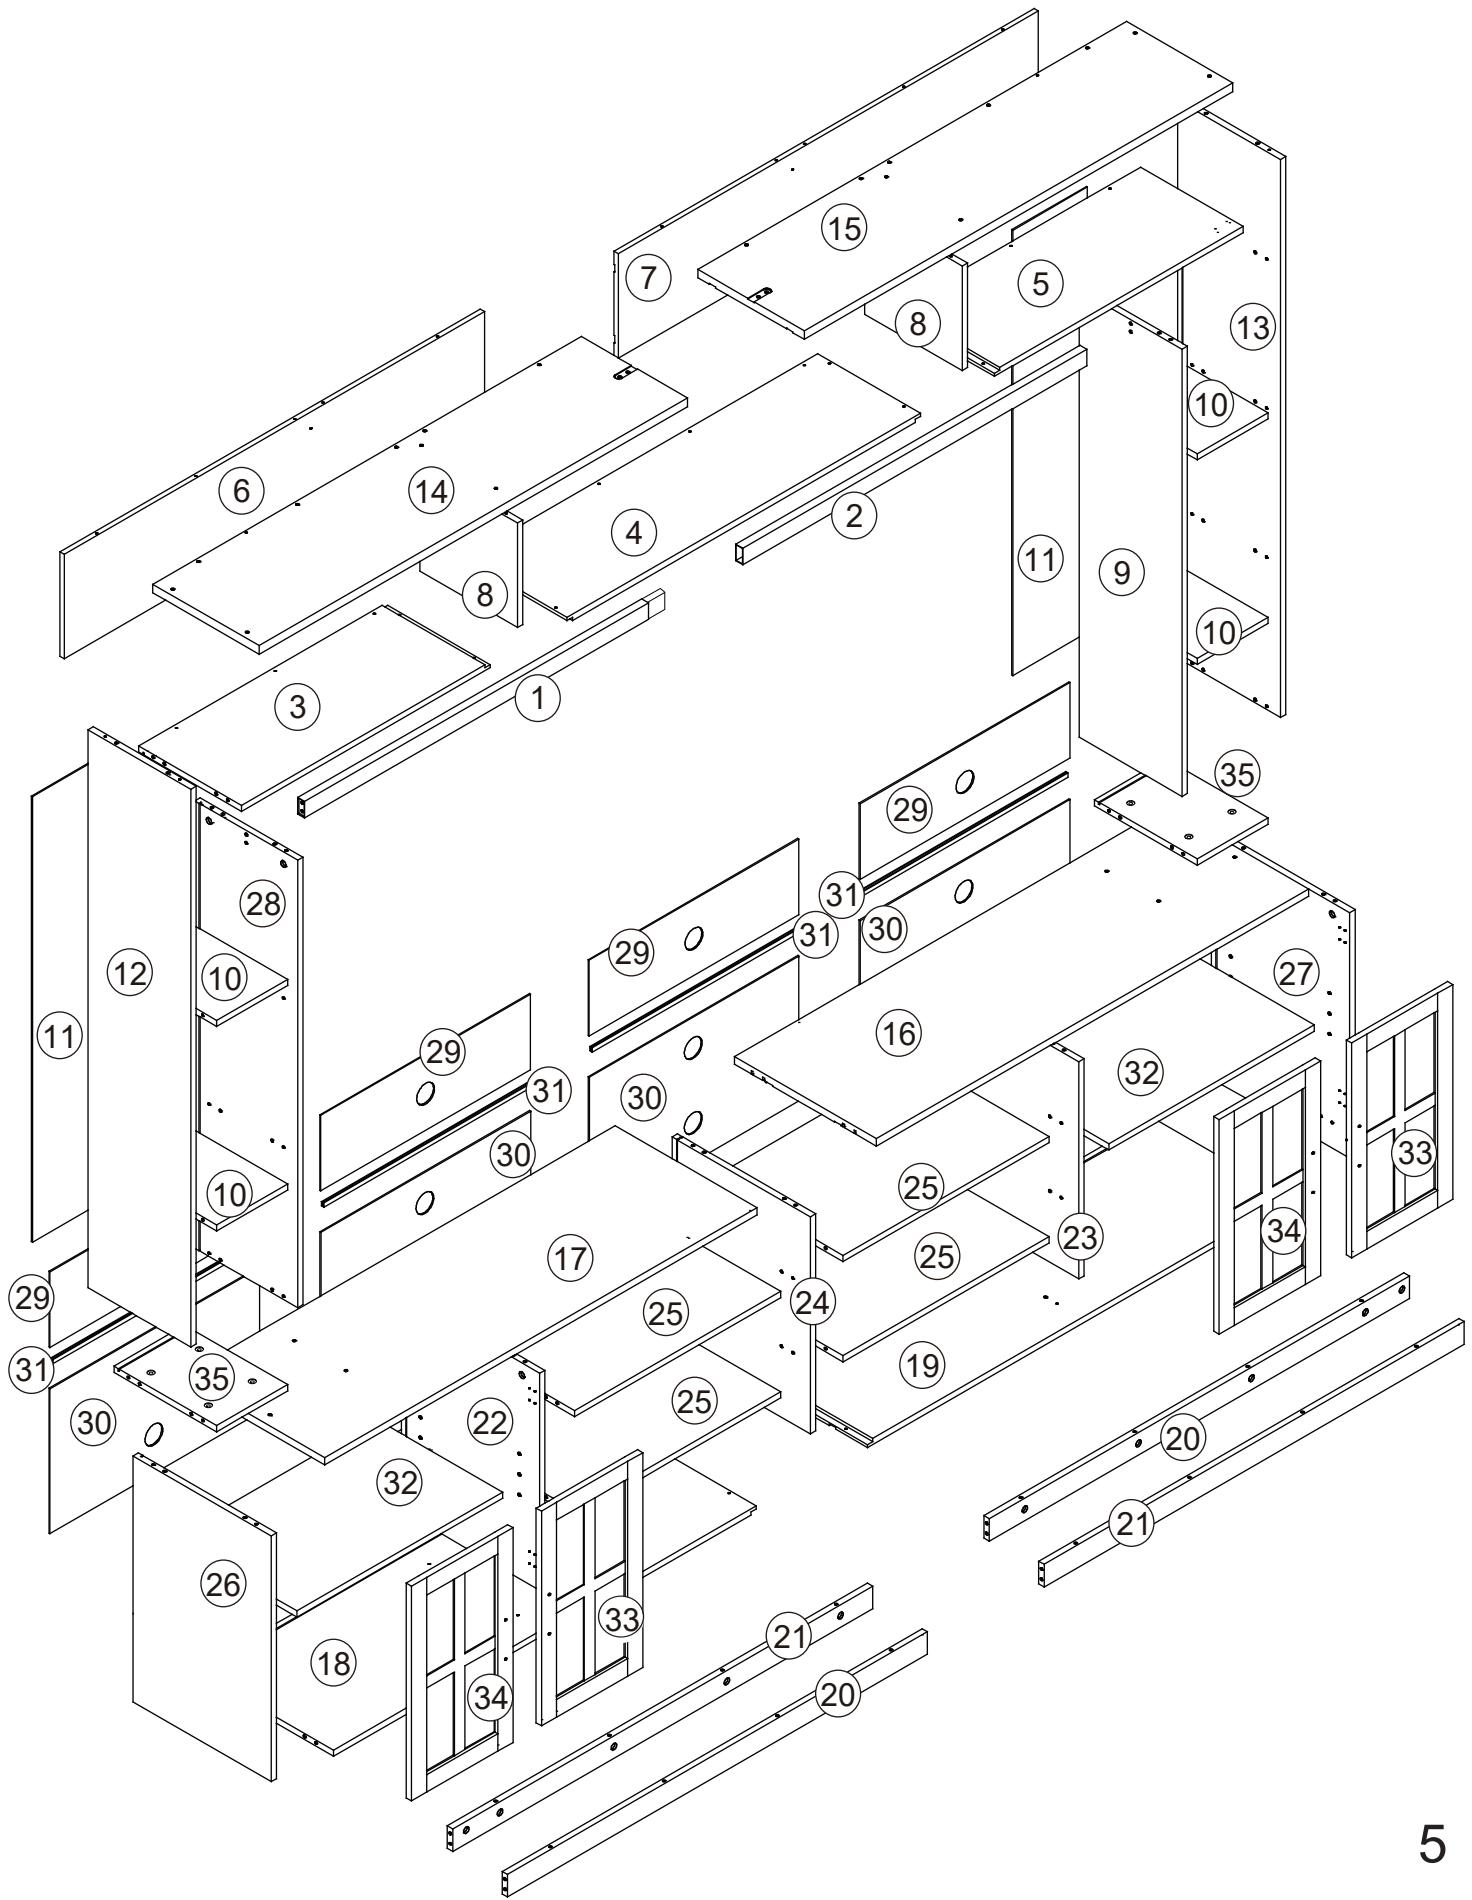

# COMPONENTS - KEY DIAGRAM

BOX 1: N724P371326

8		10		22	
278x255x14mm	QTY: 2	274x201x14mm	QTY: 4	531x390x14mm	QTY: 1
23		24		25	
531x390x14mm	QTY: 1	531x390x14mm	QTY: 1	582x374x14mm	QTY: 4
26		27		30	
600x390x14mm	QTY: 1	600x390x14mm	QTY: 1	590x351x3mm	QTY: 4
29		31		32	
590x186x3mm	QTY: 4	580mm	QTY: 4	580x350x14mm	QTY: 2
35					
290x201x14mm	QTY: 2	Hardware kit		QTY: 1	

# COMPONENTS - KEY DIAGRAM

BOX 2 : N724P371327

1		2		9	
	1030x40x20mm QTY: 1		970x40x20mm QTY: 1		1095x290x14mm QTY: 1
11		16		17	
	1089x209x3mm QTY: 2		1213x400x17mm QTY: 1		1213x400x17mm QTY: 1
18		19		20	
	1193x390x14mm QTY: 1		1193x390x14mm QTY: 1		1185x55x14mm QTY: 2
21		28			
	1185x55x14mm QTY: 2		1095x290x14mm QTY: 1		



# COMPONENTS - KEY DIAGRAM

BOX 3: N724P371328



3	4	5
701x290x14mm QTY: 1	1000x290x14mm QTY: 1	701x290x14mm QTY: 1
6	7	12
1185x255x12mm QTY: 1	1185x255x12mm QTY: 1	1364x290x14mm QTY: 1
13	14	15
1364x290x14mm QTY: 1	1209x300x17mm QTY: 1	1209x300x17mm QTY: 1
33	34	
525x287x14mm QTY: 2	525x287x14mm QTY: 2	

# Assembly Instructions

## Step 1

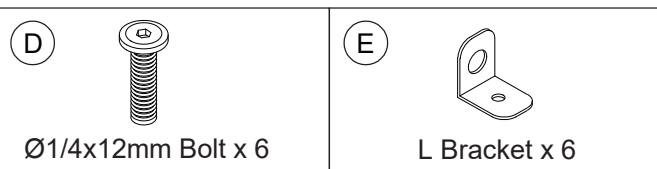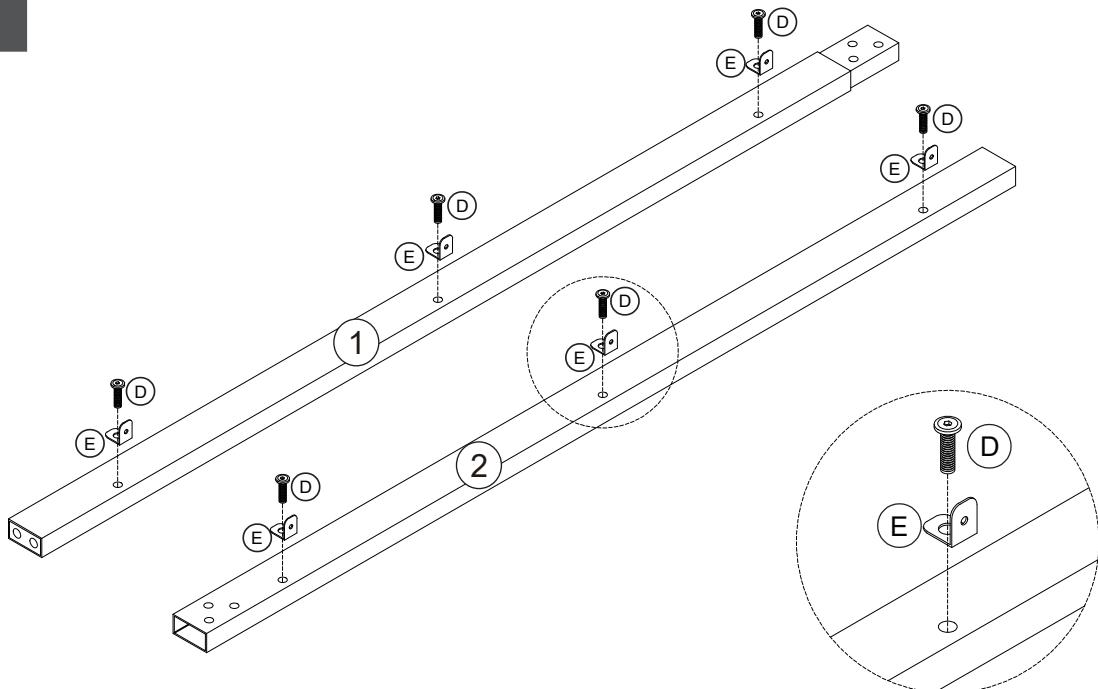


## Step 2

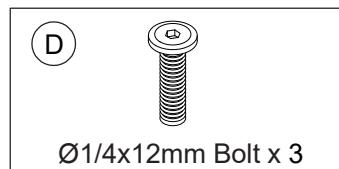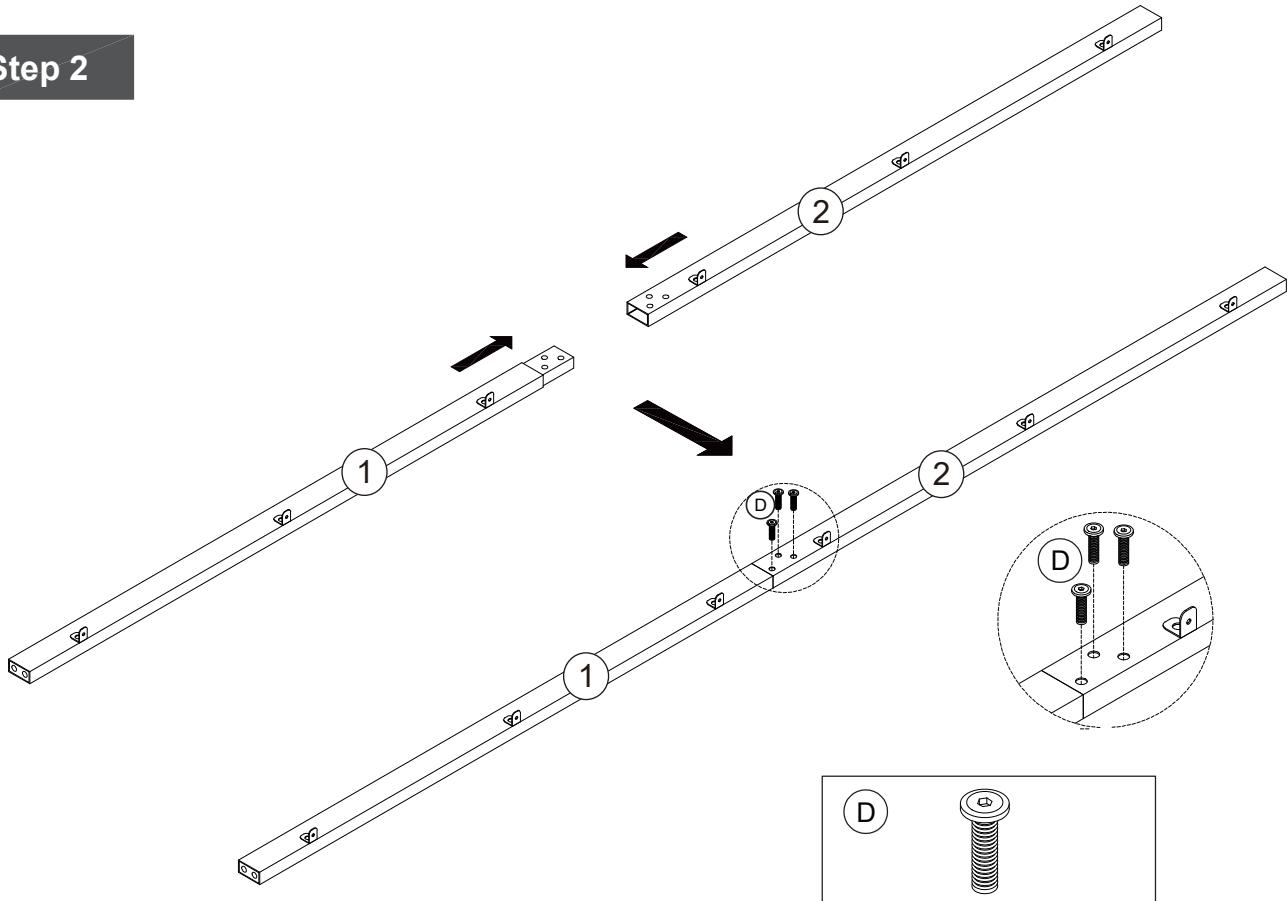


# Assembly Instructions

## Step 3

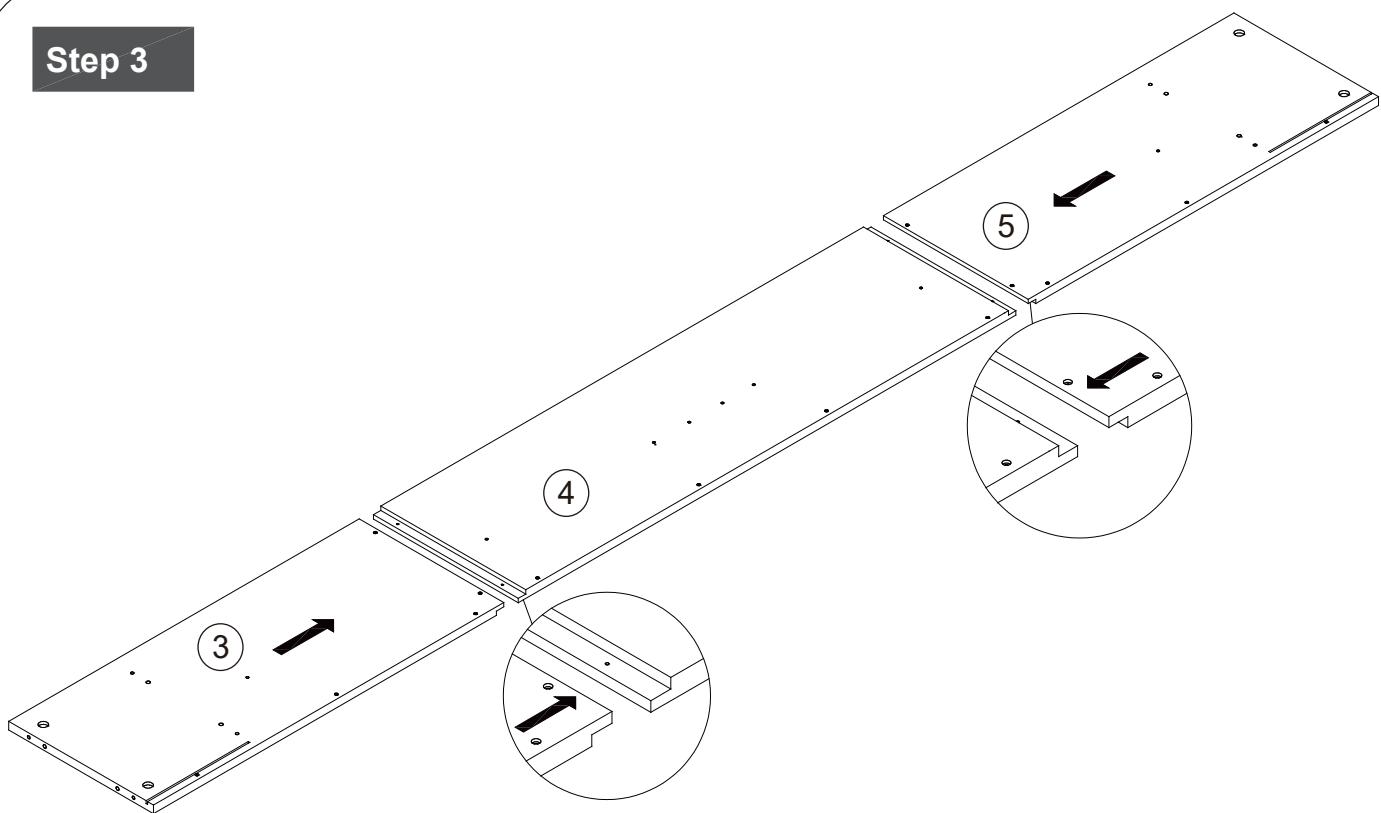


## Step 4

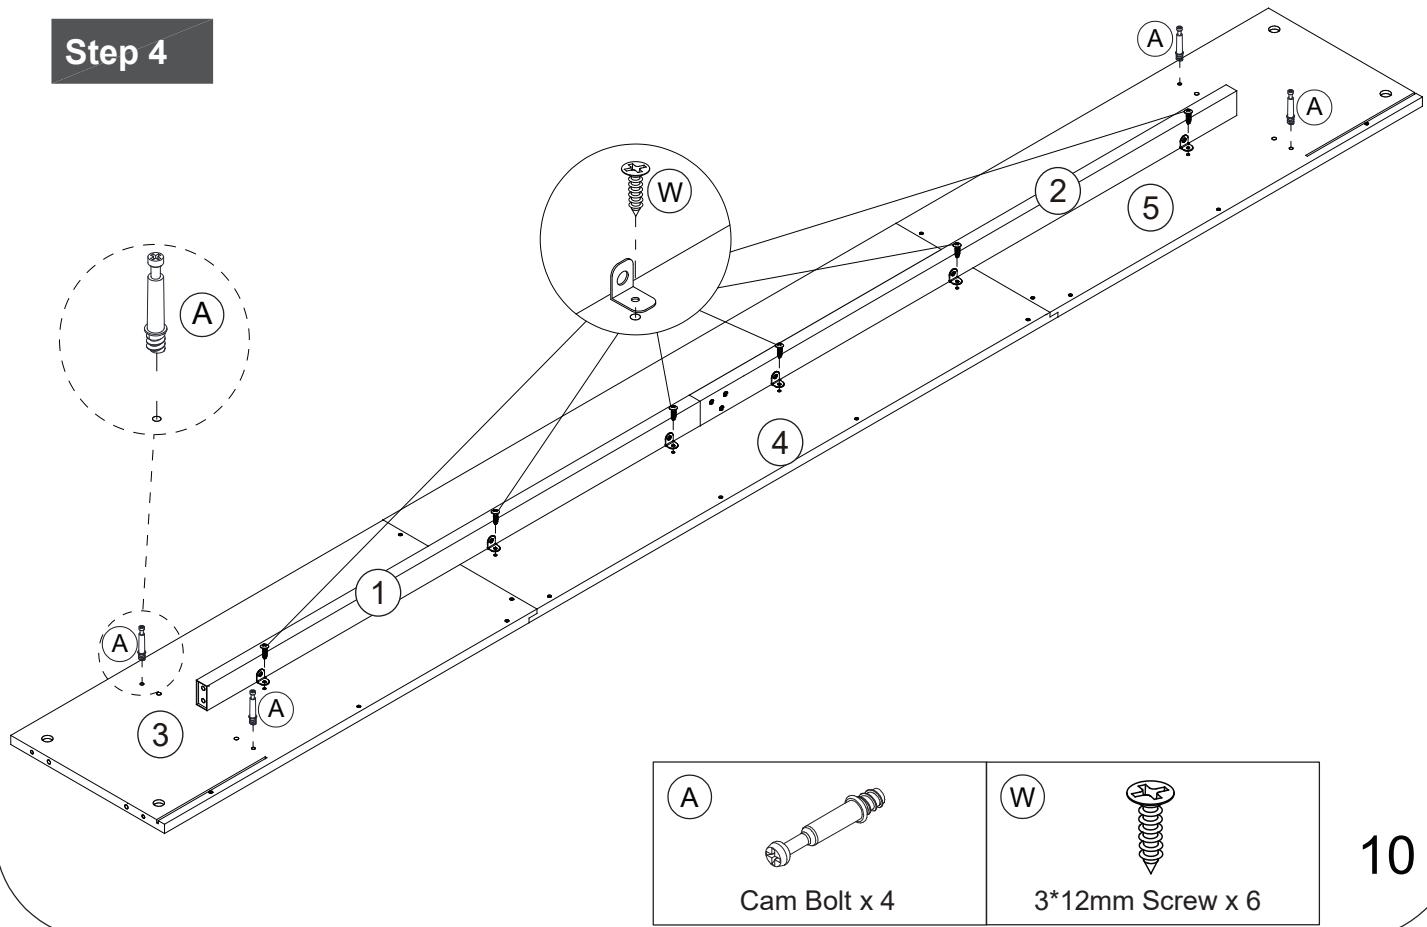


# Assembly Instructions

## Step 5

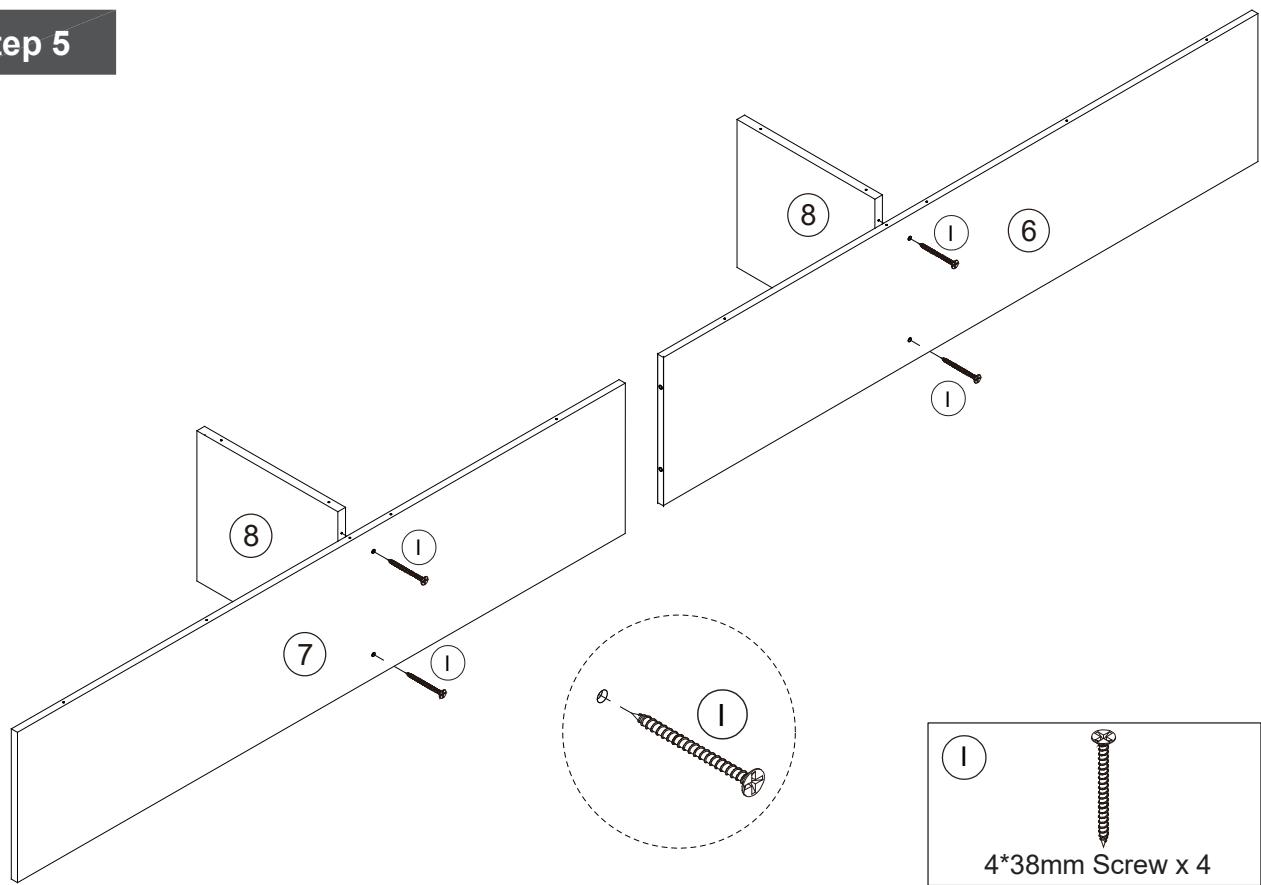


## Step 6

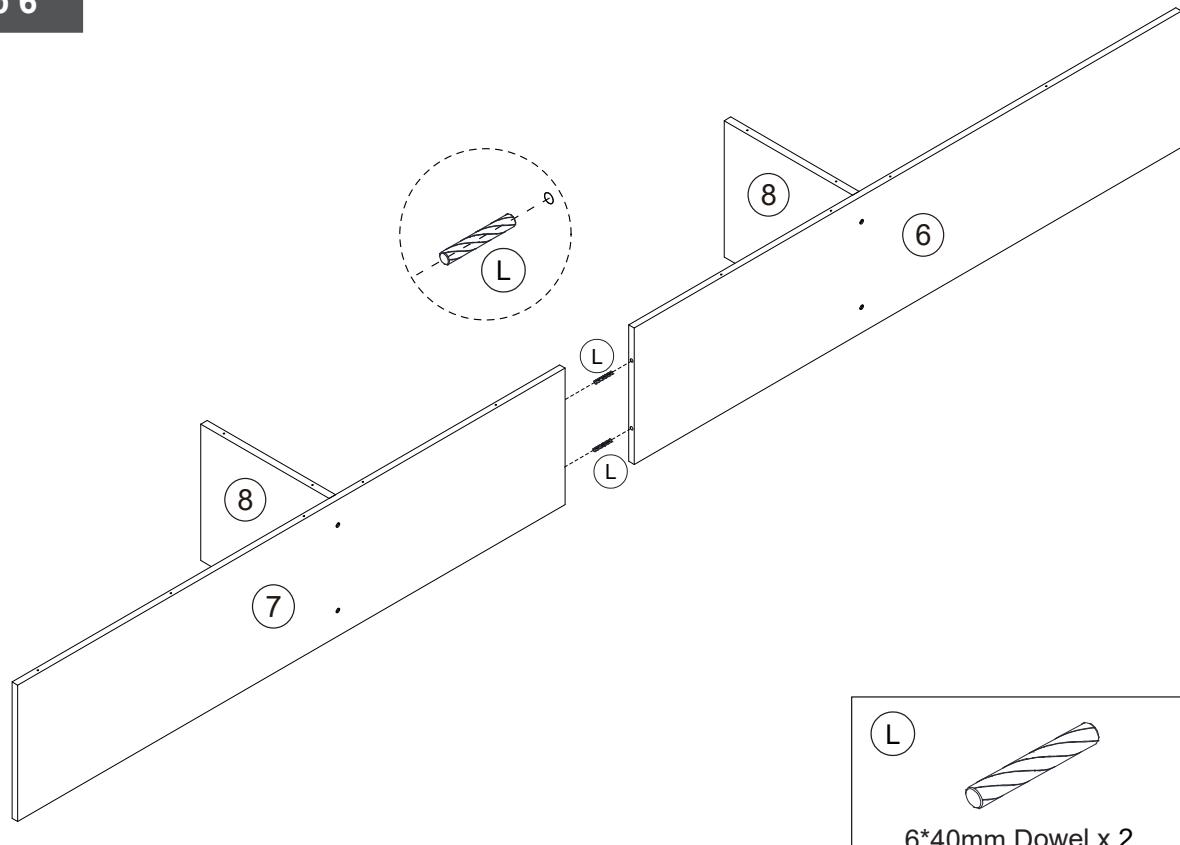


# Assembly Instructions

## Step 7

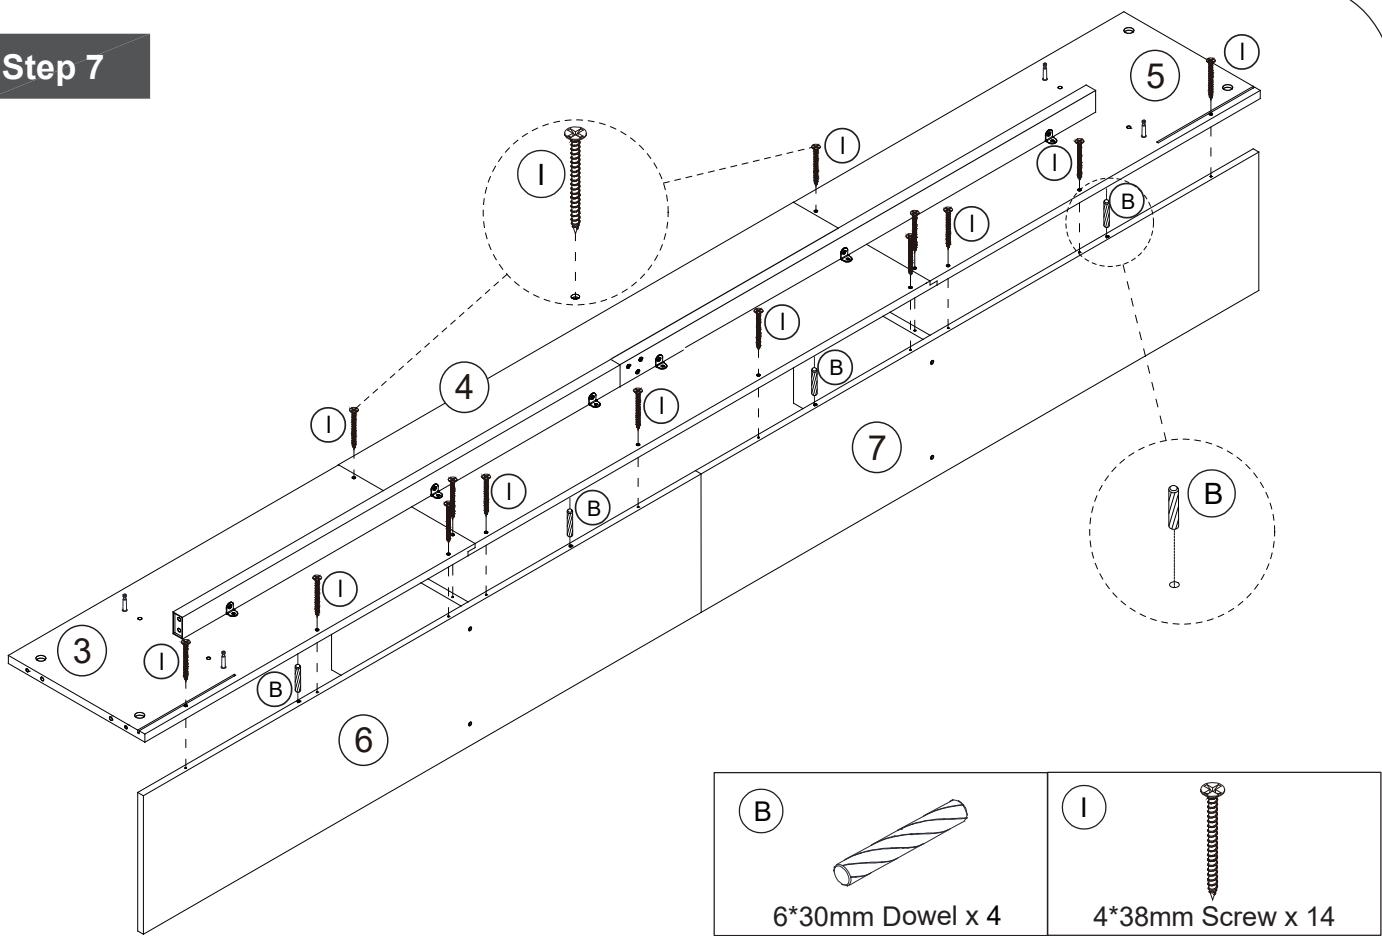


## Step 8

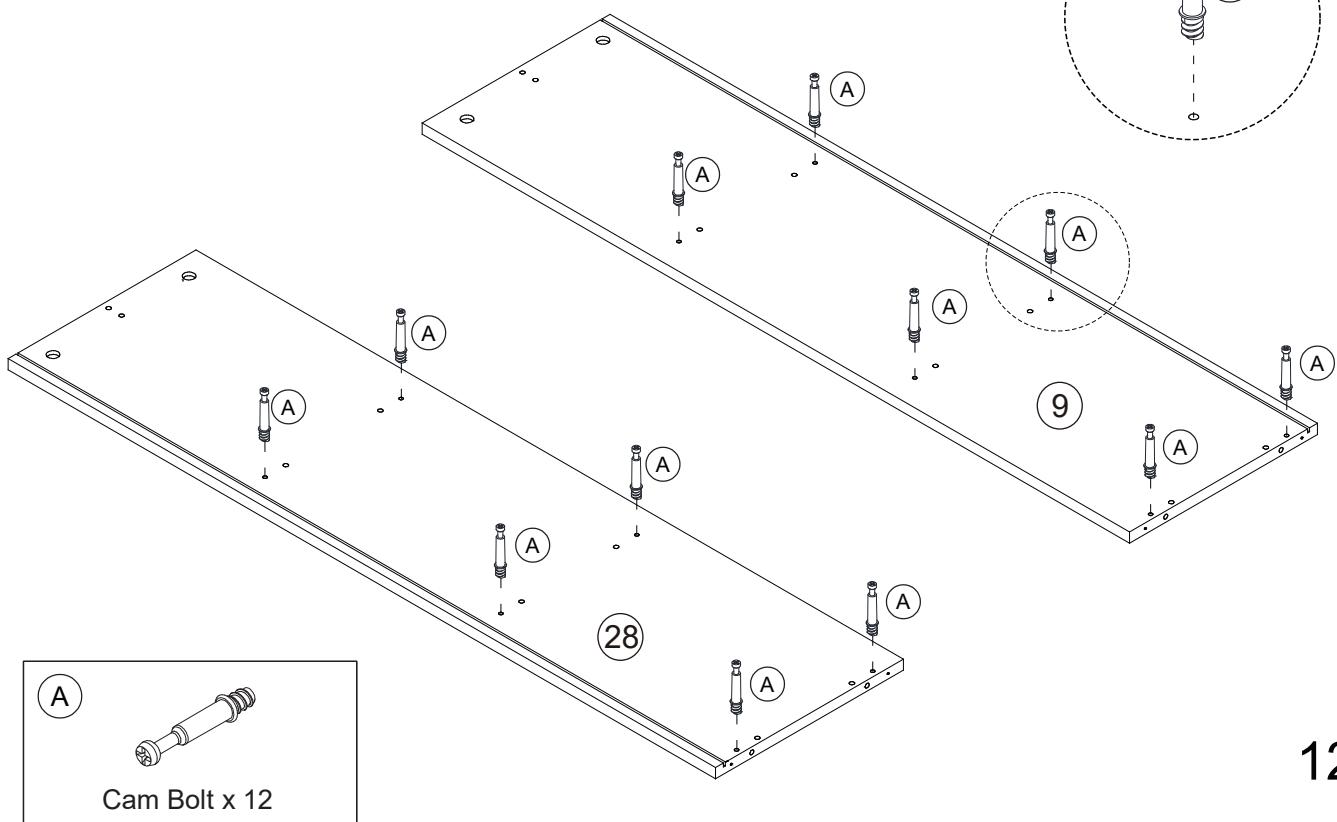


# Assembly Instructions

## Step 9

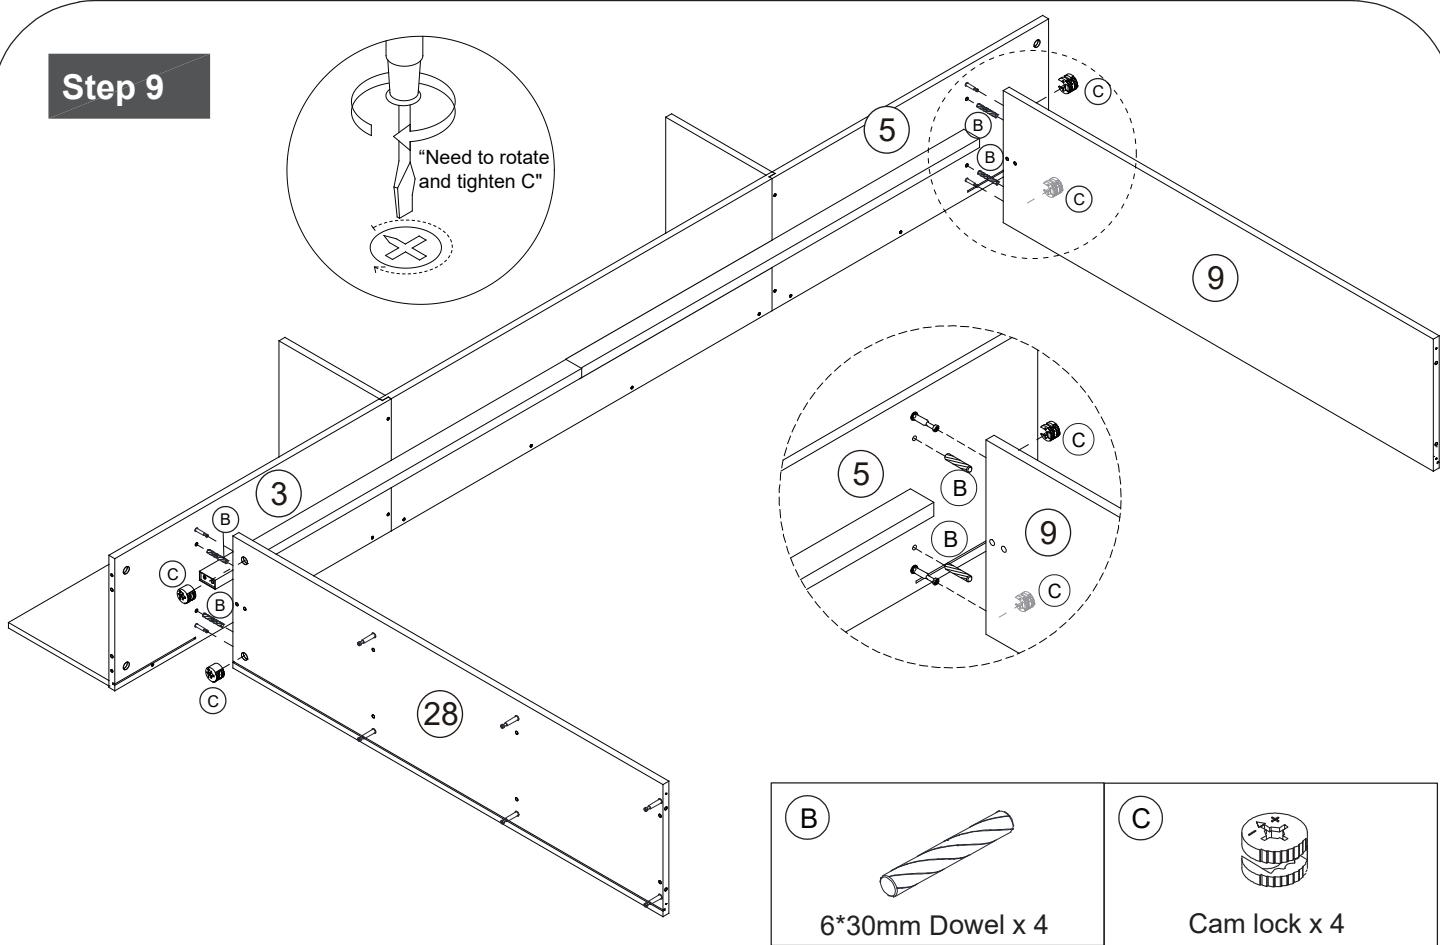


## Step 10

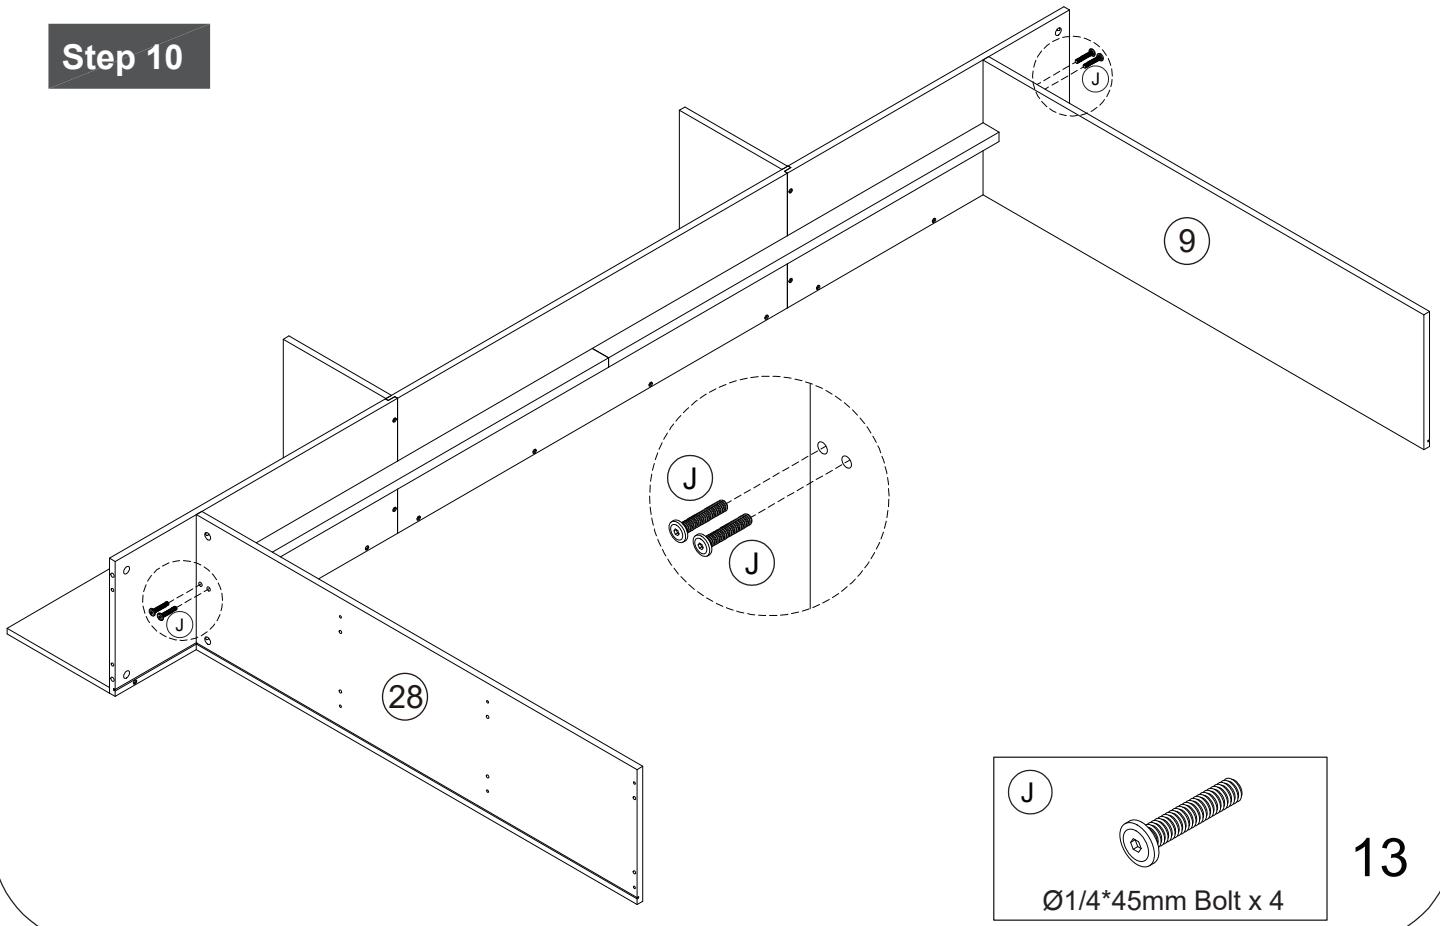


# Assembly Instructions

## Step 11

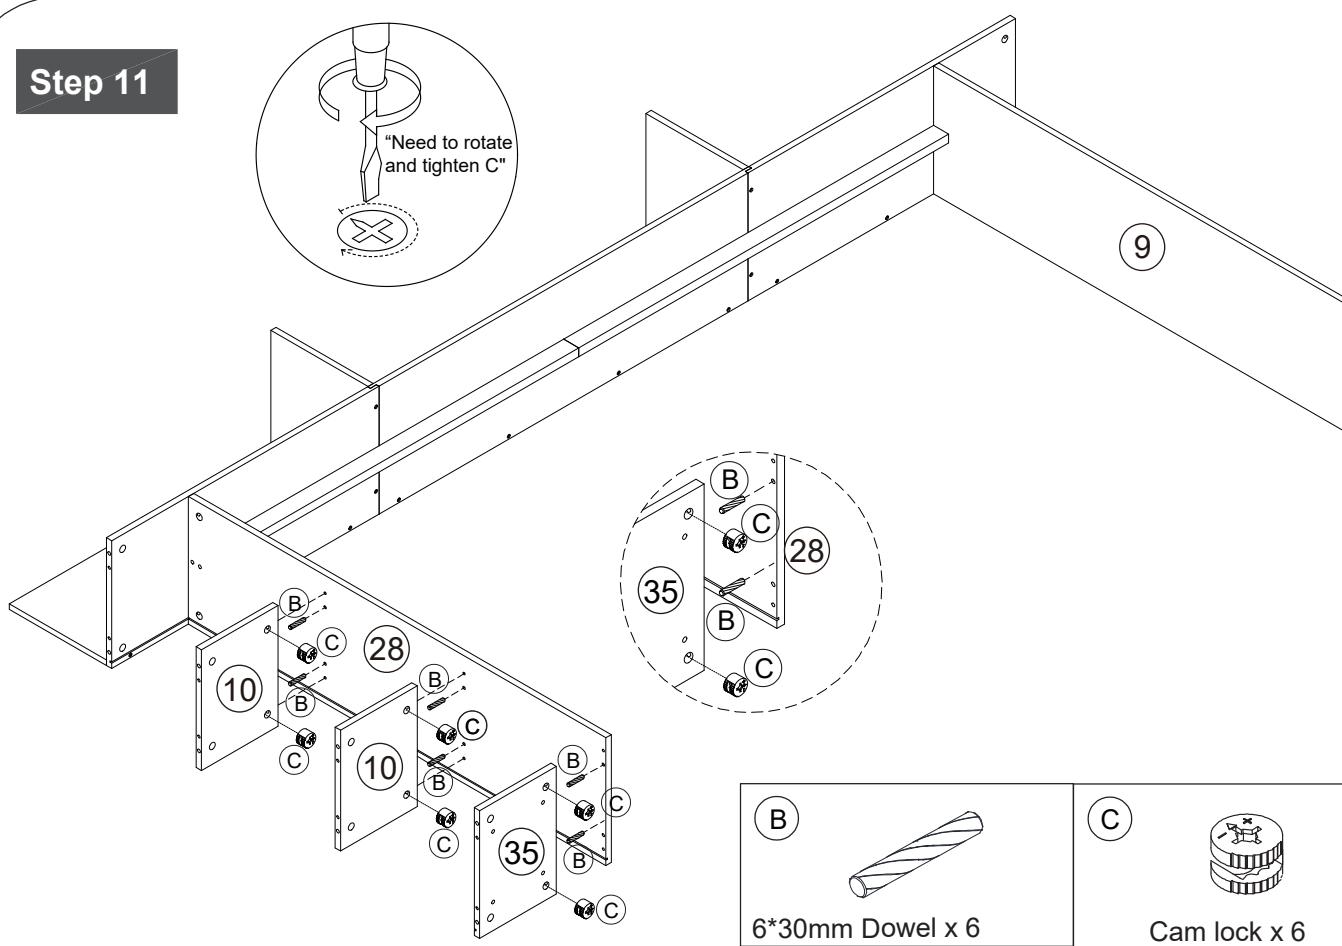


## Step 12

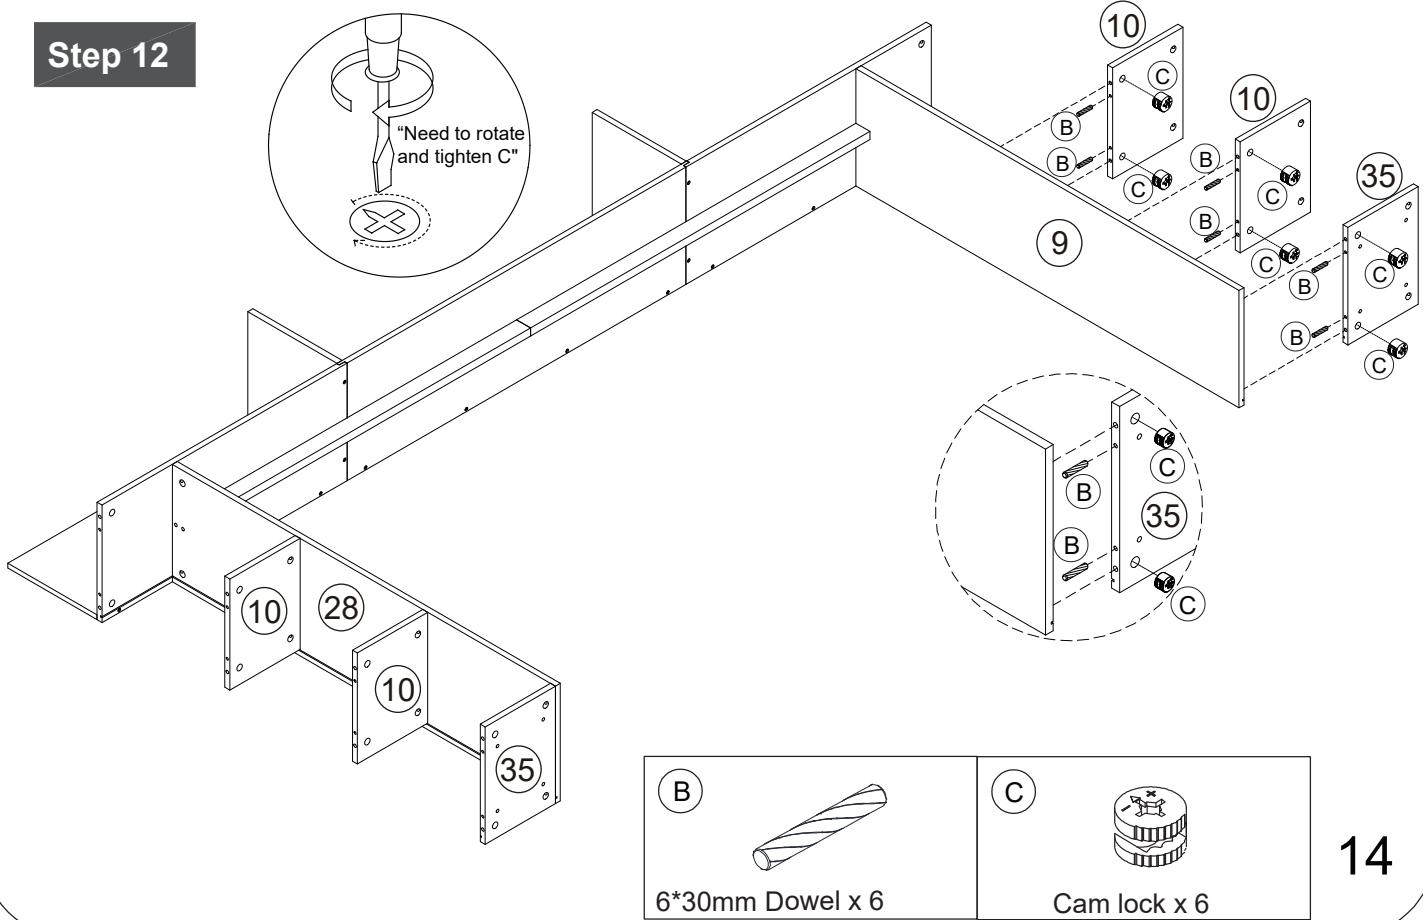


# Assembly Instructions

## Step 13

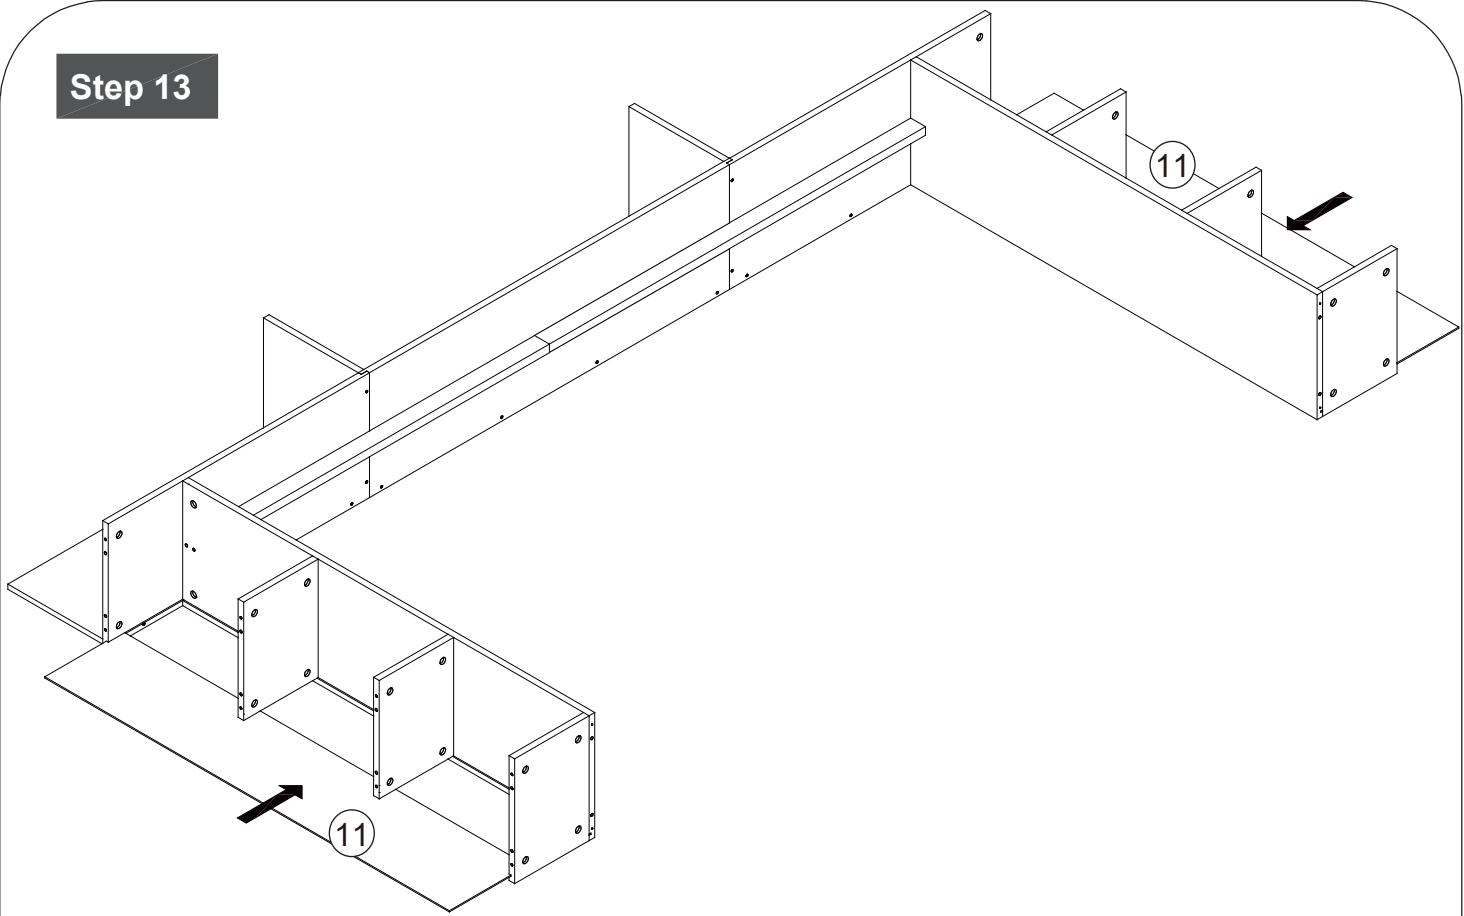


## Step 14

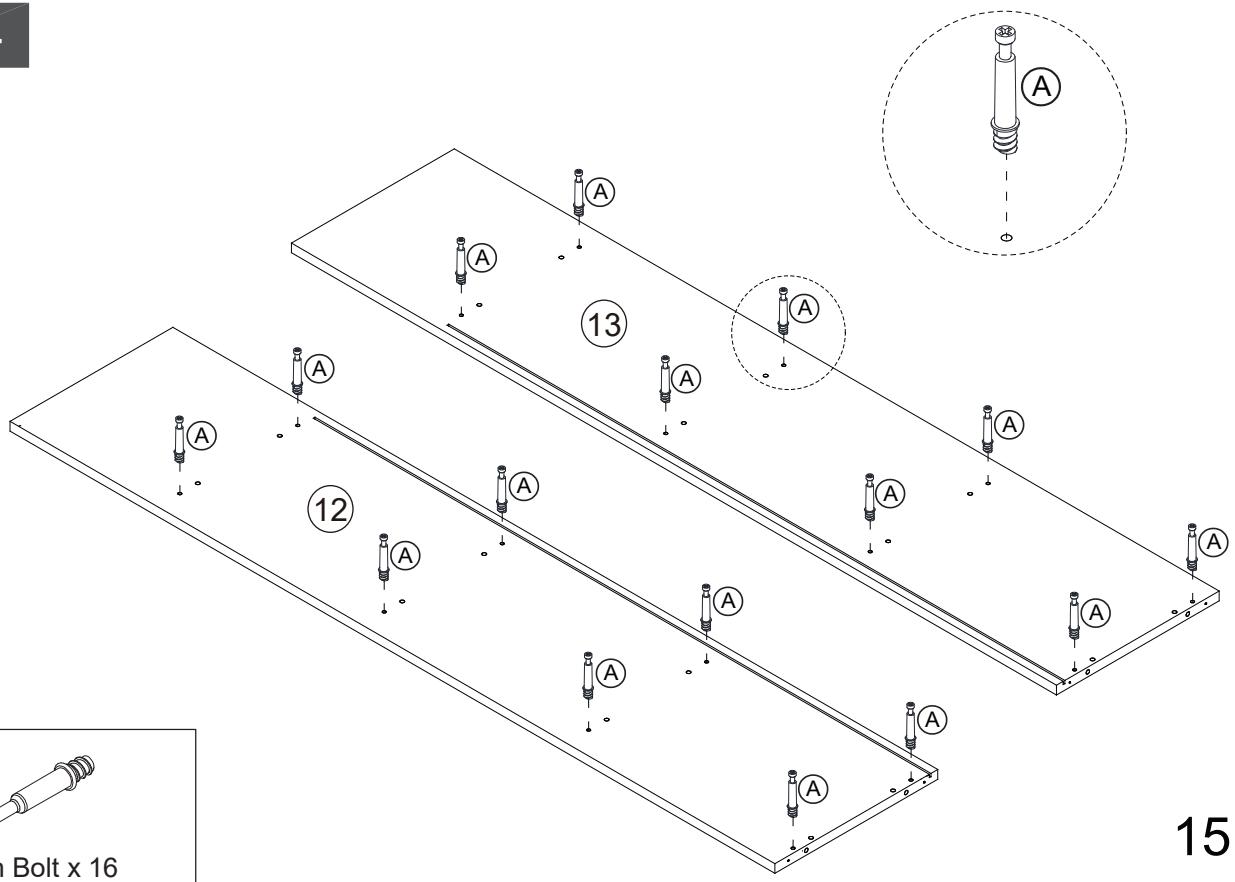


# Assembly Instructions

## Step 15

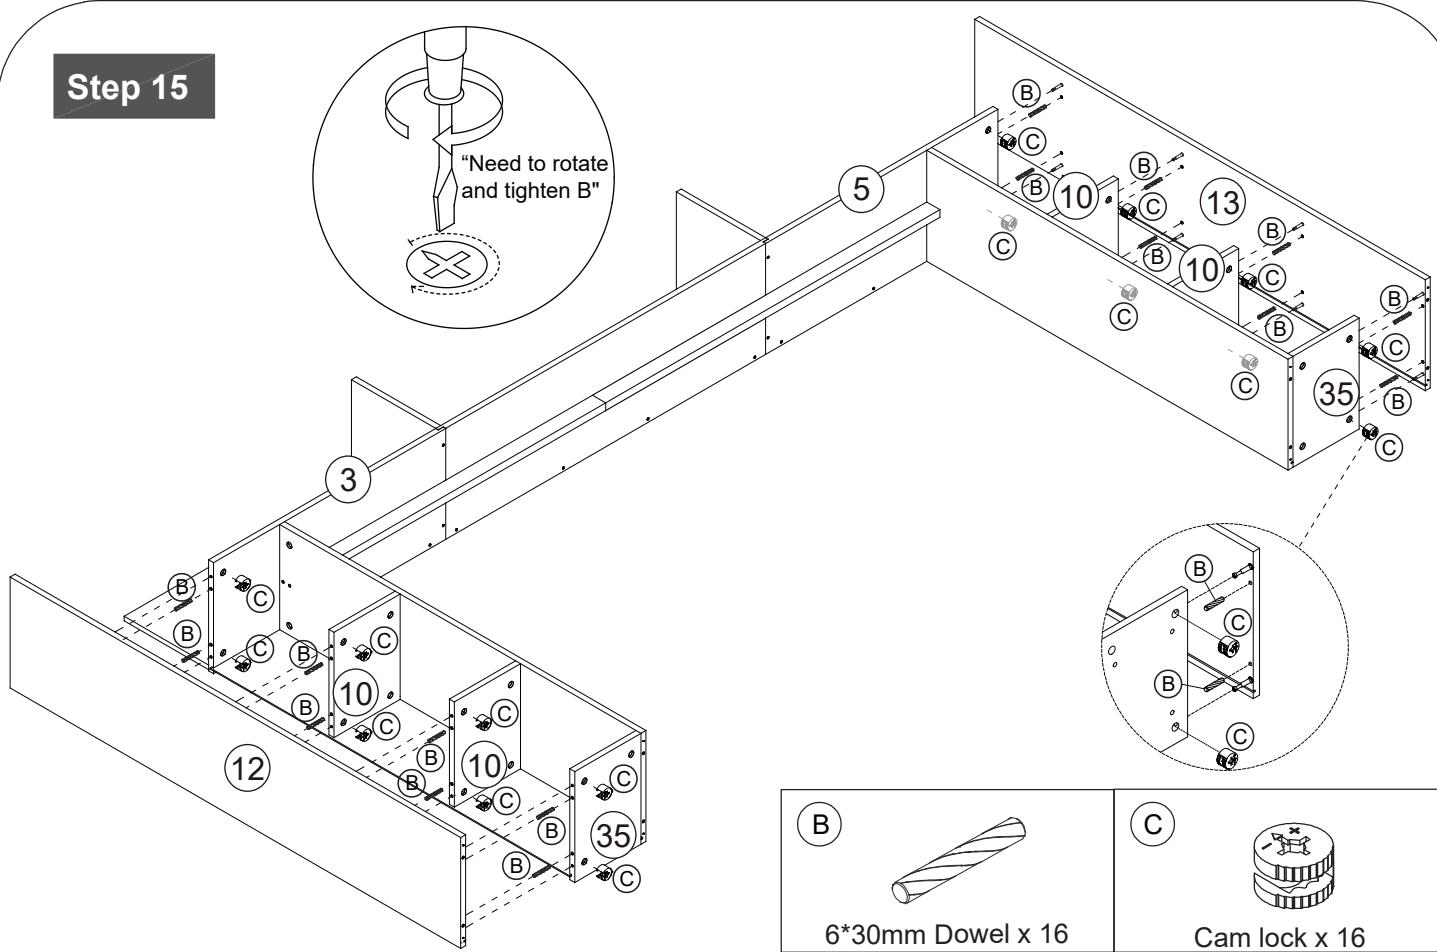


## Step 16

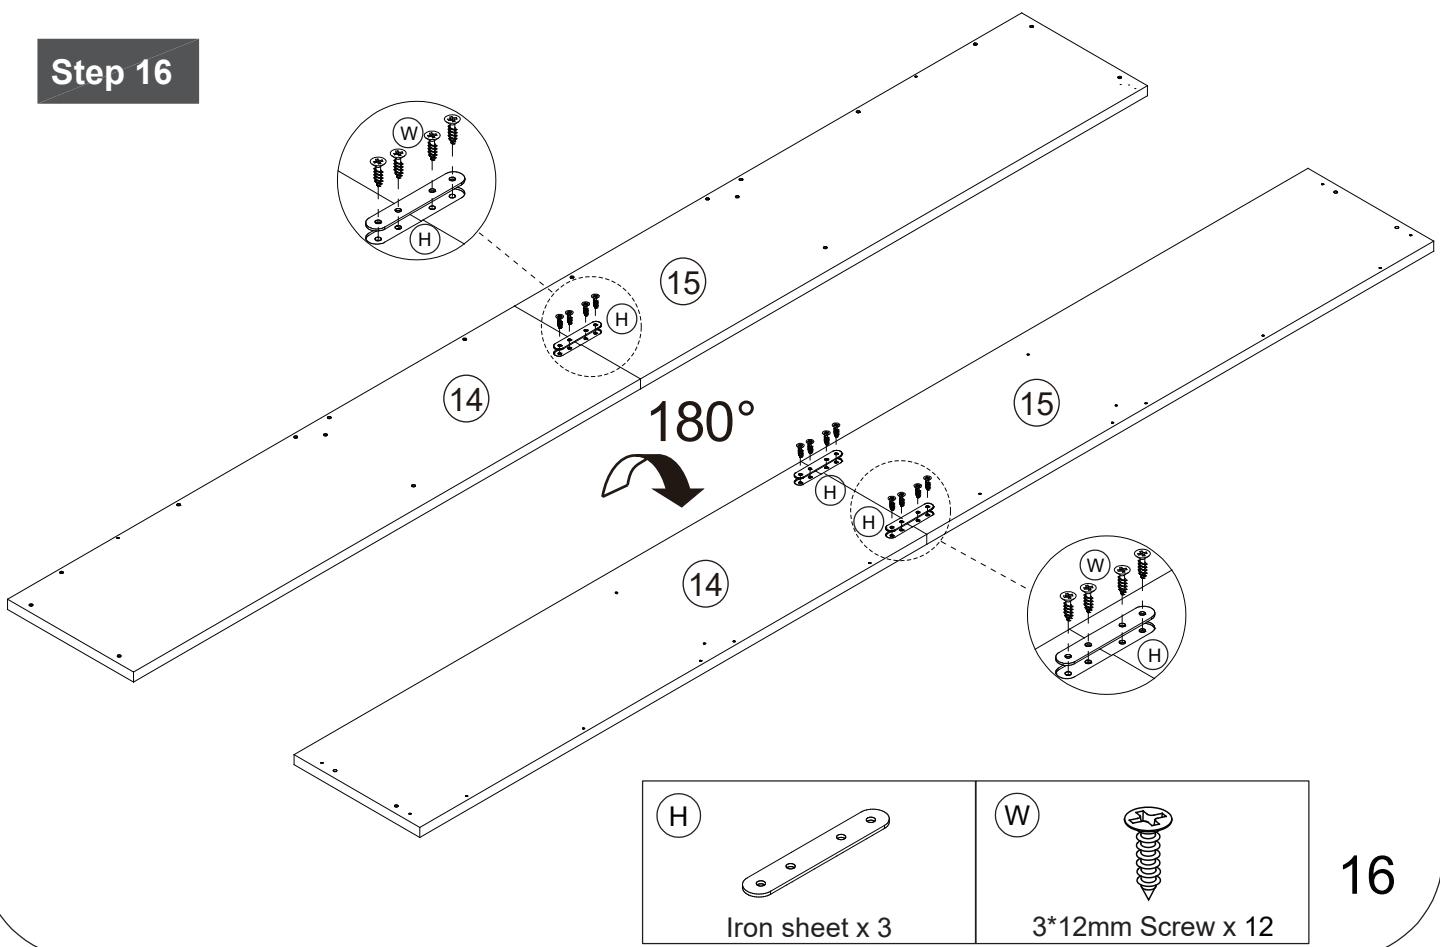


# Assembly Instructions

## Step 17

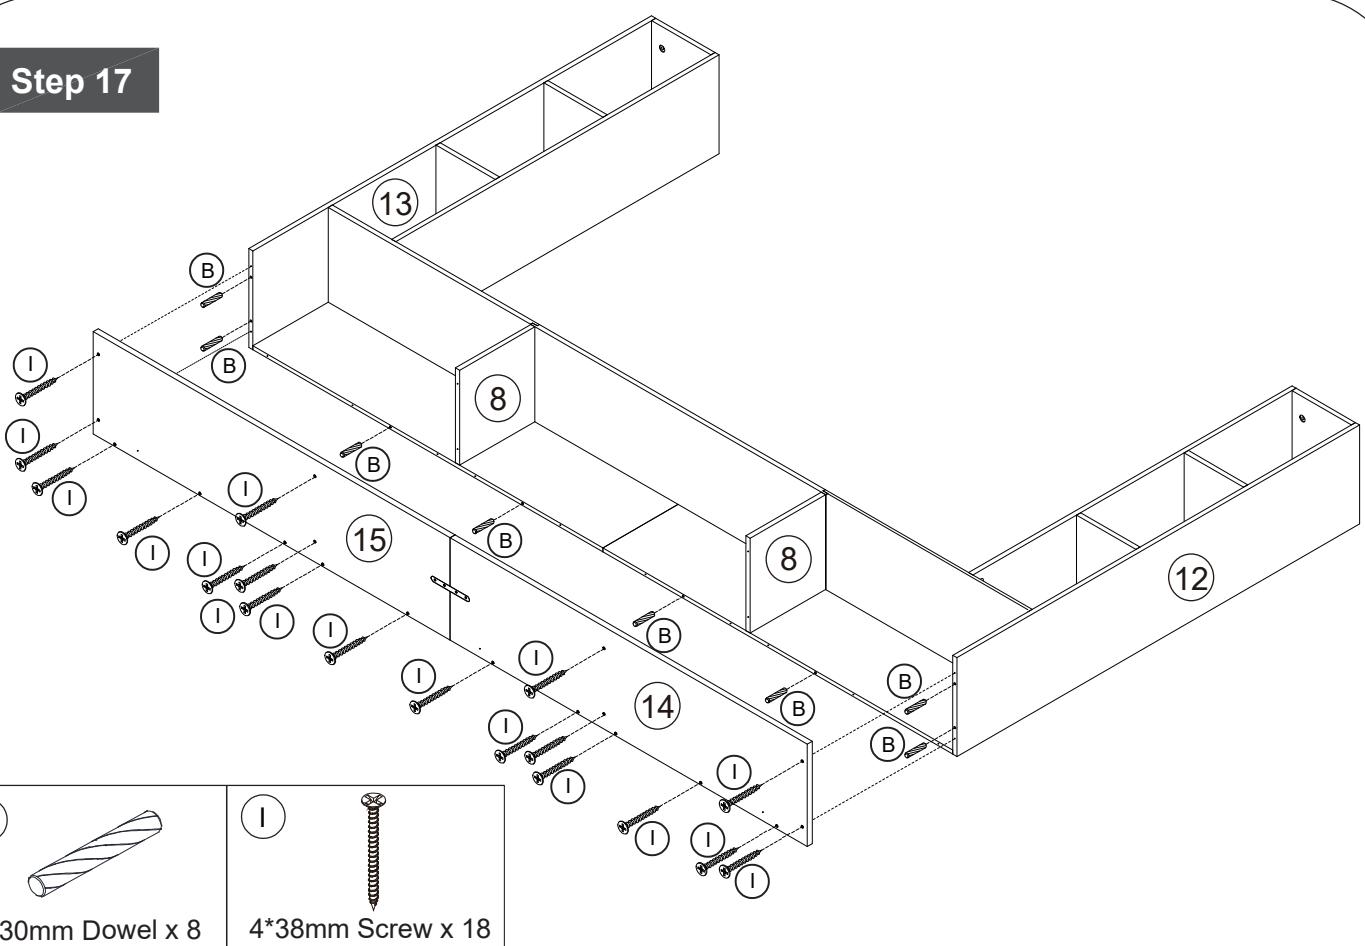


## Step 18

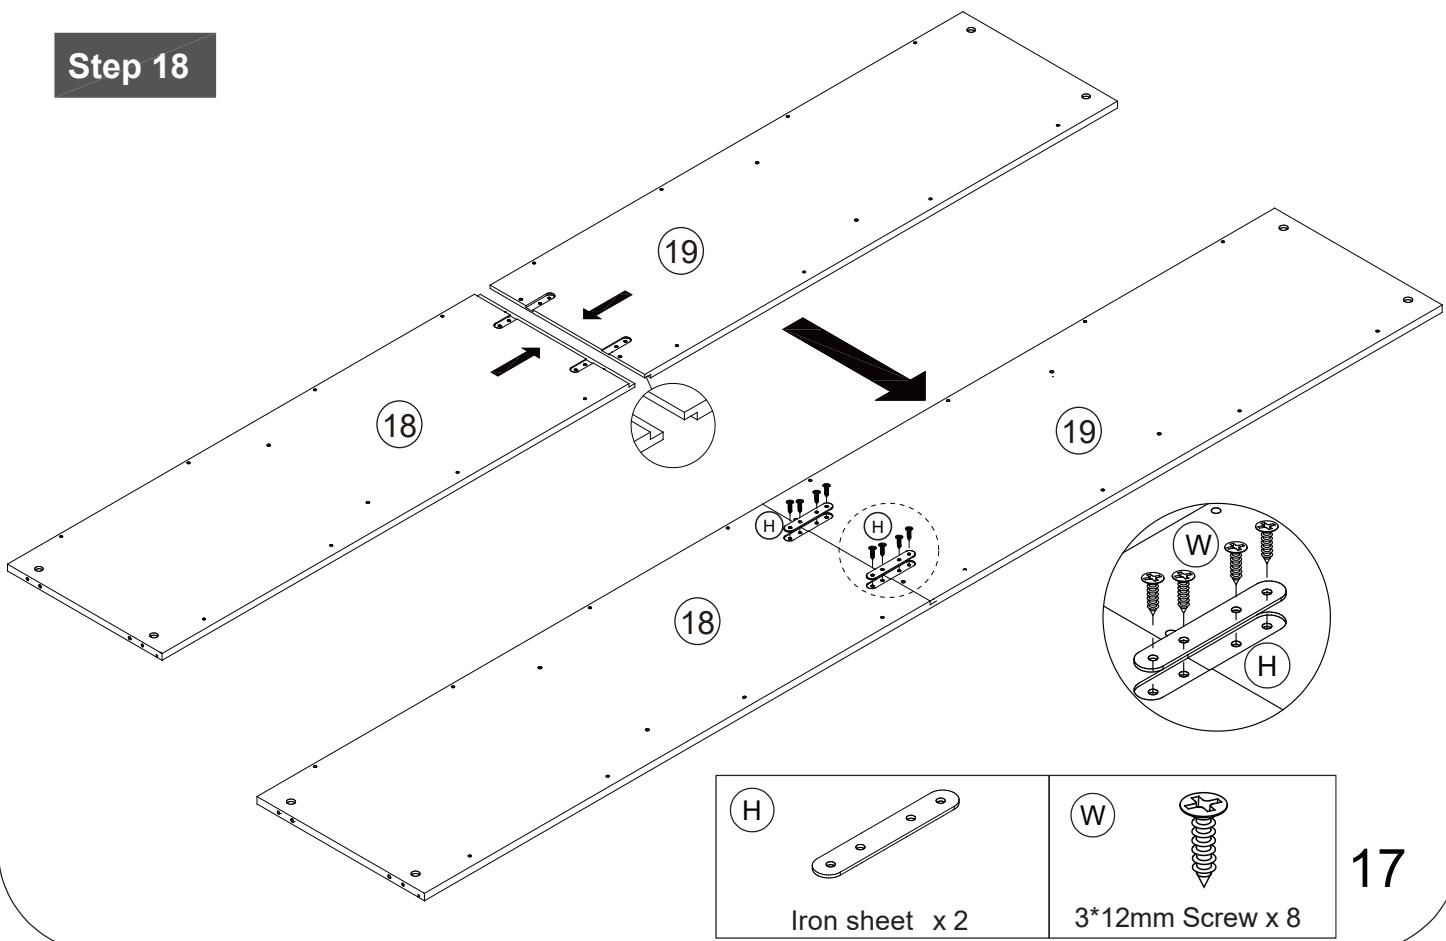


# Assembly Instructions

## Step 19

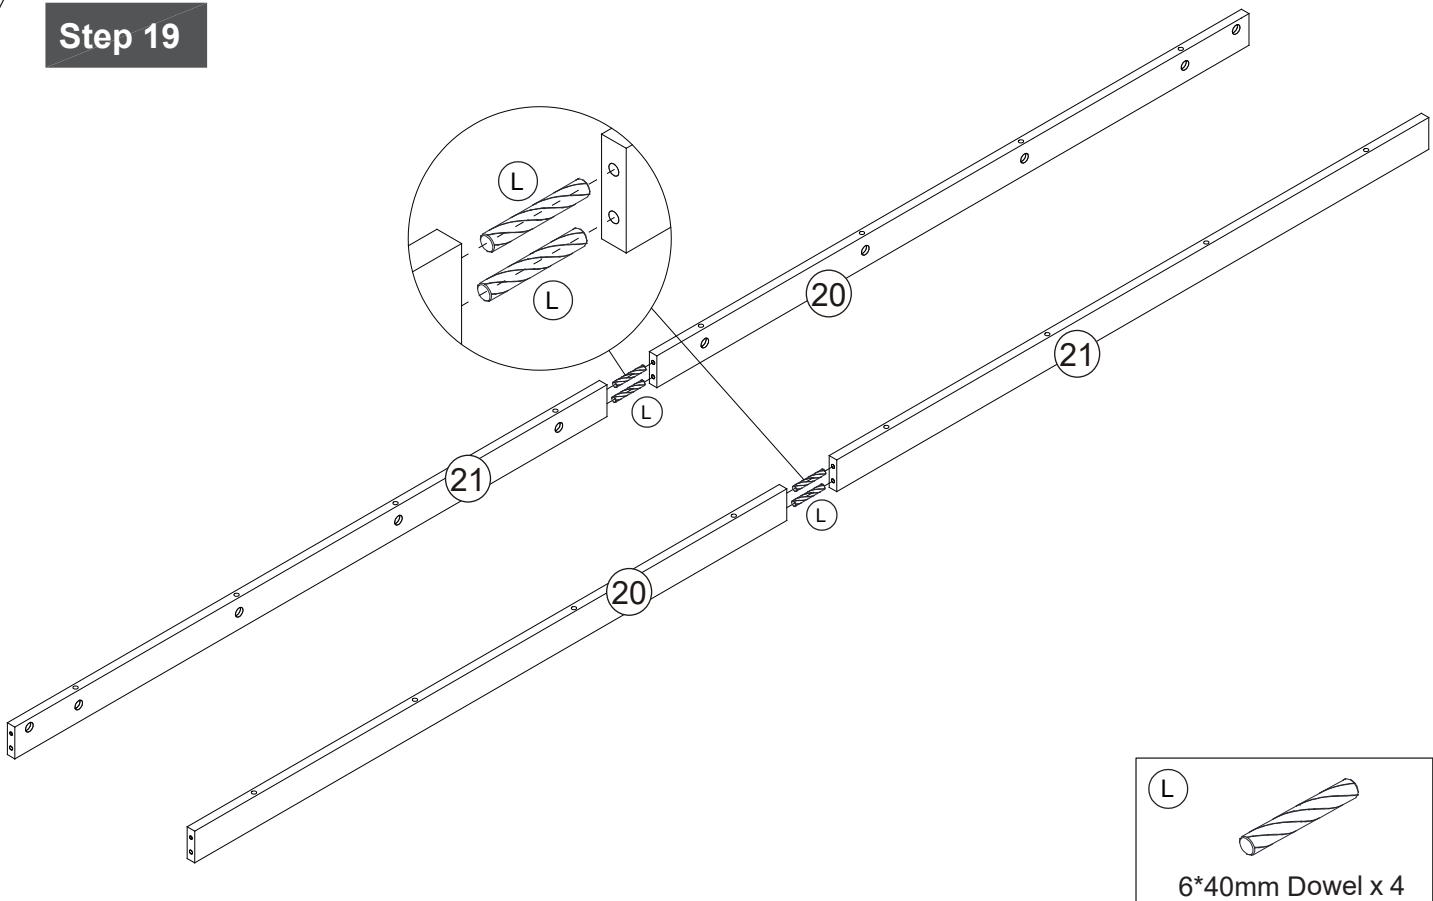


## Step 20

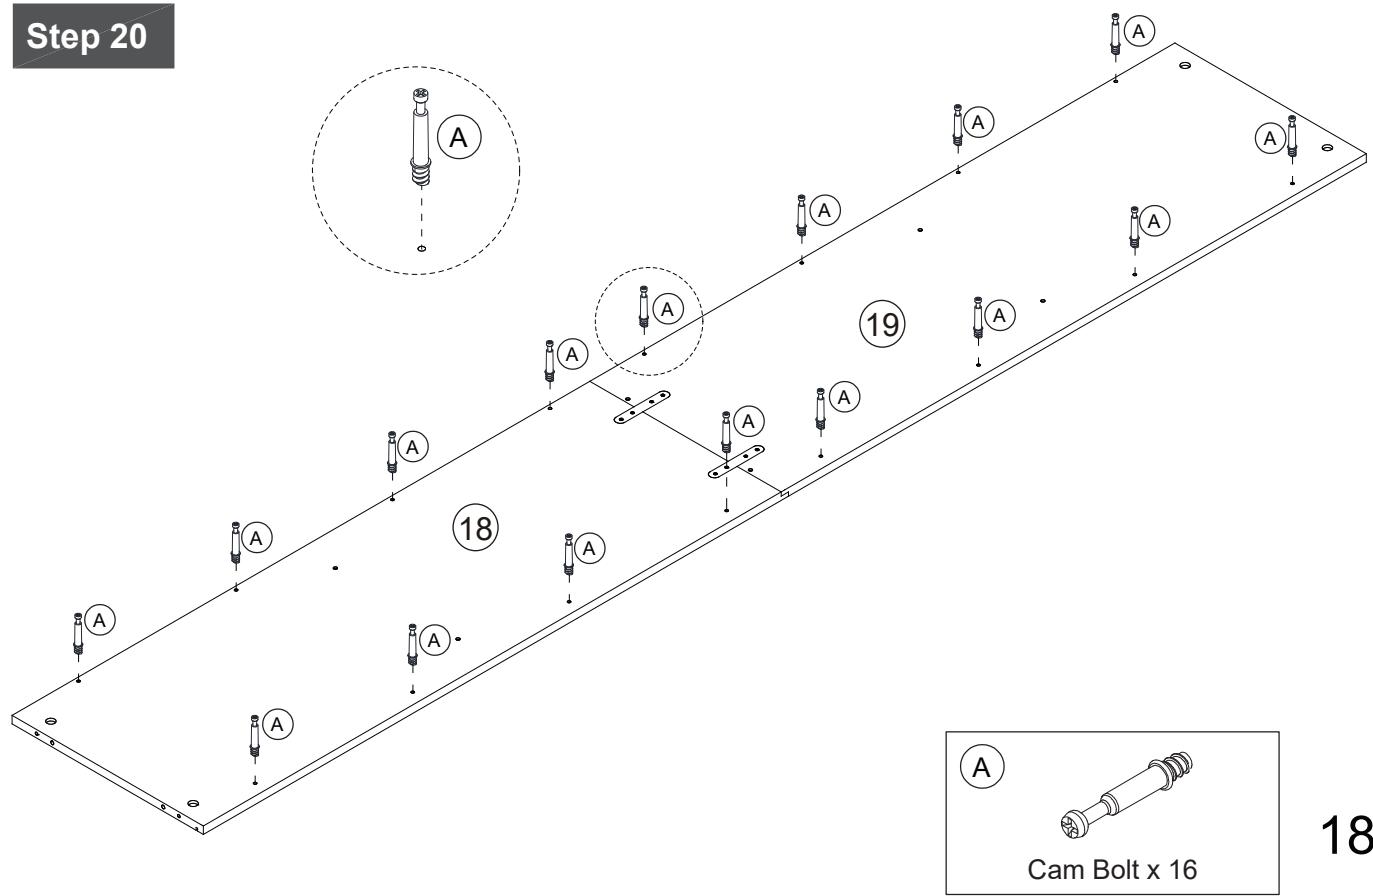


# Assembly Instructions

## Step 21

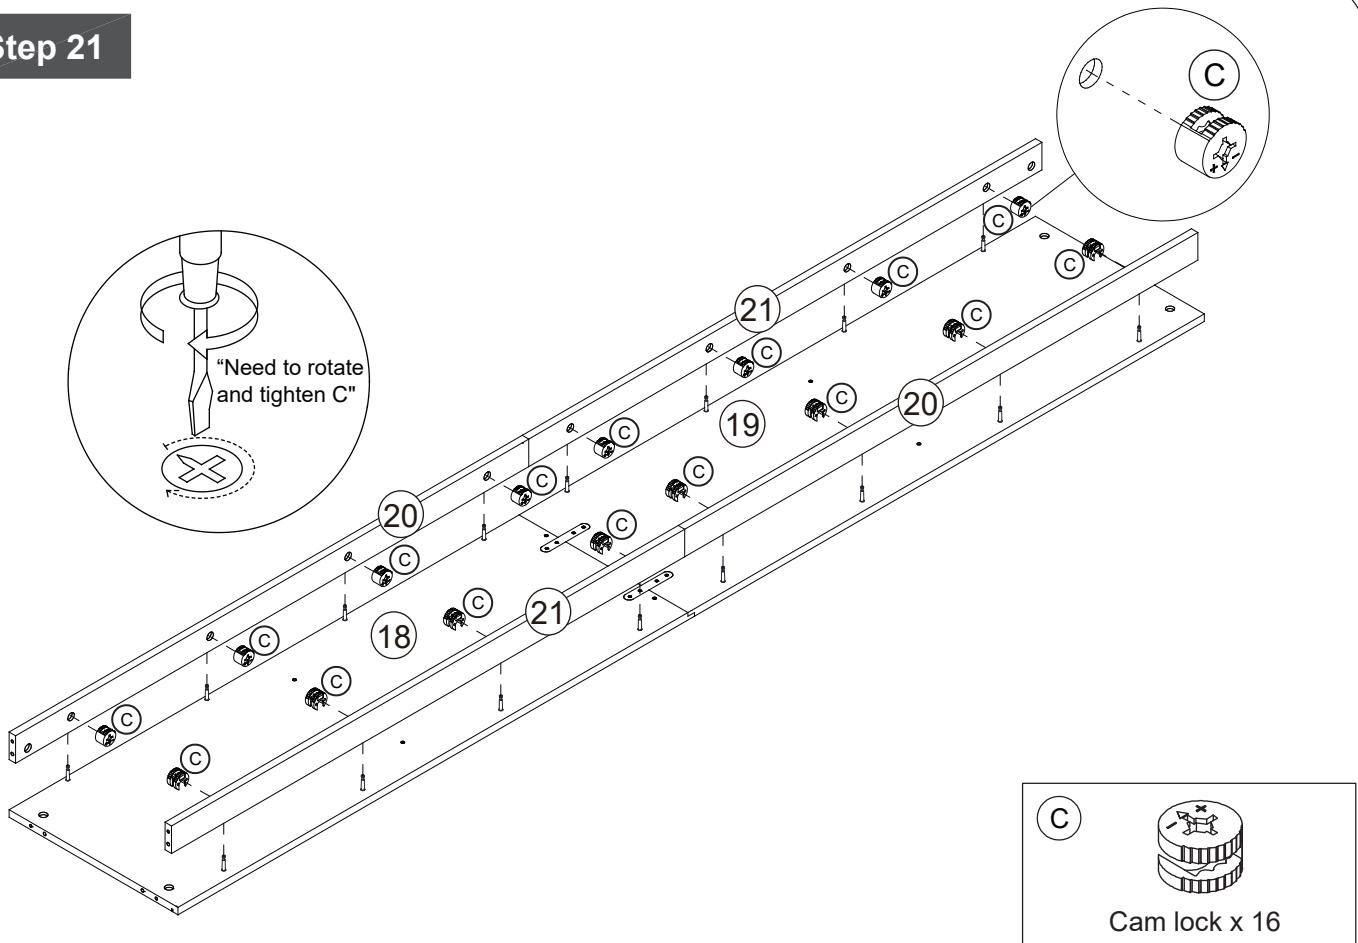


## Step 22

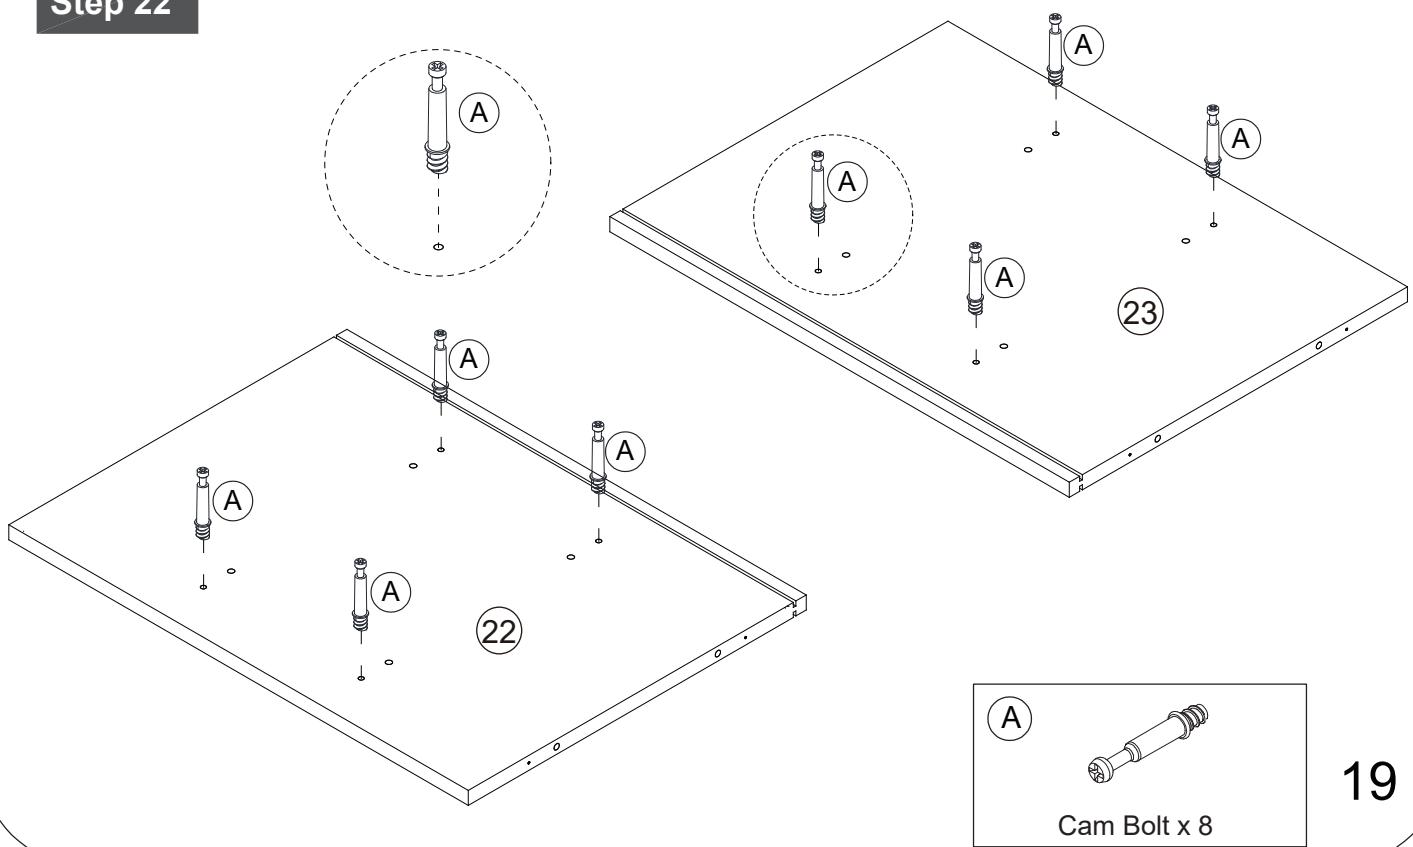


# Assembly Instructions

## Step 23

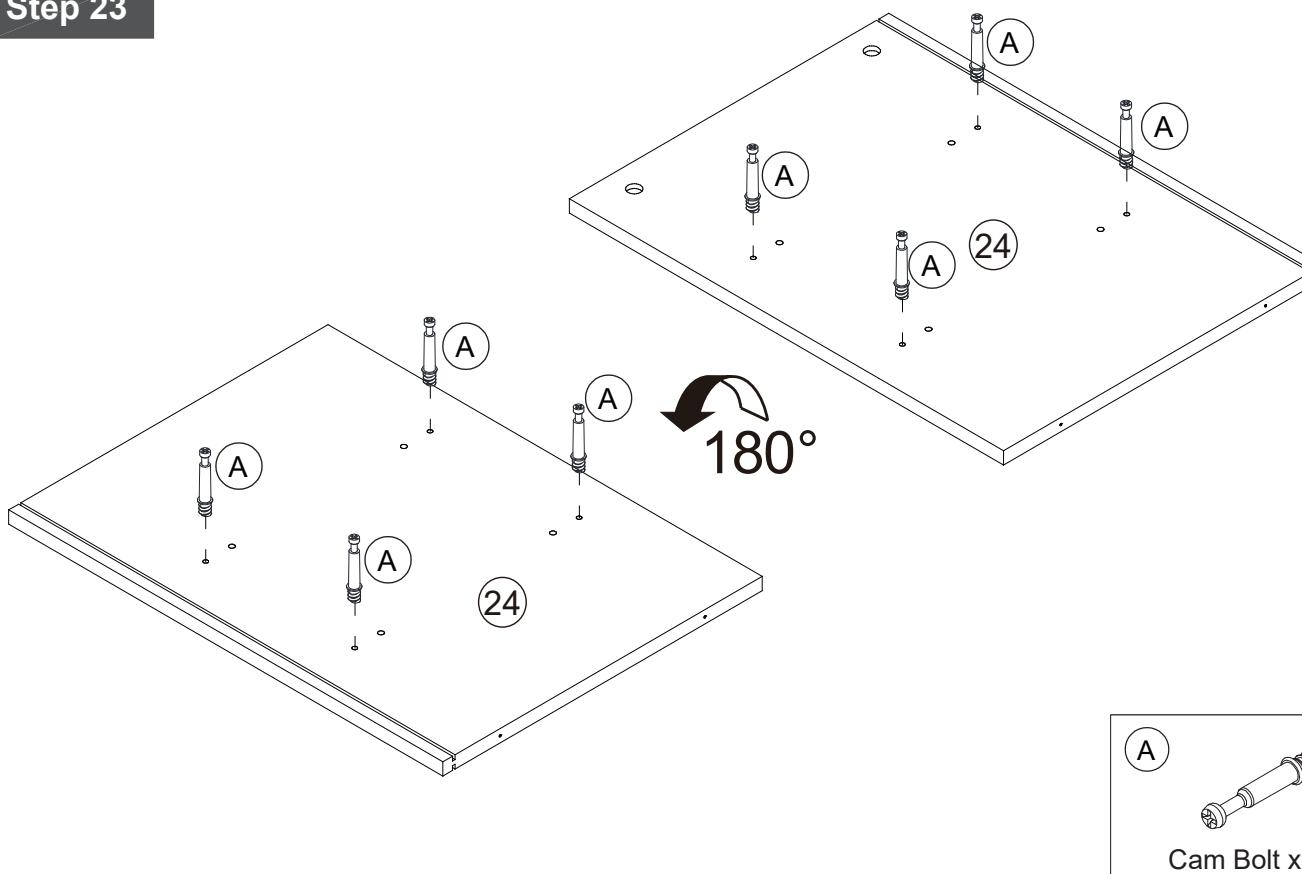


## Step 24

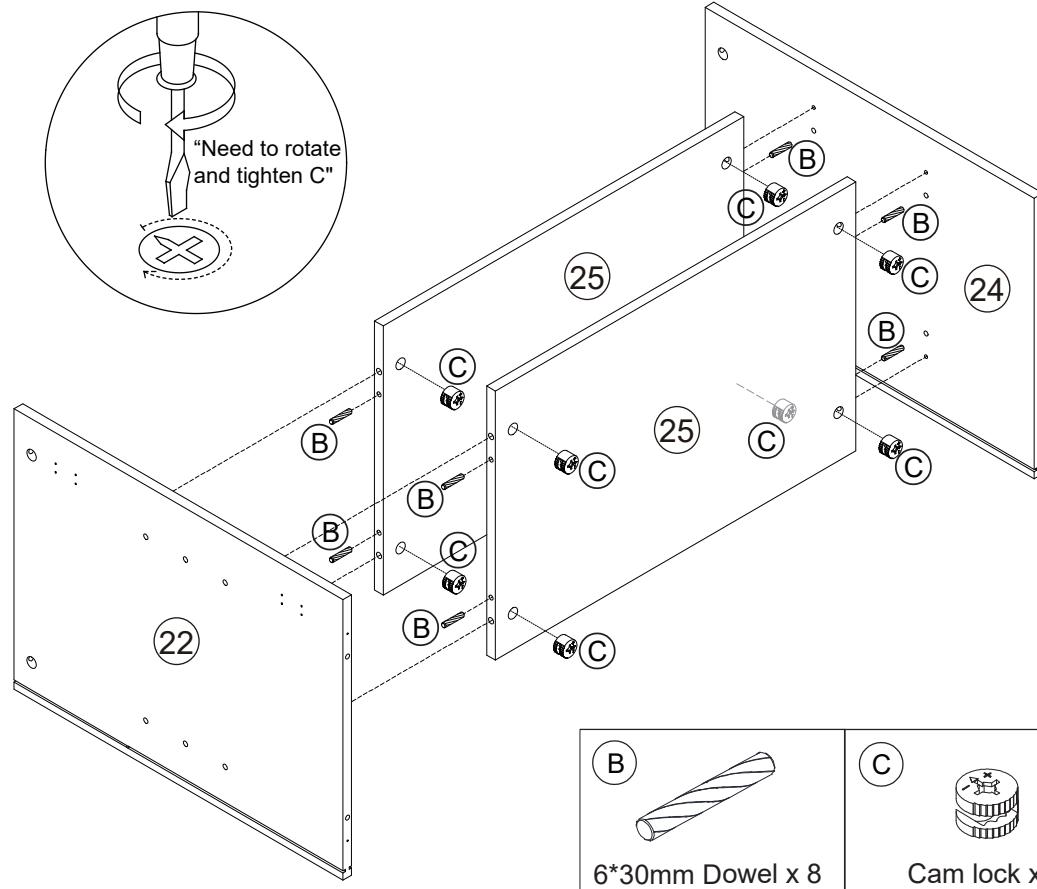


# Assembly Instructions

## Step 25

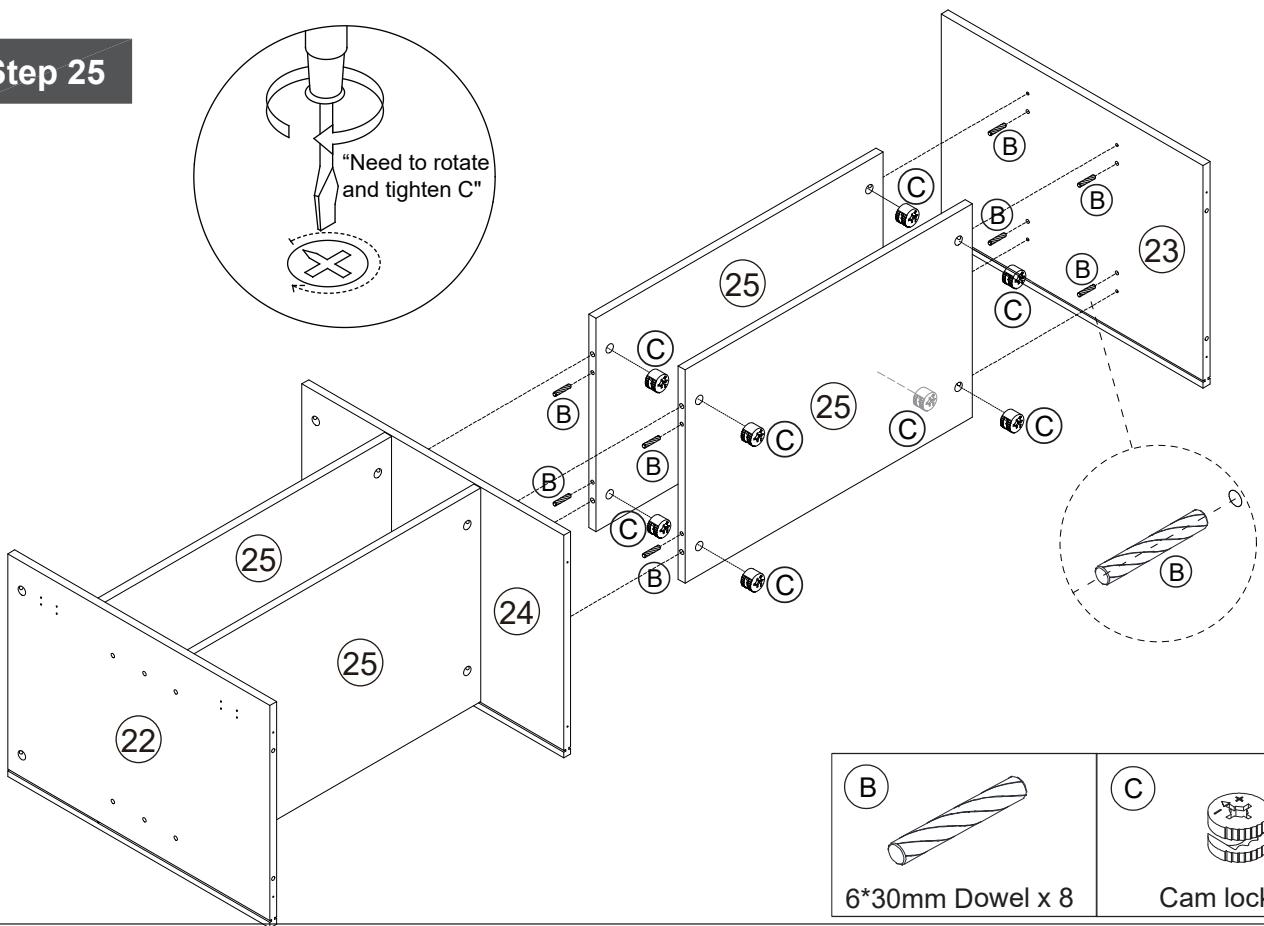


## Step 26

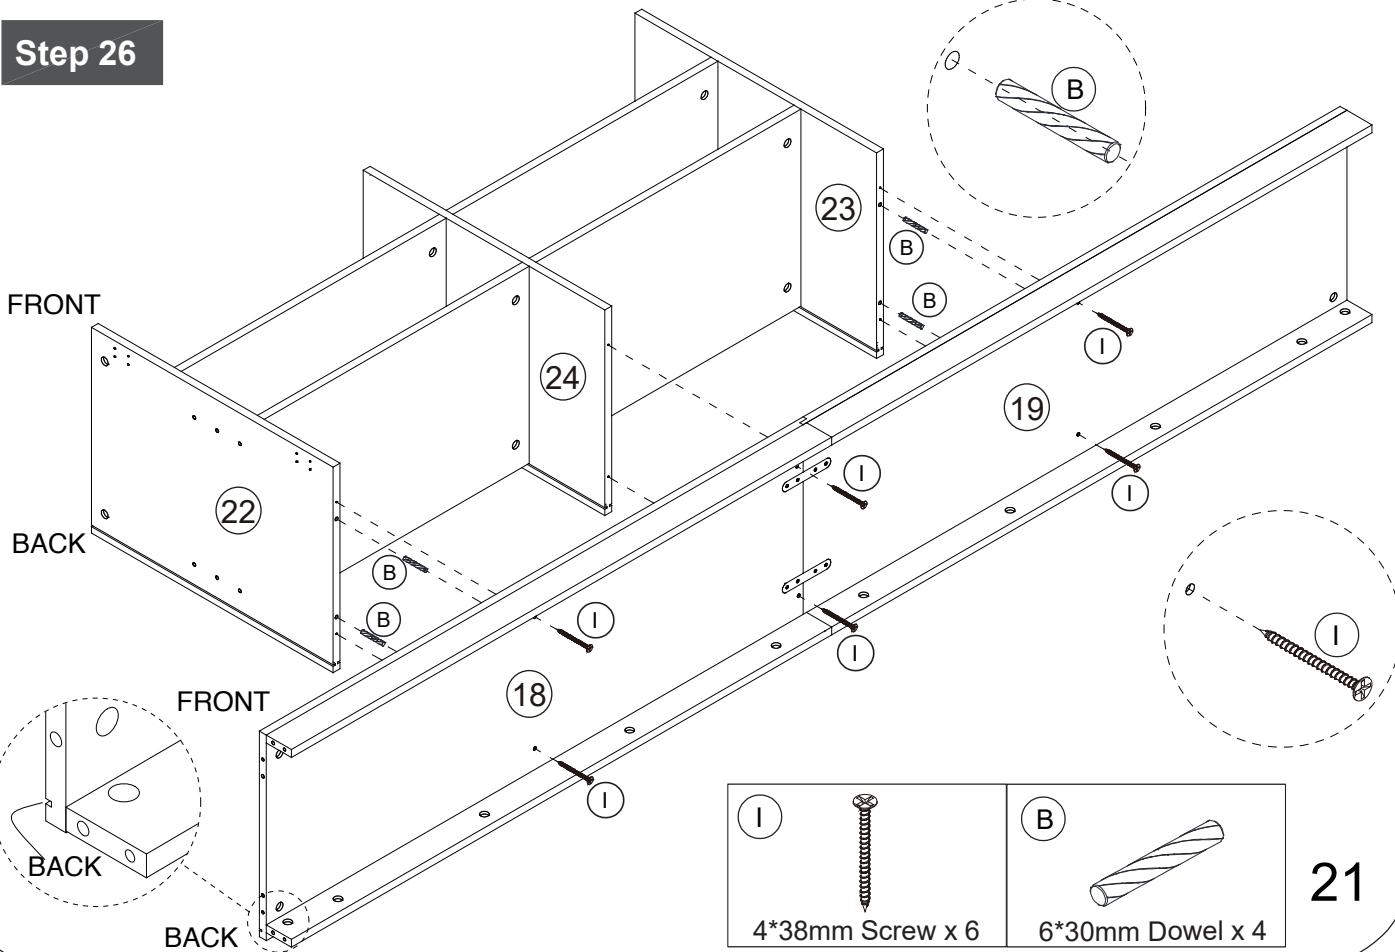


# Assembly Instructions

## Step 27

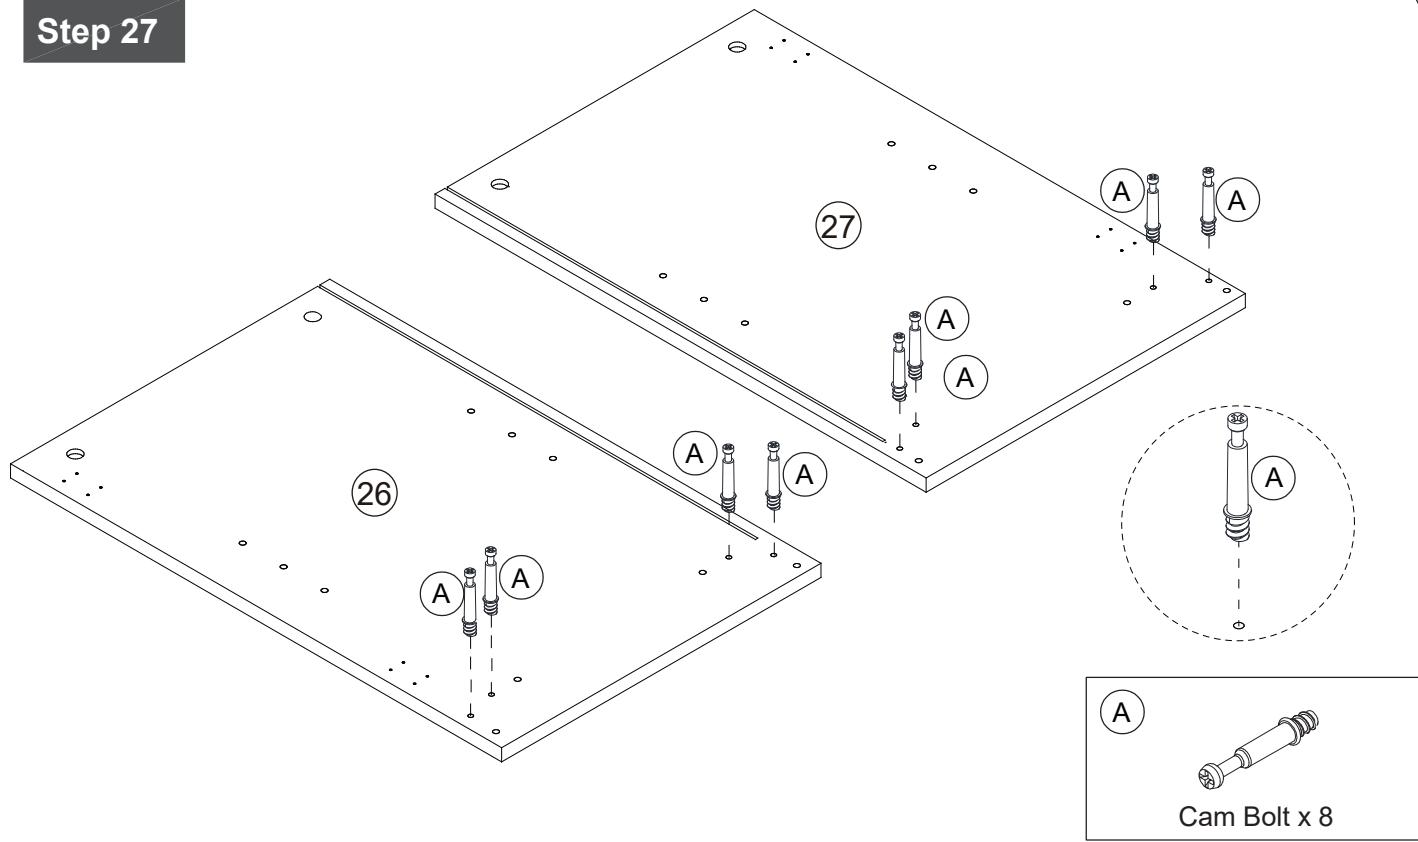


## Step 28

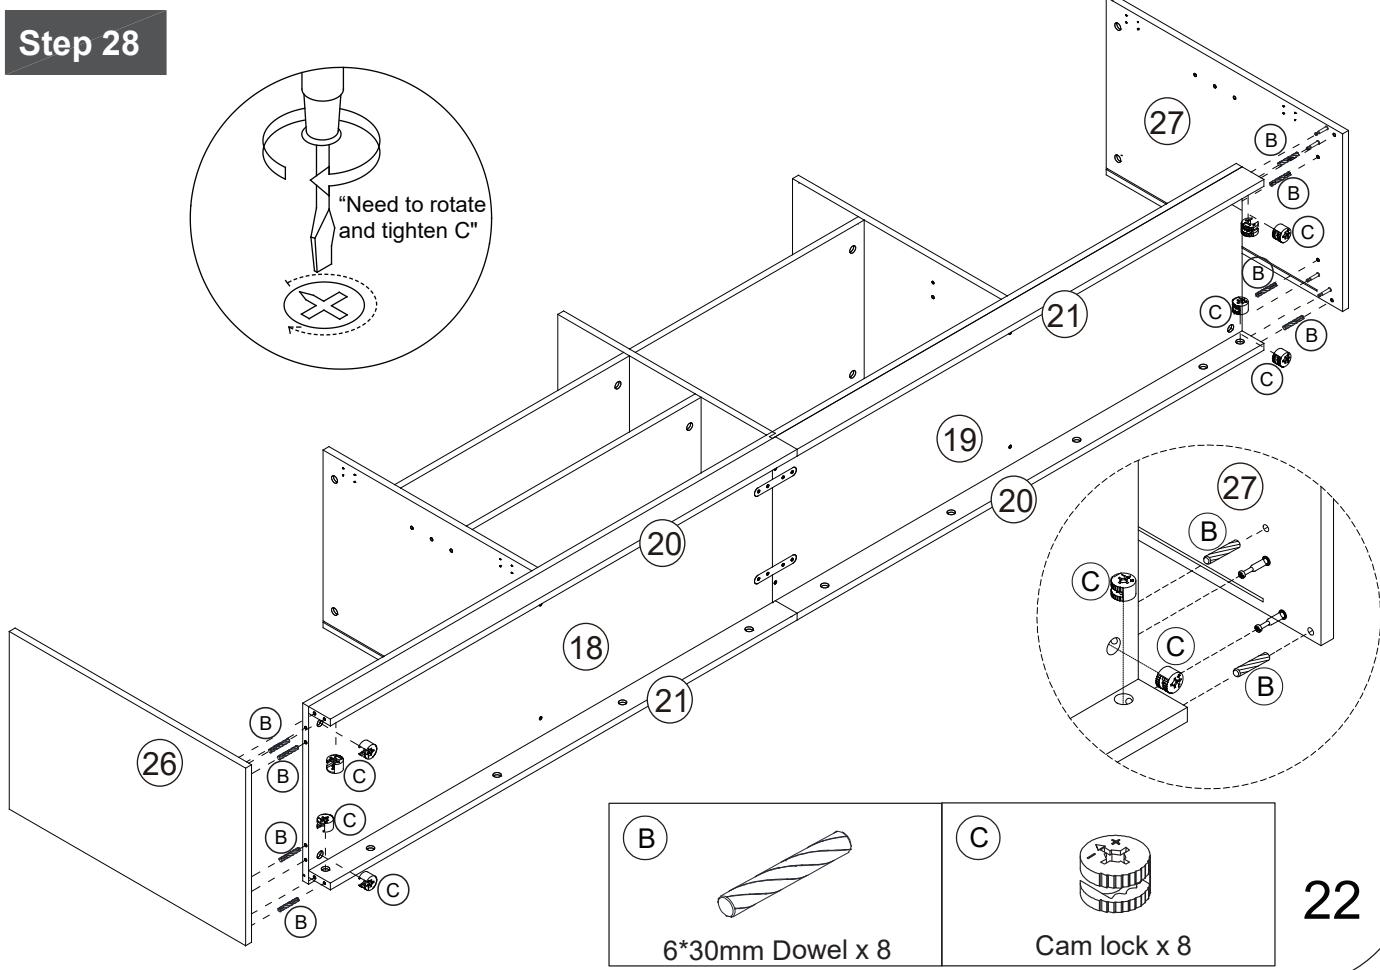


# Assembly Instructions

## Step 29

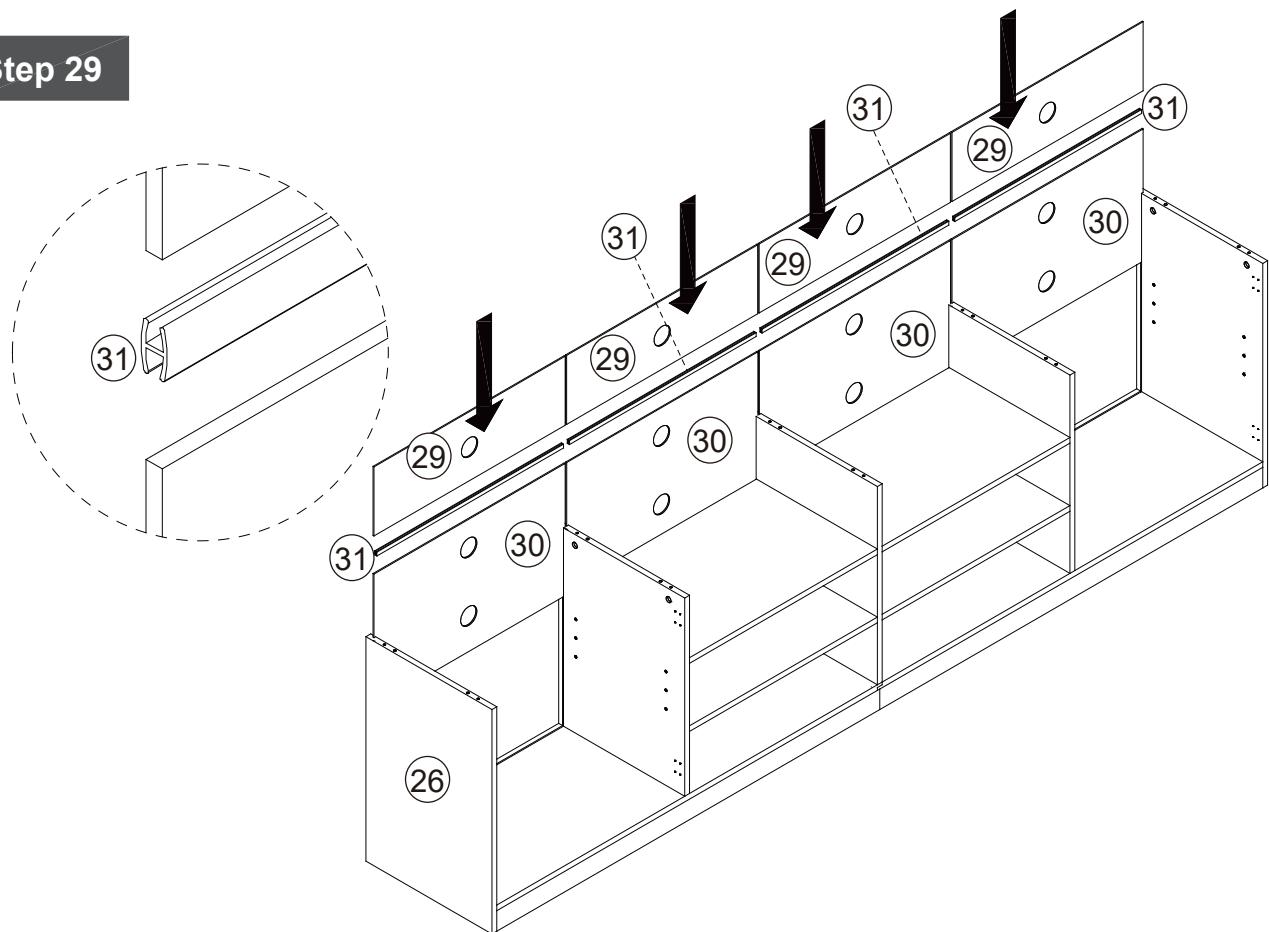


## Step 30

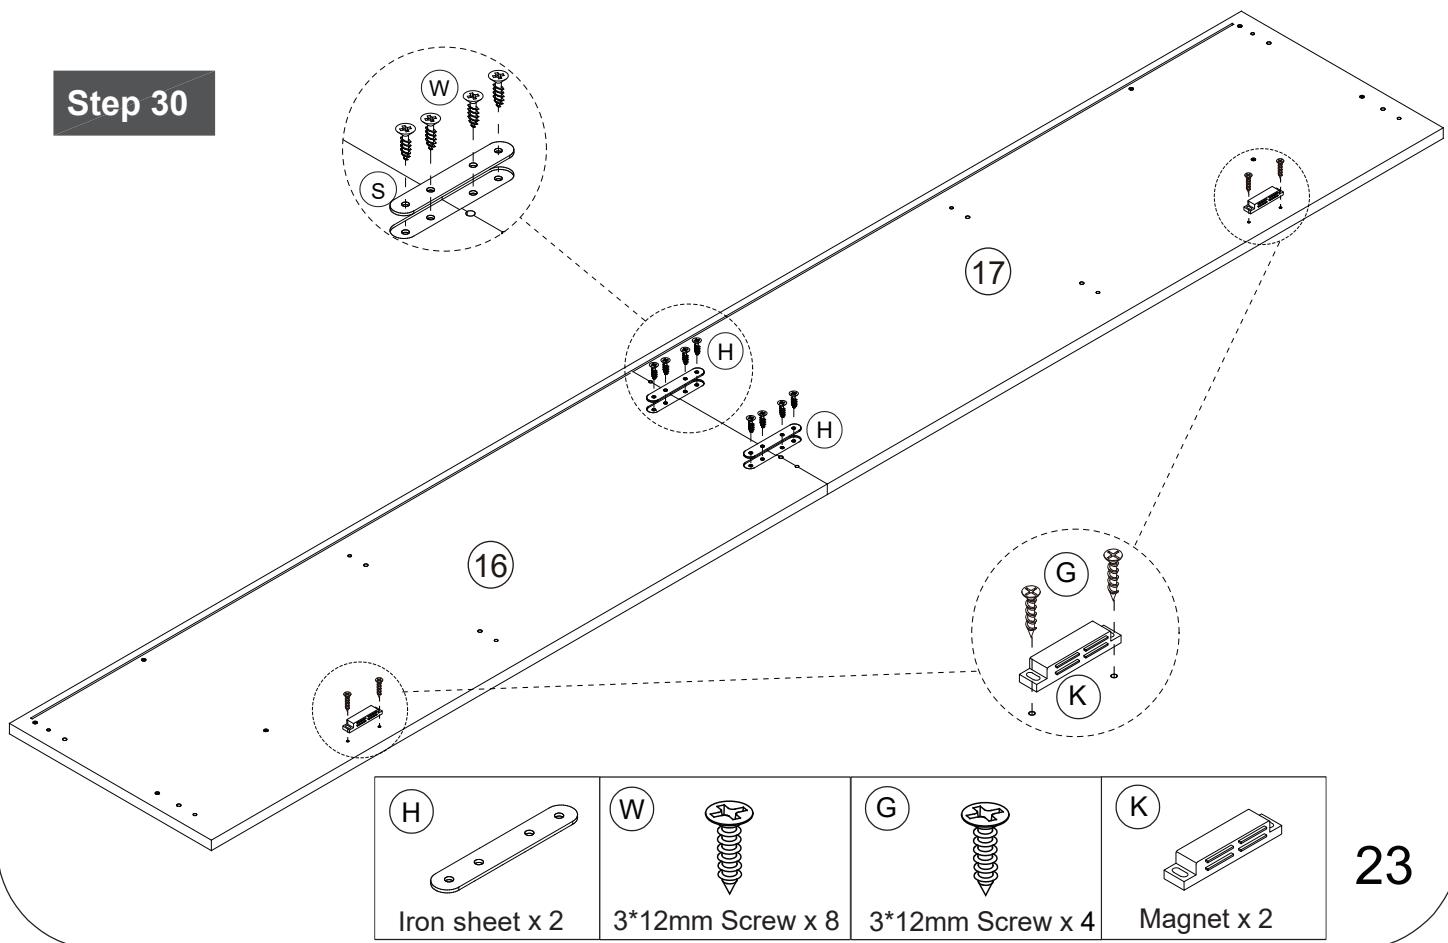


# Assembly Instructions

## Step 31

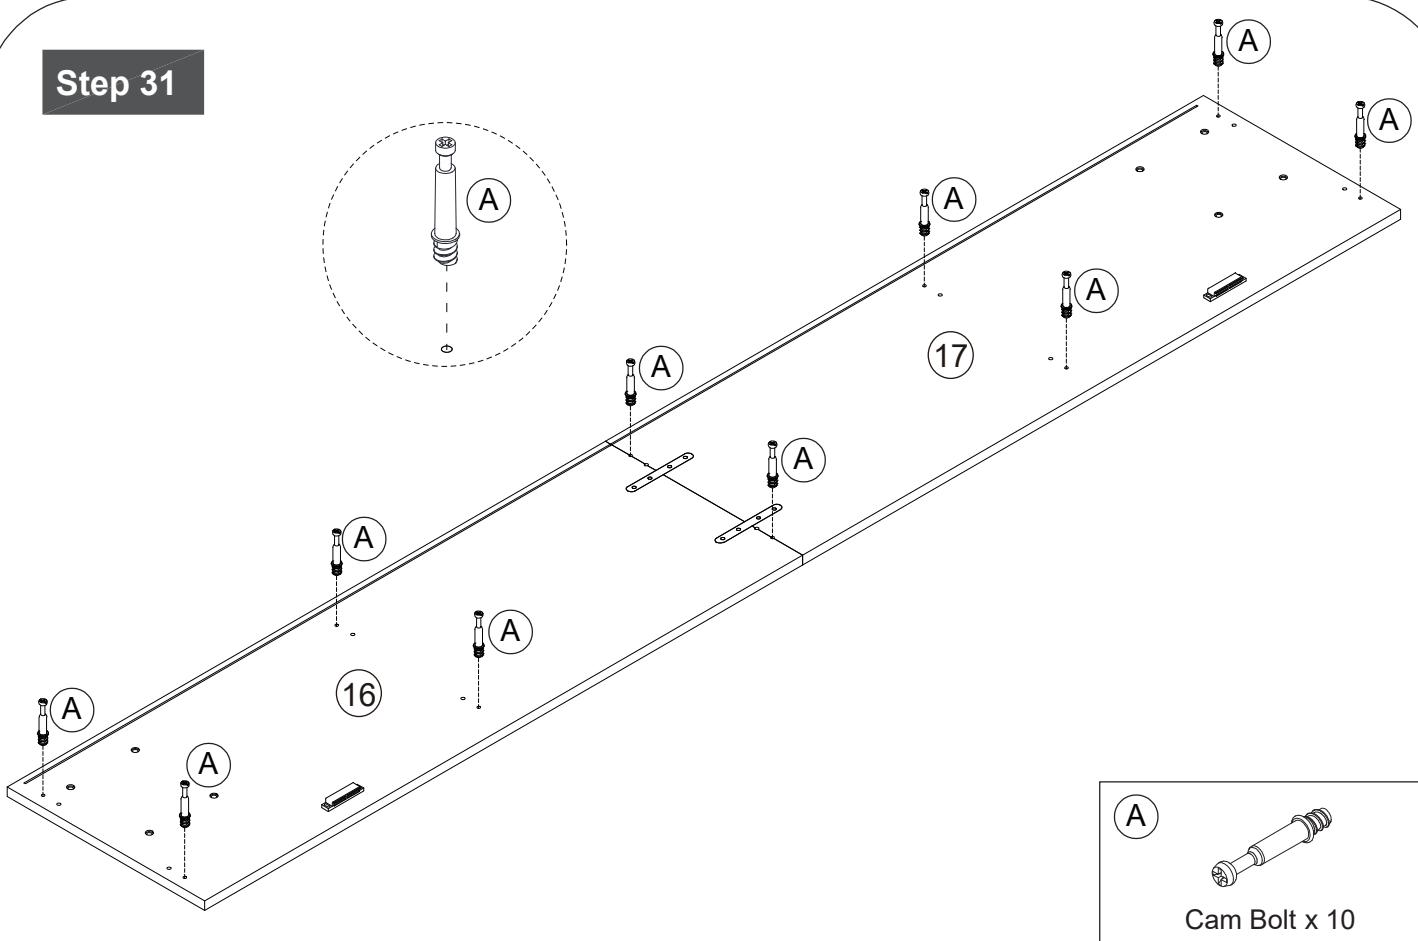


## Step 32

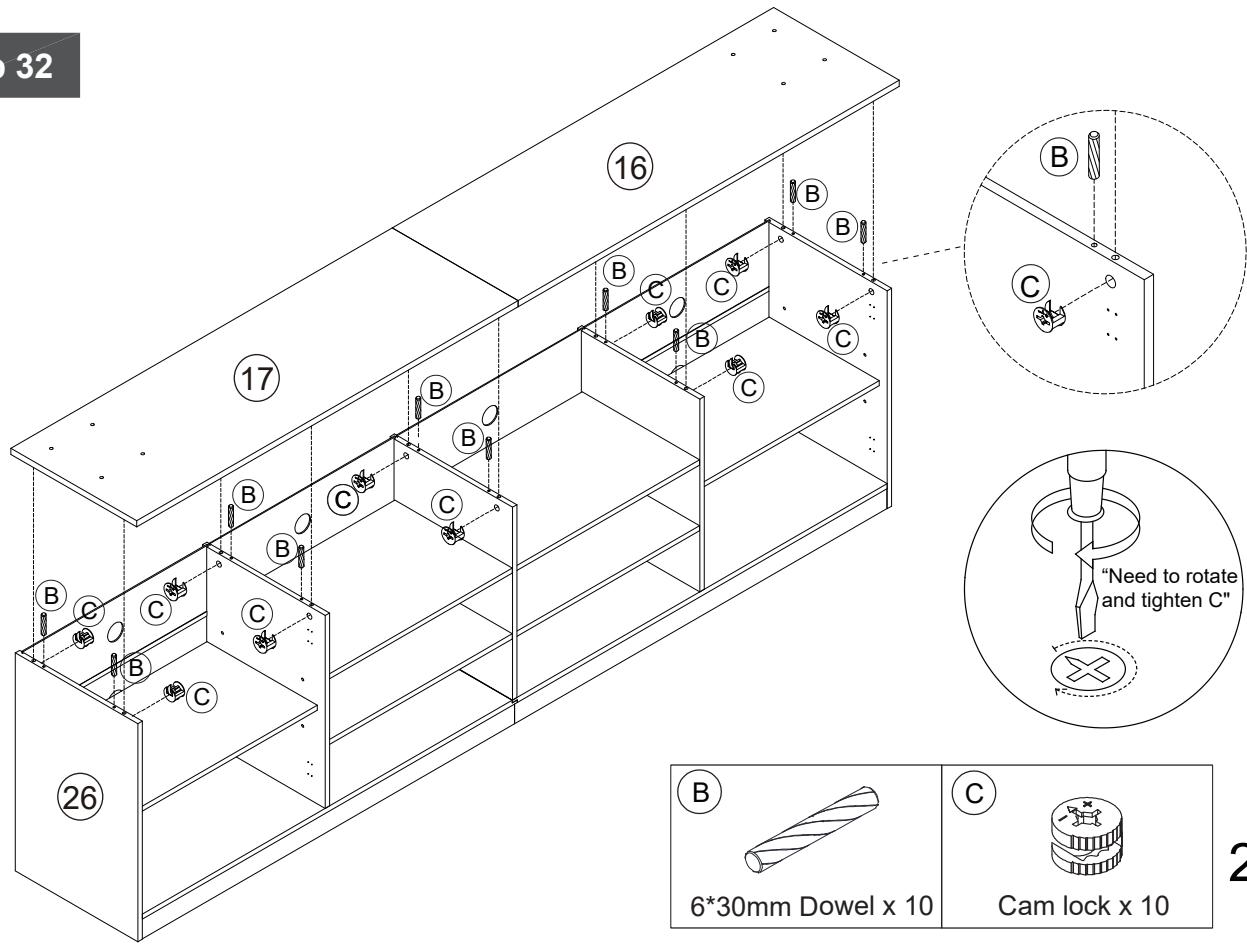



# Assembly Instructions

Step 33

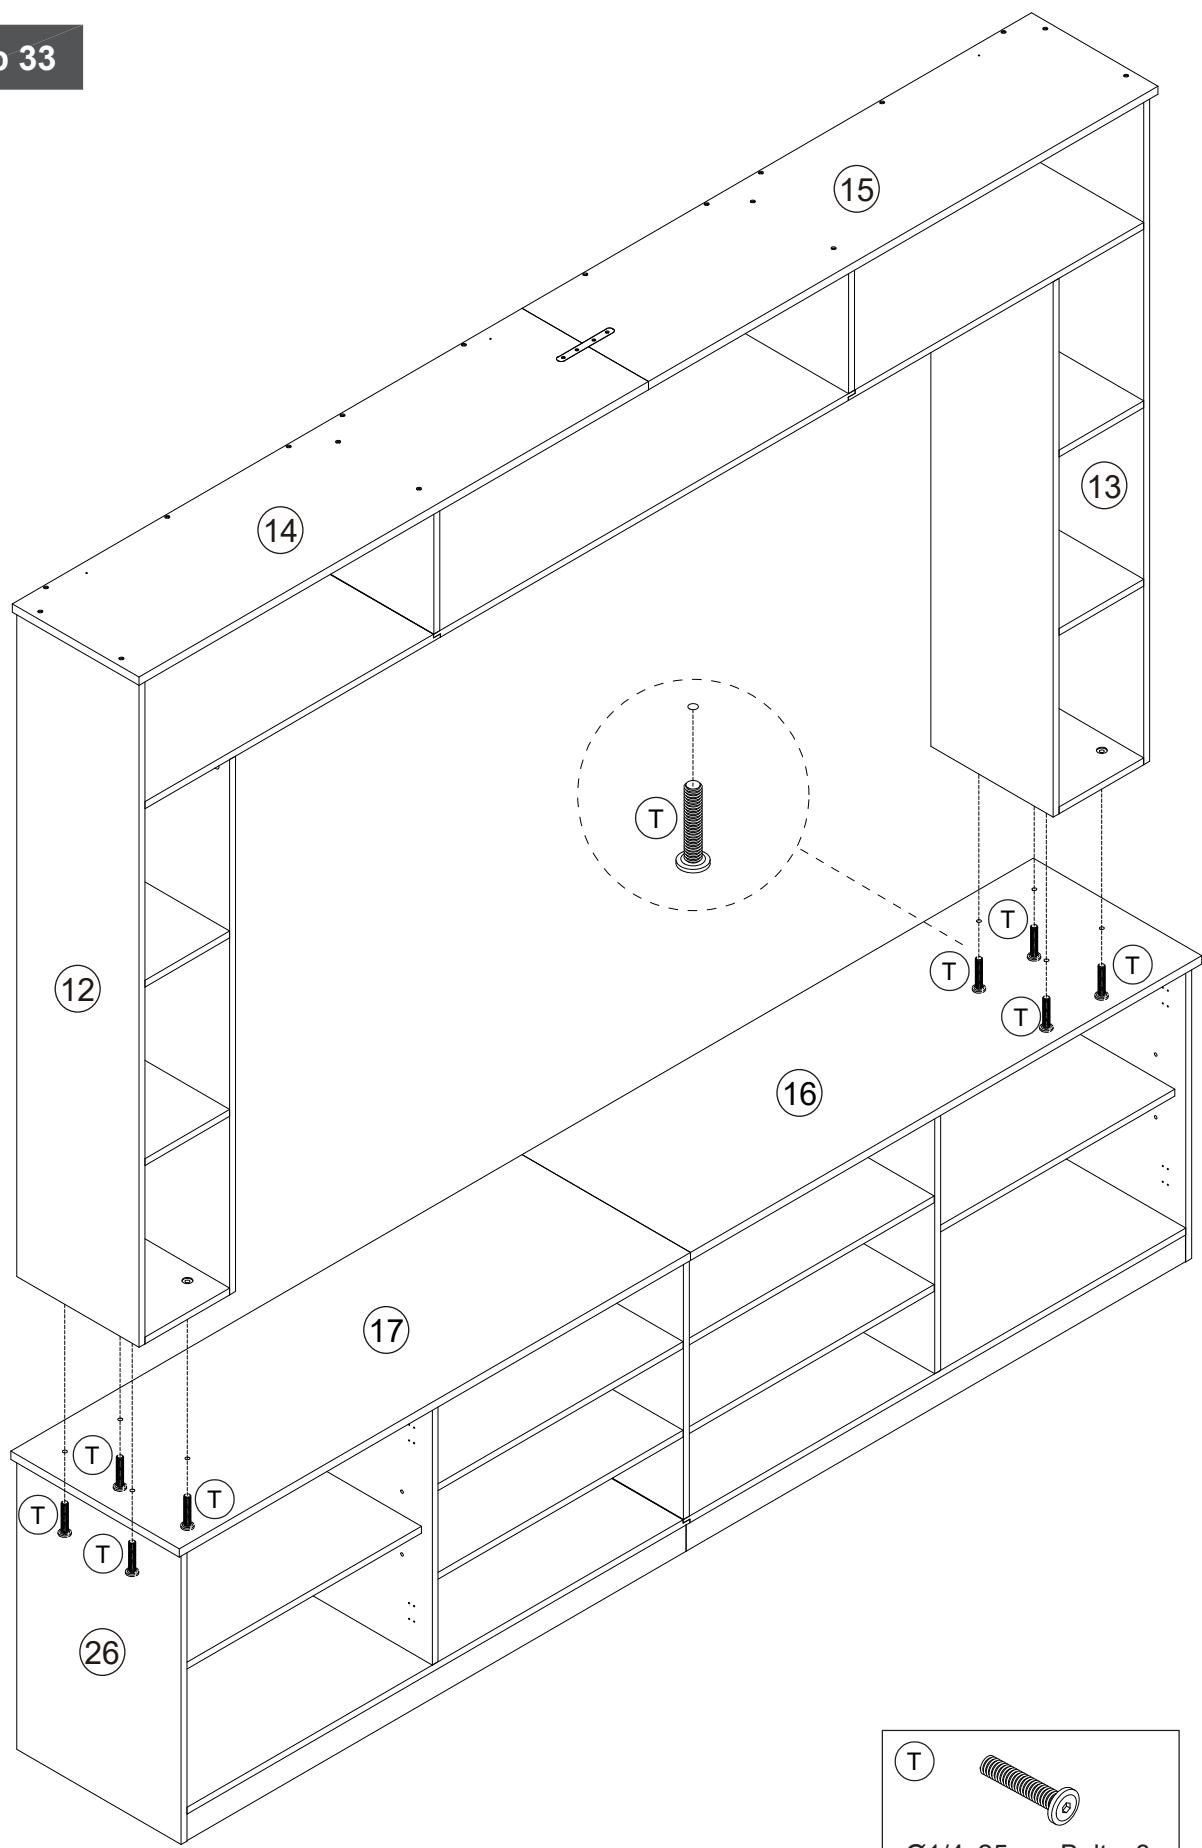


# Assembly Instructions

Step 34

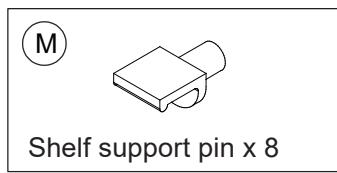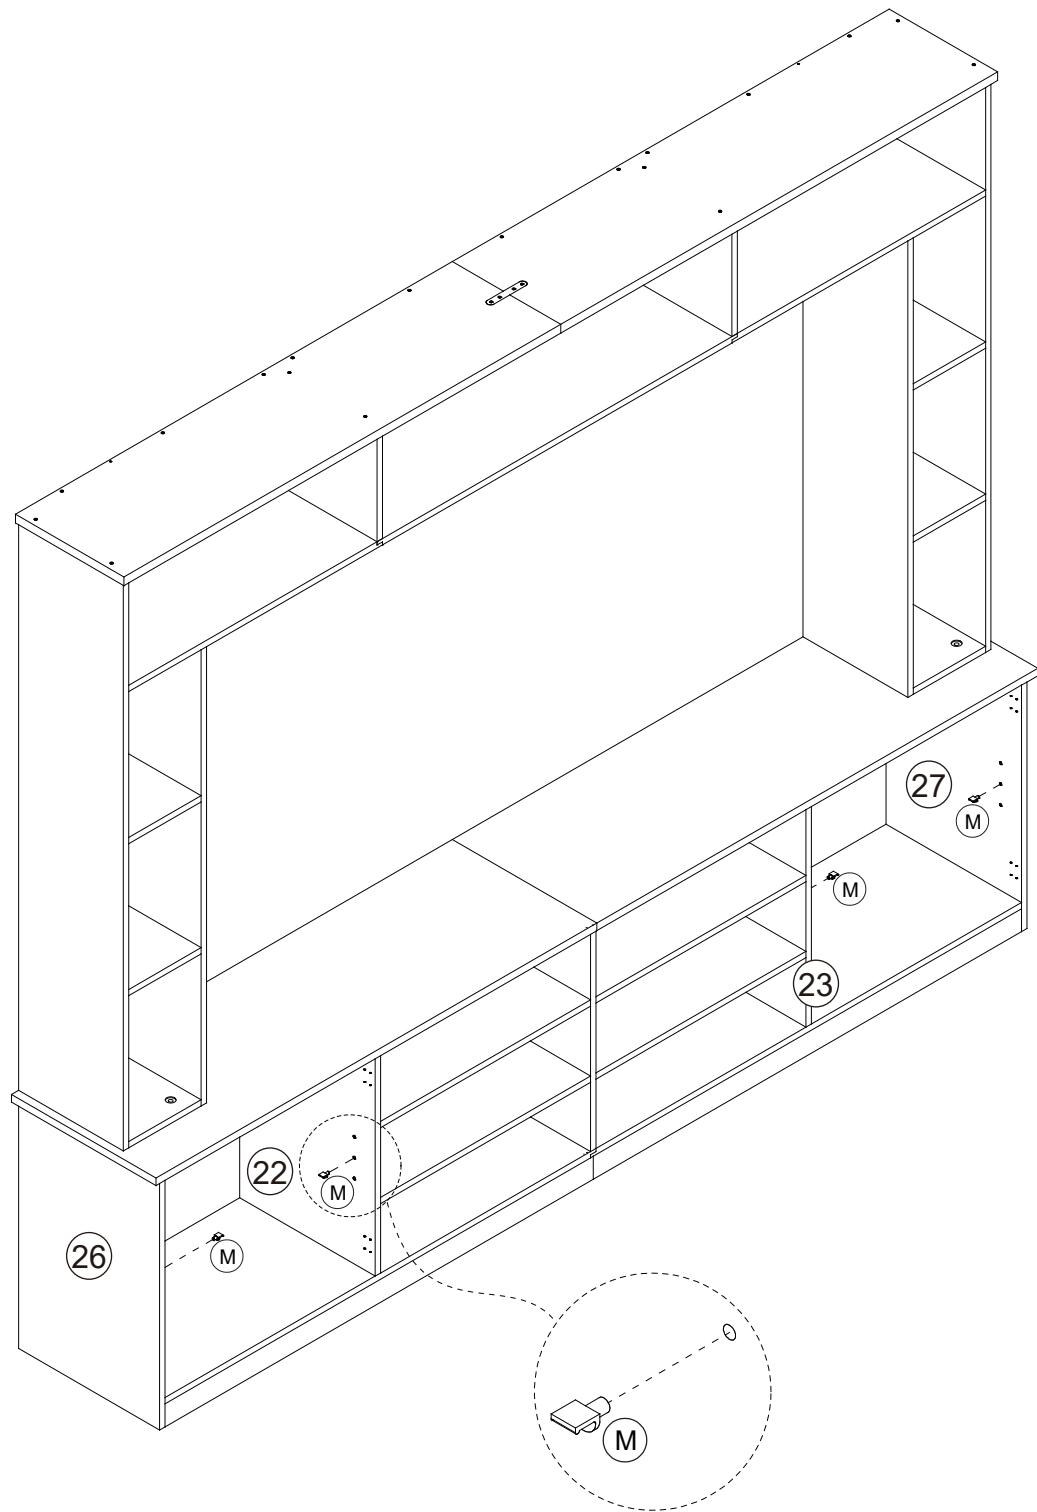



# Assembly Instructions

## Step 35

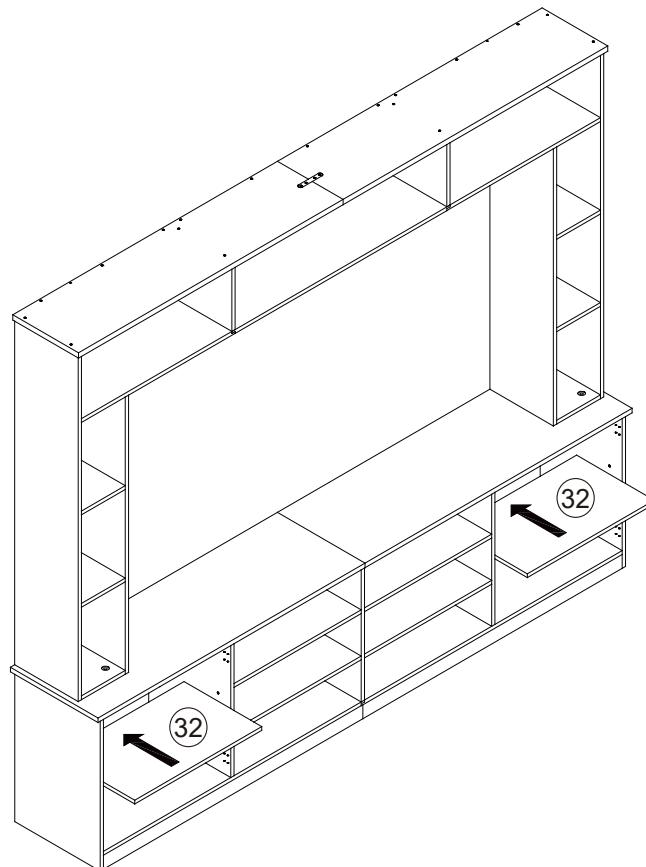



## Step 36

**x2**

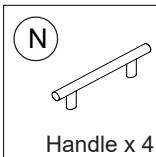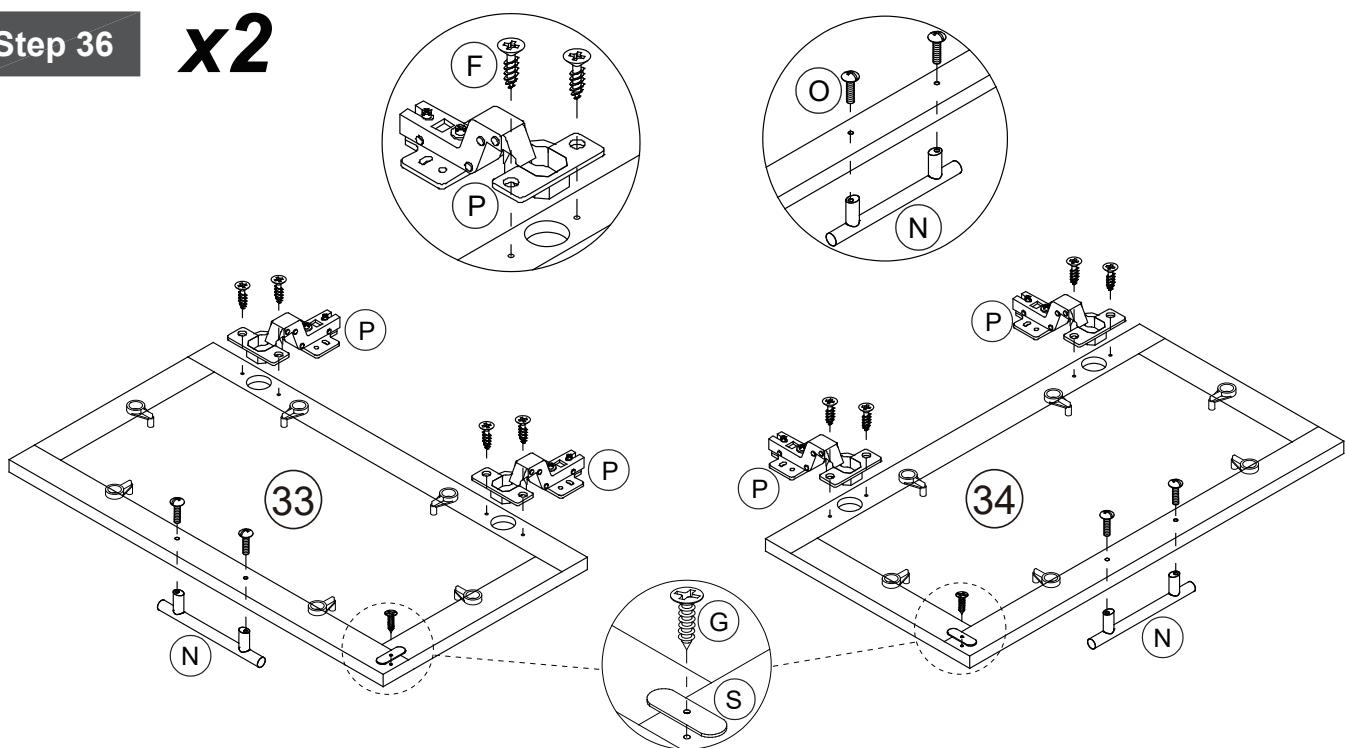

# Assembly Instructions
 
## Step 37

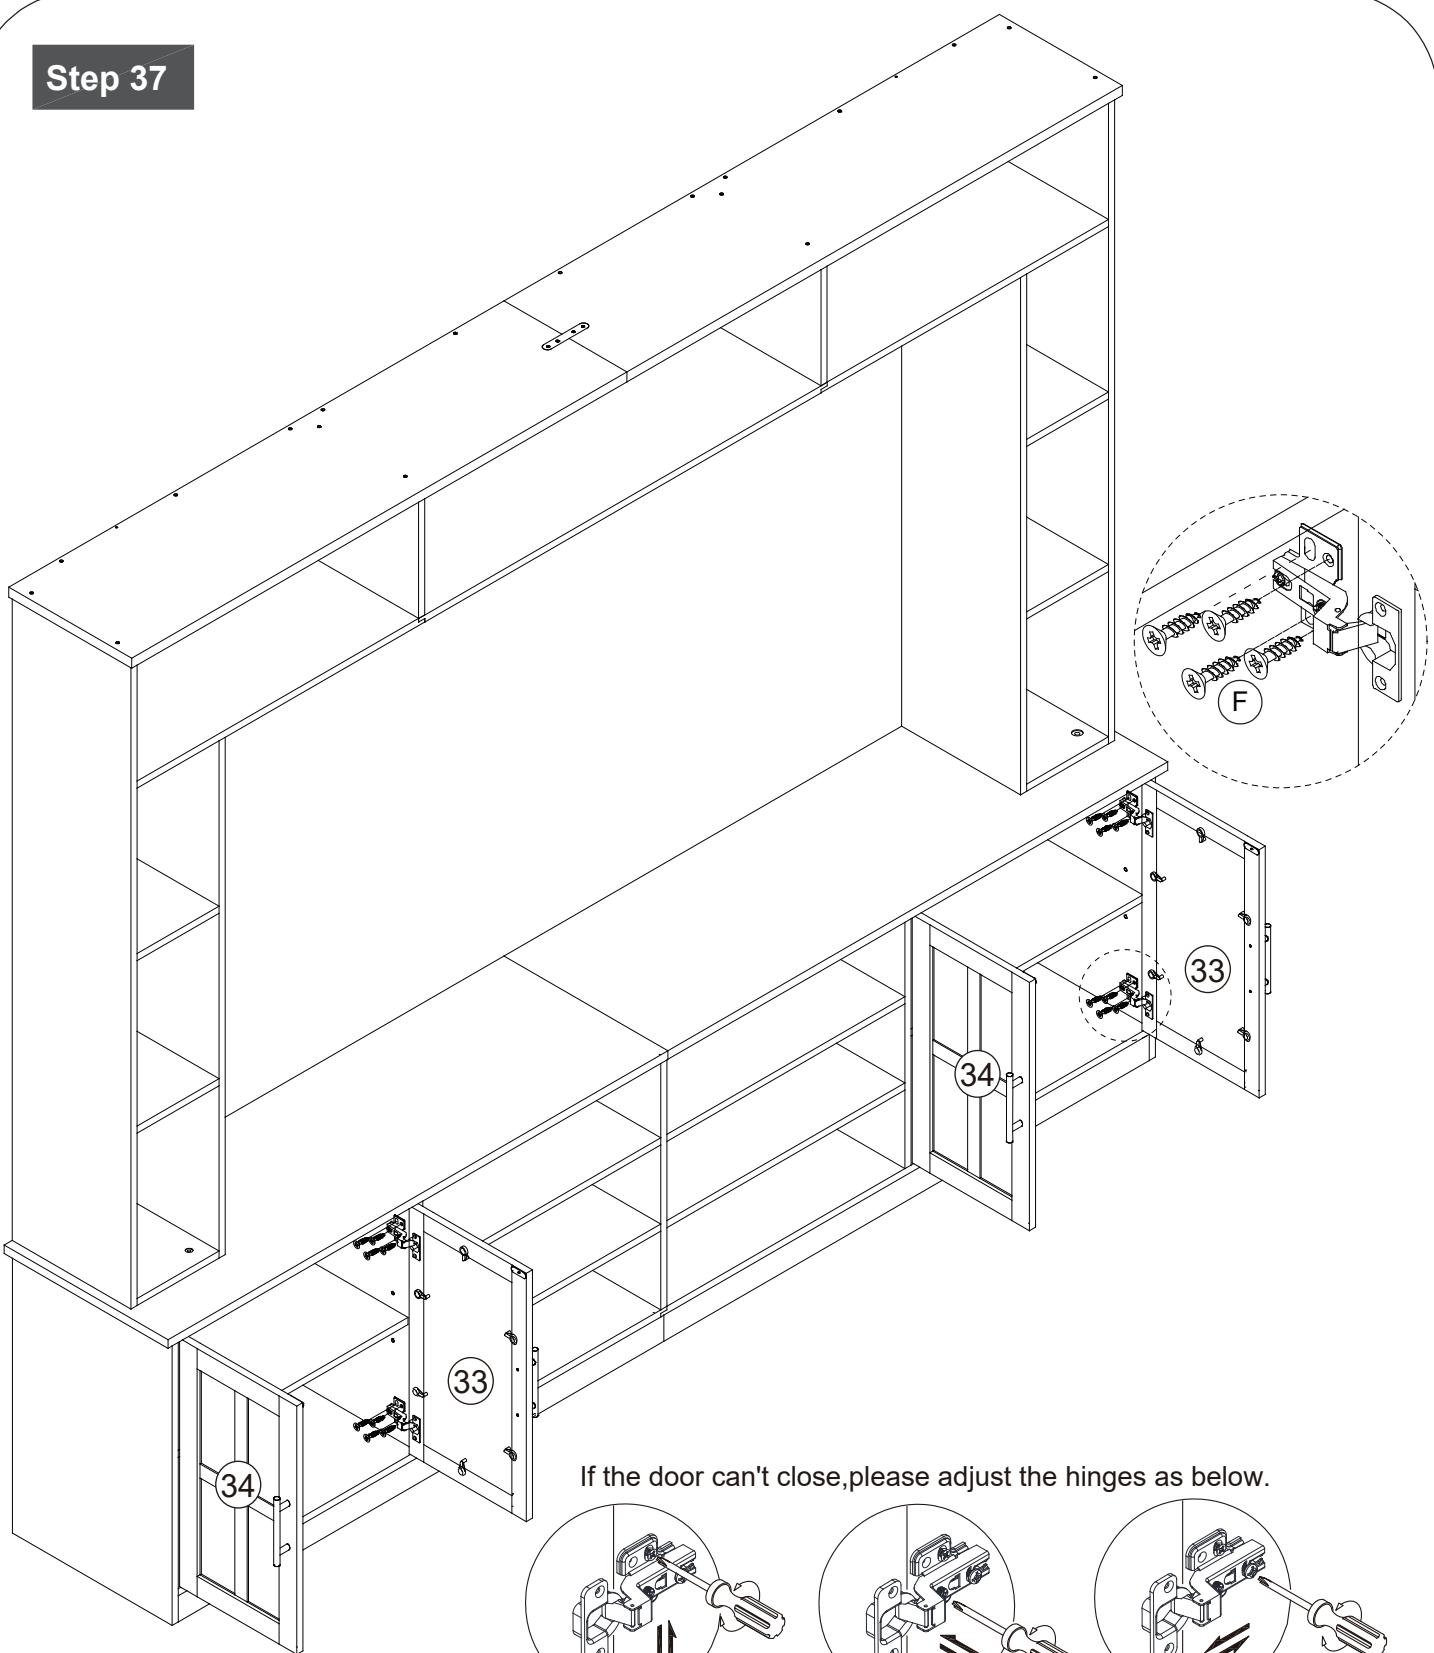

7\*15mm Screw x 32



This is used to adjust the door panel in the up and down direction.

This is used to adjust the door panel in the left and right direction.

This is used to adjust the door panel in the front and rear.





# Assembly Instructions




Step 38

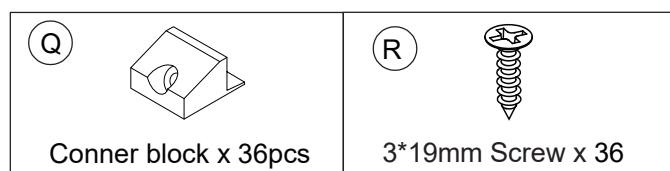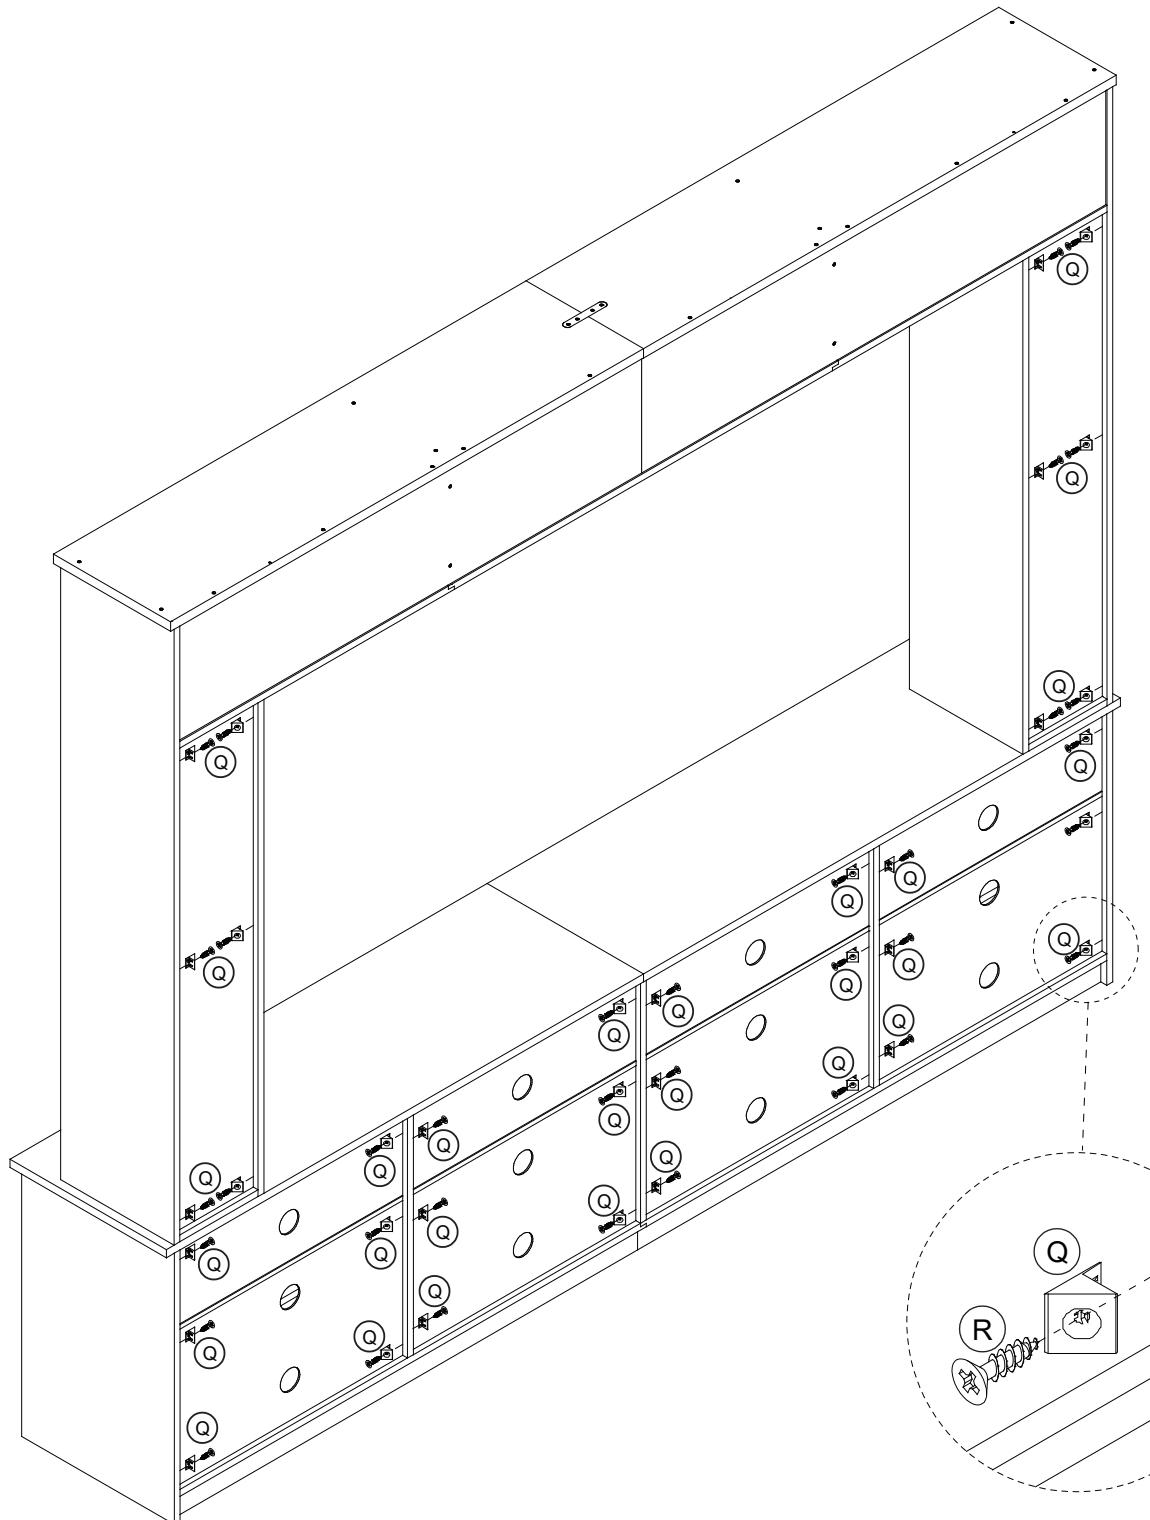

# Assembly Instructions
   
## Step 39

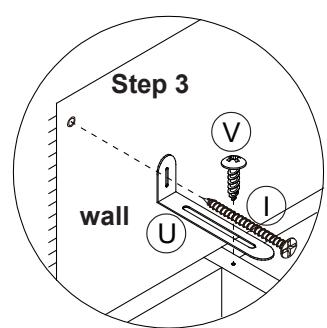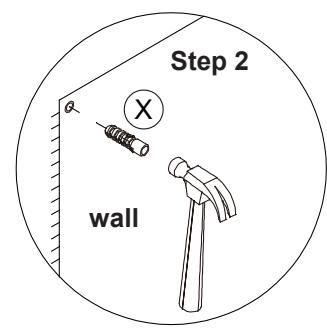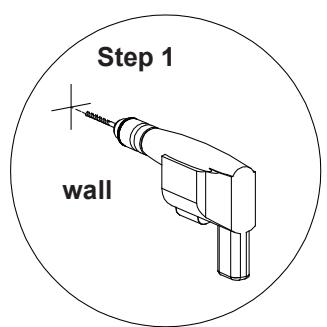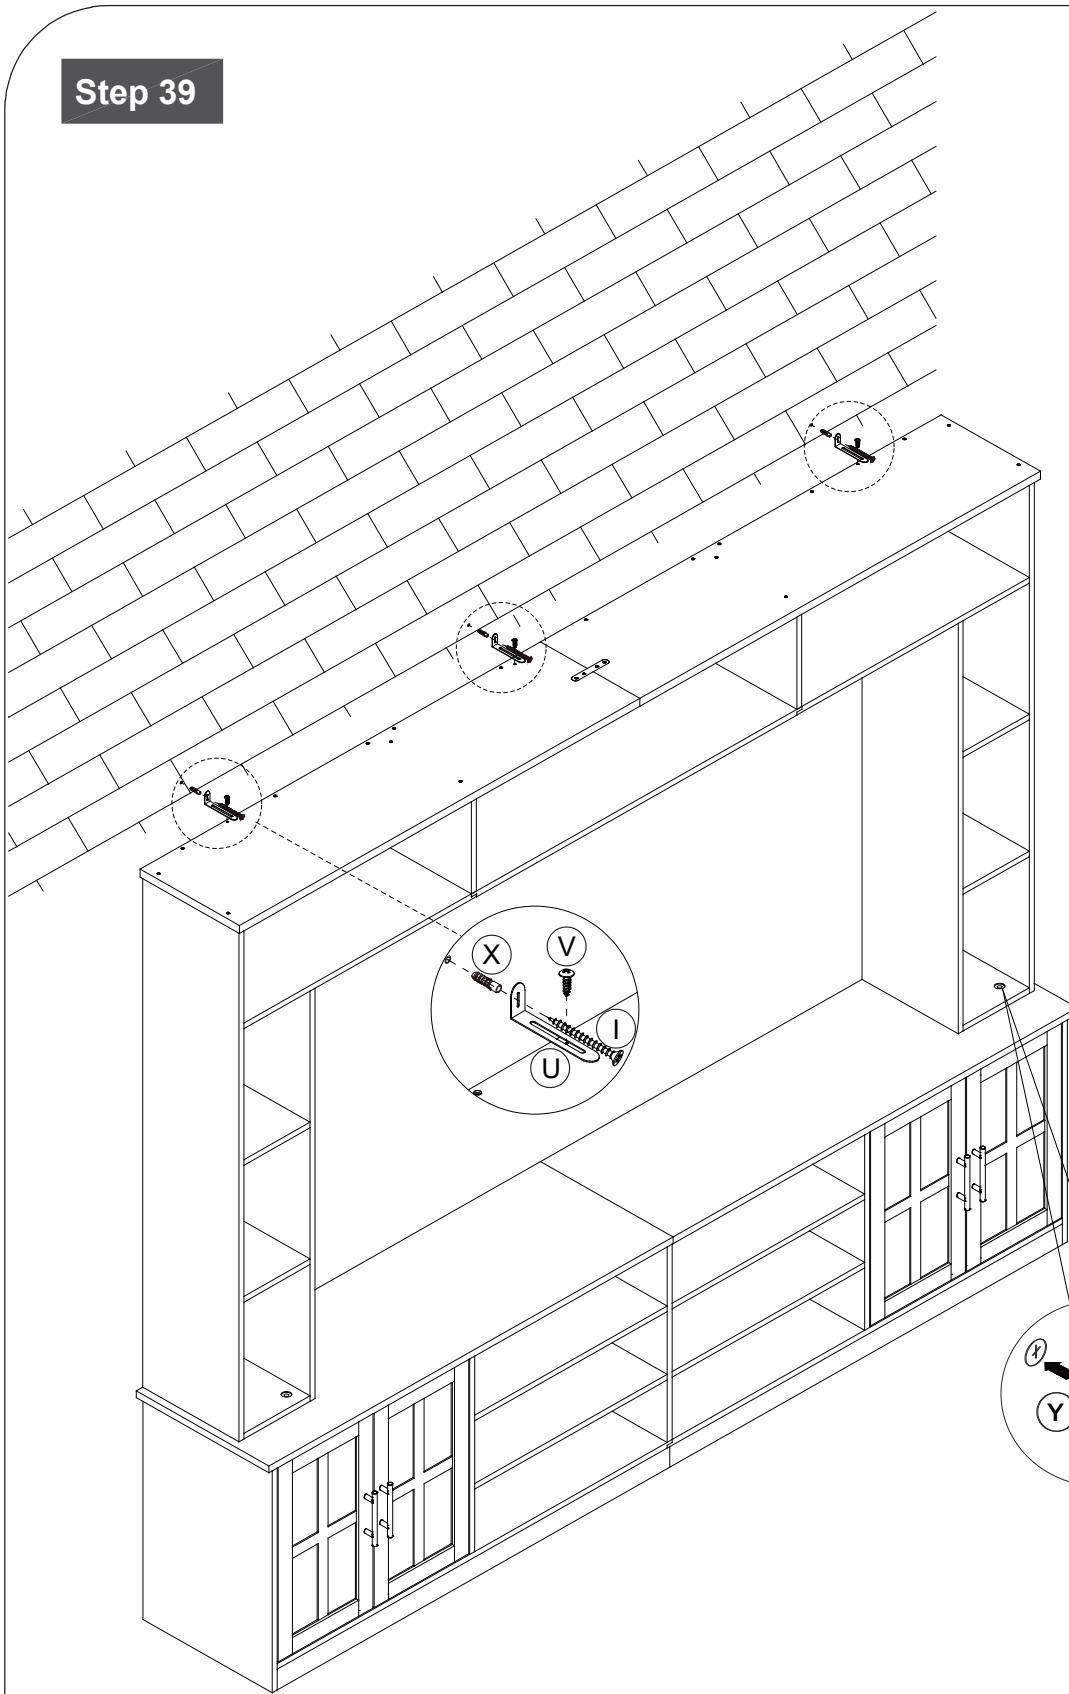

 	 	 	 	 
Perfect fit x 46	Anti-tip L Bracket x 3	8*38mm Screw x 3	7*15mm Screw x 3	Anchor x 3

# Assembly Instructions

Step 40

