


TV STAND

USER MANUAL

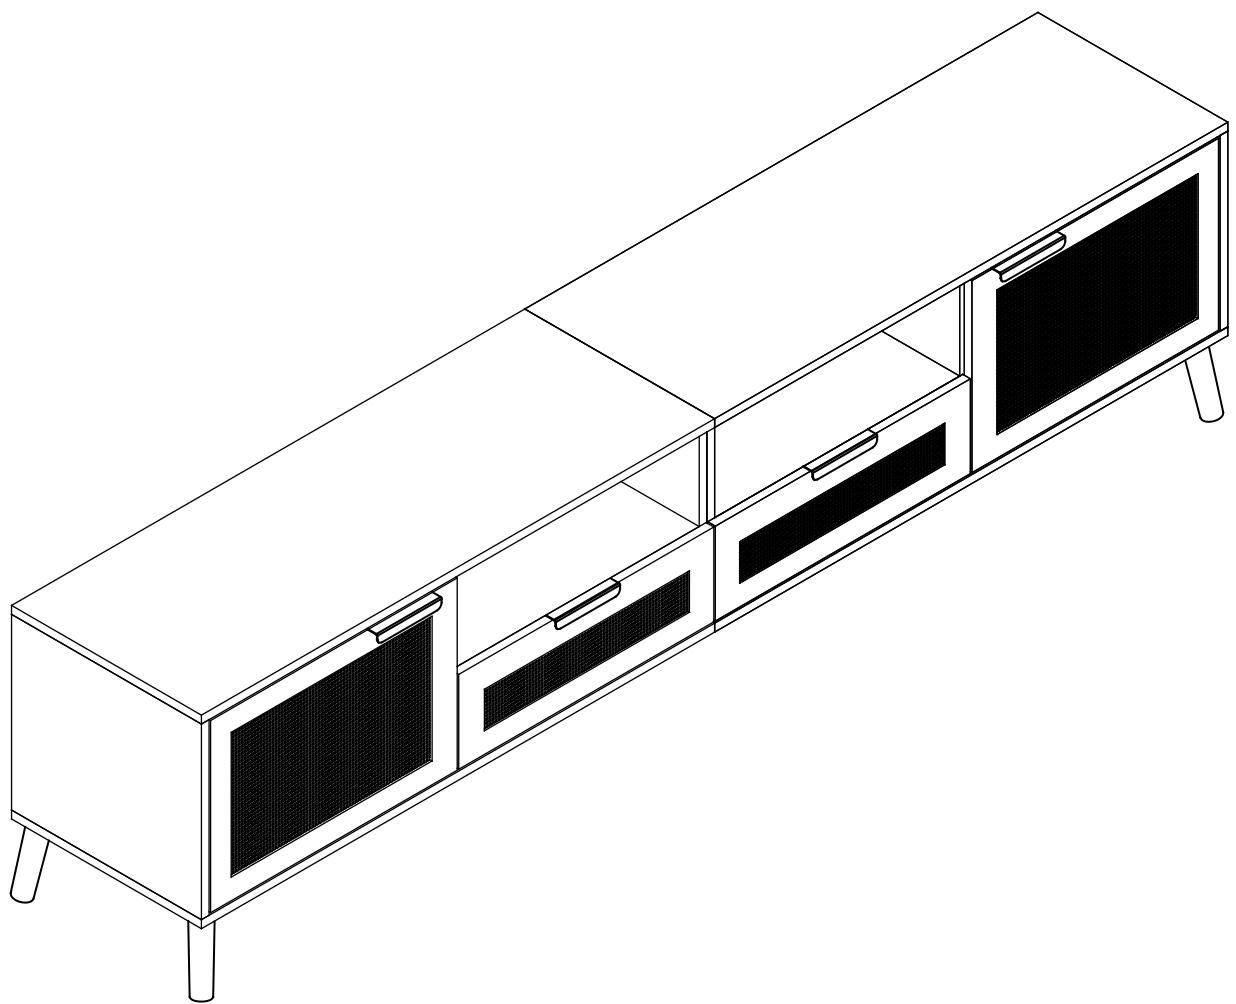

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

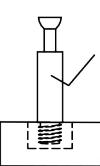


Diagram A

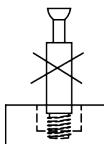
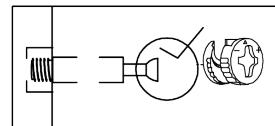


Diagram B


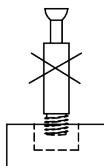


Diagram C


Insert Cam Bolt into hole as shown in diagram A.

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause
the Cam Lock to be misaligned and unable to
interlock properly.


Also avoid inserting the Cam Bolt too close to the
surface of the hole as shown in figure C, as this
will cause the Cam Lock to be too loose, and not
interlock properly.

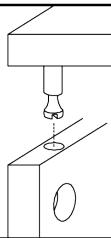

Connect the panels together.

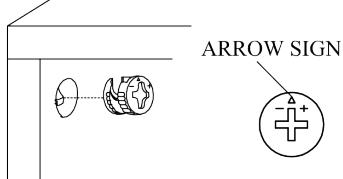


Insert the Cam Lock so the side opening fits over
the head of the Cam Bolt.

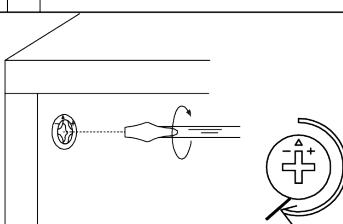

To tighten the Cam Lock, turn it clockwise on half
a turn with a flat screwdriver.

**Do not use an automatic screwdriver as it may
bend or break if too much power is imposed.*

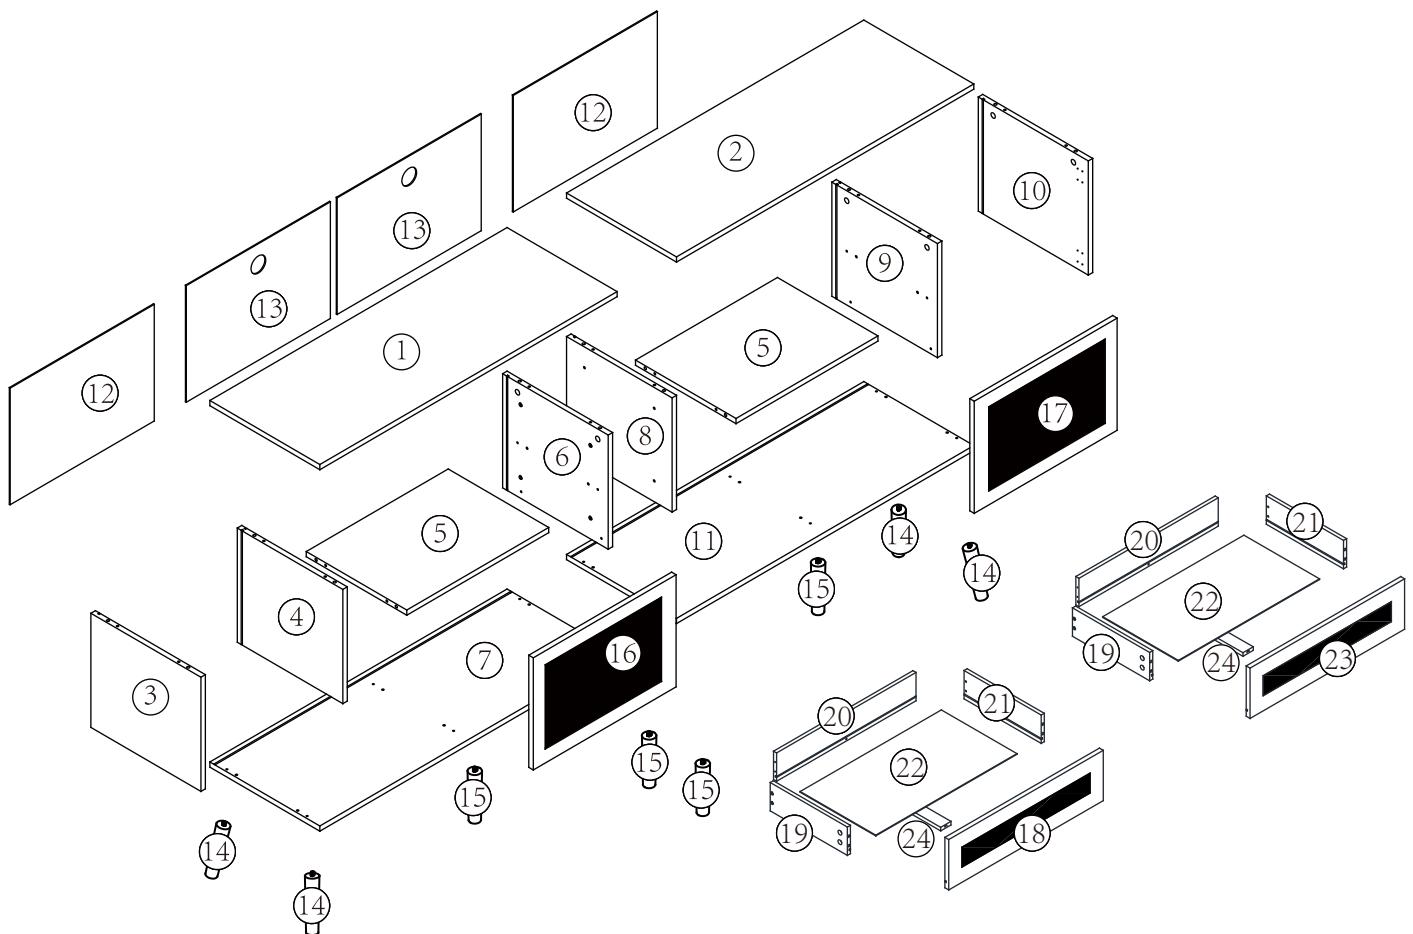

Ax30



Bx 30



Cx12



M4x40

Dx32



M6x30

Ex 4



Fx14




Gx4



Hx 4



Ix 4

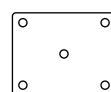

Jx24



M3x12

Kx22



M4x12

Lx4



Mx 40




M4x14

Nx 16




M3x14

Ox4

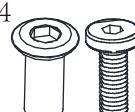

M3x14

Px 2

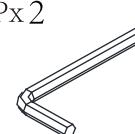

Qx 4



R x 2




CRx2



CLx2




DRx2

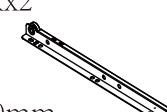


DLx2








S x 2

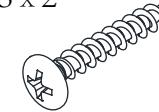



Tx 2

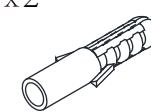


STEP 1

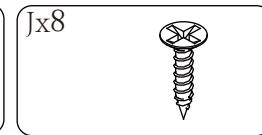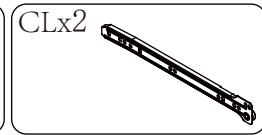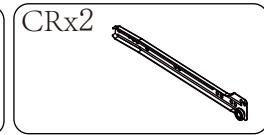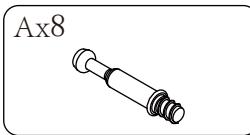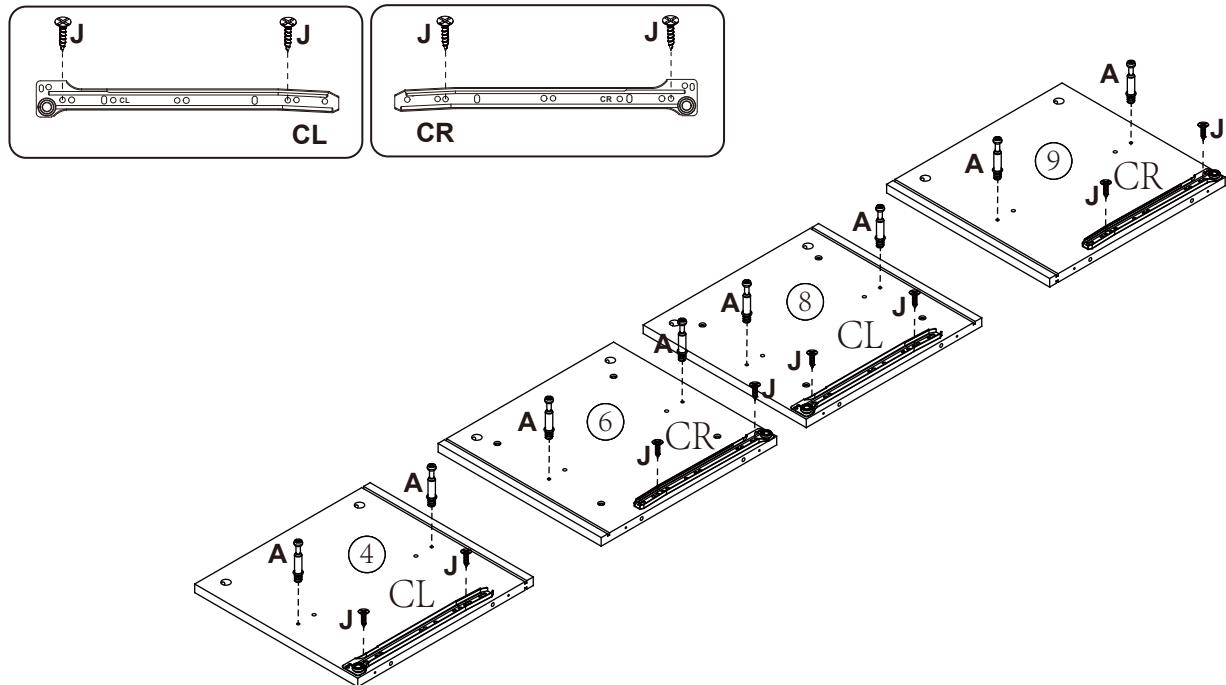

STEP 2

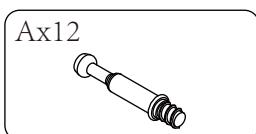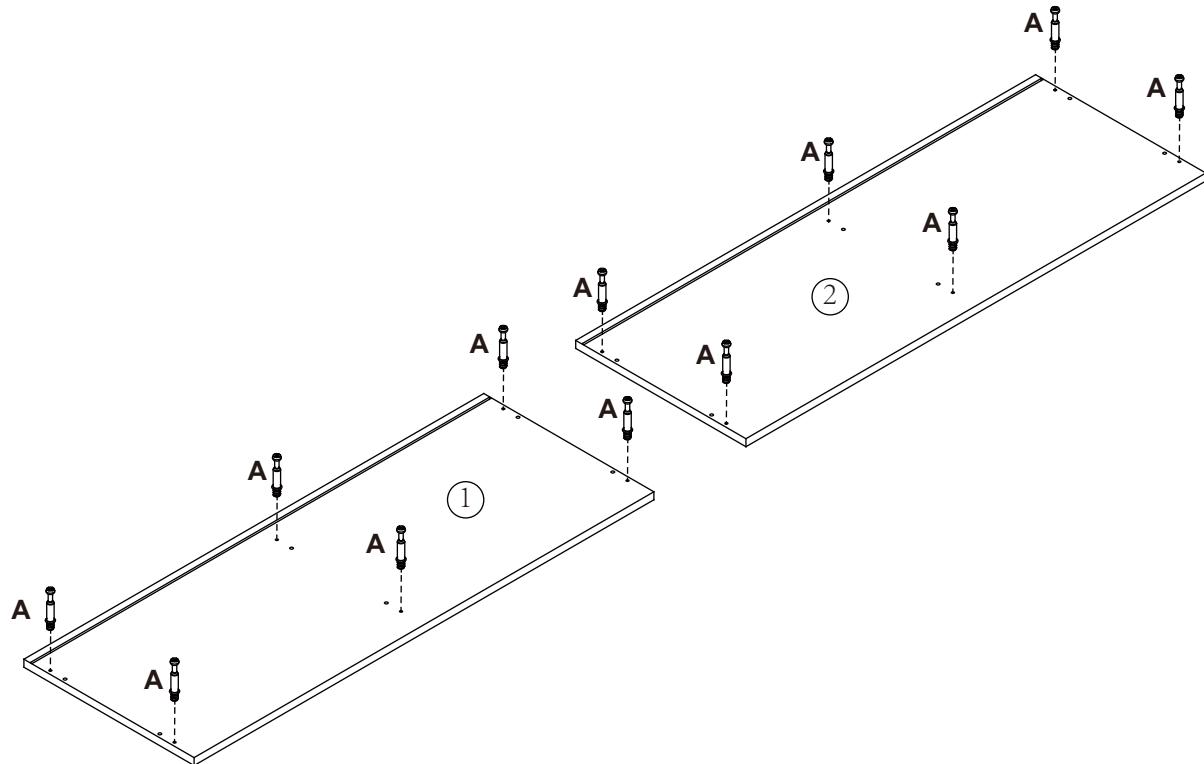


STEP 3

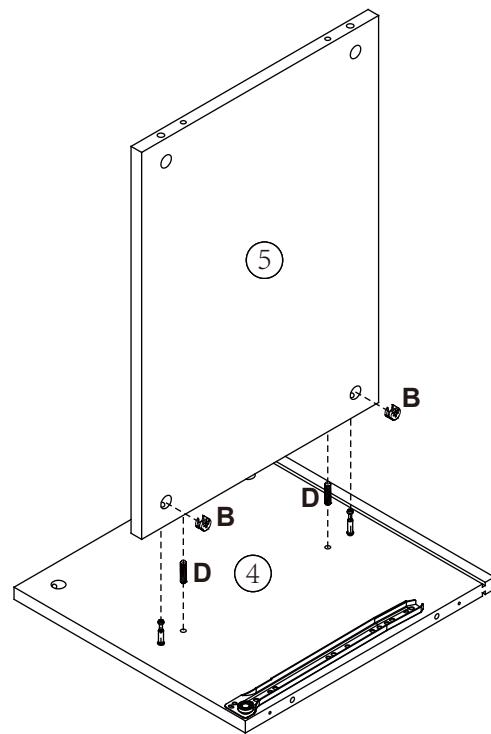


Bx2



Dx2

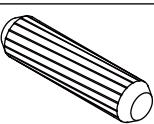


STEP 4

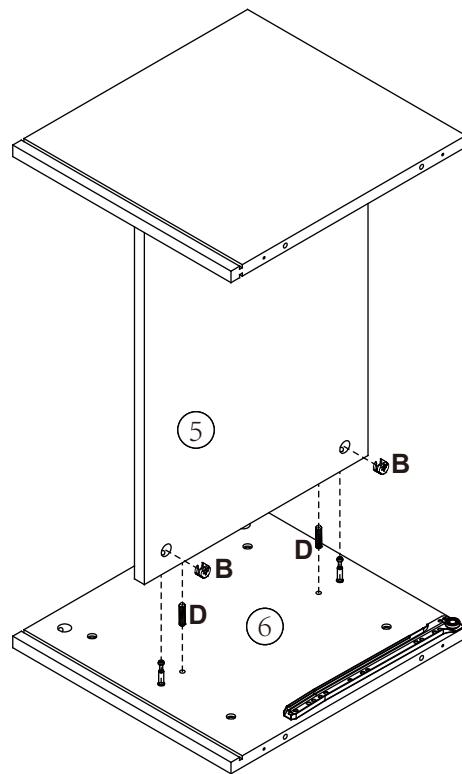


Bx2




Dx2

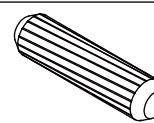




STEP 5

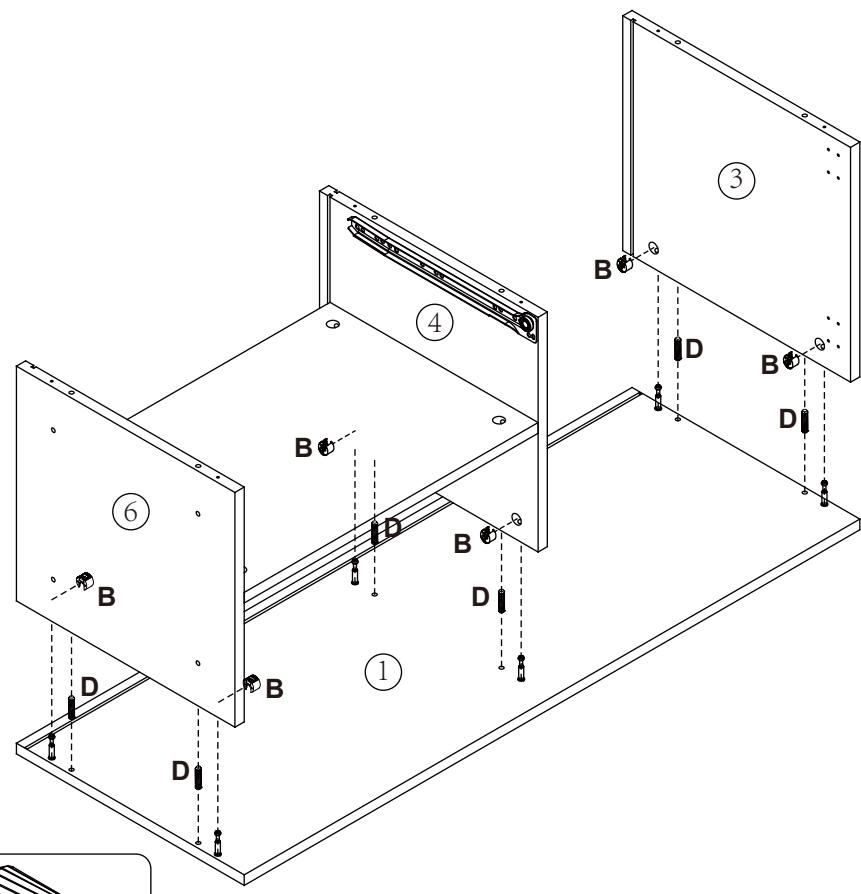




STEP 6

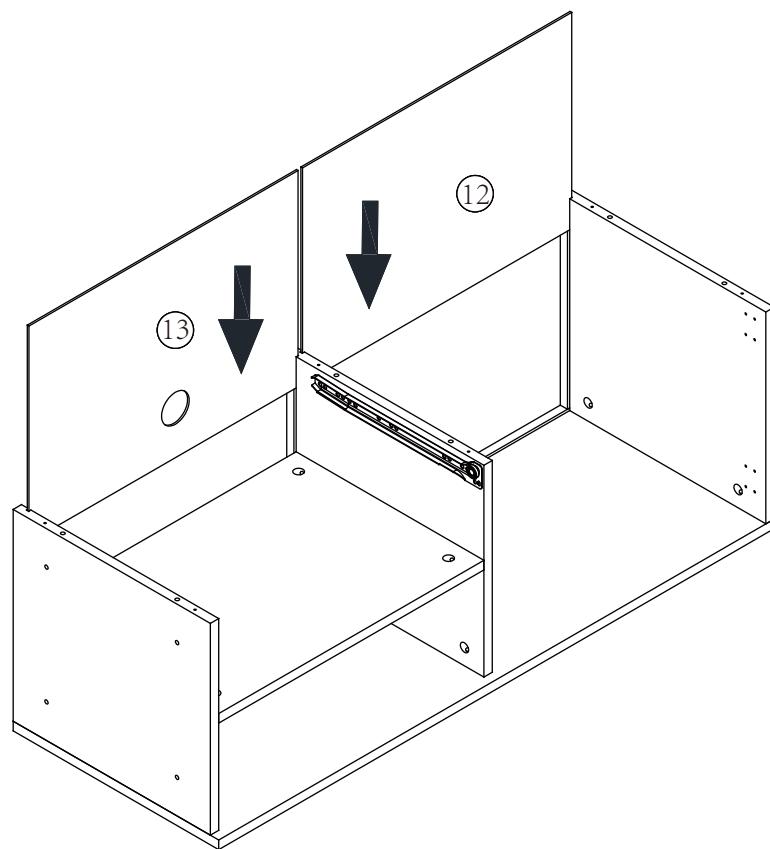


STEP 7

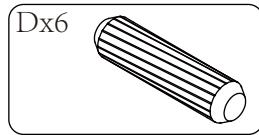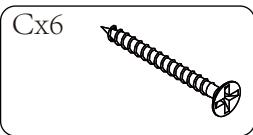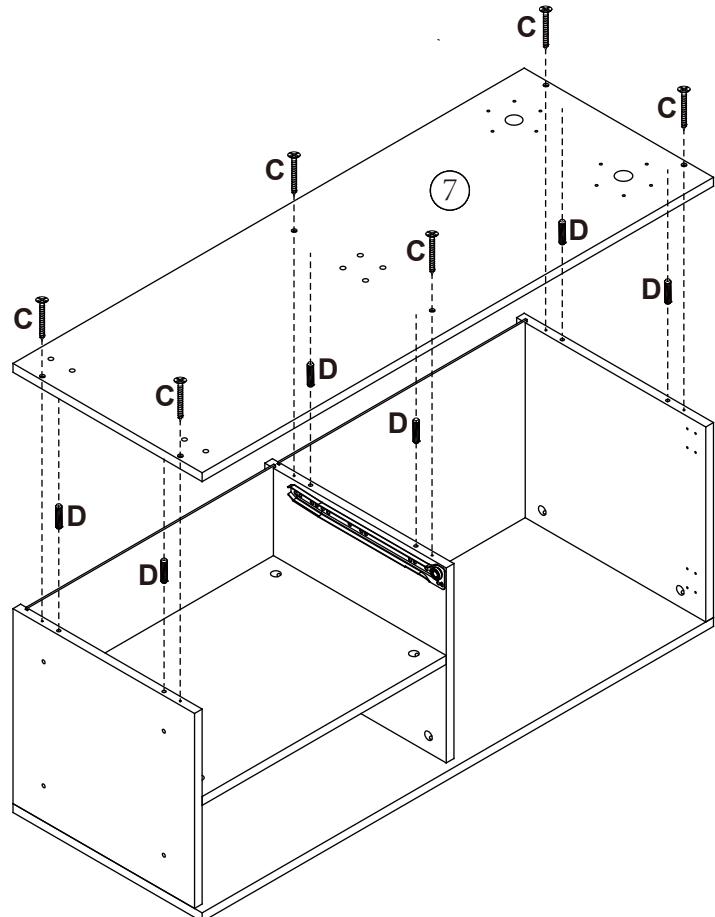

STEP 8

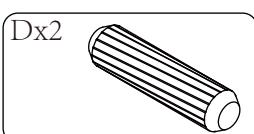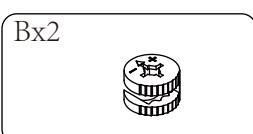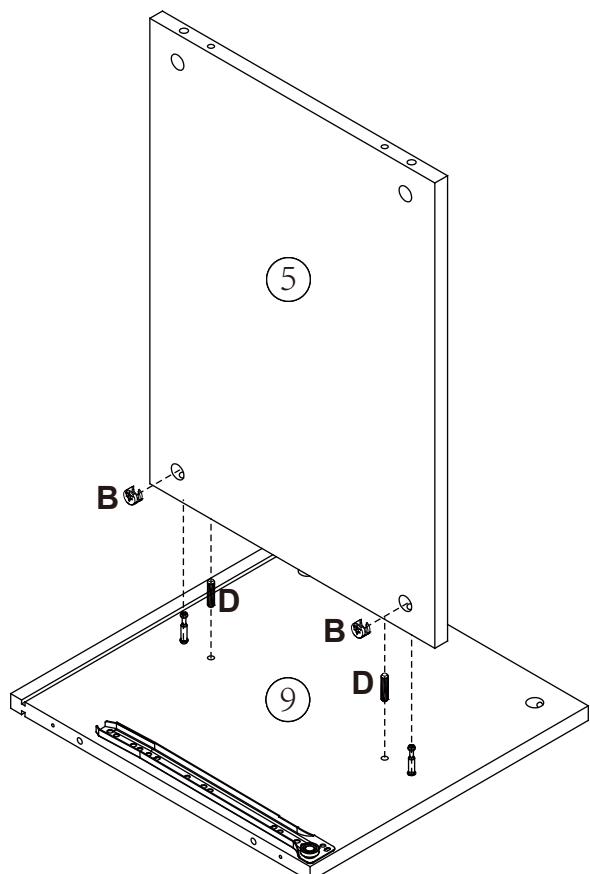


STEP 9

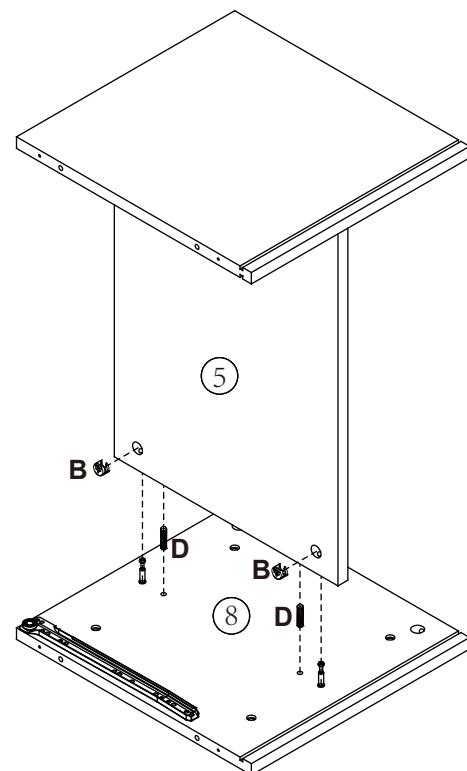


Bx2



Dx2

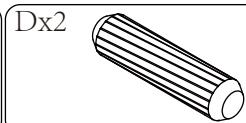


STEP 10

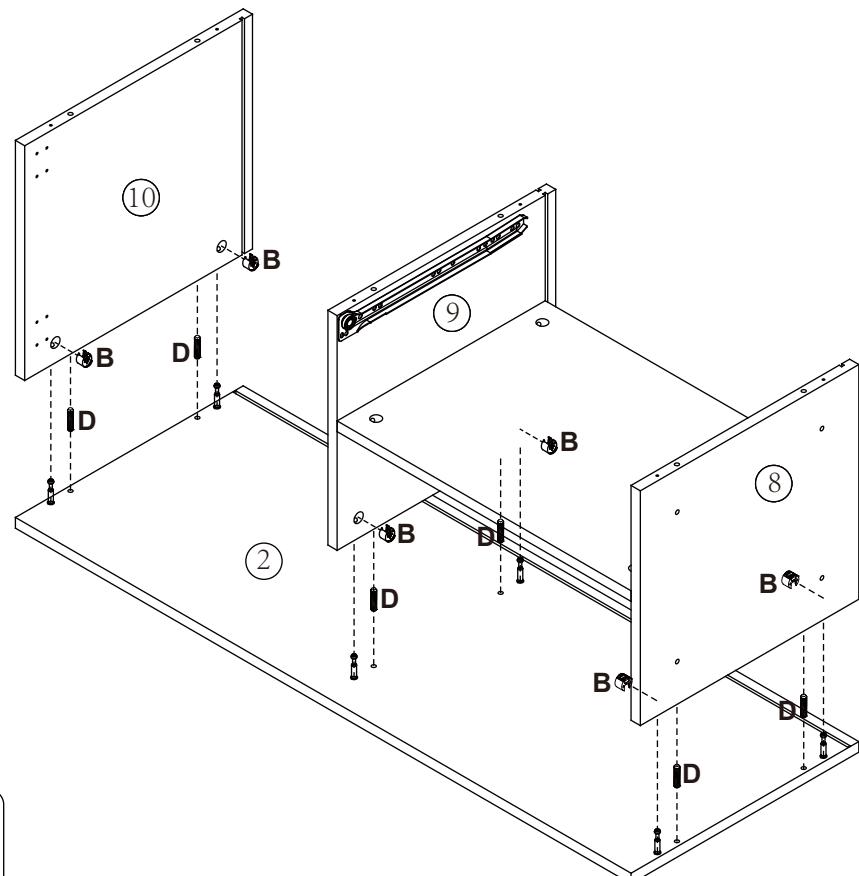


Bx6






Dx6

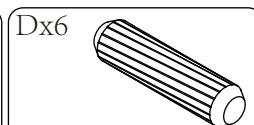





STEP 11

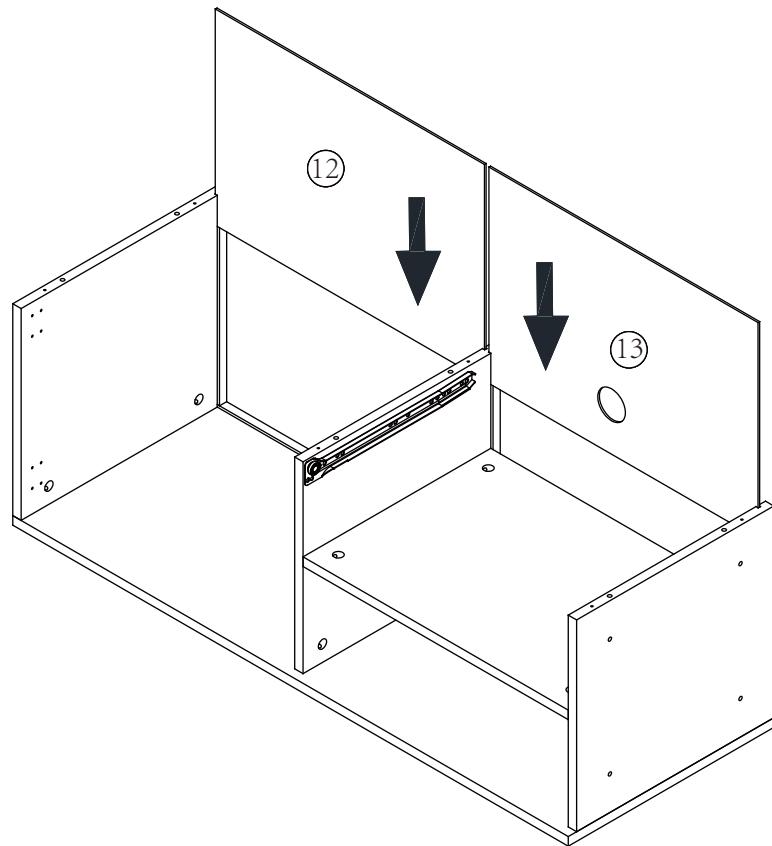




STEP 12

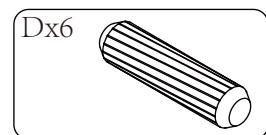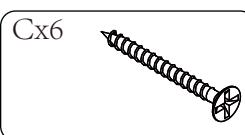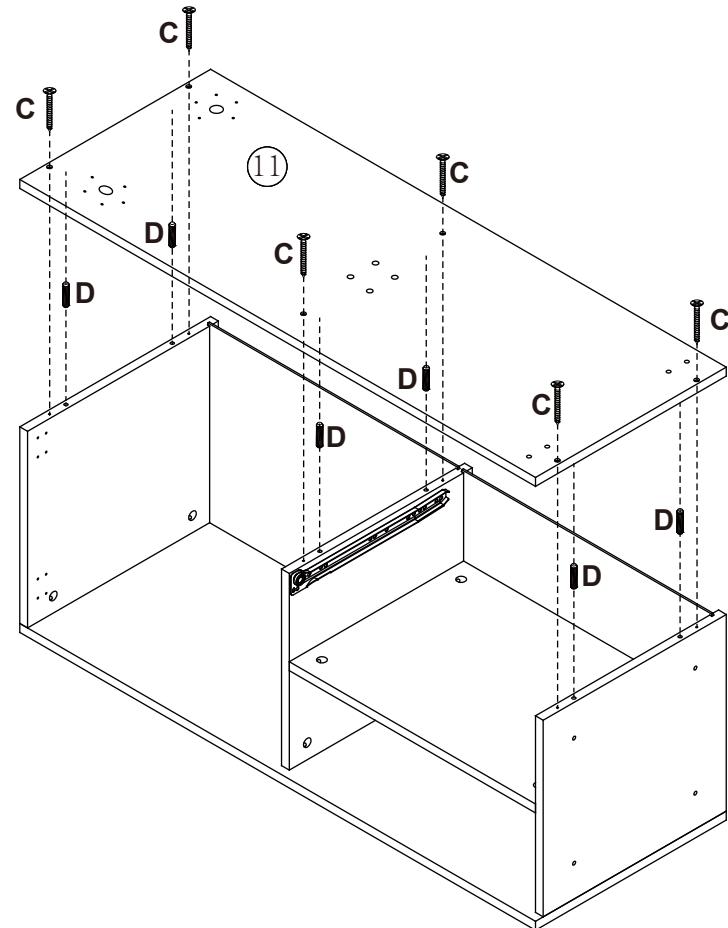







STEP 13

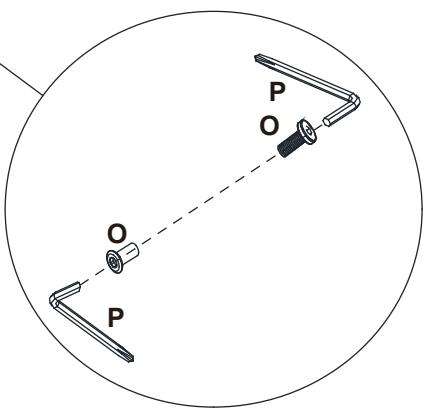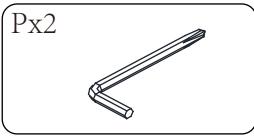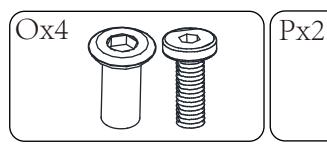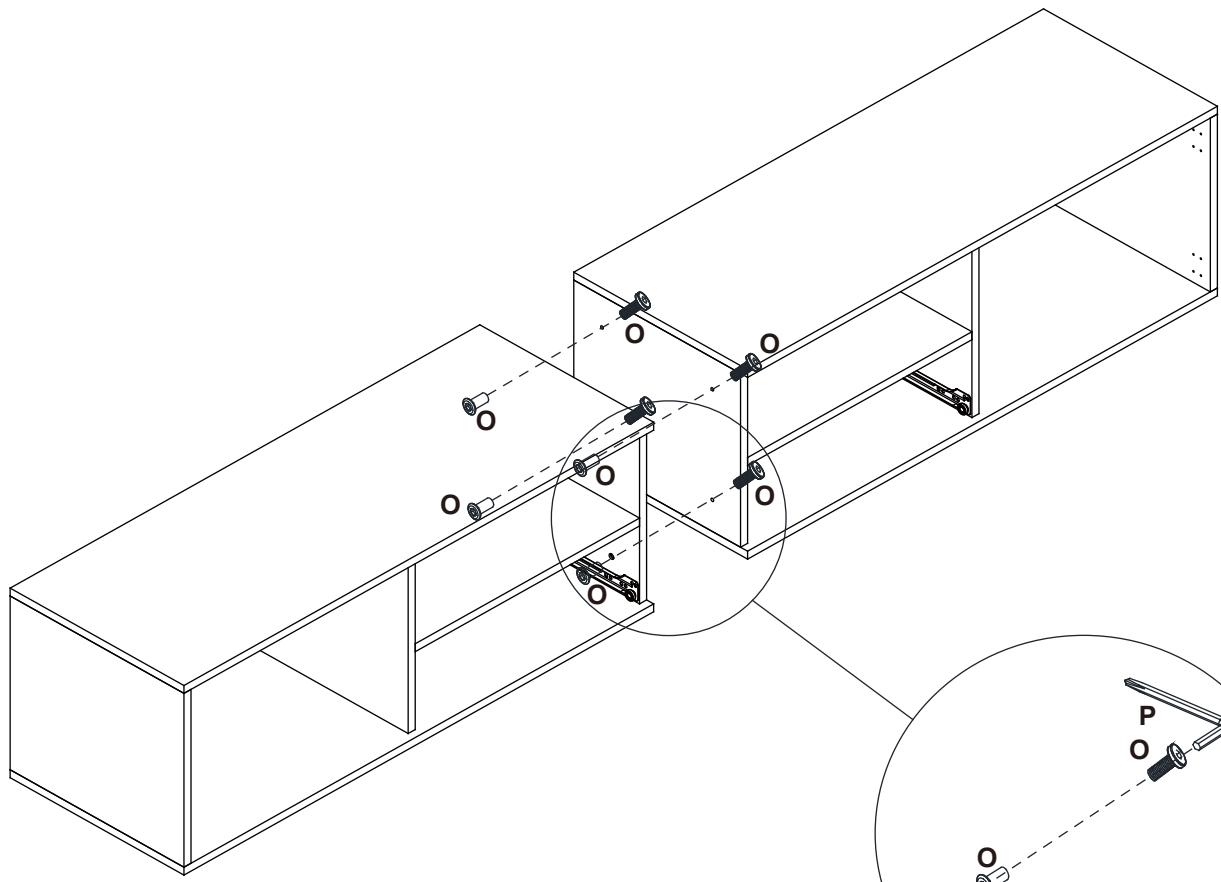






STEP 14

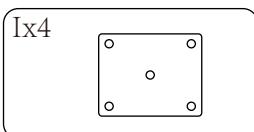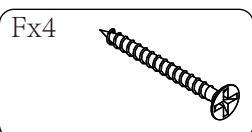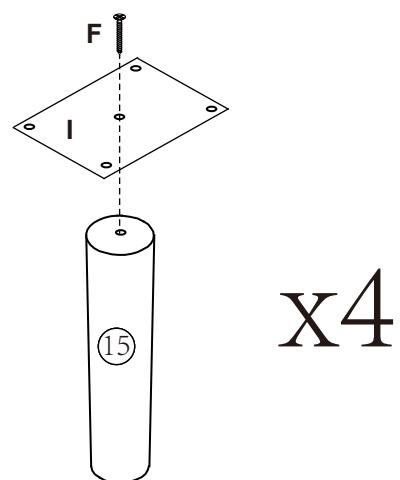


STEP 15

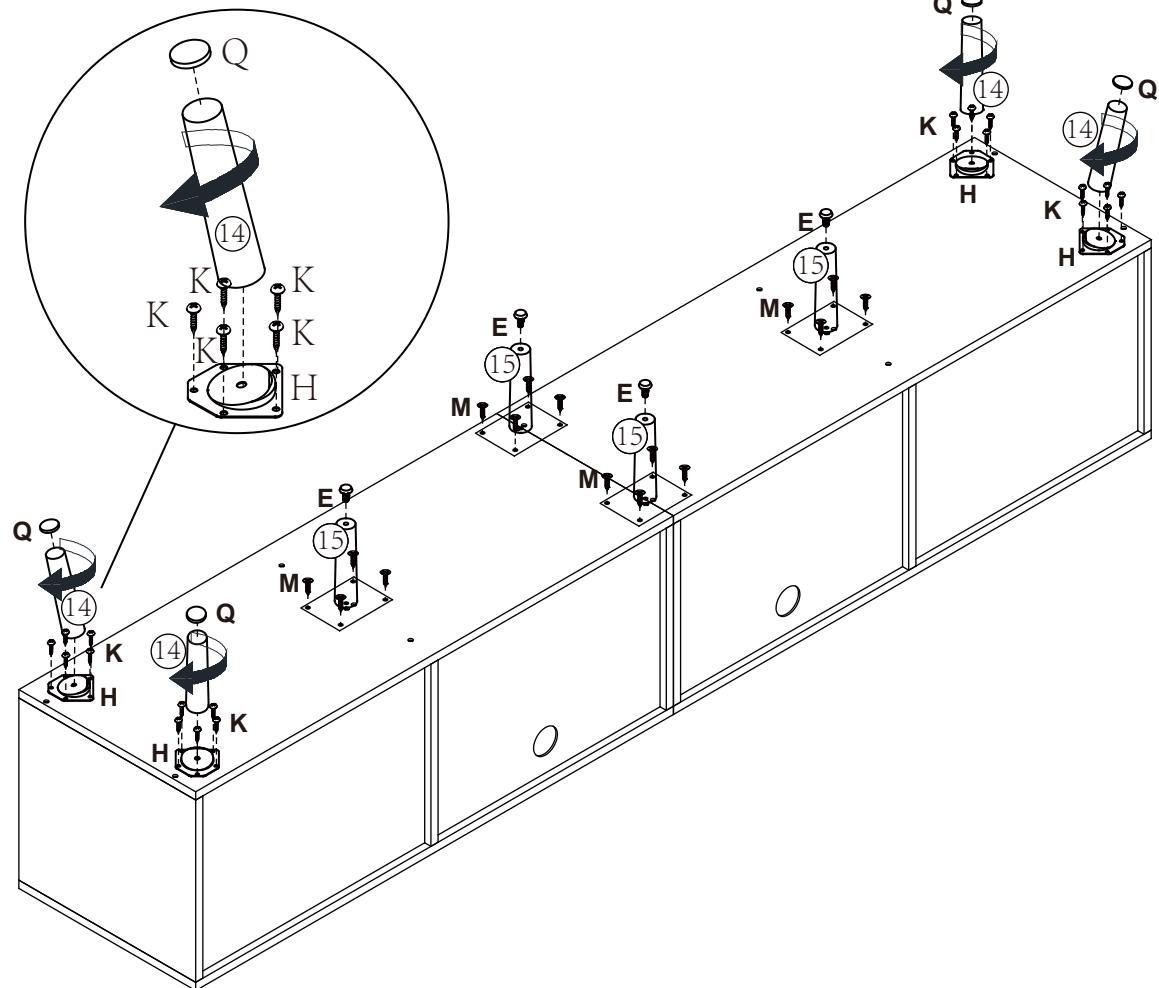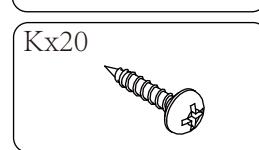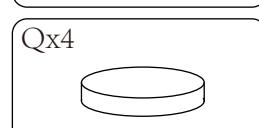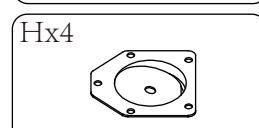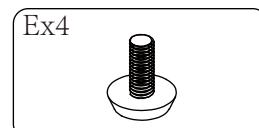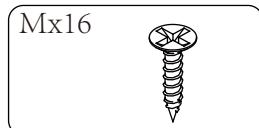

STEP 16

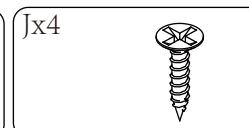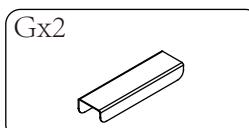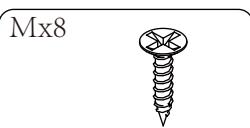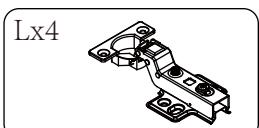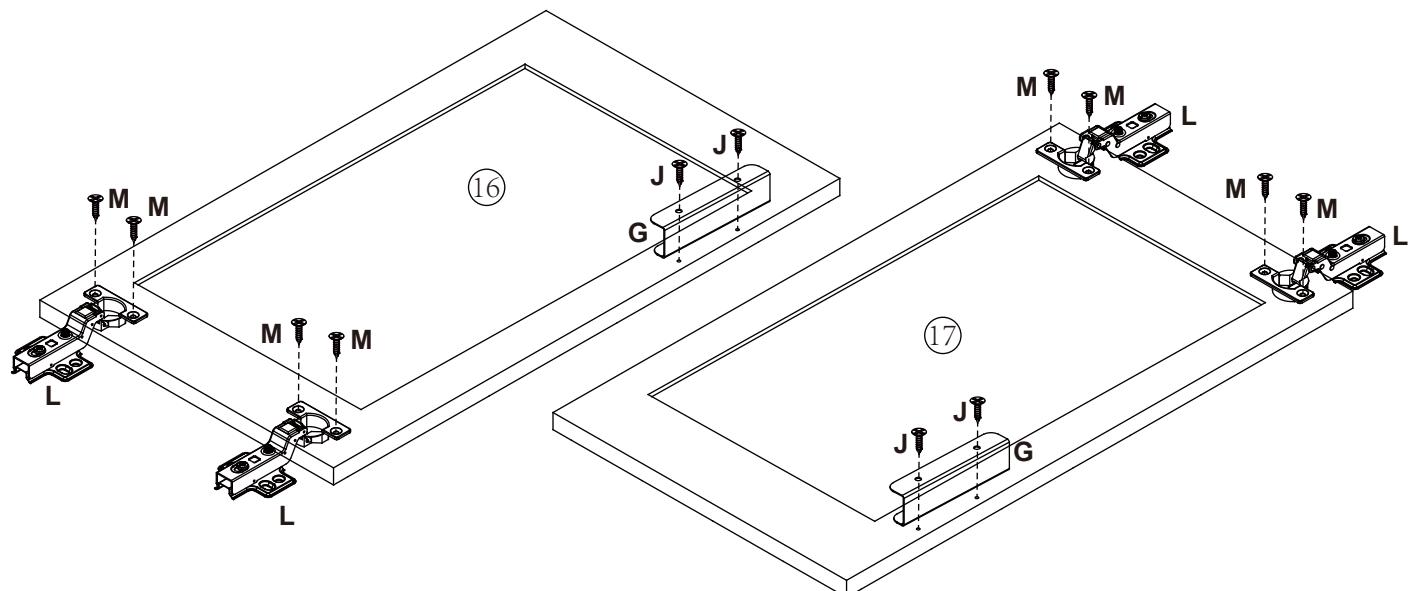


STEP 17

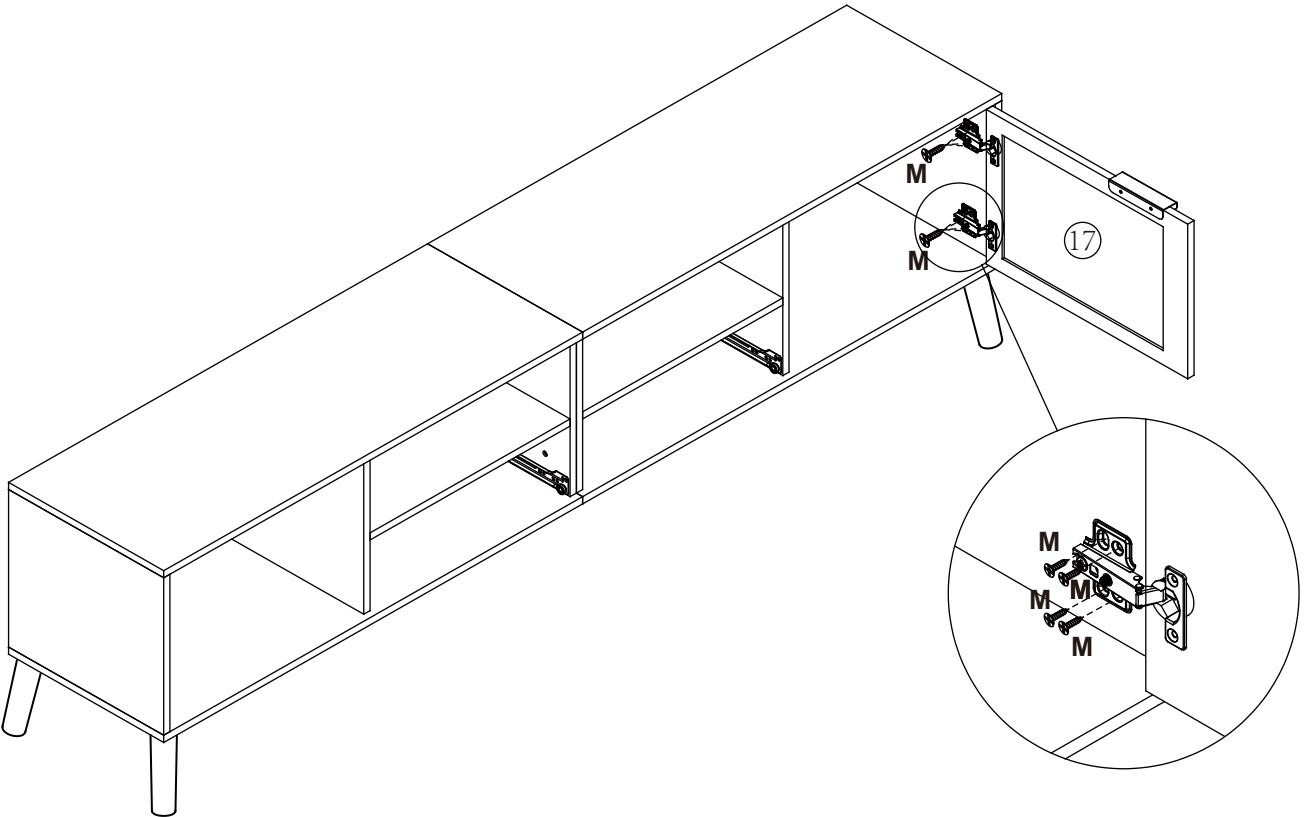





(For detailed hinge adjustment instructions, please refer to the last page.)

STEP 18


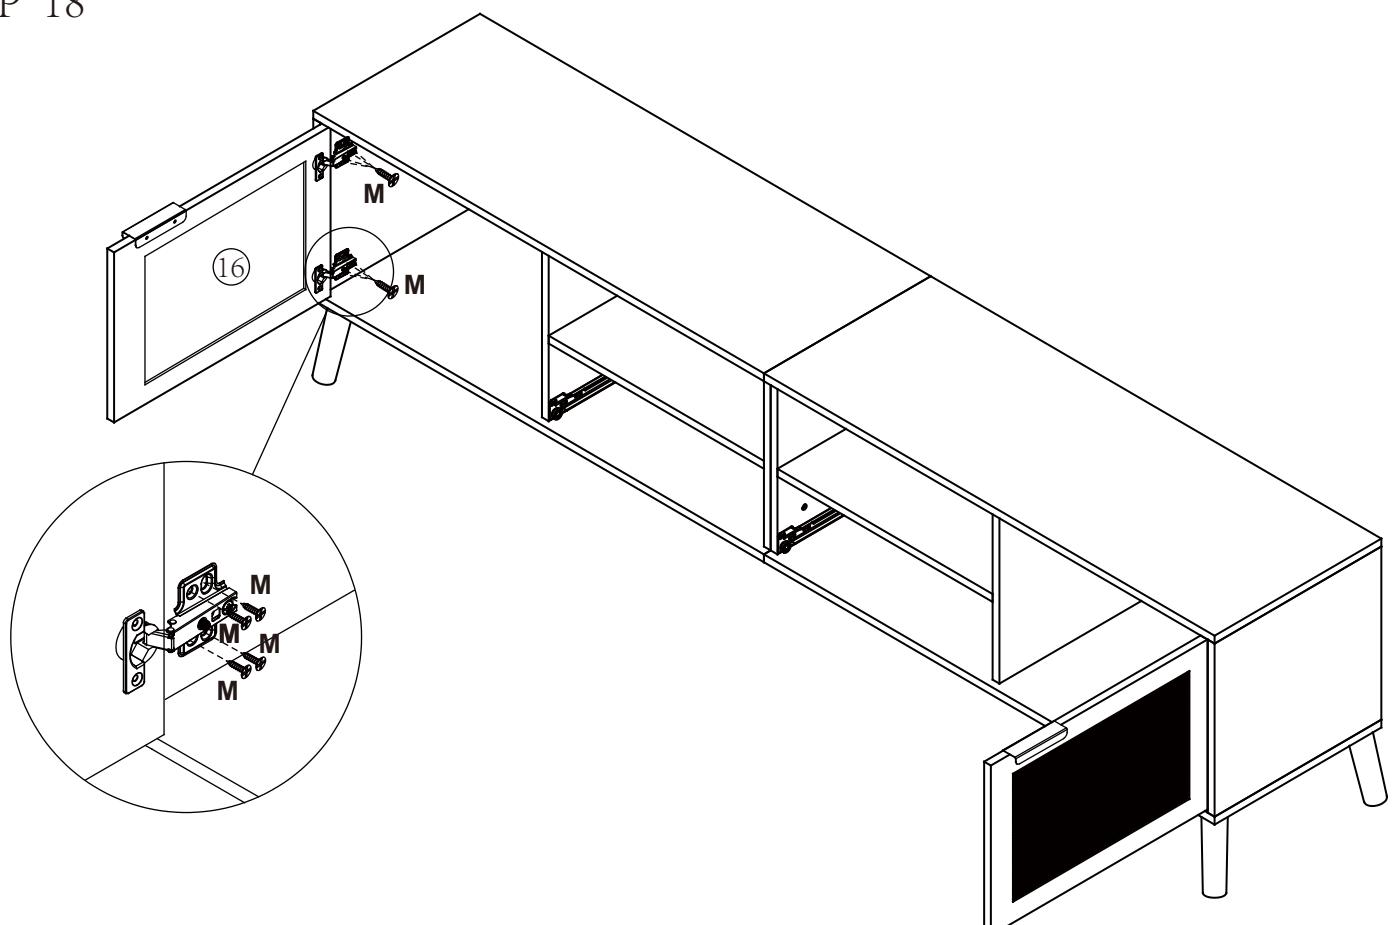


(For detailed hinge adjustment instructions, please refer to the last page.)


STEP 19

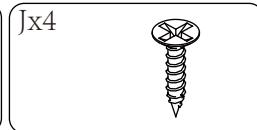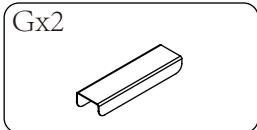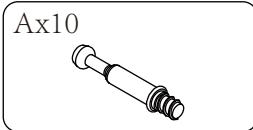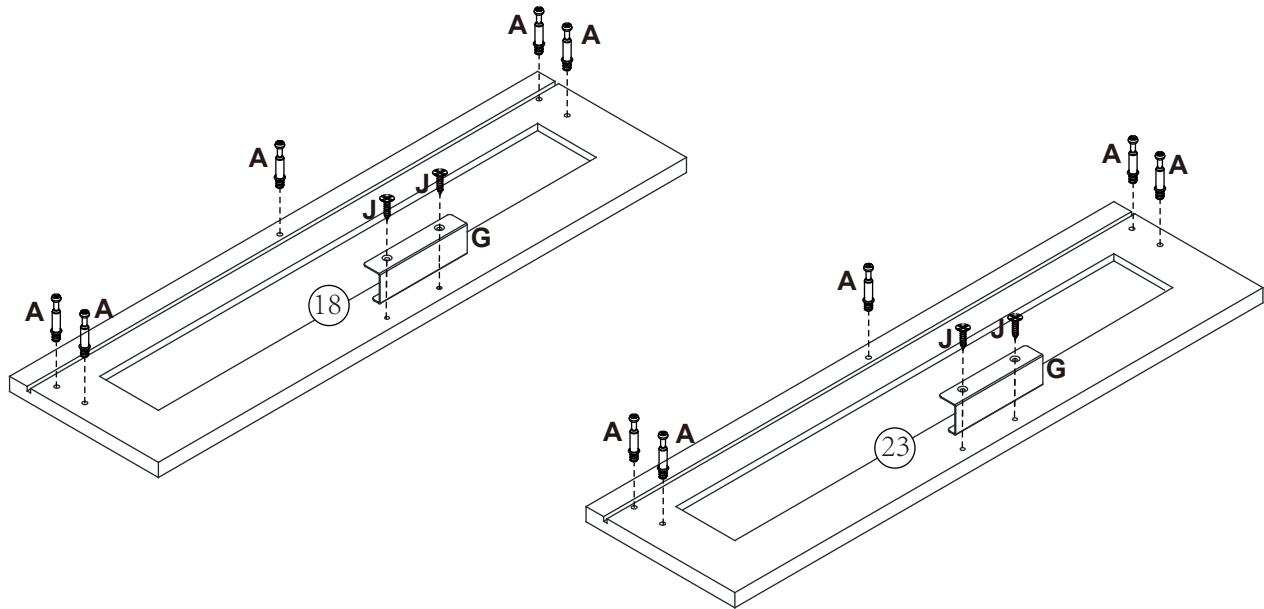


STEP 20

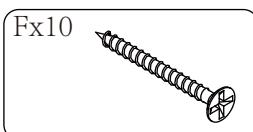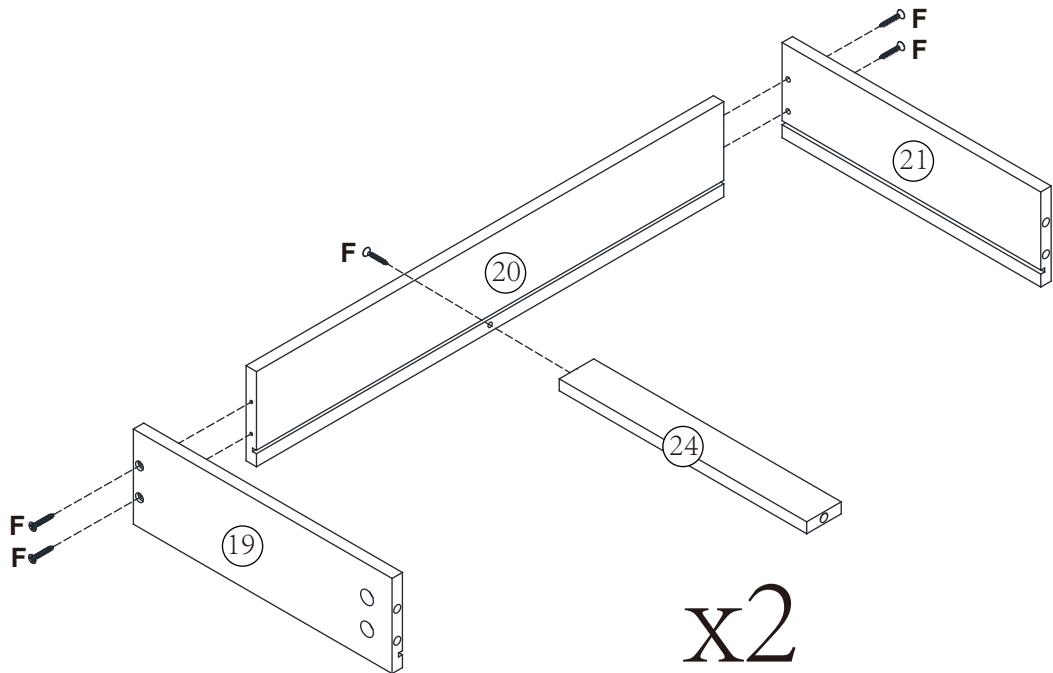

STEP 21

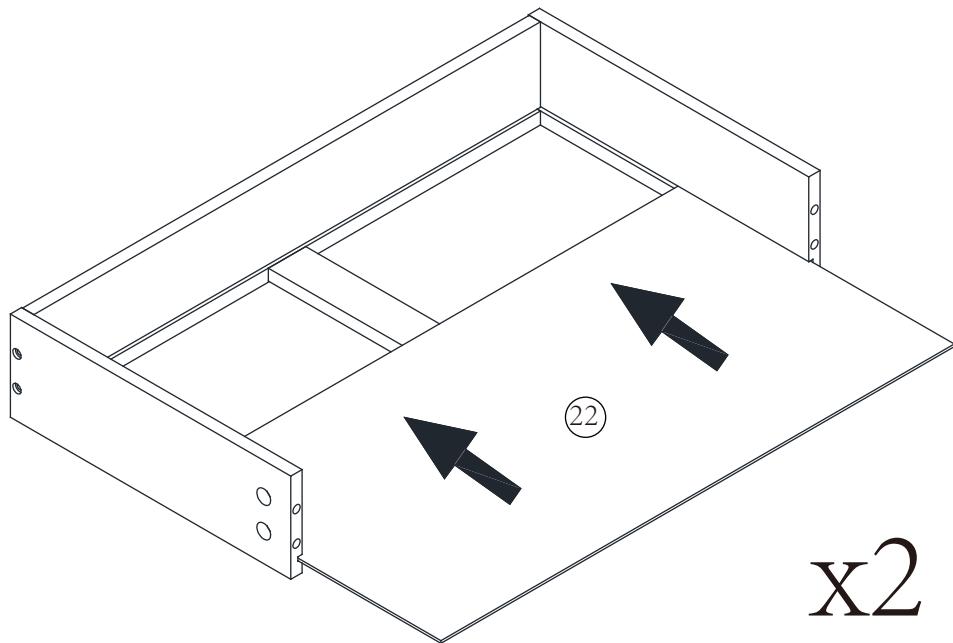


STEP 22

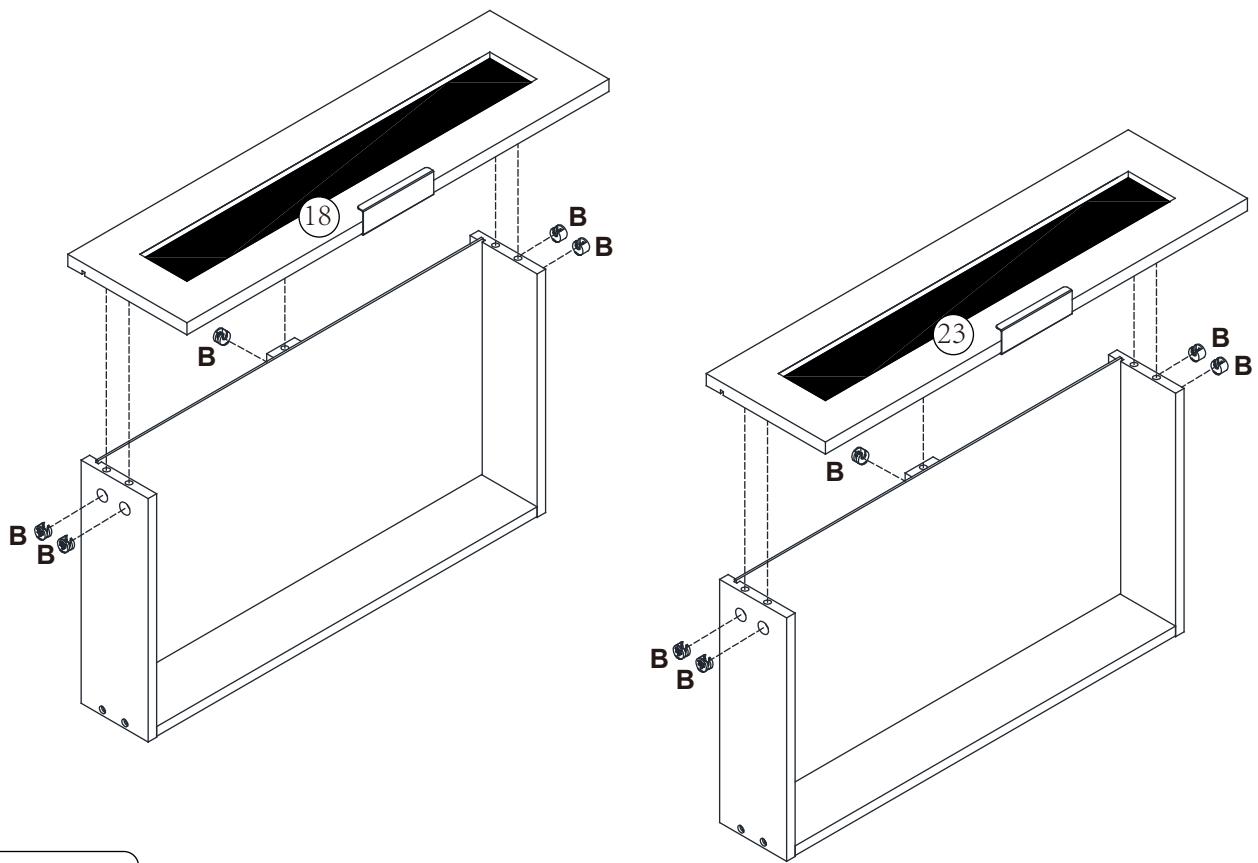

Bx10



STEP 23

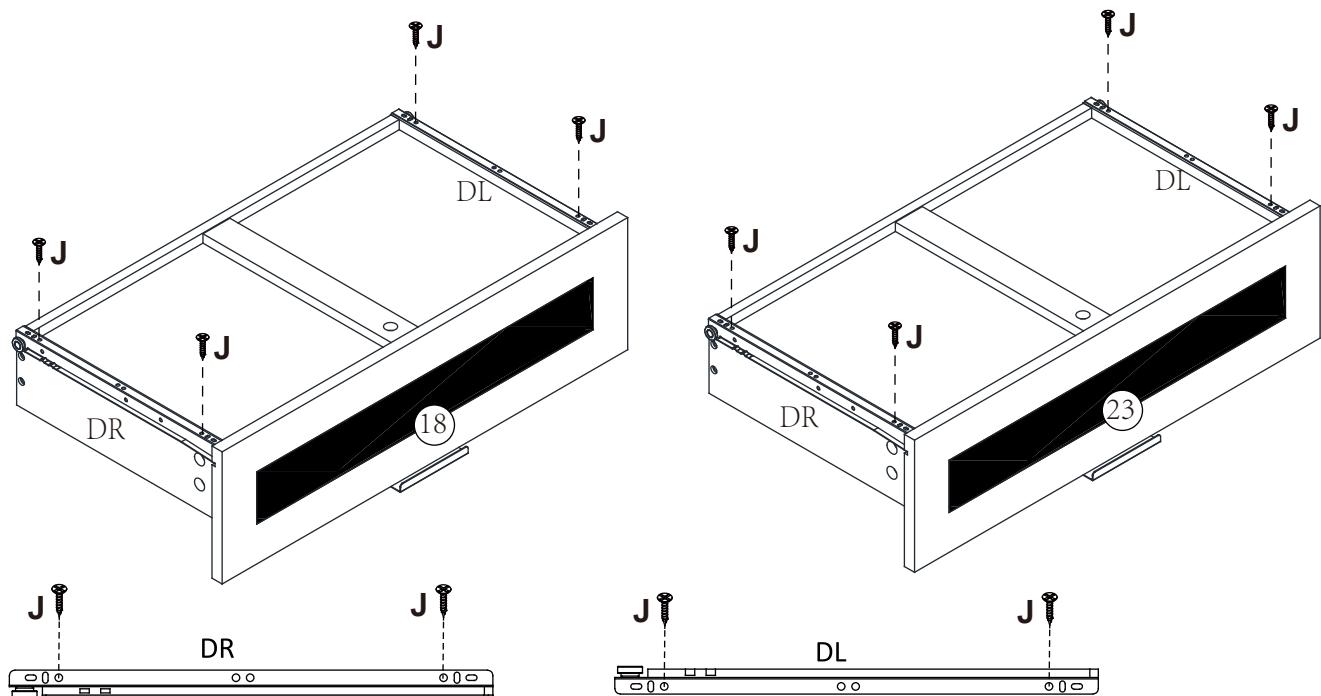

Jx8




DRx2




DLx2



STEP 24

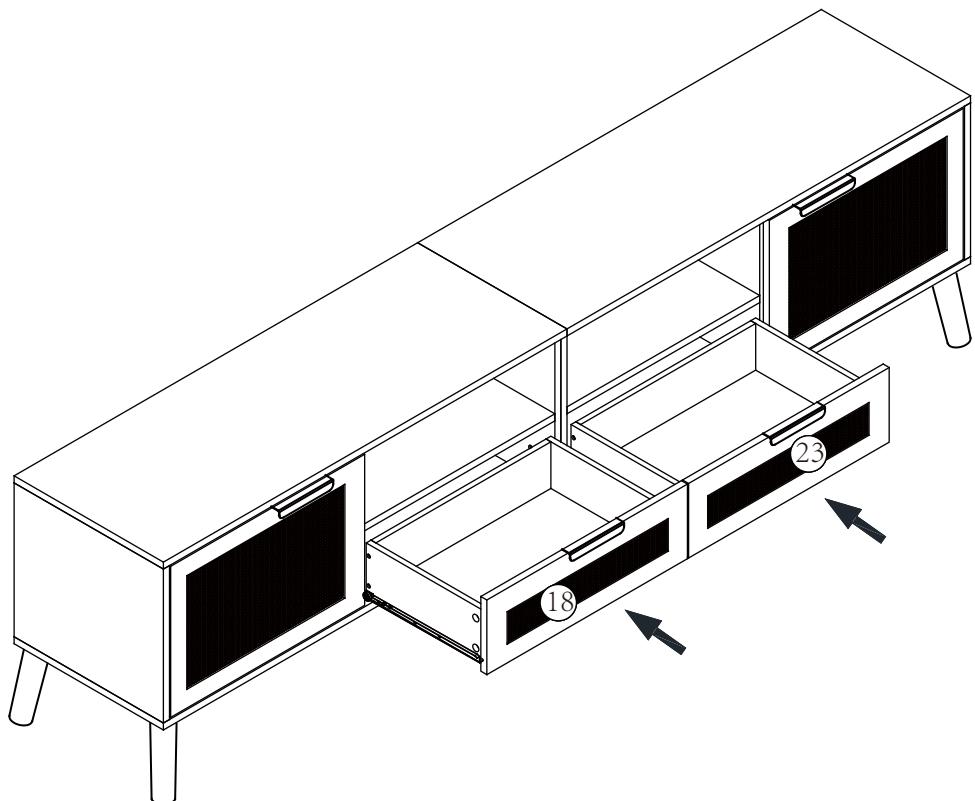

STEP 25

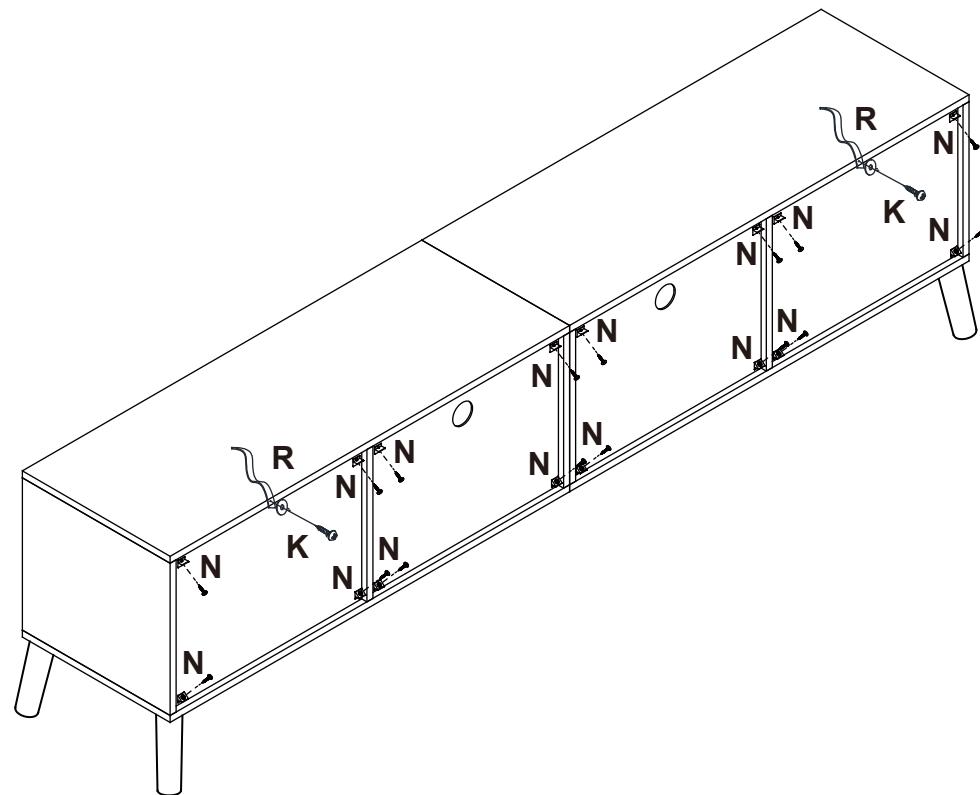


Kx2




Rx2



Nx16

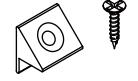


STEP 26

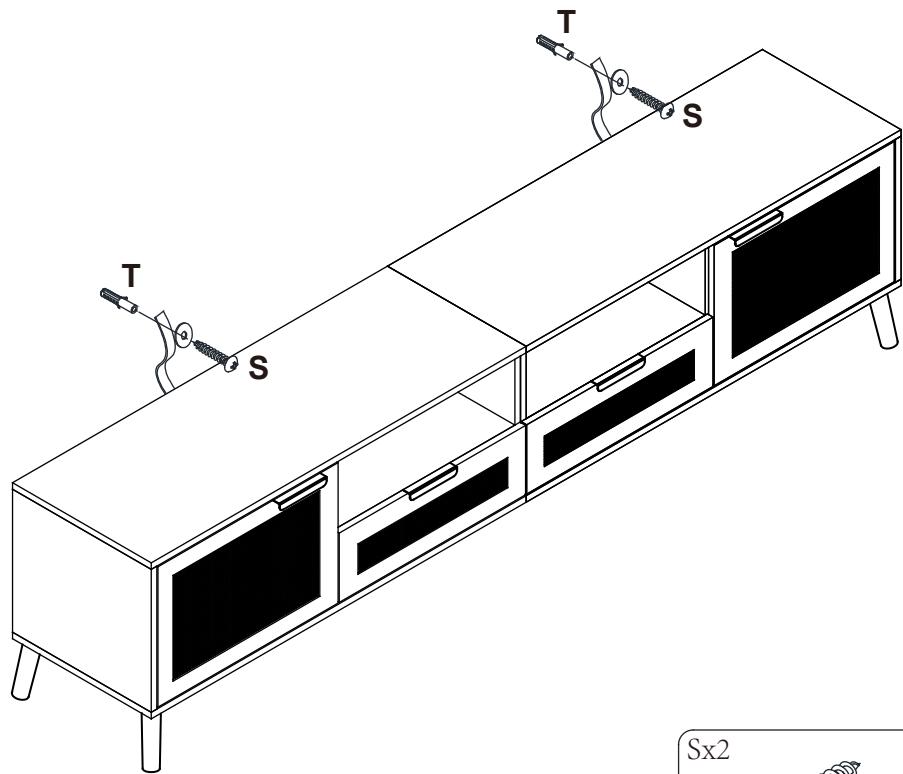


Sx2



Tx2

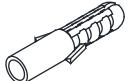


HINGE ADJUSTMENTS

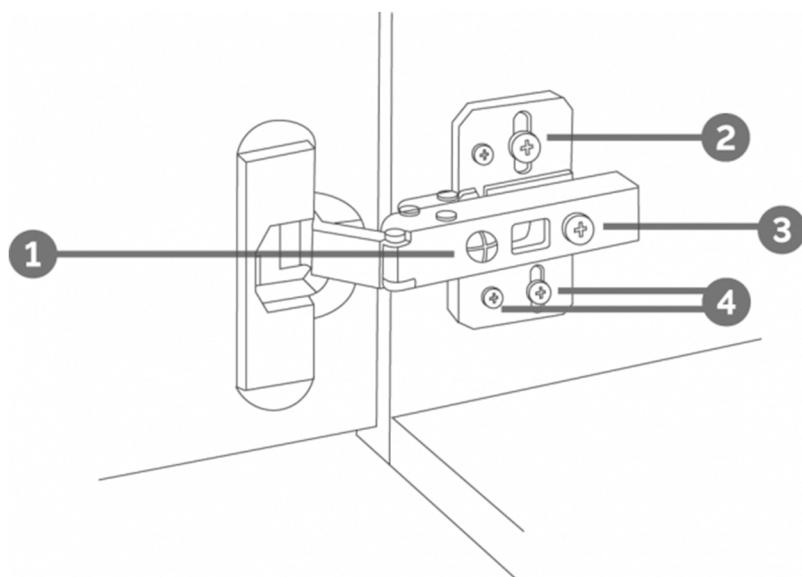


① Sideways / Tilt adjustment

Turn the screw **clockwise** to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

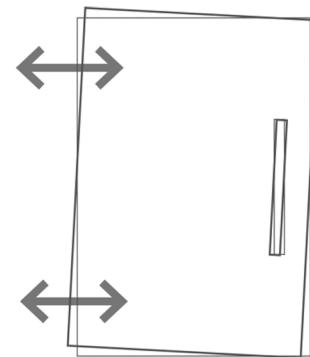

② ④ Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

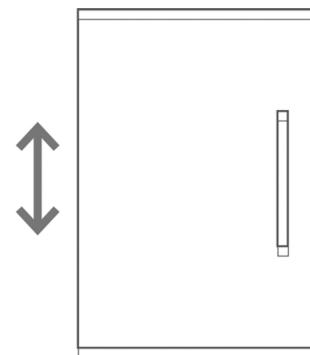

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

