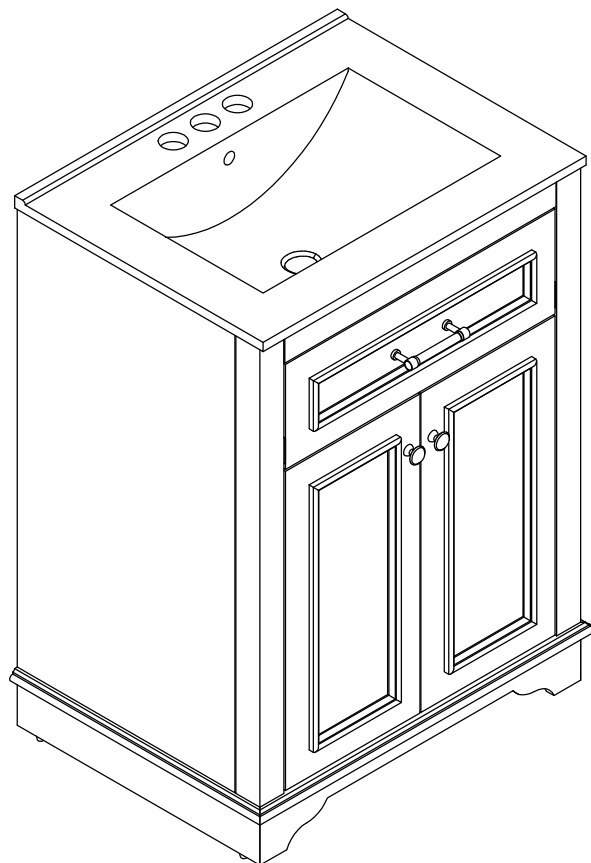 


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)

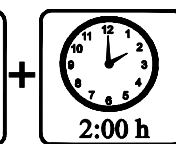 
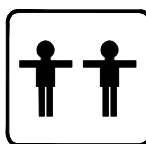 
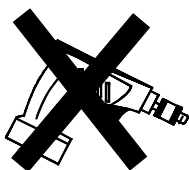 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

 
Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

 
*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**



Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

 

 
 
 

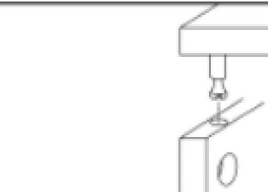 
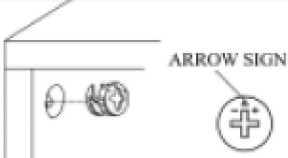 
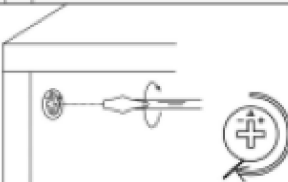 
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

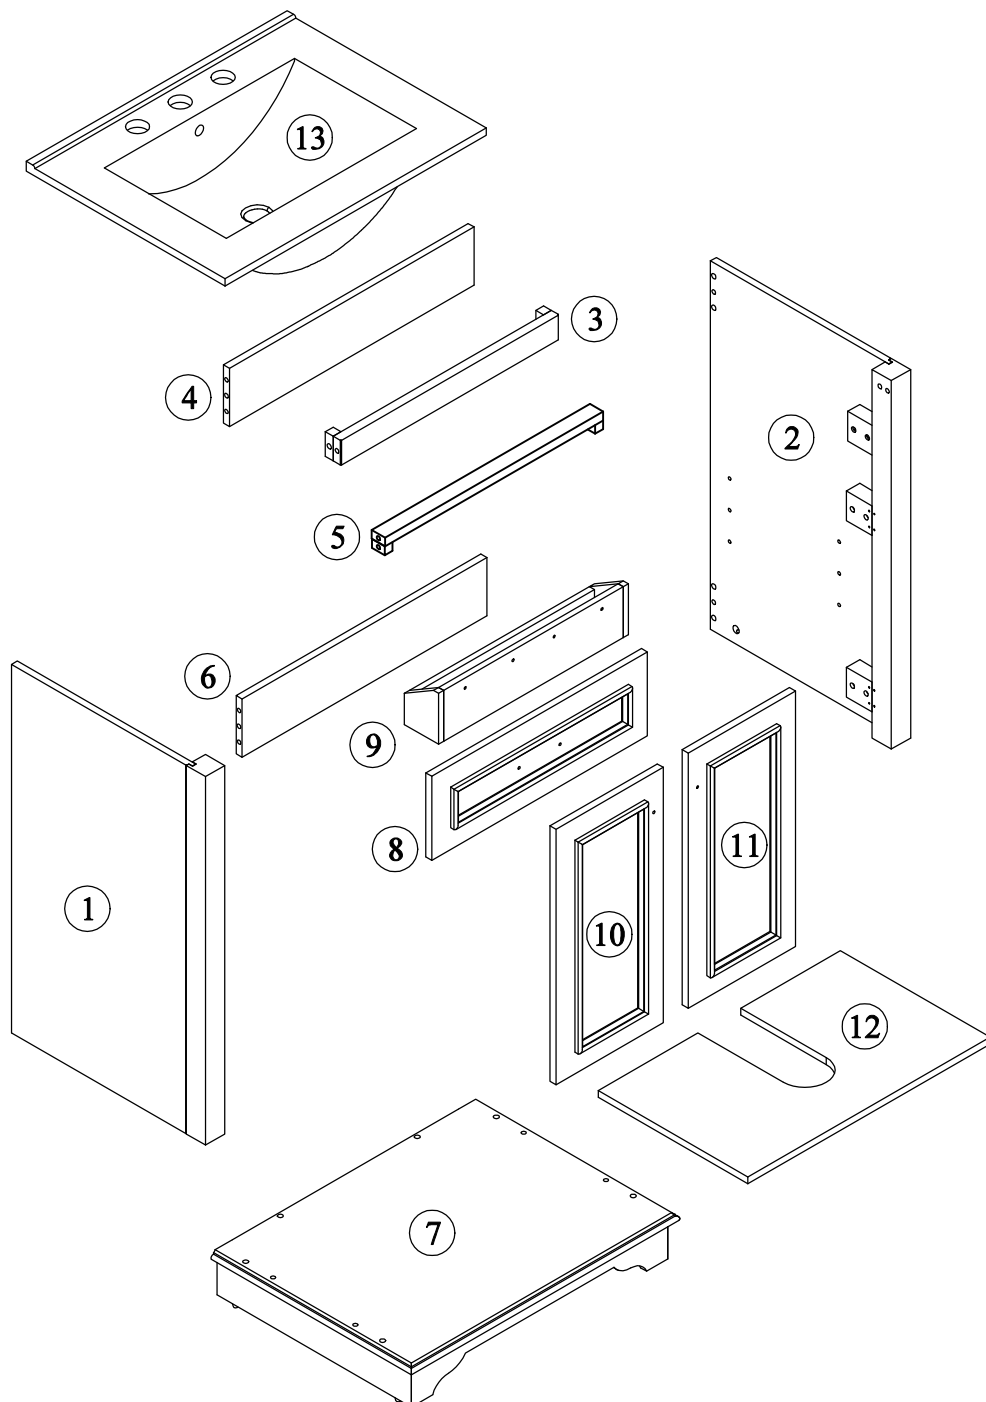 
- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

 
 
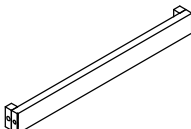 
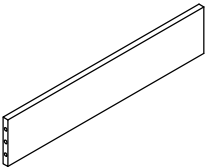 
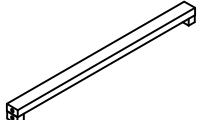 
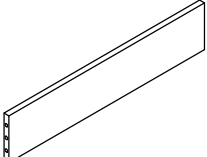 
 
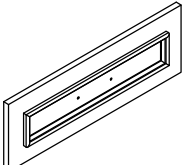 
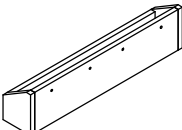 


 
 
		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET

 




 
 
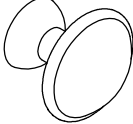 
 
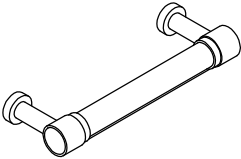 

 
 

 


 


Identifying the Hardware-Identify the hardware using the illustrations below.

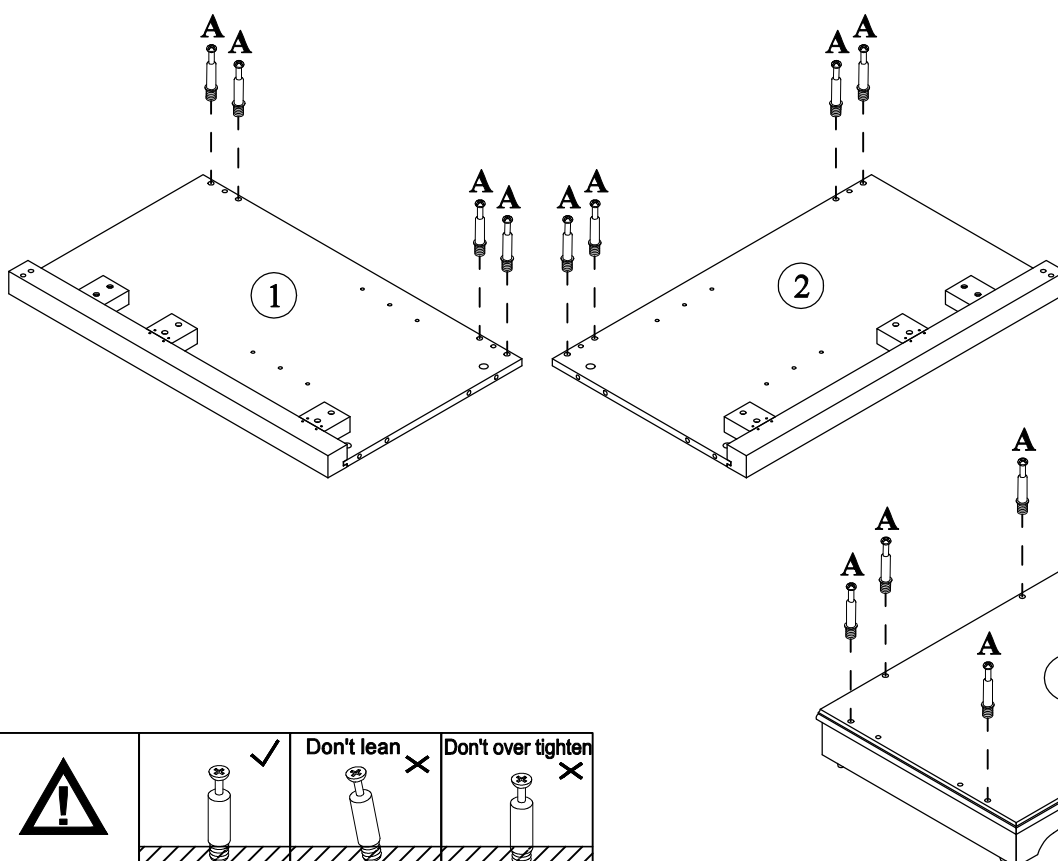 
Part List - N710P389449

1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Bar Front - 1pc		Top Rear Panel - 1pc
5		6	
	Mid Bar Front - 1pc		Bottom Rear Panel - 1pc
7		8	
	Bottom Frame - 1pc		Front Flip down Box - 1pc
9		10	
	Flip down Box - 1pc		Cabinet Door Left - 1pc
11		12	
	Cabinet Door Right - 1pc		Adjustable Shelf - 1pc
13			
	Sink - 1pc		

Hardware List - N710P389449

A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts (14pcs)	Three in one lock (14pcs)	Wood dowel (12pcs)
D  ø13x1/4"x28mm	E  ø1/4"x16x1mm	G 
Hex-Head bolts (4pcs)	Washer (4pcs)	Damping hinge (4pcs)
H  ø7xø3.5x15mm	I 	J  ø5/32"x20mm
Flat head screw (24pcs)	Handle (2pcs)	Handle screw (2pcs)
K 	L  ø5/32"x25mm	M 
Handle (1pc)	Handle screw (2pcs)	Rod Support hinges (1pc)
N 	O  ø6xø3x12mm	F 
Swivel Hinges L/R (2pcs)	Round head screw (8pcs)	Shelf Support (4pcs)
Q  4mm	R  ø8xø4x20mm	S 
Allen key (1pc)	Round head screw (2pcs)	Anti fall hardware (2sets)

STEP: 1

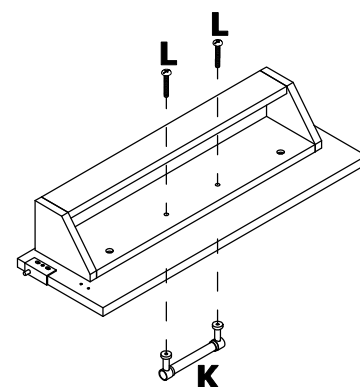 
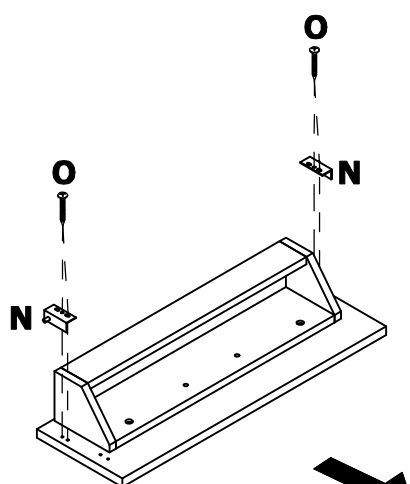 
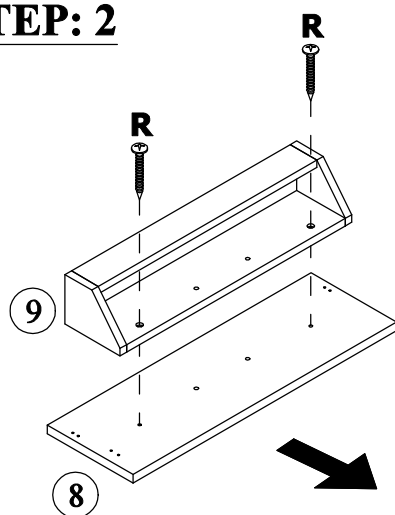 


A




 


14PCS


STEP: 2

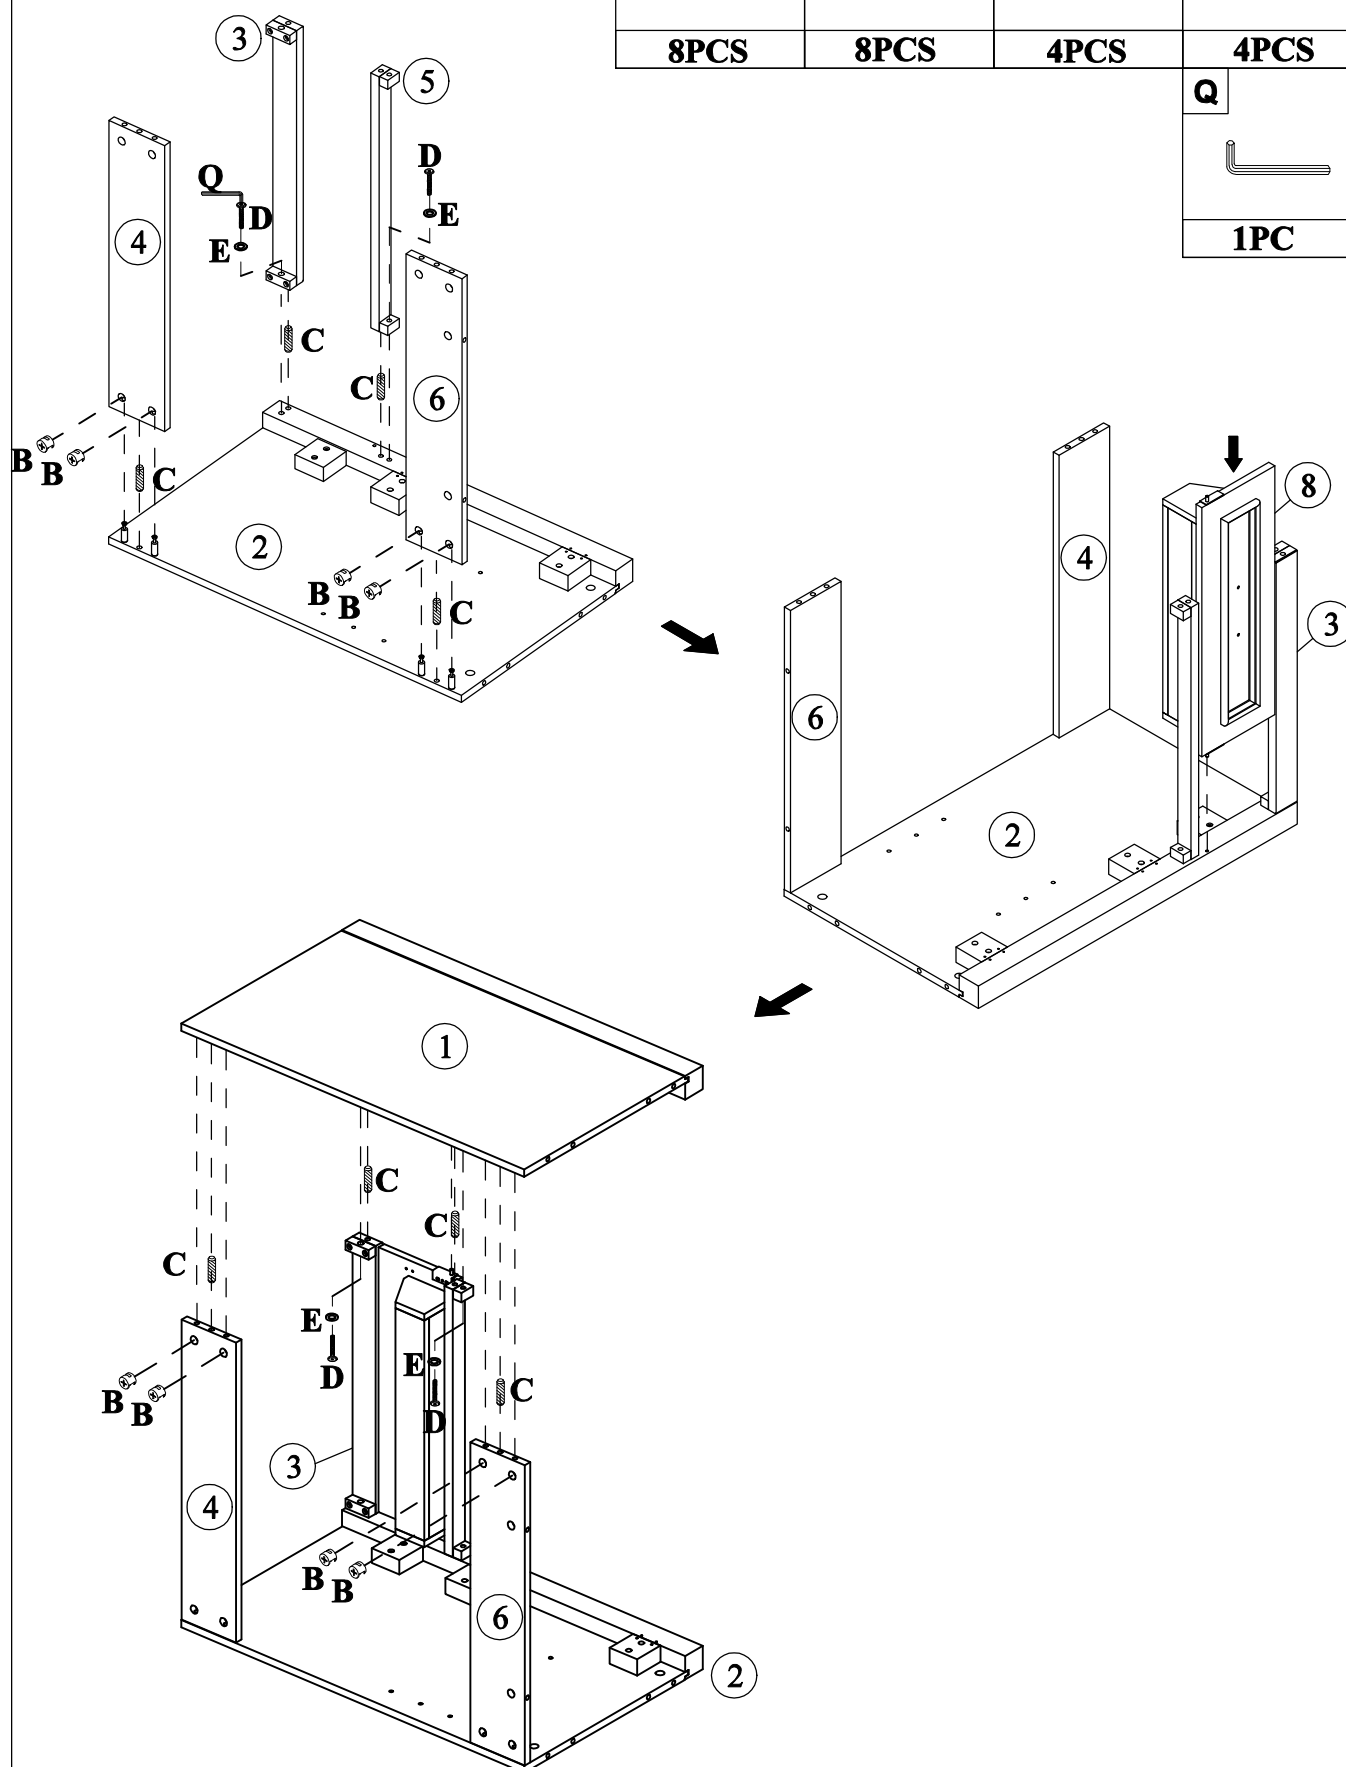 


R	K	L
2PCS	1PC	2PCS
N	O	
2PCS	4PCS	

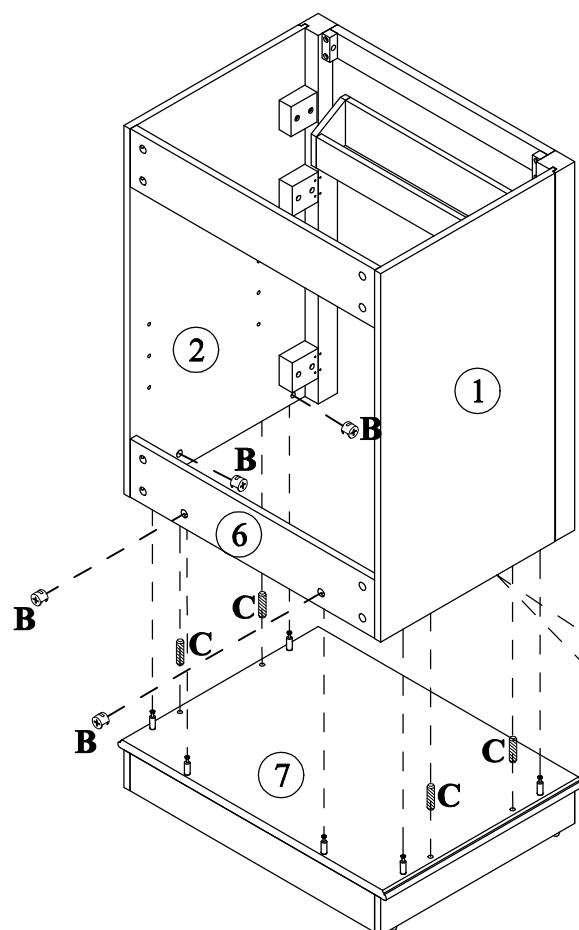 
STEP: 3


 
B	C	D	E
			
8PCS	8PCS	4PCS	4PCS

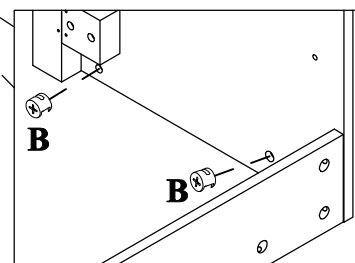 
Q

1PC



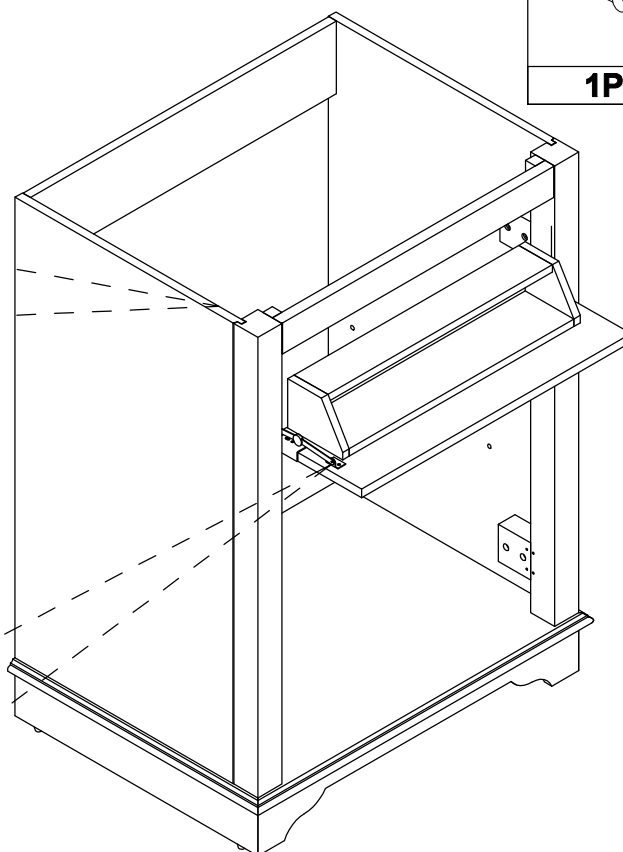 
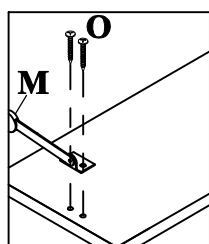 
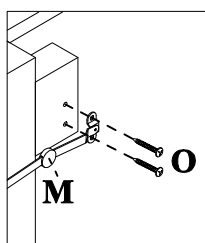 
STEP: 4

 



B	C
	
6PCS	4PCS


 


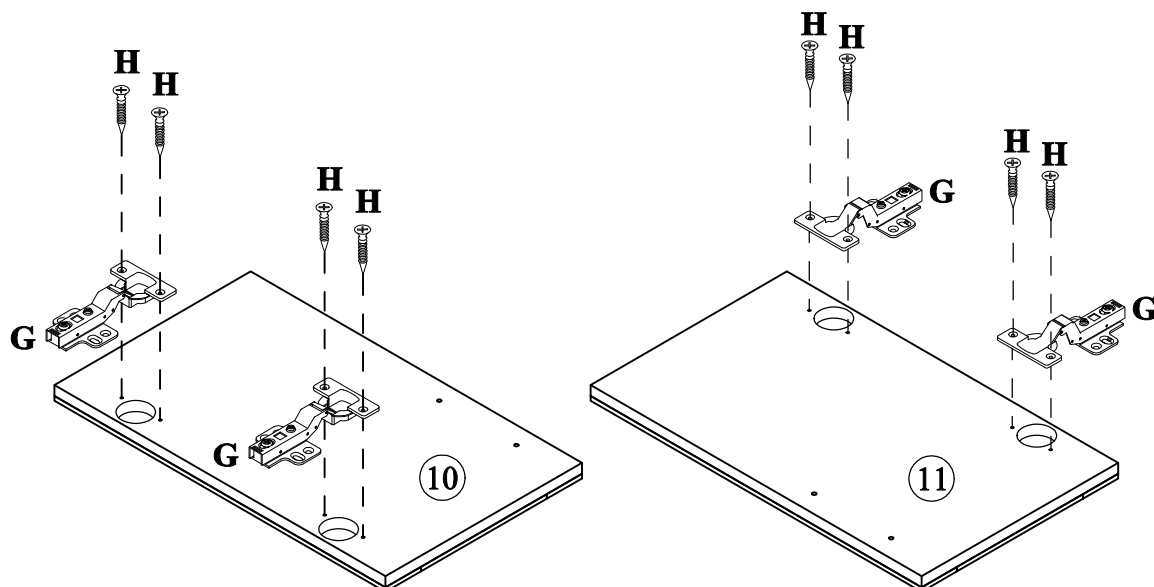 
STEP: 5




 
 
M	O
	
1PC	4PCS

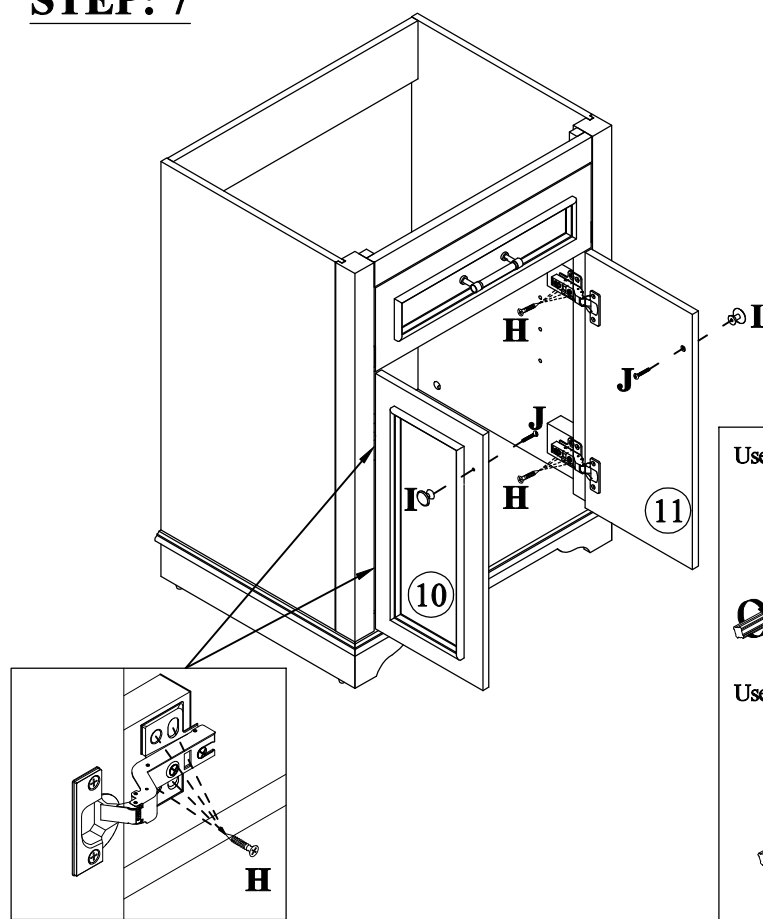 
STEP: 6

G	H
	
4PCS	8PCS

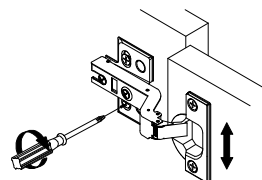 


STEP: 7

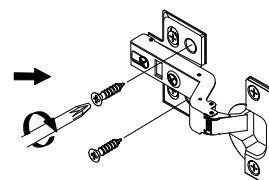 
I	J	H
		
2PCS	2PCS	16PCS



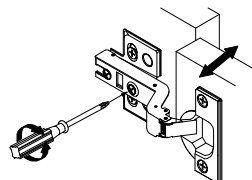 
Use the screws to adjust up or down



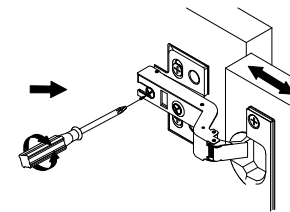 
Use the screws to permanent



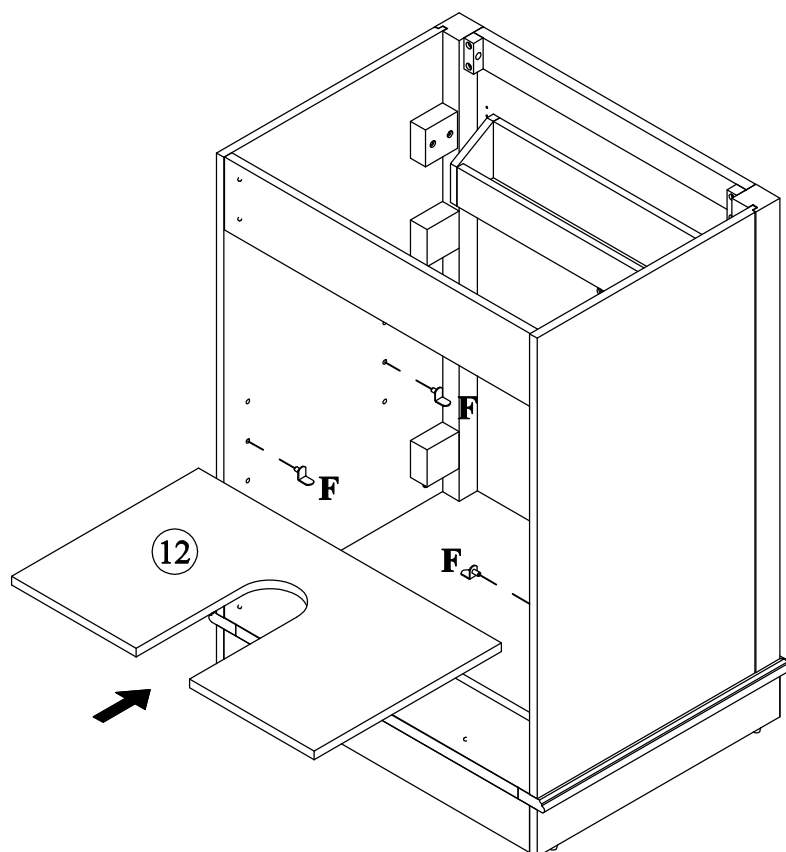 
Use the screws to adjust left or right



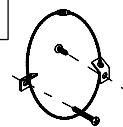 
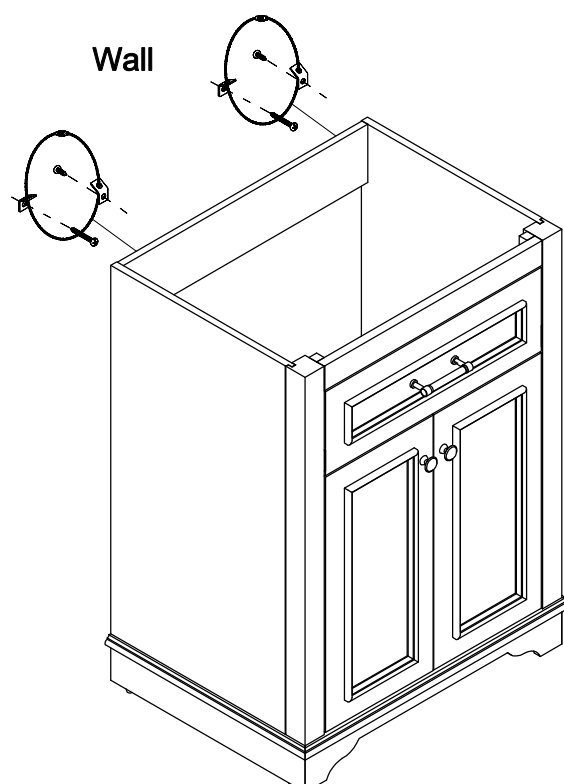 
Use the screws to adjust in or out



STEP: 8

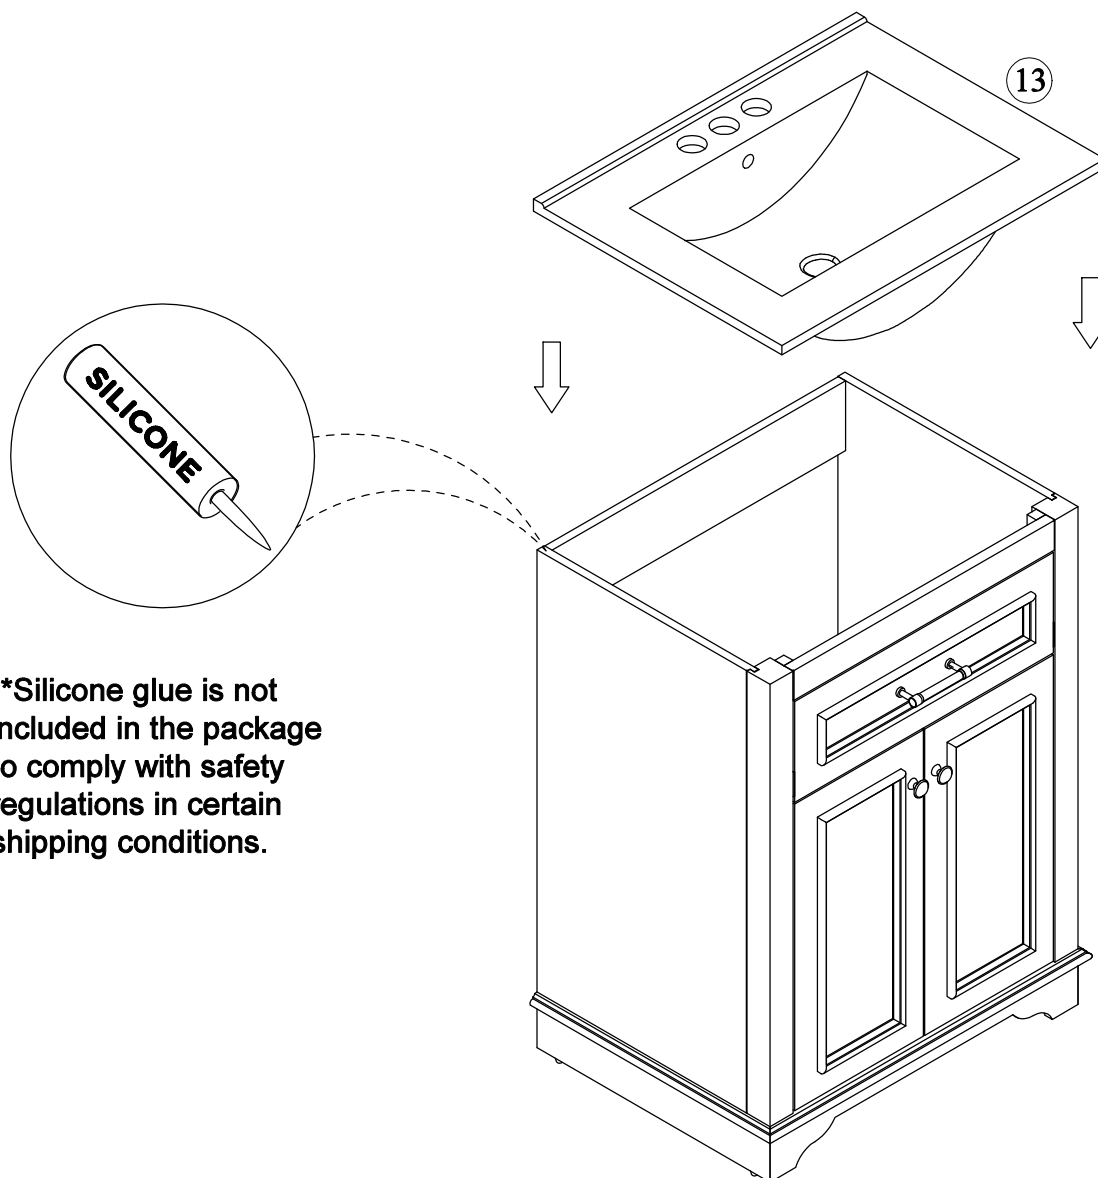 
F**4PCS**

STEP: 9

S**2SETS**

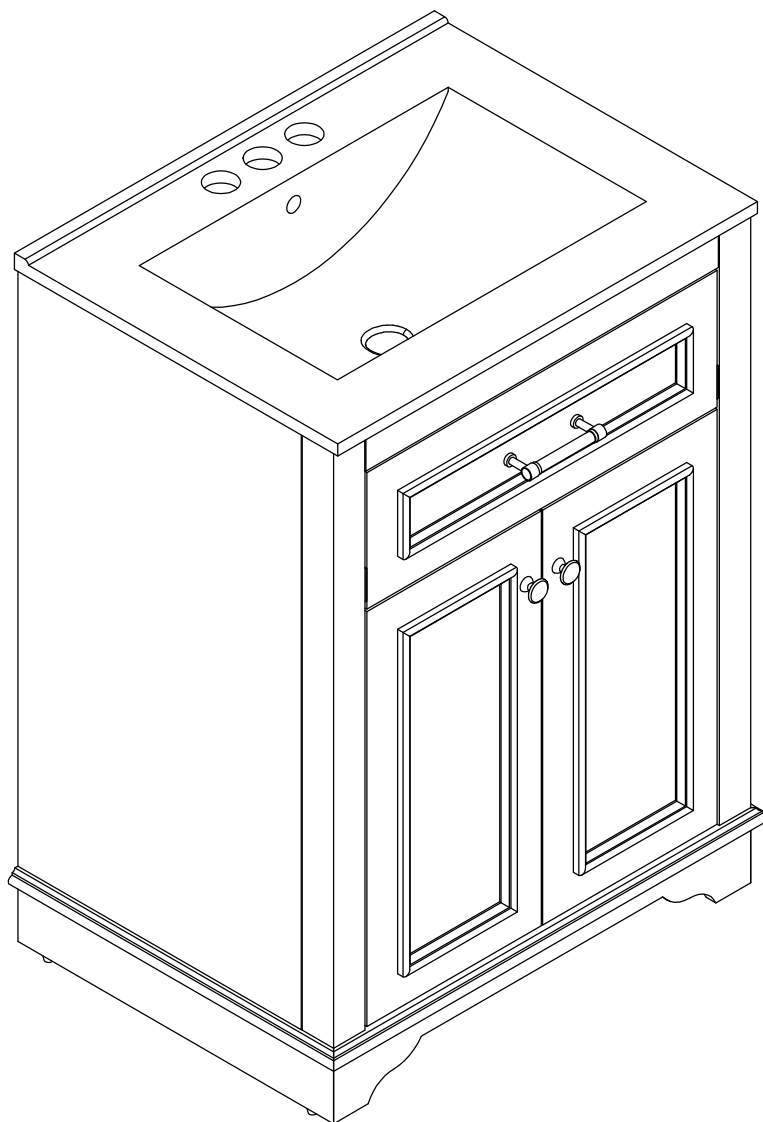 
STEP: 10

**Install the sink on the cabinet with glue.
Let stand for 24 hours**

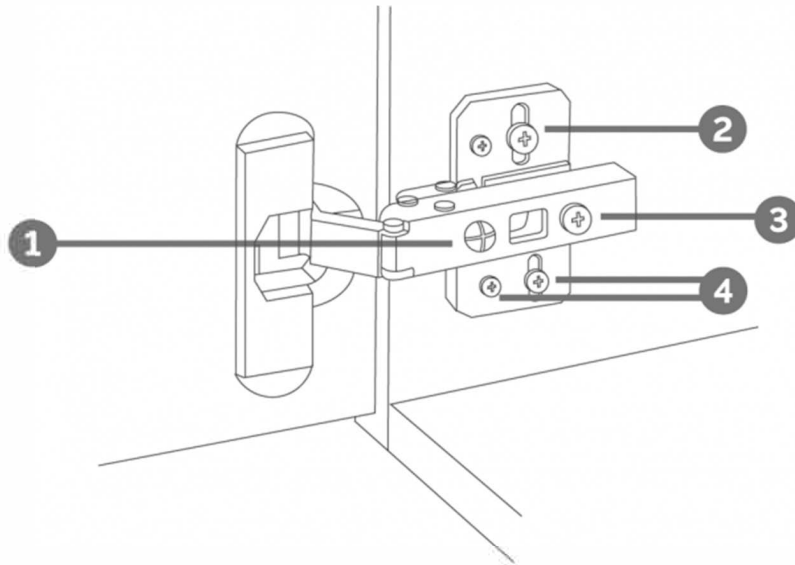 


***Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.**

STEP: 11



HINGE ADJUSTMENTS

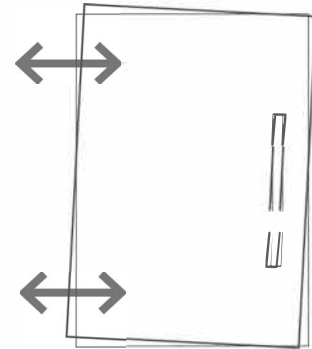 


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

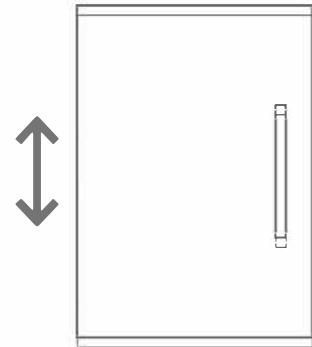 


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down



③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

