


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0448 / P0449

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instruction.

Hardware Package (included):

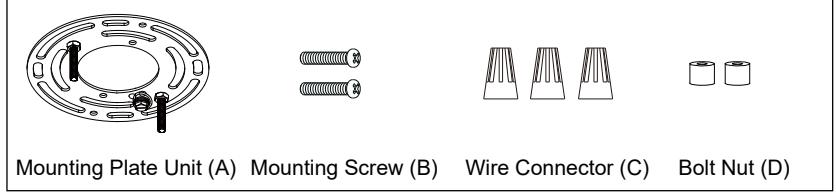

Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew the two bolt nuts (D), remove the mounting plate unit (A) from canopy kit.

2. Attach mounting plate unit (A) to the outlet box using two mounting screws (B).

3. Attach the center rod to the socket by using the threaded pipe.

4. Place the upper glass shade on the pan.

5. Place the plate on the center rod and insert the socket into the upper glass shade, then attach the chains to the hooks.

Adjust the height through the controller so that the chain can be attached to the hook.

6. Rod Connections:

a. Thread the fixture wire from the plate through the lower rod, and then secure the lower rod onto plate using the threaded pipe.

b. Thread the fixture wire through the middle rod, and then the middle rod onto the lower rod using the threaded pipe.

c. Thread the fixture wire through the upper rod, and then the upper rod onto the middle rod using the threaded pipe.

Note: Length adjustable from 31-1/2" to 61-1/2".


Use fewer rods if shorter length is desired.

7. Thread the fixture wire through the canopy kit, and then secure the rod assembly to the set threaded pipe of the canopy kit.

8. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:

- Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
- Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
- Attach the fixture ground wire (bare wire) to the mounting plate unit (A) with the green ground screw, then depending on local code, connect it to the house ground wire with the wire connector (C).

Carefully put all of the wires back into the outlet box.

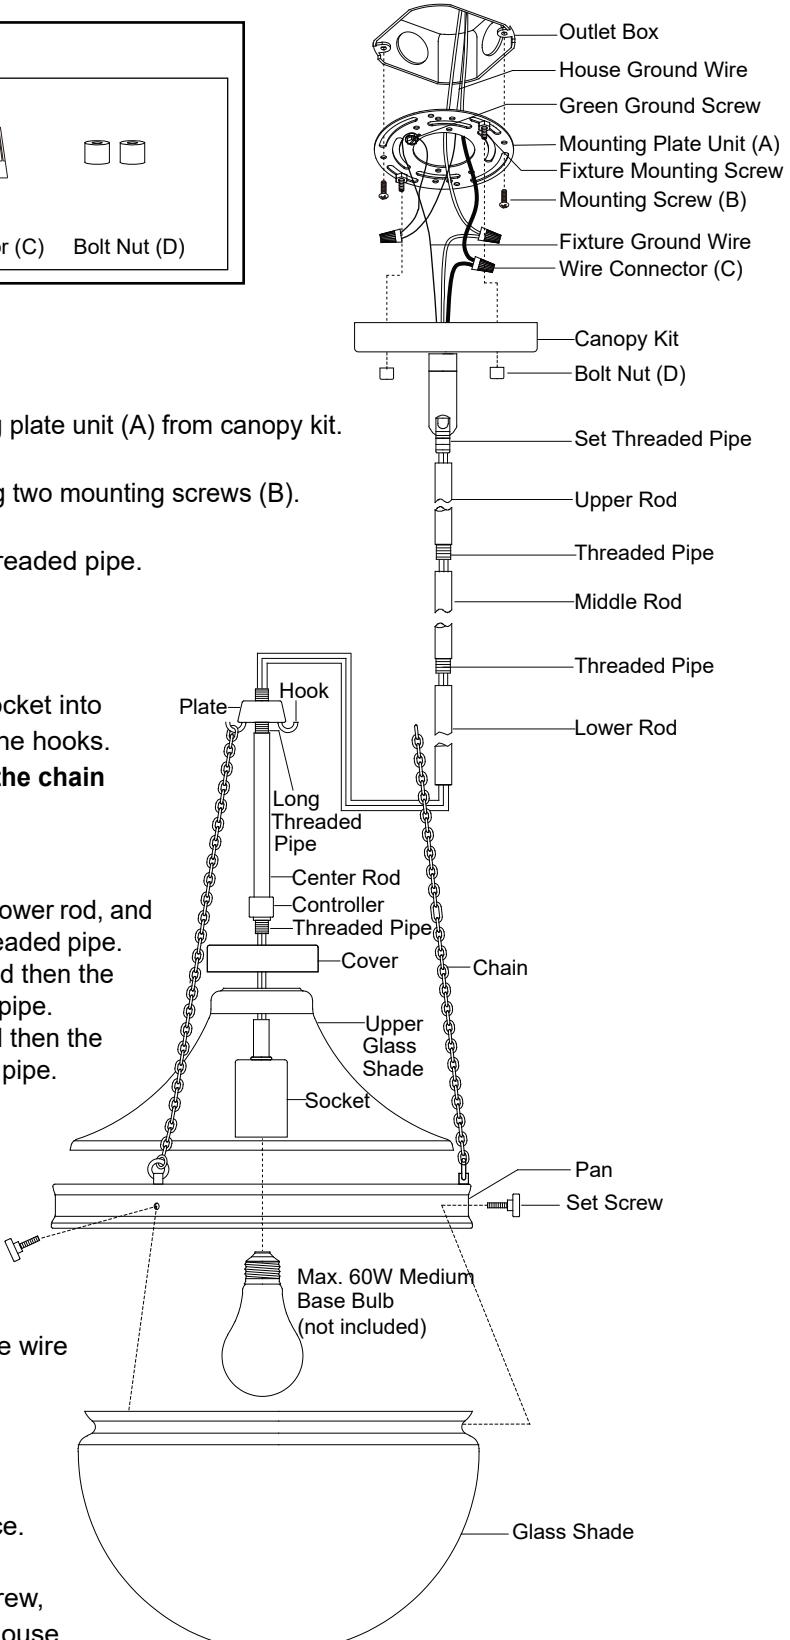


9. Attach the canopy kit to the mounting plate unit (A) by inserting the fixture mounting screws, and then secure it with two bolt nuts (D).

10. Install 1 x 60W Max. medium base bulbs (not included).
See relamping label at socket area or packaging for maximum wattage allowed.

11. Install the glass shade onto the fixture and fasten it tightly with set screws.



12. Angled mounting recommended for a vaulted or angled ceiling.
(See Fig. 1)

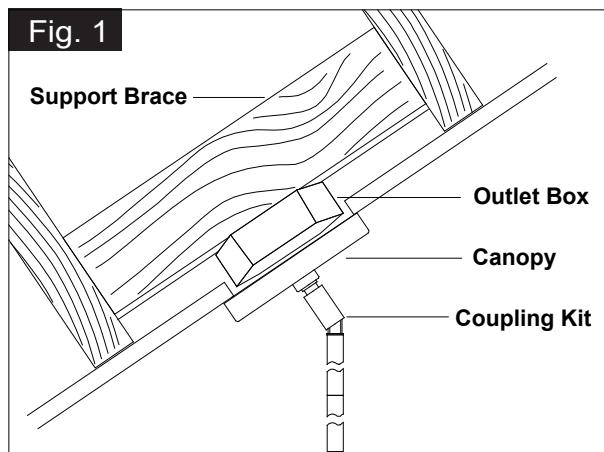

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

Spare Parts List:

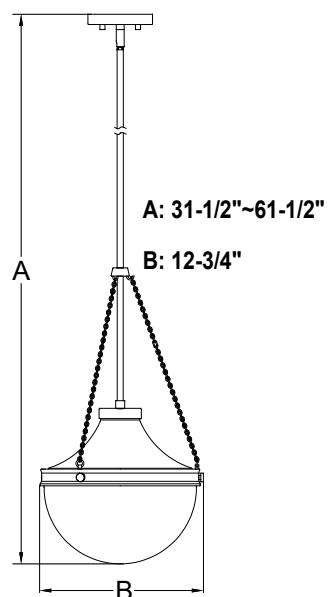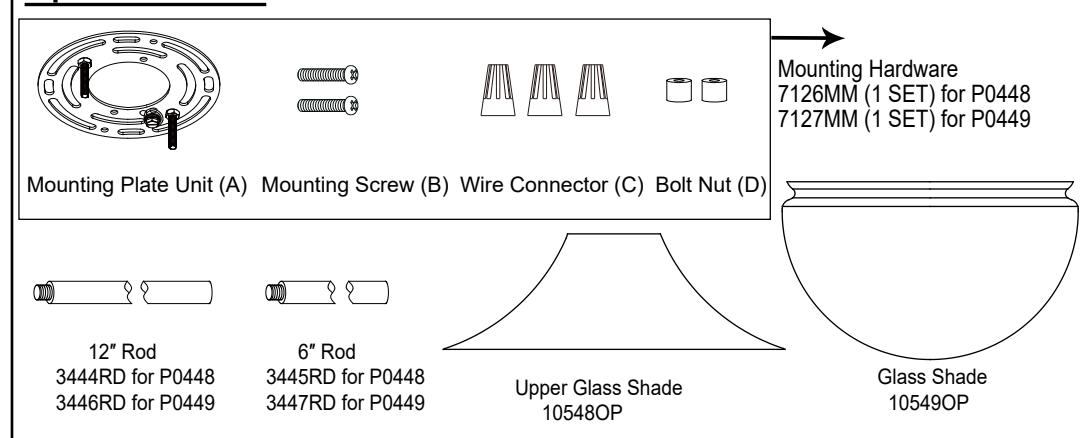

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com

1-800-482-9235