


TV Stand

Assembly Instructions - Please keep for future reference

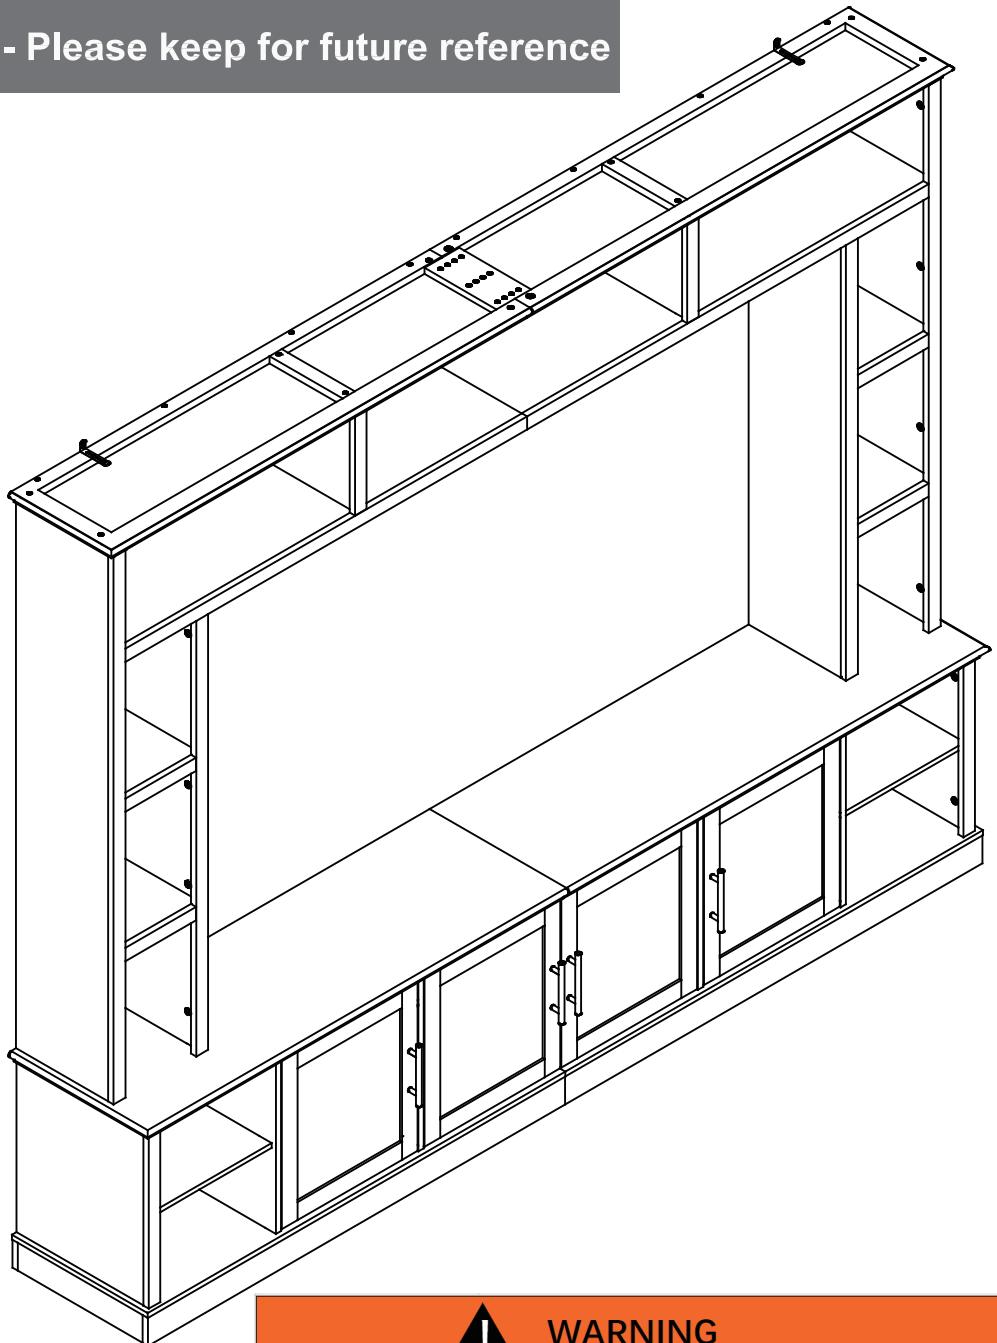

Dimensions

Width- 95.25inch

Depth- 15.75inch

Height- 76inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

 
 
 
 
 
 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | | |
|---|---|---|---|
|  Cam Bolt x 108+2 |  6*30mm Dowel x 96+2 |  Cam lock x 112+2 |  Allen key x 1 |
|  3.5*12mm Iron sheet x 2set |  x 4set |  4*30mm Screw x 16+1 |  3.5*14mm Iron sheet x 2set |
|  4*20mm Screw x 24+2 |  Anti-tipping Device x2 |  4*40mm Screw x 35+2 |  6*40mm Dowel x 12+1 |
|  x 3set |  x 2set |  Shelf support pin x 12+1 |  4*20mm Handle x 4set |
|  x 4set |  x 20set |  Foot pad x12 |  3.5*14mm Hinge x 8set |
|  Perfect fit x 60 | | | |

 Tools required Not Included



Phillips screwdriver
(medium & large)

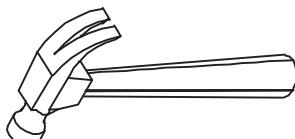


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

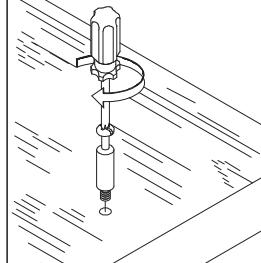

Step 2

Push the male camlock into the entry hole.

2

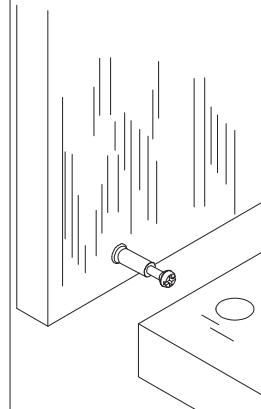


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

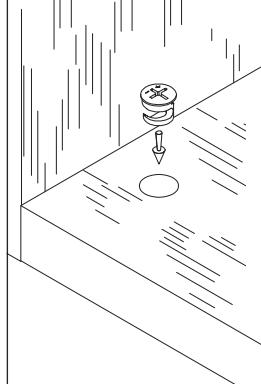


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

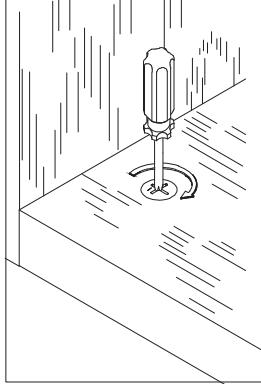


Assembly Instructions

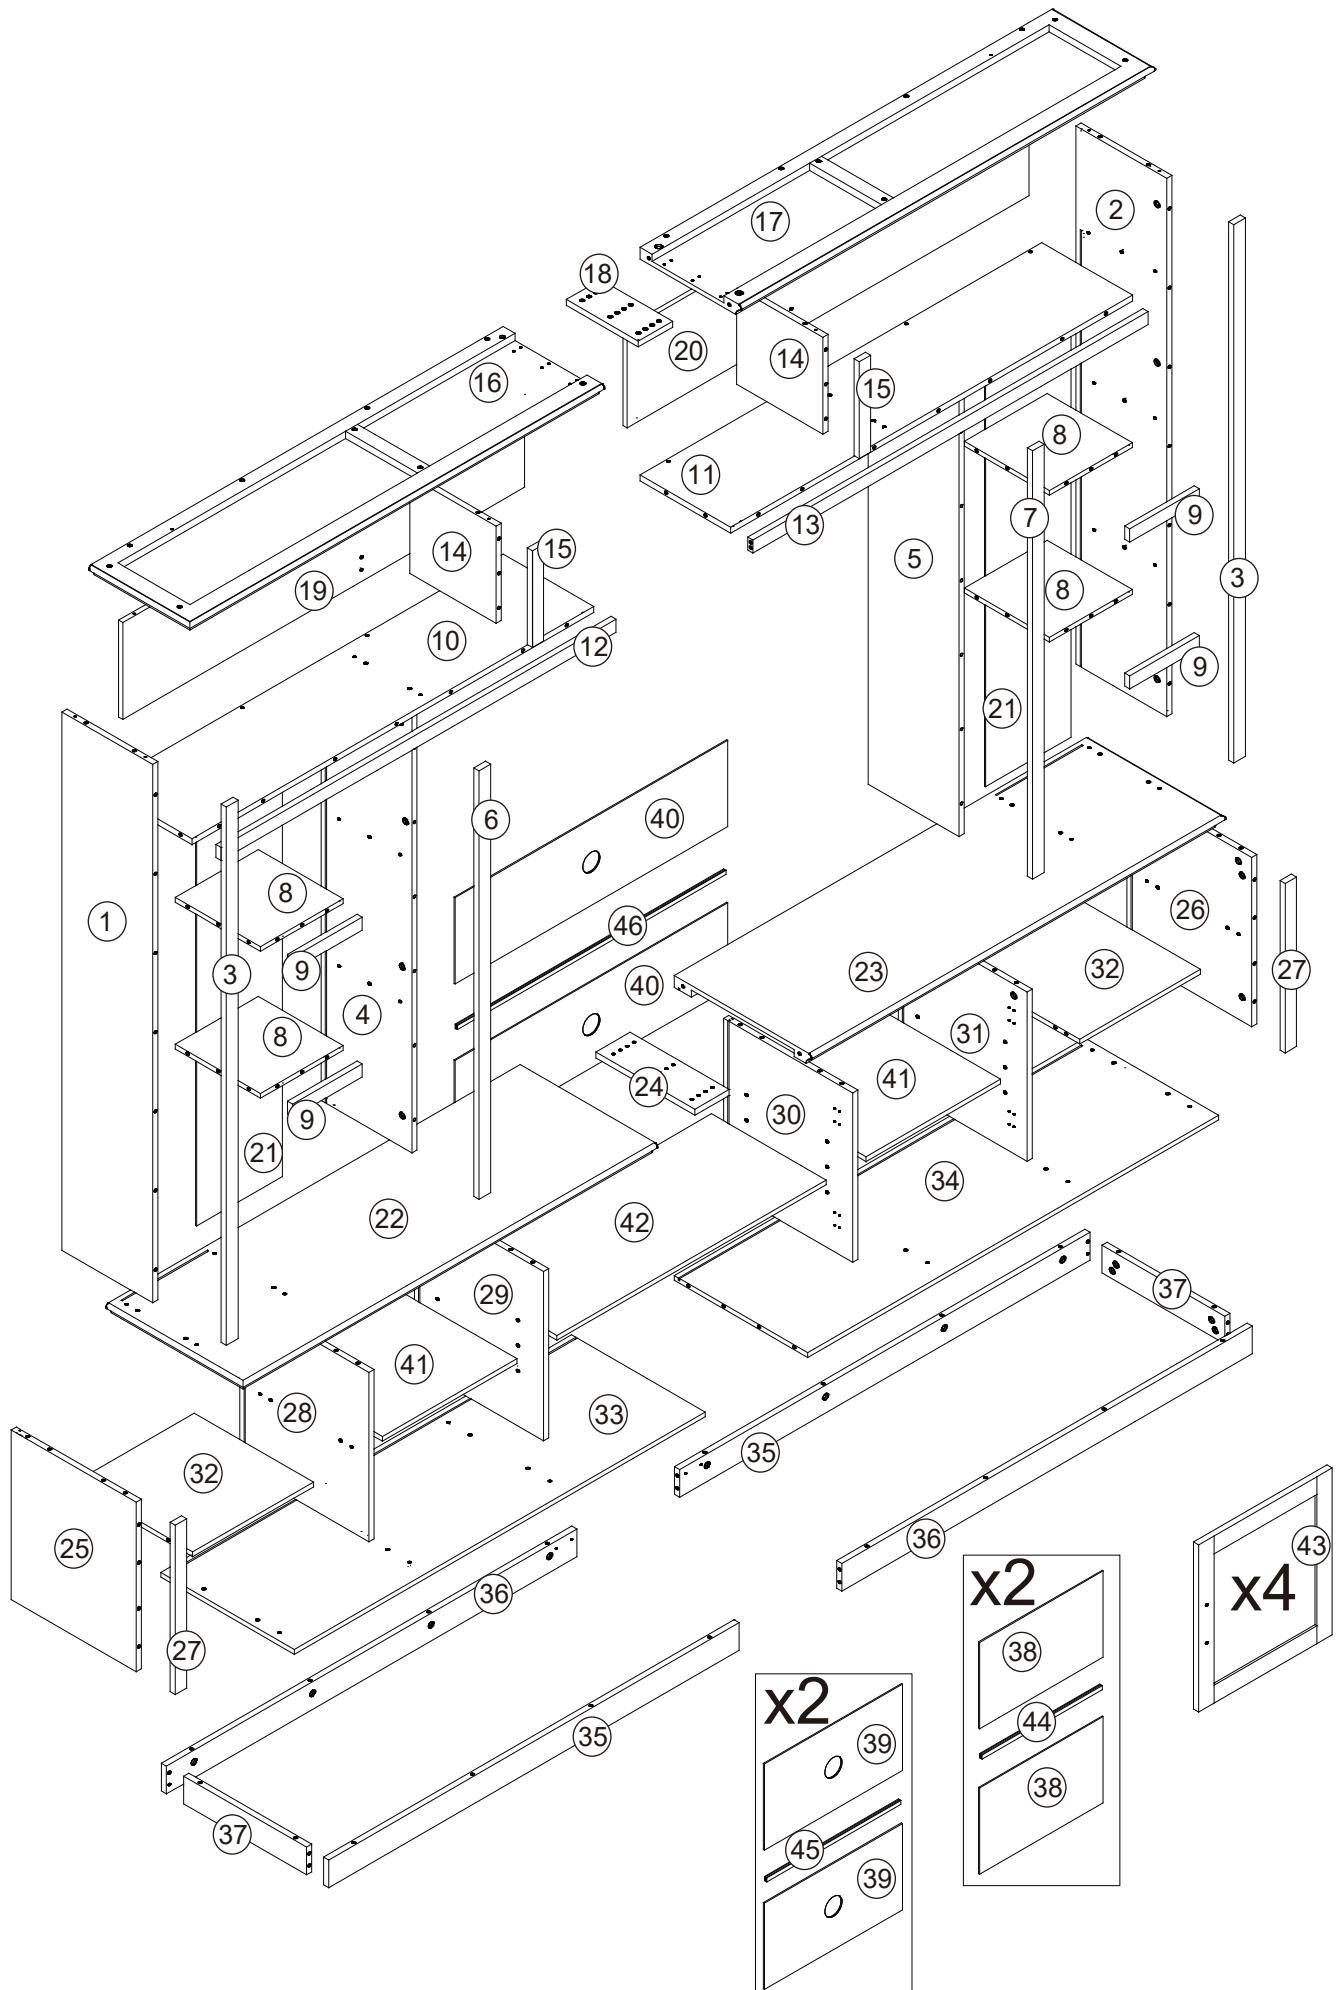

PART LIST

This product comes in 2 box.


N710P390117

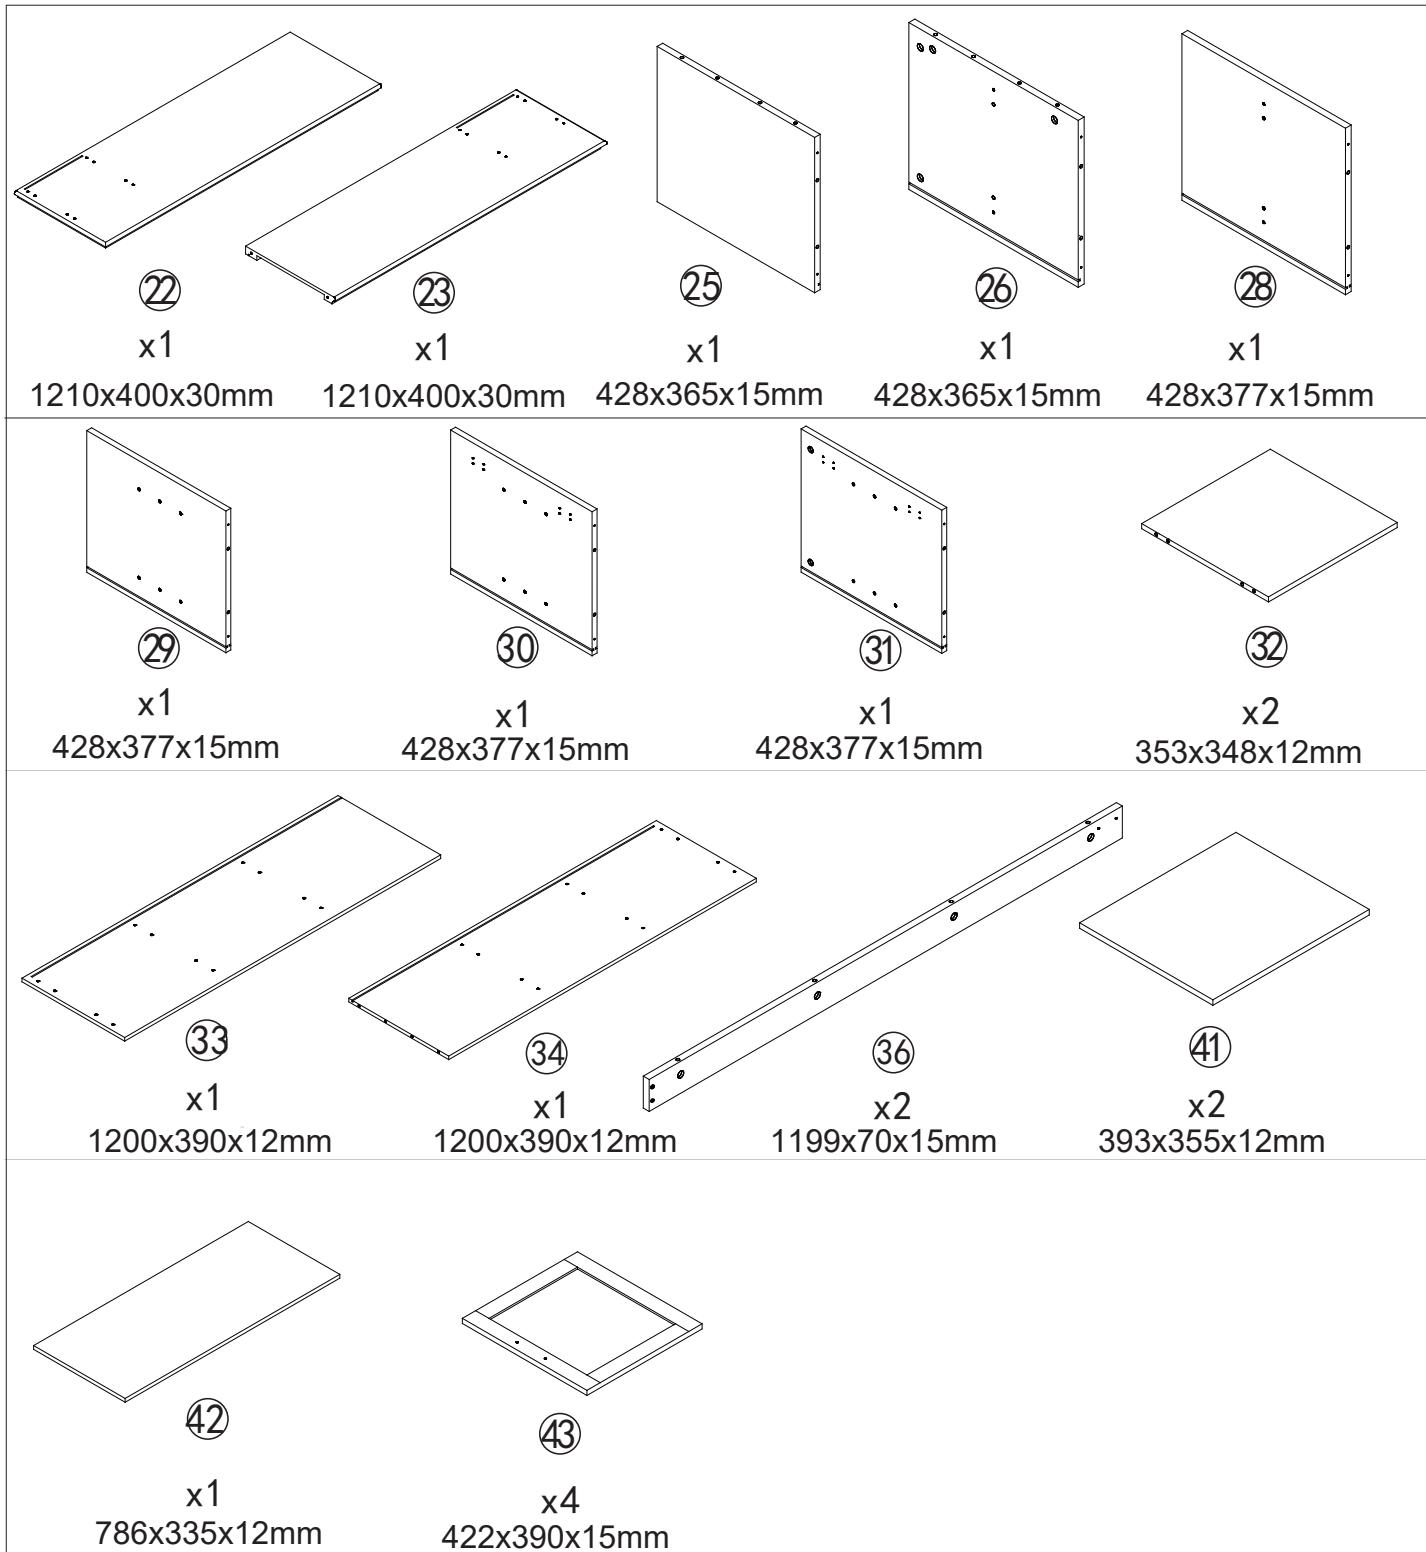

PART LIST

This product comes in 2 box.


N710P390118

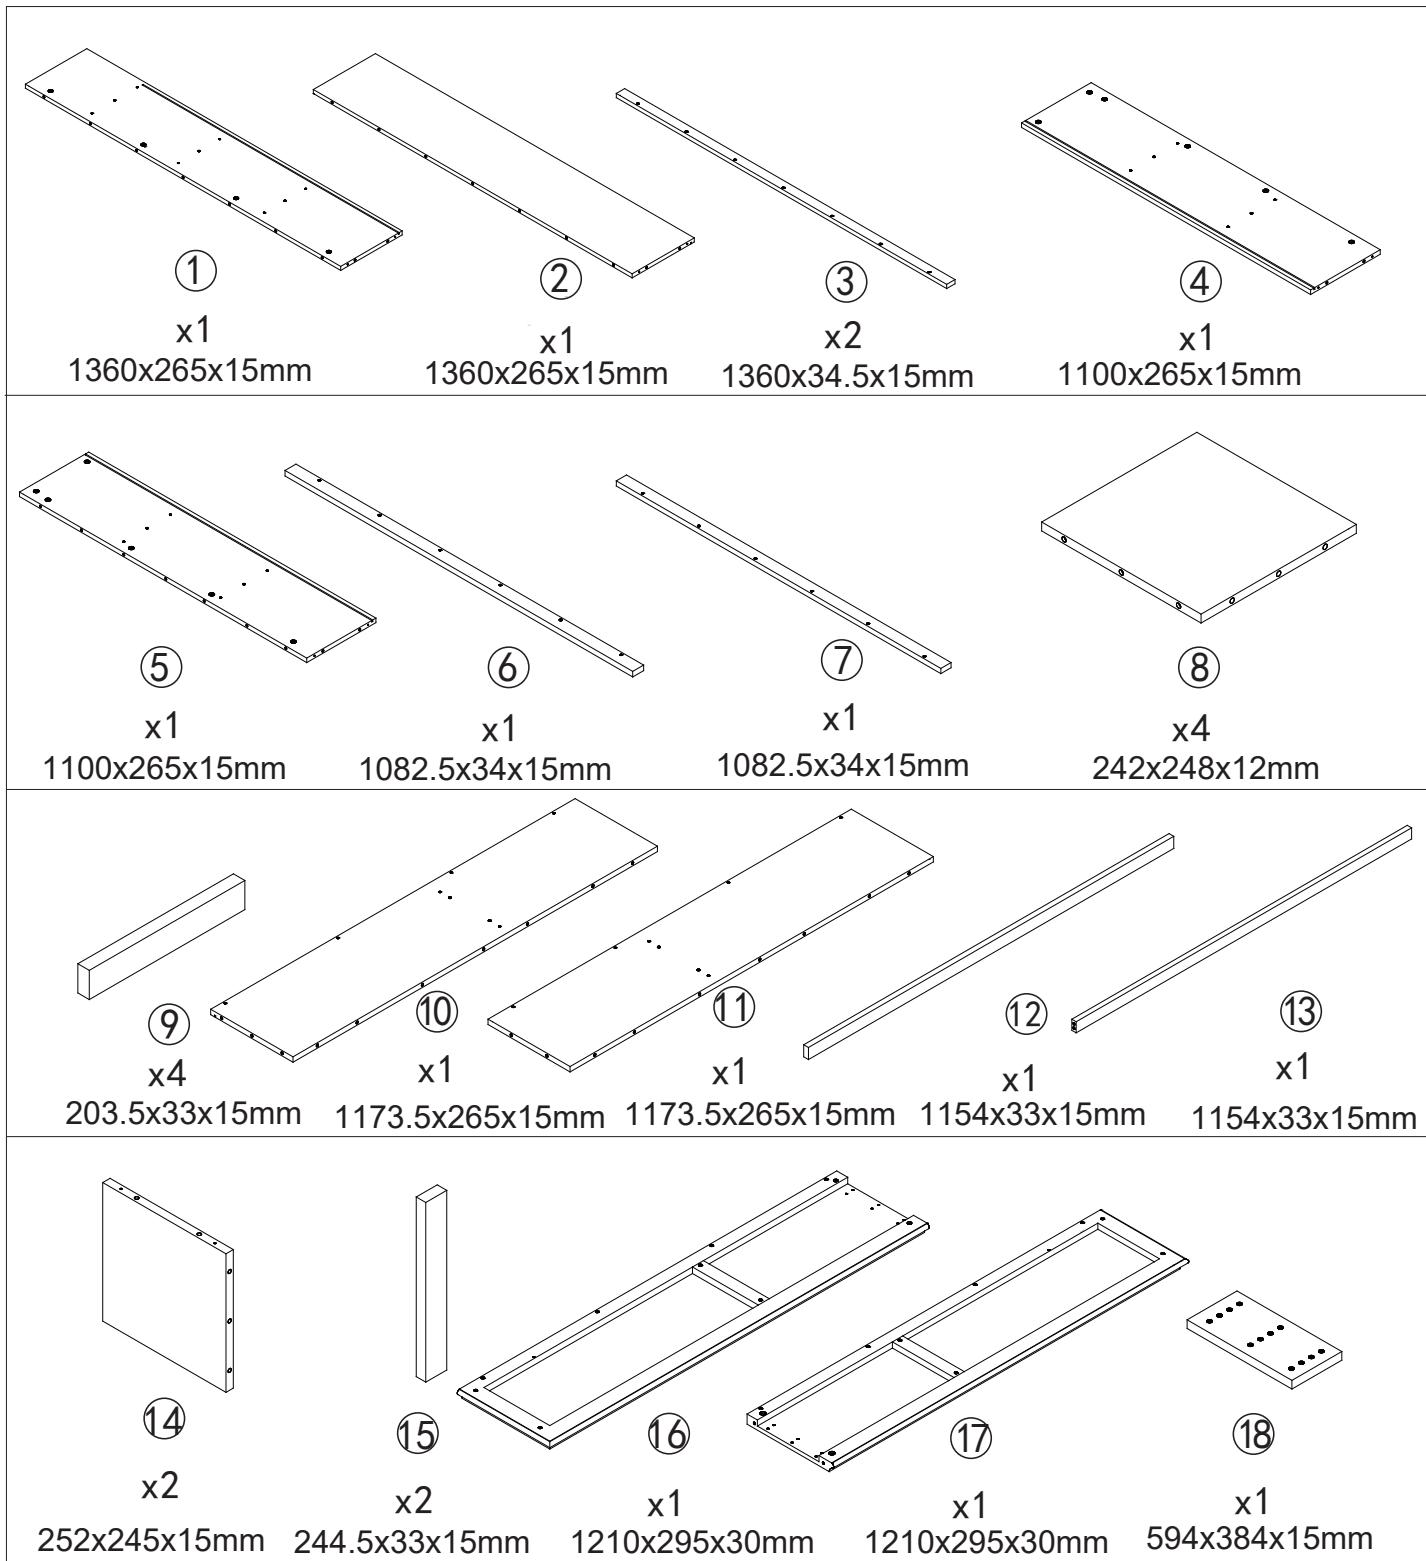

PART LIST




This product comes in 2 box.

N710P390118

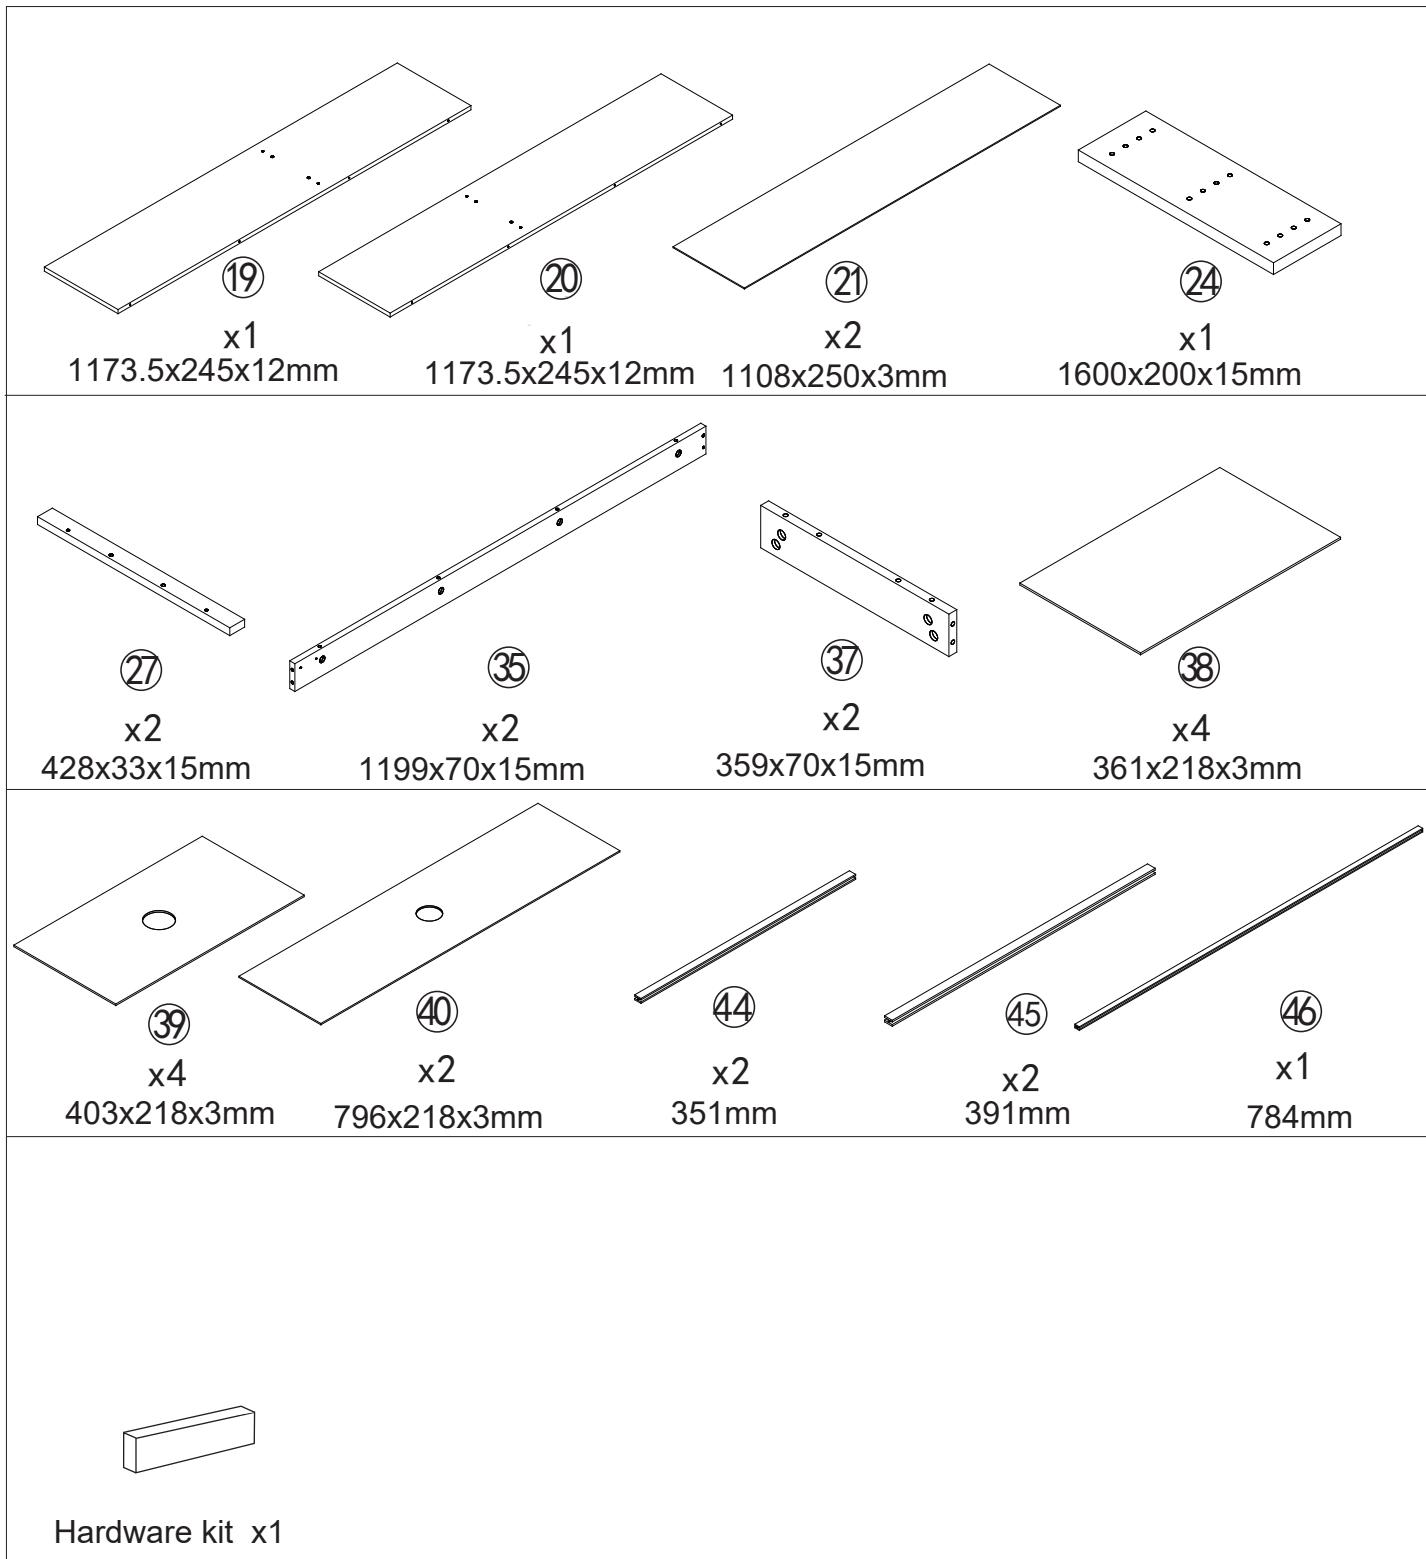

Assembly Instructions



Step 1

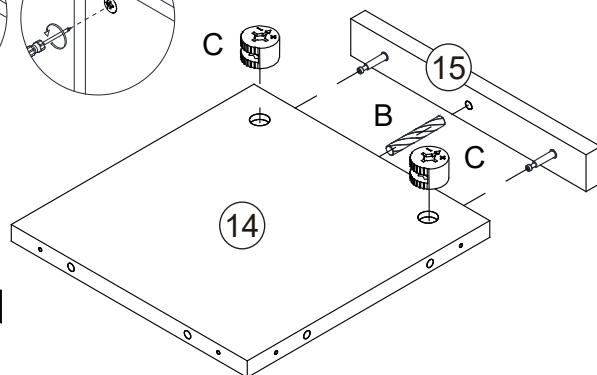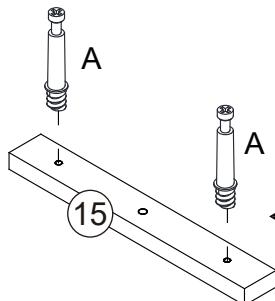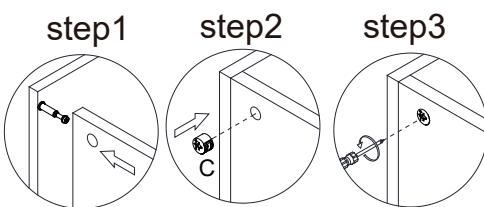

x2



| | |
|-----|------------------|
| (C) | Cam lock x 4 |
| (B) | 6*30mm Dowel x 2 |
| (A) | Cam Bolt x 4 |

Step 2

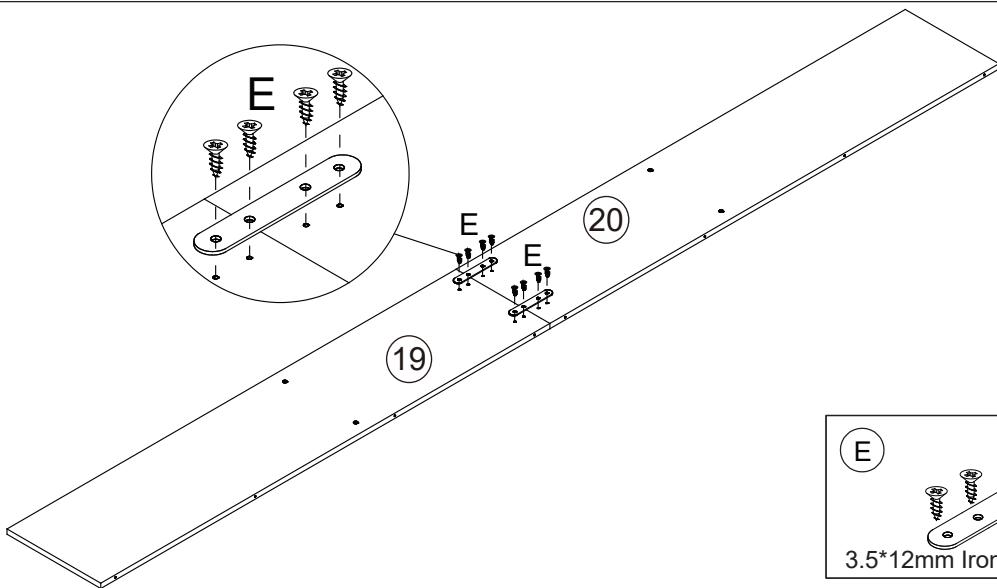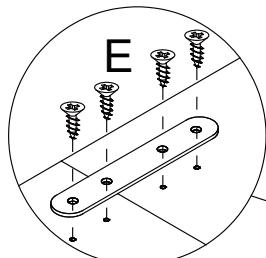

| | |
|-----|----------------------------|
| (E) | 3.5*12mm Iron sheet x 2set |
|-----|----------------------------|






Step 3

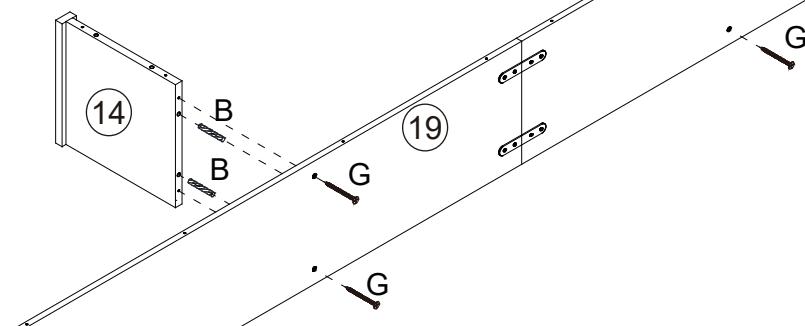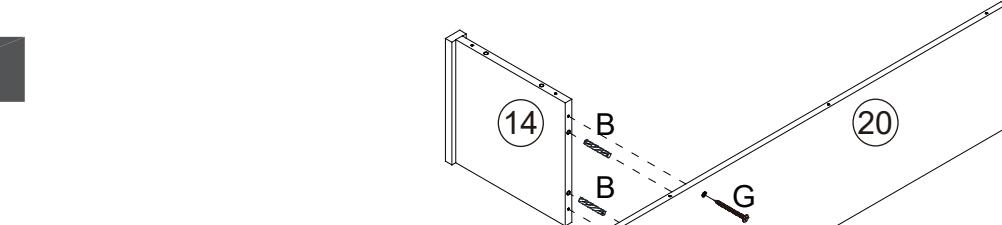


| | |
|-----|------------------|
| (B) | 6*30mm Dowel x 4 |
| (G) | 4*30mm Screw x 4 |

Assembly Instructions

Step 4

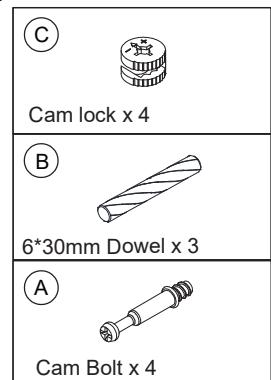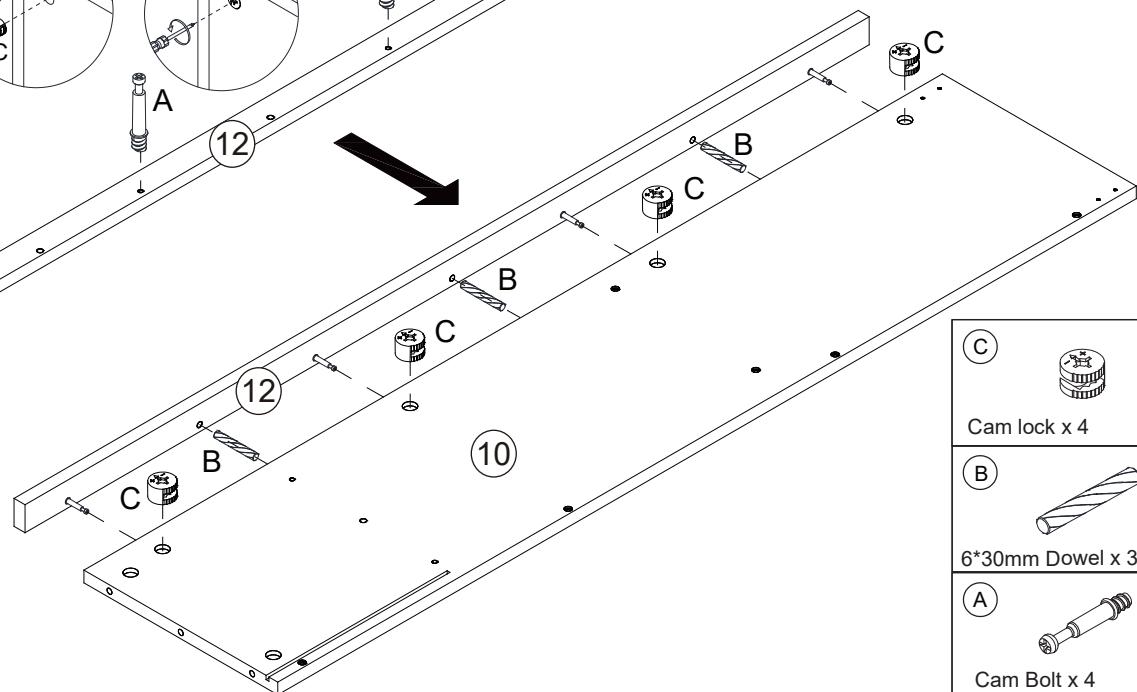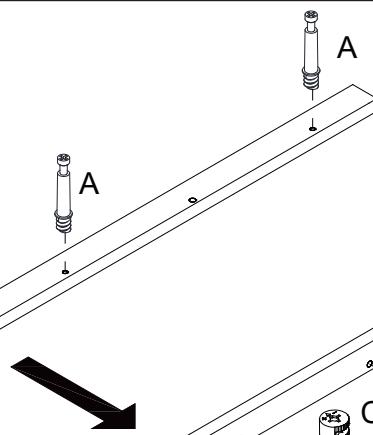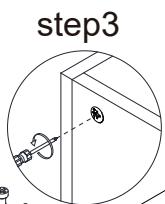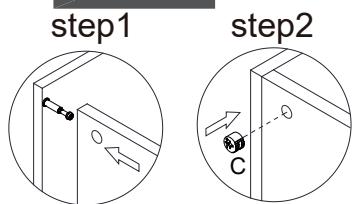


Step 5

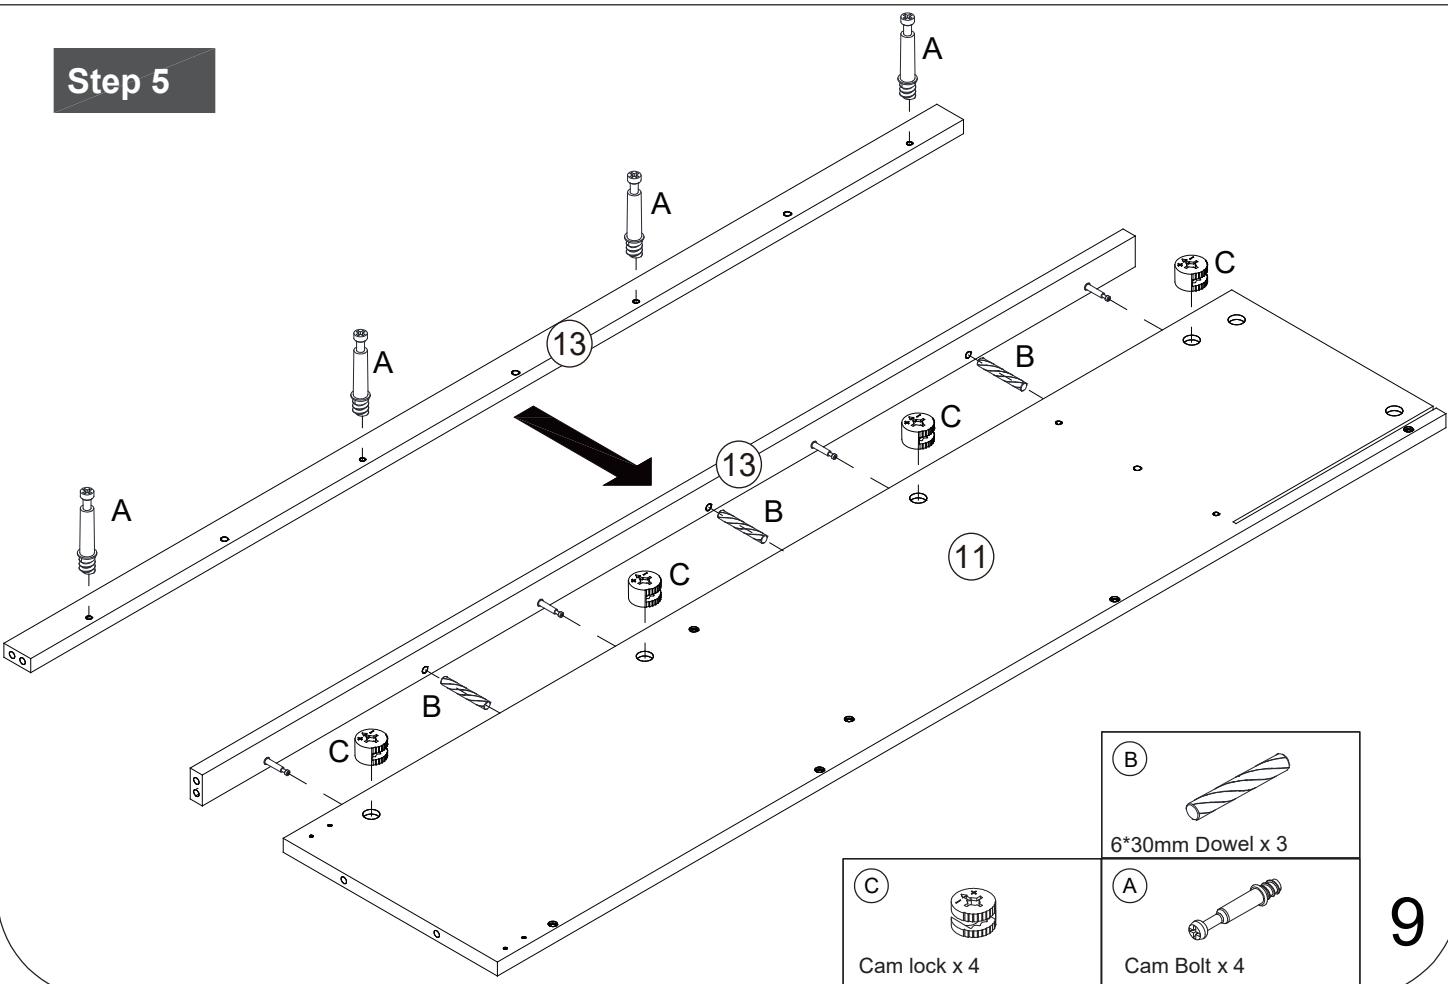


Assembly Instructions



Step 6

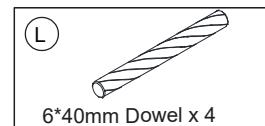

6*40mm Dowel x 4

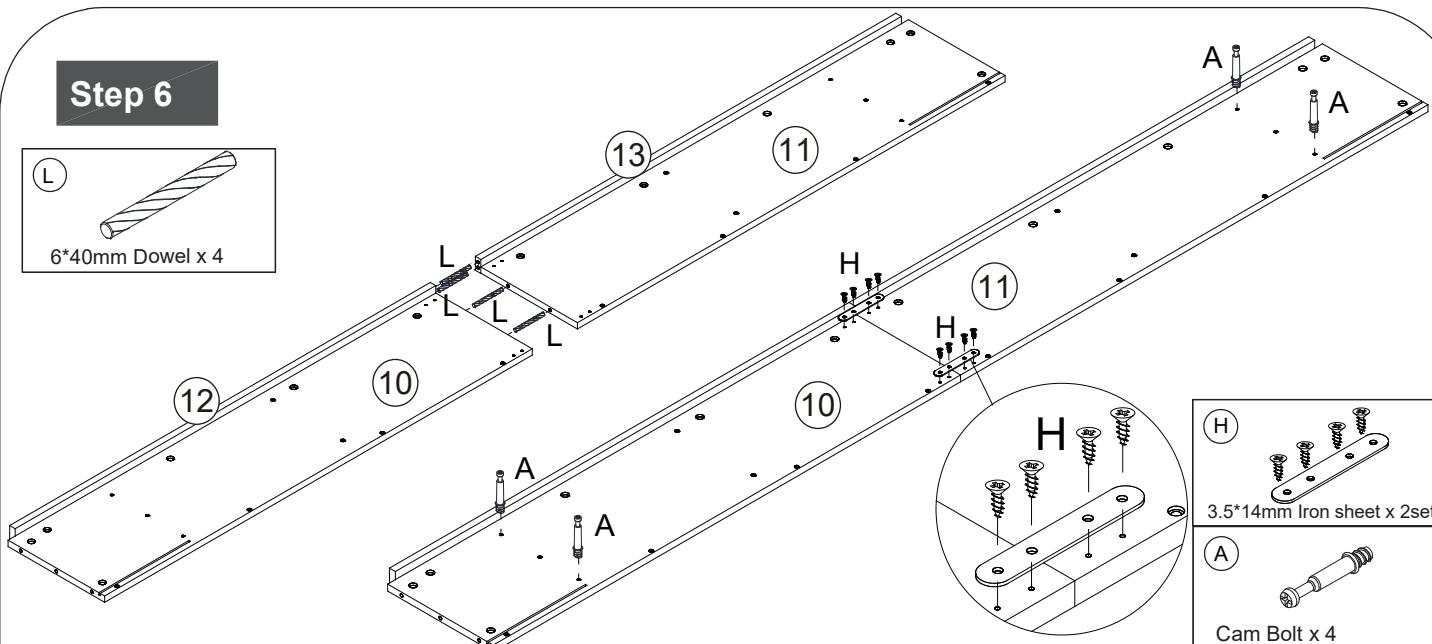


Step 7

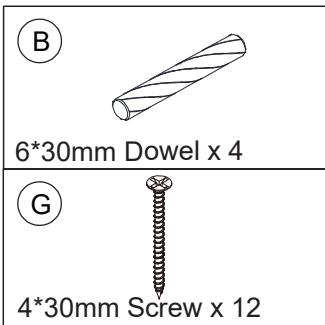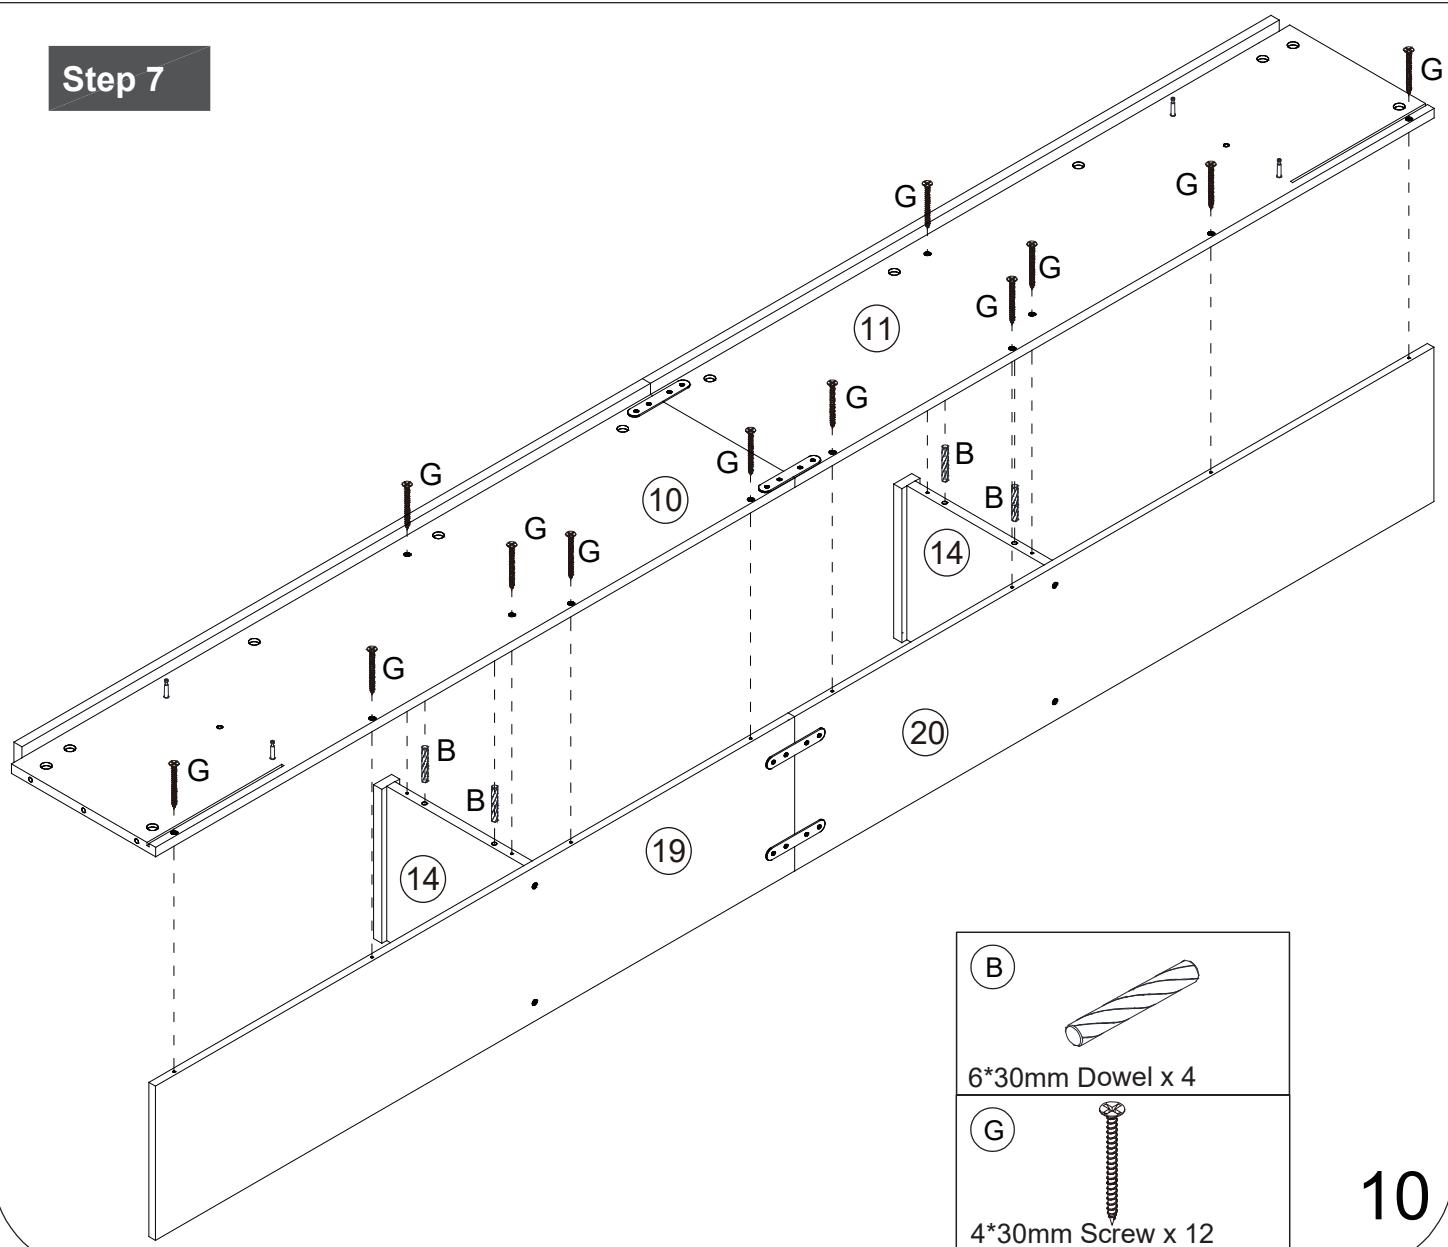


Assembly Instructions


Step 8

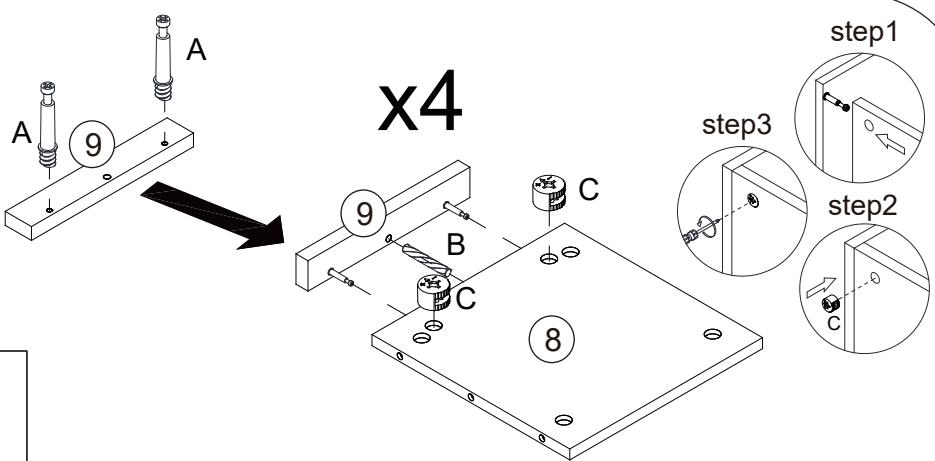

Step 9

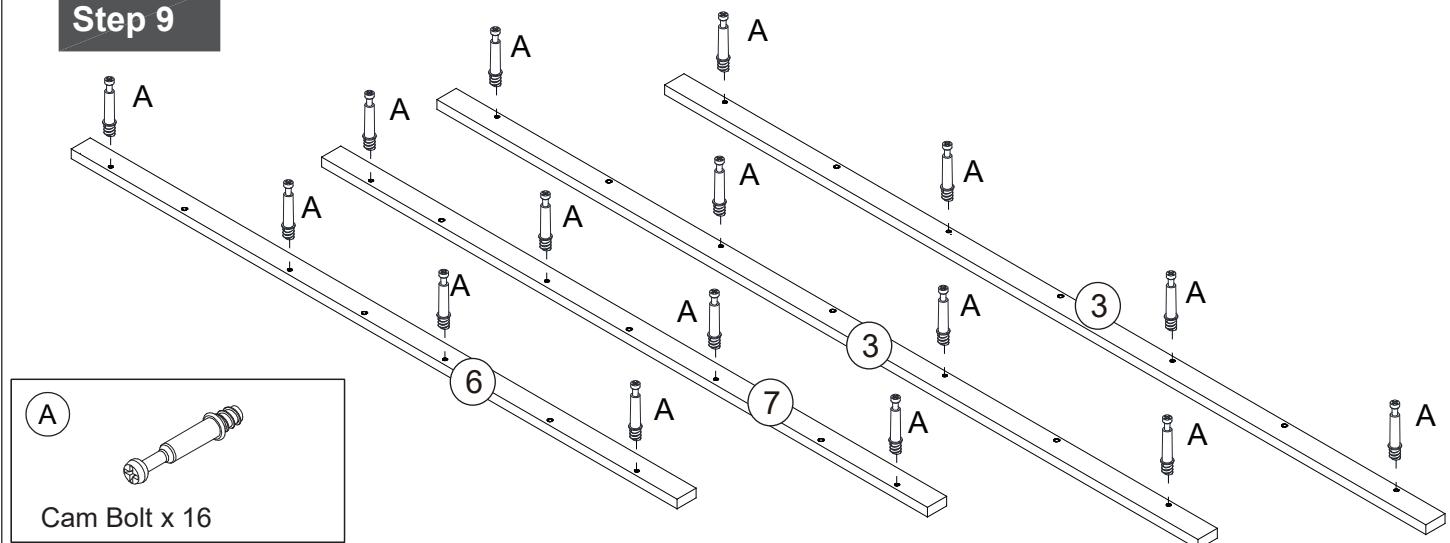


Step 10

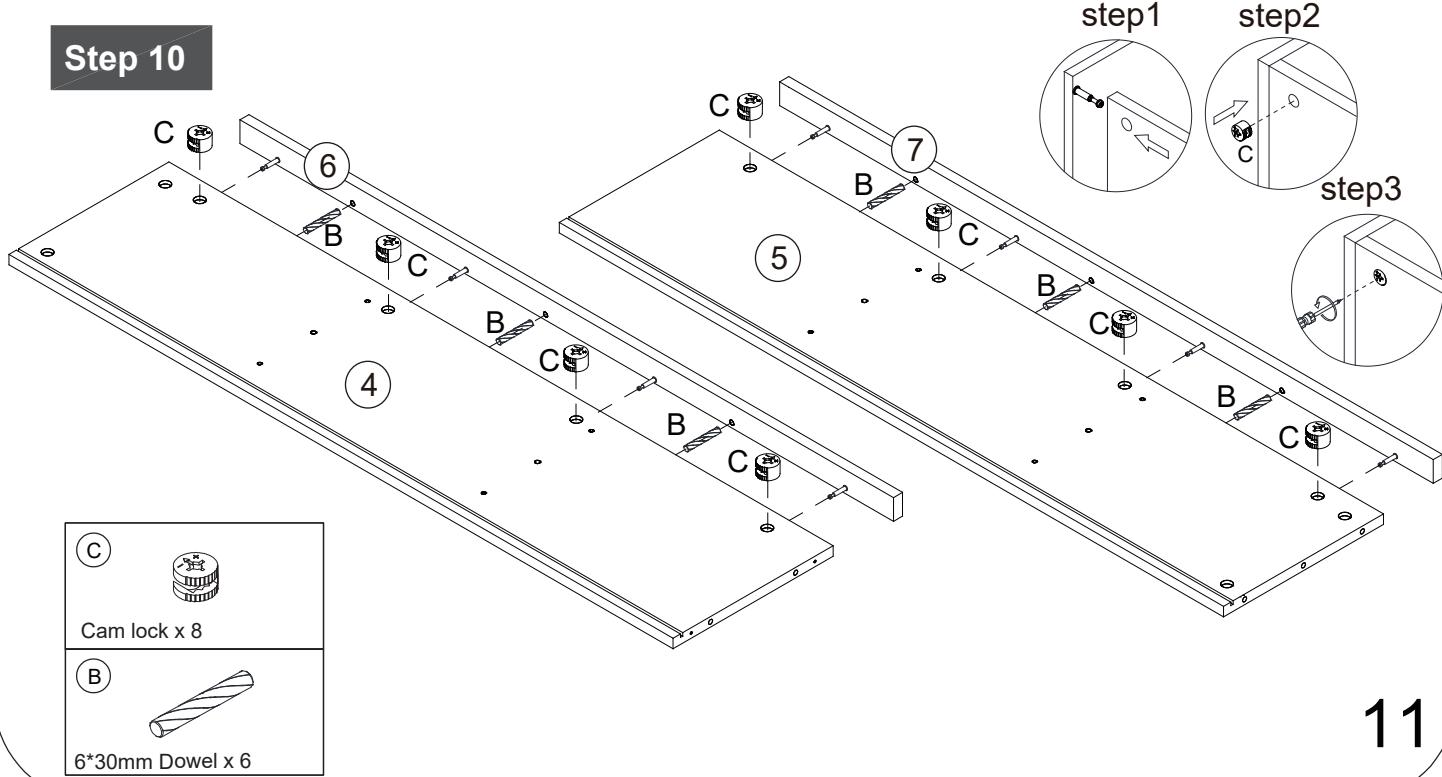


Assembly Instructions


Step 11

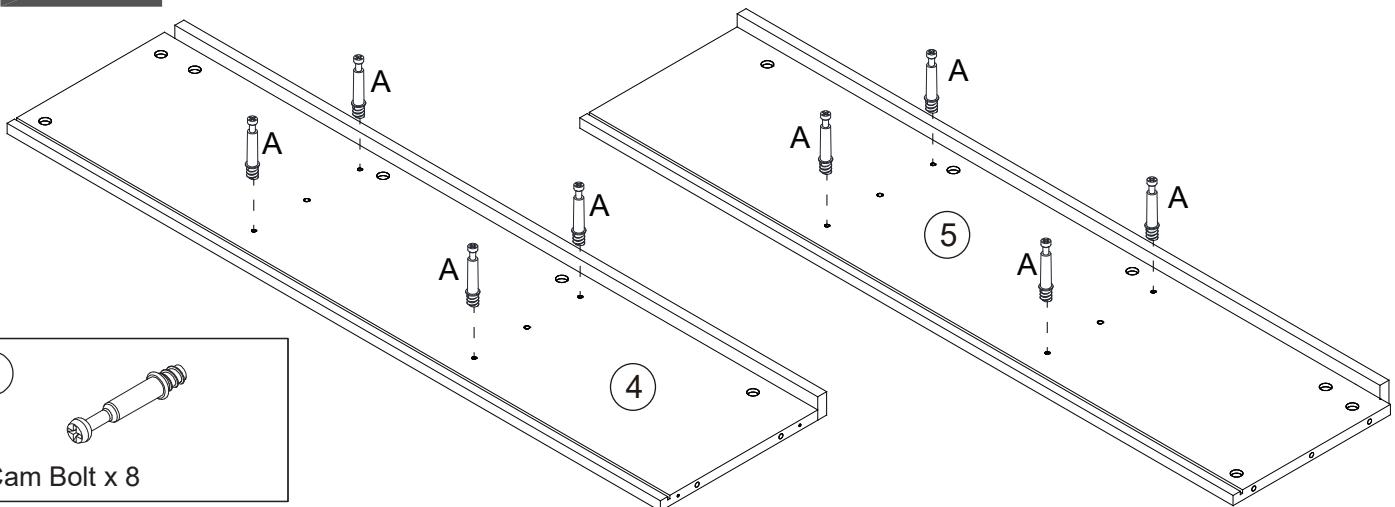

Step 12

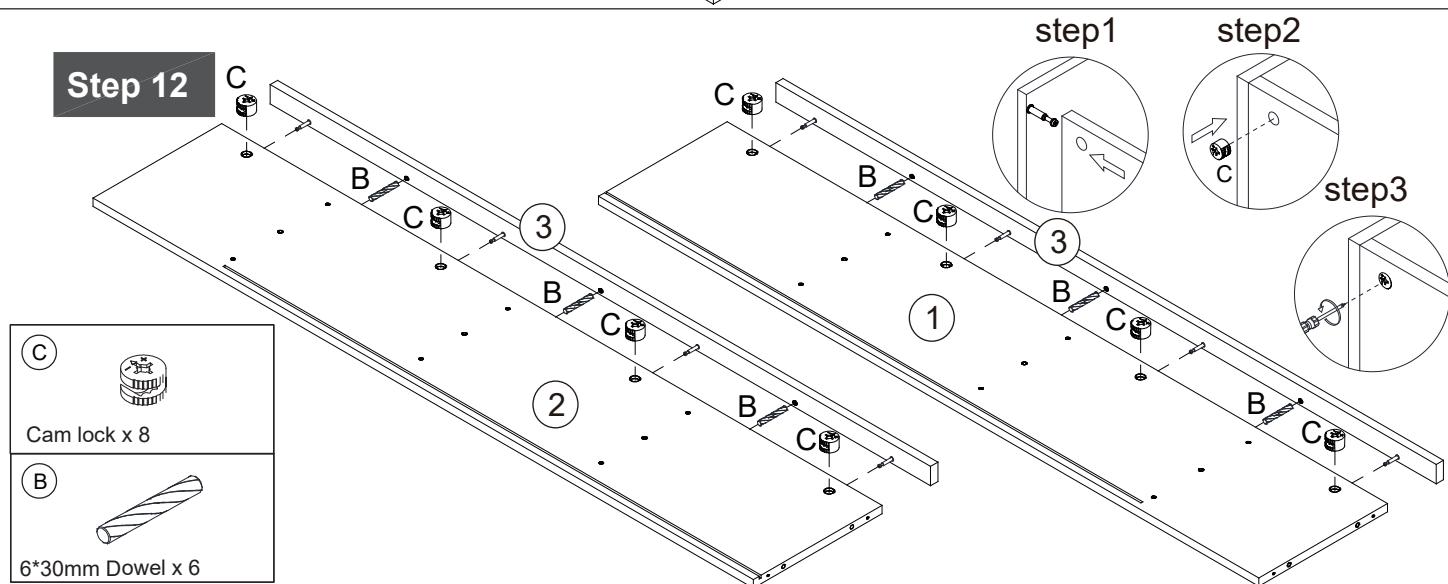


Step 13

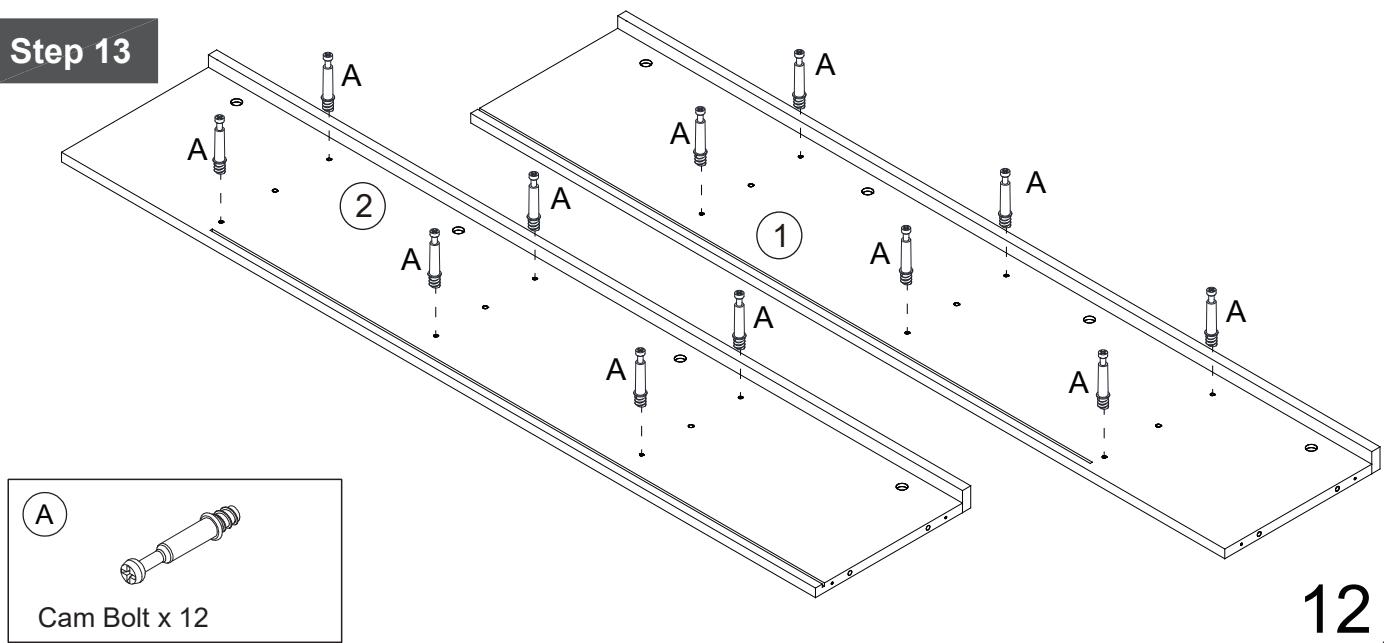


Assembly Instructions

Step 14

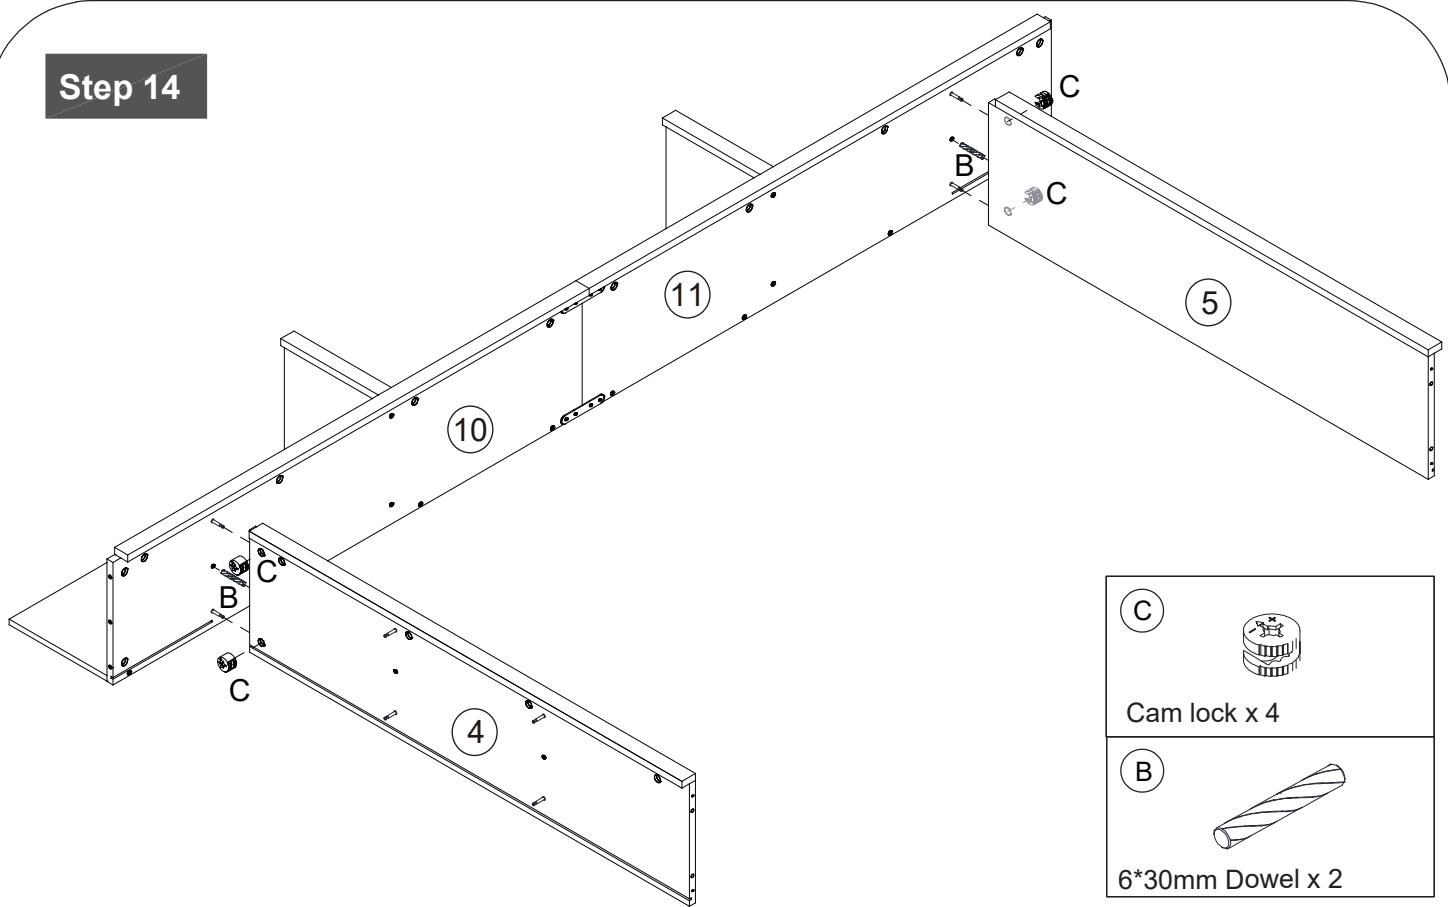


Step 15

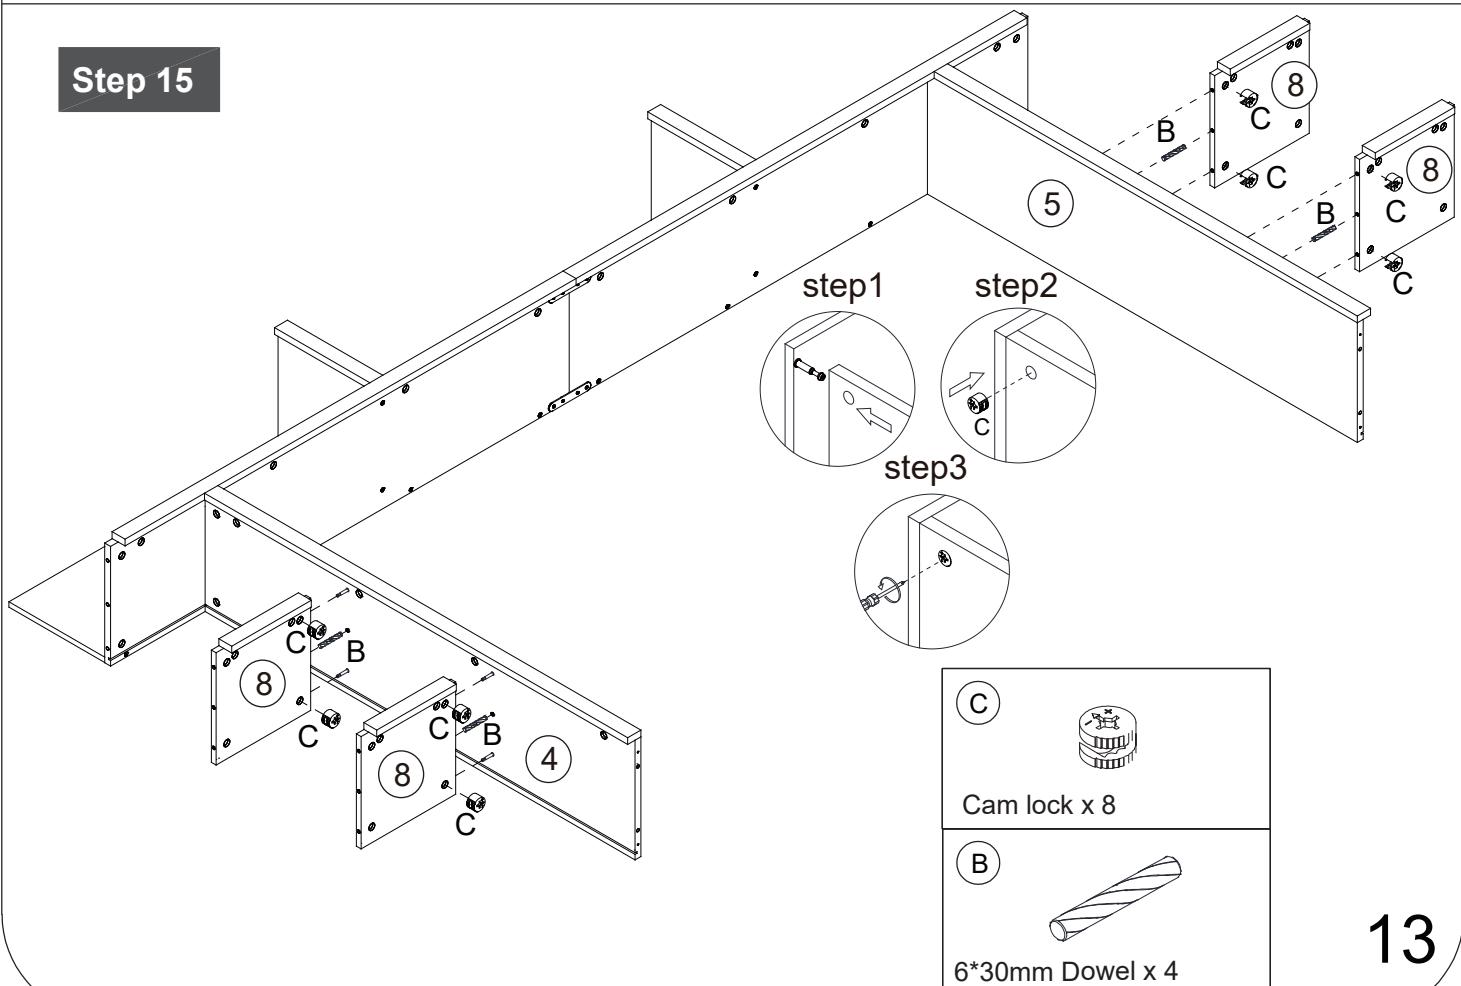


Assembly Instructions

Step 16

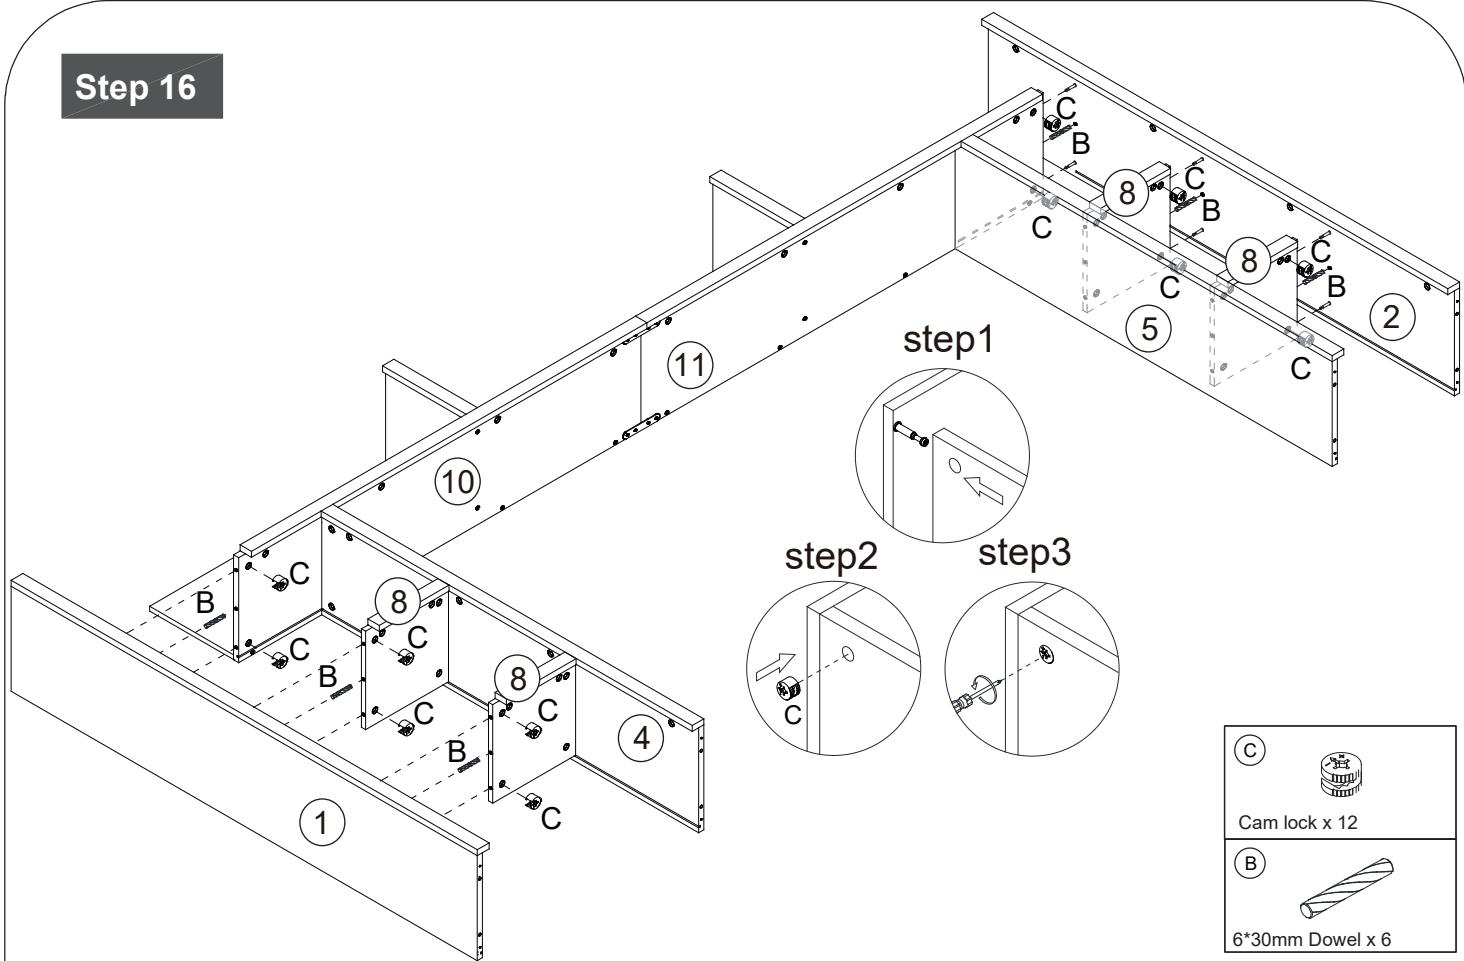


Step 17

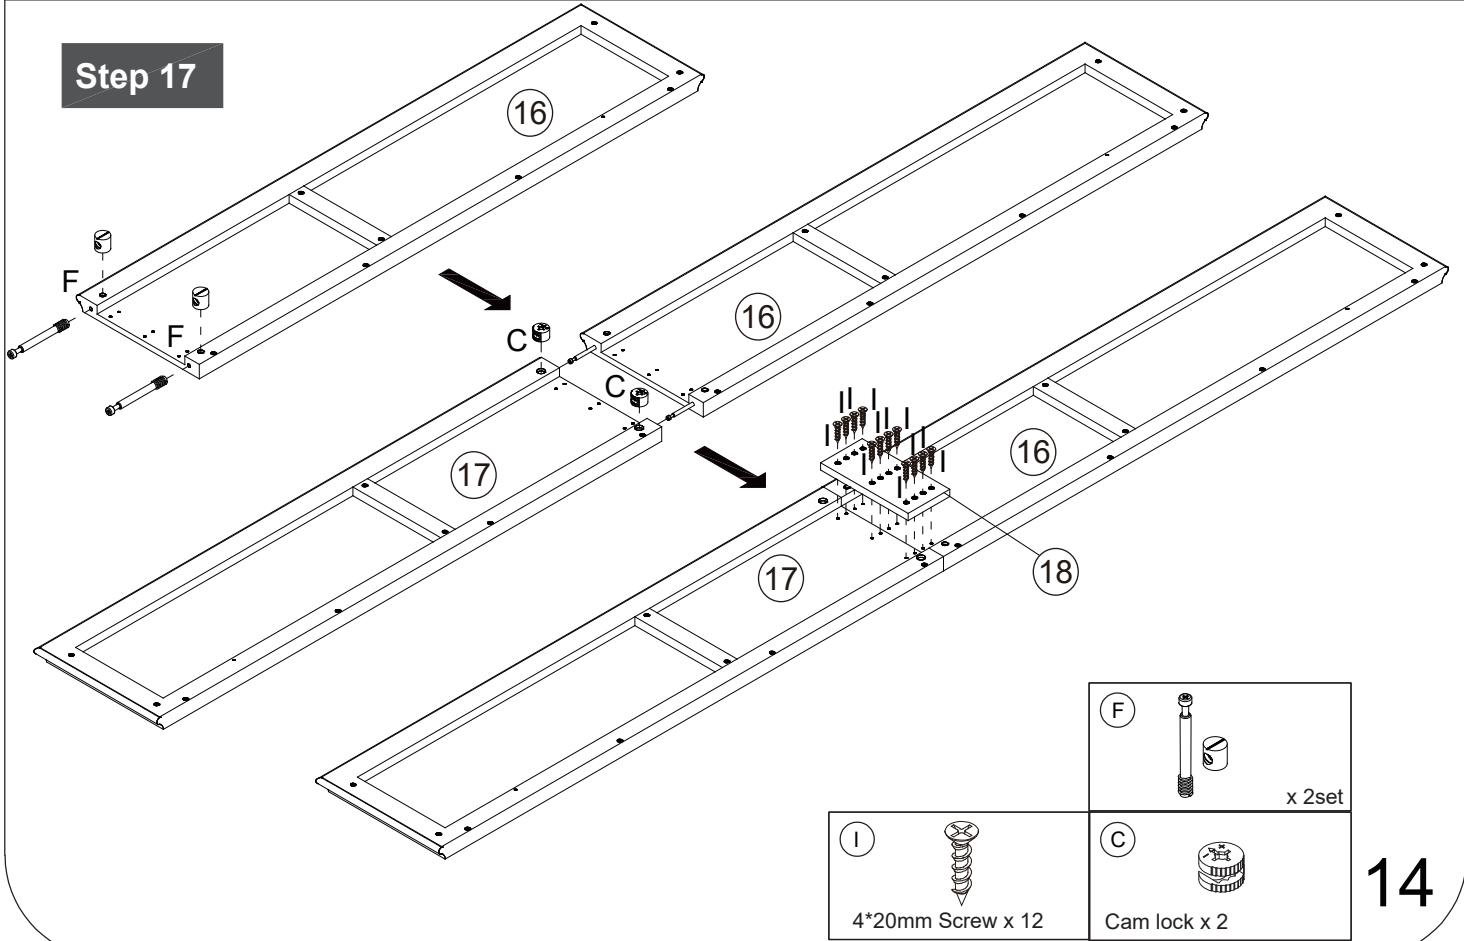


Assembly Instructions

Step 18

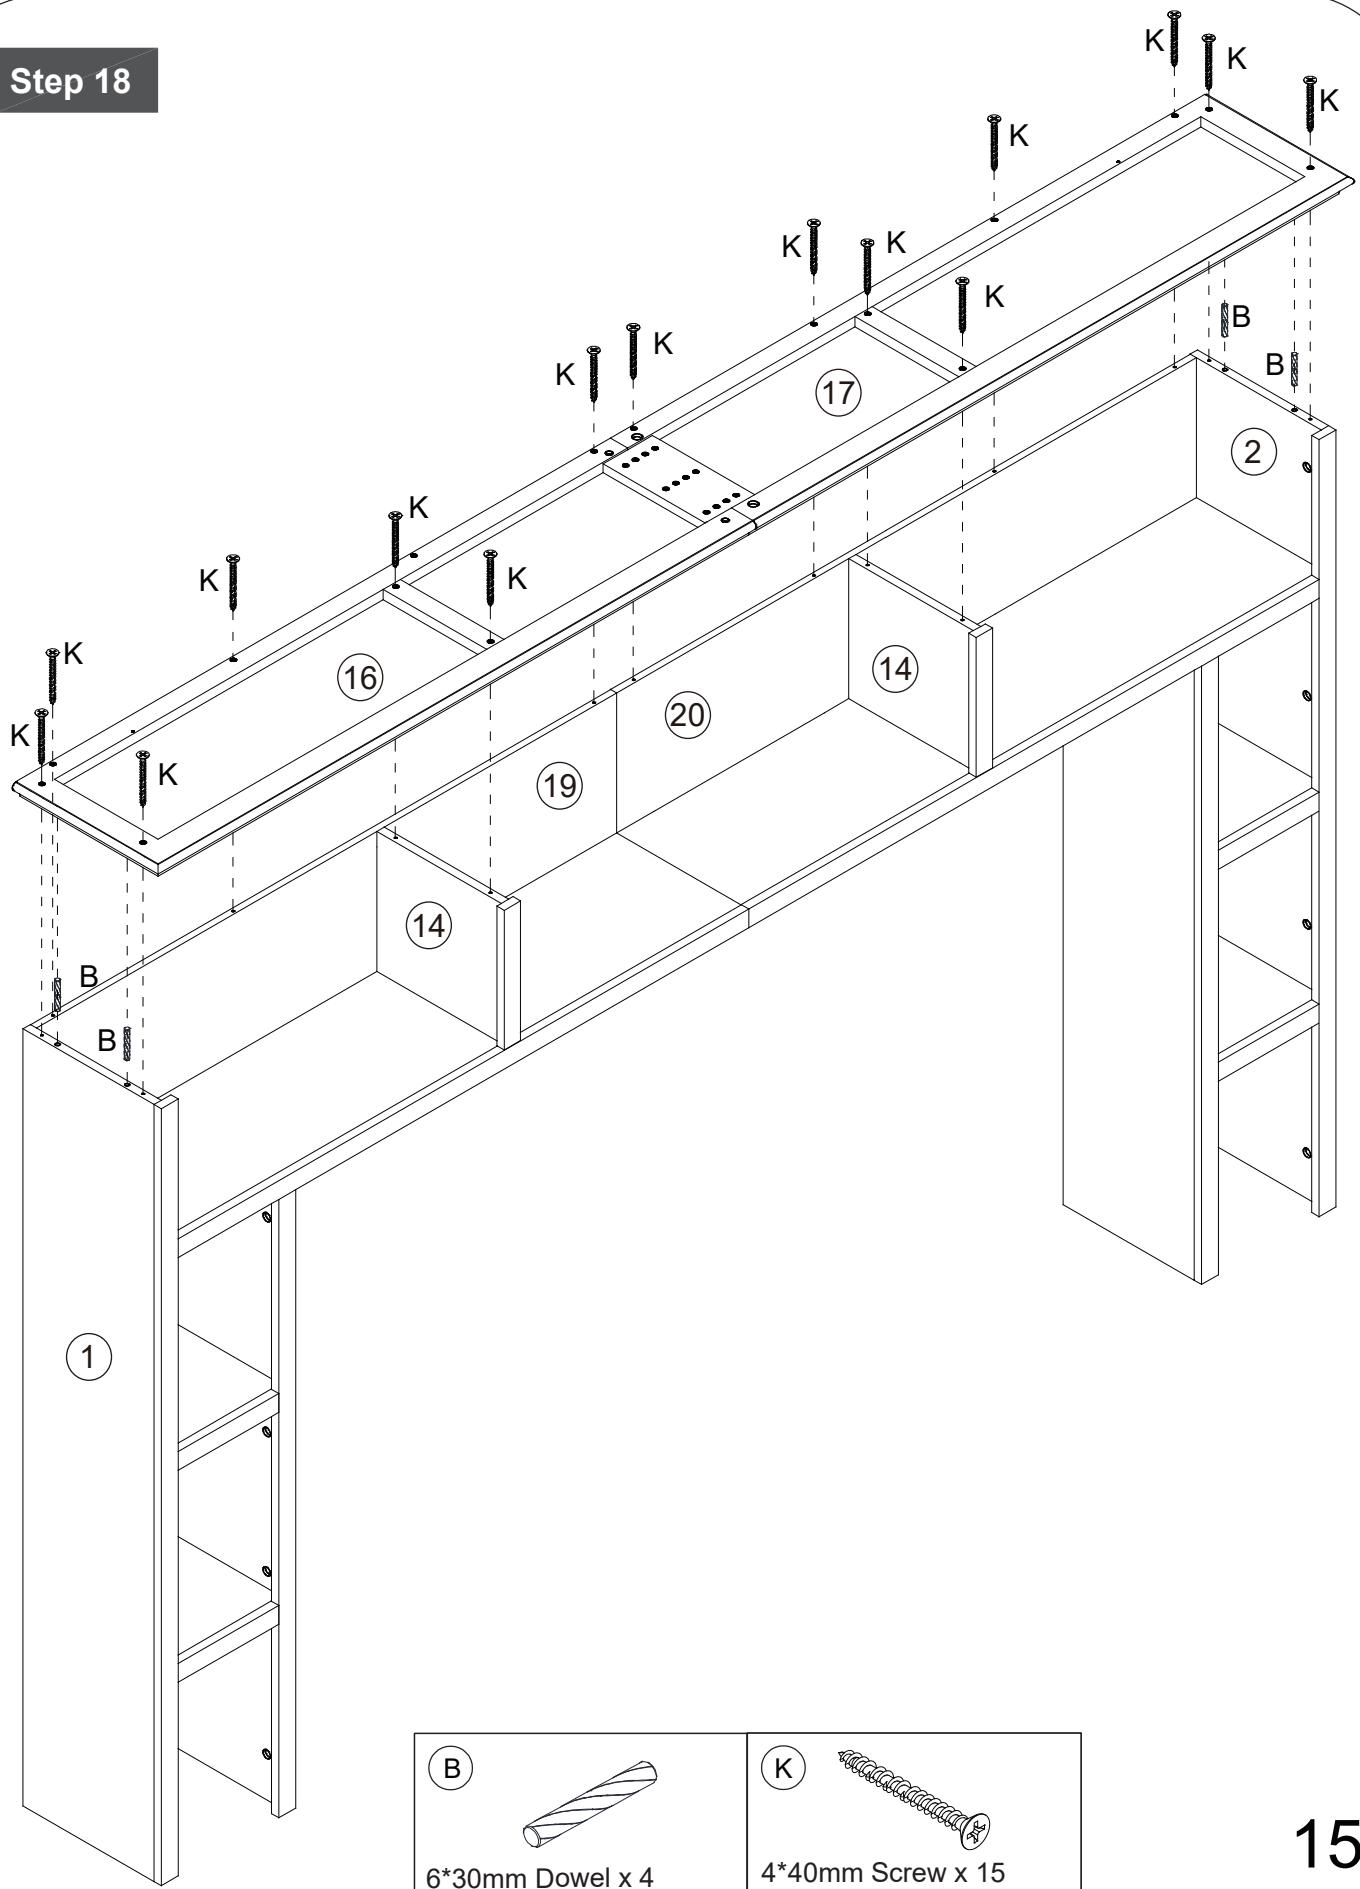


Assembly Instructions

Step 19

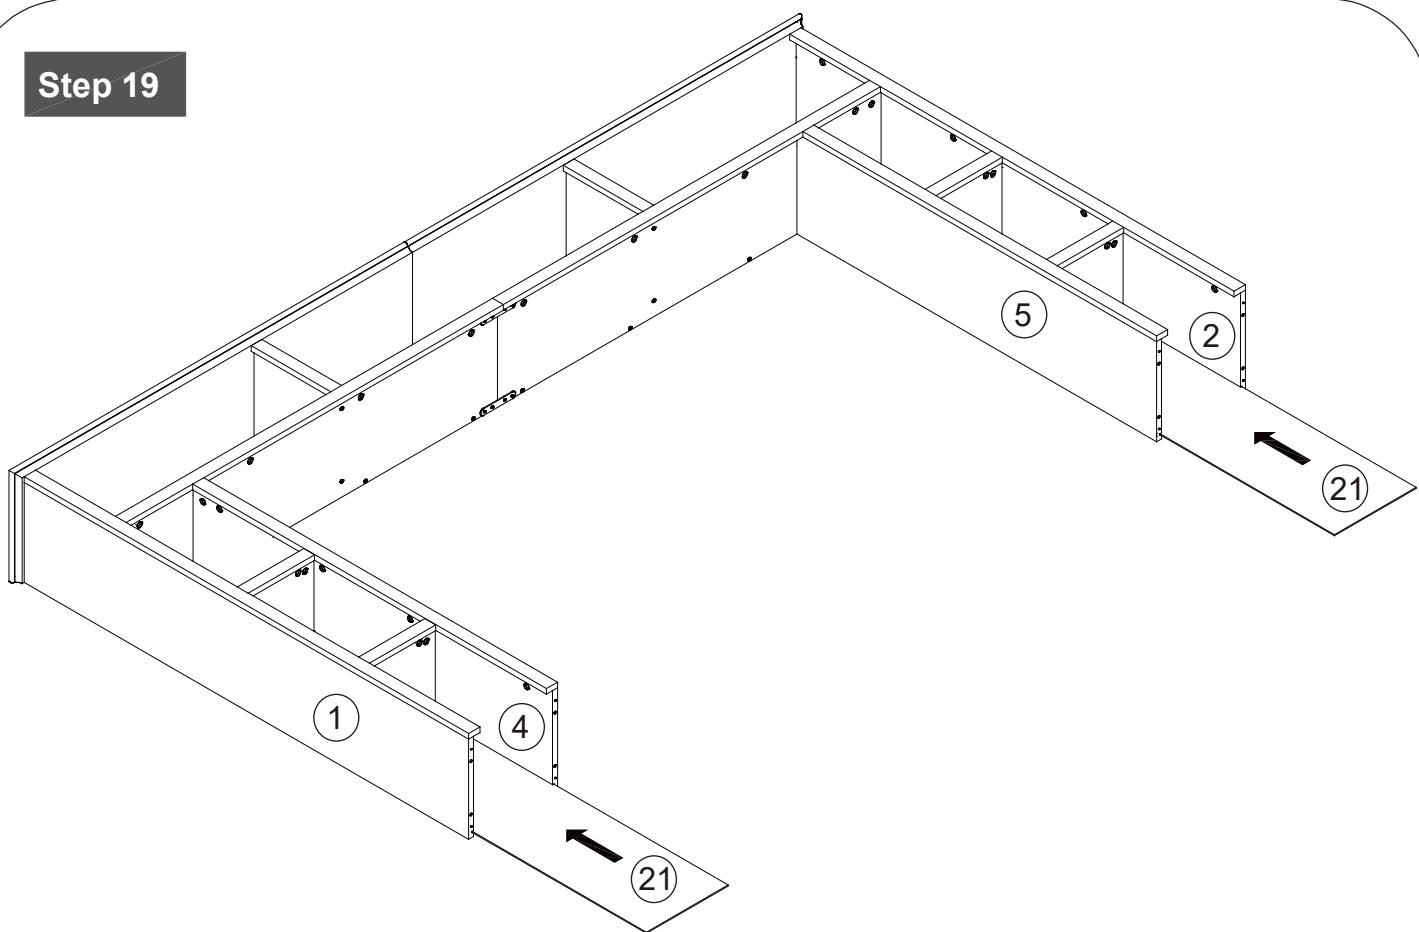


Step 20

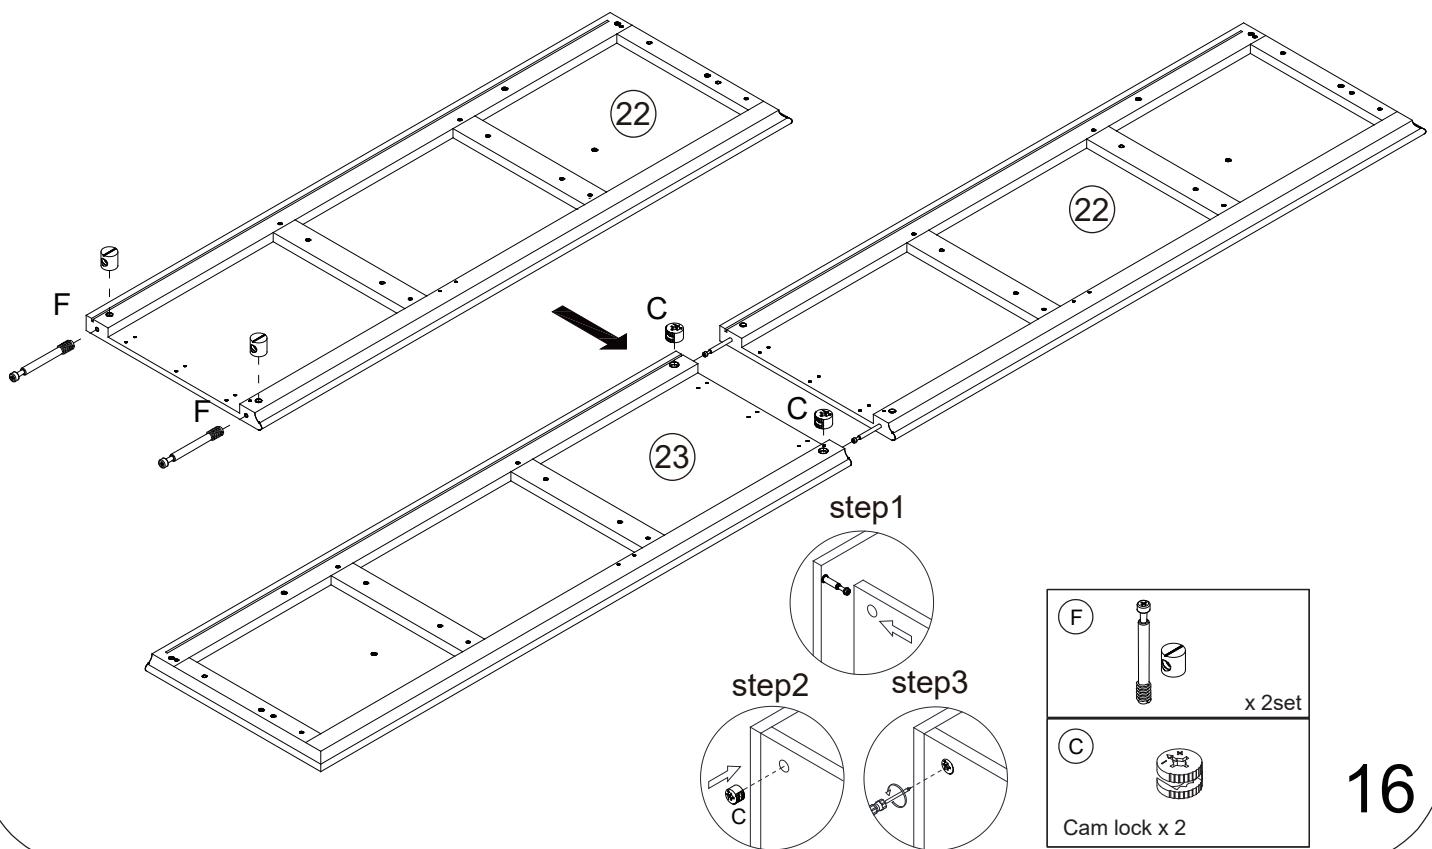


Assembly Instructions

Step 21

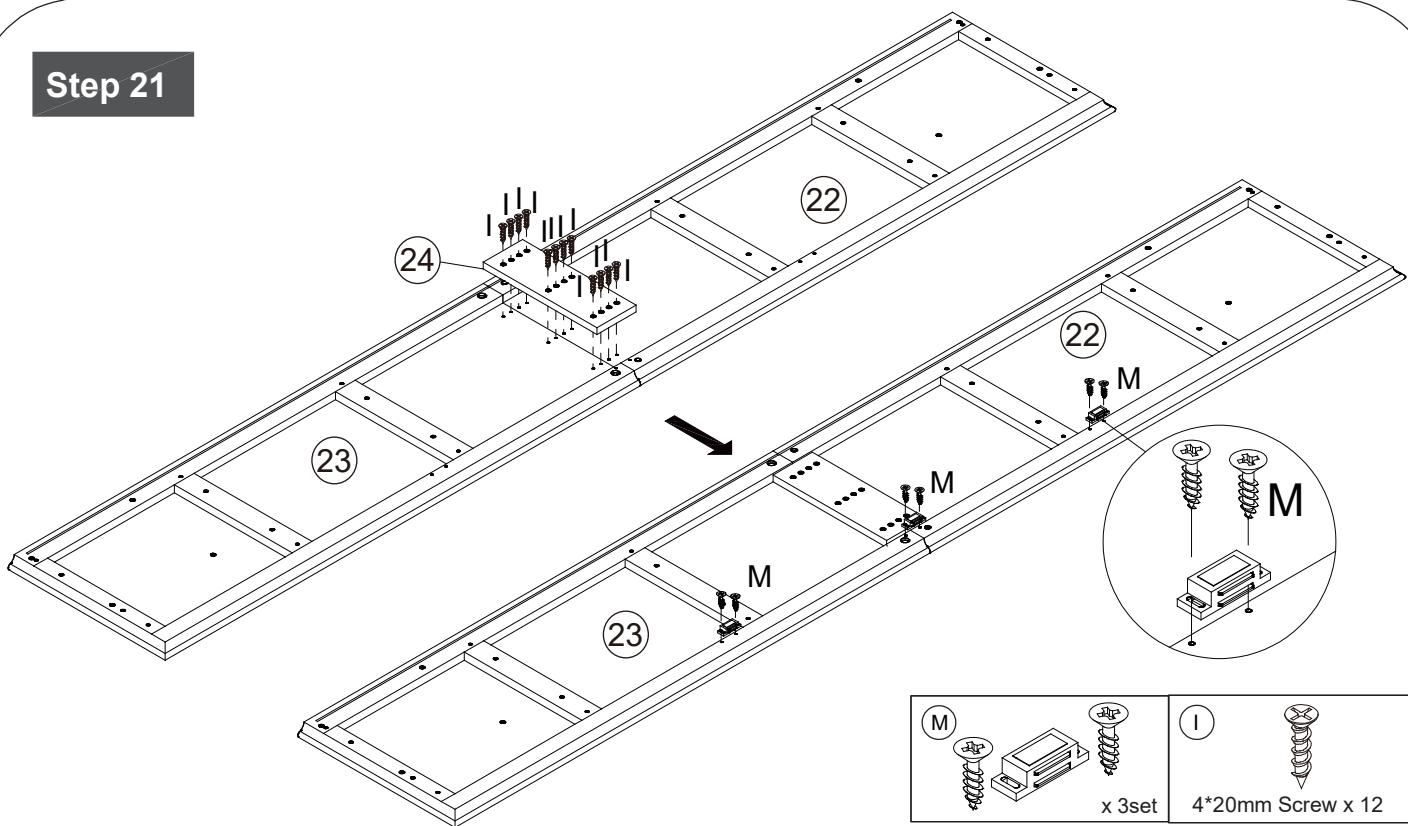


Step 22

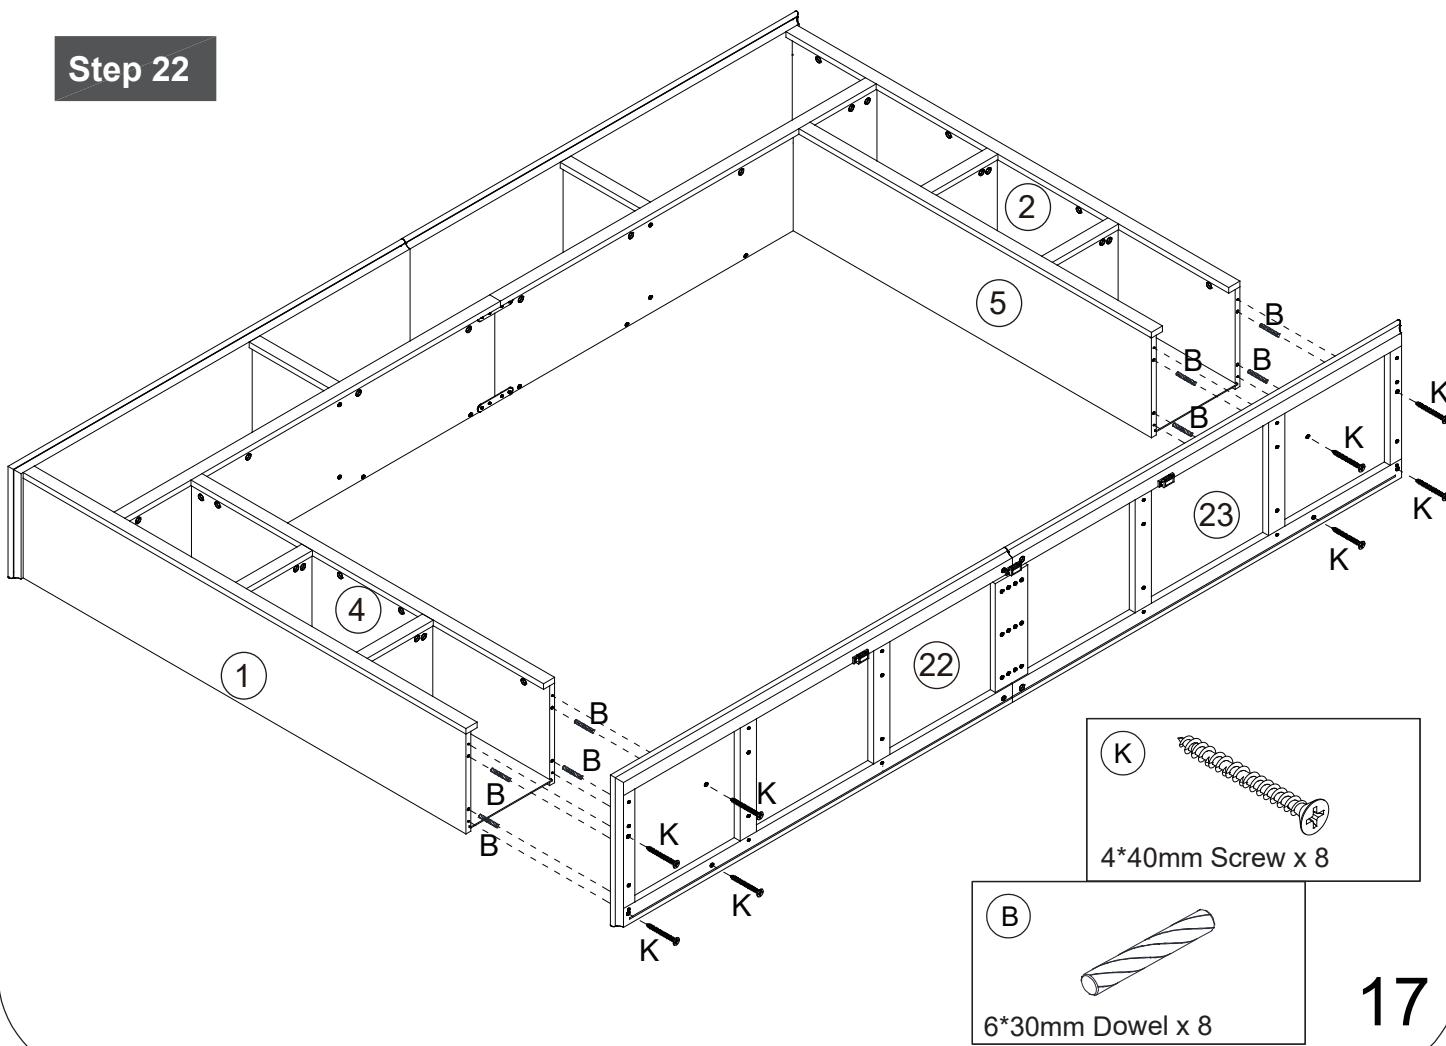

Assembly Instructions


Step 23

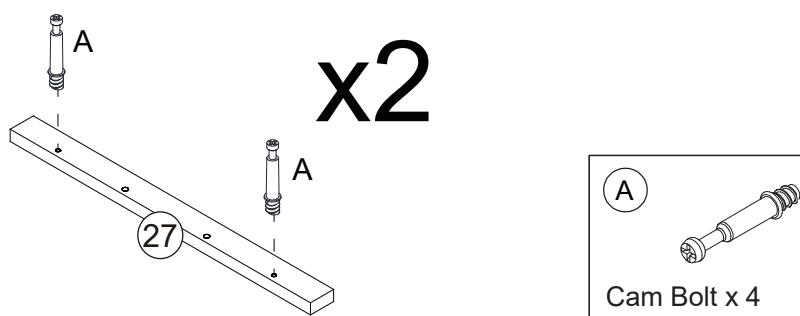

x2

(A)
Cam Bolt x 4


Step 24

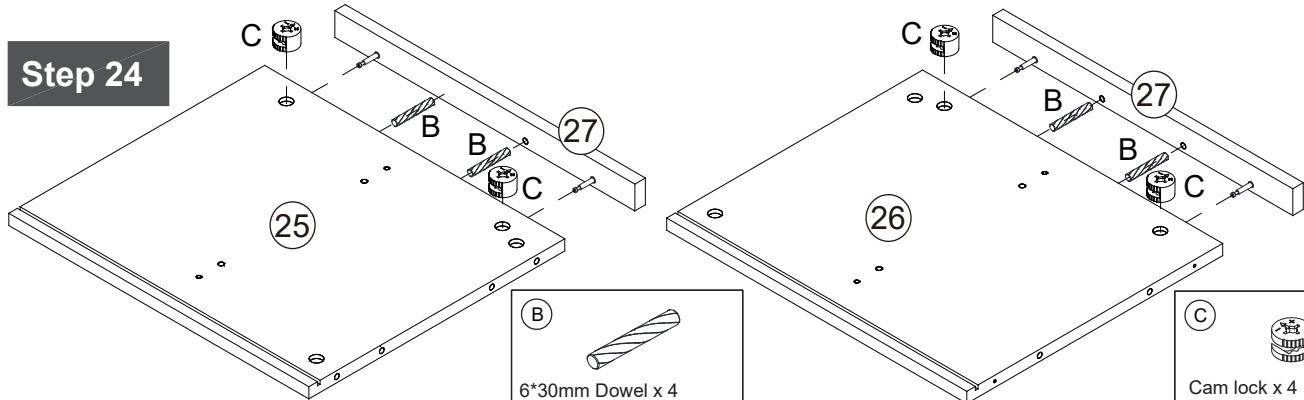

(B)
6*30mm Dowel x 4

(C)
Cam lock x 4

Step 25

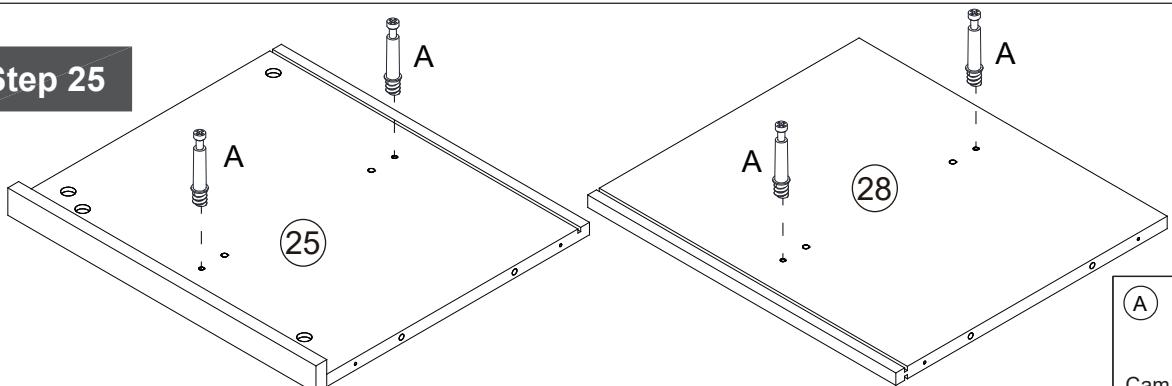


(A)
Cam Bolt x 4

Step 26




step1

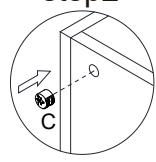

step2



step3


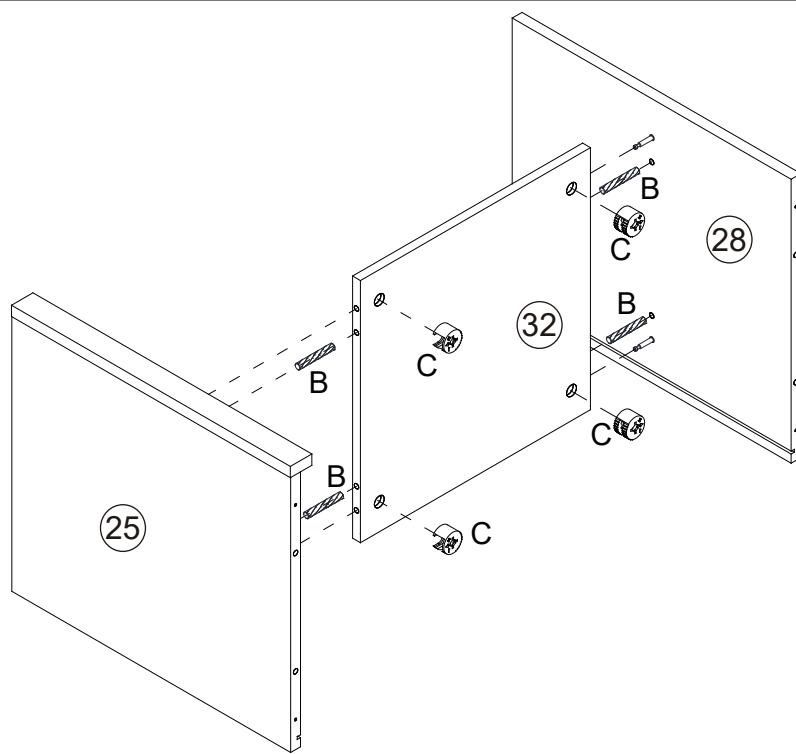


(C)
Cam lock x 4




(B)
6*30mm Dowel x 4

Assembly Instructions



Step 27

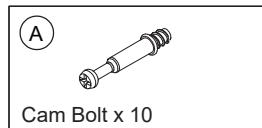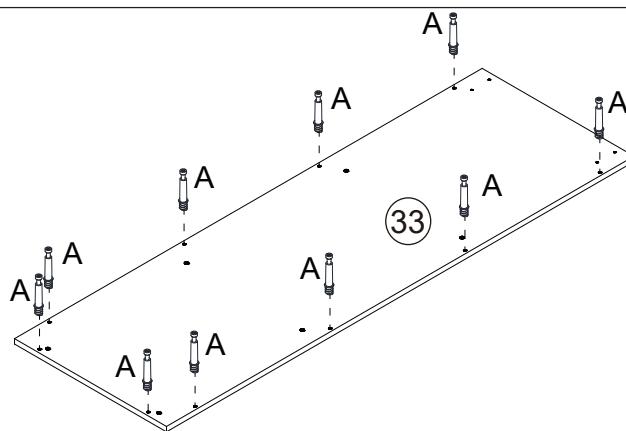

Step 28

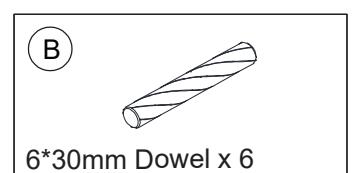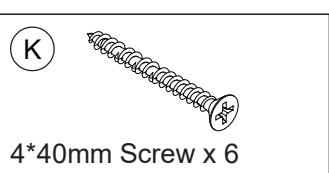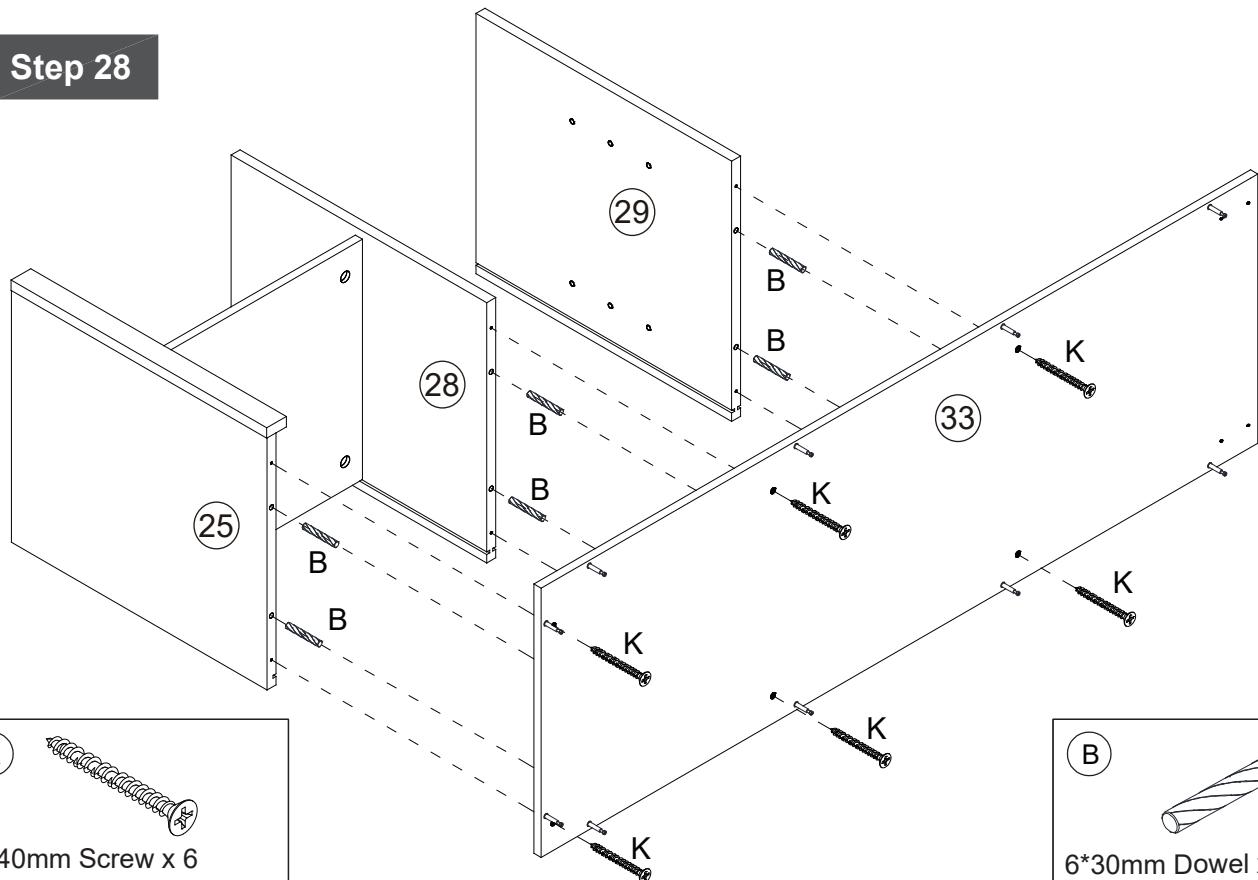


Step 29

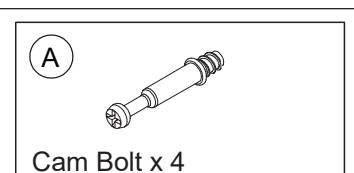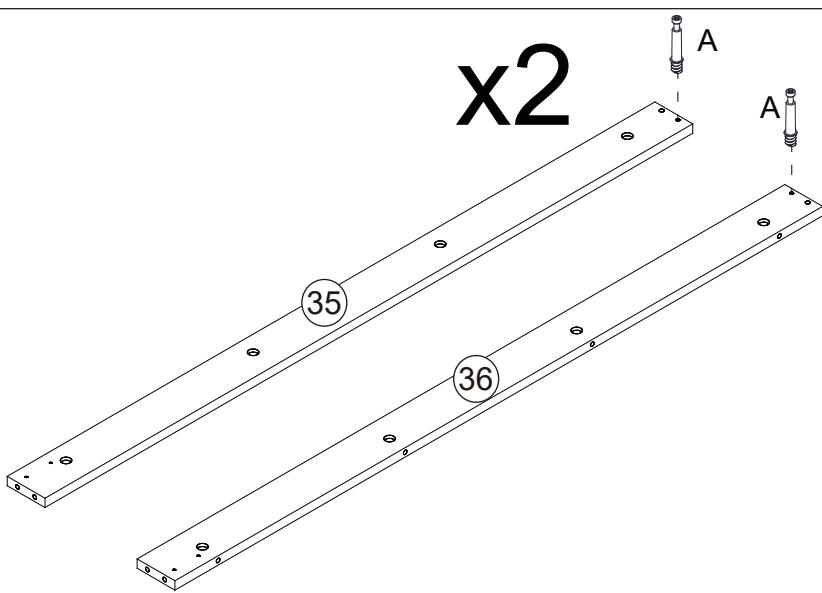


Assembly Instructions


Step 30

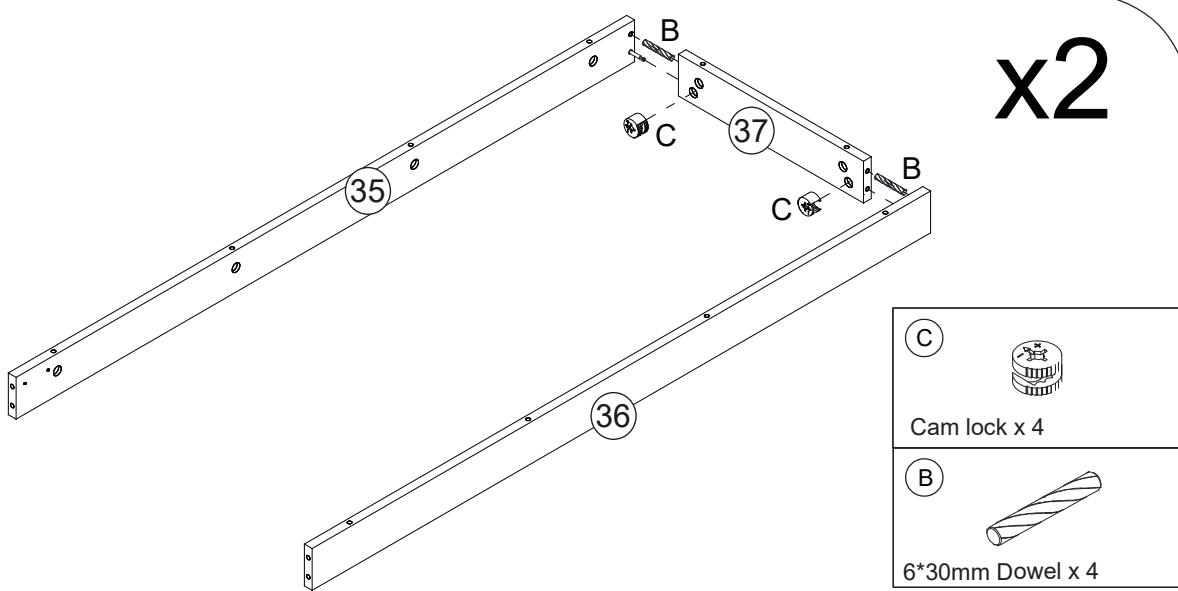

Step 31

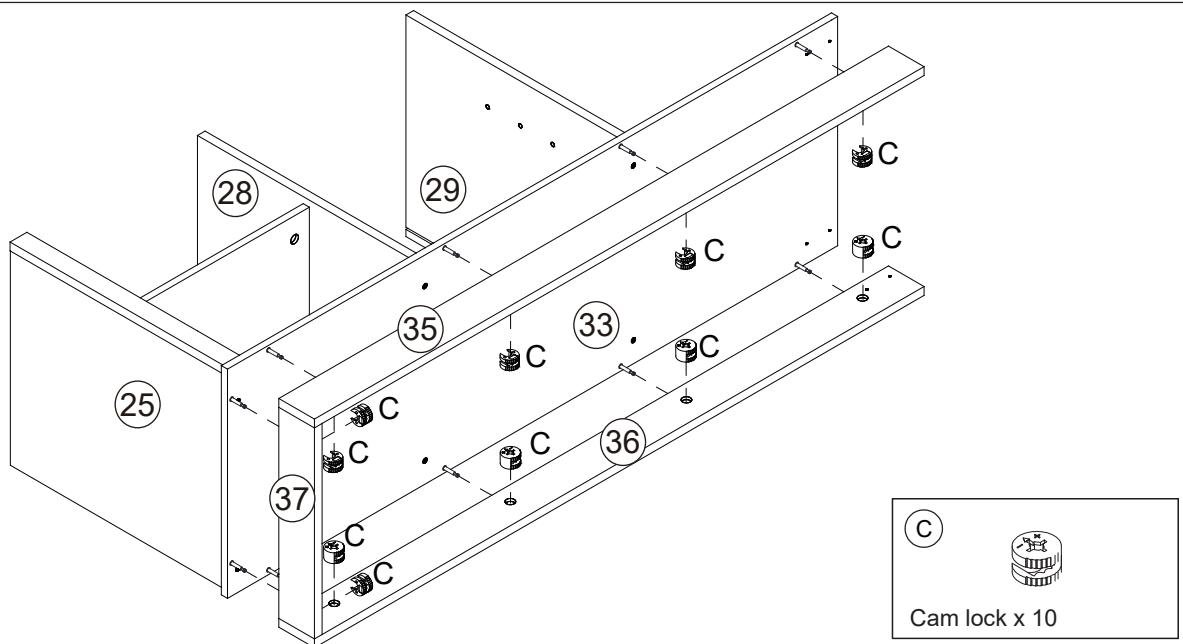


Step 32

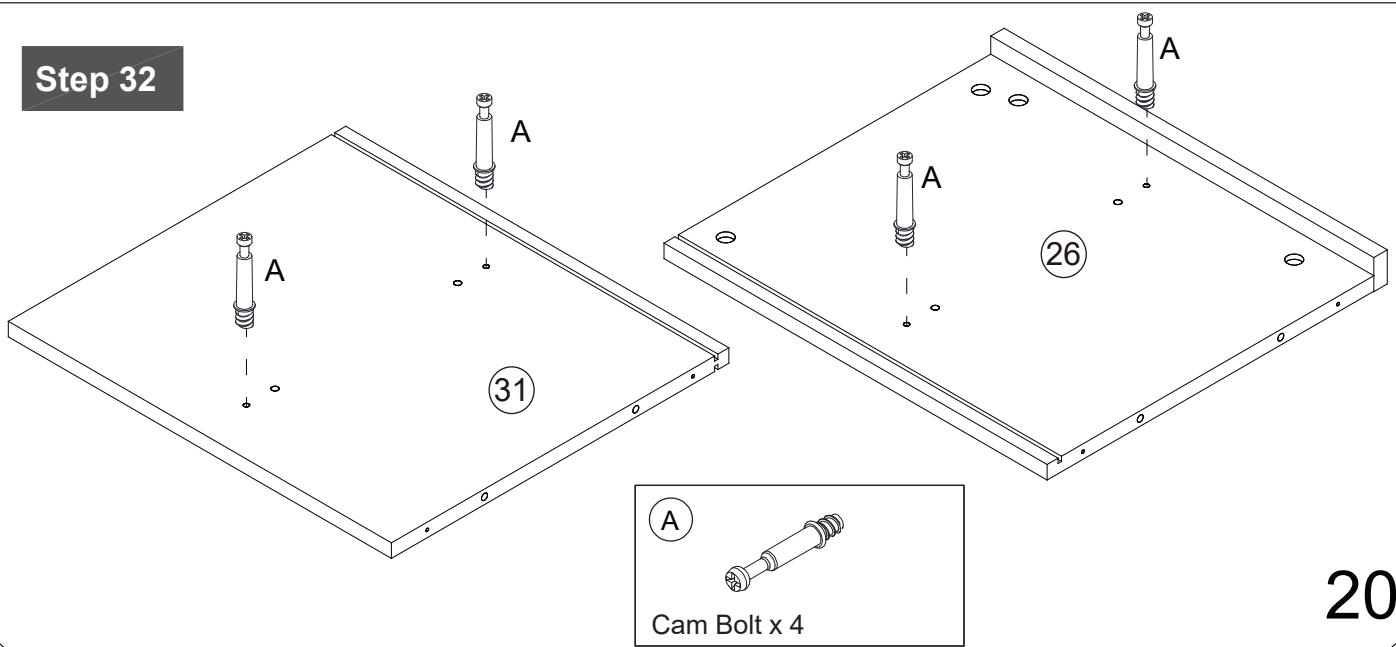


Assembly Instructions

Step 33



step1

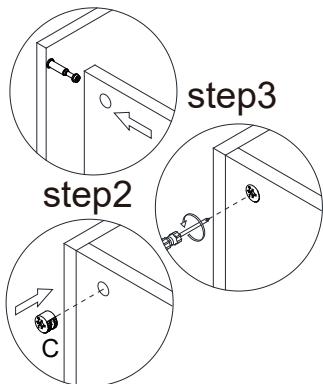



step3

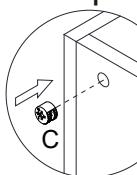


step2

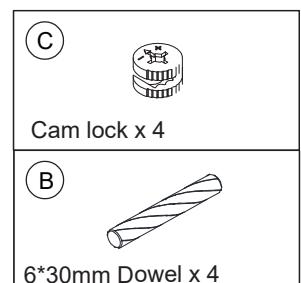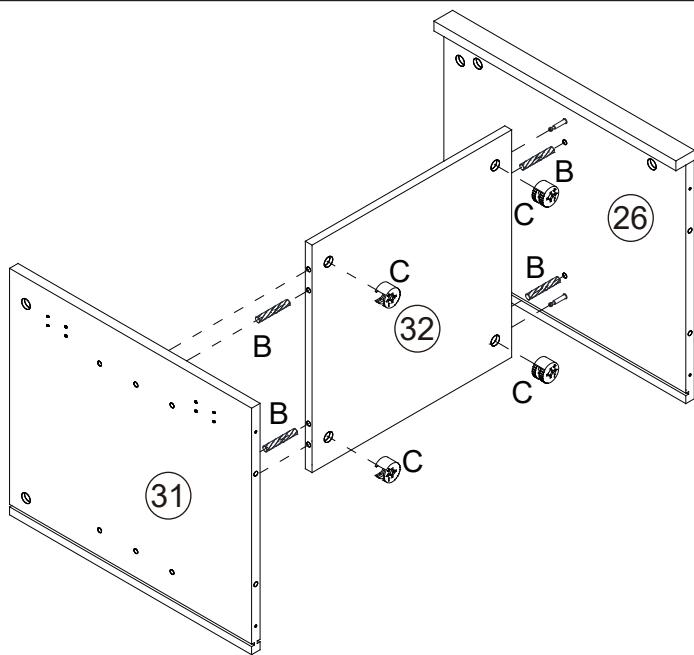

Step 34

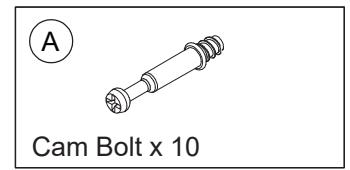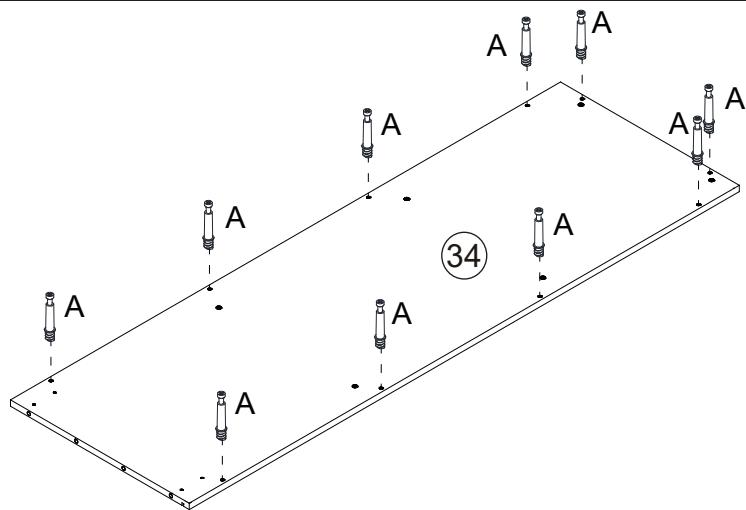


Step 35

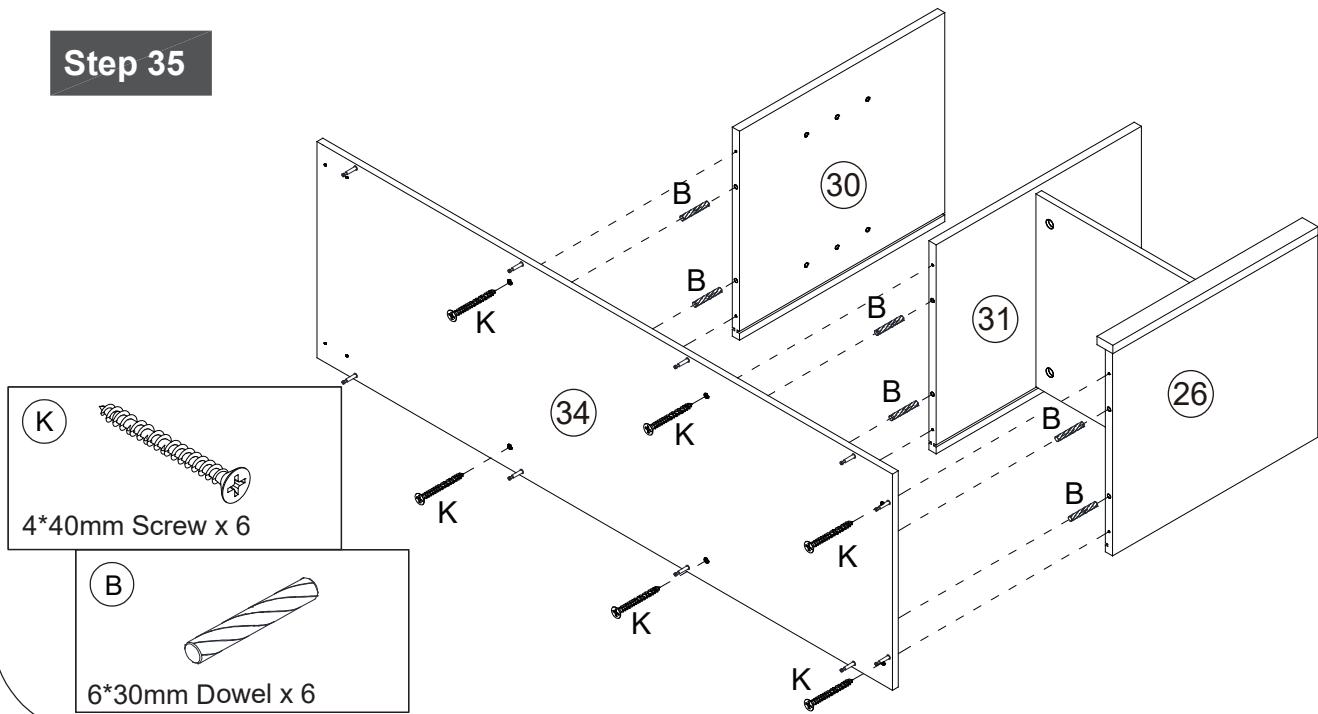



Assembly Instructions

Step 36

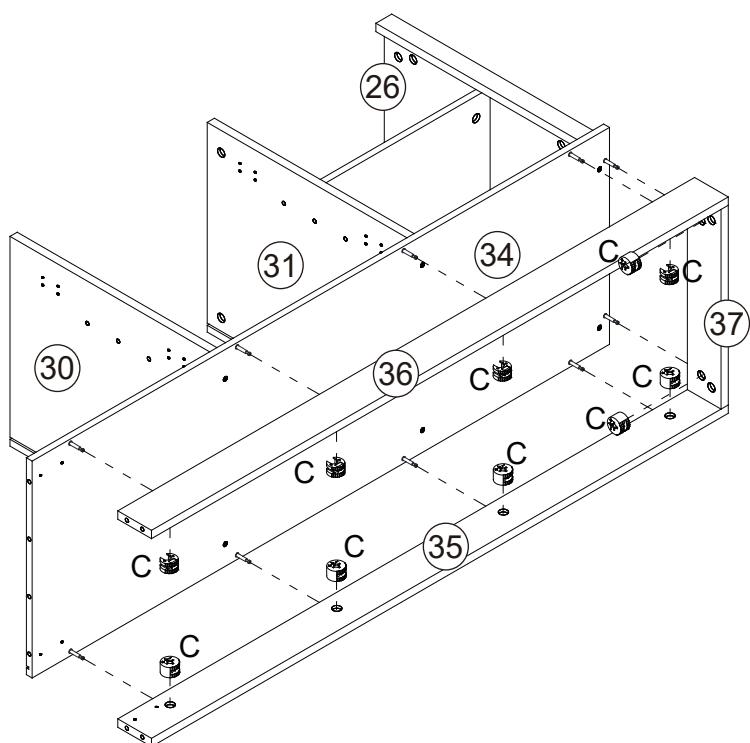

Cam lock x 10

Step 37

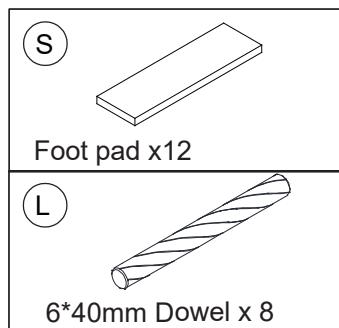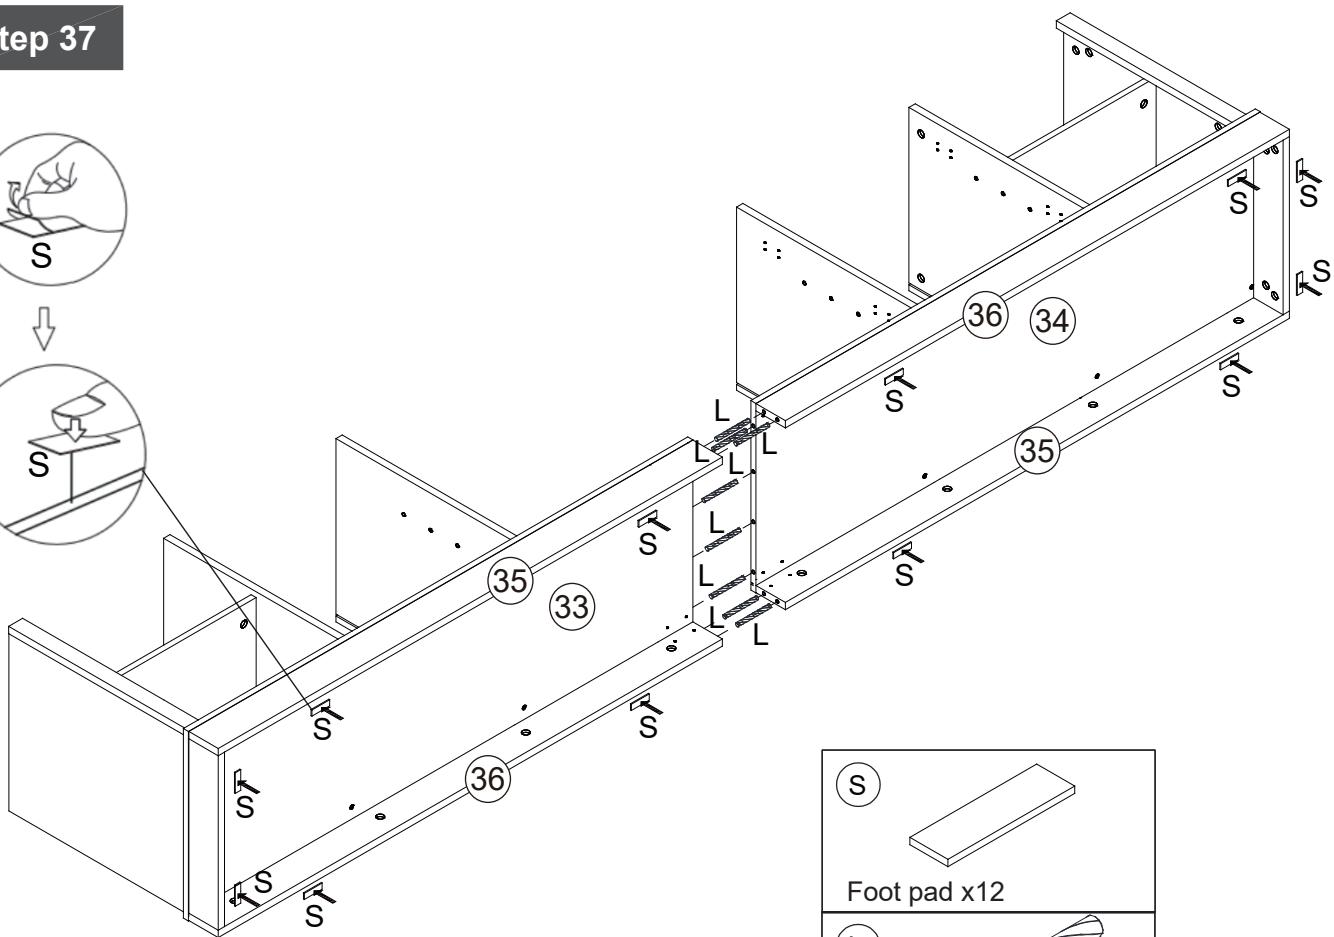


Foot pad x12




6*40mm Dowel x 8

Assembly Instructions

Step 38

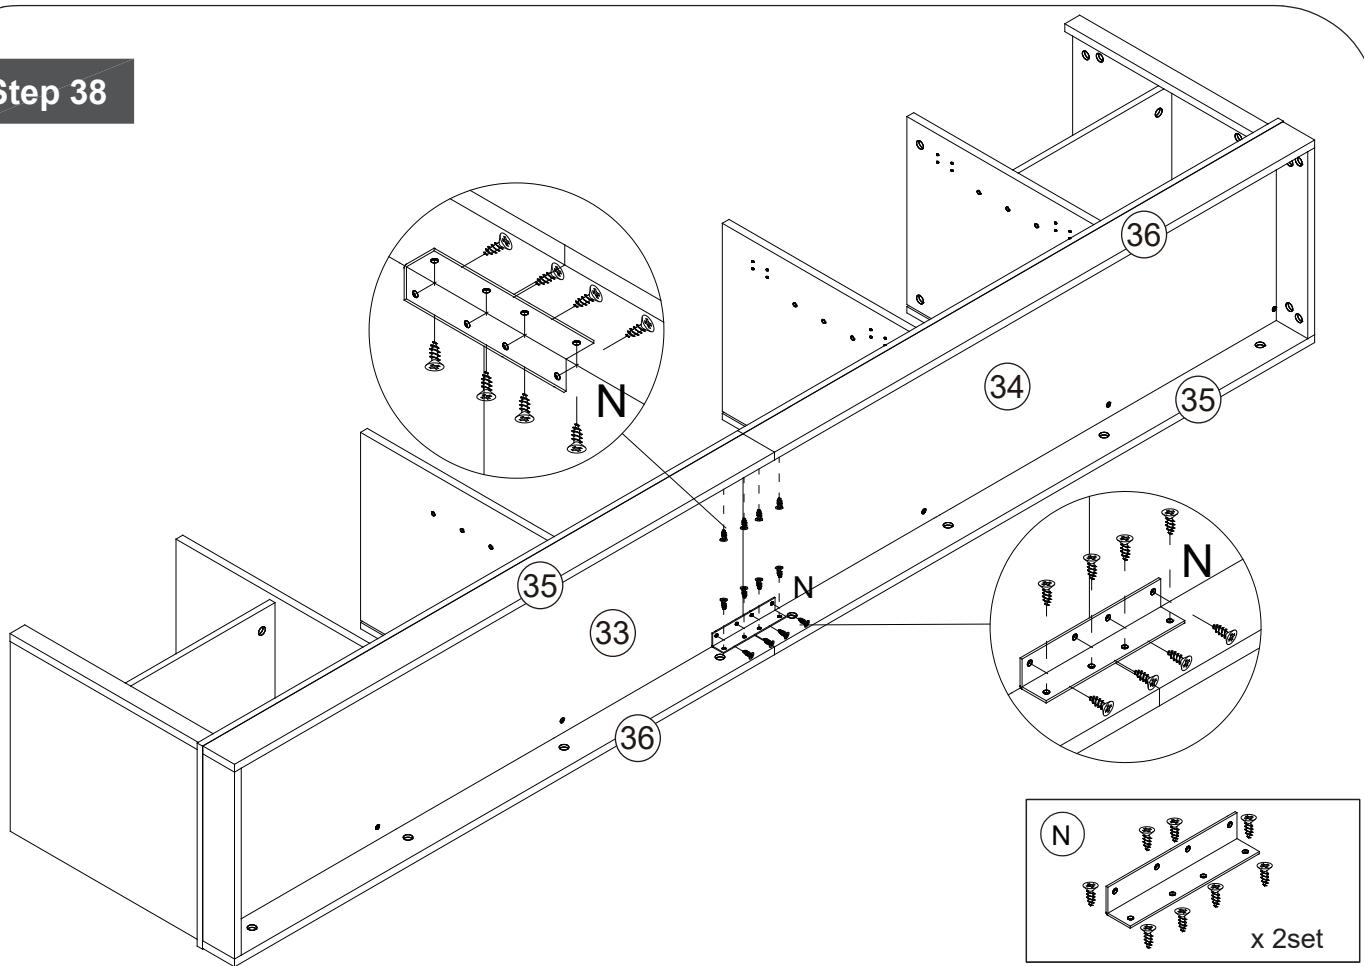


Step 39

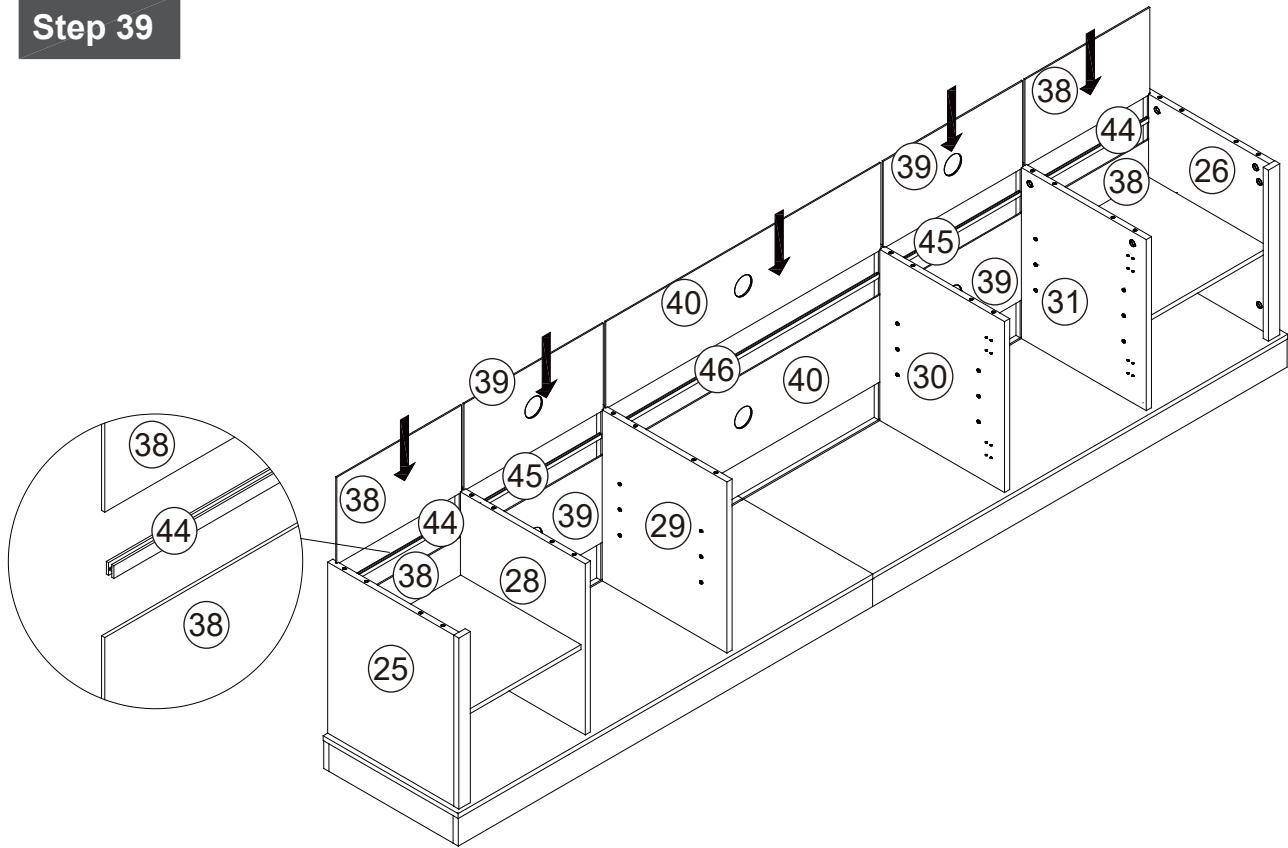



Assembly Instructions

Step 40

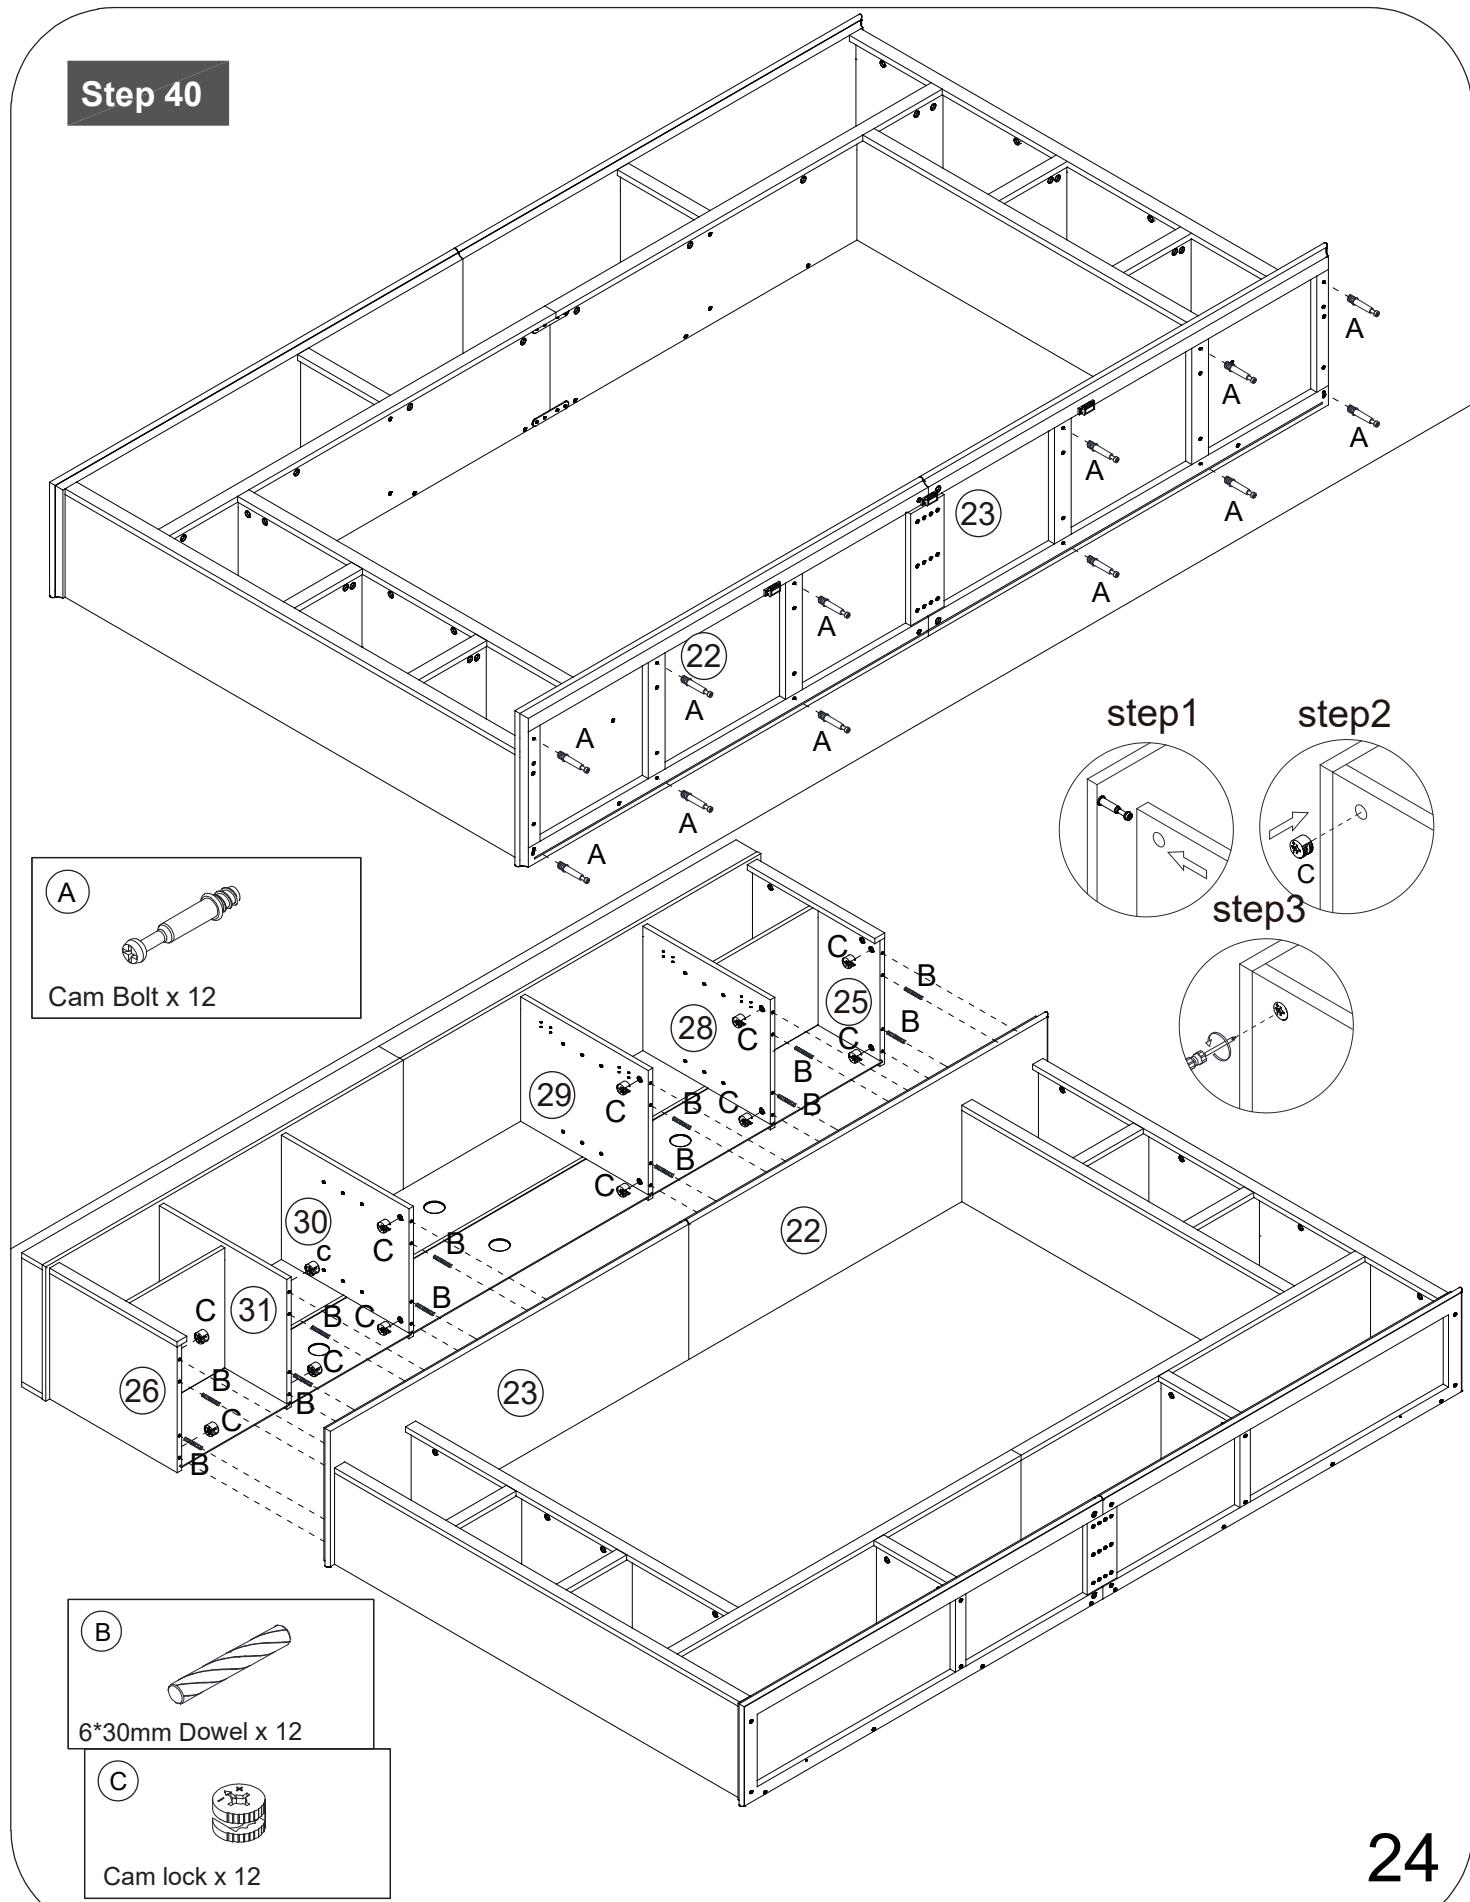



Assembly Instructions

Step 41

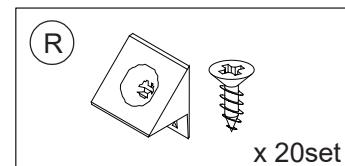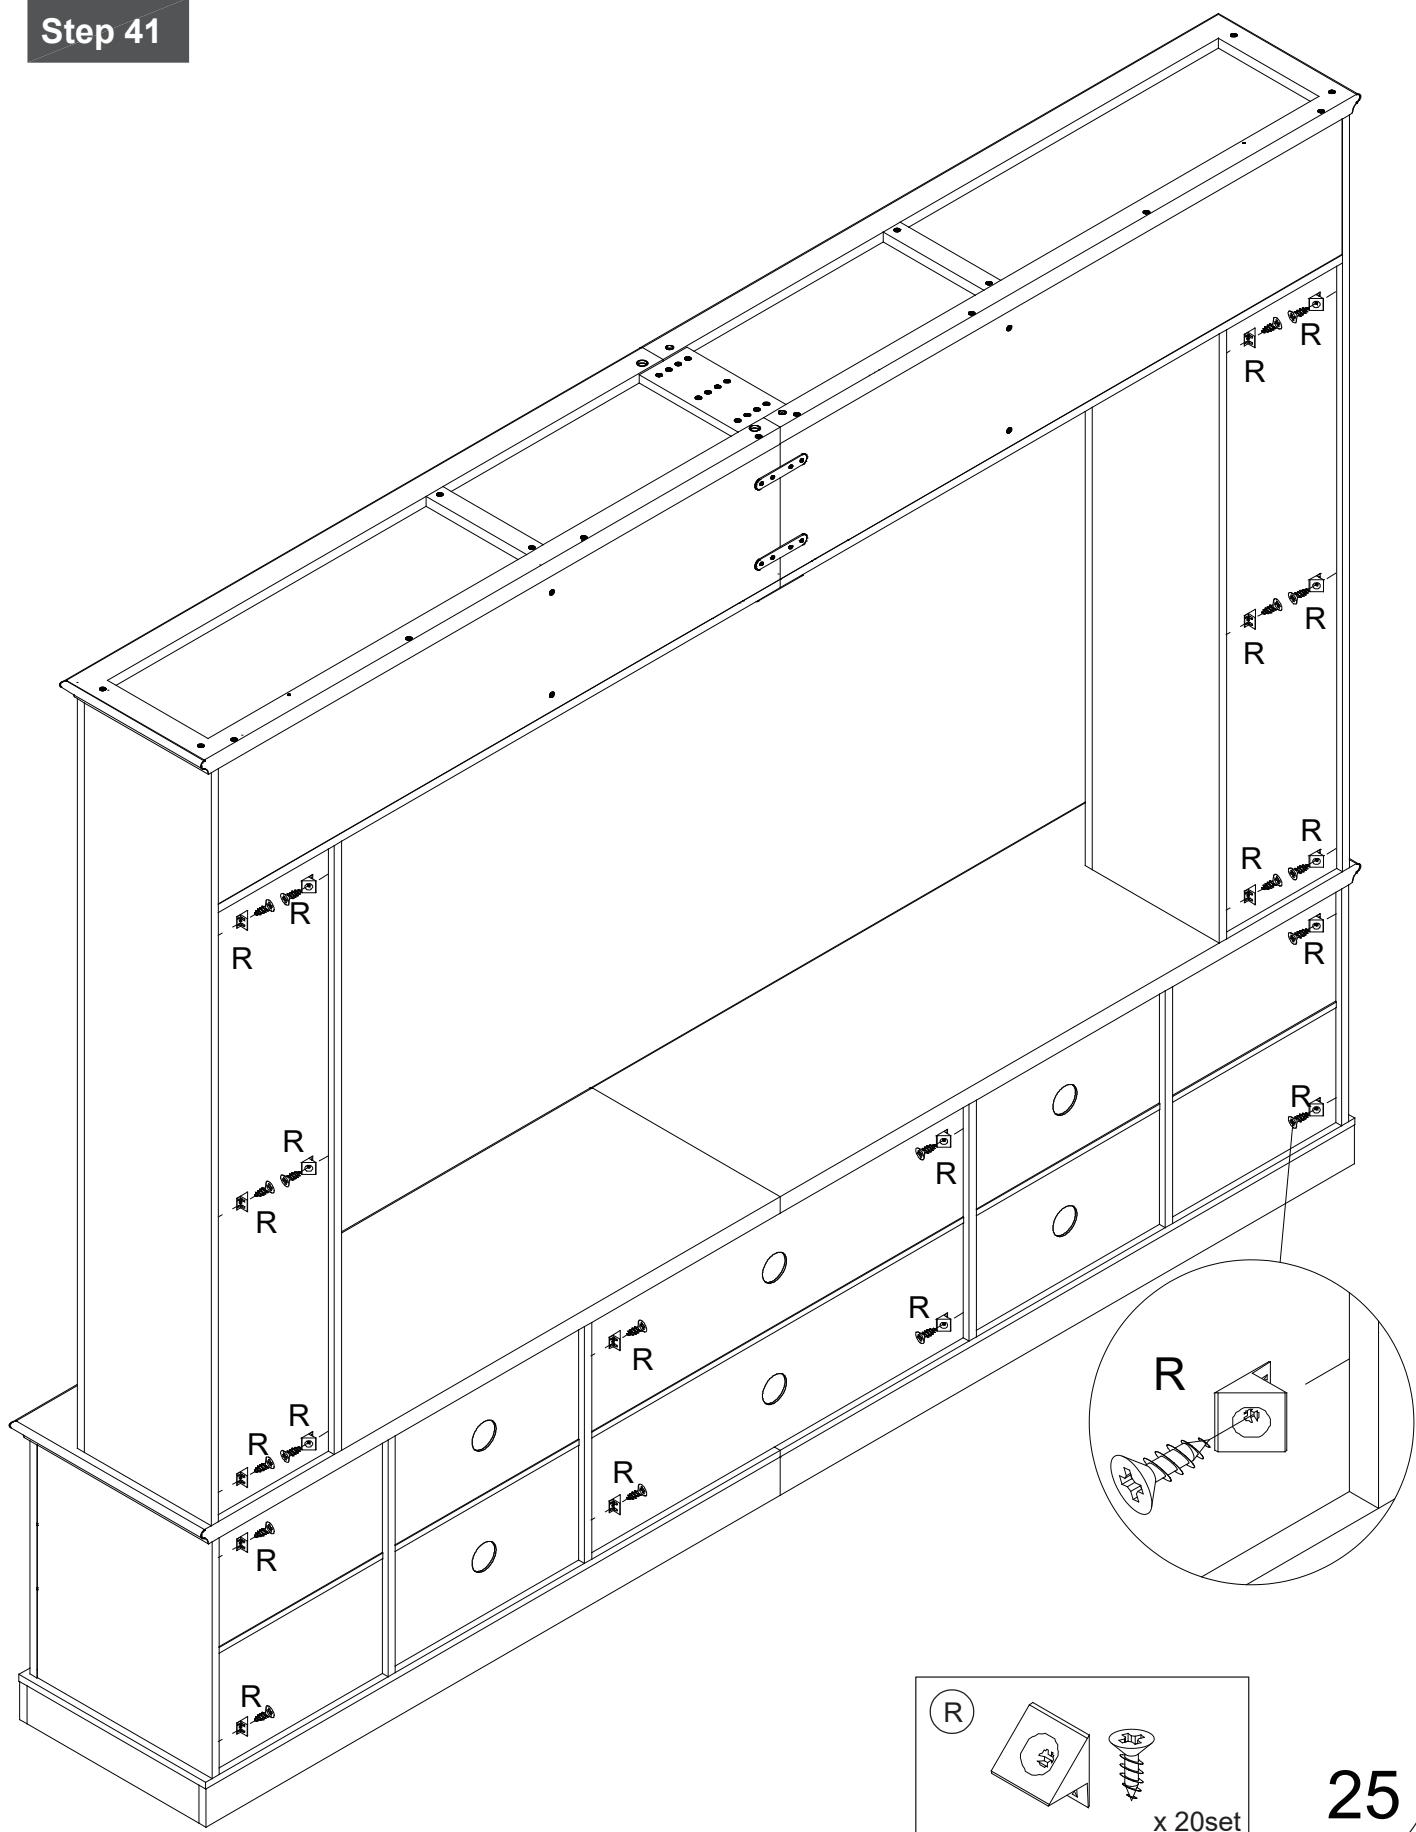


Assembly Instructions

Step 42

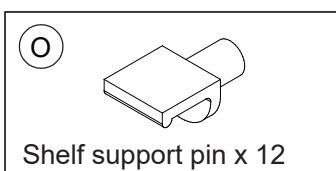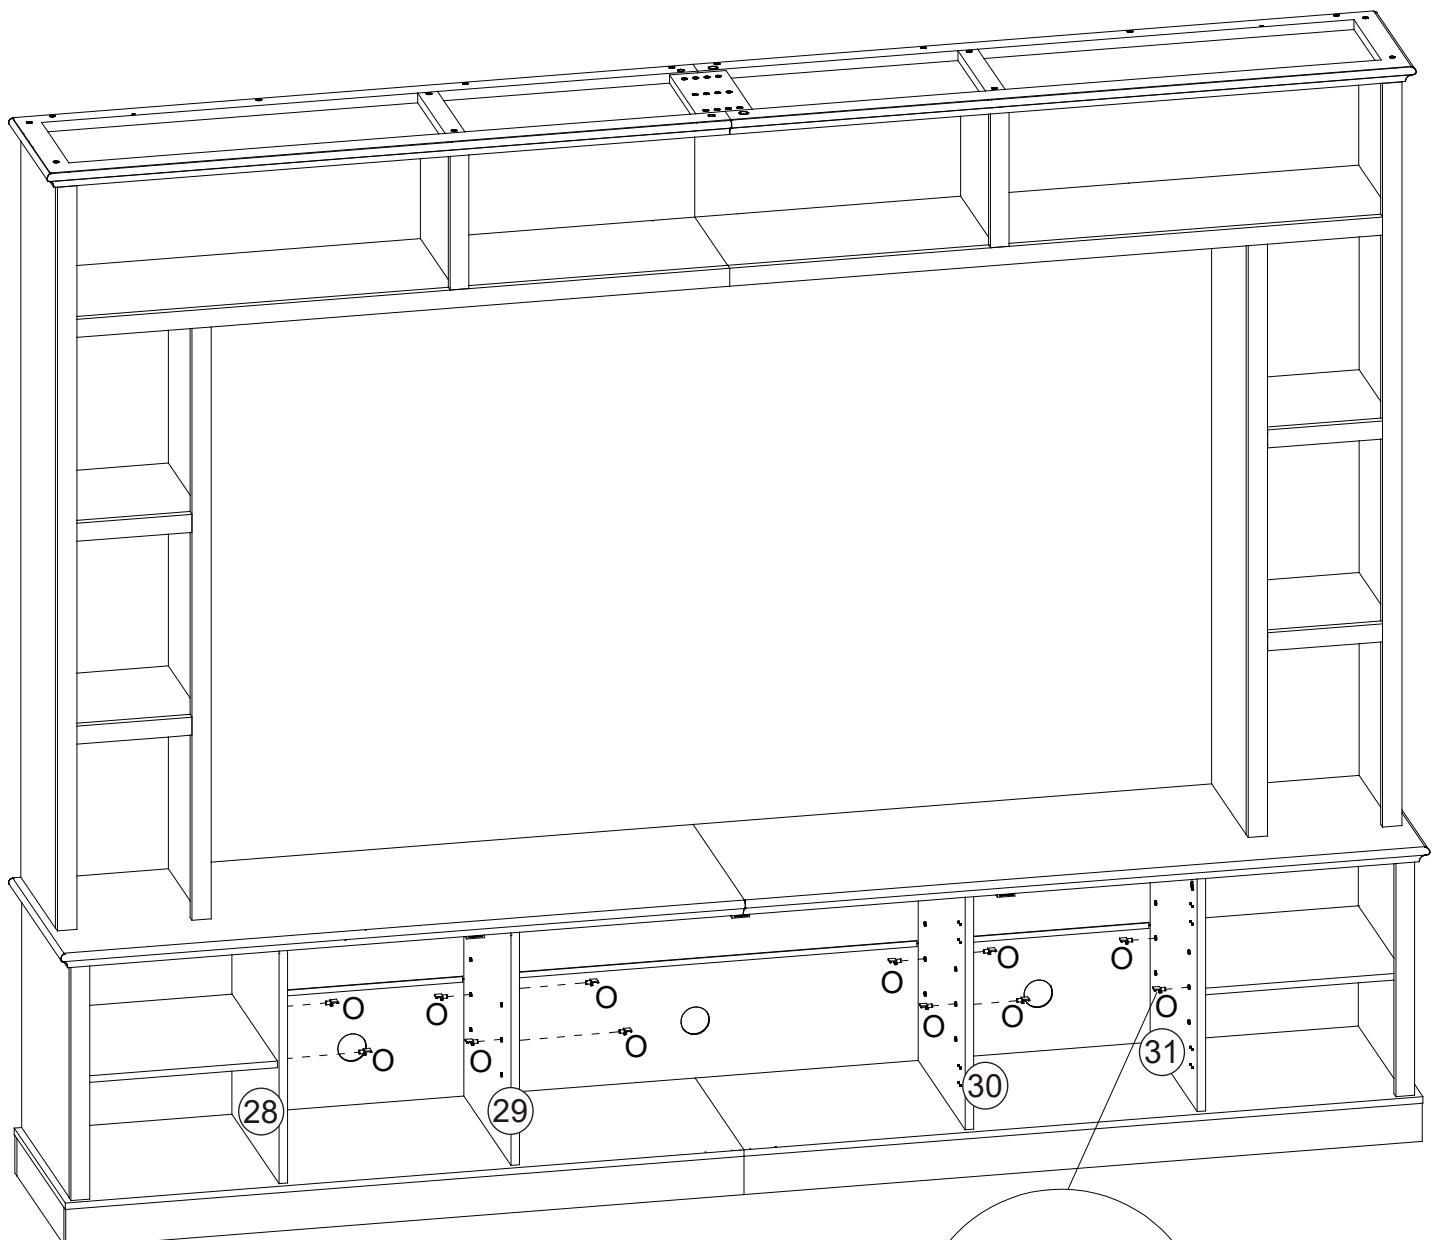





Assembly Instructions

Step 43

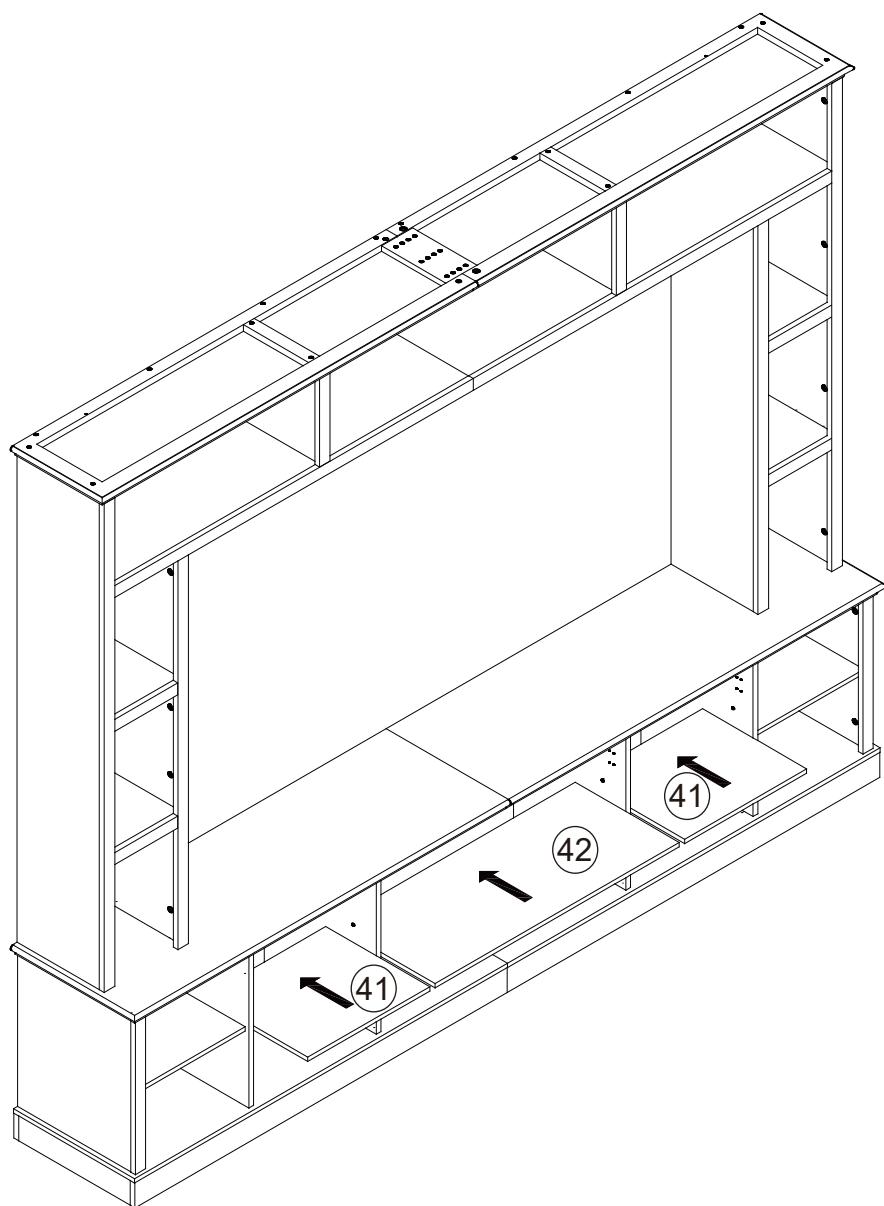

   
Step 44

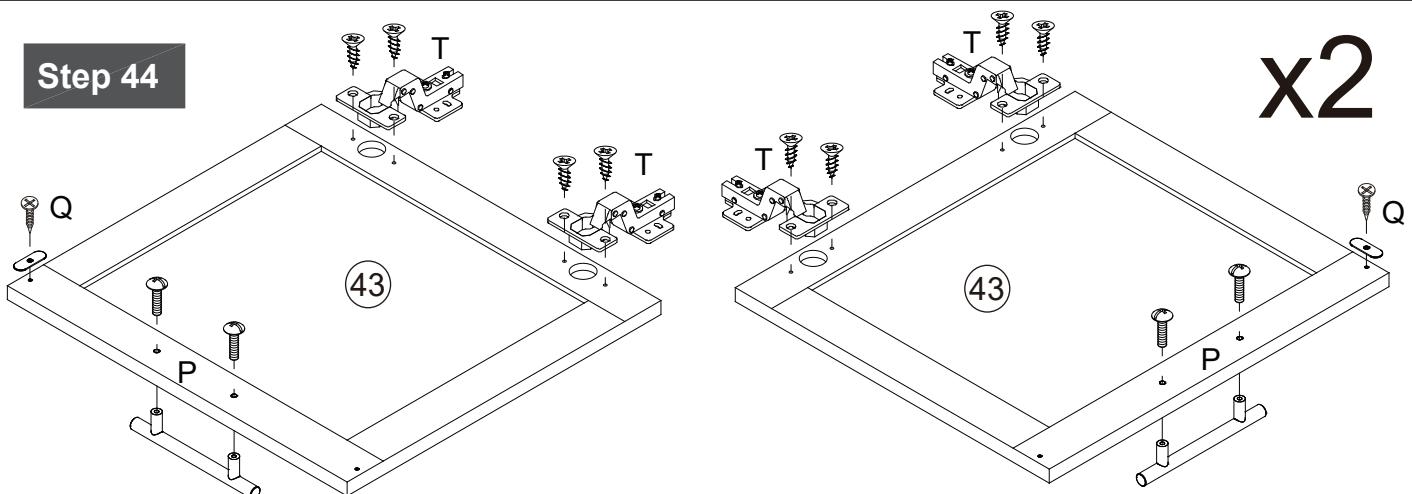


| | | | | | |
|---|---|---|---|---|---|
|  P |  |  Q |  |  T |  |
| 4*20mm Handle x 4set | | | x 4set | | 3.5*14mm Hinge x 8set |

Assembly Instructions


Step 45

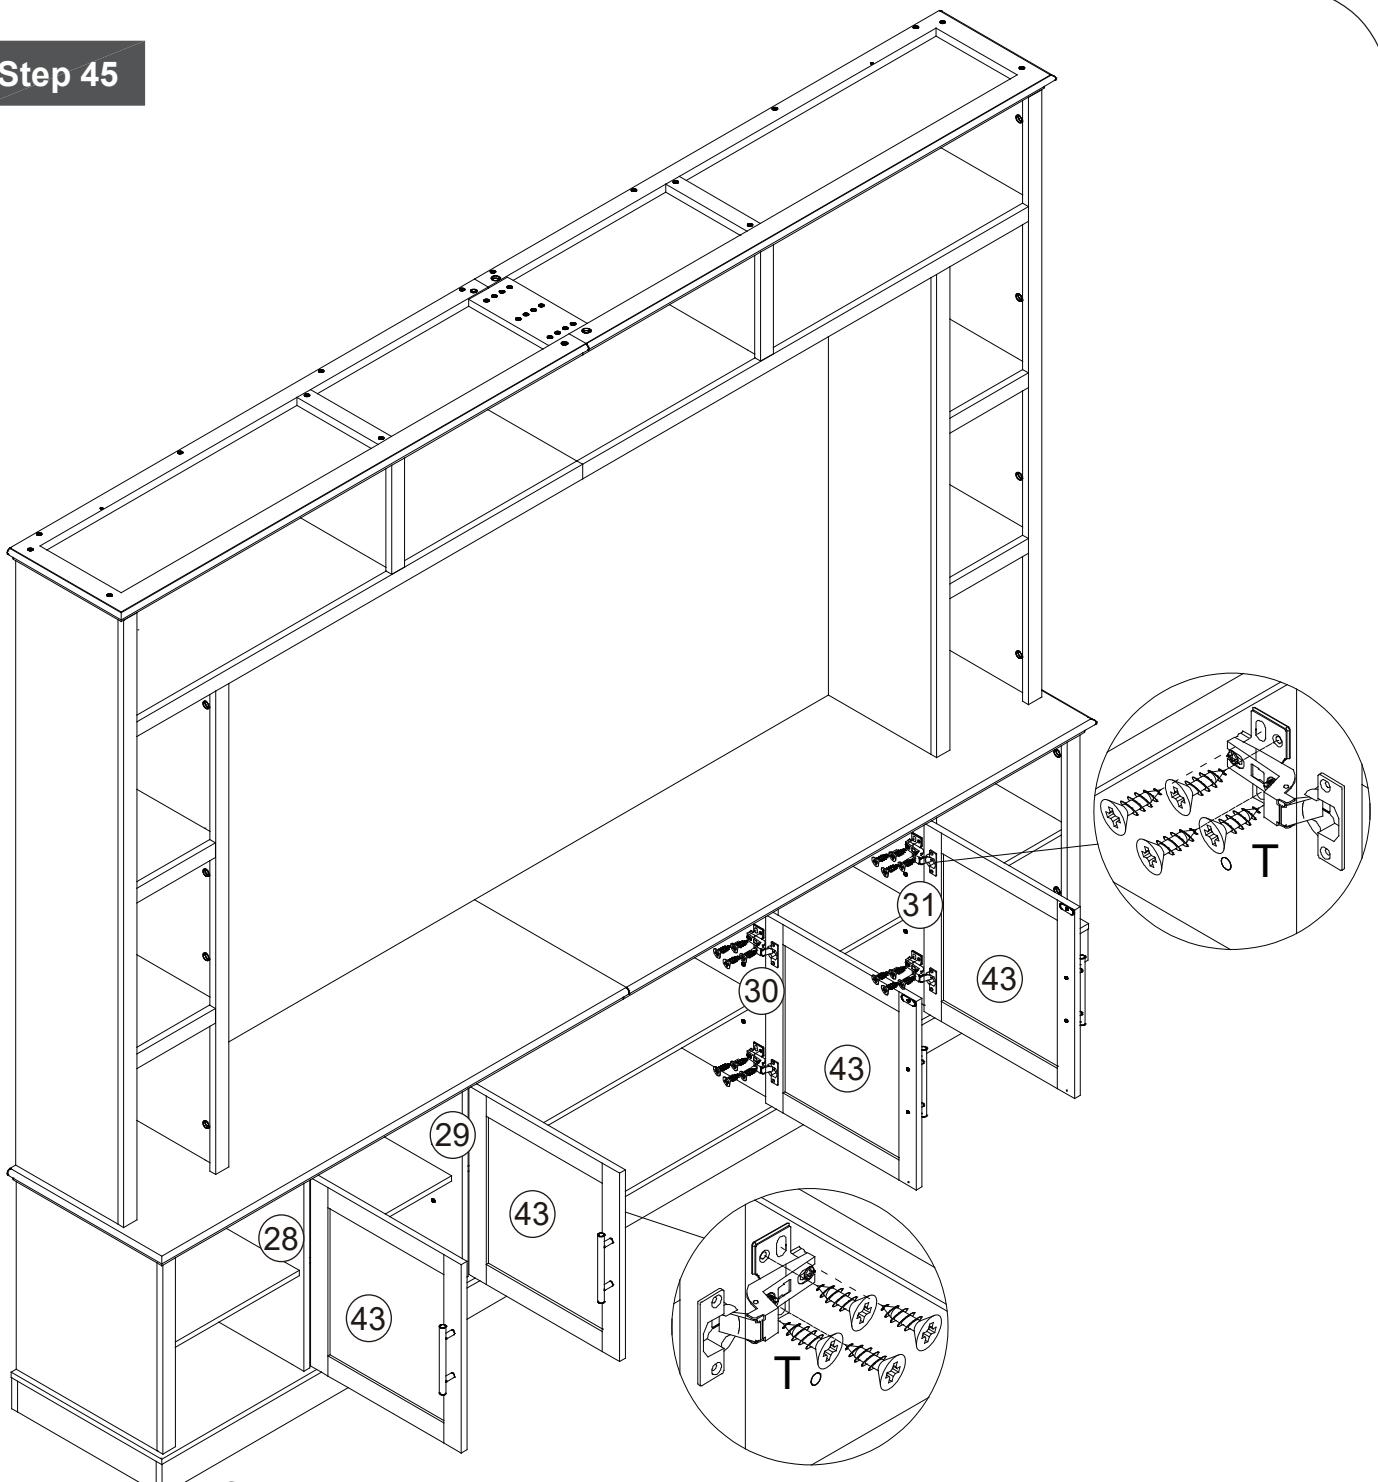


If the door can't close, please adjust the hinges as below.

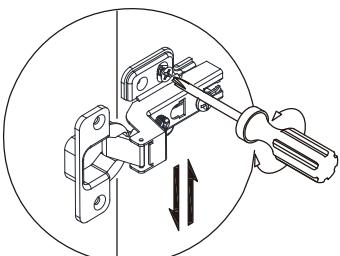

This is used to adjust the door panel in the up and down direction.

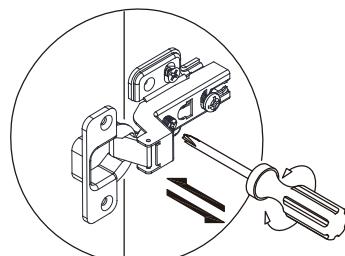


This is used to adjust the door panel in the left and right direction.

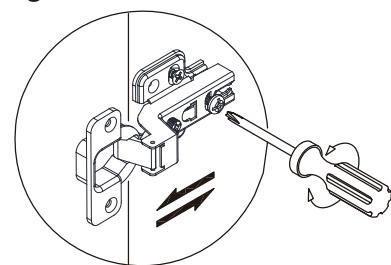




This is used to adjust the door panel in the front and rear.

Assembly Instructions

Step 46

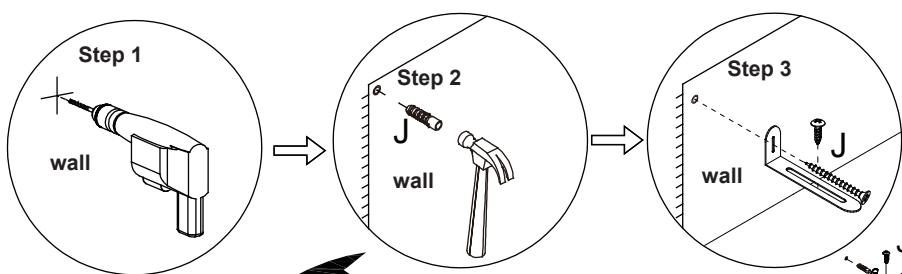

WALL

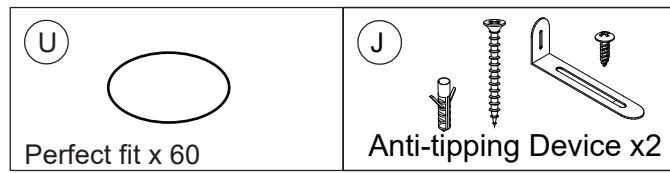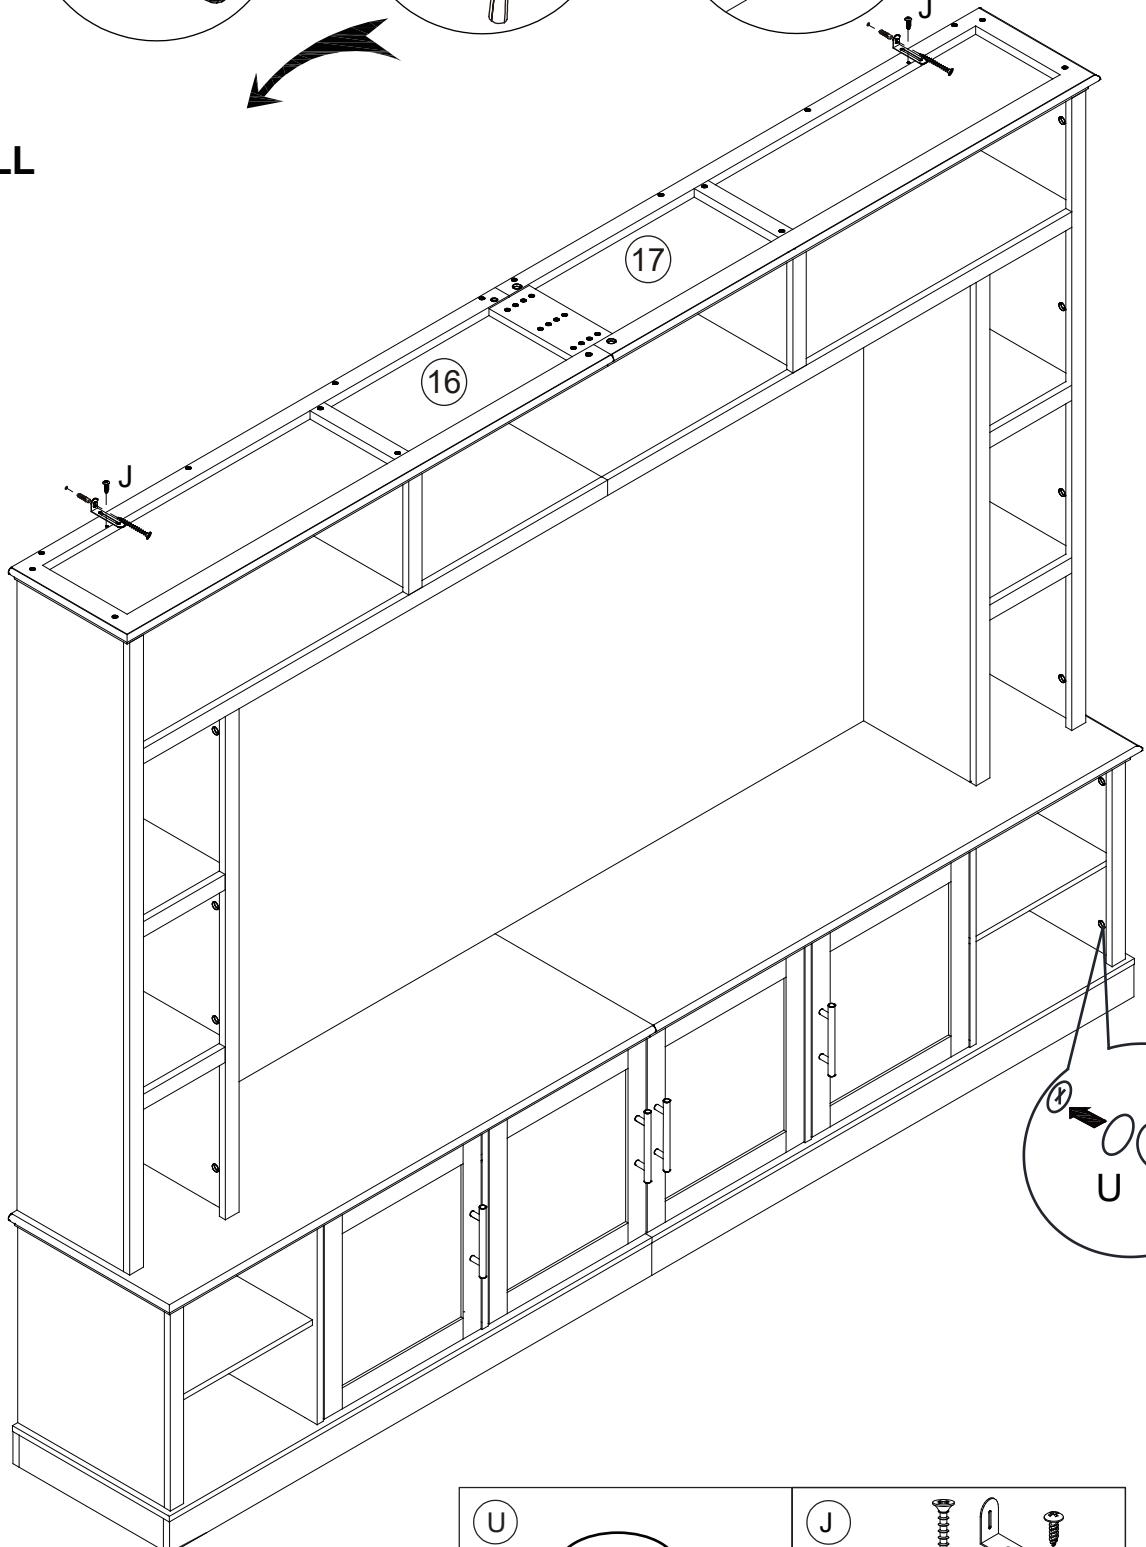 

Assembly Instructions

Finish

