

We believe you will absolutely love your new furniture. Please immediately examine this product carefully. Any request for missing part or damage replacement must be received within 90 days of your receipt of the product. For some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service team can answer most concerns and can assist you with any questions you may have about your new product.

Please contact us first by emailing service@casepiece.com

Have these ready when you email:

- Item Number
- PO #
- Purchaser Name
- Proof of Purchase
- Description of the problem and/or the Part Number needed

Replacements for missing or damaged parts or hardware are normally shipped within 3 to 5 business days and we thank you for your patient.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

90-Day Limited Warranty Statement for Manufacturing Defects

Please read this Limited Warranty carefully. To maintain your Warranty, you will need to comply with the conditions stated here.

This warranty is for manufacturing defects only and does not cover damages as a result of misuse.

1. Our products sold comply with the description contained in this Warranty. All parts and products are warranted 90-Day from the original date of delivery except: parts and products used for commercial, contract, rental trade, institutional, or any other non-residential purposes; parts and products that have not been maintained in accordance with the care recommendations provided; parts and products damaged resulting from the consumer's improper assembly; or parts and products that are damaged or defective due to normal wear and tear.

2. To exercise rights under this warranty, proper documentation, i.e., photography, purchase order number, manufacturer's bar code label, and or any other pertinent information upon request is required. We reserve the right to repair or replace the product within the warranty period based upon the documentation received as support of a claim for consideration. We will not replace or repair any product if improper maintenance, improper handling, or improper use caused the damage. Any product sold from or modified by a Non-Authorized Dealer, Seller or Consumer will void the Warranty.

3. Cost of packaging and shipping to and from us is not covered by the warranty unless expressly arranged by us. This warranty does not extend to furniture that has been exchanged or replaced by us as settlement of an original claim of defective merchandise. This warranty does not extend to furniture that has been moved from delivery location on original purchase order.

We appreciate your business!







C4031CT ASSEMBLY INSTRUCTION

HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		48 PCS
B	MINIFIX CAM BOLT		48 PCS
C	WOOD DOWEL (M8 x 25MM)		36 PCS
D	PANHEAD SCREW (M4 x 25MM)		12 PCS

C4031CT ASSEMBLY INSTRUCTION

PARTS LIST COFFEE TABLE

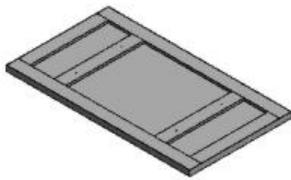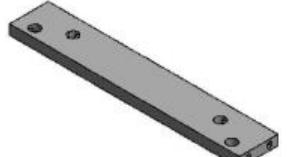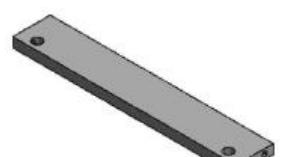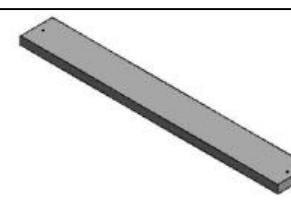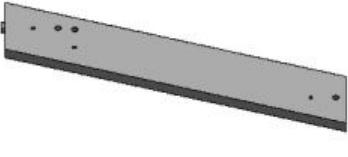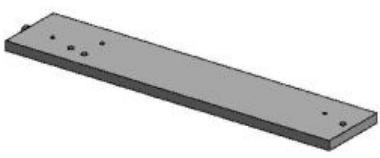ITEM	DESCRIPTION	DRAWING	QTY
1	TOP PANEL		1 PC
2	TOP SUPPORT RAIL		2 PCS
3	BOTTOM SUPPORT RAIL		2 PCS
4	SIDE SUPPORT RAIL		2 PCS
5	LEG (A)		2 PCS
6	LEG (B)		2 PCS
7	BOTTOM PANEL		1 PC

C4031CT ASSEMBLY INSTRUCTION

PARTS LIST END TABLE

ITEM	DESCRIPTION	DRAWING	QTY
8	TOP PANEL		2 PCS
9	TOP SUPPORT RAIL		4 PCS
10	BOTTOM SUPPORT RAIL		4 PCS
11	SIDE SUPPORT RAIL		4 PCS
12	LEG (A)		4 PCS
13	LEG (B)		4 PCS
14	BOTTOM PANEL		2 PCS

*Note: Coffee table assembly step start from 1 - 12.

End table assembly step start from 13 - 25.


ASSEMBLY TOOLS REQUIRED

- Screwdriver (not provide)



C4031CT ASSEMBLY INSTRUCTION


STEP 1

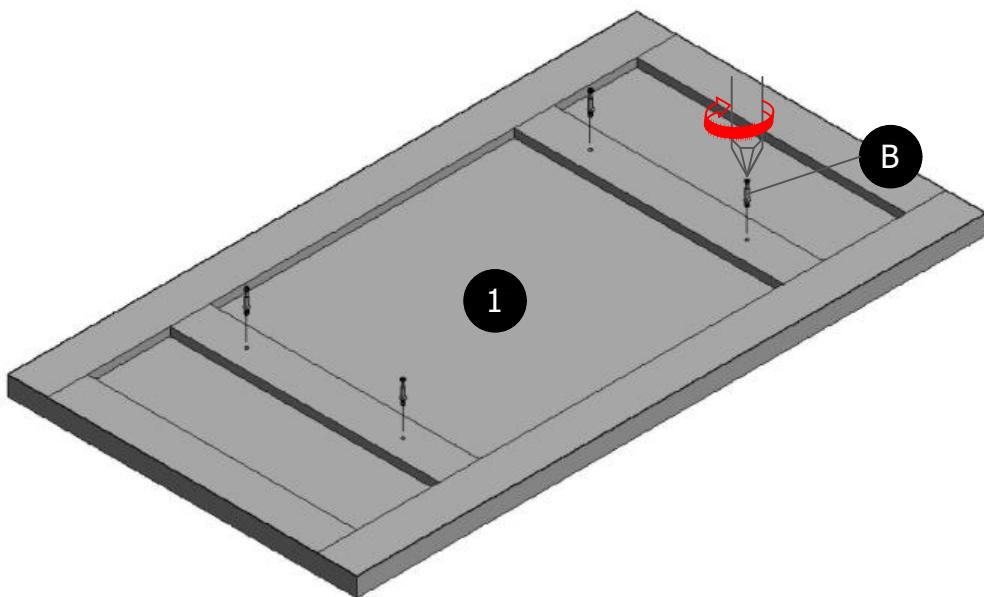

STEP 2

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.


x 2

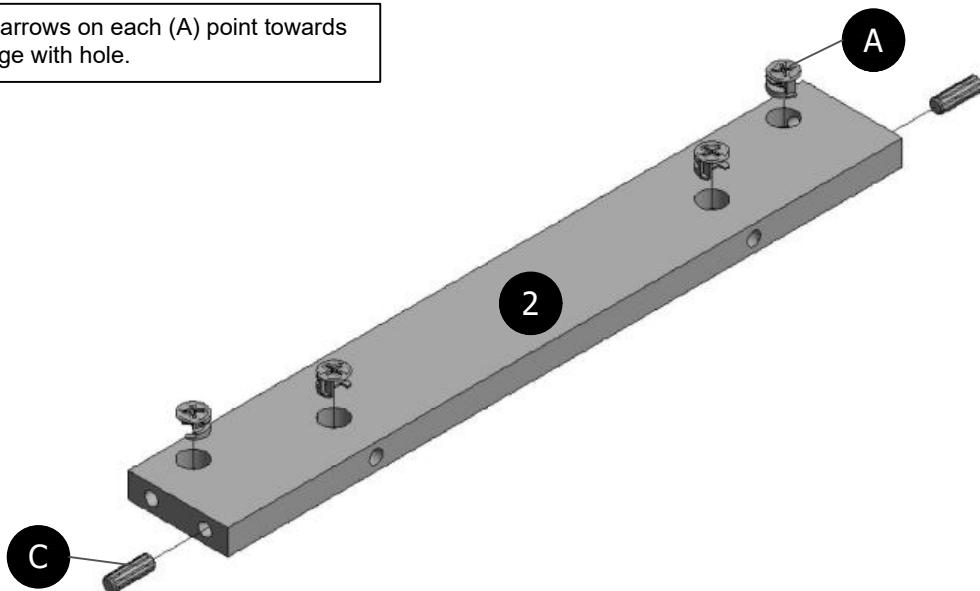

STEP 3

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.


x 2

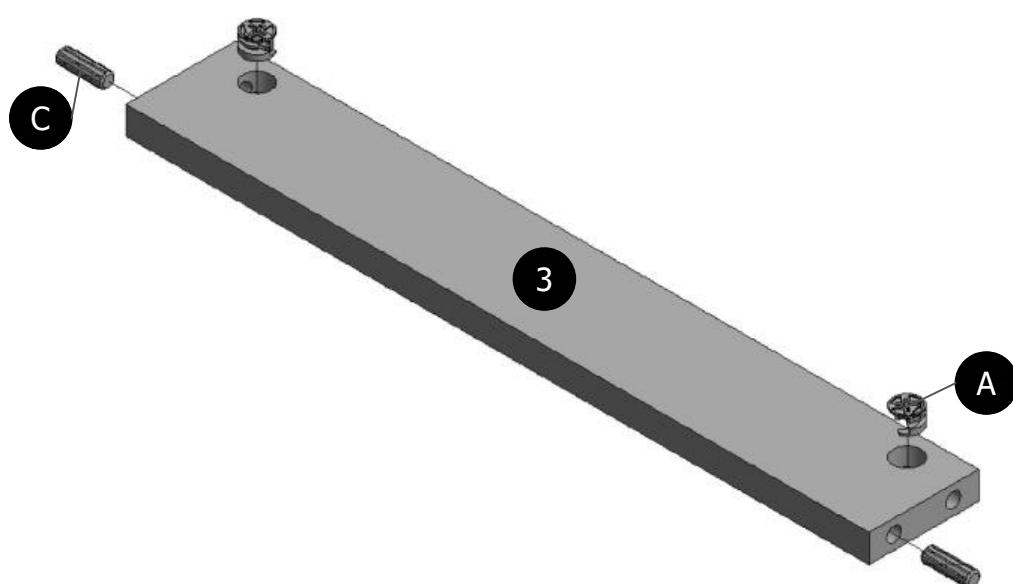

C4031CT ASSEMBLY INSTRUCTION


STEP 4

x 2

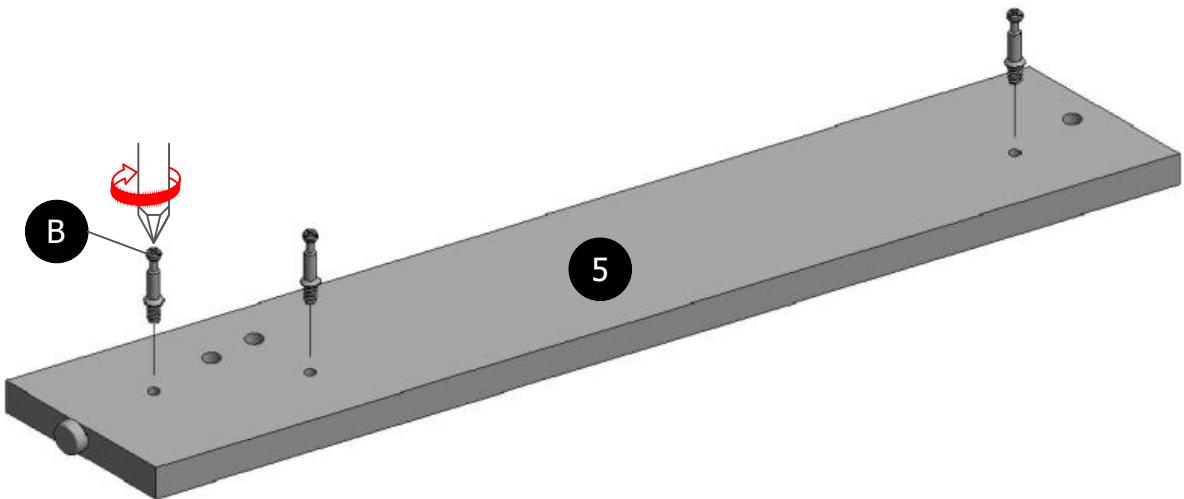


STEP 5

x 2

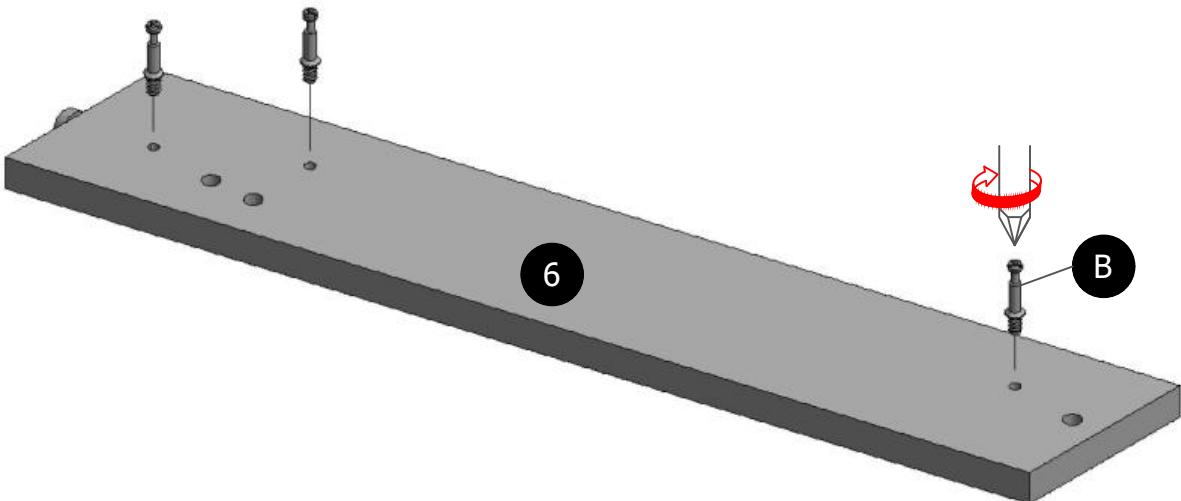


STEP 6

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

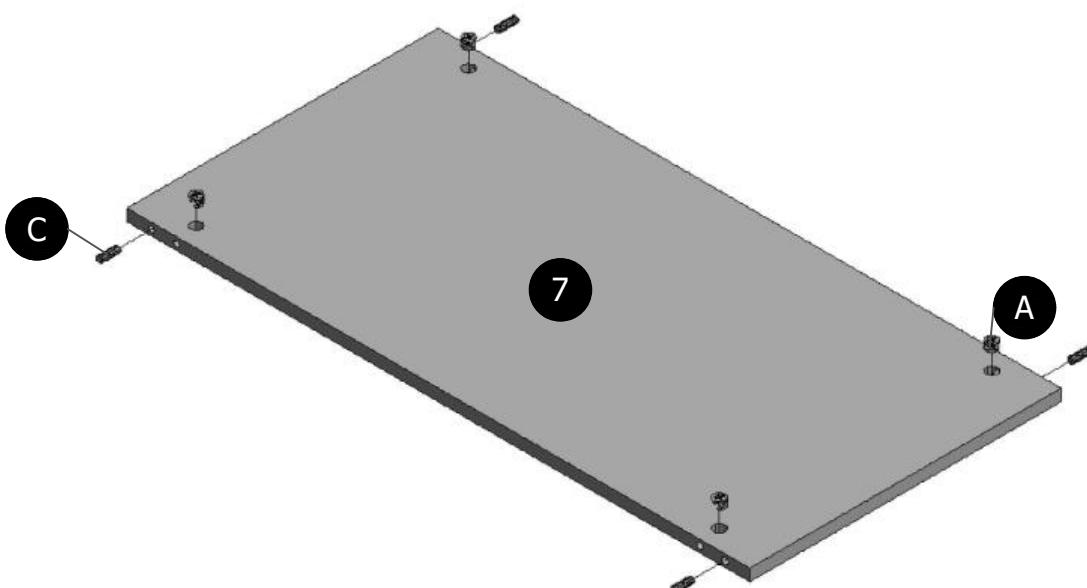


C4031CT ASSEMBLY INSTRUCTION


STEP 7

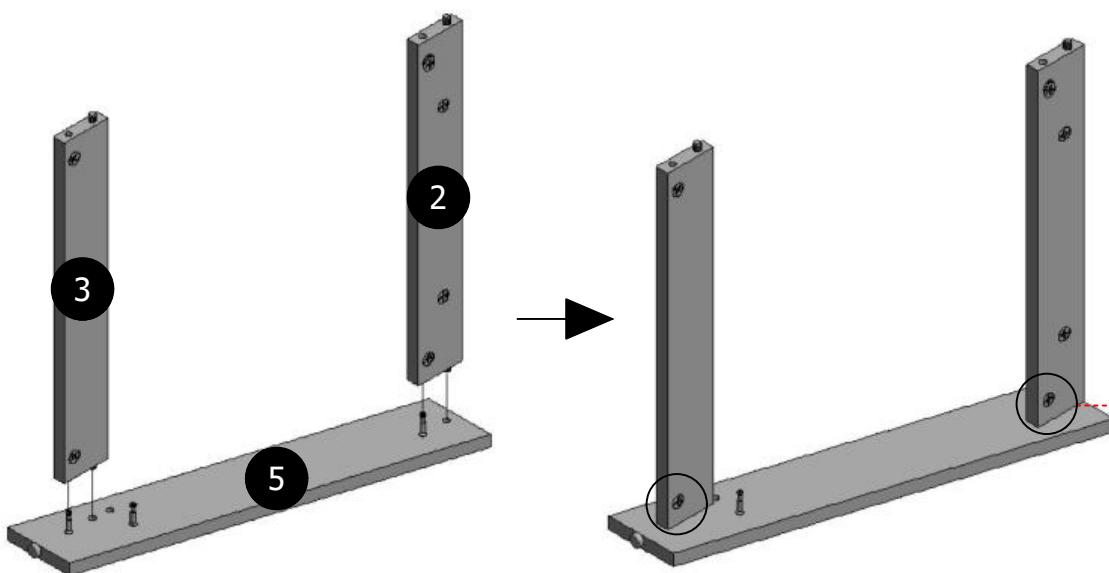

STEP 8

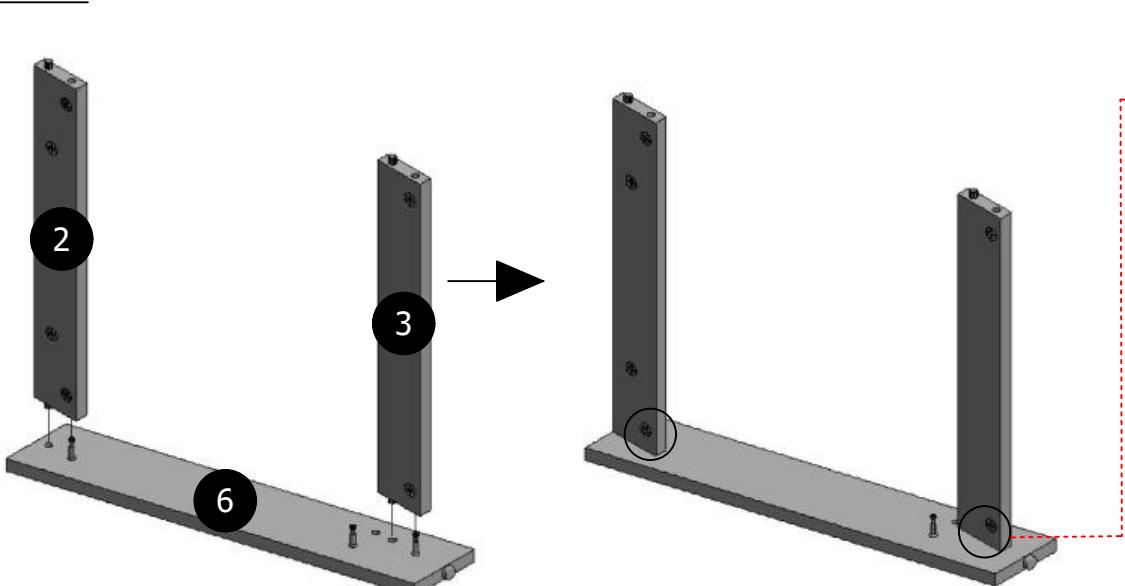


STEP 9

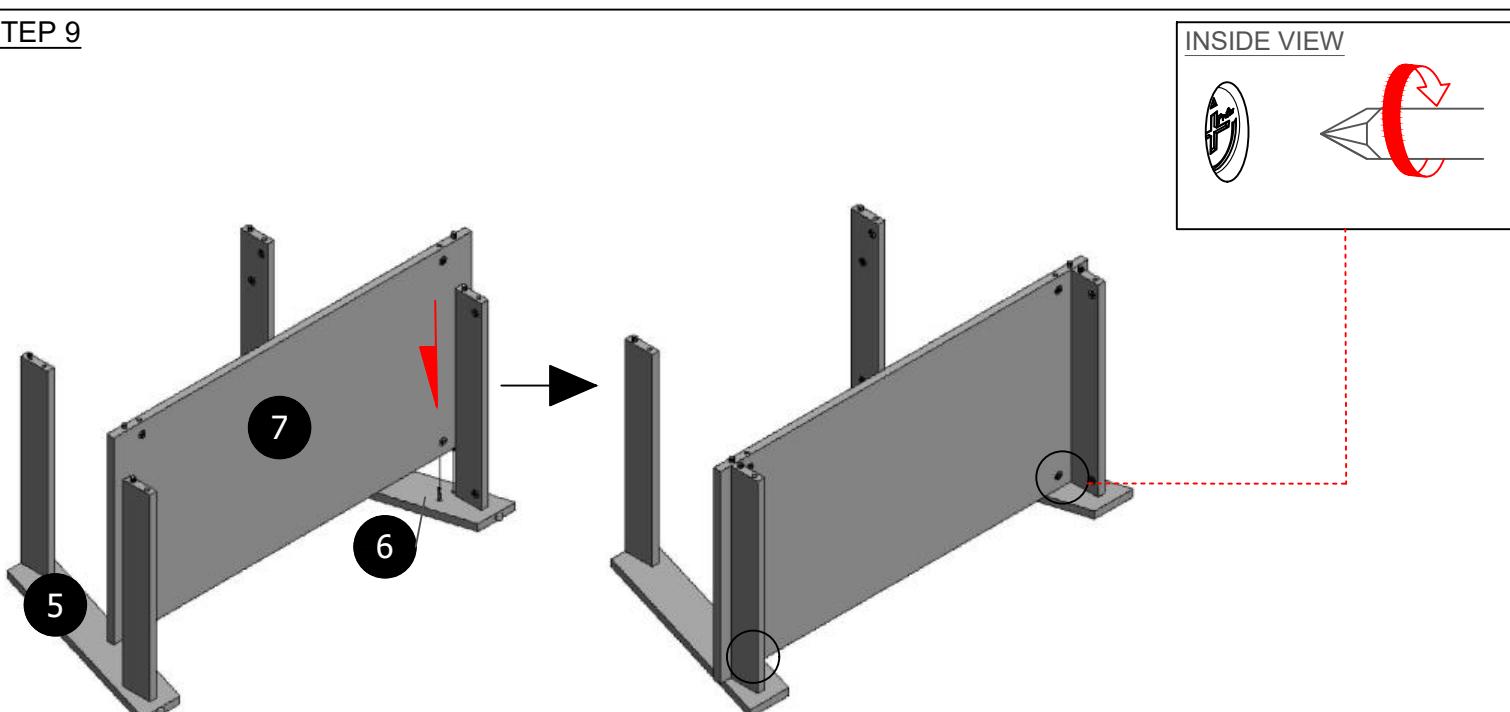


C4031CT ASSEMBLY INSTRUCTION

STEP 10

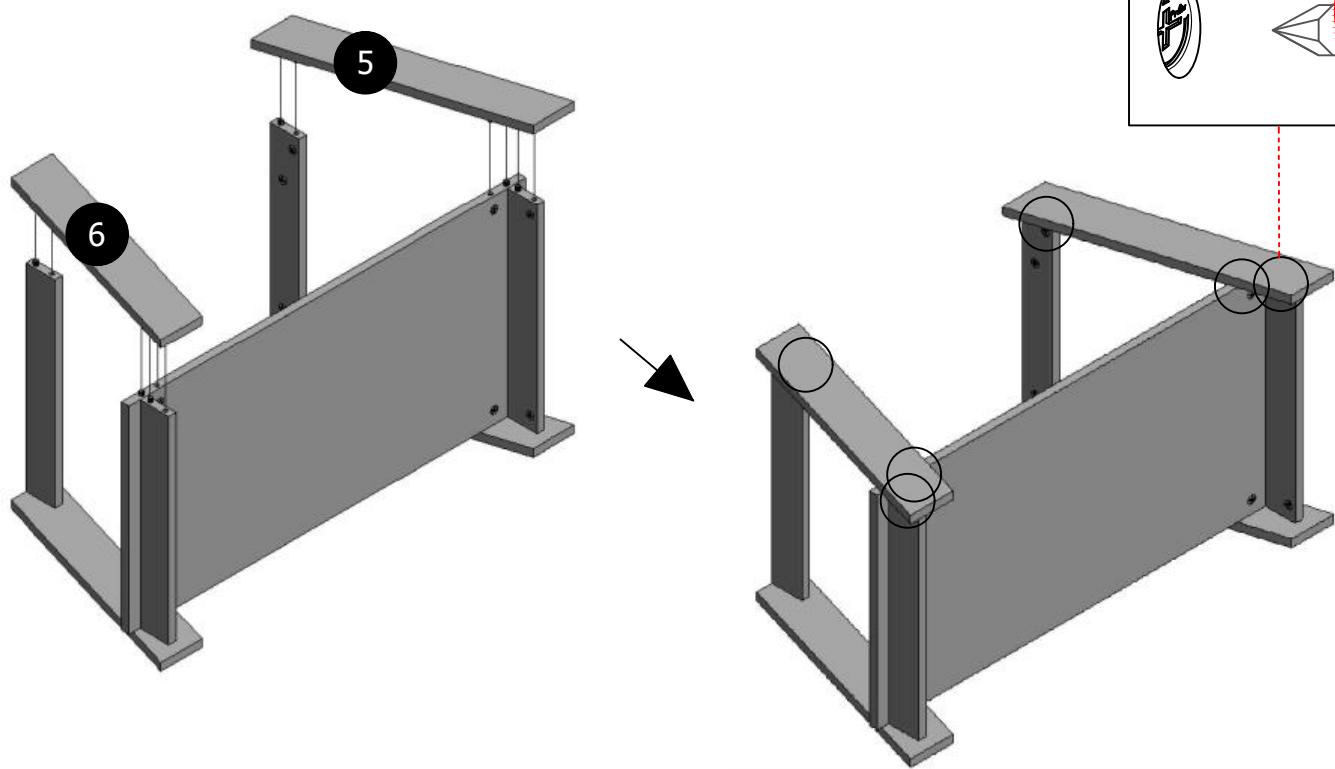


STEP 11

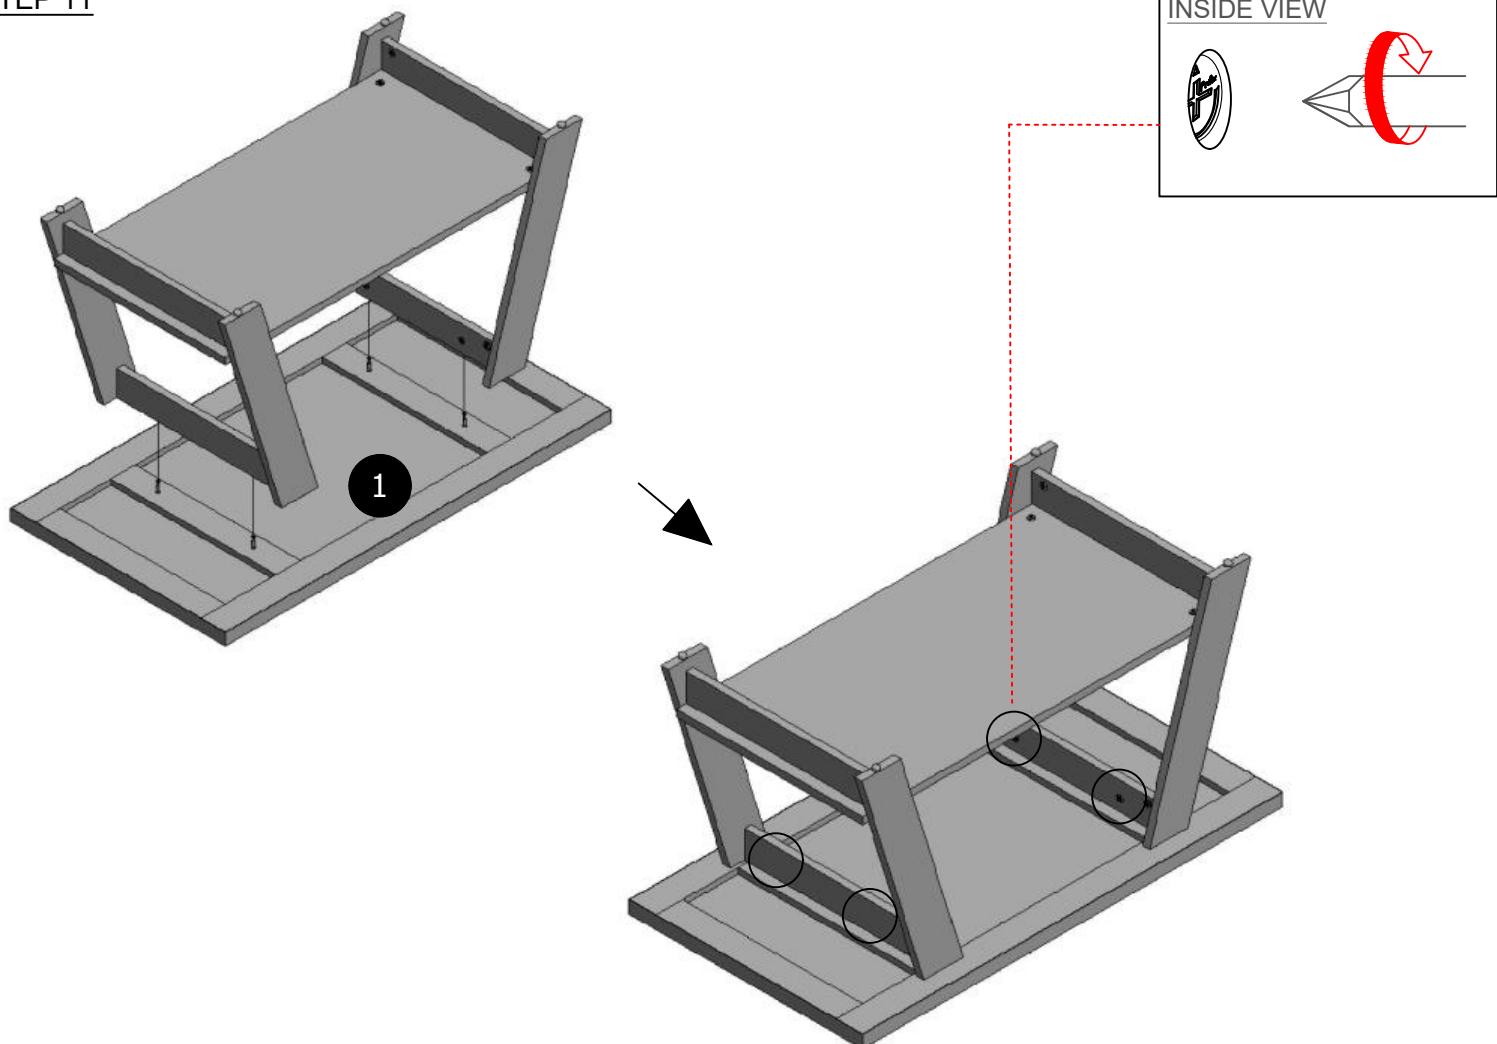


C4031CT ASSEMBLY INSTRUCTION

STEP 12

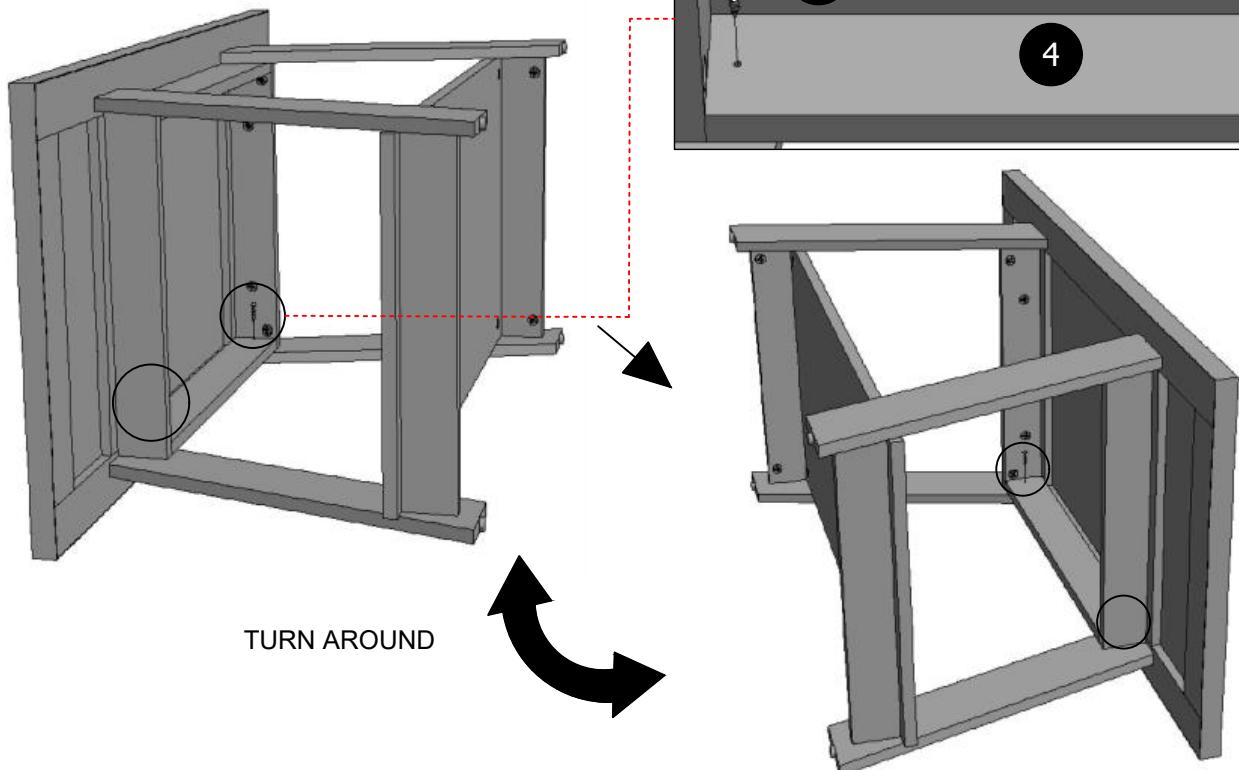

STEP 13

x 2

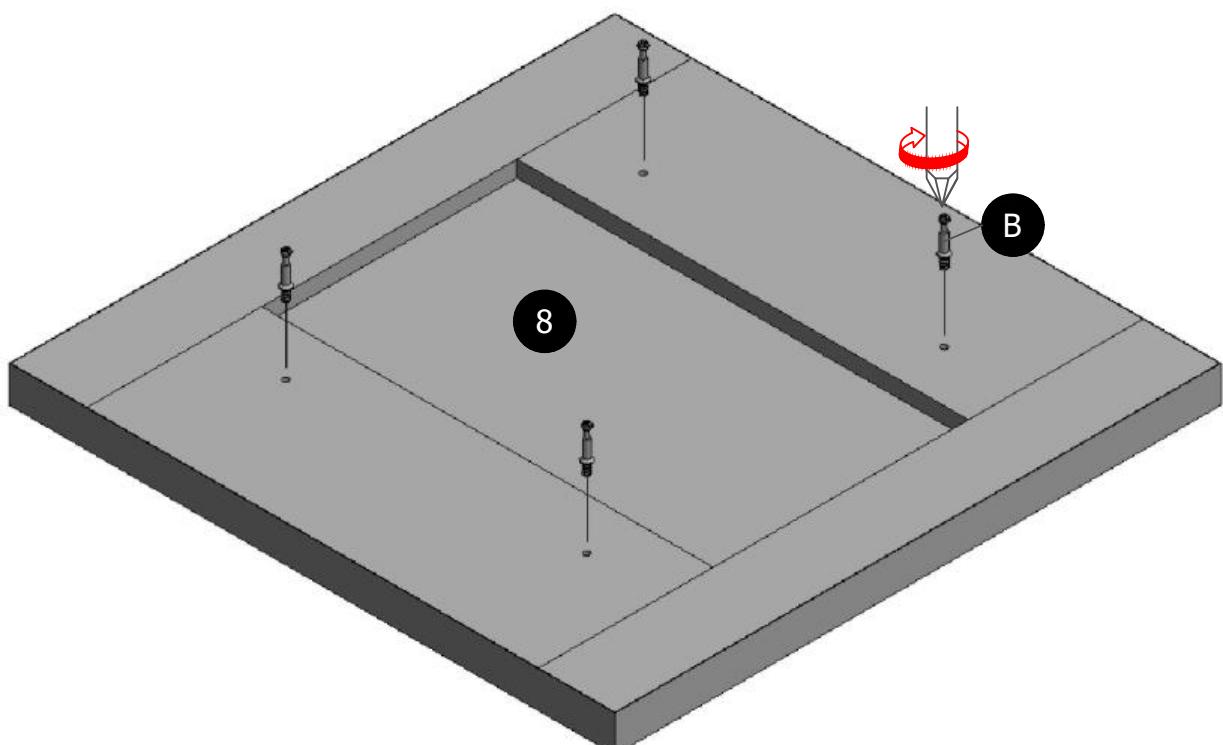


C4031CT ASSEMBLY INSTRUCTION

STEP 14

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.


X 4

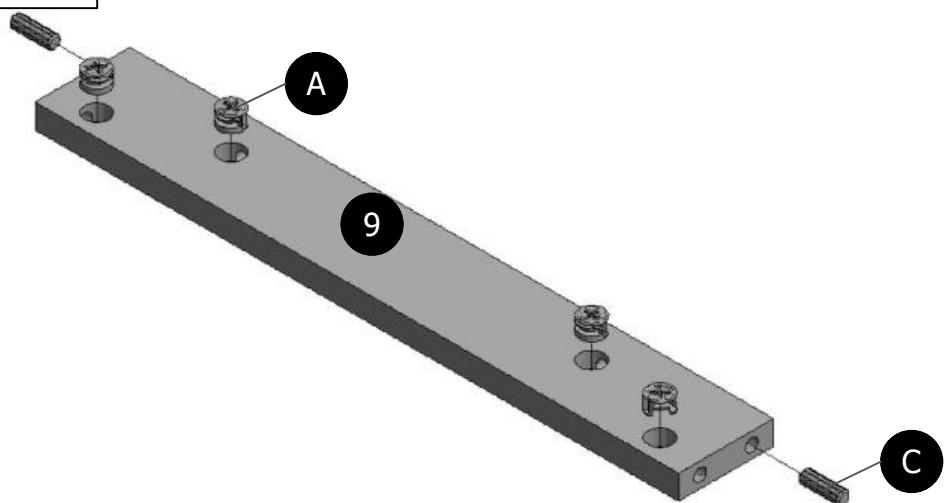

STEP 15


NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

X 4

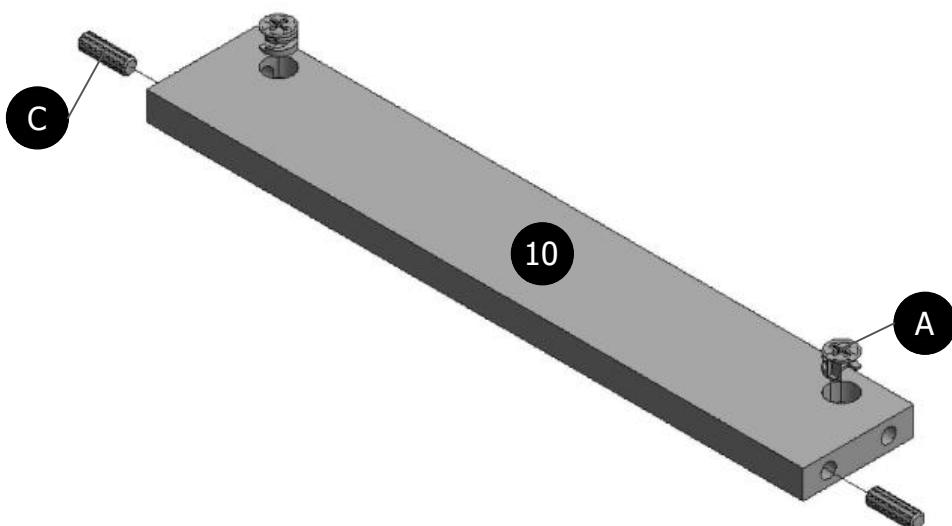

STEP 16


X 4

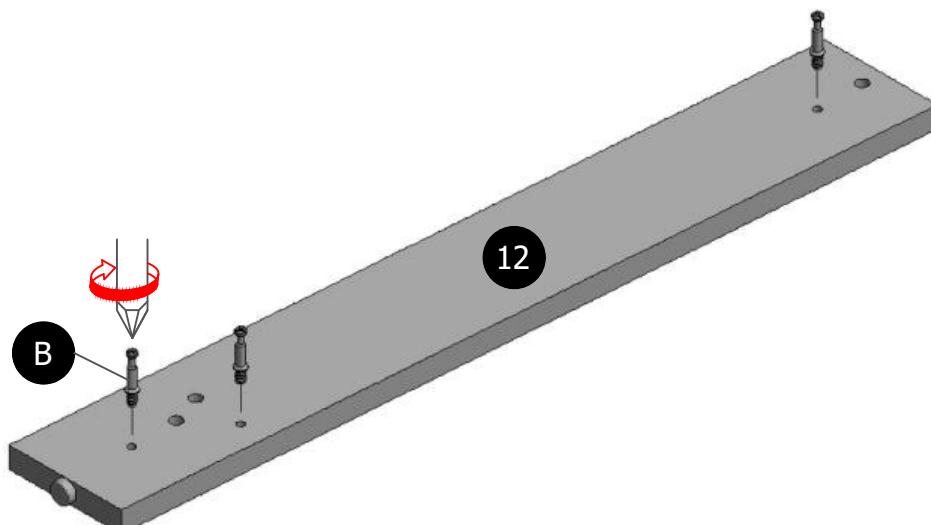

C4031CT ASSEMBLY INSTRUCTION

STEP 17


X 4

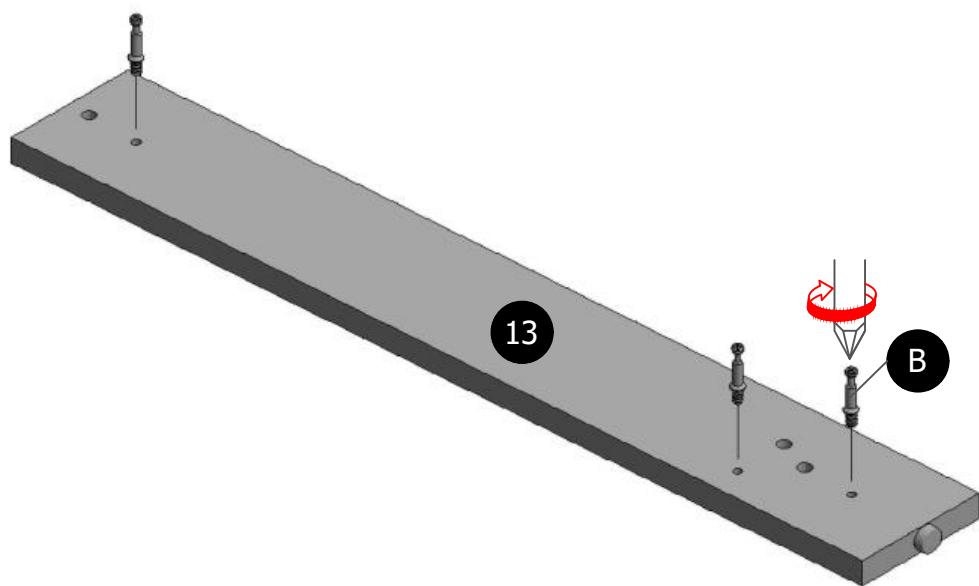

STEP 18


NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

X 2

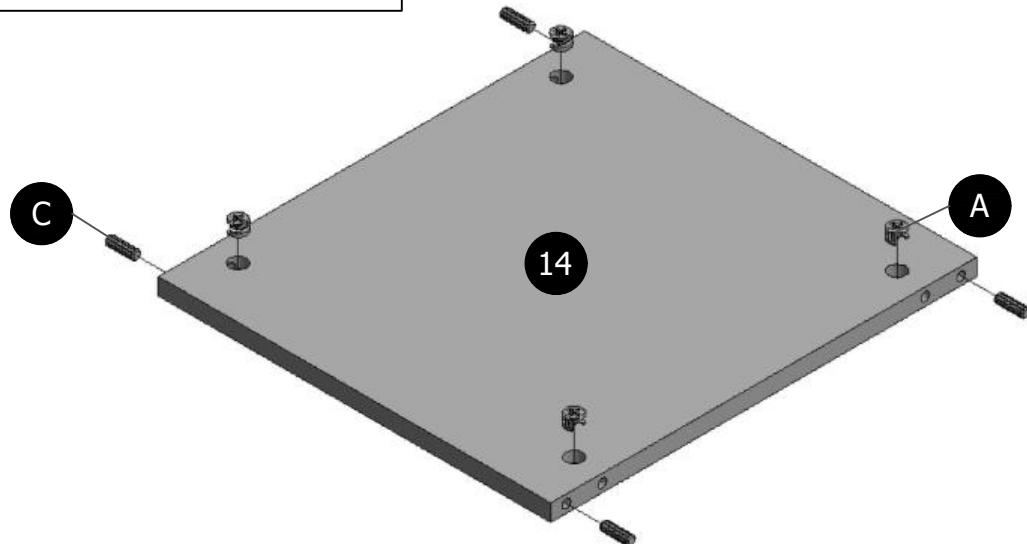

STEP 19


X 2

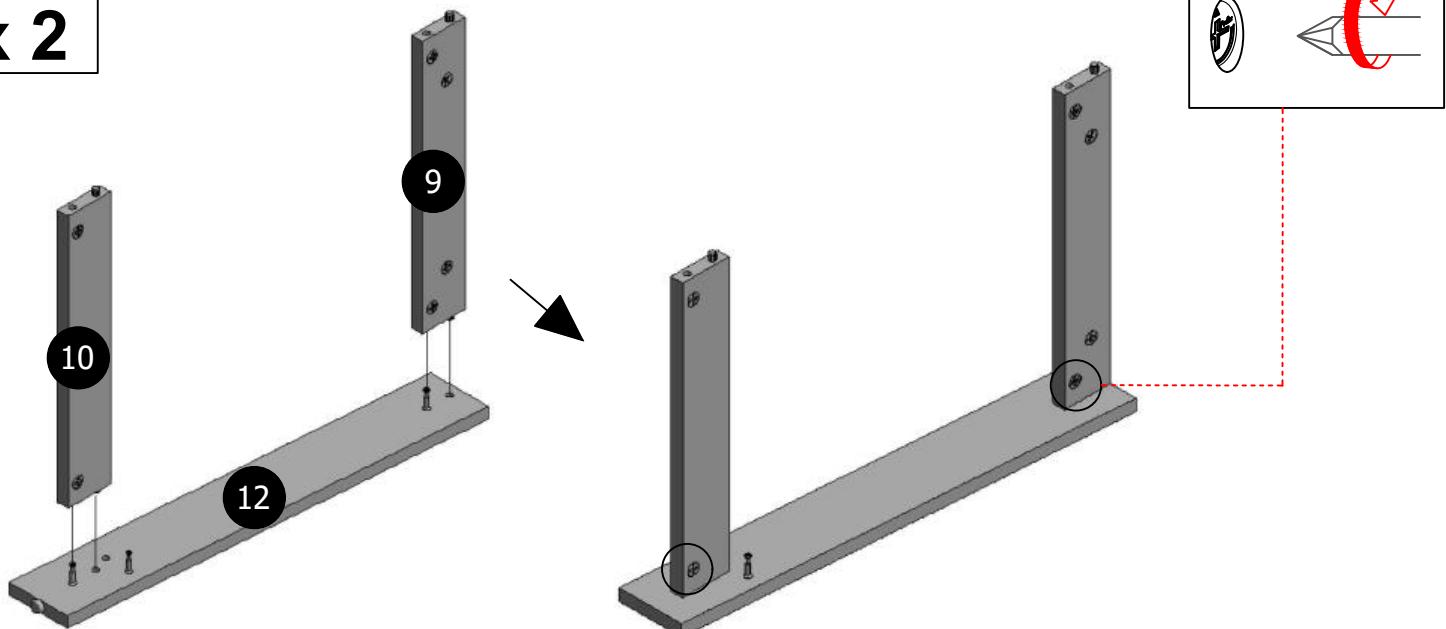

C4031CT ASSEMBLY INSTRUCTION


STEP 20

X 2

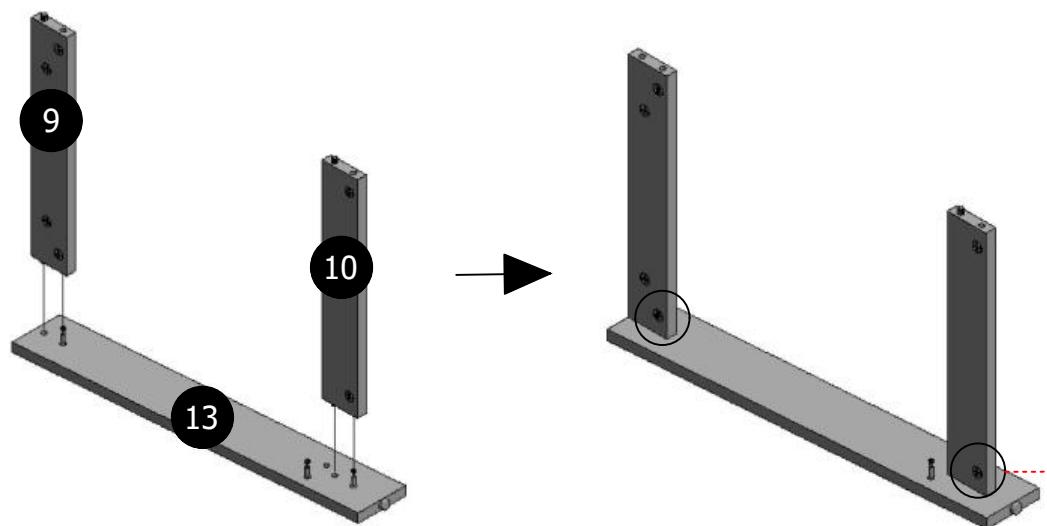


STEP 21

X 2

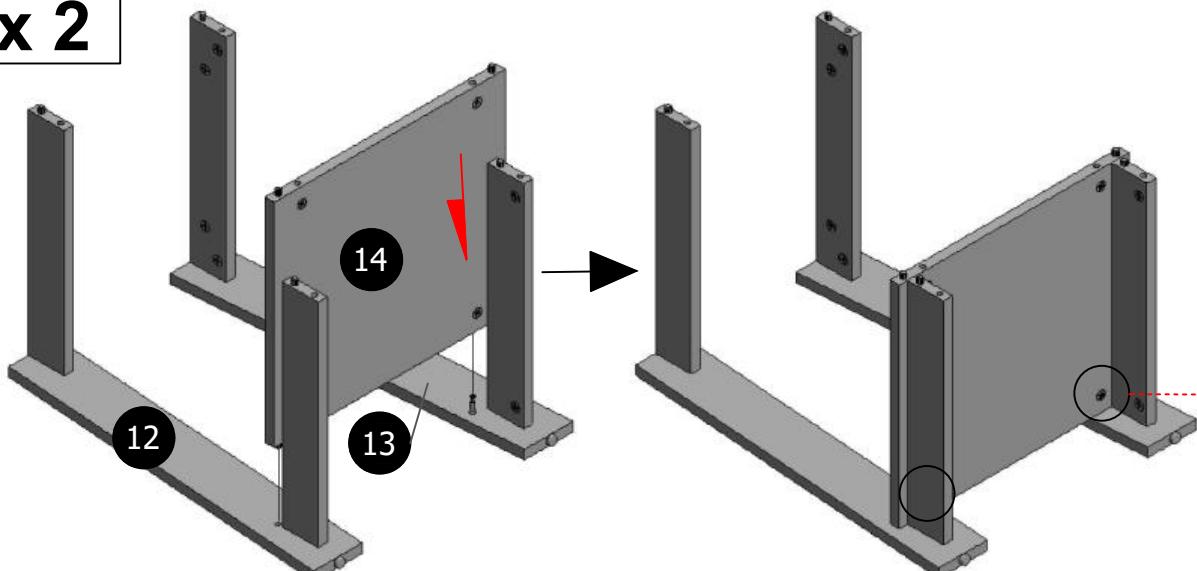

STEP 22


X 2

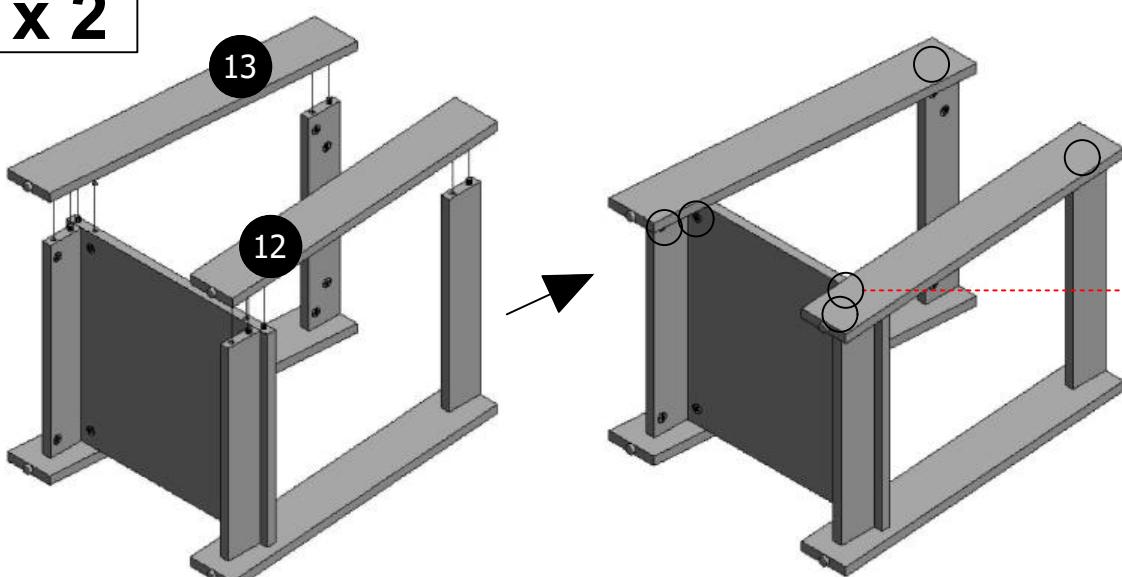


C4031CT ASSEMBLY INSTRUCTION

STEP 23

X 2


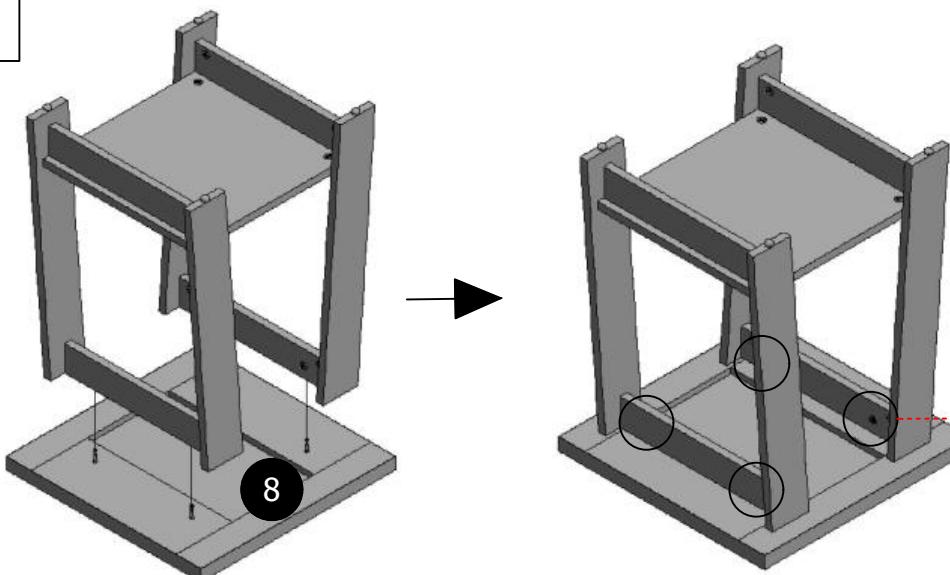


INSIDE VIEW

 


STEP 24

X 2

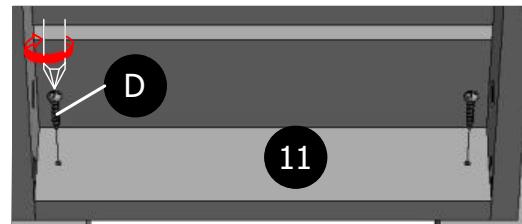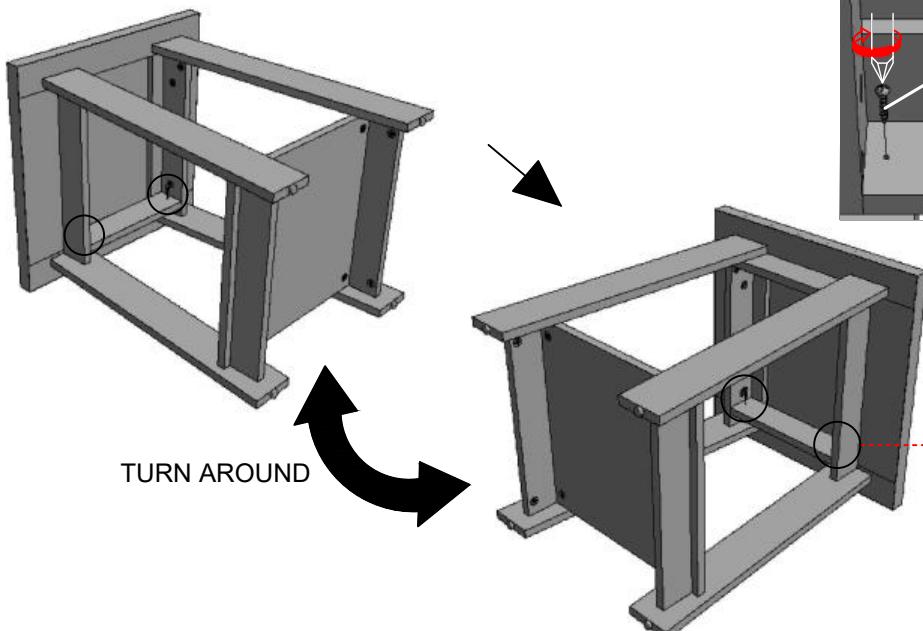

STEP 25

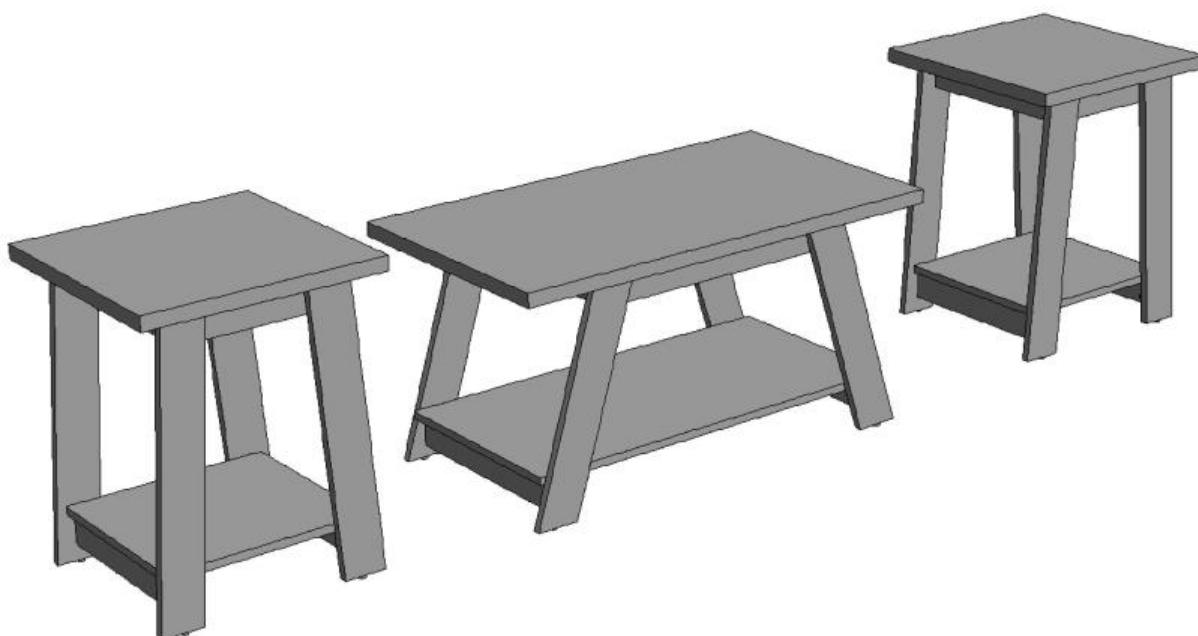

ASSEMBLY COMPLETED