


INSTRUCTION MANUAL

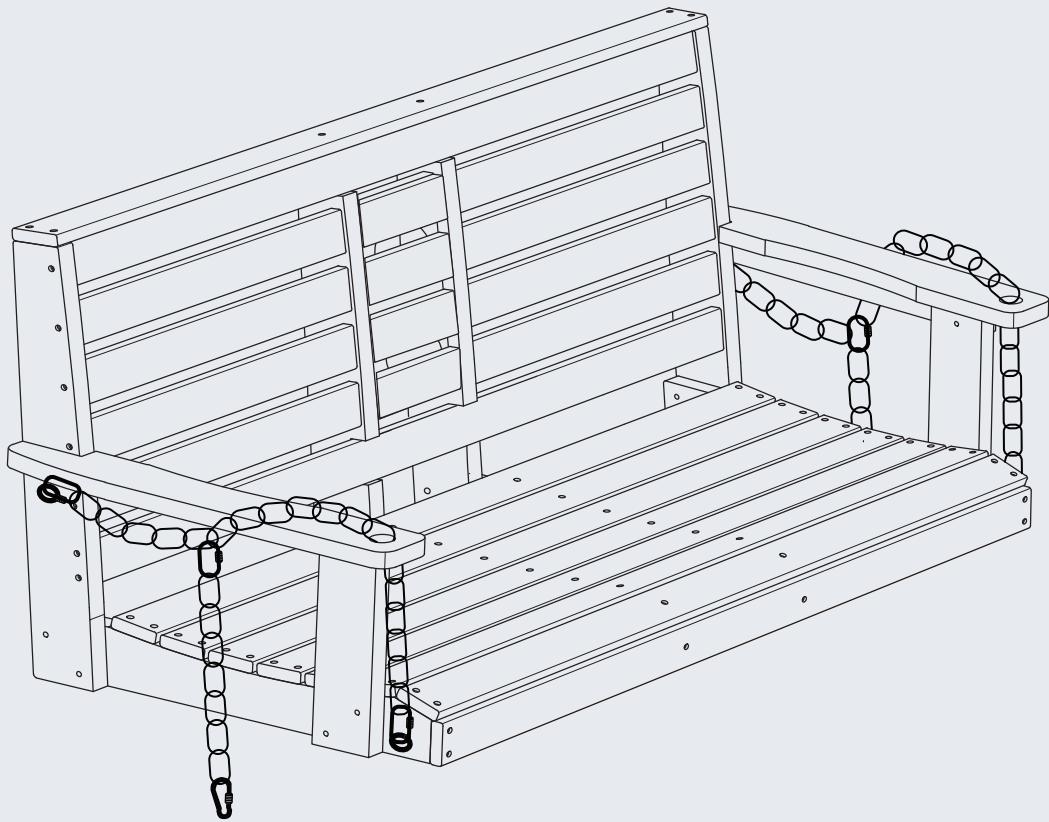

Poly 54" Porch Swing with Folding Cup Holder


v1.0

! NOTICE

Do not overtighten screws. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please adjust the speed slowly when you use electric drill for assembling to avoid screw slipping.

TOOLS REQUIRED

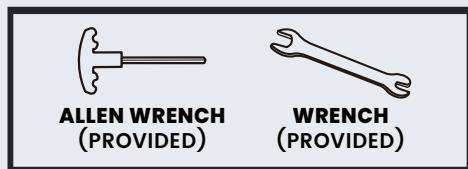

SWING
600 LBS
CAPACITY







2 PERSONS
ASSEMBLY



UP TO 20 MIN.
ASSEMBLY


HARDWARE

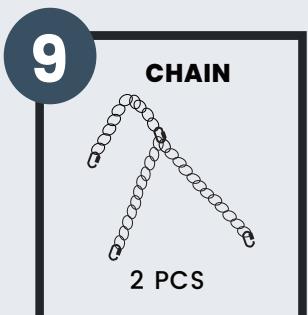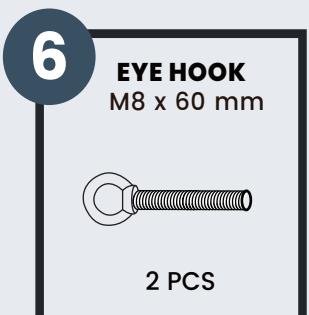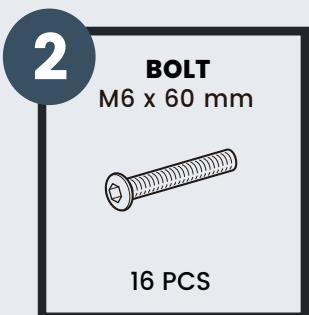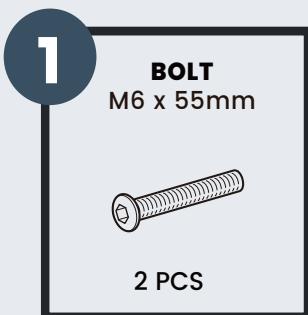

PARTS

A


SWING SEAT

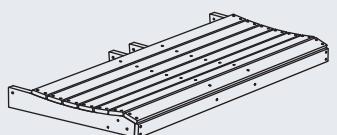

1 PC

B

BACKREST

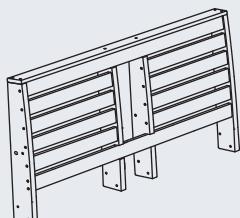

1 PC

C

LEFT ARM



1 PC

D

RIGHT ARM



1 PC

E

LEFT LEG



1 PC

F


RIGHT LEG



1 PC

G


FOLDING CUP HOLDER

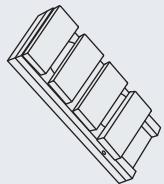

1 PC

PRODUCT ASSEMBLY – OVERALL VIEW

Look at following overall view of this swing and learn the exact position of each part to be assembled.

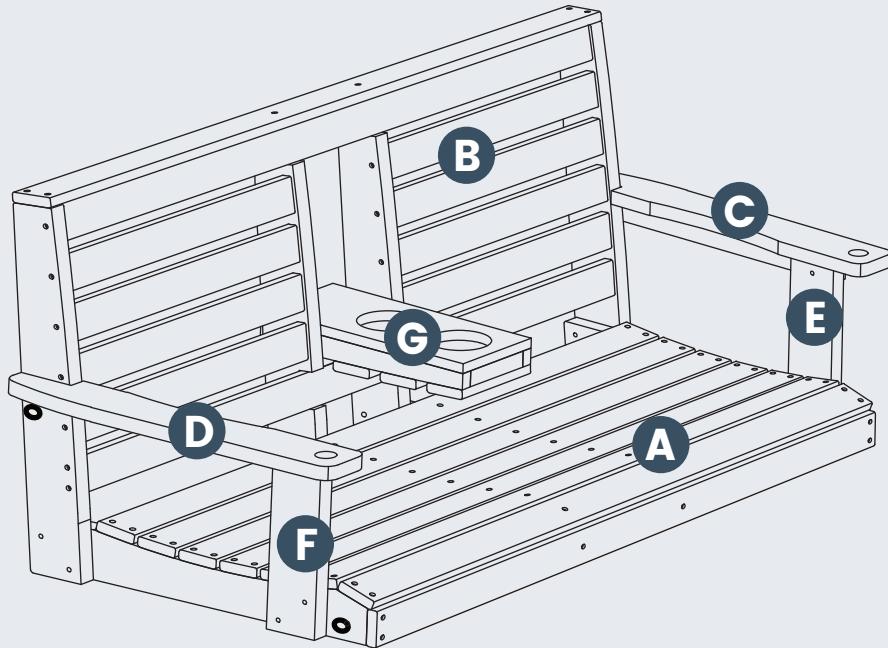


PRODUCT ASSEMBLY

1

Attach **Part C Left Arm** to **Part E Left Leg** with 1 set of **Hardware #2 Bolt, #4 Washer** and **#3 Nut** (see image below).

Do the same to attach **Part D Right Arm** to **Part F Right Leg** (see image below).

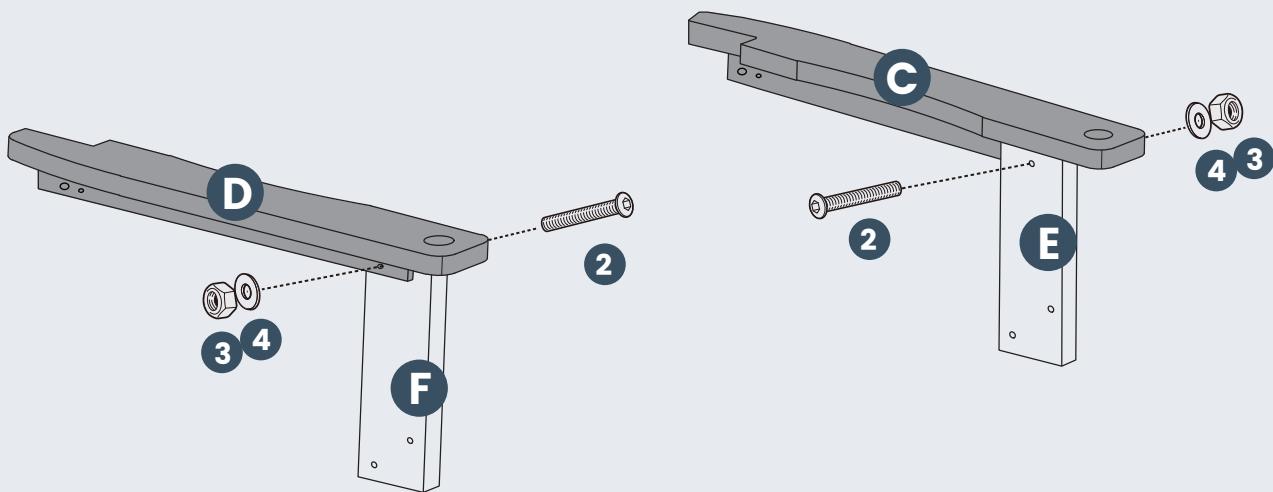


PRODUCT ASSEMBLY

2


Attach combined **Part F Right Leg** and **Part D Right Arm** to **Part A Swing seat** with 2 sets of **Hardware #2 Bolt, #4 Washer and #3 Nut** (see image below).

Do the same to attach combined **Part E Left Leg** and **Part C Right Arm** to **Part A Swing Seat**.

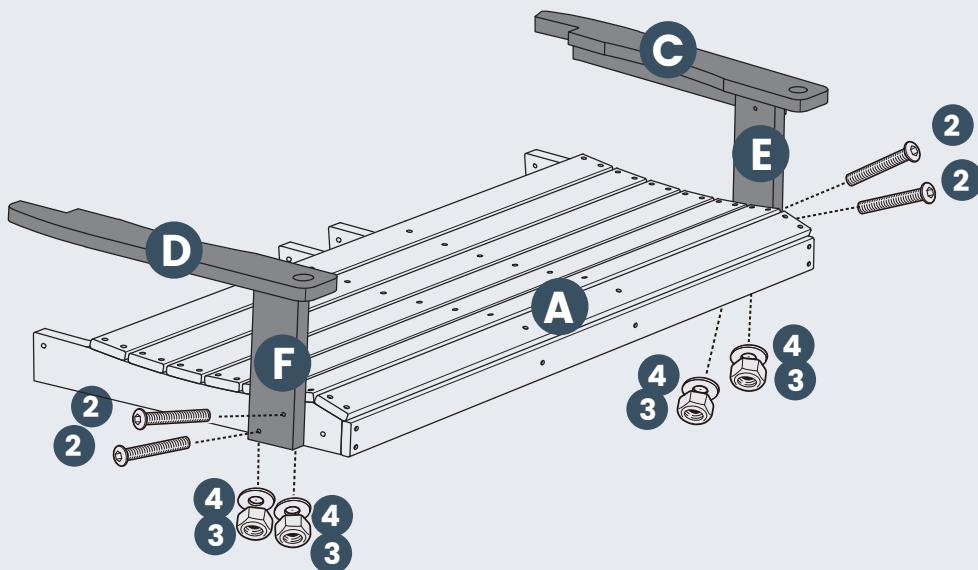

3

Place **Part G Folding Cup Holder** to **Part B Backrest** as below and attach the cup holder to the backrest with 2 sets of **Hardware #1 Bolt, #4 Washer and #3 Nut** from the back side.

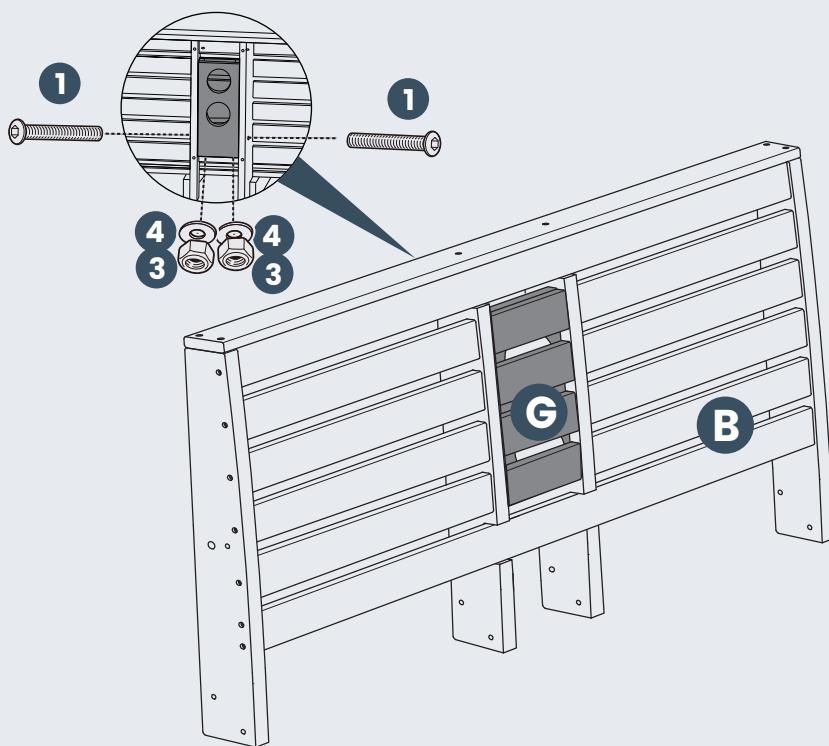


PRODUCT ASSEMBLY

4

Attach **Part B Backrest** with **Part G Folding Cup Holder** to **Part A Swing Seat** with 8 sets of **Hardware #2 Bolt, #4 Washer and #3 Nut** (see image below).


Attach **Part B Backrest** to **Part C Left Arm** and **Part D Right Arm** with 2 sets of **Hardware #2 Bolt, #4 Washer and #3 Nut** (see image below).

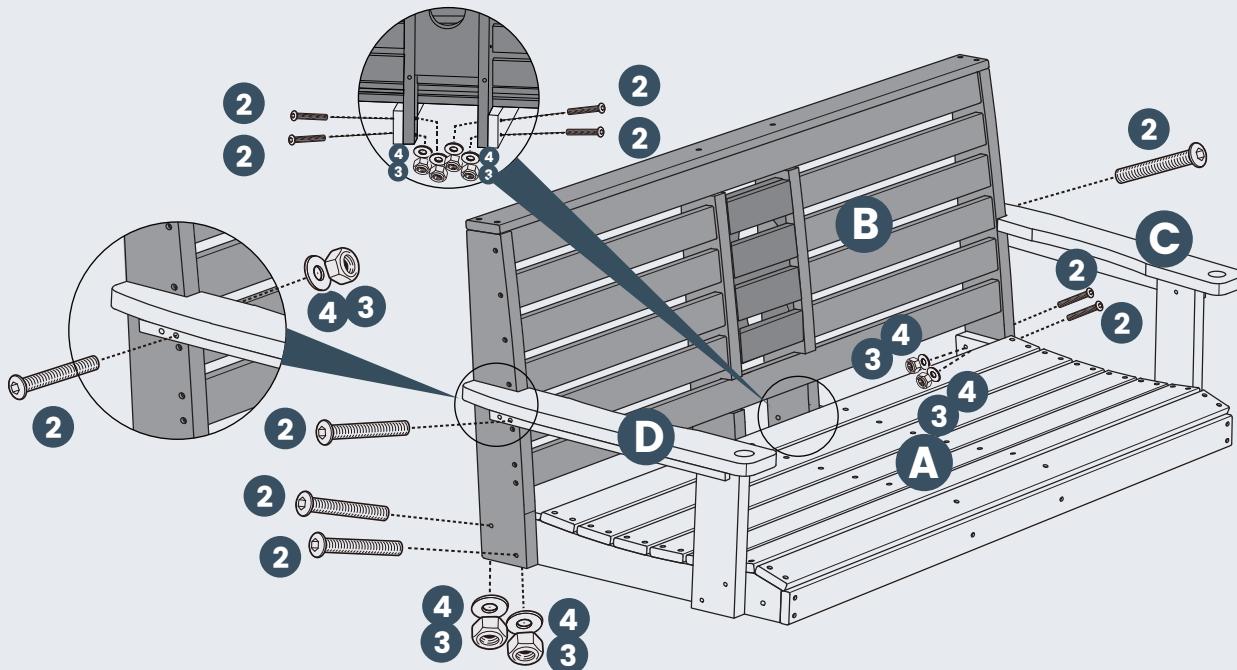

5

Attach 2 sets of **Hardware #6 Eye Hook, #8 Washer** and **#7 Nut** to **Part B Backrest, Part C Left Arm** and **Part D Right Arm** as below.

Attach 2 pcs of **Hardware #5 Eye Hook** to **Part A Swing Seat** with 2 sets of **Hardware #8 Washer** and **#7 Nut** (see image below).

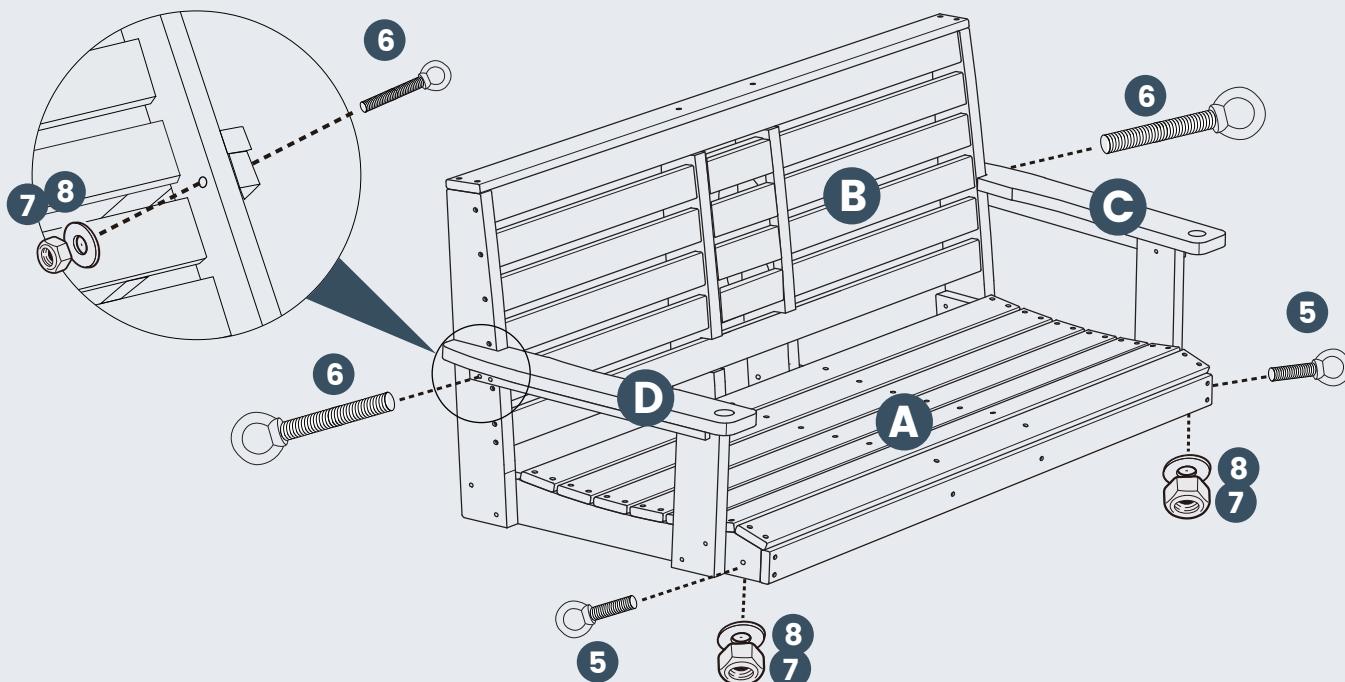


PRODUCT ASSEMBLY

6

Insert the long end of **Hardware #9 Chain** through the hole in the arm, turn the thread lock to open the carabiner, attach it to the eye bolt on **Part A Swing Seat** and turn back to lock.


Lock another carabiner to the eye bolt on **Part D Right Arm**.

Do the same to assemble another chain to the other side (see image below).

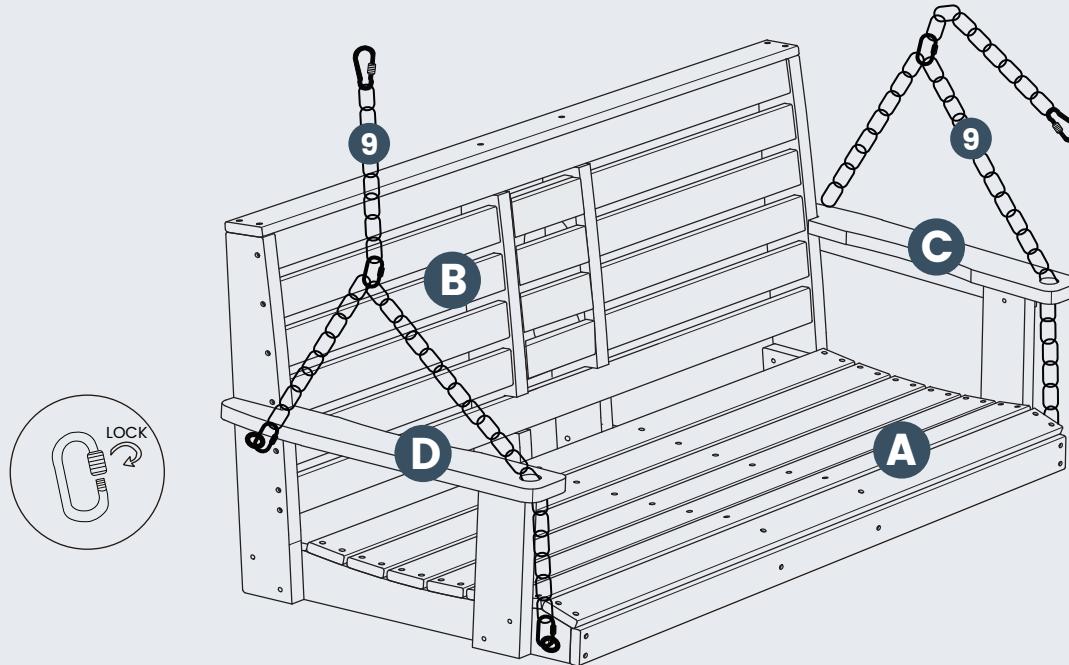

7

Tighten all the screws, bolts and nuts to ensure the swing is sturdy enough.

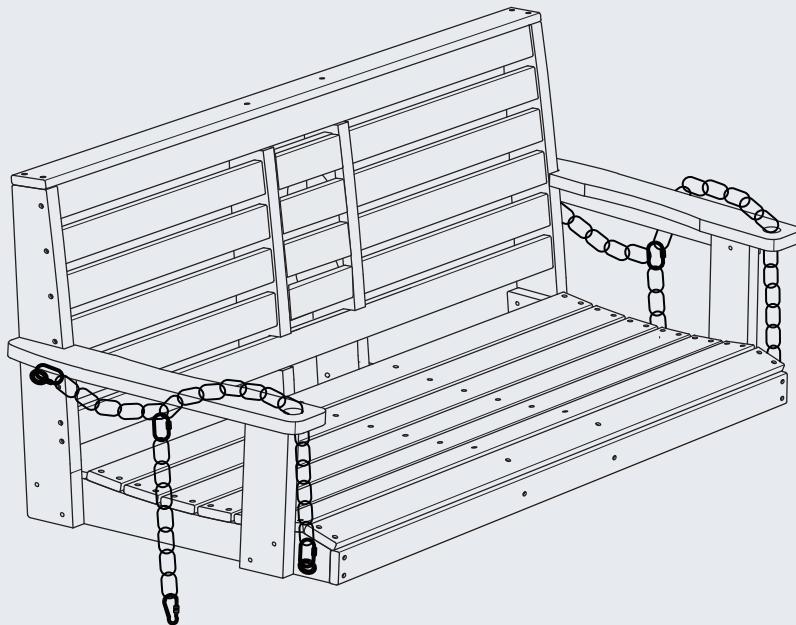

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan