


WALKER EDISON
TM

Glass Cabinet Bookcase

SKU# WEPEN41OS3

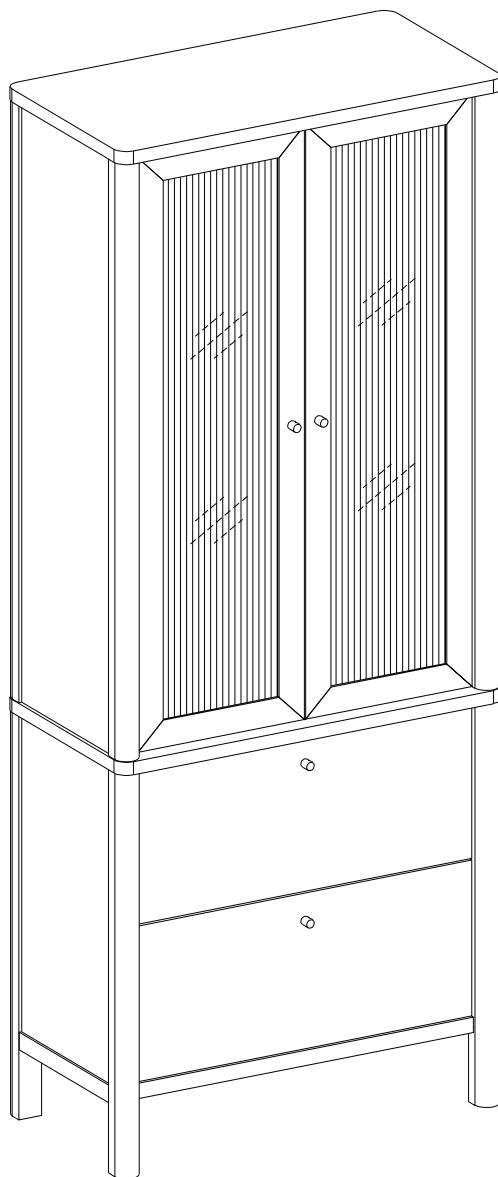

For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly



People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.

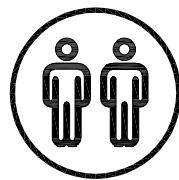

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly



Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

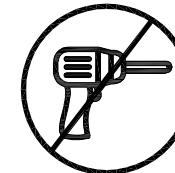

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.



Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
1	Top Panel	1
2	Bottom Panel	1
3	Fixed Divider	1
4	Upper Left Side Panel	1
5	Upper Right Side Panel	1
6	Lower Left Side Panel	1
7	Lower Right Side Panel	1
8	Upper Back Panel	1
9	Upper Adjustable Shelf	2
10	Back Rail	1
11	Lower Back Panel	1
12	Upper Left Front Foot	1
13	Upper Left Back Foot	1
14	Upper Right Front Foot	1
15	Upper Right Back Foot	1
16	Lower Left Front Foot	1
17	Lower Left Back Foot	1
18	Lower Right Front Foot	1
19	Lower Right Back Foot	1
20	Left Door Panel	1
21	Right Door Panel	1
22	Drawer Left Side Panel	2
23	Drawer Right Side Panel	2
24	Drawer Back Panel	2
25	Drawer Bottom Panel	2
26	Base Cross Bar	2
27	Drawer Front Panel	2

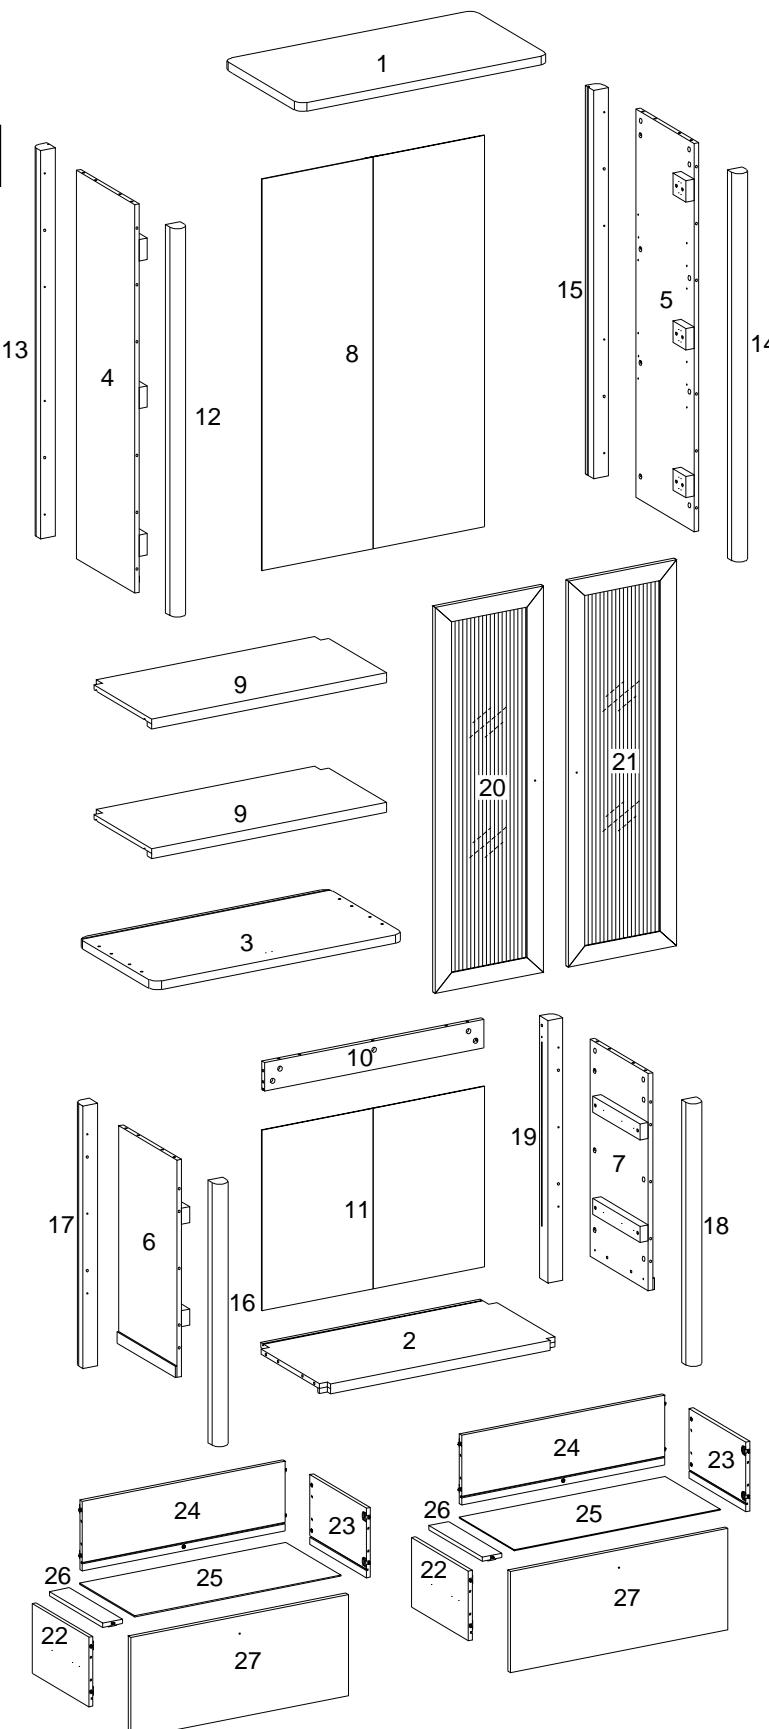




Hardware List

Part	Size	Name	Quantity
A		8x30mm Wooden dowel	36
B		6x35mm Cam bolt	45
C		15x11mm Cam lock	45
D		30mm Sticker	45
E		42x15x8mm Door stopper	2
F		4x14mm Screw	4
G		6x50mm Bolt	4
H		M4mm Hex Key	1
J			Plastic wedge 22
K		3x17mm Screw	22
L		8x5x16mm Shelf support pin	8
M		35mm Hinge	6
N		3.5x14mm Screw	36




Hardware List

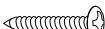Part	Size	Name	Quantity	
P		16x20mm	Handle	4
Q		5/32" x 21mm	Handle Bolt	4
R		6x30mm	Wooden dowel	16
S		Drawer Glide	2 sets	
		* Note: This piece comes preassembled for shipping purposes and must be disassembled to complete the desk assembly.		
T		3x12mm	Screw	24
U		4x12mm	Screw	2
V		4x25mm	Screw	2
W		Plastic strap	2	
X		Wall Anchor	2	
Y		Glue tube	2	

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*


Step 1

Let's get started! Using a Phillips head screwdriver, screw the cam bolts (B) into the Top Panel (1) and Fixed Divider (3). Then, insert attach the door stoppers (E) to both pieces and secure with (F) screws.

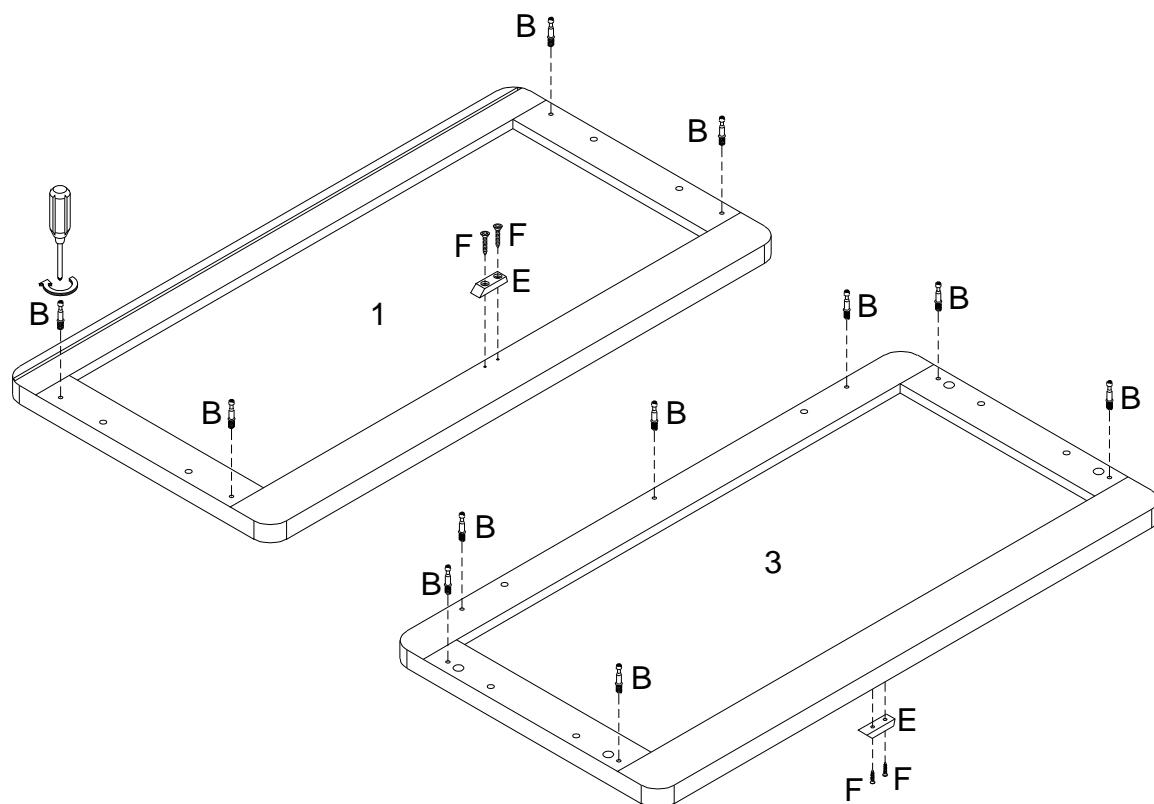


Step 2

Screw cam bolts (B) into the Upper Left Front Foot (12), Upper Left Back Foot (13), Upper Right Front Foot (14), and Upper Right Back Foot (15).

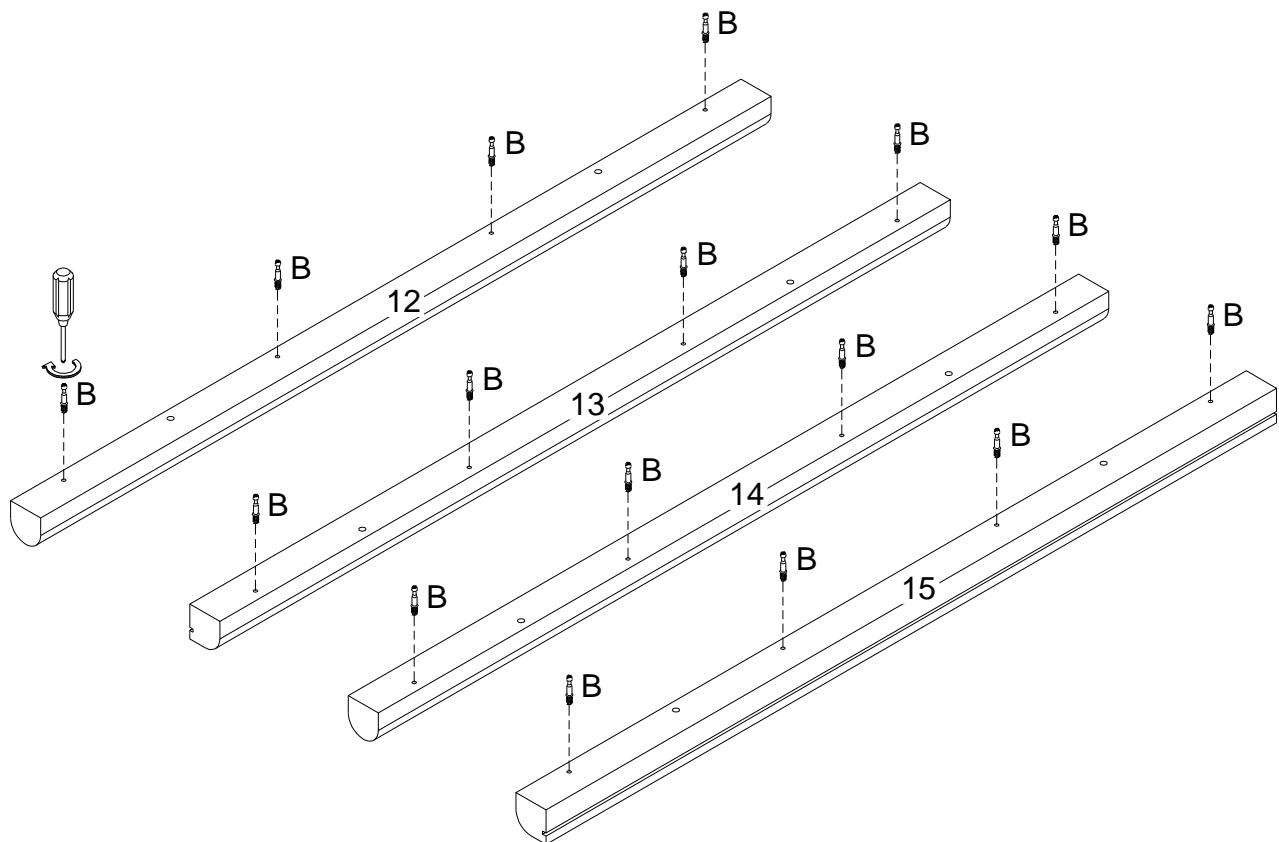


Step 3

Now, screw cam bolts (B) into the Lower Right Back Foot (19), Lower Right Front Foot (18), Lower Left Back Foot (17), and Lower Left Front Foot (16).

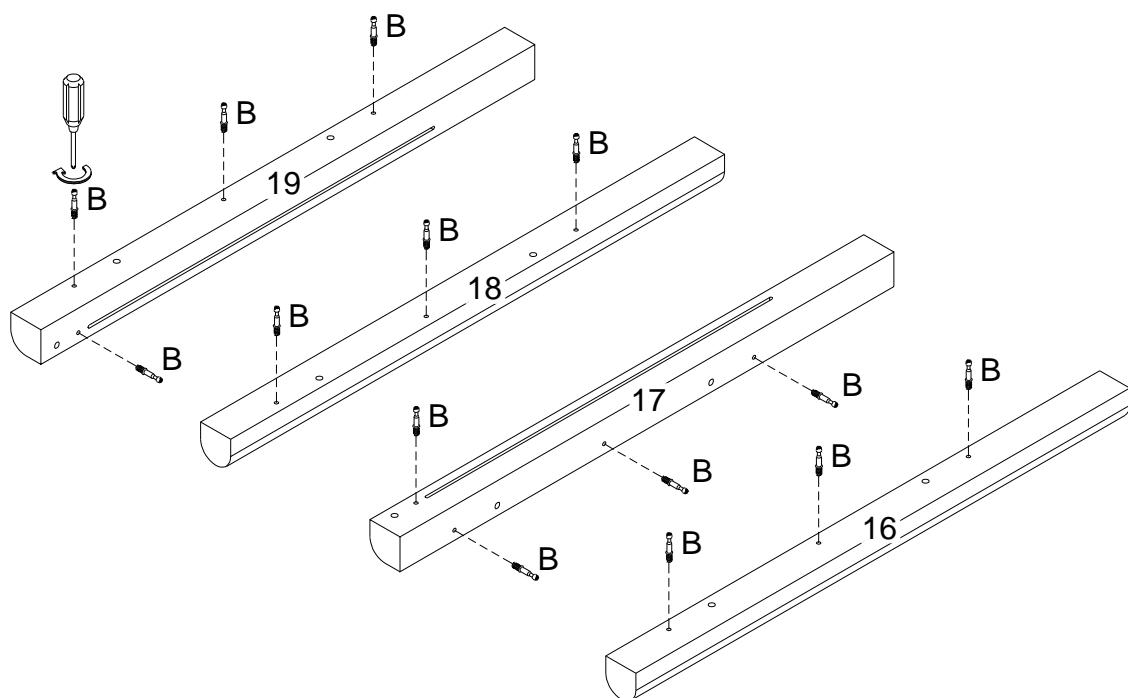

Step 4

Insert wooden dowels (A) into the Upper Left Side Panel (4) and the Upper Right Side Panel (5).

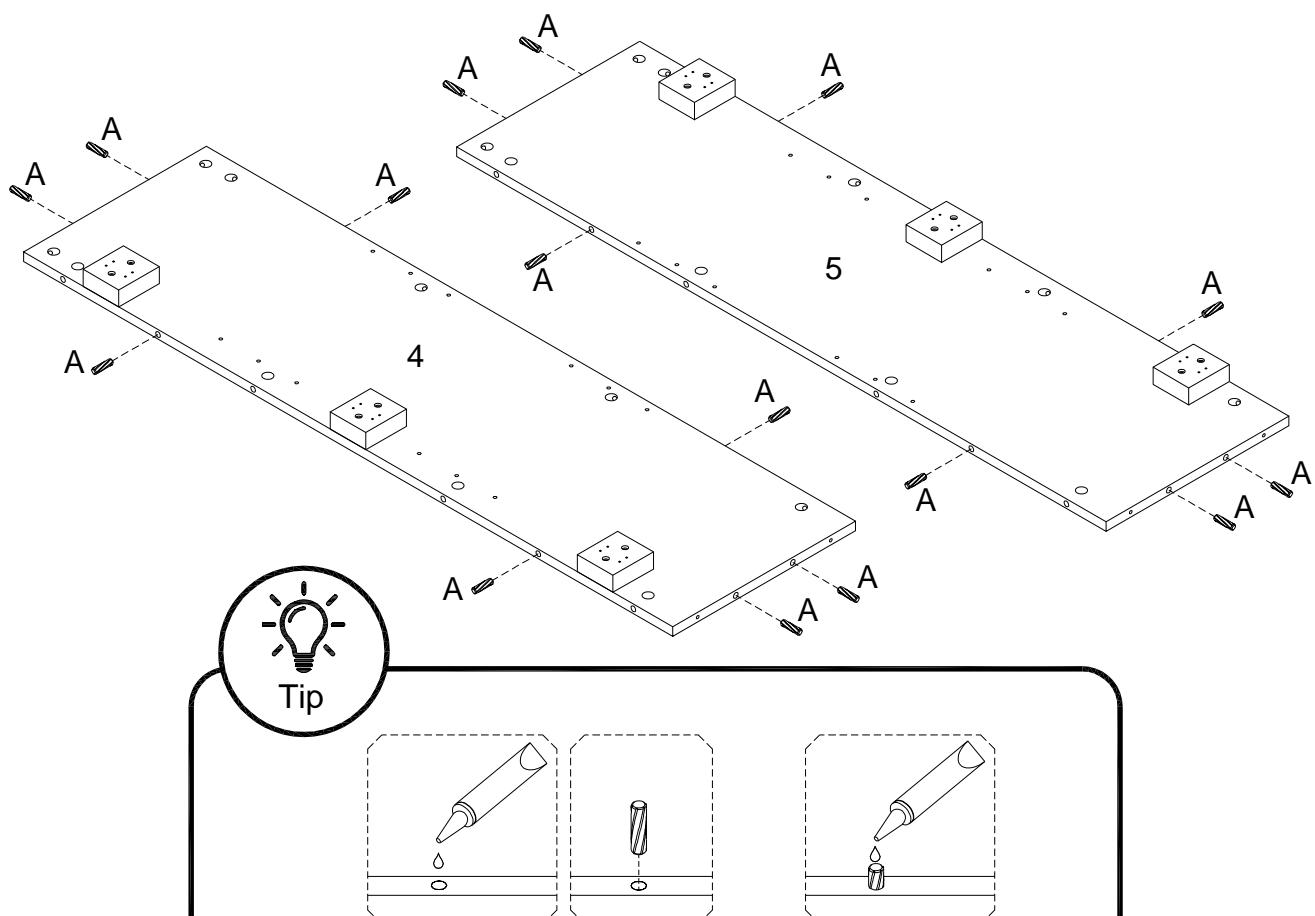


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


Step 5

Press the plastic lever to remove the drawer member from the cabinet member on each drawer glide (S).

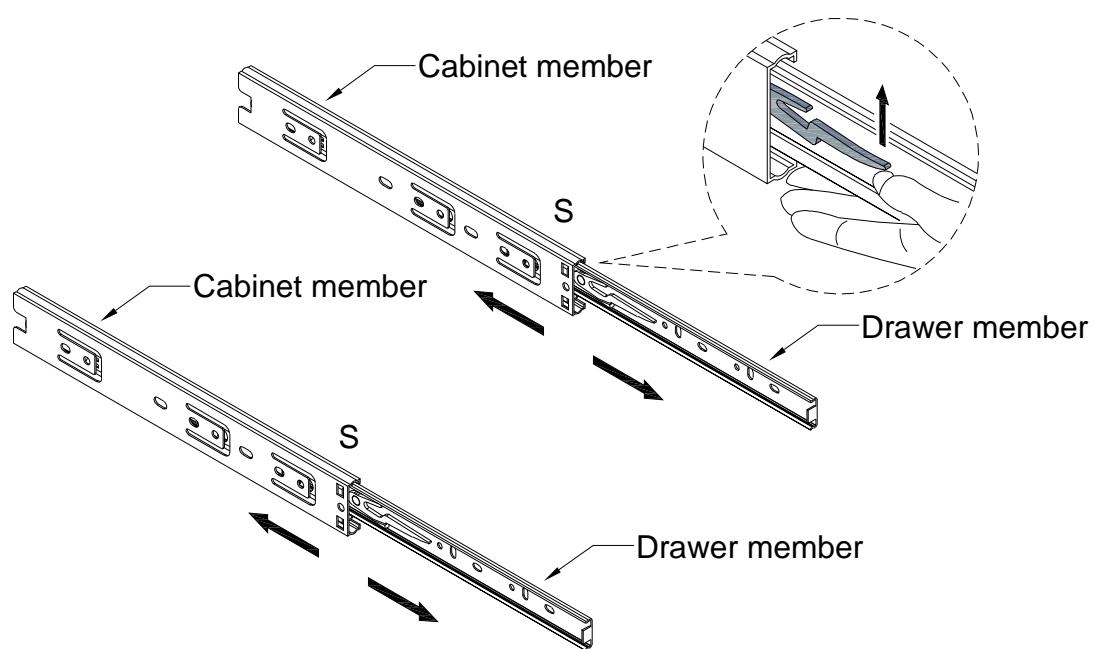


Step 6

Attach the cabinet member sides of the drawer glides (S) to the Lower Left Side Panel (6) and the Lower Right Side Panel (7) using the (T) screws. Next, insert the wooden dowels (A) into their designated slots and secure the cam bolts (B) into both panels.

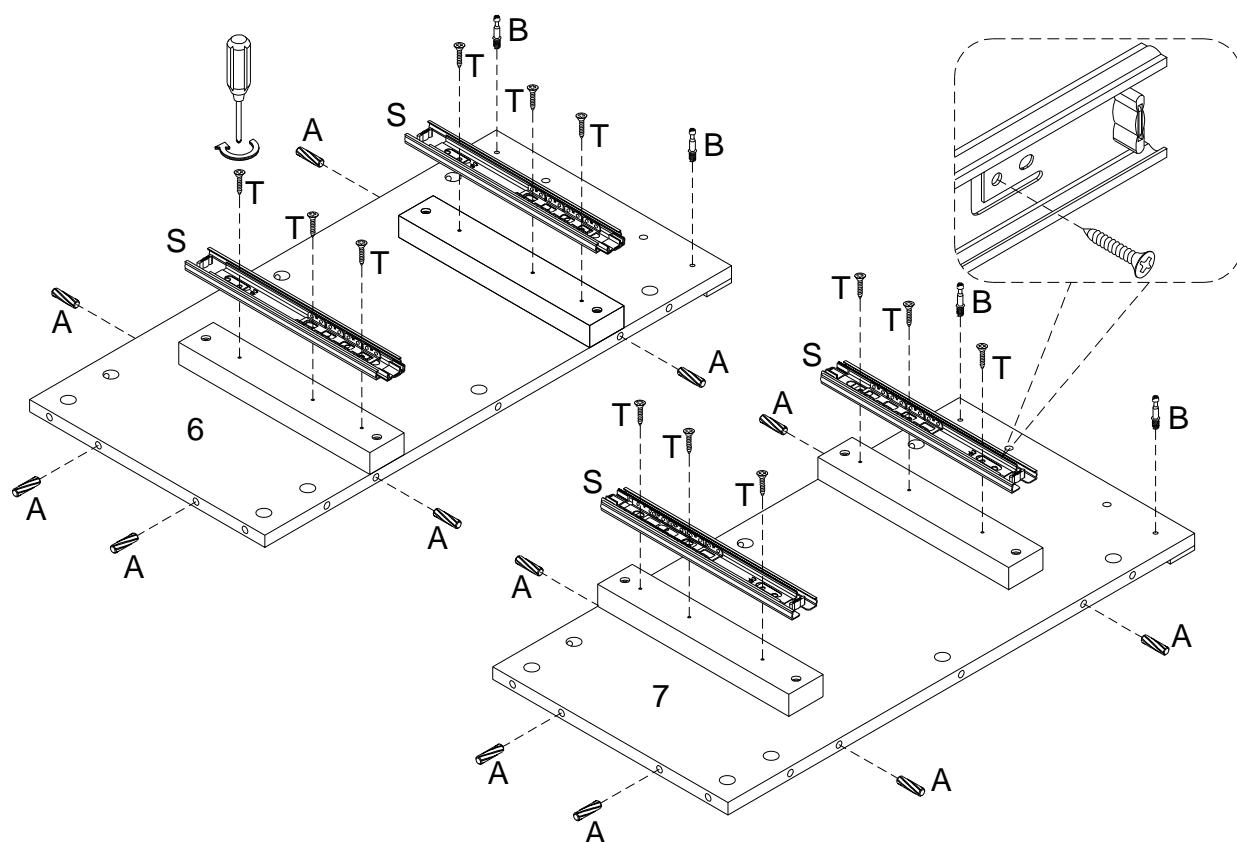



Step 7

Next, insert wooden dowels (A) into the Bottom Panel (2) and the Back Rail (10).

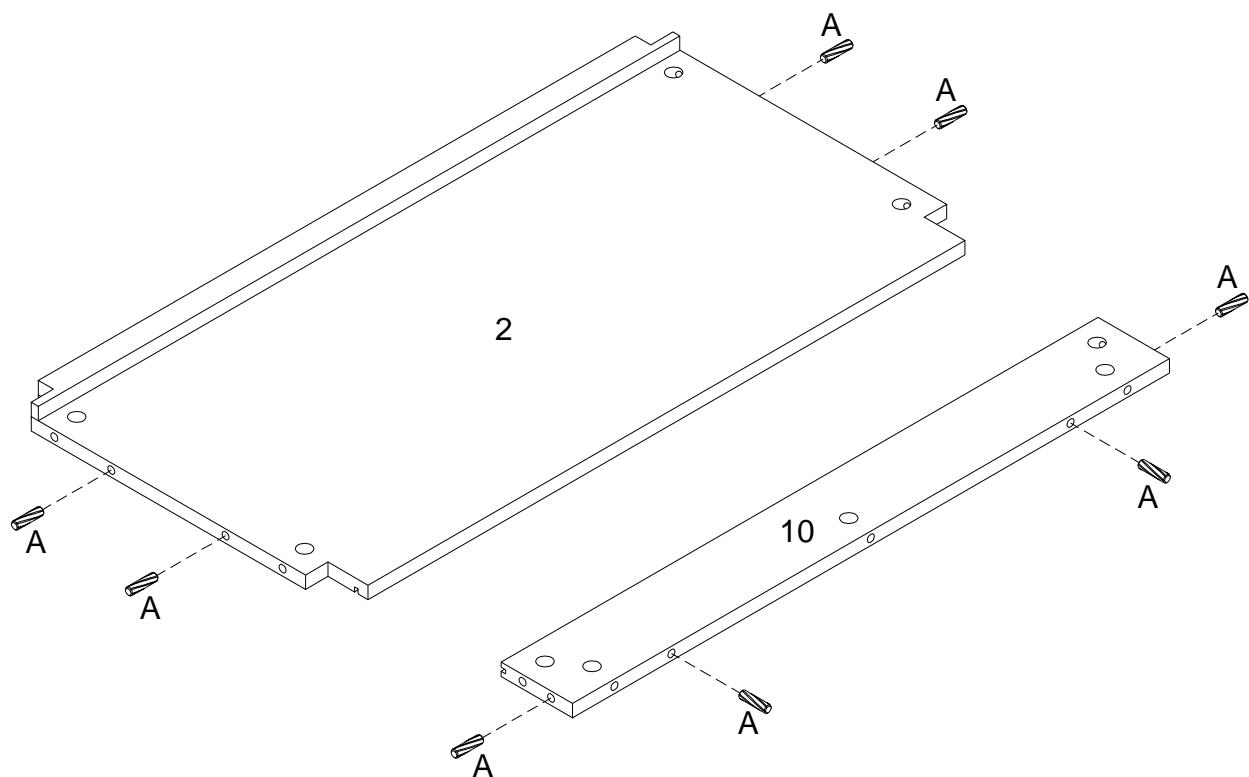


Step 8

Connect the Upper Left Front Foot (12) and the Upper Left Back Foot (13) to the Upper Left Side Panel (4) using the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver to secure. Repeat these steps for the Upper Right Back Foot (15), Upper Right Side Panel (5), and the Upper Right Front Foot (14).

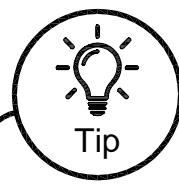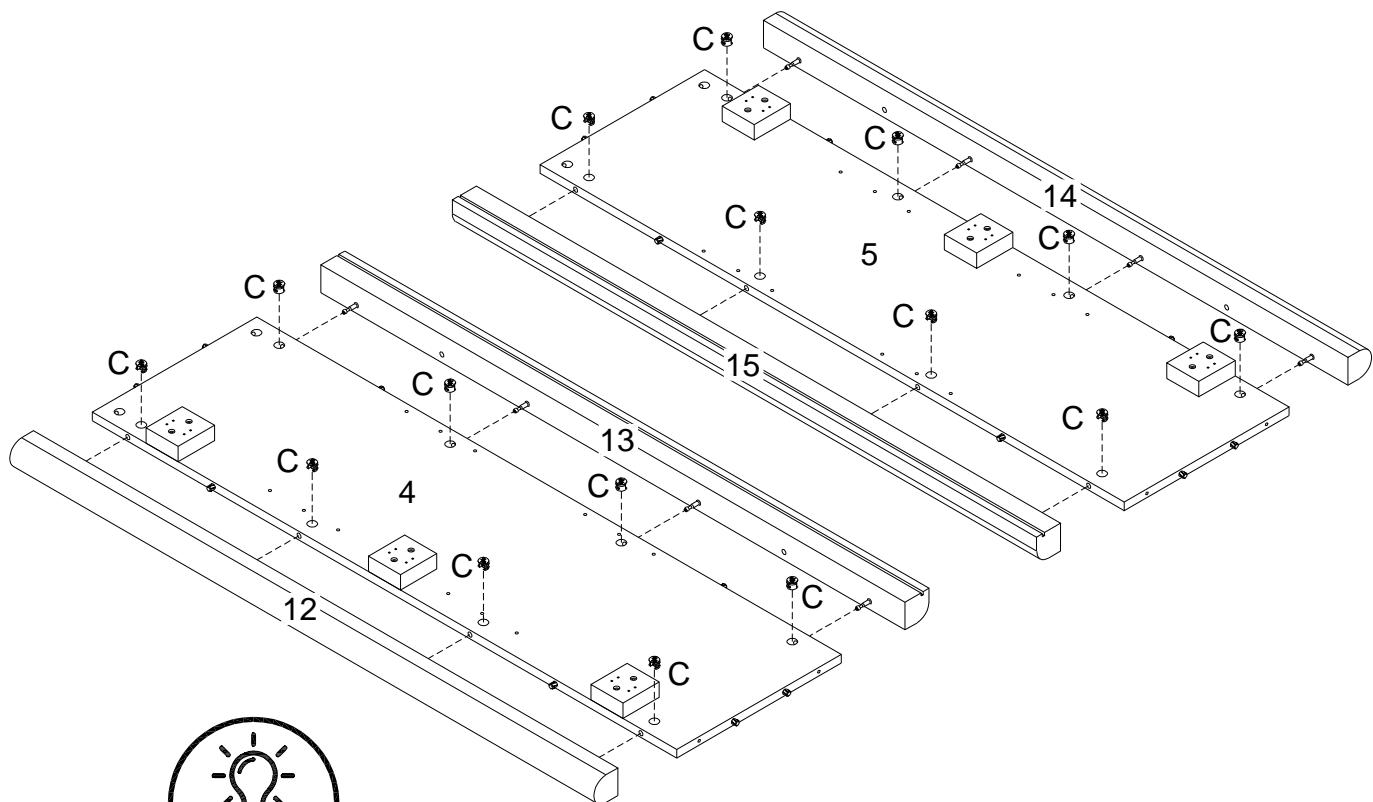


Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

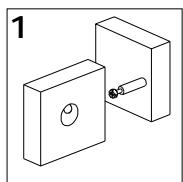

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

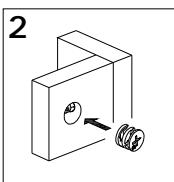


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

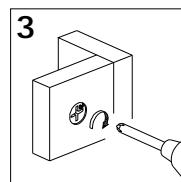

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 9

Connect the Lower Left Back Foot (17) and the Lower Left Front Foot (16) to the Lower Left Side Panel (6) using the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver to secure. Repeat these steps for the Lower Right Front Foot (18), Lower Right Back Foot (19), and the Lower Right Side Panel (7).

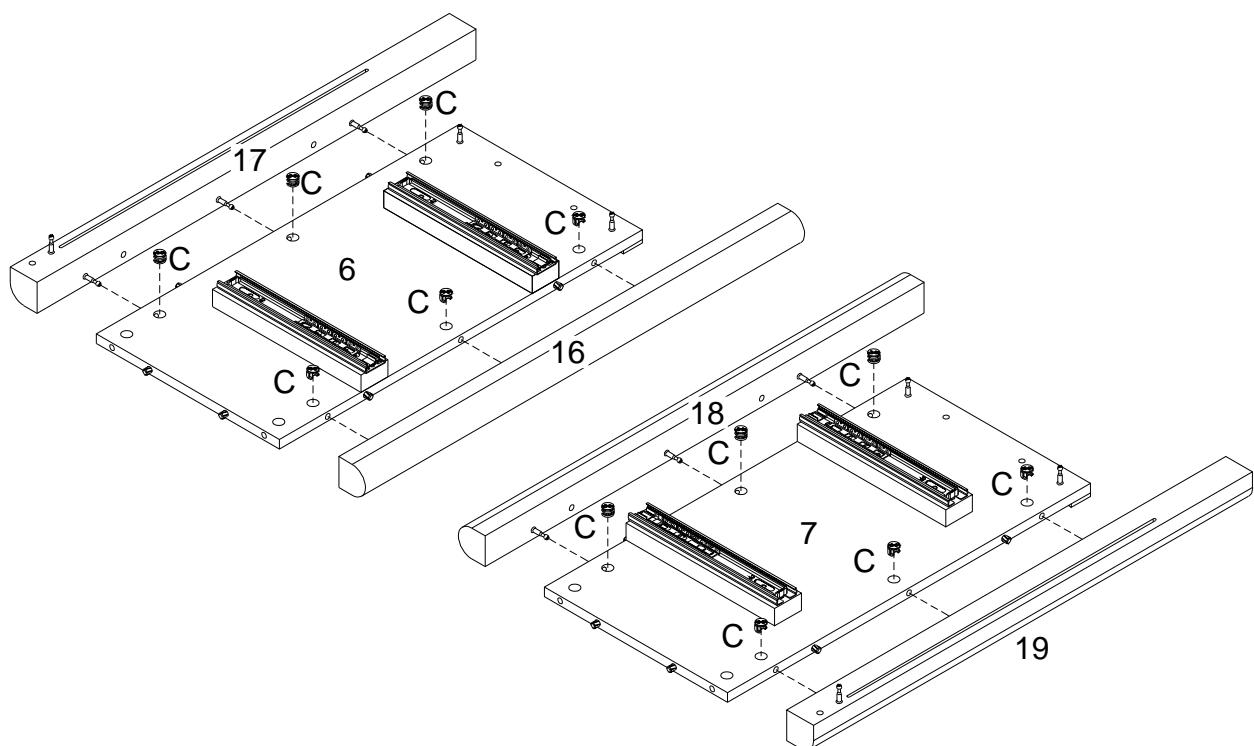



Step 10

Attach the Back Rail (10) and the Bottom Panel (2) to the Lower Left Side Panel (6) and the Lower Left Back Foot (17) using the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver to secure.

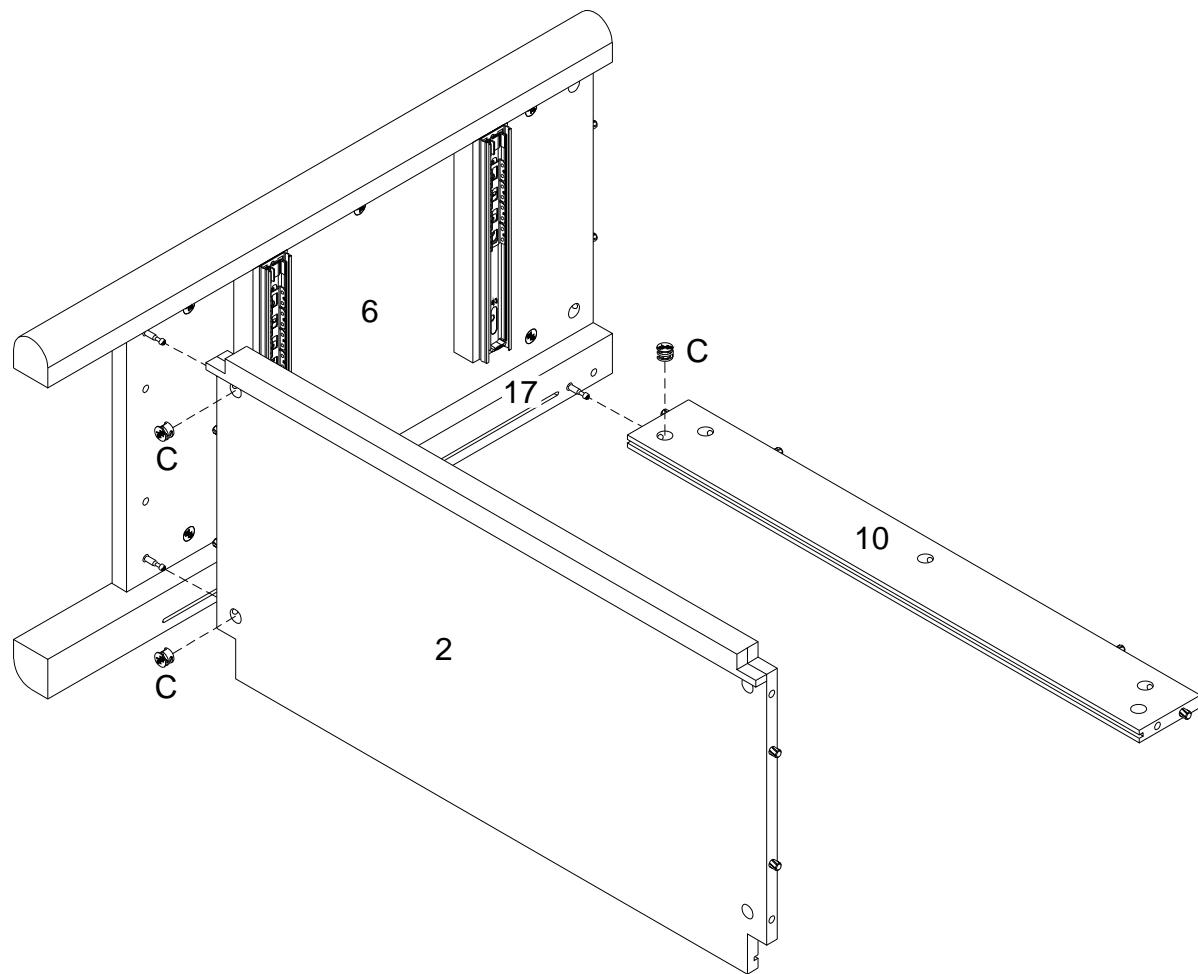


Step 11

Unfold the Lower Back Panel (11) and slide it between the grooves in the Bottom Panel (2) and the Back Rail (10).

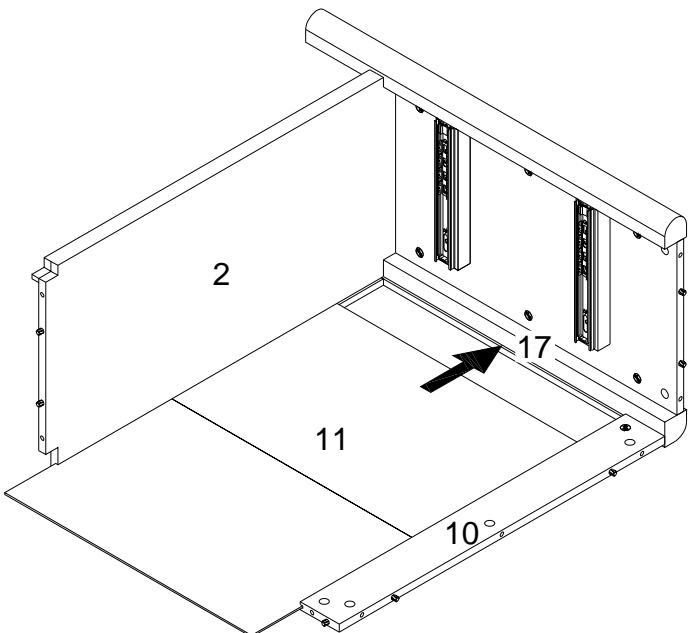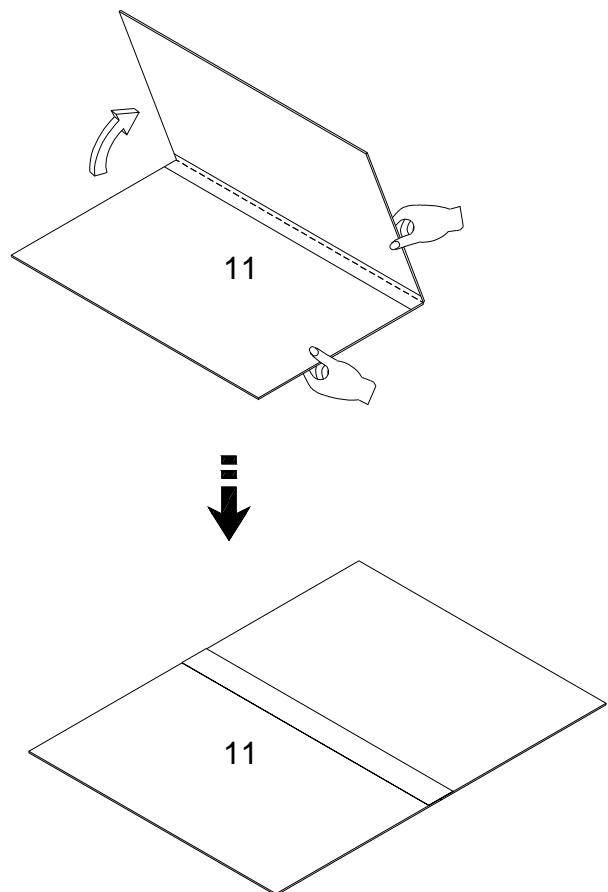


Step 12

Attach the other side of the Back Rail (10) and the Bottom Panel (2) to the Lower Right Side Panel (7) and the Lower Right Back Foot (19) using the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver to secure.

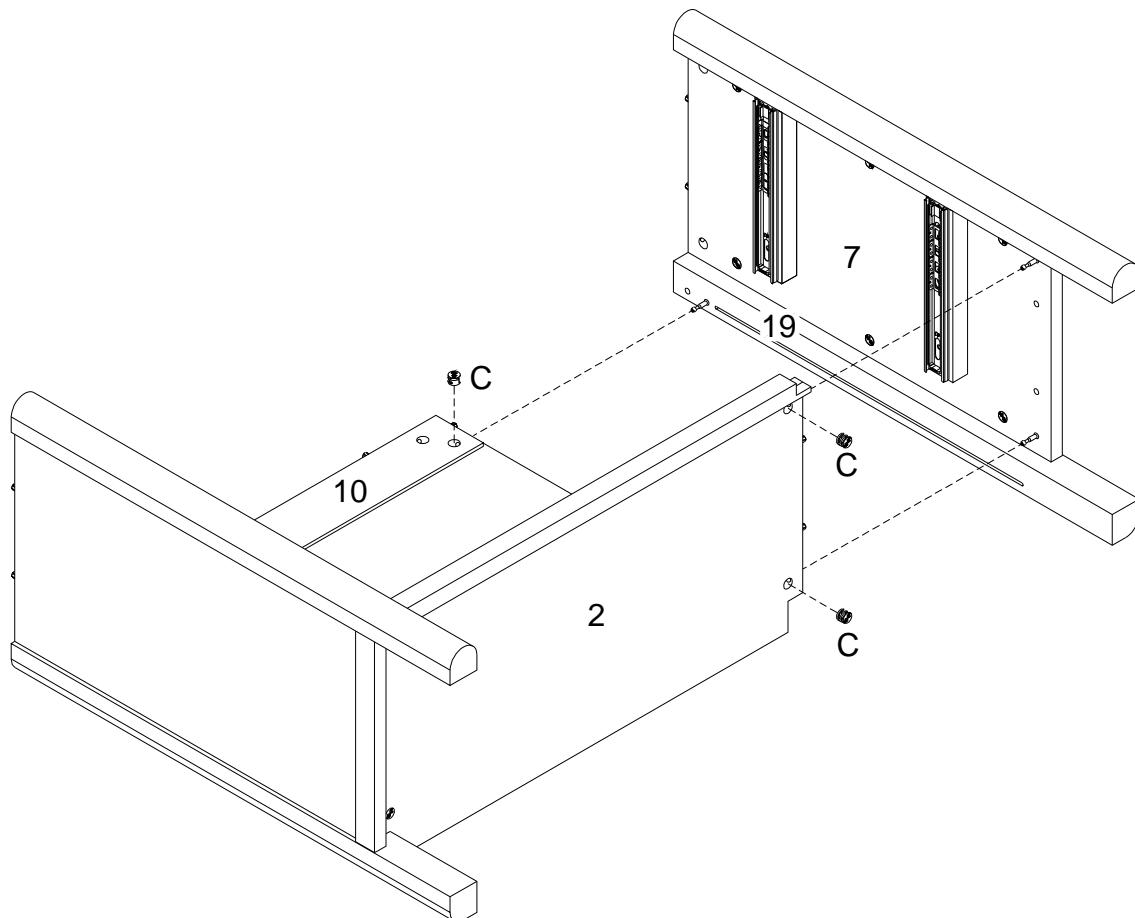


Step 13

Secure the Upper Left Side Panel (4) and the Upper Right Side Panel (5) to the Fixed Divider (3) using the (G) bolts. Tighten with the provided hex key (H).

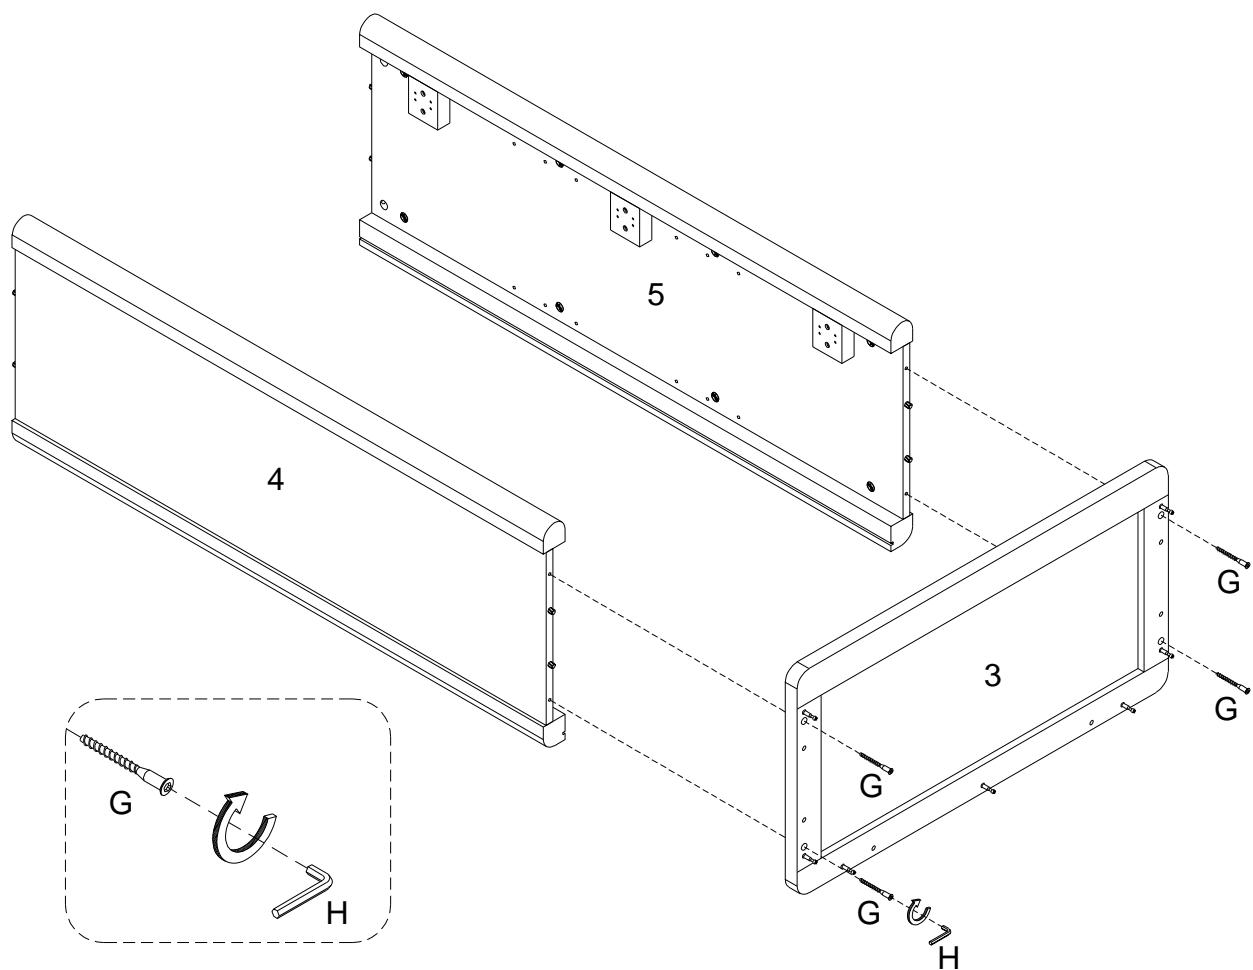


Step 14

Using the cam bolts (B) as a guide, attach the base of the Fixed Divider (3) to the Lower Left Side Panel (6), Lower Right Side Panel (7), and the Back Rail (10). Insert cam locks (C) and tighten with a screwdriver.

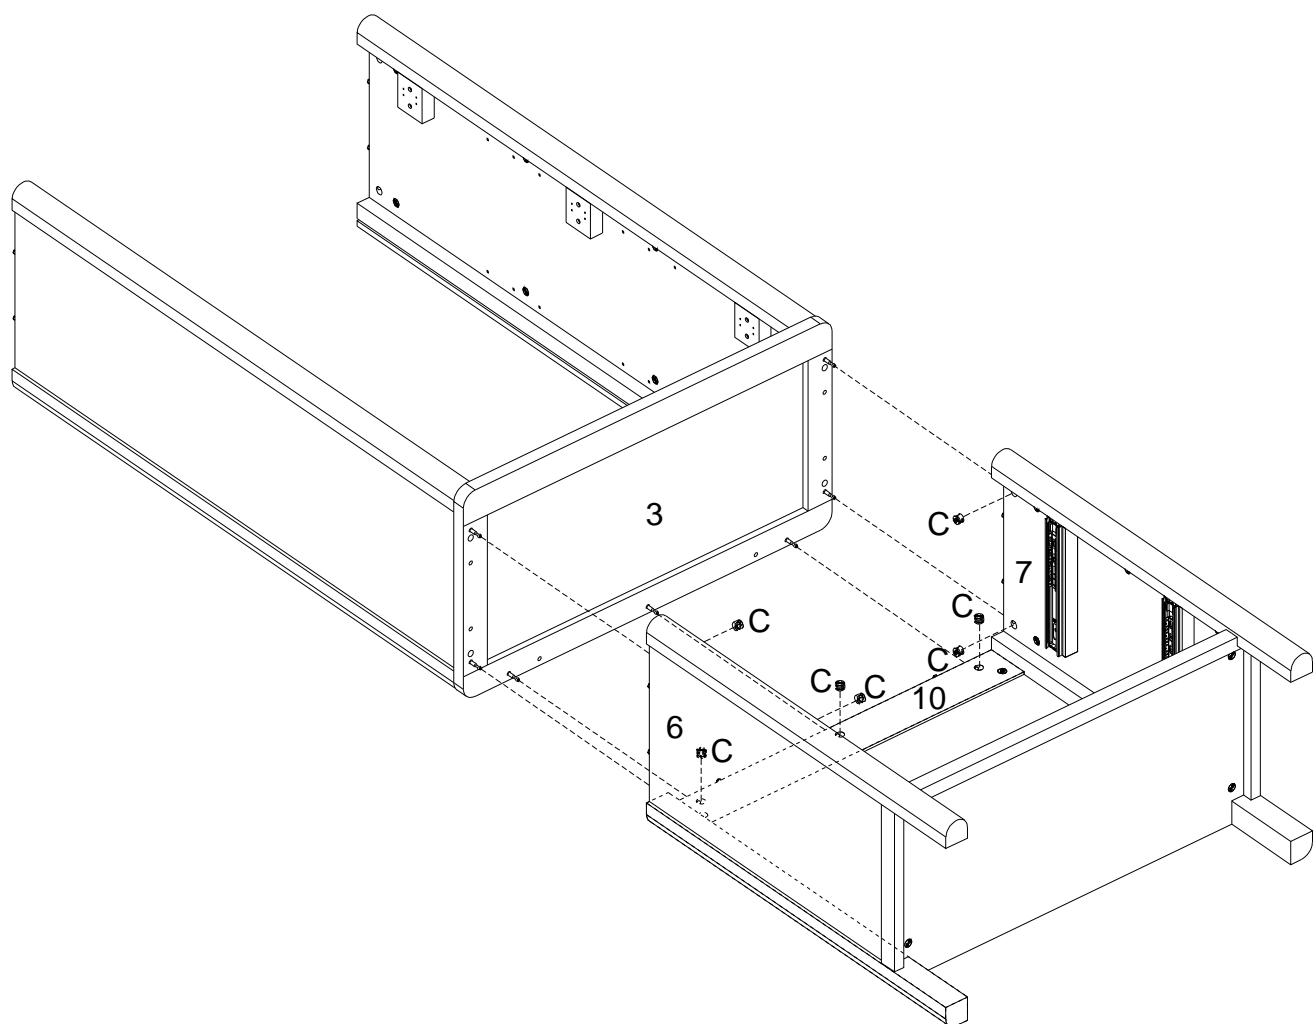


Step 15

Unfold the Upper Back Panel (8) and slide into place using the grooves in the Upper Right Back Foot (15), Upper Left Back Foot (13), and the Fixed Divider (3) as a guide.

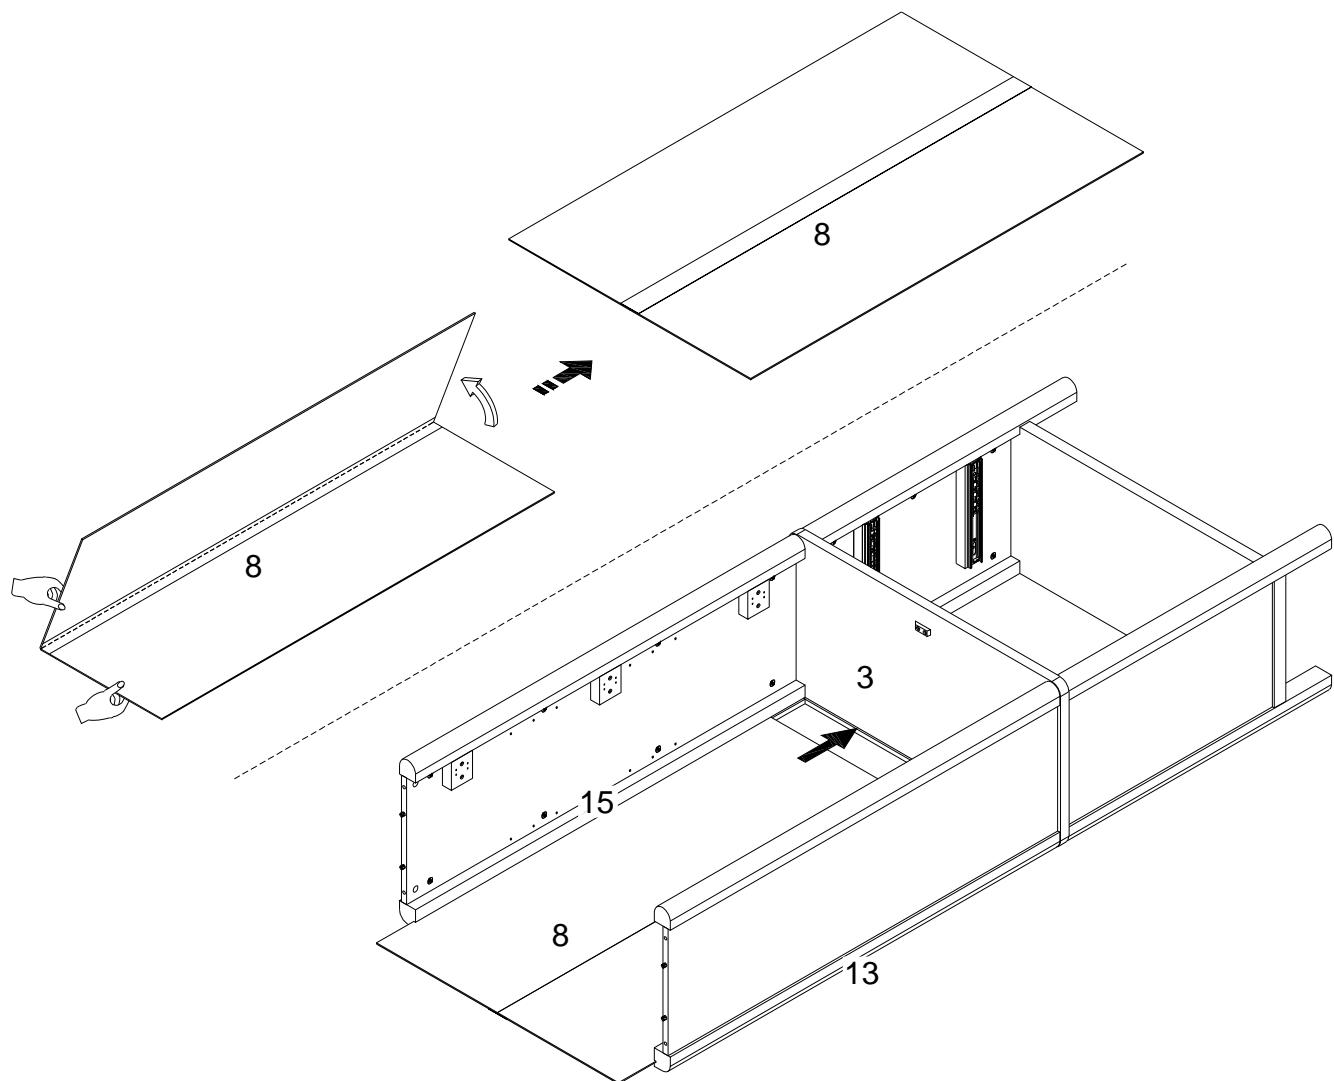


Step 16

Using the cam bolts (B) as a guide, attach the Top Panel (1) to the rest of the unit. Insert cam locks (C) and tighten with a screwdriver.

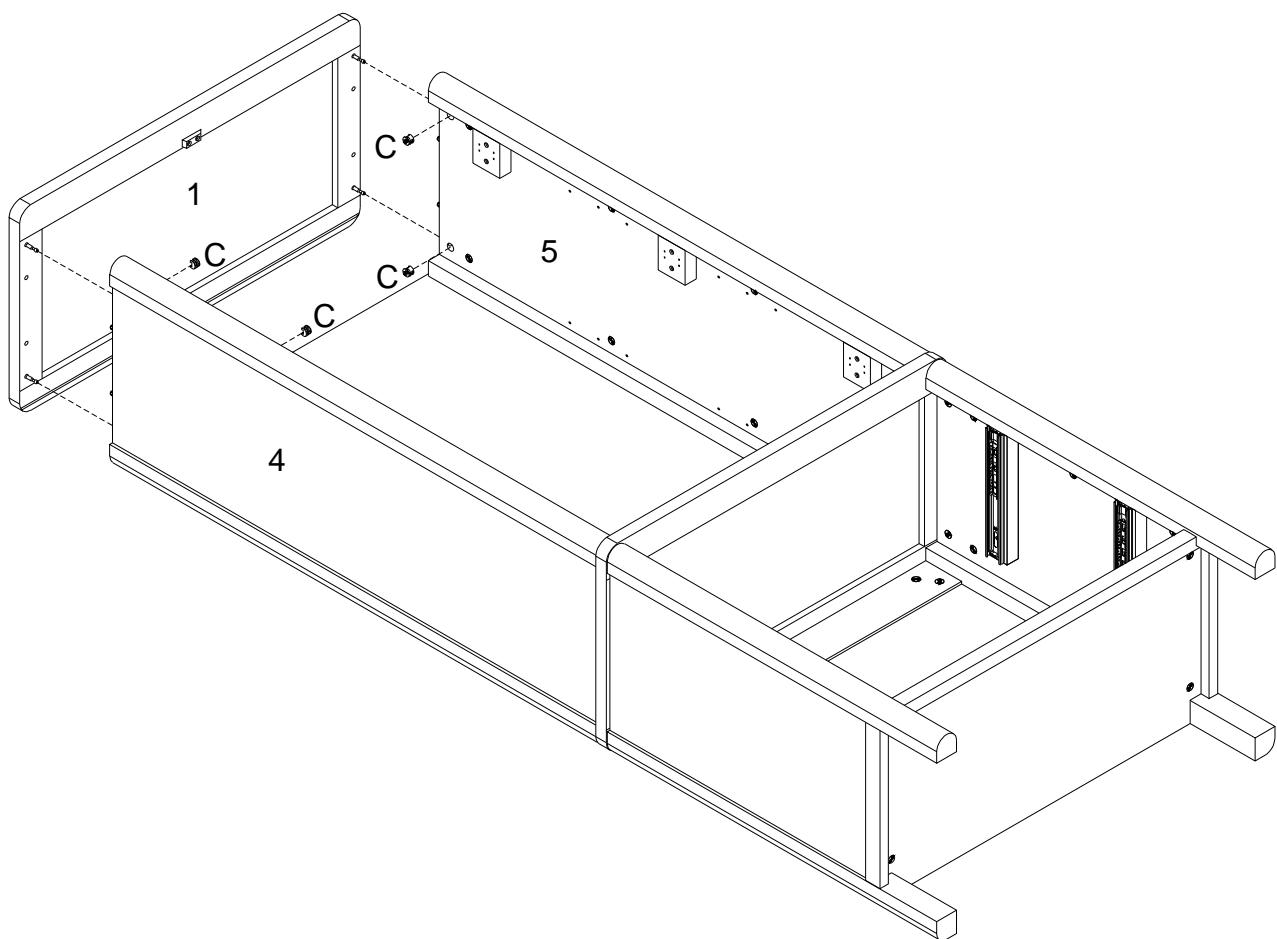


Step 17

Insert plastic wedges (J) in between the back panels (8 & 11) and the frame of the unit. Secure the wedges in place with the (K) screws.

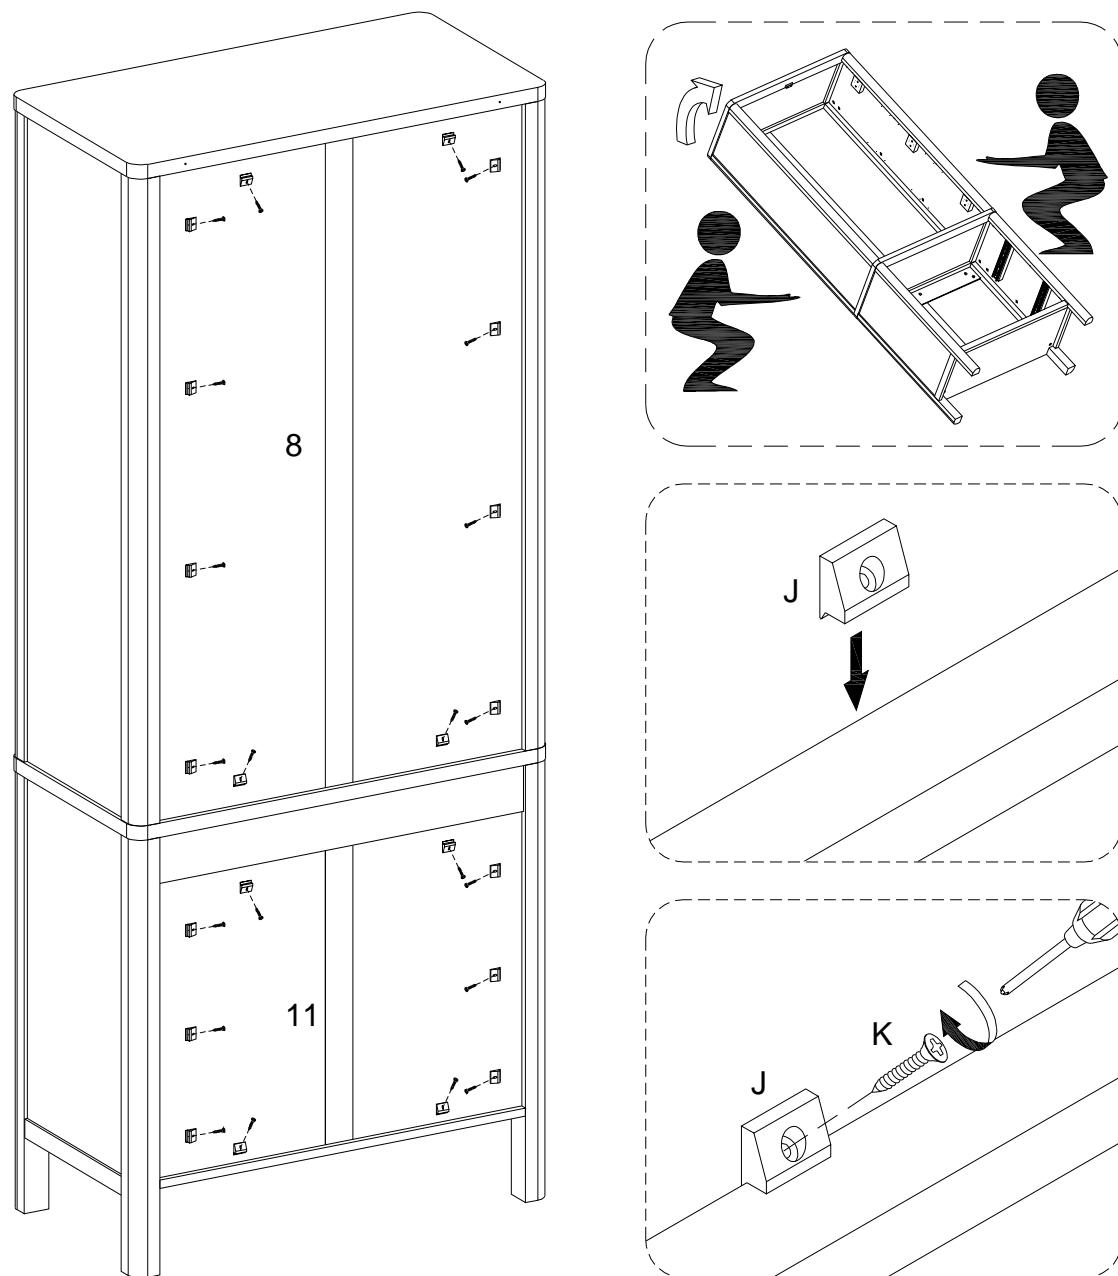


Step 18

Use the provided stickers (D) to cover each cam lock (C), ensuring a clean finish.

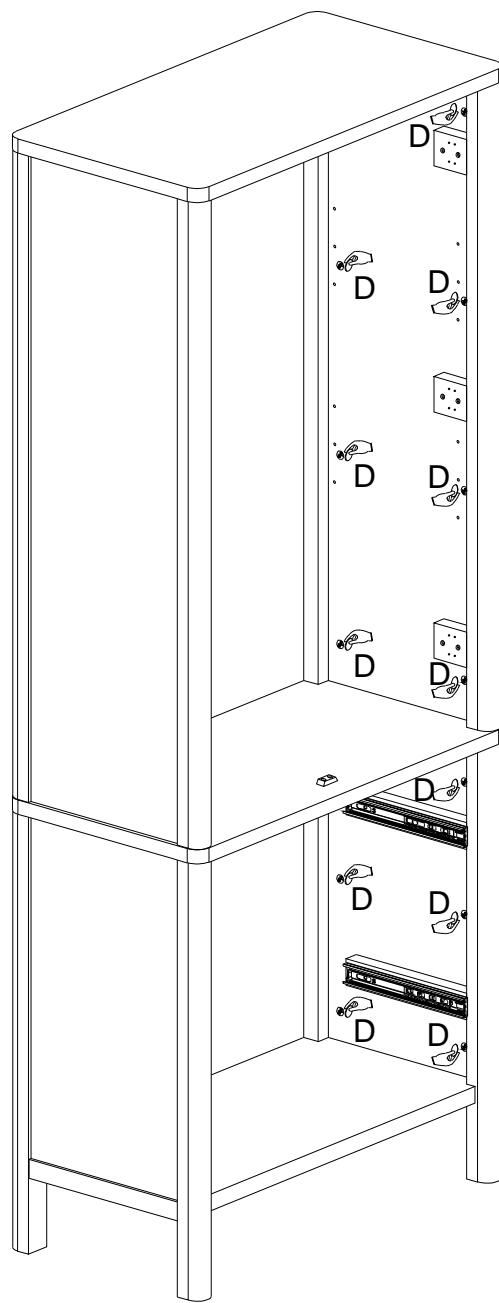


Step 19

Insert shelf support pins (L) and then insert both Upper Adjustable Shelves (9), making sure the notch in the shelves match up with your shelf support pins (L).

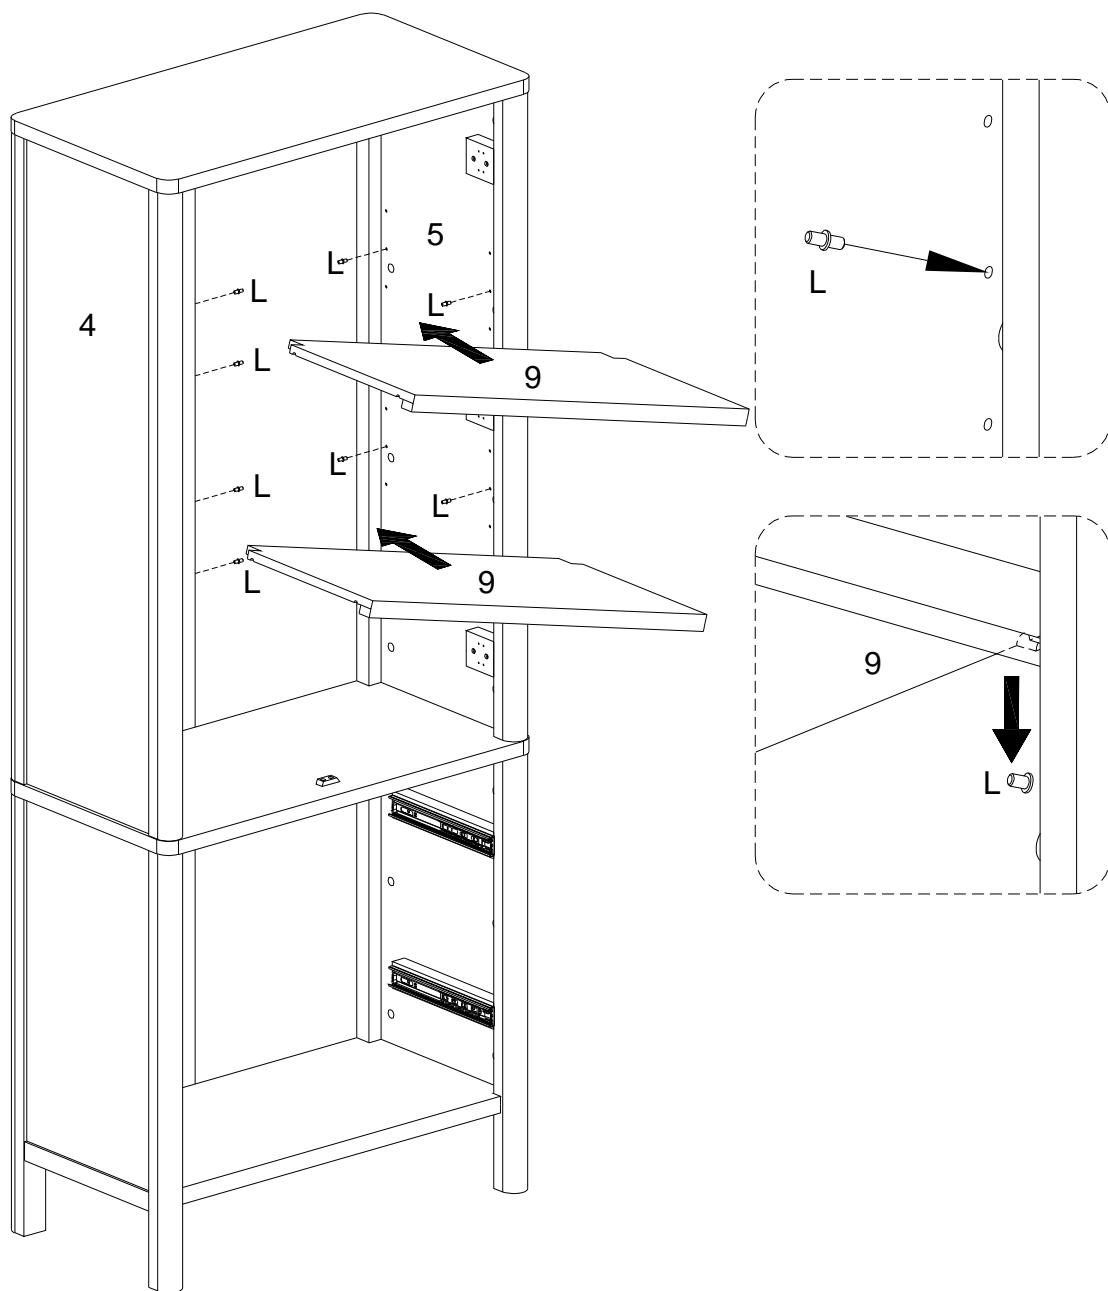



Step 20

Using the (N) screws, attach the hinges (M) to the Left Door Panel (20) and the Right Door Panel (21). Then, attach a handle (P) to each door using the handle bolt (Q).

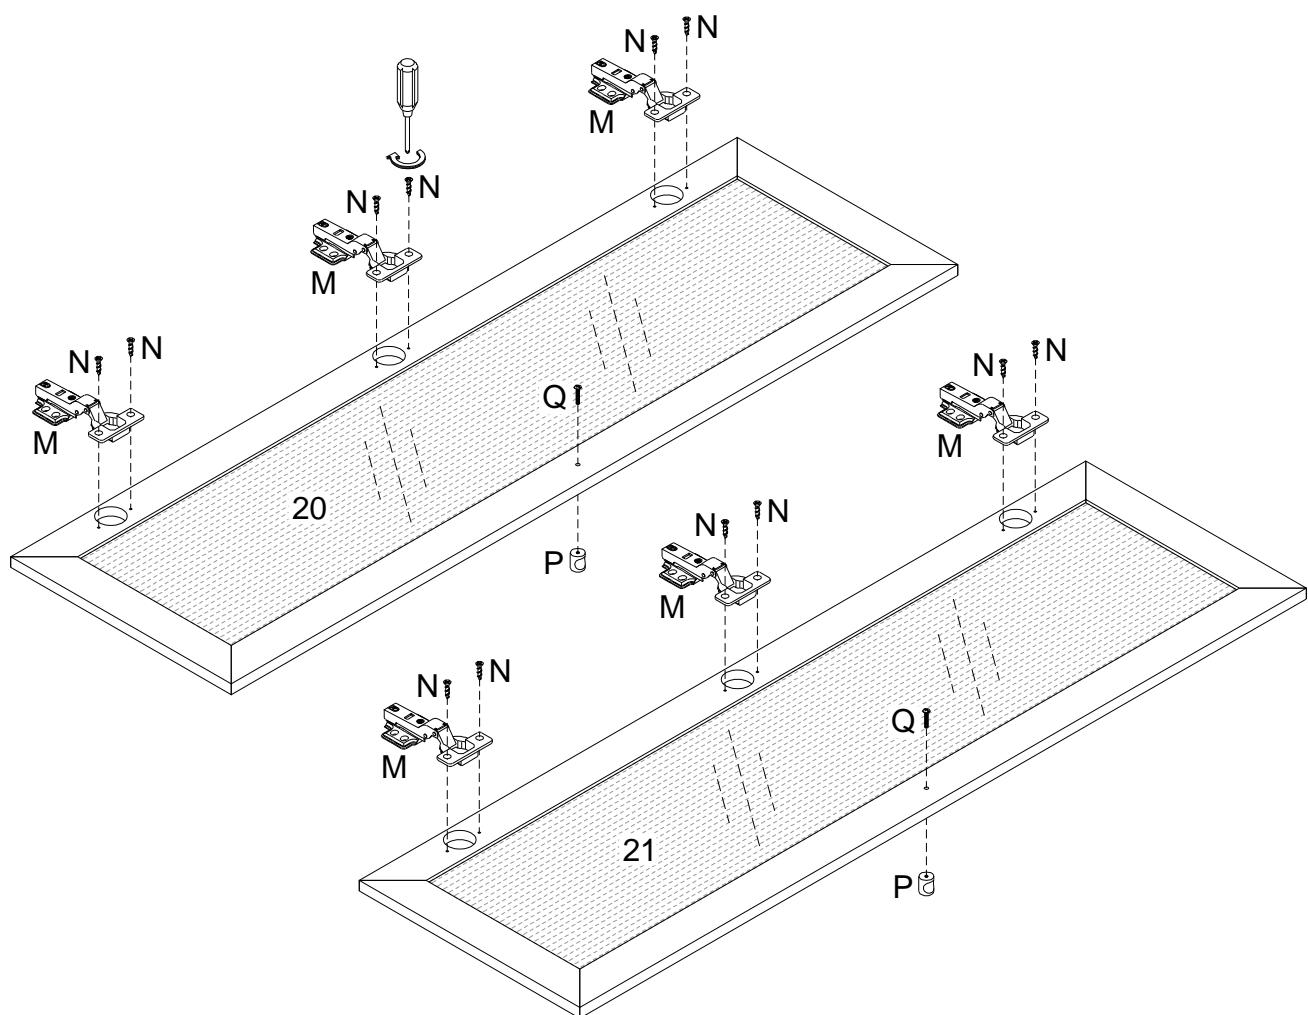


Step 21


Secure the hinges (M) to the Upper Left Side Panel (4) using the (N) screws.

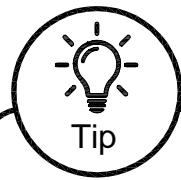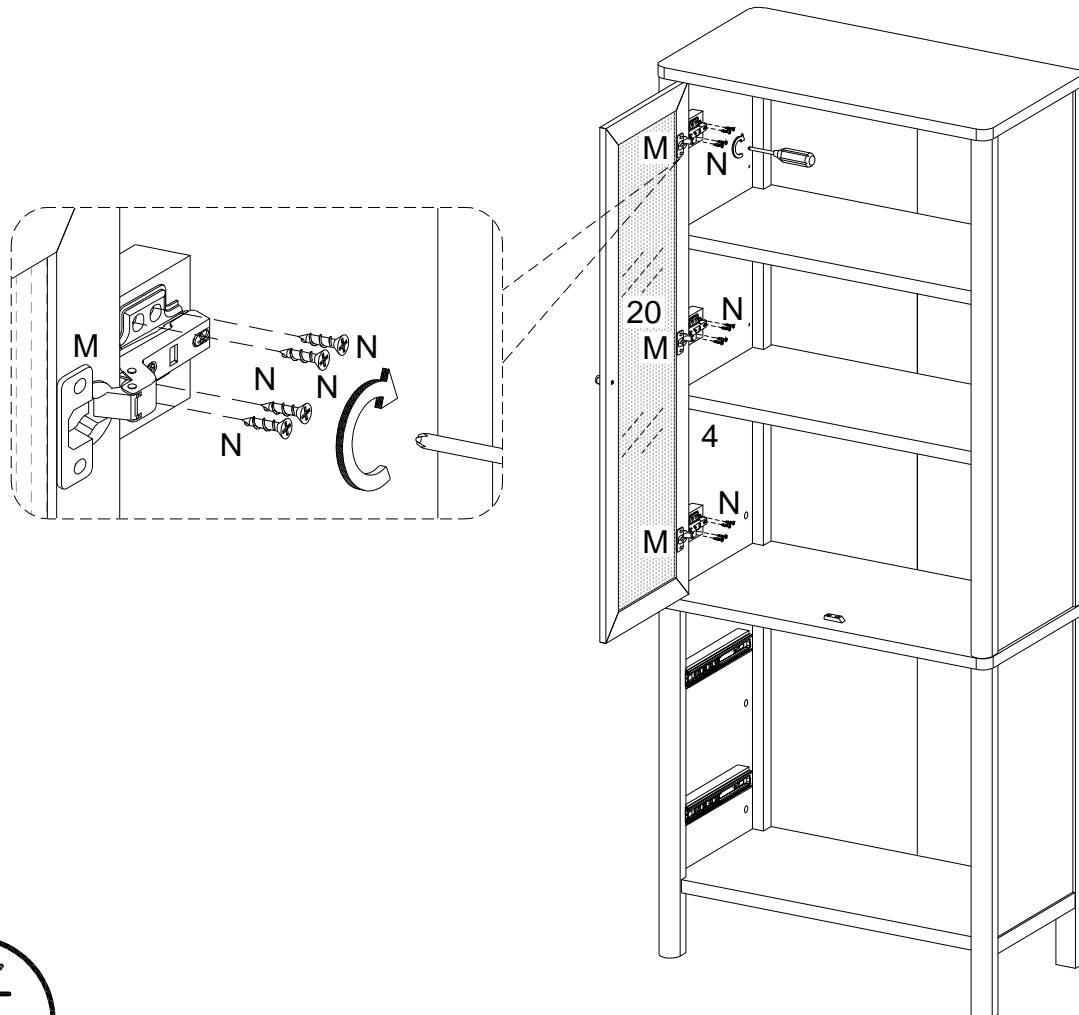


Adjusting The Cabinet Doors

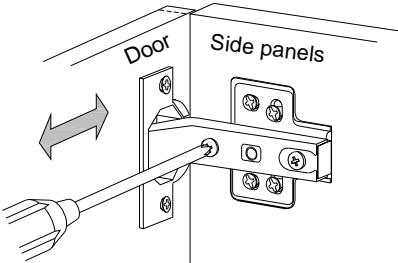

Adjust horizontal width
with this screw.

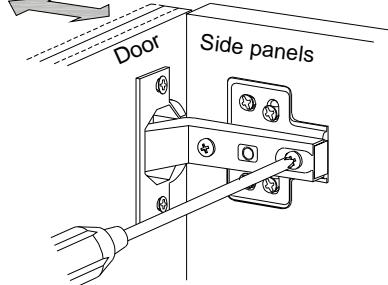


Adjust depth position
by loosening the hinge arm
mounting screw.

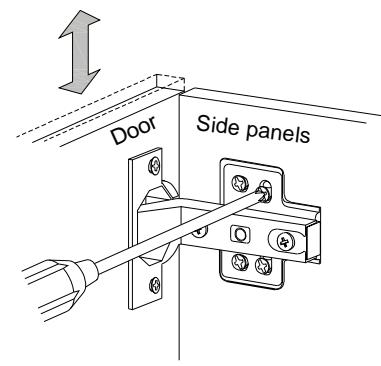

Adjust vertical height
via the screws in the
mounting plate.


Step 22

Secure the hinges (M) to the Upper Right Side Panel (5) using the (N) screws.

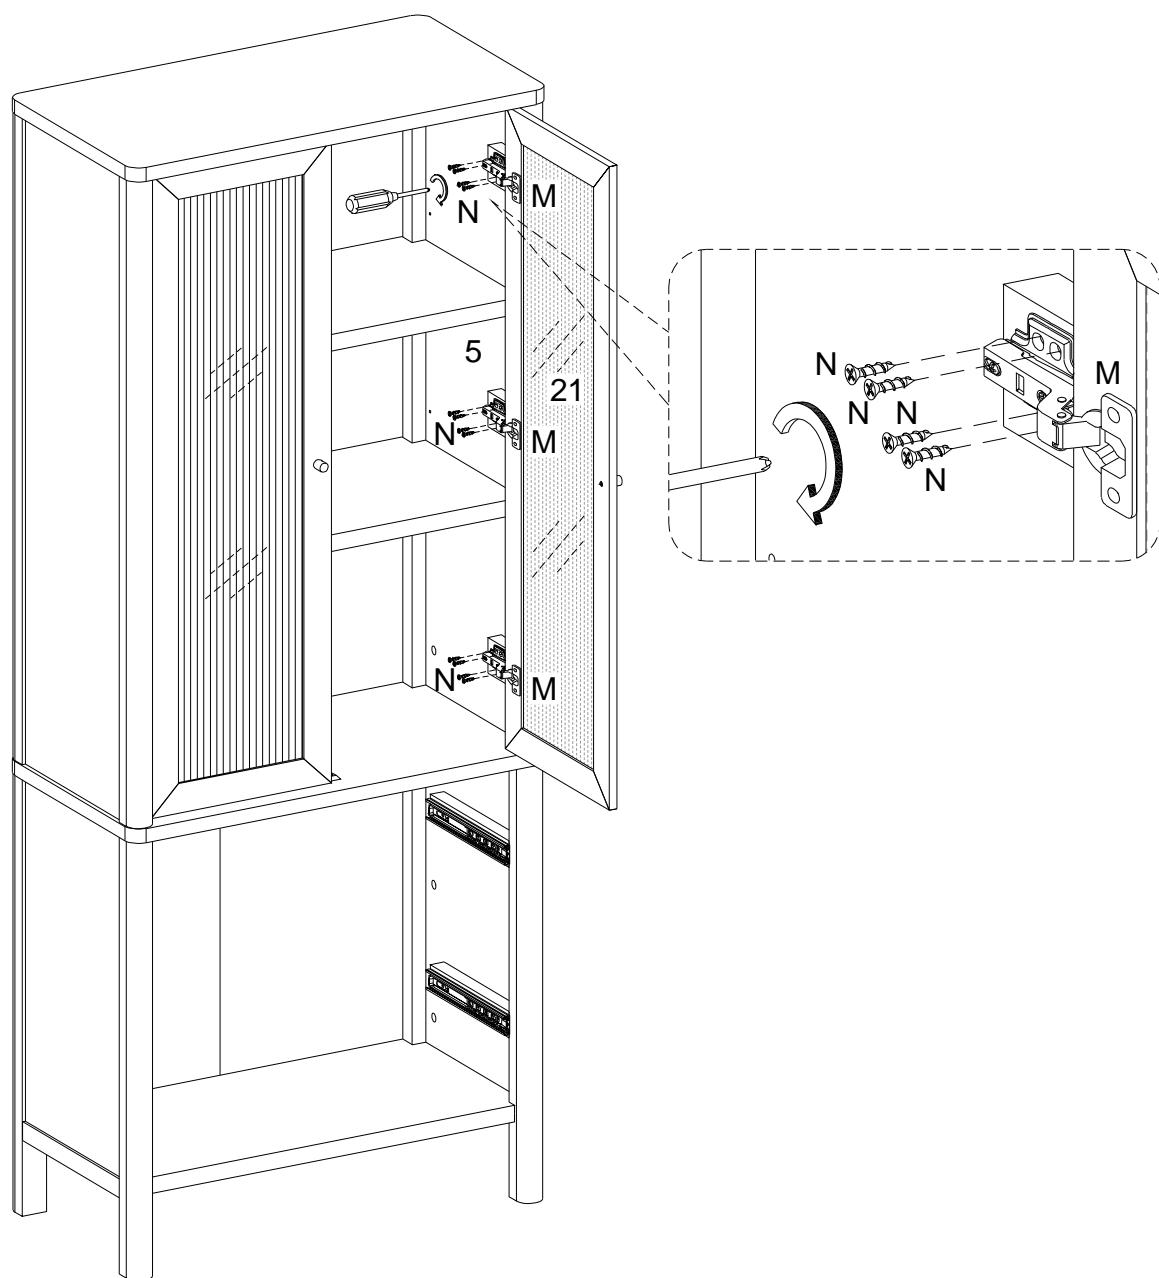

Step 23


Using the handle bolts (Q), attach a handle (P) to both Drawer Front Panels (27).

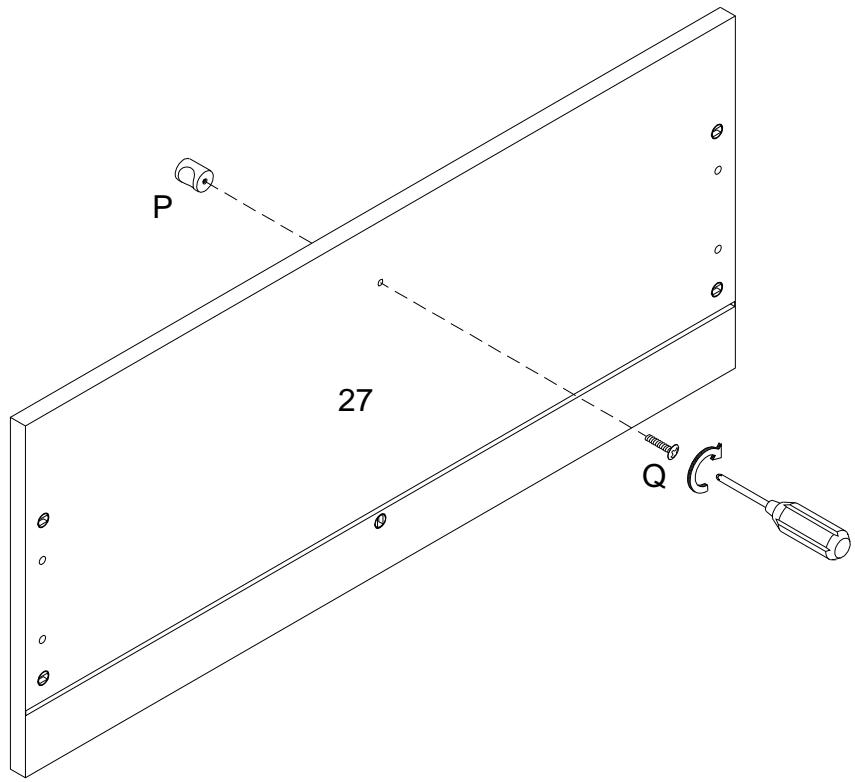

X 2

Step 24


Attach the drawer side of the drawer glides (S) to the Drawer Left Side Panel (22) and the Drawer Right Side Panel (23). Then, insert wooden dowels (R) into the Drawer Left Side Panel (22), the Drawer Right Side Panel (23), and the Drawer Back Panel (24). Repeat these steps once more for the second drawer.

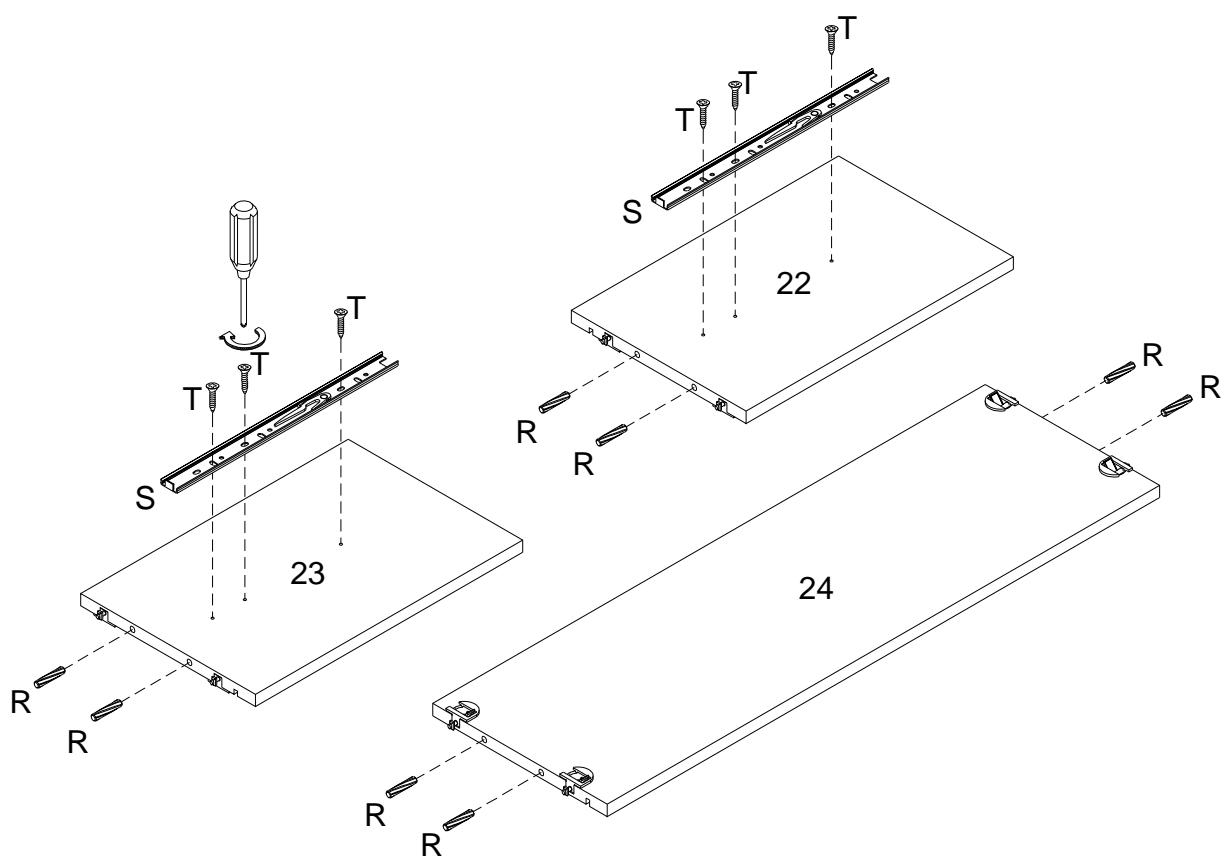

X 2


Step 25

Using the quick assembly mechanism, attach the Drawer Right Side Panel (23) and the Drawer Left Side Panel (22) to the Drawer Back Panel (24). Repeat these steps once more for the second drawer.

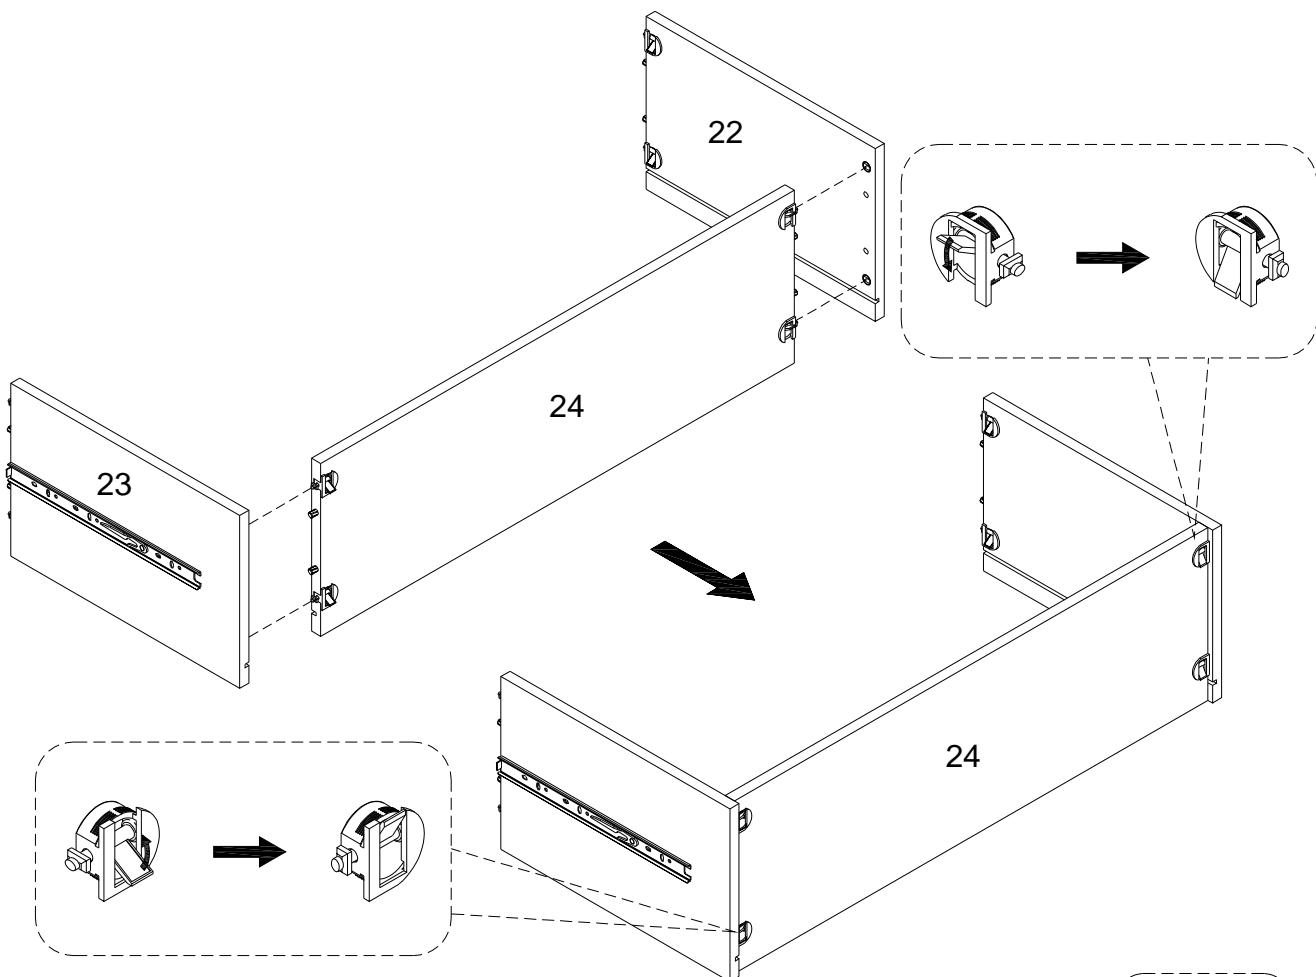


Tip

Quick Assembly Drawers

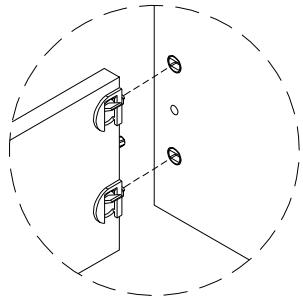

1. Make sure the quick assembly drawer pin is aligned with the corresponding hole.

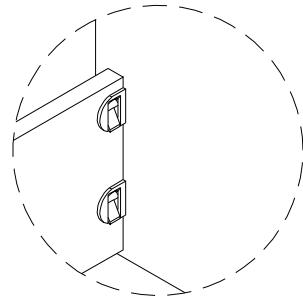


2. Once the pin is inserted correctly, flip the metal lever in the opposite direction to ensure the panels are firmly locked together.

X 2

Step 26


For both drawers, attach the Base Cross Bar (26) to the Drawer Back Panel (24) and secure with the quick assembly mechanism.

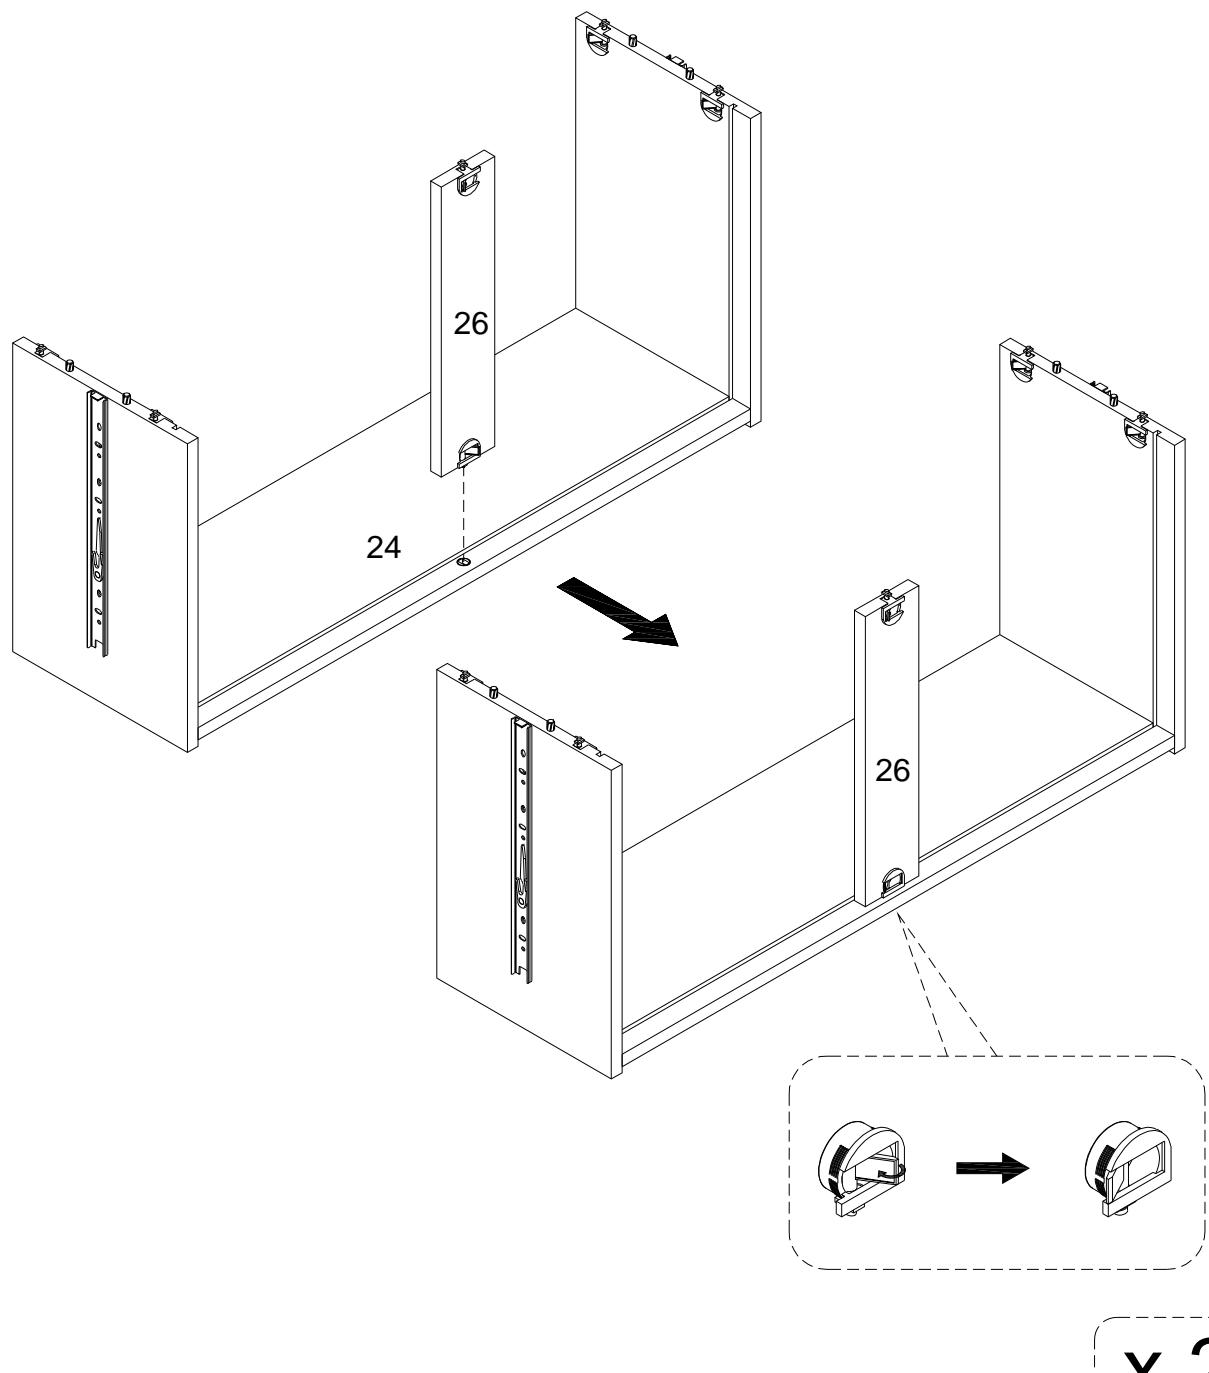

X 2

Step 27


Insert the Drawer Bottom Panel (25) using the grooves as a guide. Repeat this for the second drawer.

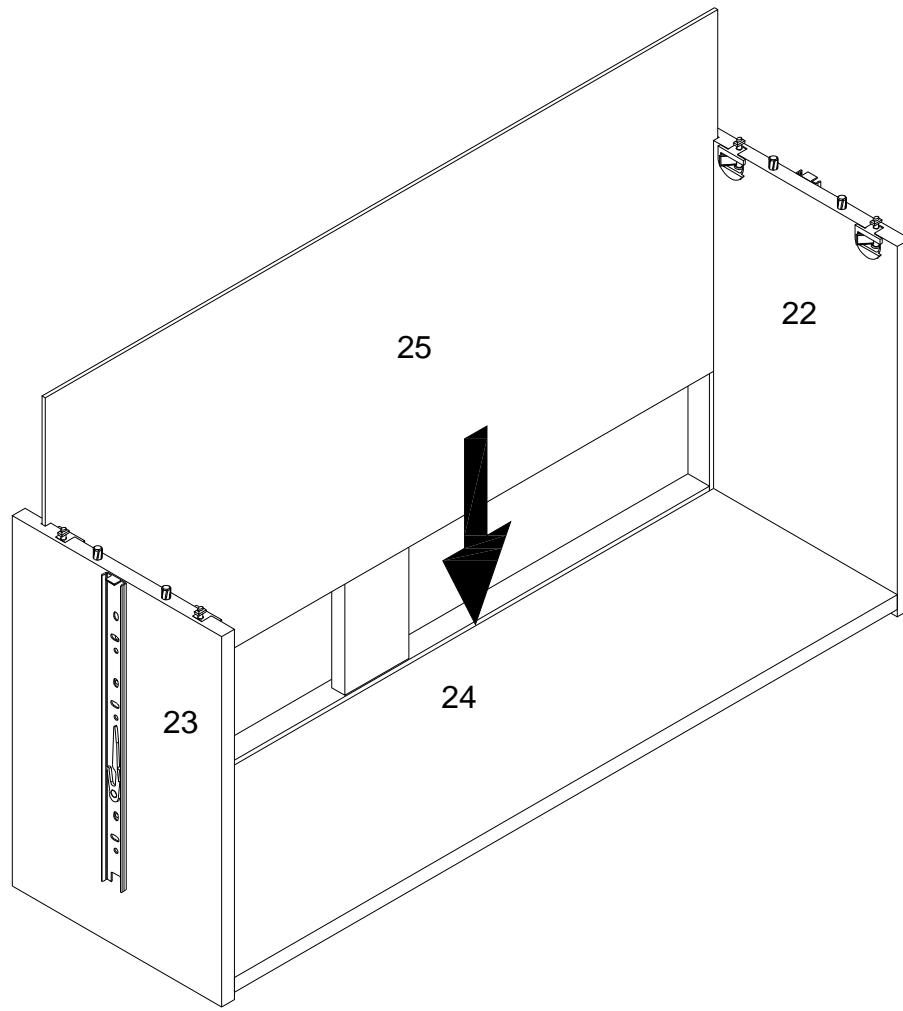

X 2

Step 28



Attach the Drawer Front Panel (27) to the drawer and secure with the quick assembly mechanism. Repeat this for the second drawer.

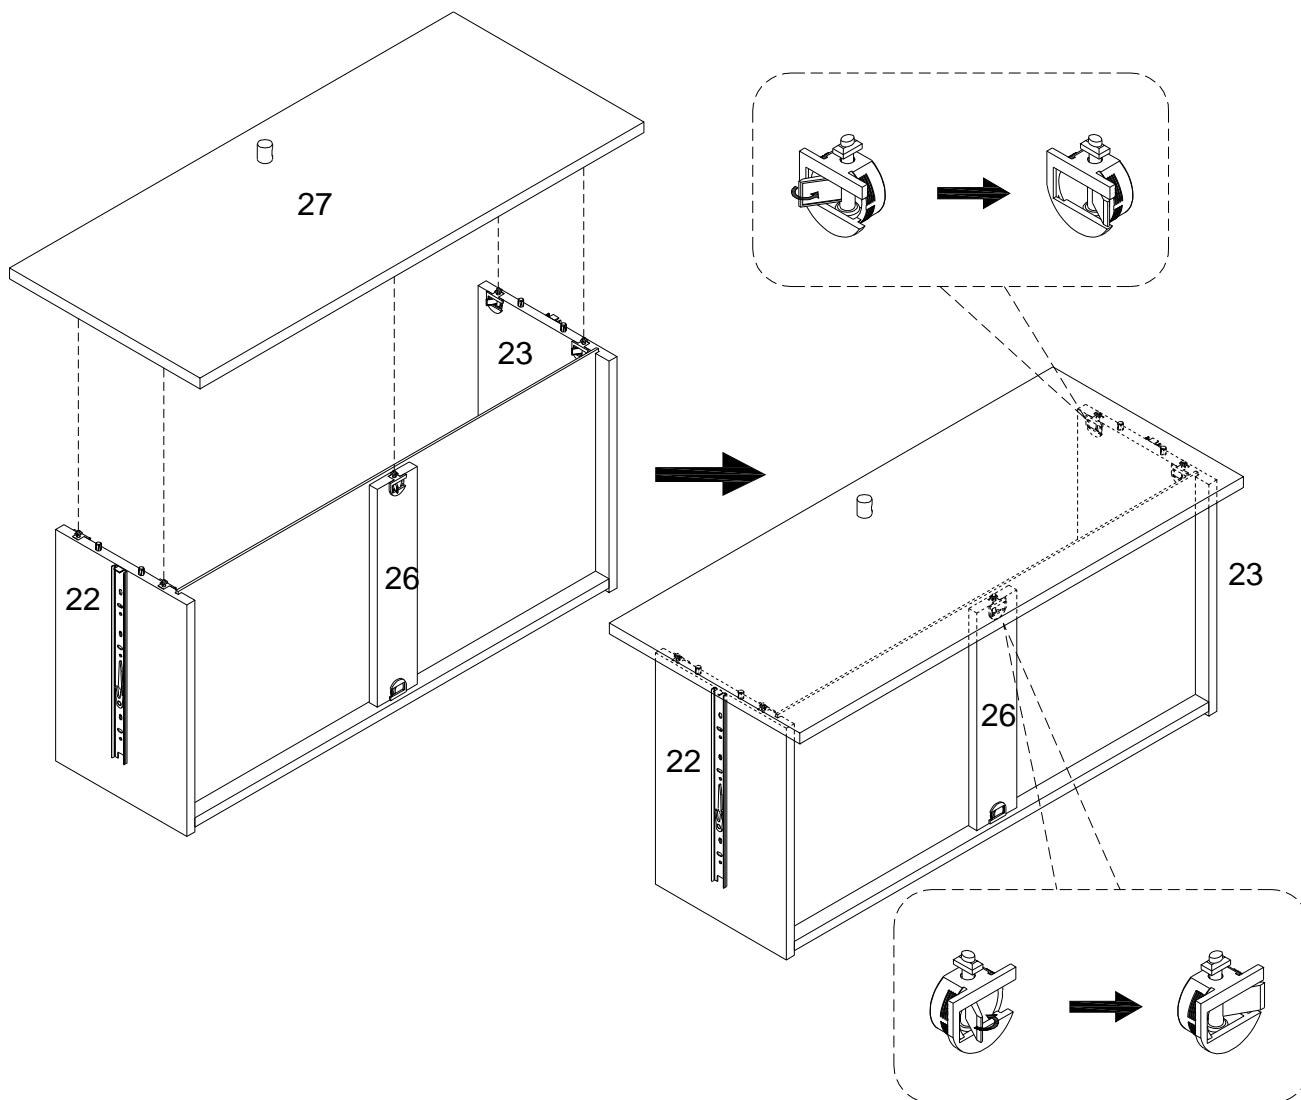

X 2


Step 29

Firmly push the drawers all the way into place making sure the drawer member lines up with the inside guides of the cabinet member. Some resistance is normal.

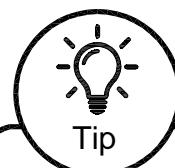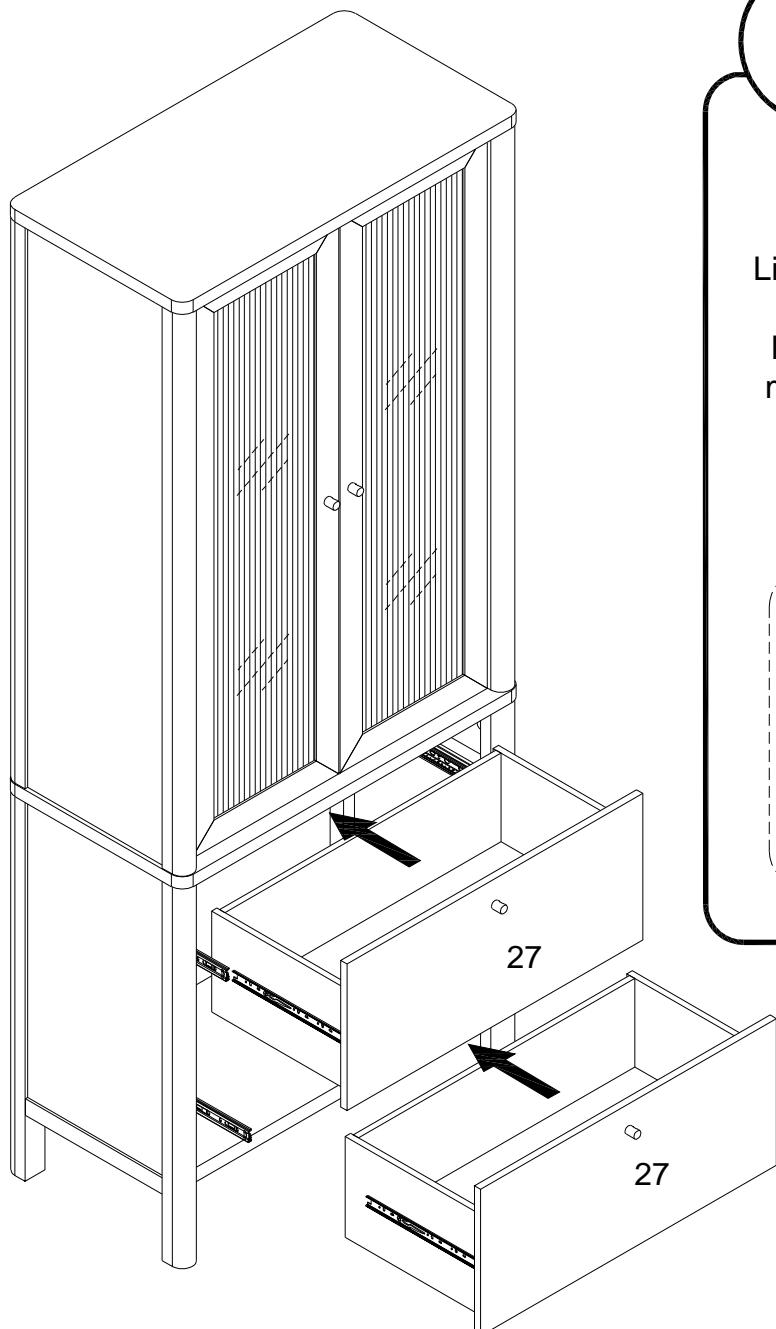


Reinserting your Cabinet Glides together

Line up the Drawer Member so it is inside the guides of the Cabinet Member. Once the connection is made, push the drawer into place entirely. It may not be a smooth glide on your first try, but will improve after it's fully inserted.

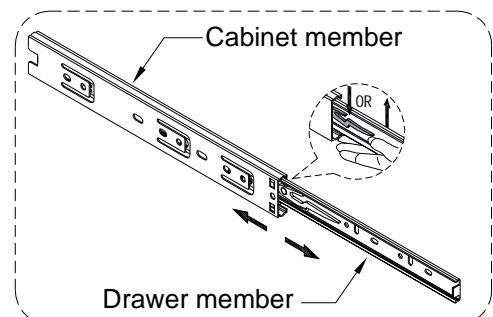


Step 30

Attach the plastic strap (W) to the back of the unit using the (U) screws).

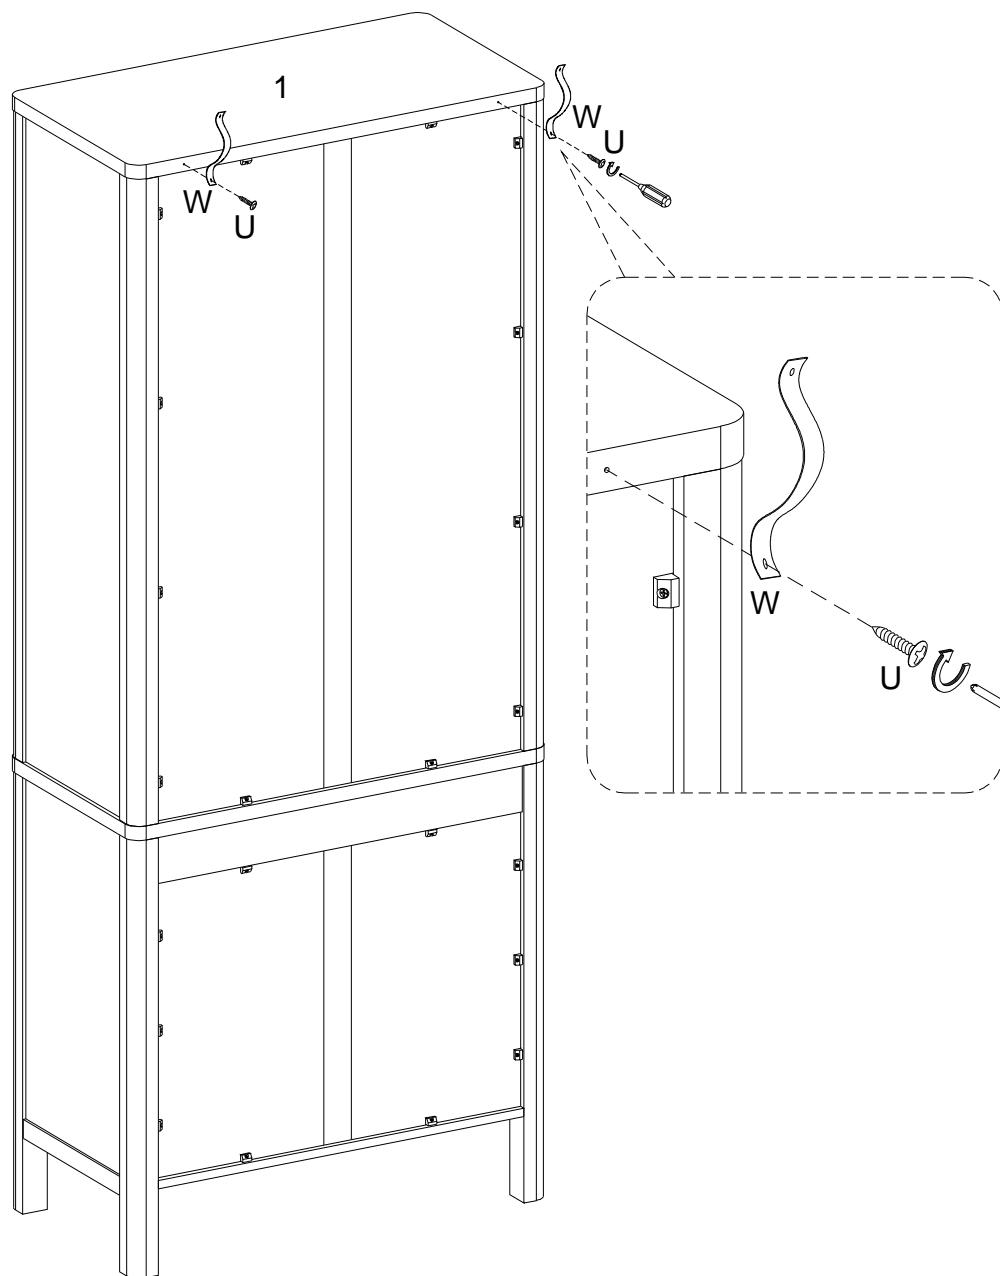

Step 31


Secure your unit to the wall using the (V) screw, plastic strap (W), and the wall anchor (X).

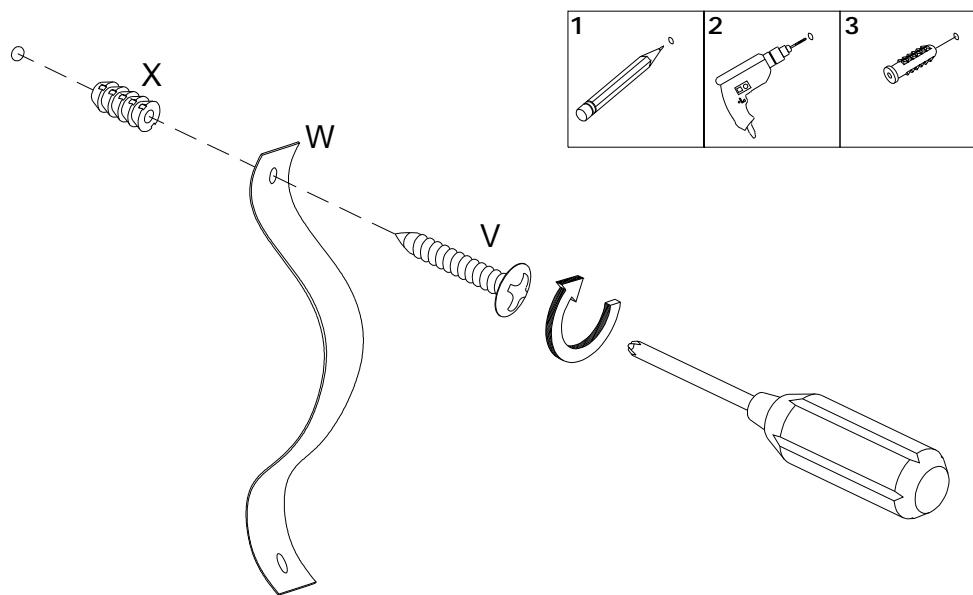

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

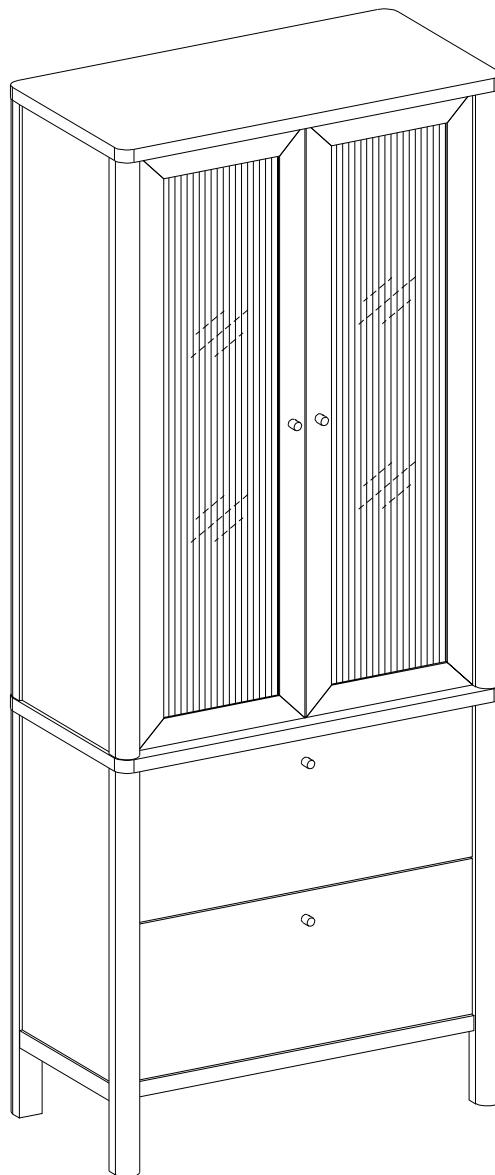

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

