

# ASSEMBLY INSTRUCTIONS

## MODEL : EVERWOOD DINING CHAIR

**IMPORTANT NOTE :**

- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \* DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

| HARDWARE LIST |   |      | PART LIST |                    |     |
|---------------|---|------|-----------|--------------------|-----|
| A             | JCBC M6 x 50mm + S/W M6 + F/W M6 x 13mm | 4PCS | 1         | CHAIR BACK         | 1PC |
|               |   |      | 2         | FRONT LEG          | 1PC |
| B             | ALLEN KEY M4 (BALL SHAPE)               | 1PC  | 3         | SIDE STRETCHER (R) | 1PC |
| C             | PH CB SCREW M4 x 32mm                   | 4PCS | 4         | SIDE STRETCHER (L) | 1PC |
| D             | L BRACKET                               | 4PCS | 5         | SIDE RAIL (R)      | 1PC |
| E             | PH CB SCREW M4 x 12mm                   | 8PCS | 6         | SIDE RAIL (L)      | 1PC |
|               |   |      | 7         | CUSHION SEAT       | 1PC |

### CAUTIONS :


(1) **DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**

(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)


(2) **KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.**

### STEP 1


**DO NOT FULLY TIGHTEN THE BOLT**

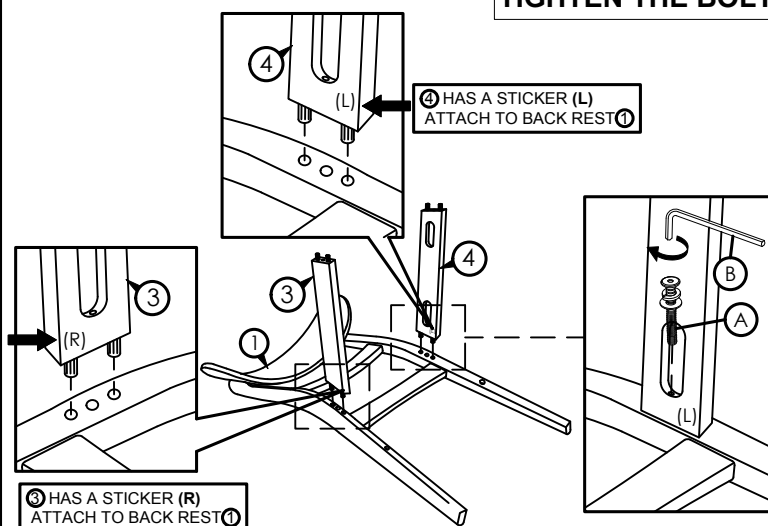

### STEP 2

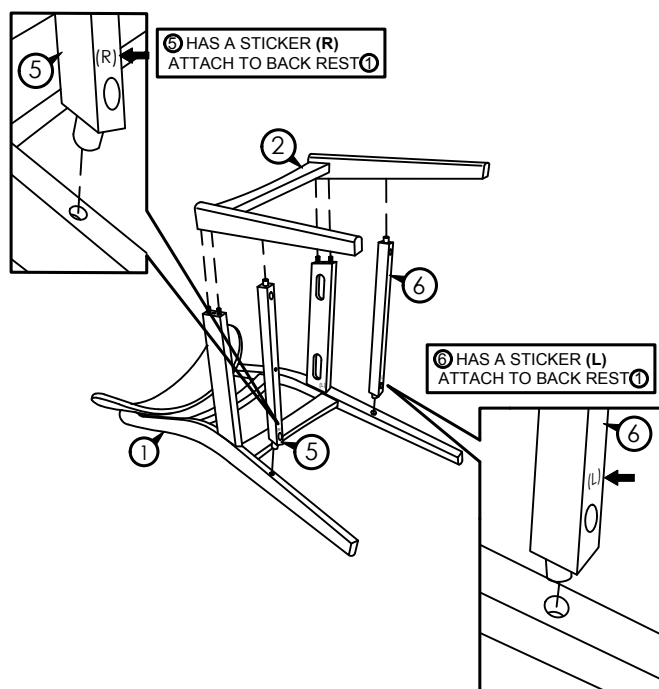

### STEP 3

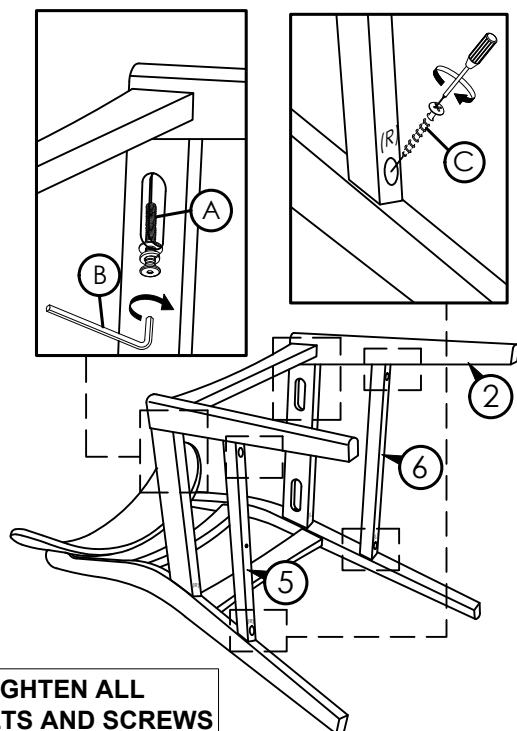

### STEP 4

