


WALKER EDISON
TM

Darci Bookcase with Lower Drawers

SKU# WEDAR41OS2

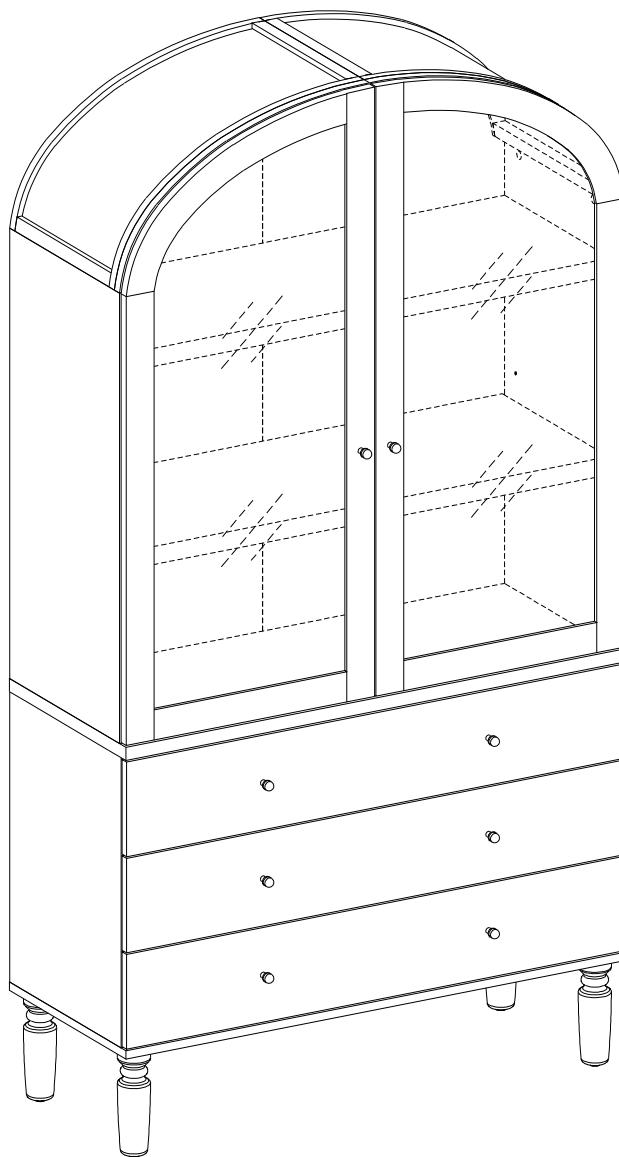


For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

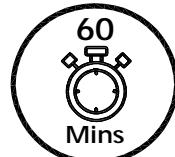

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

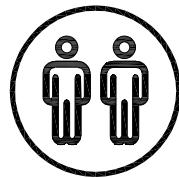

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

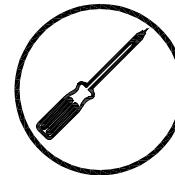


Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

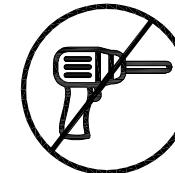

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

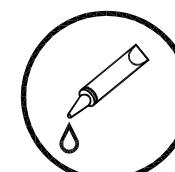

Scan to get assembly tips and help!


WE Parts List

Part Number	Description	Quantity
1	Left Top Arched Panel	1
2	Right Top Arched Panel	1
3	Top Arched Panel Trim	1
4	Upper Left Side Panel	1
5	Upper Right Side Panel	1
6	Upper Fixed Divider	1
7	Upper Adjustable Shelf	1
8	Upper Back Panel	1
9	Middle Fixed Divider	1
10	Left Door Panel	1
11	Right Door Panel	1
12	Lower Left Side Panel	1
13	Lower Right Side Panel	1
14	Lower Back Panel	1
15	Bottom panel	1
16	Drawer Left Side Panel	3
17	Drawer Right Side Panel	3
18	Drawer Back Panel	3
19	Drawer Bottom Panel	3
20	Base Cross Bar	6
21	Drawer Front Panel	3
22	Support Leg	4

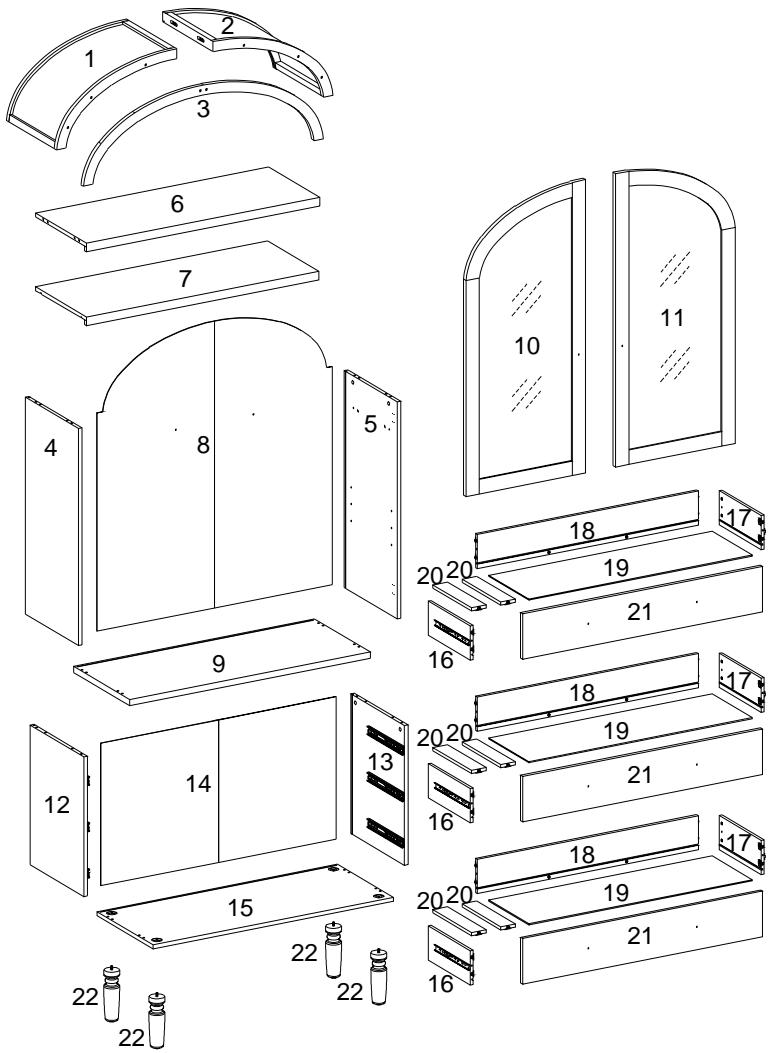



Hardware List

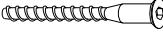Part	Size	Name	Quantity
A		8x30mm Wooden dowel	20
B		6x35mm Cam bolt	12
C		15x11mm Cam lock	12
D		30mm Sticker	12
E		6x50mm Bolt	8
F		M4mm Hex Key	1
G		6x30mm Bolt	6
H		4x15mm Screw	2
J		Plastic wedge	22
K		3x17mm Screw	22
L		8x5x16mm Shelf support pin	4
M		35mm Hinge	4
N		3.5x14mm Screw	24




Hardware List

Part	Size	Name	Quantity
P		Handle	8
Q		Handle Bolt	8
R		Bolt	2
S		Wooden dowel	12
T		Screw	1
U		Screw	1
V		Plastic strap	1
W		Wall Anchor	1
X		Lock washer	6
Y		Washer	6
Z		Glue tube	2

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

Step 1

Let's get started! Using a Phillips head screwdriver, screw cam bolts (B) into the Upper Left Side Panel (4) and the Upper Right Side Panel (5). Then, insert wooden dowels (A) into both pieces.

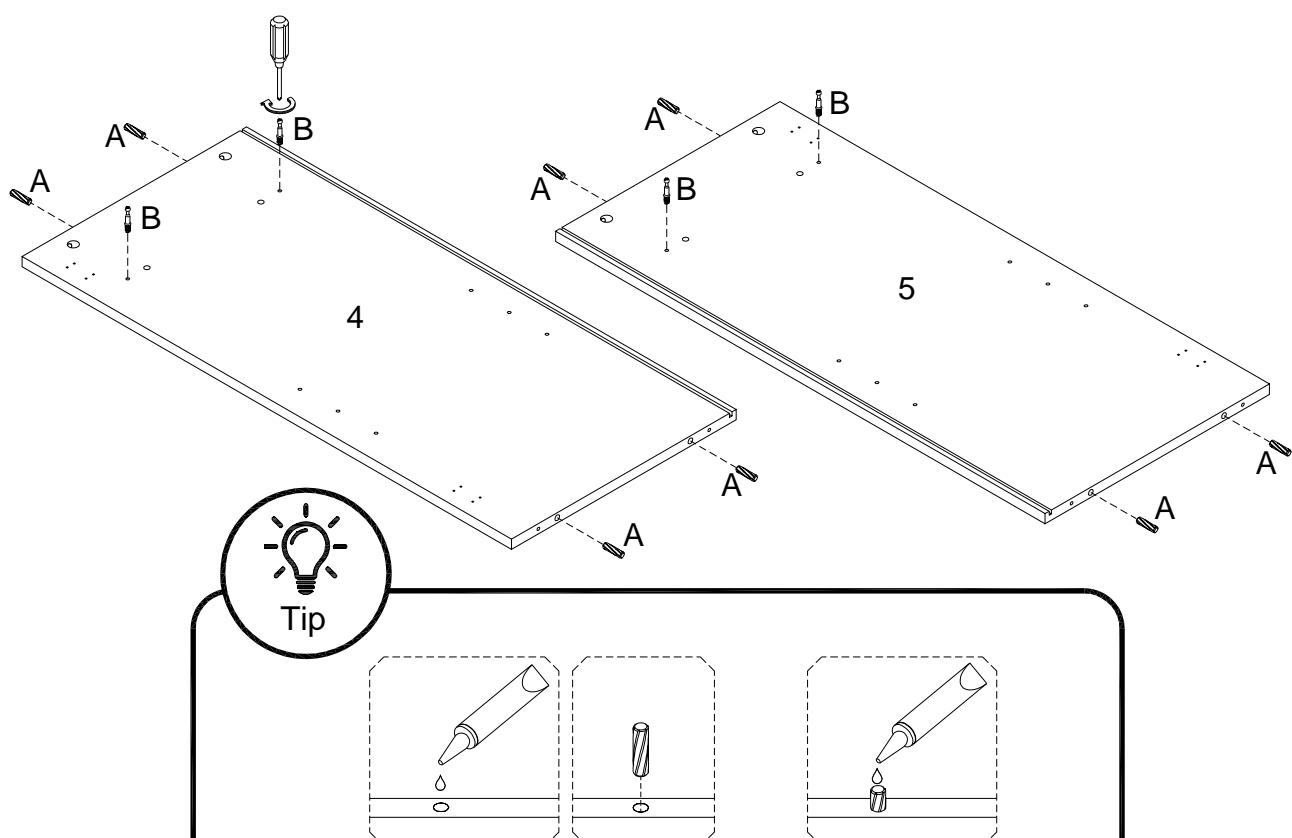


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


Step 2

Insert wooden dowels (A) into the Upper Fixed Divider (6).

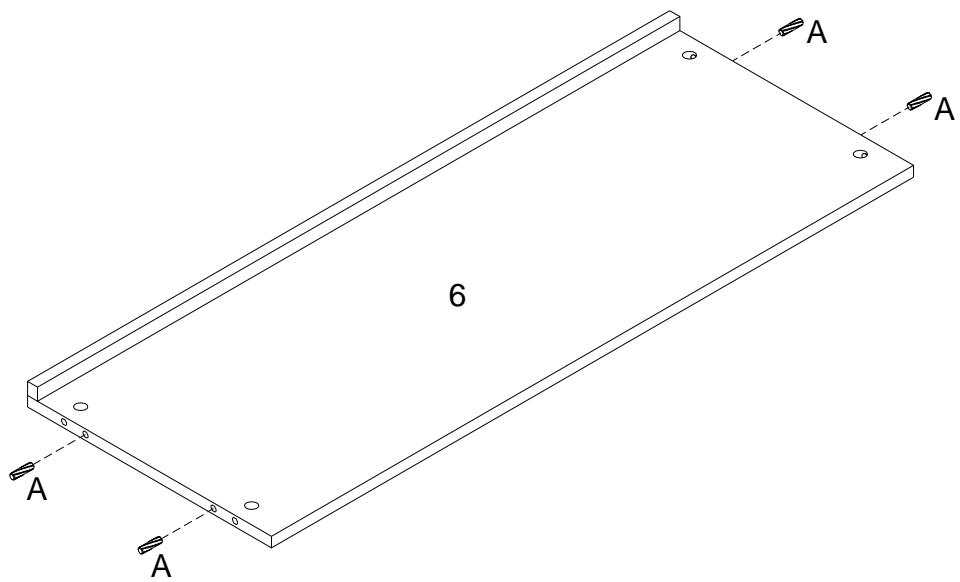


Step 3

Insert wooden dowels (A) into the Lower Left Side Panel (12) and the Lower Right Side Panel (13).

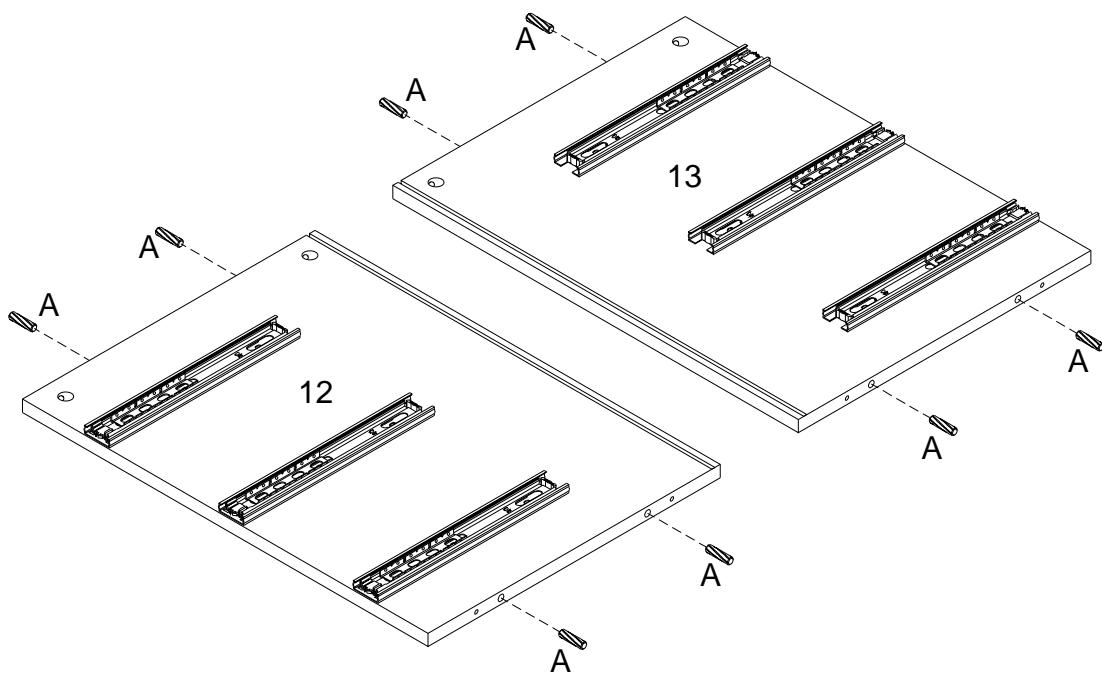


Step 4

Secure the Lower Left Side Panel (12) and the Lower Right Side Panel (13) to the Bottom Panel (15) using the (E) bolts. Tighten with the provided hex key (F).

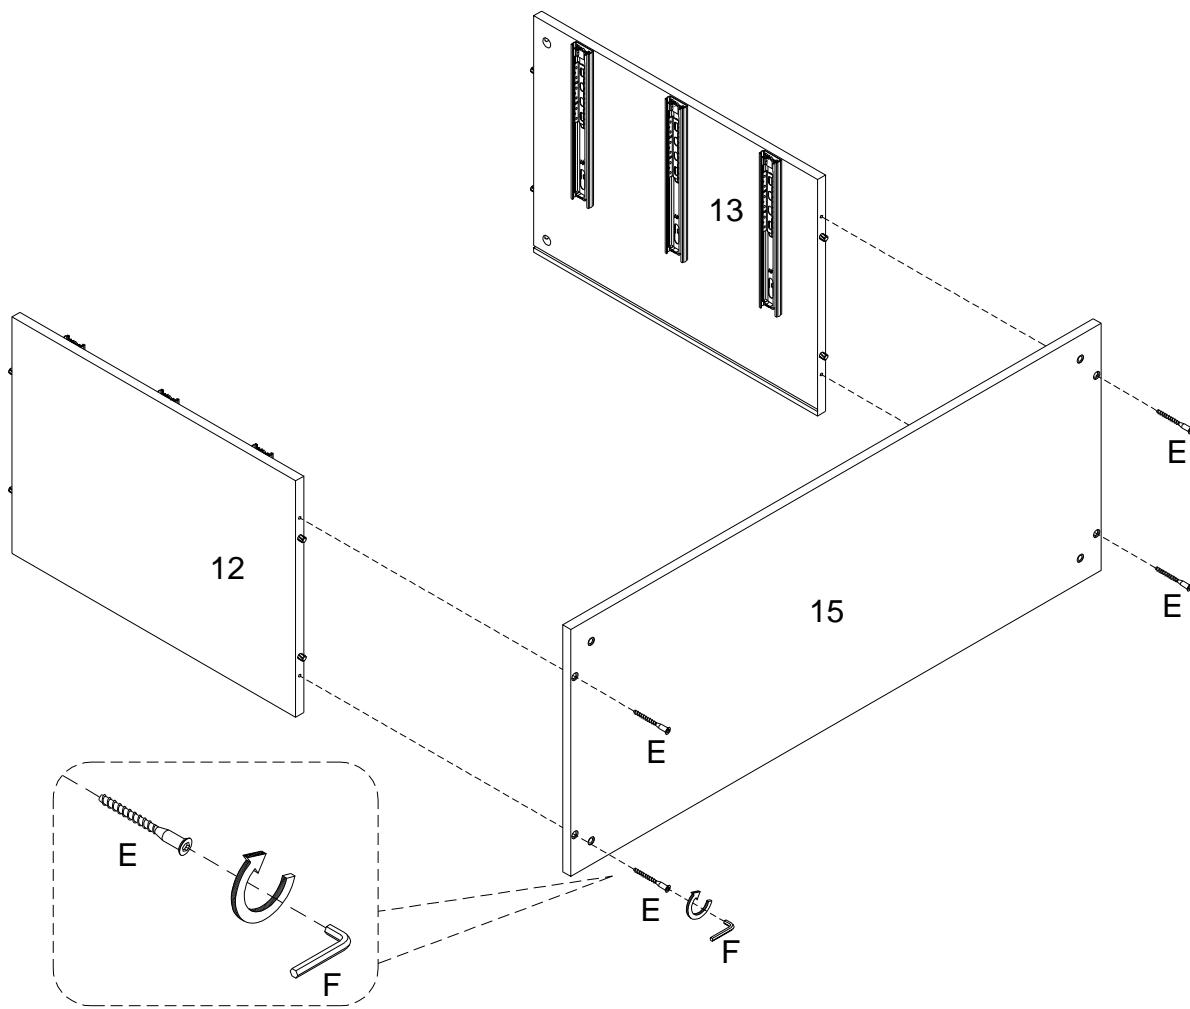


Step 5

Screw in all four Support Legs (22) to the Bottom Panel (15).

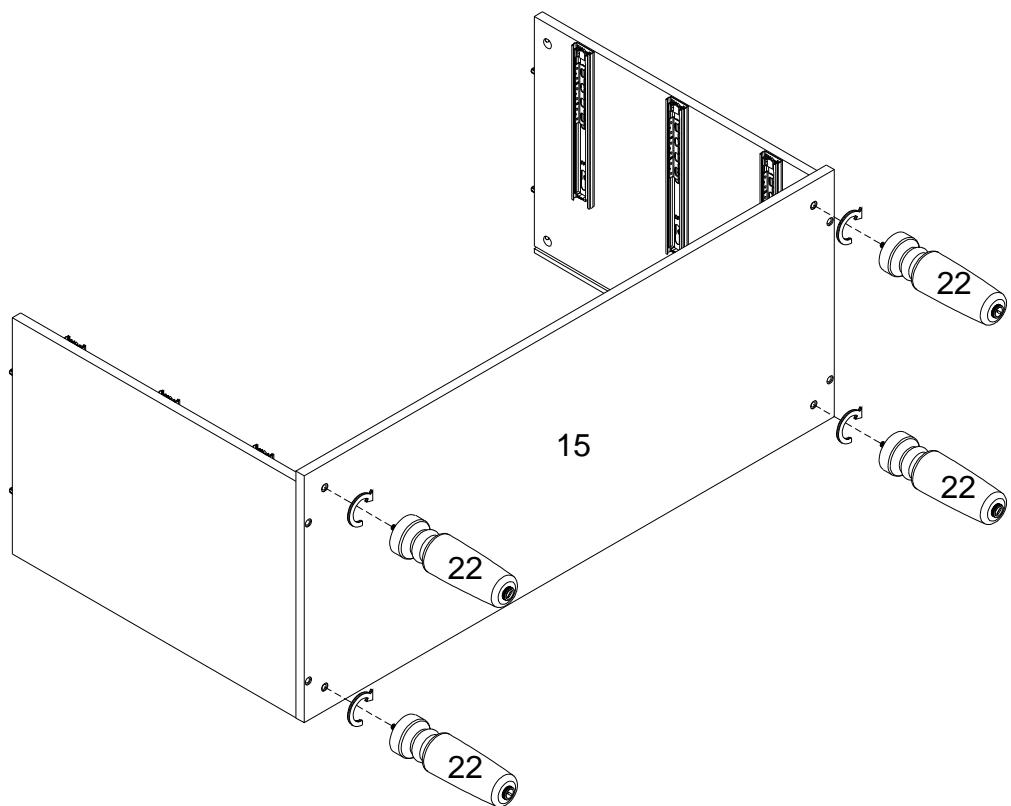



Step 6

Unfold the Lower Back Panel (14) and slide into place using the grooves in the Lower Left Side Panel (12), Lower Right Side Panel (13), and Bottom Panel (15) as your guide.

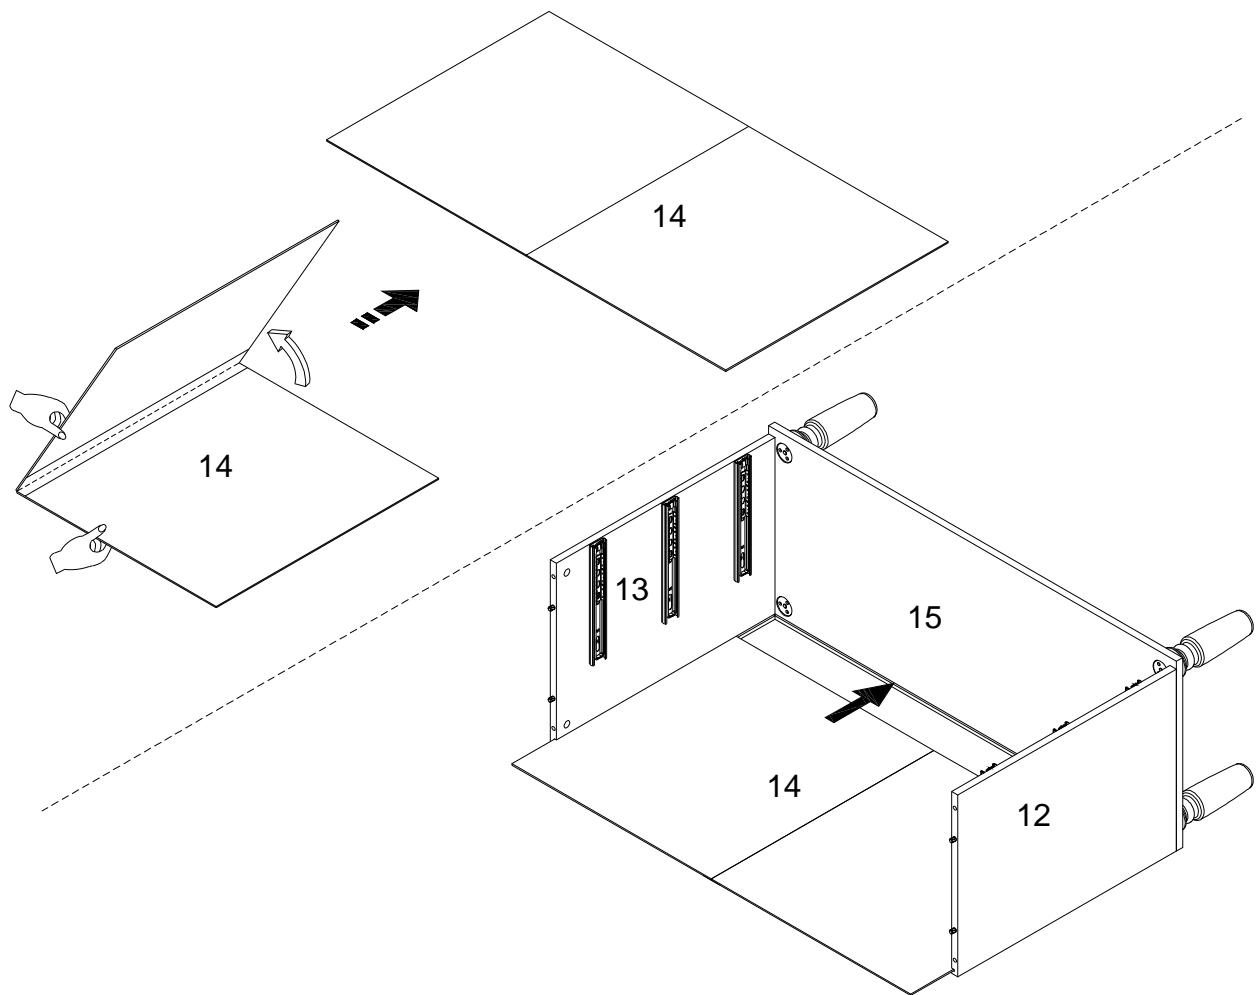


Step 7

Connect the Upper Left Side Panel (4) and the Upper Right Side Panel (5) to the Upper Fixed Divider (6). Insert cam locks (C) and tighten with a screwdriver.

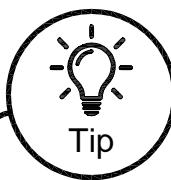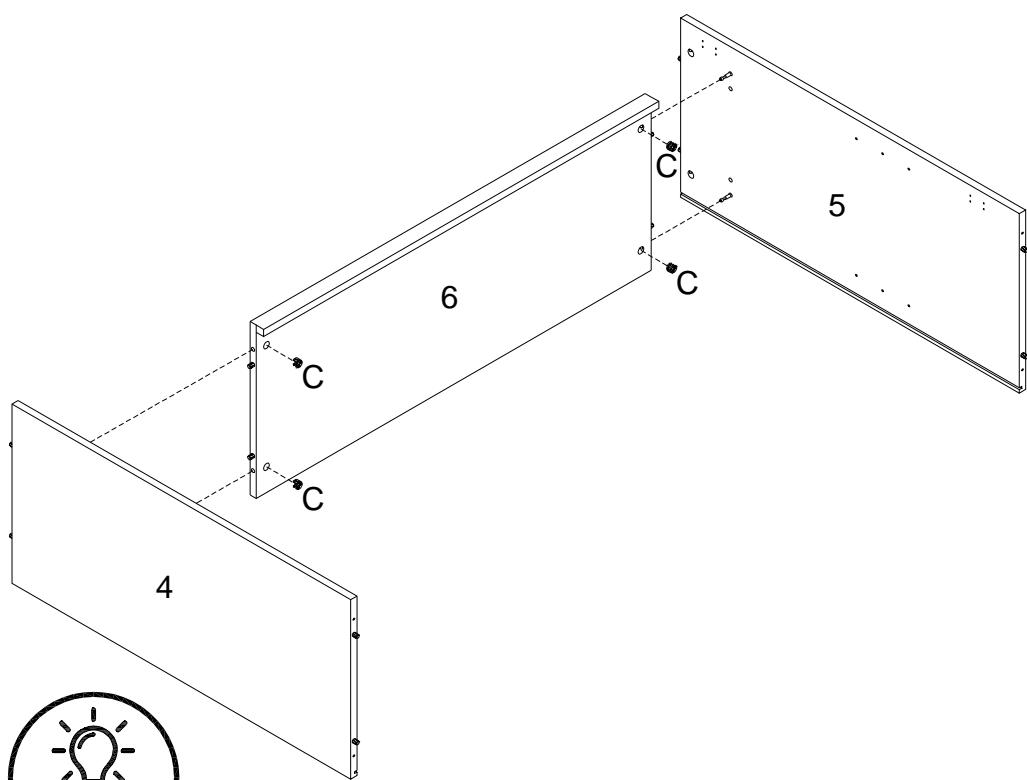


Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

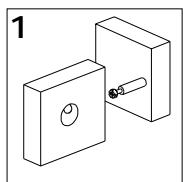

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

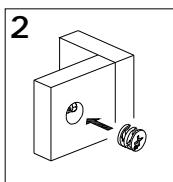


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

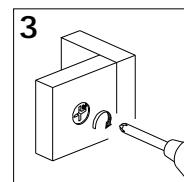

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 8

Secure the Middle Fixed Divider (9) to the Upper Left Side Panel (4) and the Upper Right Side Panel (5) using the (E) bolts. Tighten with the provided hex key (F).

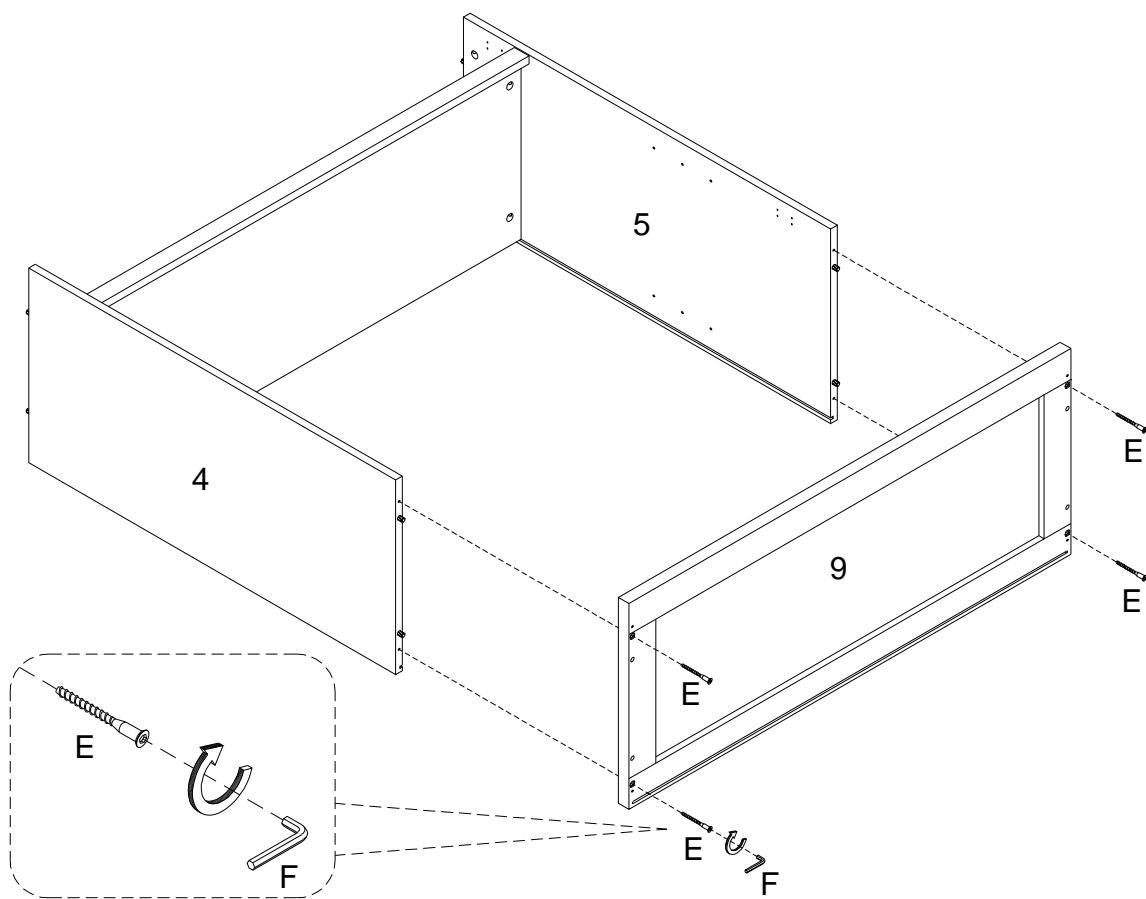


Step 9

Screw cam bolts (B) into the Middle Fixed Divider (9).

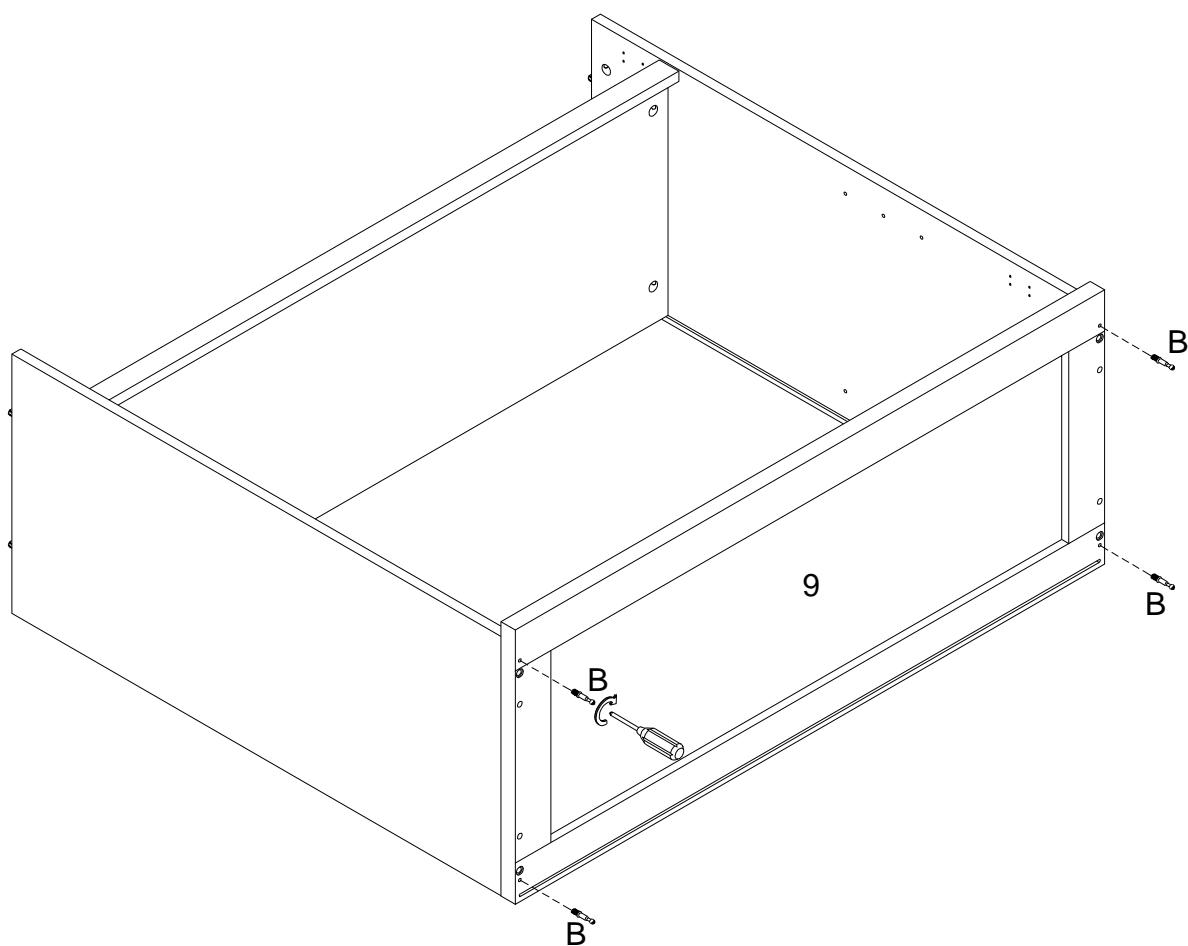


Step 10

Via the cam bolts (B), connect the Middle Fixed Divider (9) to the Lower Left Side Panel (12) and the Lower Right Side Panel (13). Insert cam locks (C) and tighten with a screwdriver.

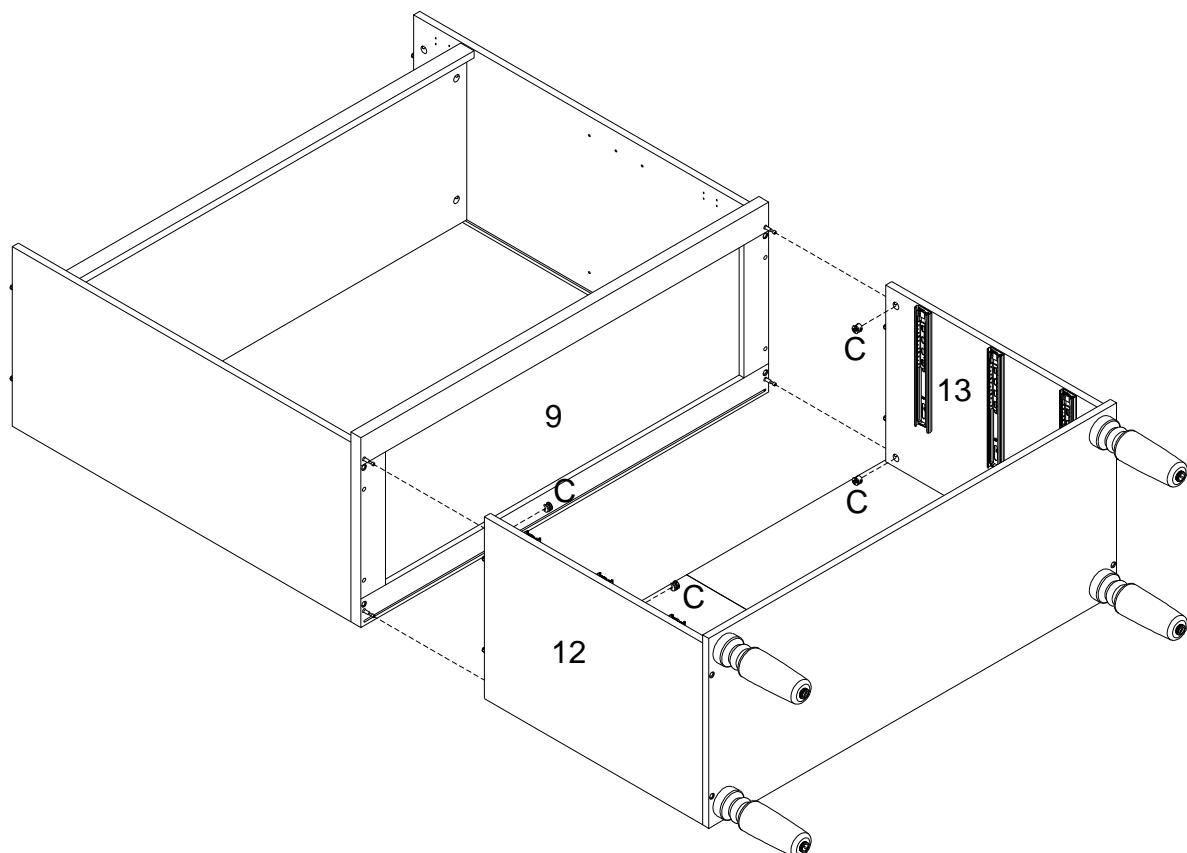


Step 11

Unfold the Upper Back Panel (8) and slide into place.

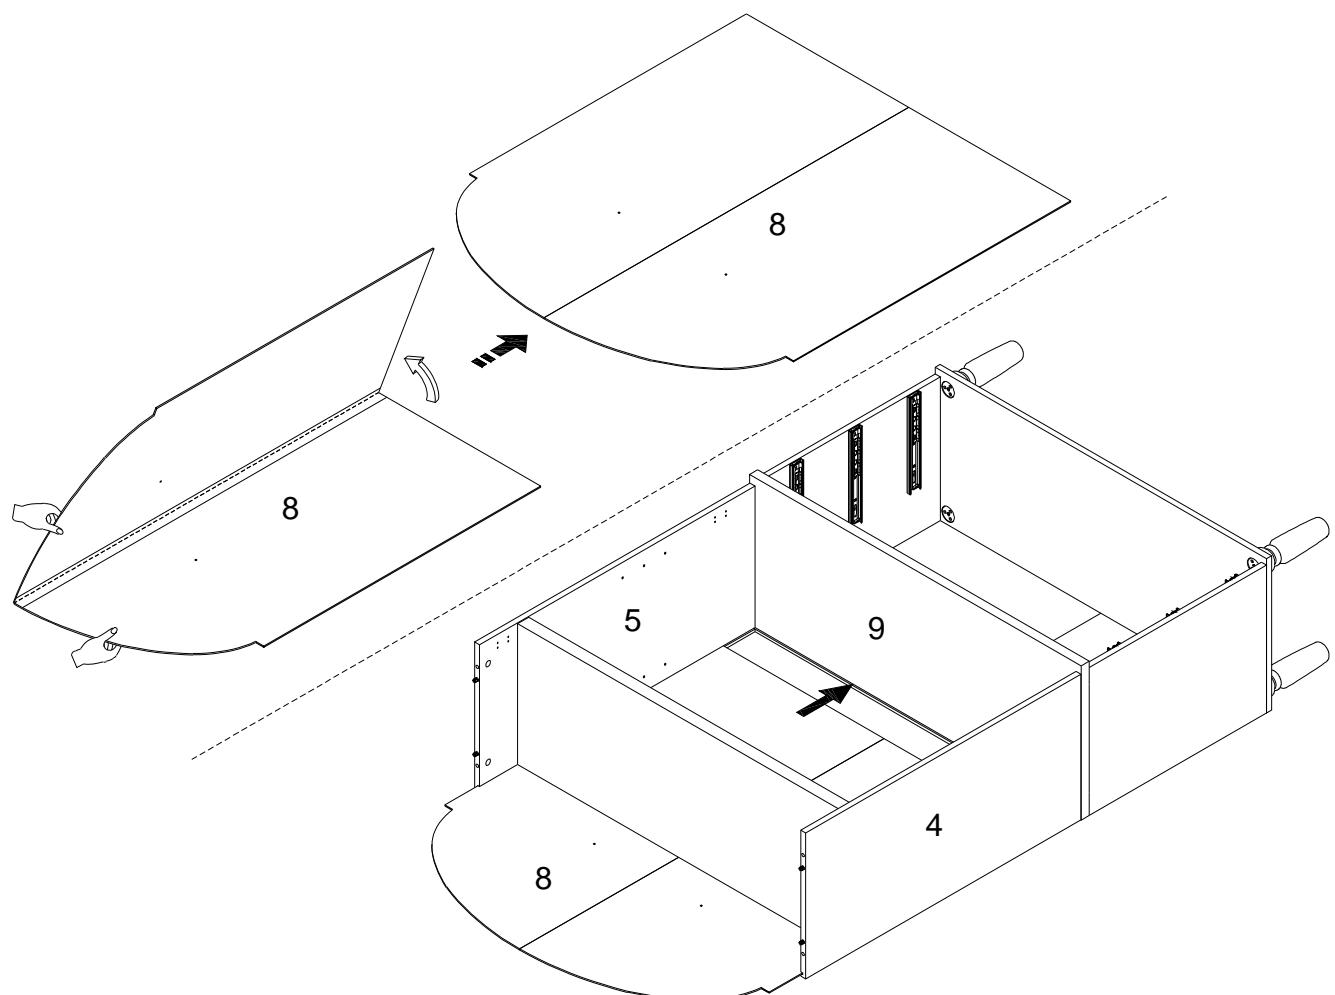


Step 12

Screw cam bolts (B) into the Right Top Arched Panel (2) and the Left Top Arched Panel (1).

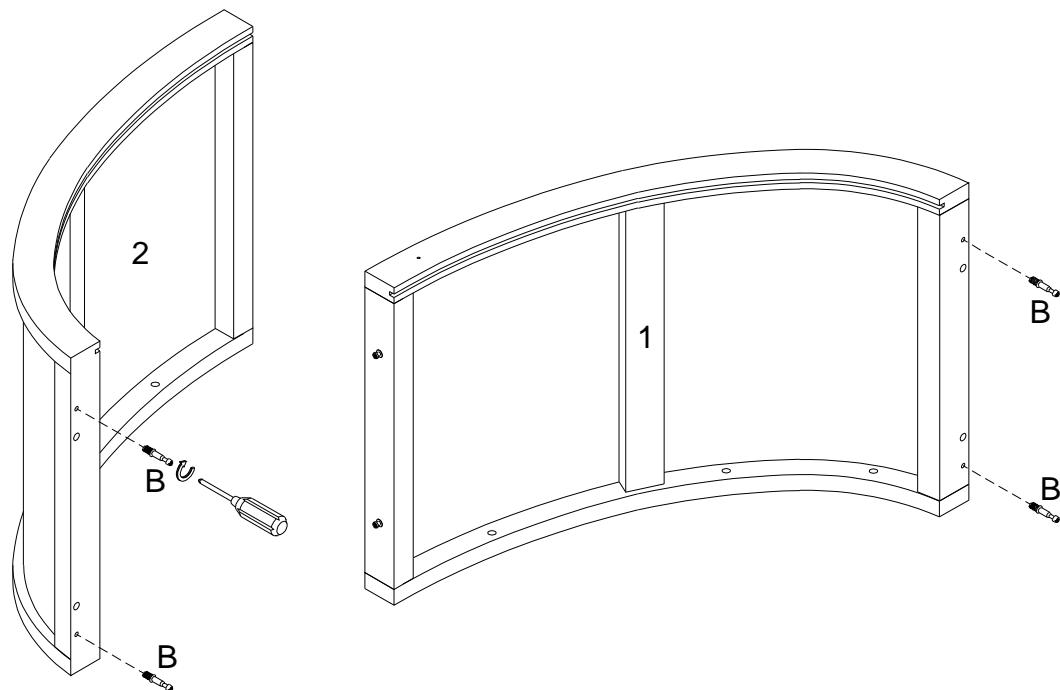


Step 13

Connect the Right Top Arched Panel (2) and the Left Top Arched Panel (1) using the attached slide/lock hardware.

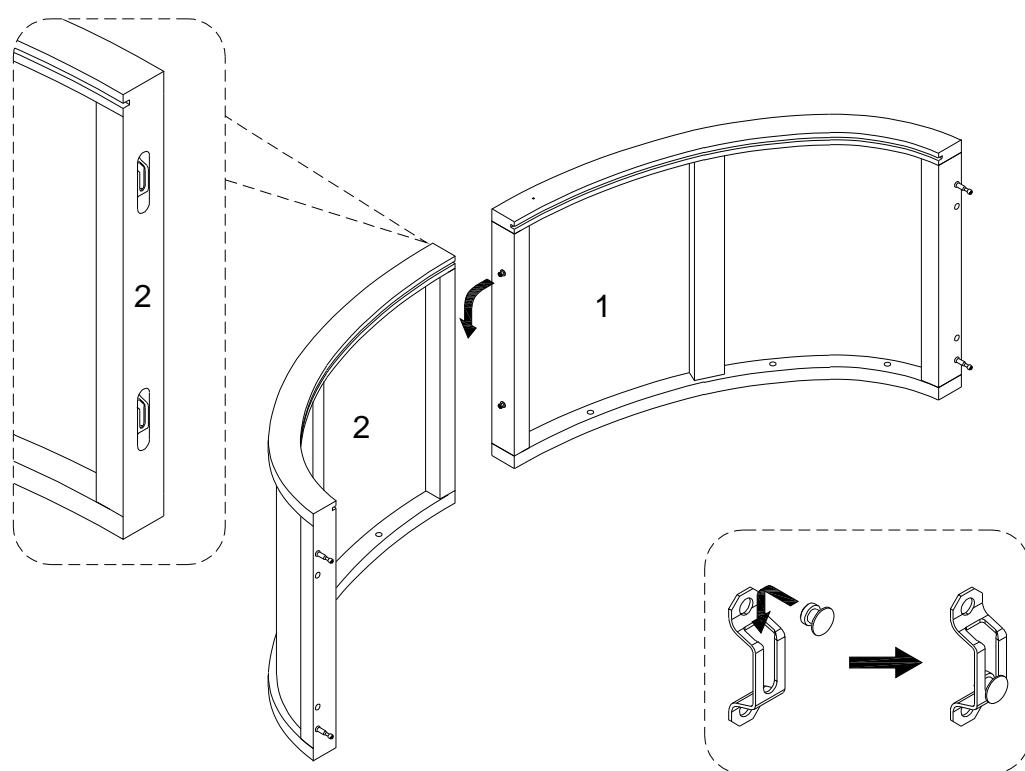


Step 14

Connect the Top Arched Panel Trim (3) to the Top Arched Panel (1 / 2) using the (G) bolts, (X) Lock washers and (Y) Washers. Tighten with the hex key (F).

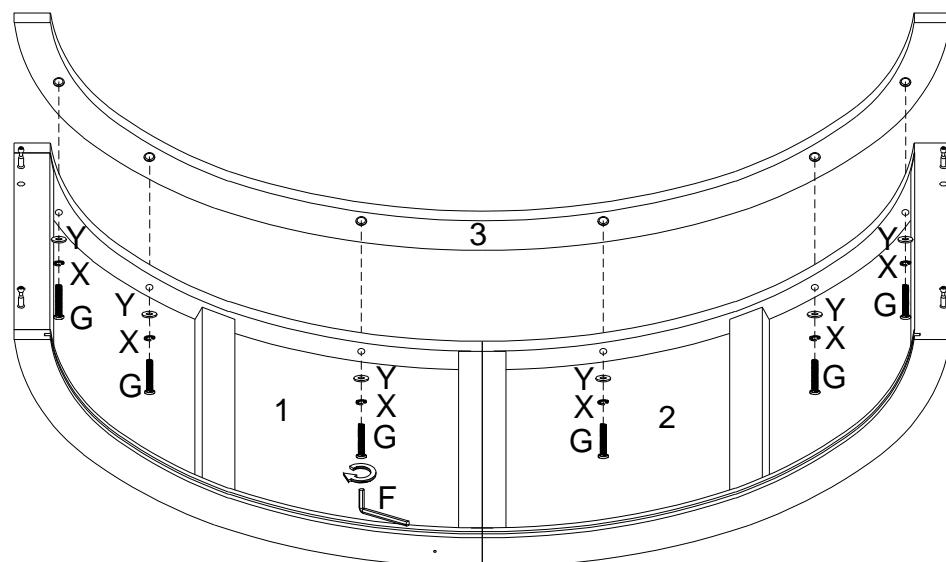




Step 15

Now, secure the Top Arched Panel (1 / 2) to the rest of the unit. Insert the cam locks (C) and tighten with a screwdriver.

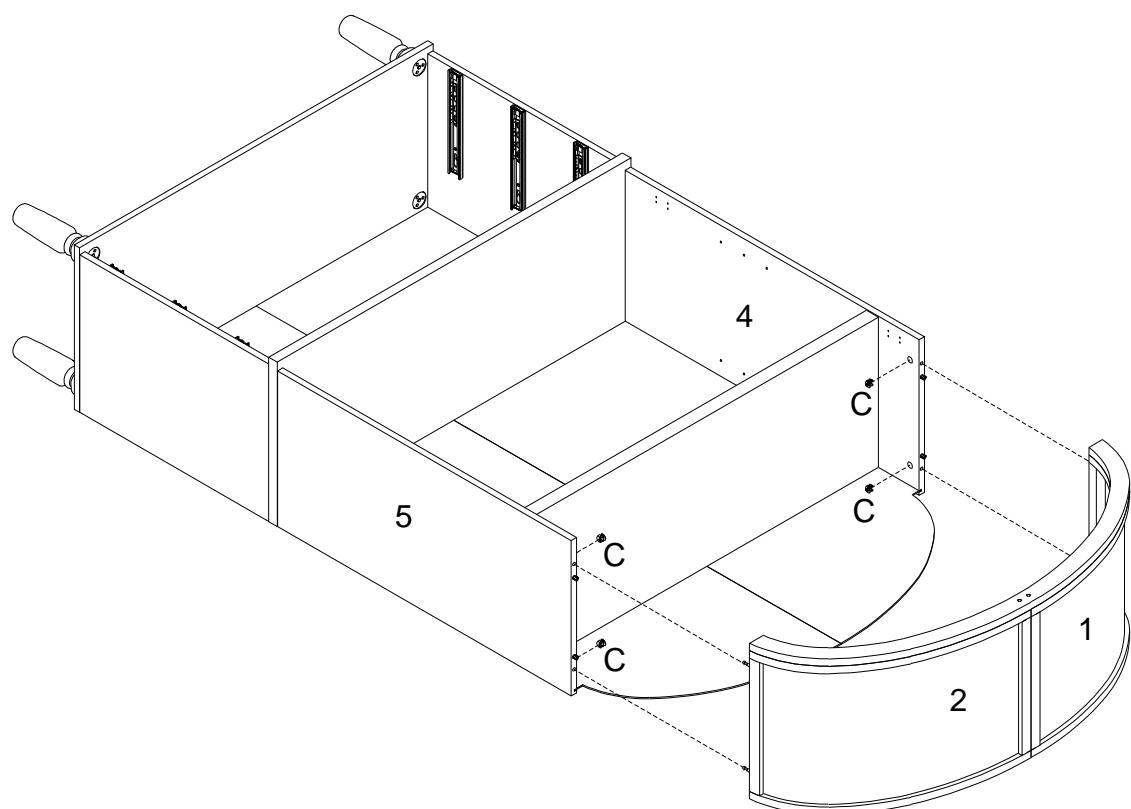


Step 16

Evenly distribute the plastic wedges (J) between the Upper Back Panel (8) / Lower Back Panel (14) and the frame. Fasten them in place using the (K) screws. Next, use the (H) screws to additionally secure the back panel to the Upper Fixed Divider (6).

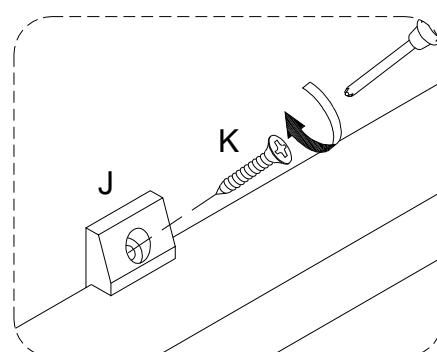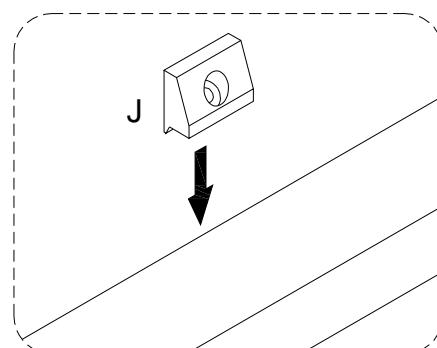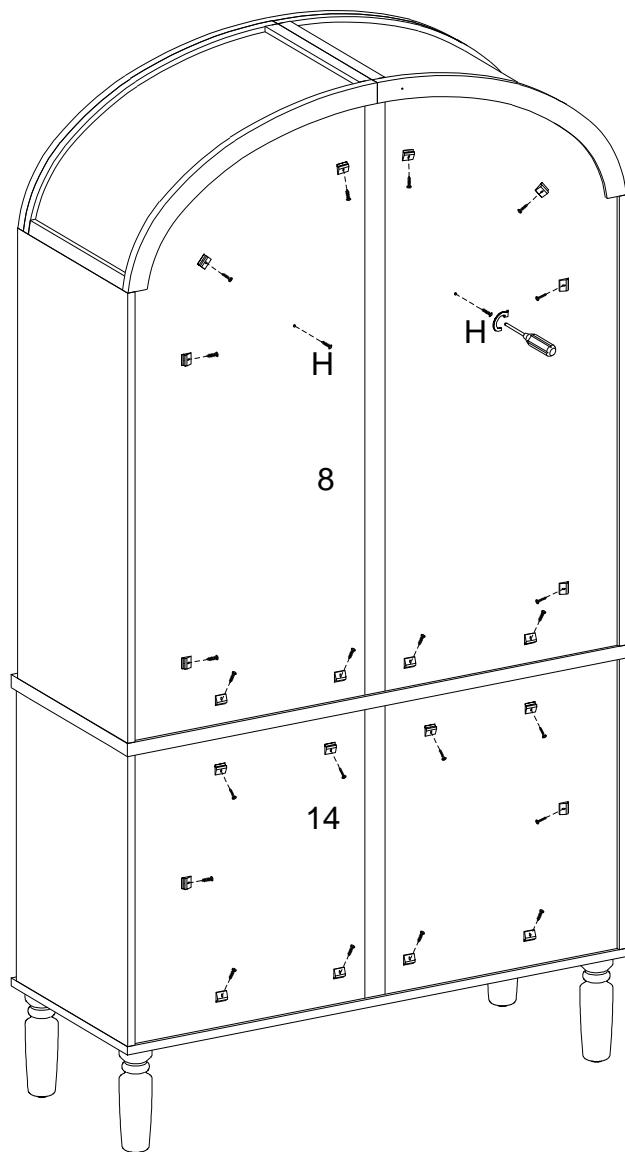


Step 17

Use the provided stickers (D) to ensure a clean finish.

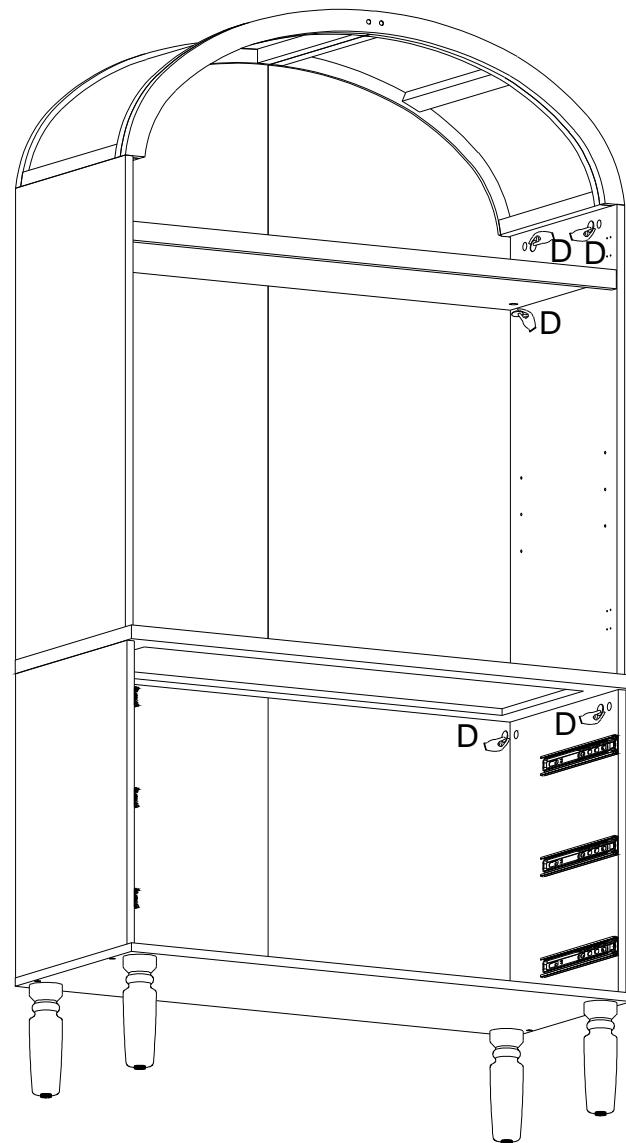


Step 18

Insert shelf support pins (L), then slide in the Upper Adjustable Shelf (7), ensuring the notch in the shelf fits to the shelf support pin (L).

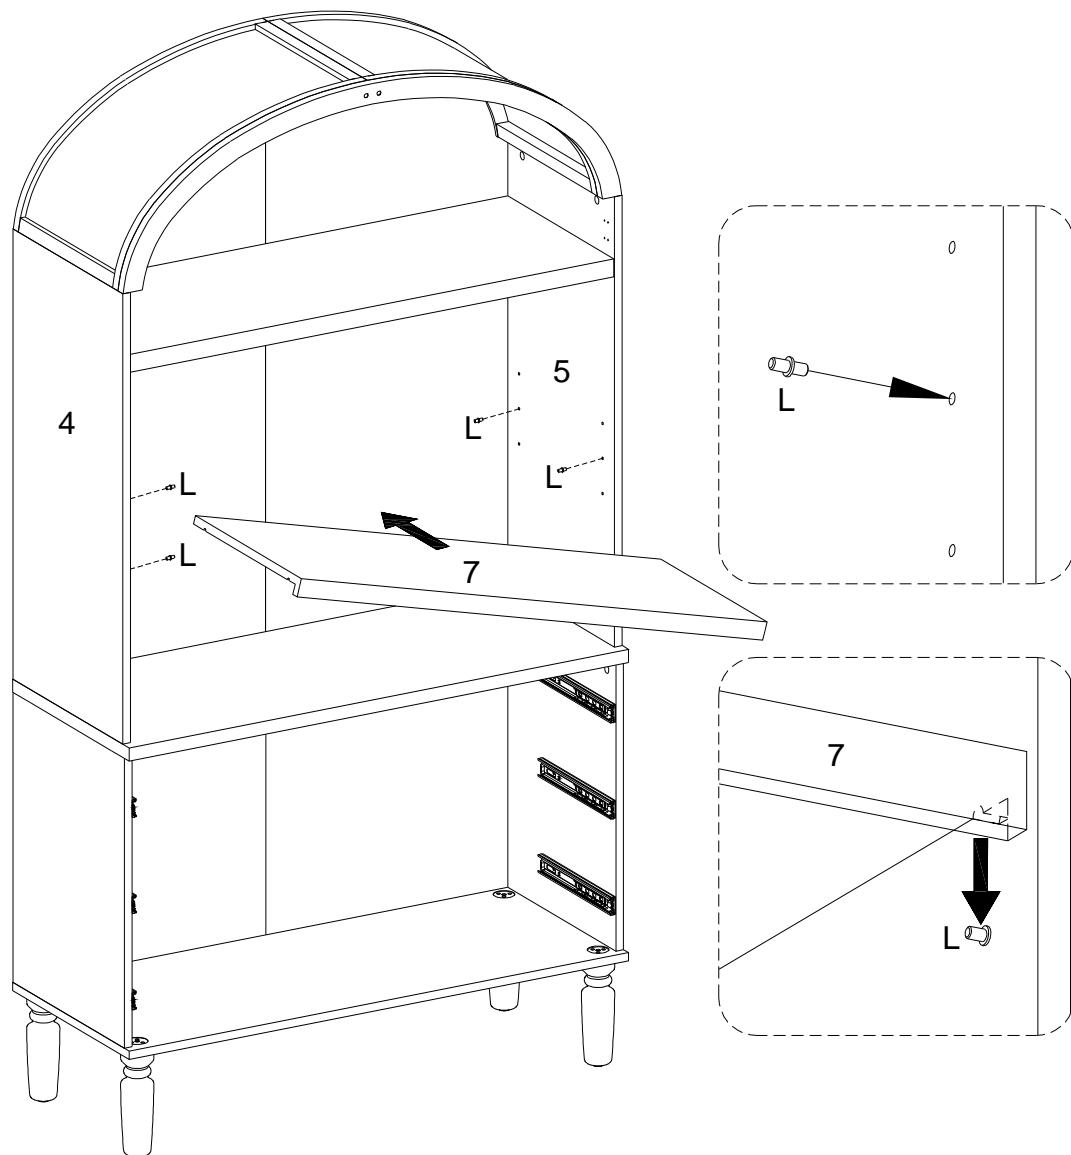



Step 19

Using the (N) screws, attach the hinges (M) to the Left Door Panel (10) and Right Door Panel (11). Next, fasten the handle (P) to each door with the handle bolt (Q), and screw in the (R) bolt to the top inside corner of both doors.

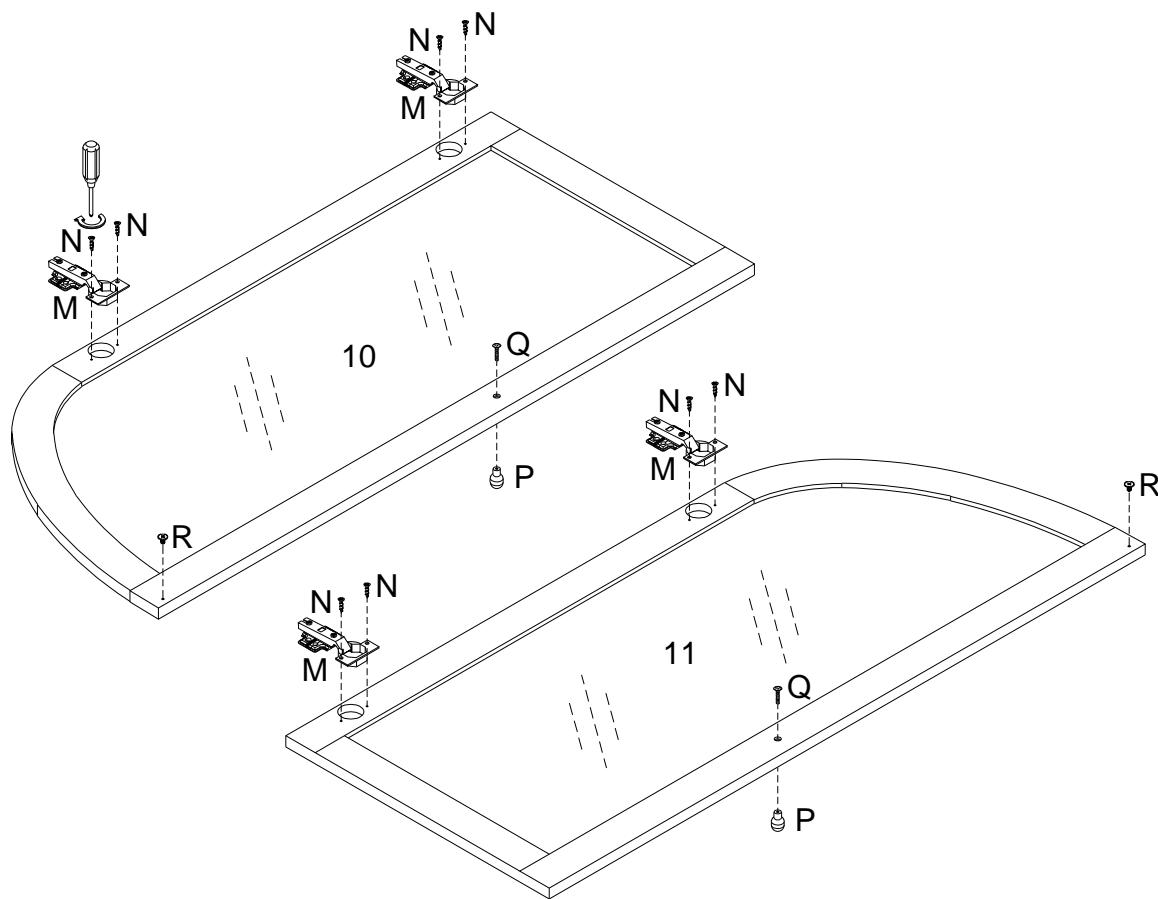


Step 20


Secure the hinges (M) on the Left Door Panel (10) to the Upper Left Side Panel (4) using the (N) screws.

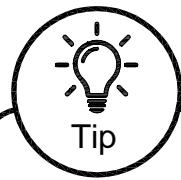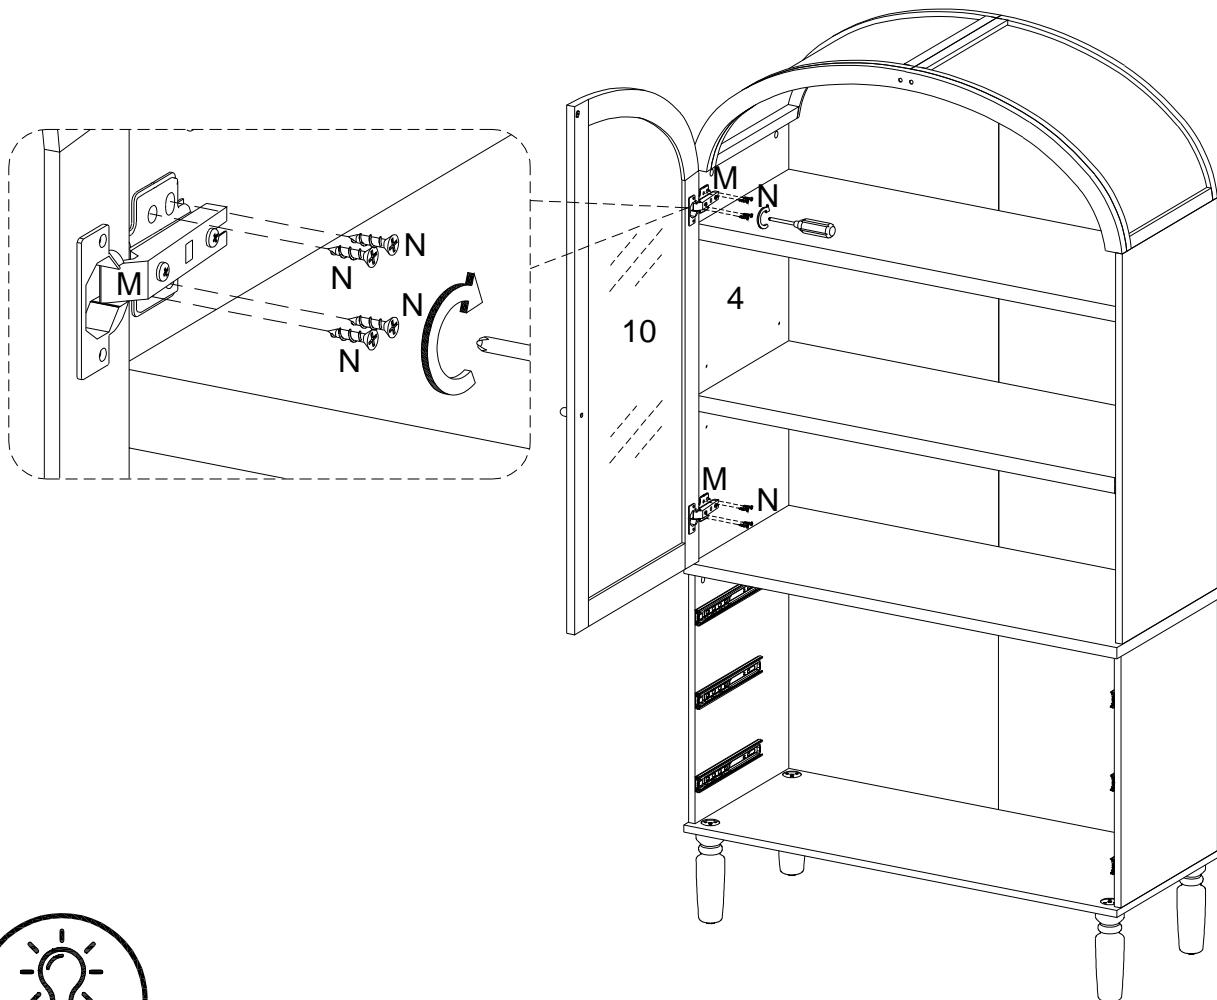


Adjusting The Cabinet Doors

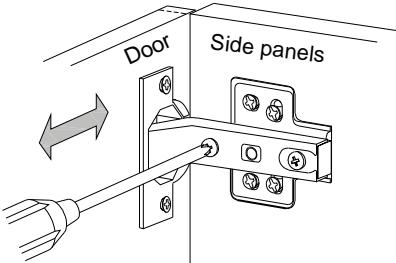

Adjust horizontal width
with this screw.

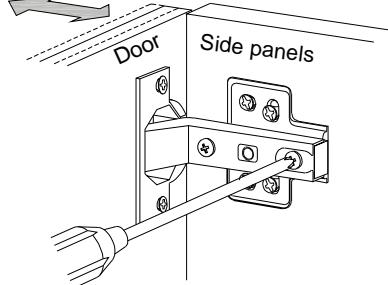


Adjust depth position
by loosening the hinge arm
mounting screw.

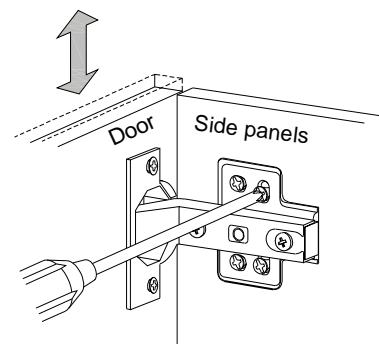

Adjust vertical height
via the screws in the
mounting plate.


Step 21

Secure the hinges (M) on the Right Door Panel (11) to the Upper Right Side Panel (5) using the (N) screws.

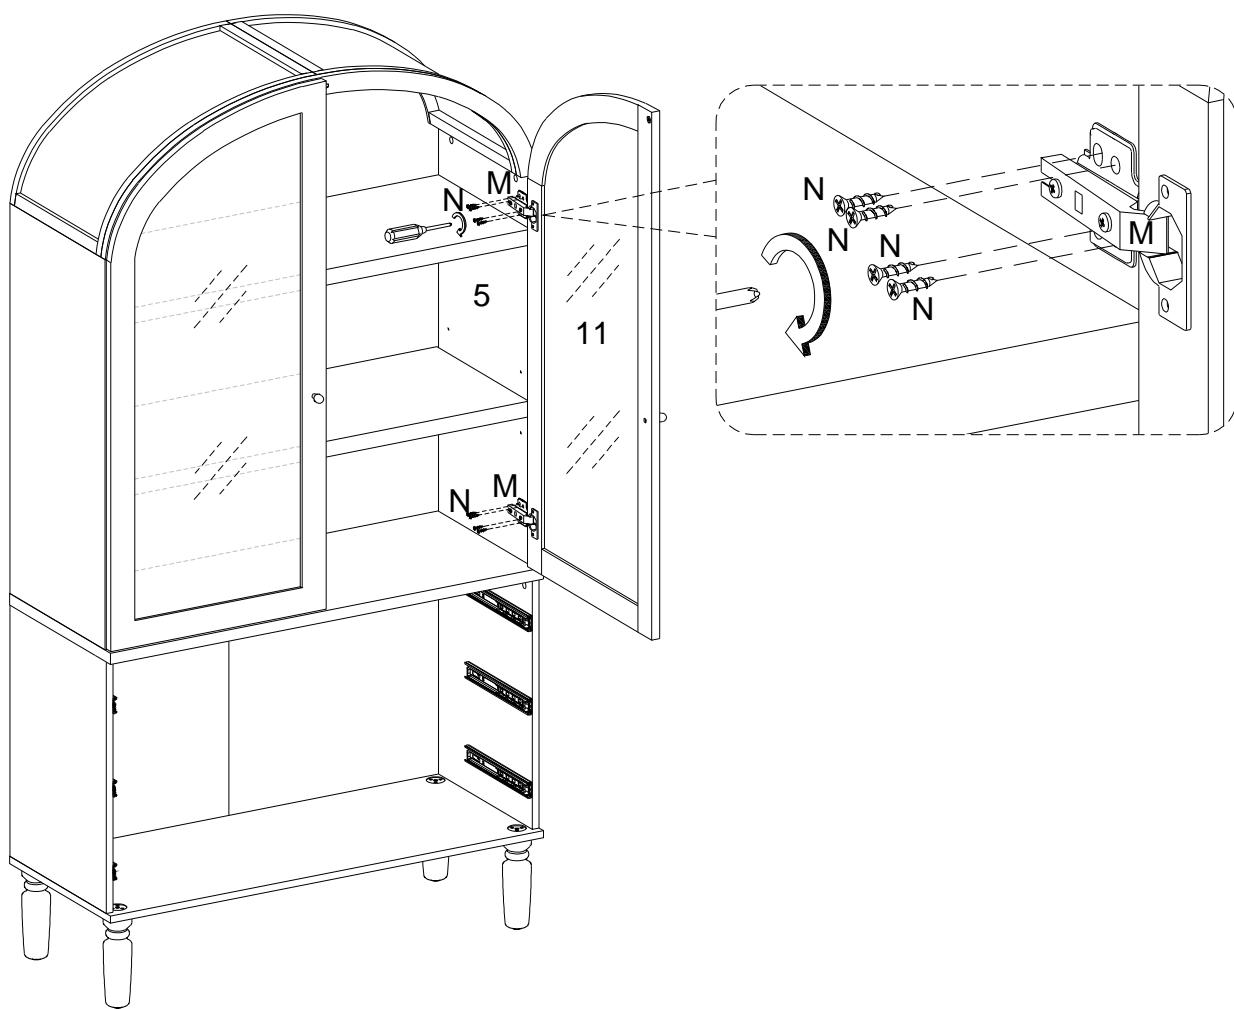

Step 22


Next, attach a handle (P) to all three Drawer Front Panels (21) using the handle bolt (Q).

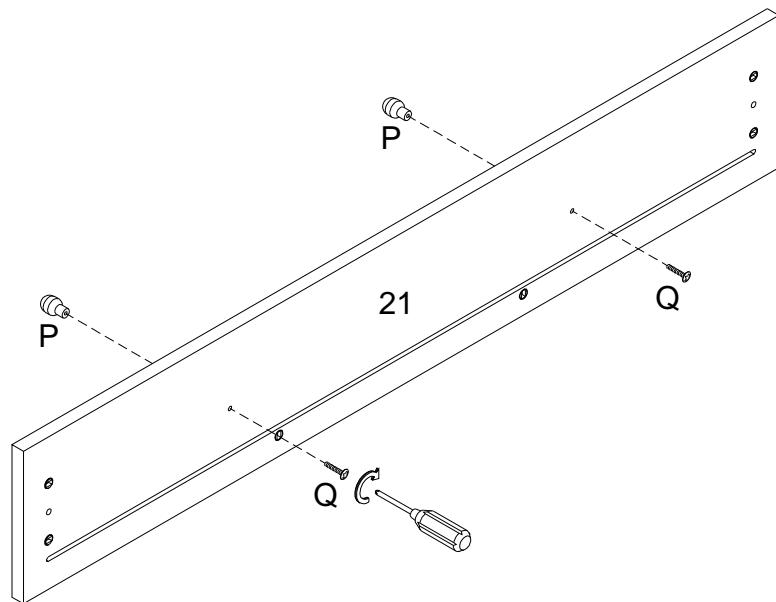

x 3

Step 23


Insert wooden dowels (S) into the Drawer Right Side Panel (17), Drawer Left Side Panel (16), and the Drawer Back Panel (18). Repeat this for all three drawers.

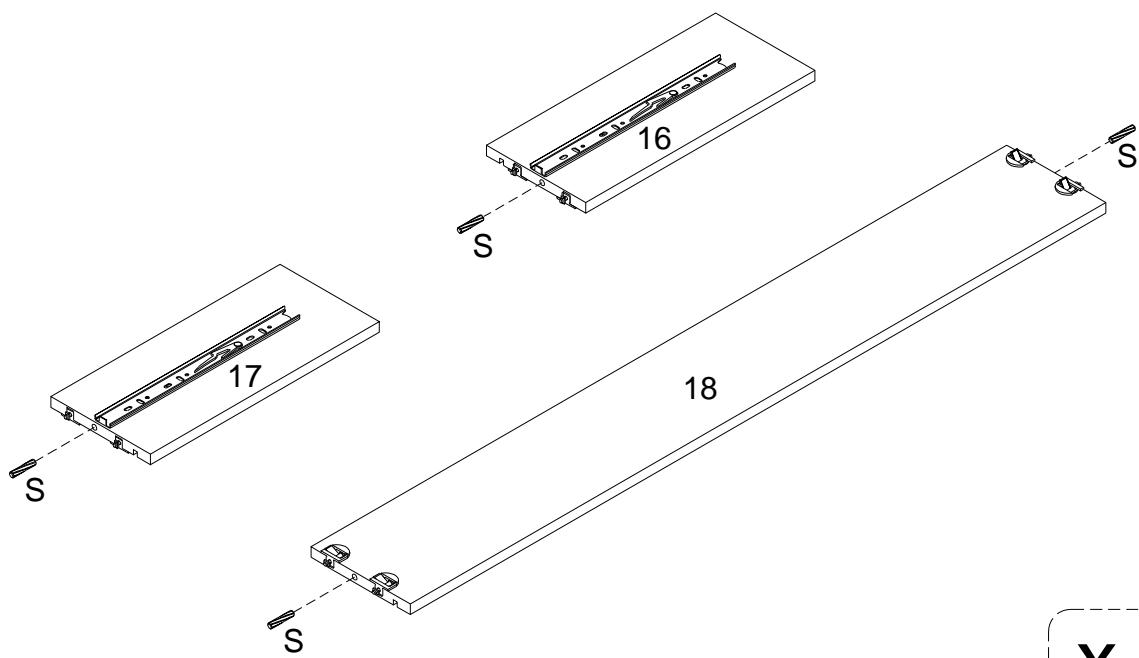

X 3


Step 24

Using the quick assembly mechanism, connect the Drawer Right Side Panel (17) and the Drawer Left Side Panel (16) to the Drawer Back Panel (18). Repeat this for all three drawers.

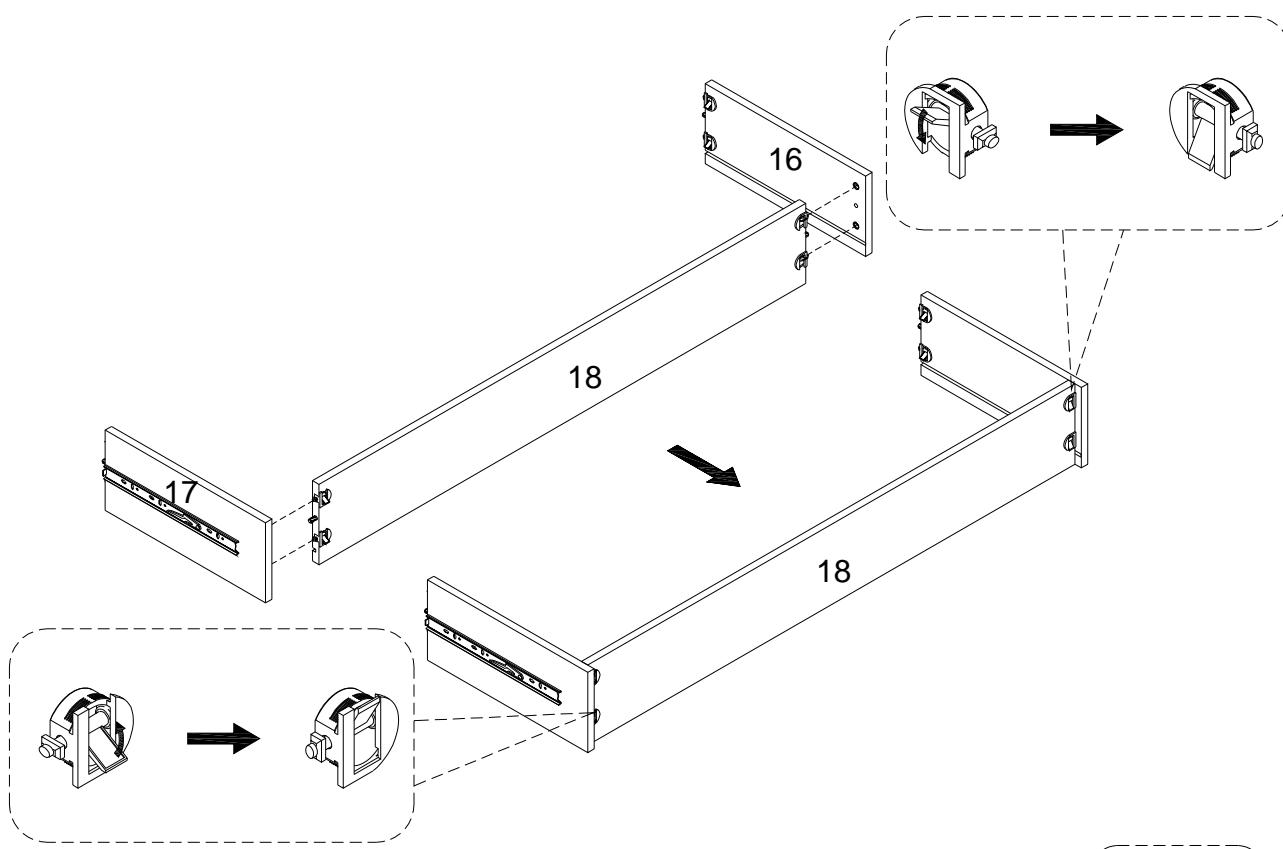


Tip

Quick Assembly Drawers

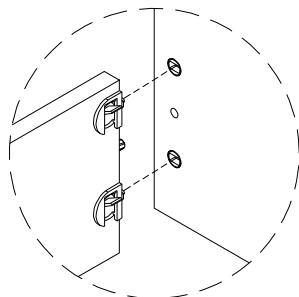


1. Make sure the quick assembly drawer pin is aligned with the corresponding hole.

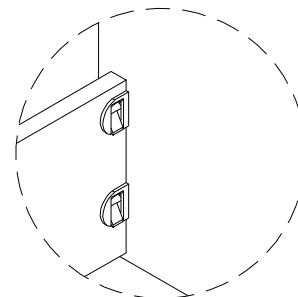

2. Once the pin is inserted correctly, flip the metal lever in the opposite direction to ensure the panels are firmly locked together.

Step 25


Secure two Base Cross Bars (20) to each Drawer Back Panel (18).

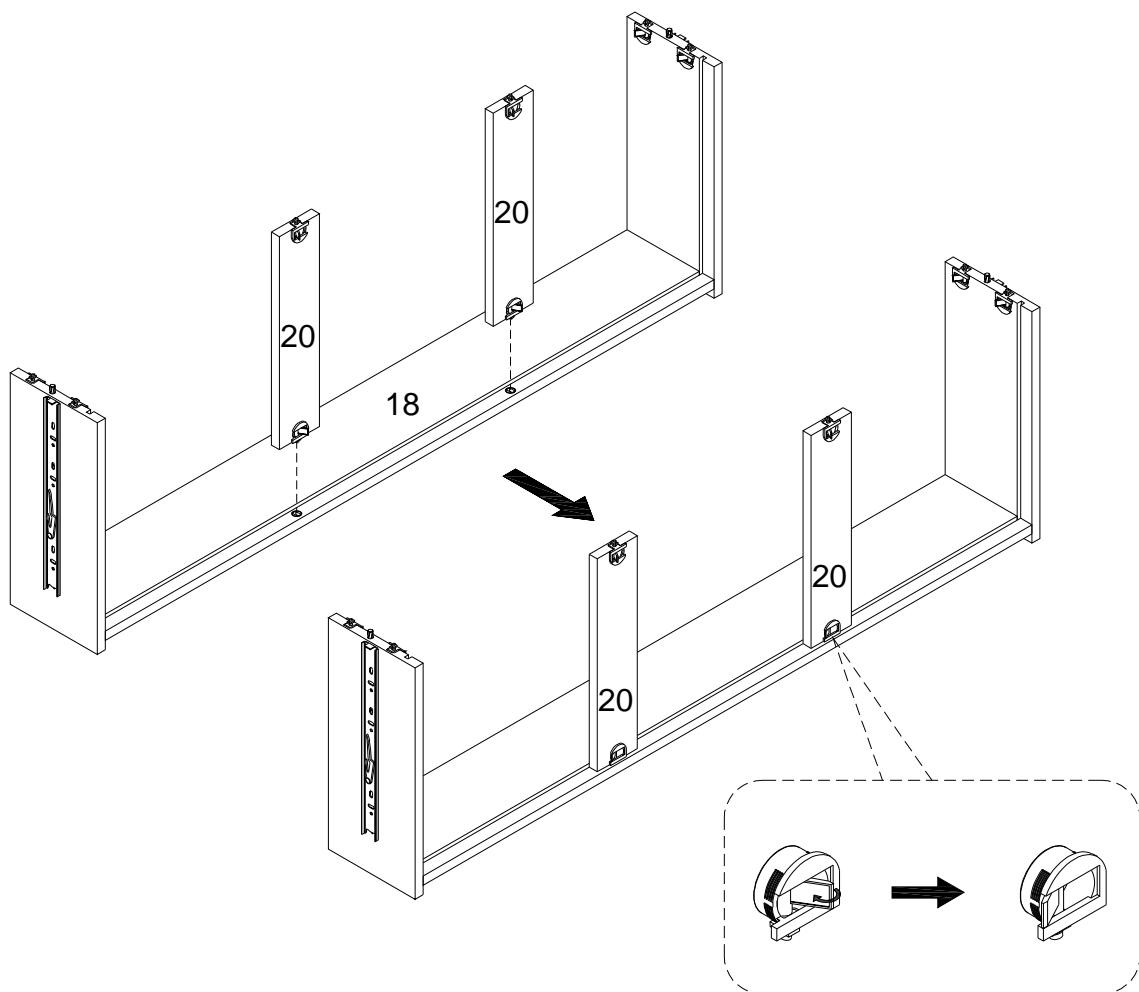

x 3

Step 26


Insert a Drawer Bottom Panel (19) into each drawer.

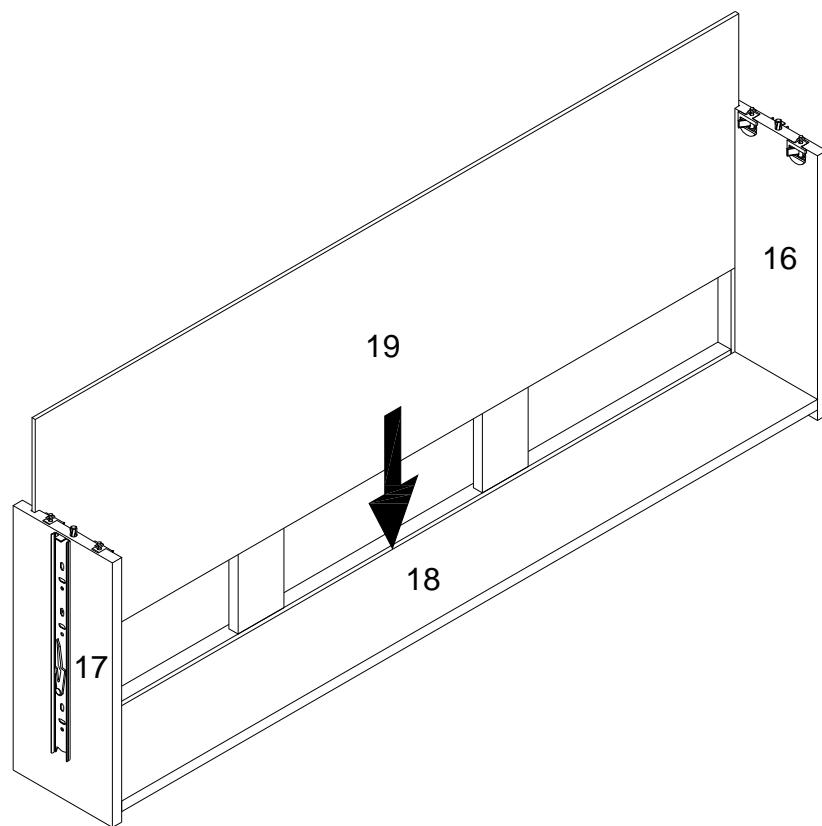

x 3

Step 27



Attach the Drawer Front Panel (21) to the drawer and secure with the quick assembly mechanism. Repeat this for all three drawers.

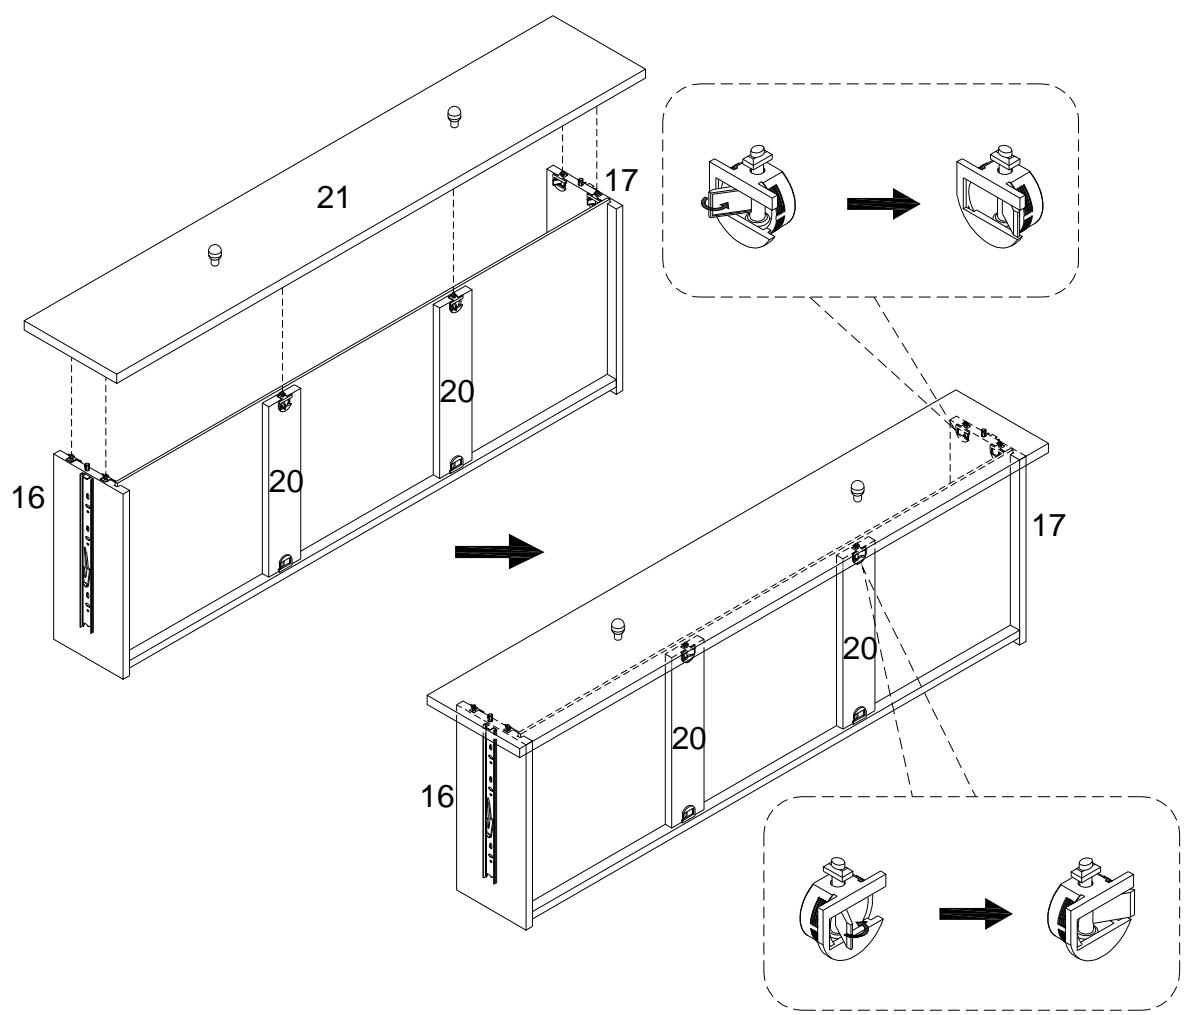

x 2


Step 28

Firmly push the drawers all the way into place making sure the drawer member lines up with the inside guides of the cabinet member. Some resistance is normal.

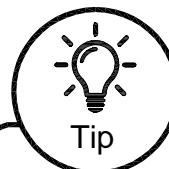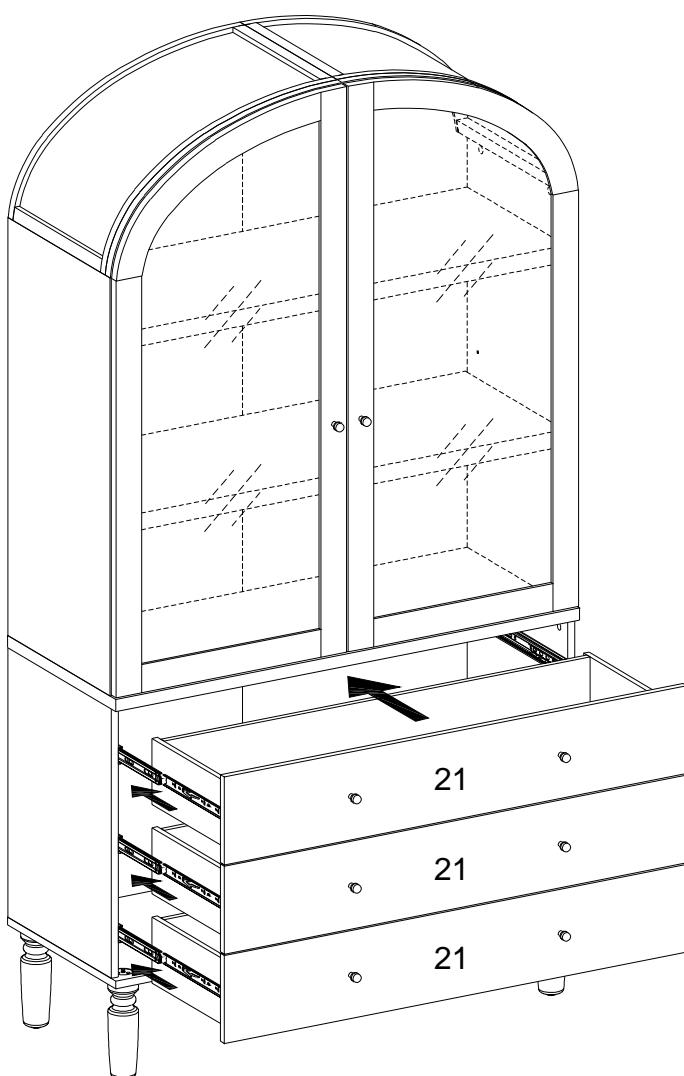


Reinserting your Cabinet Glides together

Line up the Drawer Member so it is inside the guides of the Cabinet Member. Once the connection is made, push the drawer into place entirely. It may not be a smooth glide on your first try, but will improve after it's fully inserted.

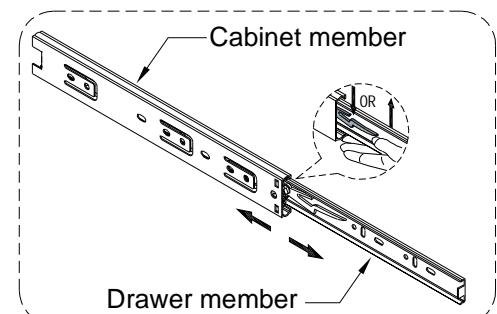


Step 29

Adjust the feet on the bottom of your unit to ensure it sits level.

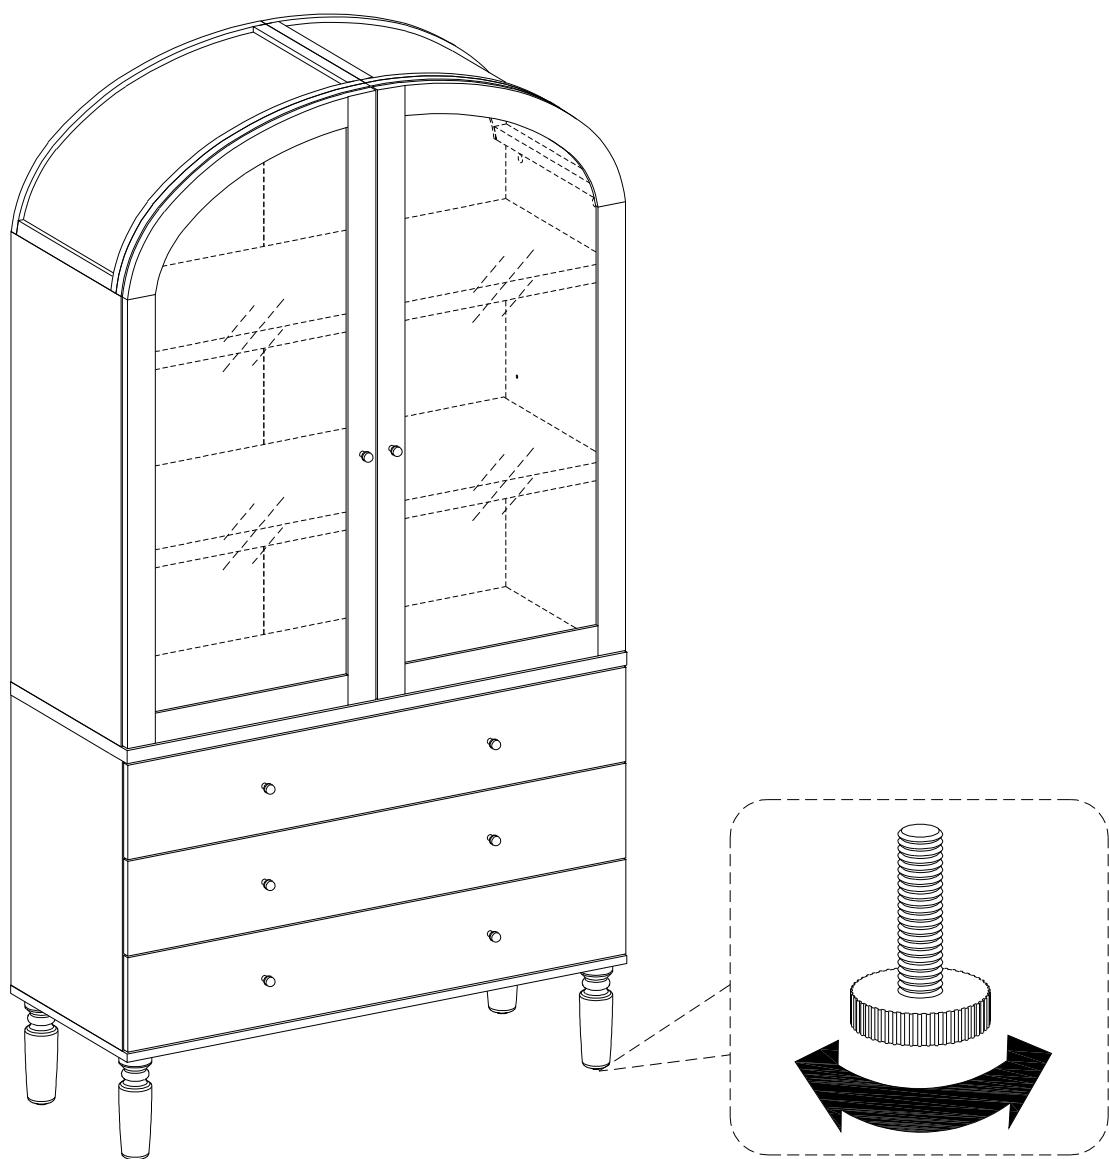


Step 30

Secure the unit to the wall using the anti-tip hardware. Attach the plastic strap (V) to the Top Arched Panel (1) with the (T) screw.

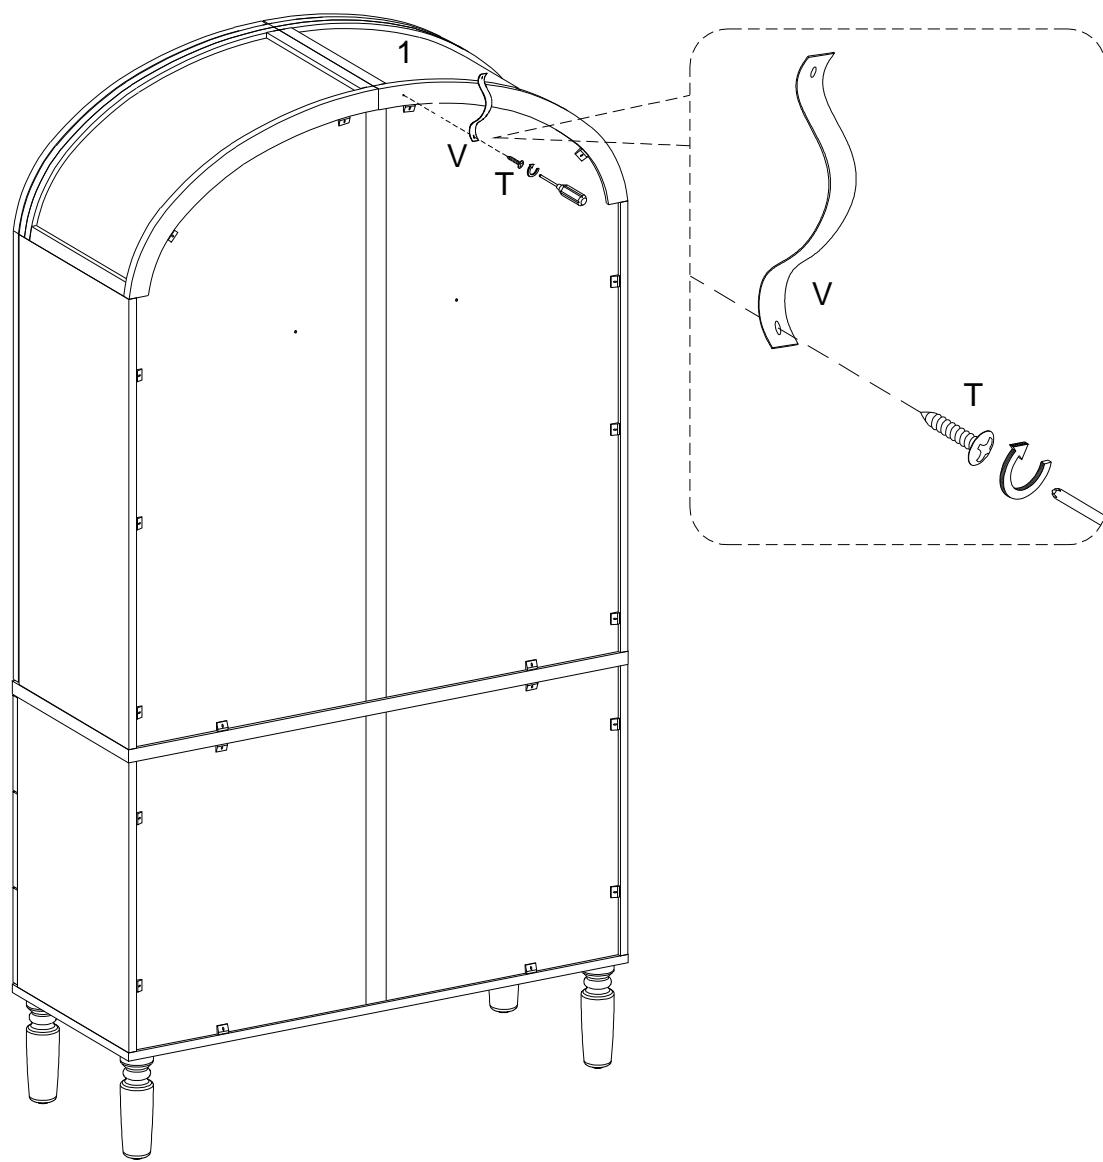

Step 31


Insert the wall anchor (W) into the wall, then fasten the other end of the plastic strap (V) to the wall using the (U) screw.

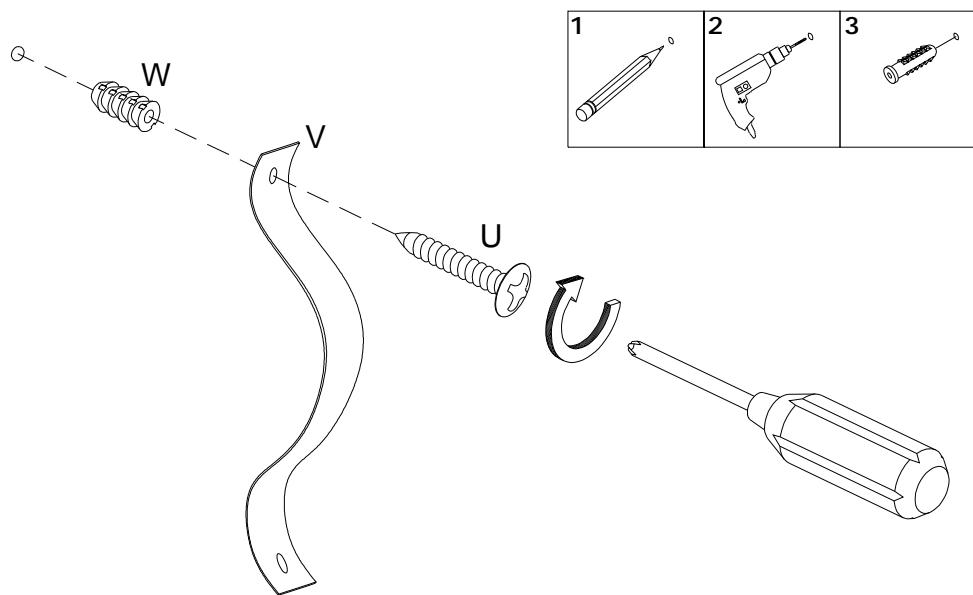

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

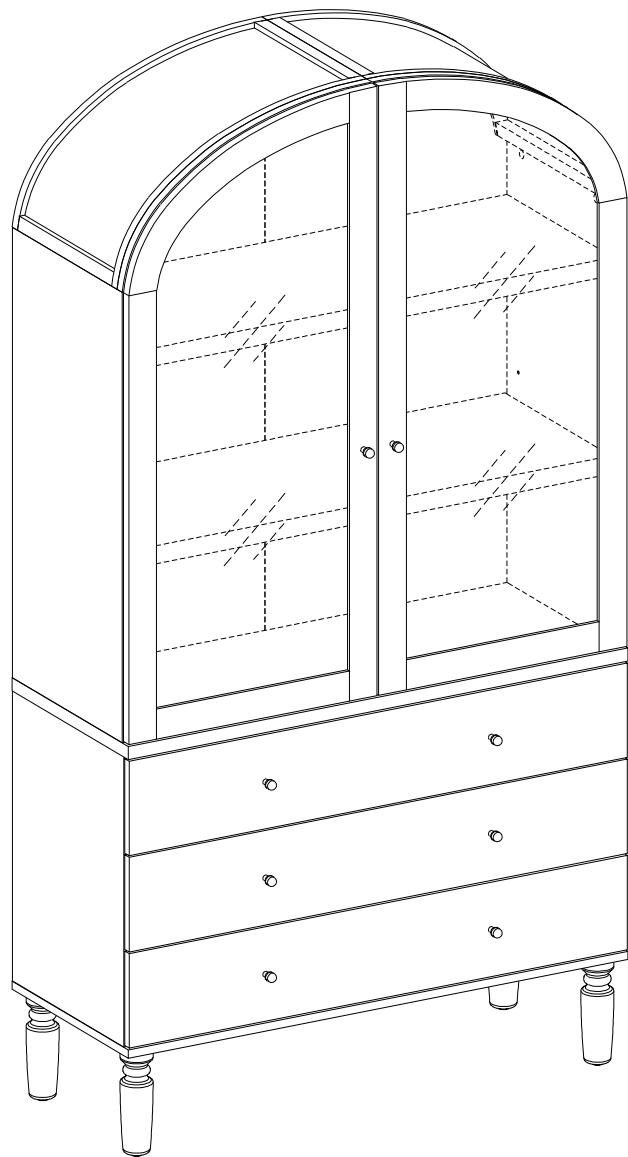

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

