




SIMPLE BUT BRILLIANT

W3402

The information in this manual has been carefully checked for accuracy, and we are not responsible for any misunderstandings that may arise from any typographical errors or omissions. The printing process may cause the products in the material and the actual product have slight differences, due to the different printing time of the material, the product specifications may be slightly changed, the purchase of the physical shall prevail. Translated with DeepL.com (free version)

Smart Toilet

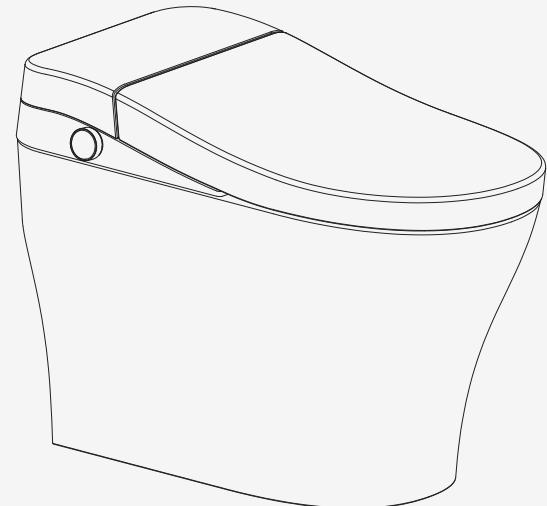

Product Manuals

Contents

Safety Instructions.....	02
Component Name.....	09
Functional Configuration.....	11
Technical Parameters.....	12
Instructions for use.....	13
Remote control.....	18
Cleaning and maintenance.....	23
Fault judgment.....	27

Important Safety Guidelines

Please read all guidelines before installing and using the product.
Always follow the safety instructions when using this product.

Hazard - To reduce the possibility of electric shock

1. Do not place or store the product in a place where it may get wet.
2. Do not drop the remote control into bathtubs, sinks and other liquids.
3. Do not spray water on the product or plug part.

WARNING - To prevent the possibility of burns, electric shocks, fires and injuries

1. Young children or users whose lower body is paralysed and not sensitive to temperature need to be accompanied by others when using this product and please adjust the temperature to the lowest level or turn off the toilet seat temperature function.
2. The product is limited to the functions listed in this manual. The product is limited to the functions listed in this manual, please do not use the ancillary equipment that is not recommended by the company.
3. Do not use the product if the cord or plug is broken, if the product malfunctions, if the product is damaged, or if the product is dropped into water. Take the product to a nearby designated service centre for inspection, repair or adjustment.
4. Make sure the cord is not burned.
5. Do not use the product while drowsy or asleep.
6. Do not drop or insert any object into the opening of the product or into the water pipe.
7. Do not use the product outdoors.
8. Do not allow children to play with the product.
9. Use the new hose assembly supplied with the product; the old hose assembly cannot be reused.

Please save this safety guide

Thank you for purchasing our products, please read this manual carefully and use it correctly.

After reading the manual, please keep it in a convenient place.

Various models of product modeling differences, product shape please prevail in kind,
this the shape of the product is for reference only.

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER - To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water. Unplug immediately.
5. The toilet is provided with a ground-fault circuit-interrupter (GFCI). Risk of electric shock, press the TEST button (then RESET button) every month to assure proper operation.
6. Do not immerse into water.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
6. Never use while sleeping or drowsy.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Connect this product to a properly grounded outlet only. See Grounding Instructions.
10. Household use only.
11. Do not use extension cord.
12. The product has no user serviceable parts.

SAVE THESE INSTRUCTIONS


GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

DANGER - Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

Grounding methods

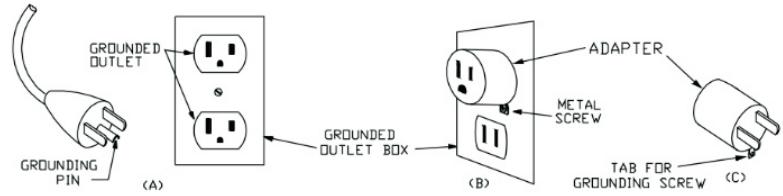

This product is for use on a nominal 120 V circuit, and has a grounding plug that looks like the plug illustrated in sketch A. A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear, lug, and the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

Safety Precautions

Please read these safety precautions carefully and use them correctly.

The precautions listed here are important safety-related items, so be sure to observe them.

The markings and meanings are described below

 Warnings	Indicates the possibility of serious injury or death if this sign is disregarded and operated incorrectly.
 Caution	Indicates the risk of personal injury or property damage if this sign is disregarded and operated incorrectly.

Examples and descriptions of icons

 Indicates impracticality (prohibition). The picture on the left shows (dismantling is prohibited).
 Indicates what must be (enforced). The figure on the left represents (mandatory compliance).



Warnings



Do not splash water or detergent on the product body or the power plug.

- May cause fire or electric shock.
- May cause breakage or damage to the toilet seat or water seepage in the room.

This is an electrical product, so please do not install it in a place where water can easily be splashed on it or where the humidity is high. When using in the bathroom, please install a ventilating fan or ventilating port to maintain good air circulation in the bathroom.

- May cause fire or electric shock.

Set up the sockets for power wiring as follows

- Failure to wire as follows may result in fire or electric shock.
- a. For the circuit of the socket, please use a high inductance, fast type earth leakage switch (rated inductance current 10mA less) or protect it with an insulated transformer (1.5KVA more, 3KVA less).
- b. Please make sure that the installation position of the socket is more than 0.3m from the ground and as far away from the bathtub as possible.

Product grounding wire must be grounded, please be sure to connect to the ground wire

- Failure to ground may result in electric shock.

Note: The grounding treatment here refers to the grounding resistance of 4Ω less, and the use of copper wire with a diameter of 1.6mm more for the grounding wire.



Warnings

Do not install this product in wet areas such as bathrooms.

- May cause fire or electric shock.



No Dismantle

Never disassemble, repair or modify the product privately.

- The power cord of this machine should be replaced by our professional staff.
- May cause fire or electric shock.



No Wet hands

Do not plug or unplug the power supply with wet hands.

- May cause electric shock.



Prohibited

Do not continue to use the product if it malfunctions.

If any of the following occurs, pull out the power plug, close the water inlet angle valve, and stop the water inlet.

Fault Description:

Water leakage from piping and body.
Abnormal sound and odor.

Cracks and splits in the product.
Smoke, abnormal heat.

Toilet clogged.

- Continued use in a faulty condition may lead to problems such as fire, electric shock, or water seepage in the room.



Prohibited

Do not damage the power cord or toilet connection cable.

Do not pull or tug, do not press, do not heat, do not forcefully bend, do not place heavy objects on the power cord and toilet connection cord.

- Continuing to use the product despite its damage May cause fire, electric shock, short circuit.



Prohibited

Do not use loose or unstable electrical outlets.

- May cause fire or electric shock.



Prohibited

Do not use water sources other than tap water.

- May cause dermatitis and other problems.



Prohibited

Do not use an electrical outlet with multiple plugs.

- Do not connect wires or use extension cords in the middle of the process, as this will cause heat generation and result in fire and electric shock.



Prohibited

Do not use a power source other than 110V AC.

- May cause a fire.



Warnings



Compulsory

Watch out for low-temperature burns.

- When sitting on the toilet seat for a long period of time, adjust the toilet seat temperature to room temperature.
- When the following people use the insulated toilet seat with warm air drying, adjust the toilet seat temperature to the room temperature position and the warm air temperature adjustment knob to [Low].

Children, elderly people who cannot adjust the temperature to the right level by themselves.
People with limited mobility such as the sick and the disabled.
Sleepy people who have taken sleeping pills (sleeping pills, cold medicine, etc.), deep alcohol consumption and excessive fatigue.



Warnings



No Fires



Prohibited

Keep cigarettes and fire away from the product.

- May cause a fire.

Do not put your fingers or, clothing or other objects into or block the warm air blowing outlet.

- May cause burns, electric shock, and burns.
- Please be very careful when children and the elderly use it.



Prohibited

Do not apply force or shock, do not stand on the toilet seat, lid or body, and do not place heavy objects.

- May crack the product, break the body apart and drop it and cause injury.
- Toilet seat breakage can lead to interior flooding.



Prohibited

For maintenance, use diluted kitchen detergent (neutral) and do not use the following products:

(toilet detergent, residential detergent, gasoline, banana water, stain remover and nylon brushes, etc.)

- May damage plastics, causing them to deform and crack, resulting in personal injury.
- May damage water pipes and cause water leakage.



Prohibited

Do not remove the water inlet strainer or the water inlet strainer drain plug while the water inlet angle valve is open.

- May cause water leakage.



Prohibited

Do not use the toilet to flush anything other than urine, feces and toilet paper.

- Failure to do so may result in clogged toilets and sewage overflow.



Prohibited

Do not twist or break the water inlet hose.

- May cause water leakage.



Compulsory

Unplug when not in use for a long time.

- For safety reasons, pull out the power plug.
- When used again, rotting water may cause skin diseases.



Compulsory

Tighten the water inlet strainer securely when installing it.

- May cause water leakage.



Compulsory

When water leakage occurs, close the water inlet angle valve and stop the water inlet.



Compulsory

Preventing damage due to icing.

- Freezing can cause damage to the water inlet configuration as well as to the body to be internally damaged and leakage to occur.

Please implement warming measures to raise the temperature of the toilet.



Compulsory

A floor drain is required in the installation area of this product.



Compulsory

Plug in the power cord.

- Please make sure that the power cord is plugged in before use, and that the plug fits the socket tightly without loosening or incomplete insertion, or it will cause an accidental fire due to heat generation.
- Unplug when not in use for a long time.



Compulsory

If the toilet is clogged, unplug it from the power source and use a commercially available pipe cleaner to remove the clog.


- Failure to unplug the power supply may result in overflow of sewage and flooding of the room when the appliance performs automatic cleaning.




Compulsory

Do not expose the product to direct sunlight.


- Discolors, ages, and deforms the product resulting in damage.

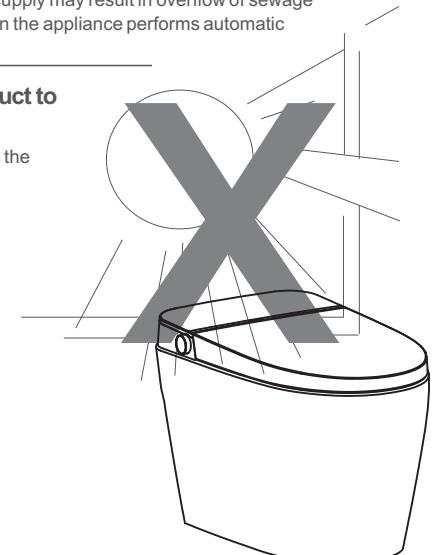


Name of each part

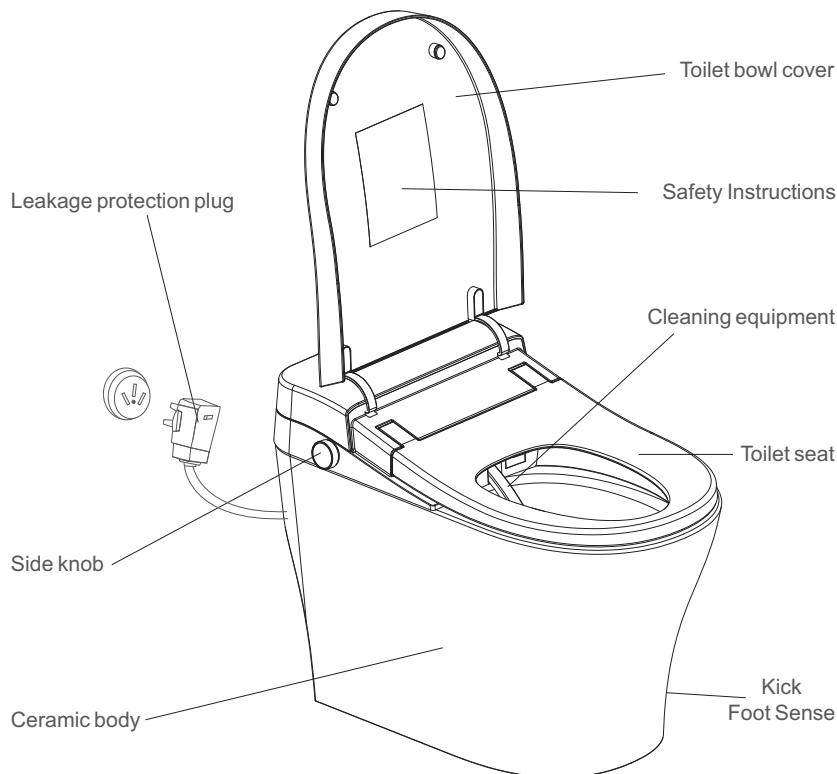

Side Knob Description

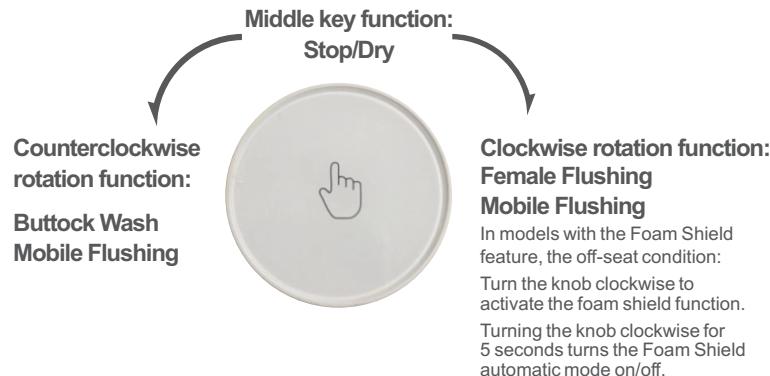

Digital Displays

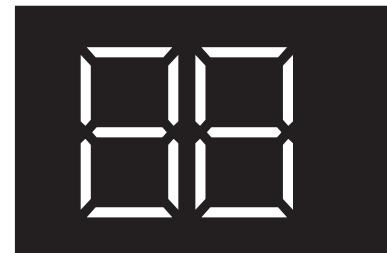

Function Description:


1. Display the water temperature when you enter the seat.
2. Display the seat temperature when leaving the seat.
3. Display the wind temperature when drying.
4. Display the corresponding function temperature when adjusted by remote control.

Confirmation items before use

When using a smart toilet for the first time, be sure to check the following items

Insert the power plug into the socket

1. Insert the power plug into an AC 110V outlet.

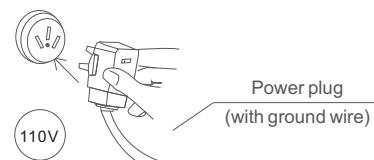


2. Please make sure the backlight of the side button is on.



3. Make sure the water inlet valve is open.

Leakage protection power plug

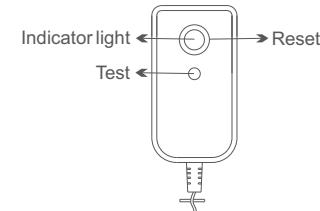

1. Please conduct a monthly spot check.
2. Press the "Test" button.
3. Make sure the indicator light is off.
4. Make sure the product has stopped working.
5. If there is no problem with the above, please press the "Reset" button and the product will restart.

Warnings

Be sure to securely connect the ground wire.

If the outlet does not have a grounding wire on it, consult with the electrical installation company.

The power plug of this product is a three-pole plug (with ground wire). When malfunction or leakage occurs, there is a risk of electric shock.

Each plumbing connection should be confirmed to be installed in place, otherwise it may easily cause leakage leading to indoor flooding and property damage.



List of Main Features

Cleaning Functions		Warm water is sprayed from the cleaning nozzle to thoroughly clean the buttocks.
Female Flushing		Designed for women's daily hygiene, it is carefully cleaned to prevent bacterial infections.
Mobile Flushing		The nozzle can be moved back and forth to enhance the cleaning effect when performing washing or female functions.
Hot/Cold Massage		Wash with alternating hot and cold water temperatures for a massaging effect.
Strength Massage		The intensity of the water pressure for cleaning alternates between strong and weak to achieve a massaging effect.
Child wash Function		The fully automatic cleaning function can be turned on at the touch of a button without the need for seating induction.
Position Adjustments		There is no need to move your body and the rinse position can be adjusted forward or backward depending on the size of the user.
Heated Seat		The seat is controlled by microcomputer to maintain a certain temperature, which makes it feel warm and cozy especially in the cold winter.
Warm-air Drying		Blows a warm breeze to speed up the drying of the buttocks after rinsing.
Falling Slowly		The seat and lid are fitted with a cushioning mechanism that allows it to land gently without making a "pop-pop" noise.
Smart Sensor		Automatically senses when a person sits on it and puts the machine in a usable state.
Smart Flushing		Performs automatic flushing when the body is seated for more than 10 seconds and leaves.
Nozzle self-cleaning		When the nozzle is extended or retracted, a small stream of water is automatically sprayed to self-clean the nozzle.
Battery Saving Mode		There is a power saving mode to choose from when not in use, thus saving electricity.
Pressure Regulation		When you press the water pressure adjustment button, you can cycle the cleaning strength setting.
Instant Heating		The water temperature for cleaning is instantly heated to the set temperature.
Blackout Flushing		You can flush normally when the power goes out.
Automatic Flip-top		When the human body is close to the toilet directly in front of about 30CM, the lid will be automatically flipped up (this function is only applicable to C type and D type products).
Water Outages		When the water stops during use, it will automatically switch off the cleaning action, avoiding the water temperature suddenly rises and burns the skin.
Foot Sensor Flush		The toilet automatically flushes once when the sensor button underneath the toilet is sensed with the foot (this function is only available for Model B products).
Foot Sensor Flip Lid		When sensing the sensor button underneath the toilet with your foot, the toilet seat will automatically flip up (this function is only applicable to C type and D type products).
Foam Shield		Produces foam with anti-splash function and aromatic deodorising effect (this function is only available for Model D products).

Model Function Configuration

Function Models																																																																																																																																																																																																																																																																																																												
B																																																																																																											<img alt="Function 107																																																																																																																																																																																																	

Notes on Use

Washing water volume and temperature

Cleaning water volume

As the heating is in instant mode, the water temperature will not decrease when cleaning for a long period of time and may fluctuate a little without affecting the use.

The spray temperature will be controlled according to the originally set stall temperature.

1 speed: room temperature without heating

2 speed: 34°C(93°F)

3 speed: 37°C(98°F)


4 speed: 40°C(104°F)

The length of heating time will vary depending on the temperature of the incoming water from outside.



Fitted with a seating sensor

Since a seat sensor is installed, the nozzle does not spray water when not seated, even if the switch is pressed by mistake, and the cleaning functions are not activated.

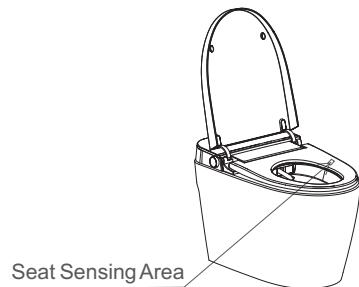

The sensor will not operate if any of the following conditions occur.

※ The human body is not sitting on the seat.

Notes on Use

Energy saving measures


The following measures are effective in saving energy

- After use, lower the seat cover.
- Do not blindly set the temperature of the seat and water to a high level.
- Adjust it so that it does not affect the comfort level.
- In spring, summer, autumn and winter, please adjust the temperature accordingly.
- Try to use devices with power saving function.
- Turn off the power when you are away from home for a long time.

※ When there is a possibility of freezing, take anti-freezing measures.

Water coming out around the nozzle


The appearance of water around the nozzle before and after cleaning or when the warm water switch setting is on is normal in construction and not a fault.

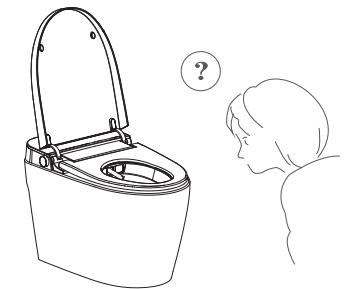

In addition to the above, if the water flow does not stop, close the water inlet valve, pull the power plug out of the socket and contact the purchased operator to solve the problem.

Slowly close the seat and cover


The Smart Toilet is fitted with a damping cushion, allowing you to avoid the clattering sound that occurs when you close the seat lid.

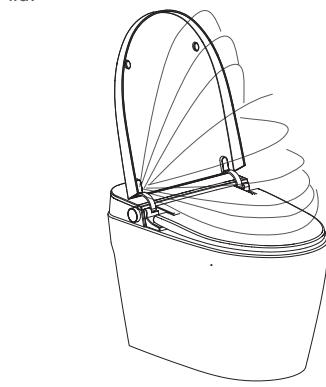


Precautions for use

Cleaning Myths

Do not wipe the product body with a dry cloth or toilet paper.

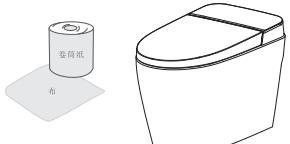


Direct rinsing with water is strictly prohibited.

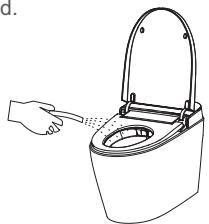


Daily Maintenance

Do not urinate on the body or nozzle.

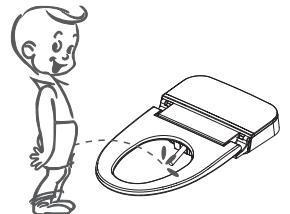

Pull out the power plug when there is thunder.

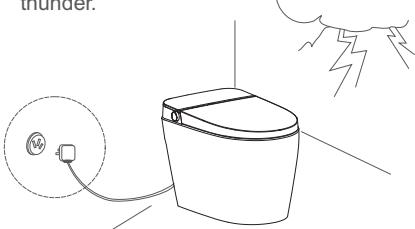

Incorrect operation / Cautions

It must not cover the seat sensor, human infrared sensor, and the sending and receiving signals of the remote control.

· May cause the Smart Toilet to malfunction.

Use of radios, etc., must be kept away from the product.

· The radio may be muffled.

Do not lean back on the seat cover

· May result in a broken shell.

When placing the child support seat, please put it away after use


· Sometimes some of the functions are not available.

Precautions for use

During winter nights when freezing may occur.


To prevent damage caused by freezing

Please take anti-freezing measures.

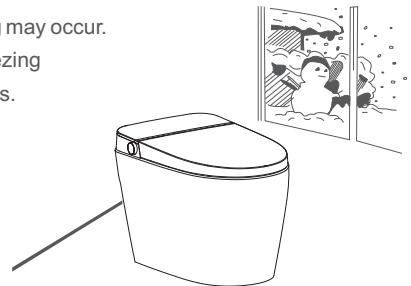


Do not place heaters or warmers etc. near the product.

· Discoloration or malfunction can occur.

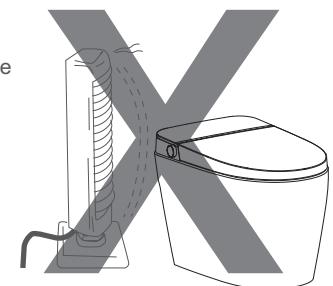

Please do not open the seat or cover roughly.


· Cracking or failure can occur..

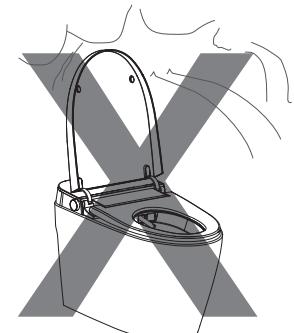

Confirmation items before use

Confirmation of functional contents

1. Whether the nozzle and its water pipe are leaking, dry all parts of the water pipe.
2. Check whether the hip cleaning, female cleaning and drying action is normal, and whether the damping or electric damping is normal.

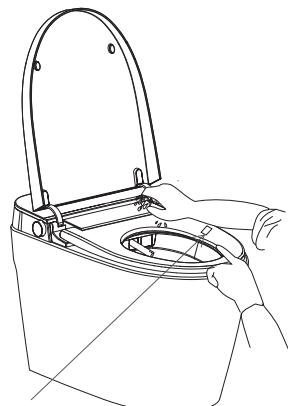

Seat Sensing Area

When checking the wash and dry functions, you should make sure that the seat sensing area is activated. When cleaning, cover the front of the nozzle with your hand and block the nozzle from dripping water to avoid splashing.

⚠ Caution

1. Cleaning and heating is instant mode, if you can't feed water normally, the main function of the machine can't work properly.
2. Make sure the water inlet angle valve is open and the water inlet braided hose is not bent after the machine is turned on.

⚠ Warnings

Do not use a power source other than 110V AC, and please follow the relevant regulations for wiring.





* Failure to comply with this article may cause a fire *

Remote Control Description

Remote Control Coding Procedure

1. Disconnect the power supply (leakage protector);
2. long press the remote control " Bidet " when the indicator light all flashing, and then the host power supply into the 110V AC power supply, until the remote control indicator light off pairing success.

Note: If you can't match the code, please re-install or replace the battery of the remote control with a new one, and then repeat the code matching operation.

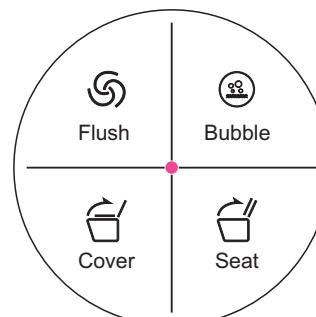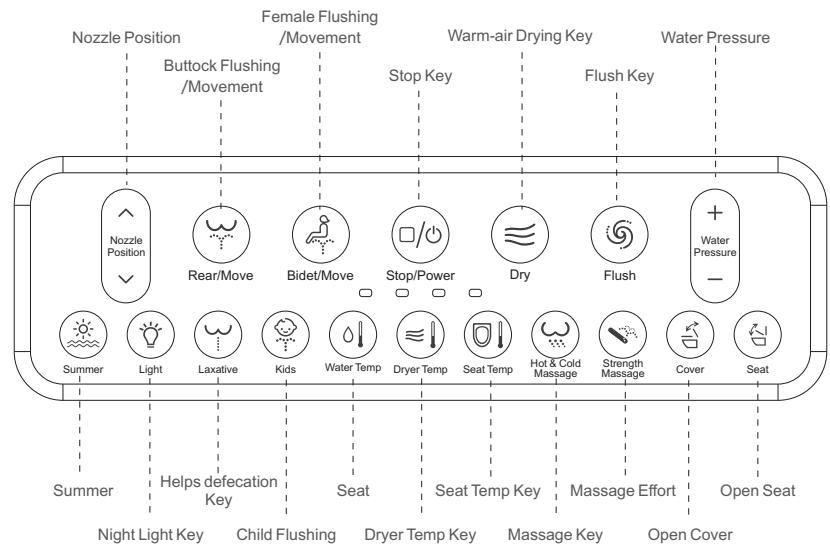

Wall Sticker Button Pairing Procedure

1. Host power off
2. The host restart power, within 10s long press the "Flush" button (more than 3s), when the panel lights begin to flash, the code is successful.

Remote control instructions

Power

Press the remote control power button " 

Seat temperature adjustment

Press the seat temperature key to adjust " 

Water temperature control

Press the water temperature key to adjust " 

Dryer Temp

Press the air temperature button to adjust " 

Rear

Wash function press hip wash button " 

Bidet

Wash function press the feminine wash button " 

Kids

Press the Kids function key " 

Massage

When the Rear, Bidet function is on, tap the massage button " 

When the Rear, Bidet function is on, long press massage button " 

Nozzle Position

When the Rear, Bidet, Kids function is on, press the Nozzle Position " 

Water Pressure Adjustment

When the Rear, Bidet function is on, press the Water Pressure " 

Flush function

Press the remote control flush setting key " 

Drying Functions

Press the drying button " 

Remote control instructions

Light

Press the Light button " 

Stop/Power

Single press on the stop/power button acts as a stop for the washing and drying functions being performed. Press and hold for 5 seconds to turn power off/on.

Seat cover/seat ring auto open

The human body close to the seat cover automatically open, stay 5s after leaving, 30s after the automatic closure of the seat cover; Men's urinal seat cover and seat are open, stay for more than 5s after kicking a drop down the cover fall circle and flush once, such as no operation, people leave 120s after the automatic closure of the seat and the seat cover and automatic flushing once; 5s within the kick, then a single drop seat circle does not flush (Automatic flip cover and flip ring only applies to C & D type machine, the same below).

Cover

When the seat cover is closed, press the Cover key " 

Seat

When the seat cover is open, press the Seat key " 

Kick Function

With automatic flip models (B/C/D), lightly touch the bottom of the front of the toilet body kicker, open the seat cover, and then kick to open the seat, long kick 1.5s, the seat at the same time to open the seat cover. a type does not have the function of automatic flip function, kick once to start flushing once.

Energy Saving Function

Energy-saving function on state, without any operation over 12 hours, the seat temperature is automatically adjusted to the lowest gear; 48 hours after the closure of the seat temperature (off the seat immediately into the energy-saving state). The light strip/knob/display turns off 1 minute after the body leaves the seat without remote control/knob/kick/microwave sensor operation.

Preventing low temperature burns

All products are set to prevent low-temperature scalding, the human body into the seat 10 minutes after the seat temperature automatically into the low gear, away from the seat to restore the previous set state.

WeChat small program controller function description

Smart Toilet	Function	Instruction	Mode
Disconnect	Device Disconnect Status Alert	Device Disconnect	interface not operable
Connected	Device Connection Status Alert	APP Connected operational	Interface operable
Connection Icon	Click on the icon to disconnect and connect the machine	Disconnected gray, connected blue	
Voice Icon	Click on the icon to disconnect and turn on voice	Disconnected gray, connected blue	Operable voice off
Cover	Click to open or close the lid	Closed ring and closed lid when the ring is open	
Seat	Click to open or close the seat	Open lid and open ring when closed	
Flush	Click to turn on the toilet flush	Performs flushing both on and off the seat	
Clean pressure Adjustment	Low, Medium, High, 3 levels	Butt wash or gynecological wash gear adjustment "+ -"	With memory function
Clean position Adjustment	1~5 distance positions	Butt wash or gynecological wash gear adjustment "+ -"	With memory function
Rear	Click for Hip Mobility Cleaning	Switchable between mobile and stationary wash	Sit down
Bidet	Click for Female Mobile Cleaning	Switchable between mobile and stationary wash	Sit down
Stop Flushing	Click to turn off the buttock or gynecological wash when cleaning	Automatic shut-off after cleaning	Grayed out when closed
Dry	Click on the on/off switch for the warm air drying function	Adjustable Dryer Temp 4-speed adjustable	Sit down
Massage	Massage function can be turned on during cleaning	Cleaning status switch massage active	Water pressure alternates
Light	Click to turn on/off the light function	Grayed out for off status	
Seat Temp	4-speed seat temperature adjustment	Room temperature, 34°C, 37°C, 40°C (Room temperature, 93°F, 98°F, 104°F)	
Water Temp	4-speed water temperature adjustment	Room temperature, 34°C, 37°C, 40°C (Room temperature, 93°F, 98°F, 104°F)	
Dryer Temp	4-speed dryer temperature adjustment	Room temperature, 34°C, 37°C, 40°C (Room temperature, 93°F, 98°F, 104°F)	

Note.

- If the phone turns off the Bluetooth connectivity or after the machine power off and restart, the microsoft applet remote control needs to be completely exited and then reconnected to the device in order to operate effectively.
- After use, it is recommended to disconnect the device by clicking the connect icon to facilitate the next direct connection to the device.
- When the WeChat applet is in the connected state, and you use it after leaving the machine 10m away, you need to completely exit the applet and then reconnect the device to use the applet normally.
- When using voice control machines, try not to use WeChat small program hybrid control.
- Mobile WeChat program small program has a successful connection, another cell phone device can not be connected, you need to exit the program in the cell phone has been connected to disconnect another cell phone before you can normally connect to the small program device.

Hidden Function Settings

Wetting Function:

Within 3s of shutting down the machine, press the remote control Rear, you can turn on and off the Wetting function, 2 sound off, 1 sound on.

Off-Seat Flush:

Within 3s of shutting down the machine, press the remote control Bidet, you can turn on and off the off-seat flushing function, 2 sound off, 1 sound on.

Close the lid and flush:

Within 3s of shutting down the machine, press the remote control Dry, you can turn on and off the close the lid and flush function, 2 sound off, 1 sound on.

Off/On Foot Sense:

Within 3s of shutting down the machine, press the remote control Kids, you can turn on and off the foot sense function, 2 sound off, 1 sound on.

Ambient Light On / Off:

Within 3s of shutting down the machine, press the remote control Light, you can turn on and off the ambient light function, 2 sound off, 1 sound on.

Microwave inductive switches:

Long press on the Cover, 2 sound off, 1 sound on.

Microwave distance adjustment:

Long press the Light to access the radar gear adjustment, then press the Water Pressure "+ -" to adjust the radar gear.

Seat/Cover Realignment of strength:

Long press Seat, press the remote control Cover to adjust the strength of the lid (1 level min, 24 level max), press the Seat to adjust the strength of the flap (1 level min, 10 level max).

Flush level adjustment:

Long press Flush, "+ -" to adjust the length of the flush, 1 speed min, 4 speed max.

On/Off Deodorizing Function:

Long press Laxative, di 2 beeps for off, di 1 beep for on.

Daily Cleaning & Maintenance




Warnings

When performing cleaning and maintenance, be sure to unplug the power switch and confirm that the power indicator on the operating part of the body is off.

Smart Toilet Cleaning and Maintenance

Please wipe with a soft cloth dampened with water


- If you do not remove the dirt in time, it will become difficult to clean, so please wipe it frequently with a damp soft cloth. In addition, wiping with a damp soft cloth prevents the generation of static electricity, which attracts dust and causes this product to become black and dirty.
- ✖ Also the body can be removed from the toilet seat to facilitate cleaning of the portion between the toilet seat and the body.

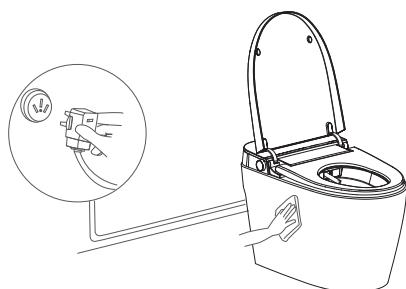

How to clean and maintain the nozzle

If there is dirt on the nozzle, clean it with a toothbrush or other small brush.

- ✖ Press the hip wash button on the side button in the off-seat position and the cleaning jets extend.
- ✖ Do not forcefully stretch and bend the nozzle.

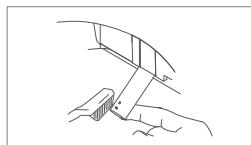

Warnings



Remove dust from the power plug regularly. Unplug the power plug during cleaning and wipe it with a dry cleaning cloth.


Compulsory

- ✖ Poor insulation may cause a fire.


Remove the cover and clean

How to remove the lid

1. Unplug the power plug from the outlet.

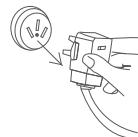


2. Close the water inlet valve and stop the water supply.

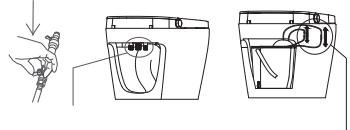


Unscrew the three hoses from the flush valve.

3. Lift the lid upwards and remove it from the toilet seat.

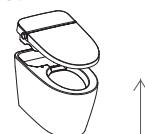

 4. Place the lid gently on the floor cushion.



Be careful not to break the nozzle and drying baffle.

1. Be sure to unplug the power plug from the outlet.

- ✖ Failure to unplug may result in an electric shock hazard.

2. Be sure to drain the water from the machine.

- ✖ Moving may cause water to enter the components.

3. Do not squeeze the power cord or the body supply pipe.

- ✖ It can break and cause or leakage of electricity or water.

Don't leave the potty lid upside down on the floor!



4. When removing the cover for cleaning, be sure to be careful and gentle.

- ✖ It can lead to leaks and malfunctions.

5. Never place the lid upside down without unplugging it from the power supply, and in addition, do not place it directly on the floor.

- ✖ It can lead to surface scratches or malfunctions.

6. Unscrew the hose on the flushing valve, you must mark the corresponding installation position of each hose, clean and install back when you can not install the wrong, and tighten the joints to avoid water leakage.

Left unused for a long time

In the following cases, be sure to drain the water.

- Not using the smart toilet for an extended period of time due to traveling.
(Contaminated water can cause clogging)
- In unoccupied dwellings, the temperature drops at an exceedingly rapid rate, making them susceptible to freezing and water leakage.

Caution

When removing the water supply hose, be sure to close the water inlet valve.

When installing the water supply hose, be sure to insert it to the end.

※ It can easily cause leaks leading to water pooling in the room.



Replacement of remote control battery


When the batteries are almost exhausted, the remote control indicator light fades or goes out and the signal is not transmitted.

※ The supplied batteries are mainly used to check the operating conditions at the time of installation, so their service life may be short.

Replace the battery according to the following instructions.

Caution

- The positive and negative terminals of the batteries must match the markings on the remote control.
- New and used batteries should not be mixed.
- Use alkaline batteries.

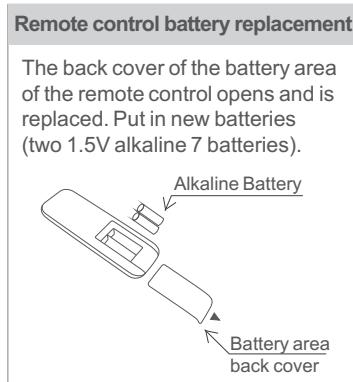

Danger of freezing in winter

During the cold winter months, the Smart Toilet can be damaged and leak due to freezing of water in the toilet seat. To prevent freezing, do the following.

General measures against freezing	
<p>1. Please plug into a power outlet to turn on the power.</p> <p>2. Switch the water and seat temperature switches to "High" and close the seat cover.</p> <p>3. Switch on the heating in the room. If the room is not heated, drain the water from the water supply hose as follows.</p> <ol style="list-style-type: none">Close the water inlet valve and stop the water supply.Use the remote control to set the cleaning water temperature at room temperature, and use your hand to sense the seat sensor to open the buttock cleaning function until the nozzle is no longer sprayed with water.	<p>If freezing occurs and water cannot be sprayed out</p> <p>In the event that the water supply hose or the water supply connection freezes and water does not come out, cover the water supply hose or the water supply connection with a cloth soaked in hot water to thaw it out, or raise the room temperature and allow it to thaw out naturally.</p> <p>Caution Do not pour hot water or blow hot air on the water supply hose.</p> <p>※ May cause breakage of the body water supply pipe.</p>

Caution

When removing the water supply hose, be sure to close the water inlet valve.

When installing the water supply hose, be sure to insert it to the end.

※ It can easily cause leaks leading to water pooling in the room.



Fault judgement

If a malfunction is thought to have occurred, it can be eliminated by simple operation.

Malfunctions	Cause	Methods of elimination
Unable to wash and dry	Not falling within sensor range	Adjust the seating position
Inability to wash the buttocks and women	Whether the water is off	Open the angle valve, or wait for the water supply to be restored
Cannot be closed	The machine is seated	Please operate the cover in the off-seat position
Remote control does not turn on functions	Low battery of remote control	Replace the remote control batteries.

If you still cannot troubleshoot the problem by the above confirmation, please contact the distributor from whom you purchased the product or the company's after-sales service.

Fault judgement

If you think there is a malfunction, some of the malfunctions can be solved by simple operation, please check the following items before entrusting the repair.

Malfunctions	Cause	Methods of elimination
No water coming out of nozzle	Power outlets not powered up	Adjust the sitting position.
	Power switch is [OFF]	Press the power switch, the indicator light of the power plug lights up to turn on the power.
	Power plug not inserted in socket	Plug in the power supply.
	A leakage of electricity occurs	Please unplug the unit and have it repaired.
	Water inlet valve is closed.	Open the water inlet valve.
	Impurities on the screen of the flush valve	Wash the filter.
	Twisting and blocking of the connecting inlet pipe	Sorting out water pipes.
	Cleaning nozzle blocked	Cleaning wash nozzles.
	Excessively low water pressure	Increase the strength of the water potential or activate the air pump to increase the pressure.
Wash water temperature is not warm	Freezing of water supply hoses	Please use a cloth soaked in warm water to cover the water supply hose and water supply connection area to warm it up. Or raise the room temperature and leave it to thaw naturally.
	Water not set at proper temperature	Press the water temperature button to adjust to the adapted temperature.
	Inlet water temperature too low	Clean it for a while and then observe.
The seat is not warm	Seat temperature not set at proper temperature	Press the seat temperature button to adjust to the adapted temperature.

If you still cannot troubleshoot the problem by the above confirmation, please contact the distributor from whom you purchased the product or the company's after-sales service.