














CROSLEY

FURNITURE


Bookcase
CF1412

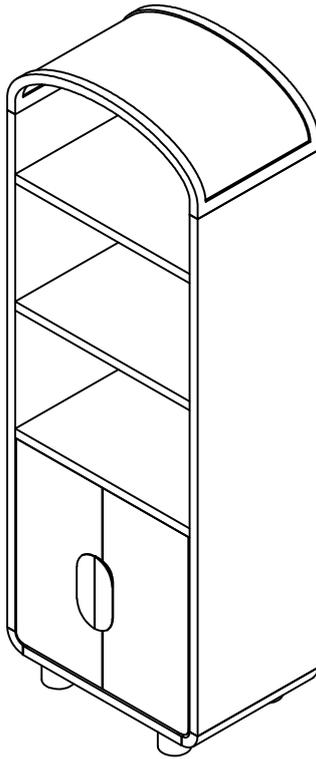

PARTS LIST
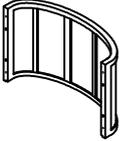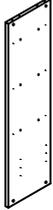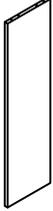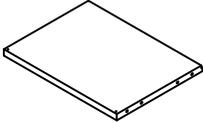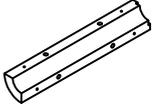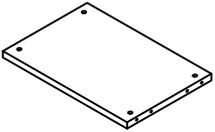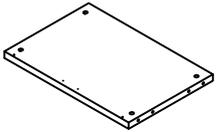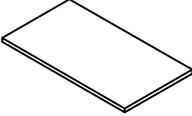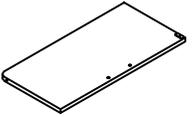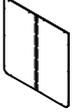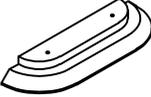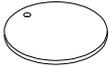
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Corner 2 PCS</p>
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 
<p>Upper Fixed Shelf 2 PCS</p>	<p>Lower Fixed Shelf 1 PC</p>	<p>Adjustable Shelf 1 PC</p>	<p>Left Door 1 PC</p>	<p>Right Door 1 PC</p>
<p>K</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Upper Back Panel 1 PC</p>	<p>Lower Back Panel 1 PC</p>	<p>Handle 2 PCS</p>	<p>Leg 4 PCS</p>	<p>Cover 1 PC</p>

HARDWARE LIST
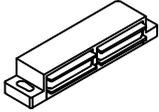
#1 	#2 	#3  10*50mm	#4  1/4"*12mm	#5 
Cam Bolt 24 PCS (Extra 1)	Cam Lock 24 PCS (Extra 1)	Wood Dowel 24 PCS (Extra 1)	Bolt 4 PCS (Extra 1)	Double Magnet 1 PC
#6  7*3*15mm	#7  5/32*20mm	#8 	#9 	#10  8*3*15mm
Round Head Screw 2 PCS (Extra 1)	Round Head Bolt 4 PCS (Extra 1)	Shelf Holder 4 PCS (Extra 1)	Metal Plate 2 PCS	Screw 36 PCS (Extra 1)
#11 	#12 	#13  M2	#14  M4	#15 
Binding Post 1 PC (Extra 1)	Cam Sticker 24 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #1) into pre-drilled holes of panels (parts A, B & C) and corners (part E) using phillips head screwdriver.


Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

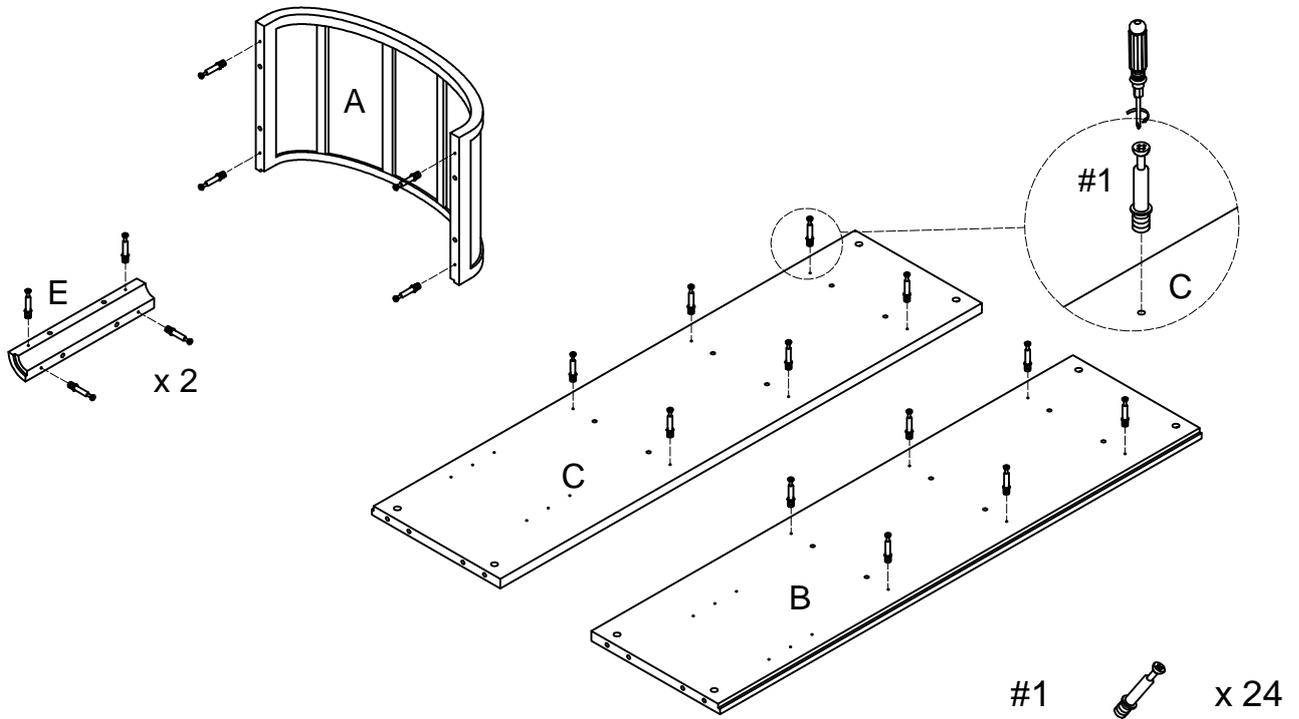

Step 2. Attach handles (part # M) to doors (parts I & J) using round head bolts (part #7) and phillips head screwdriver.

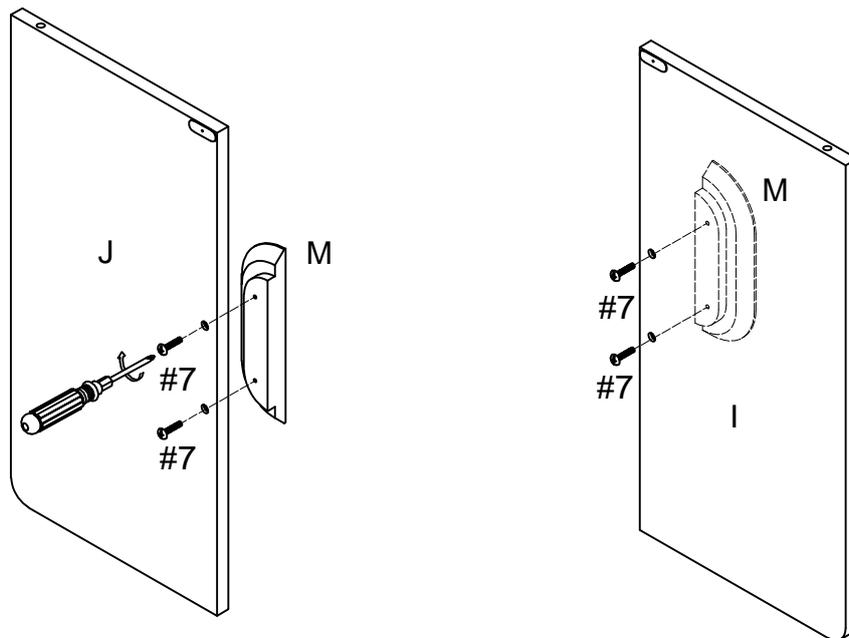


Step 3. Attach corners (part E) to bottom panel (part D) using cam locks (part #2), wood dowels (part #3) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

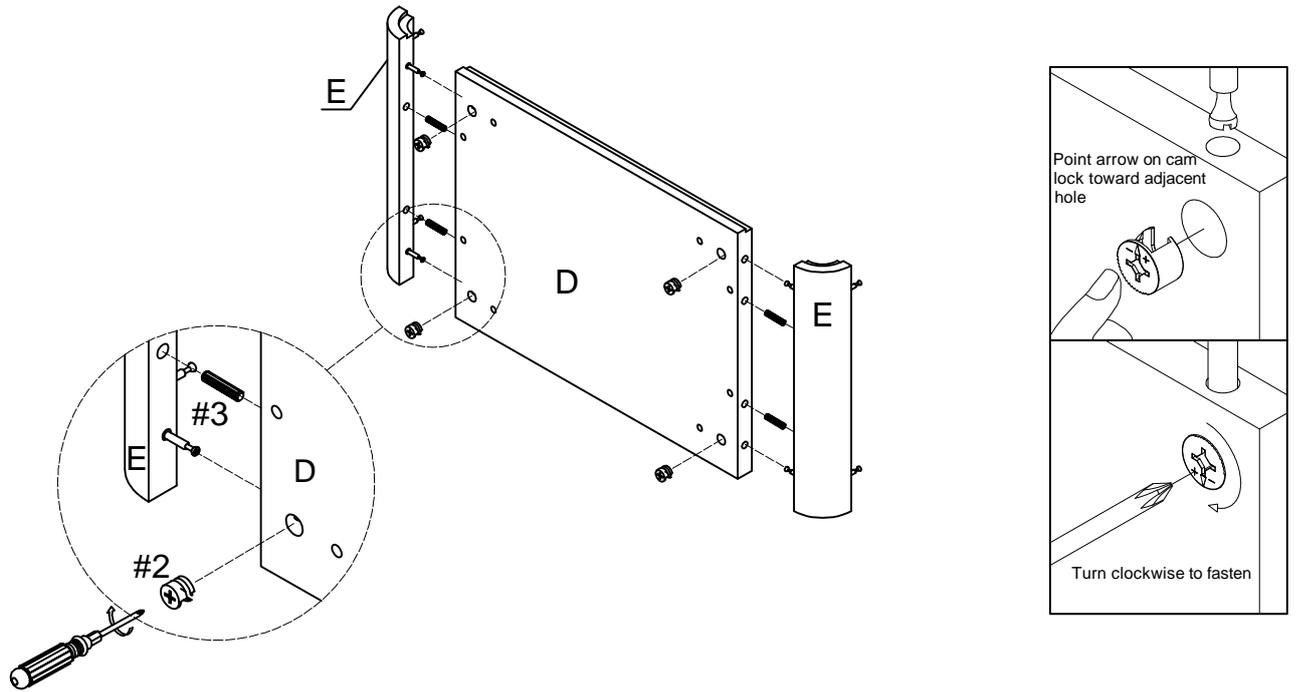


- #2  x 4
- #3  x 4

Step 4. Attach double magnet (part #5) to lower fixed shelf (part G) using round head screws (part #6) and phillips head screwdriver.

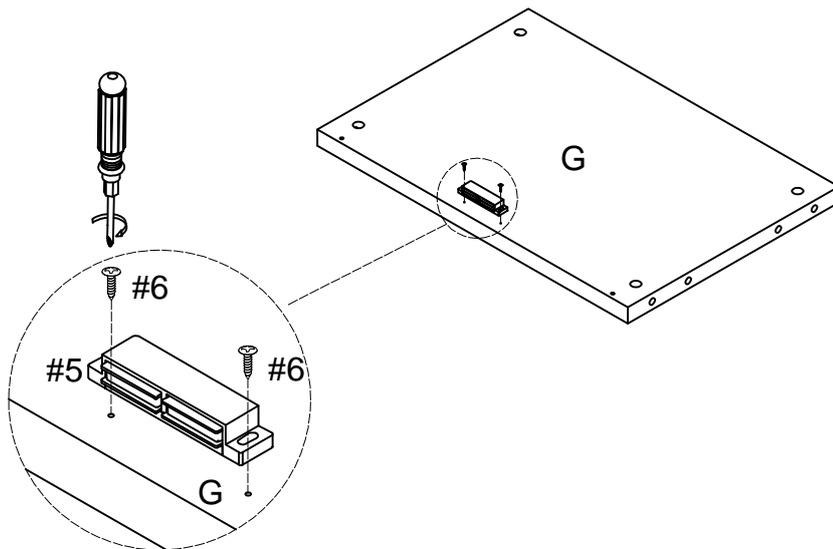

- #5  x 1
- #6  x 2



Step 5. Attach cover (part O) to lower back panel (part L) using binding post (part #11) and small allen wrench (part #13).

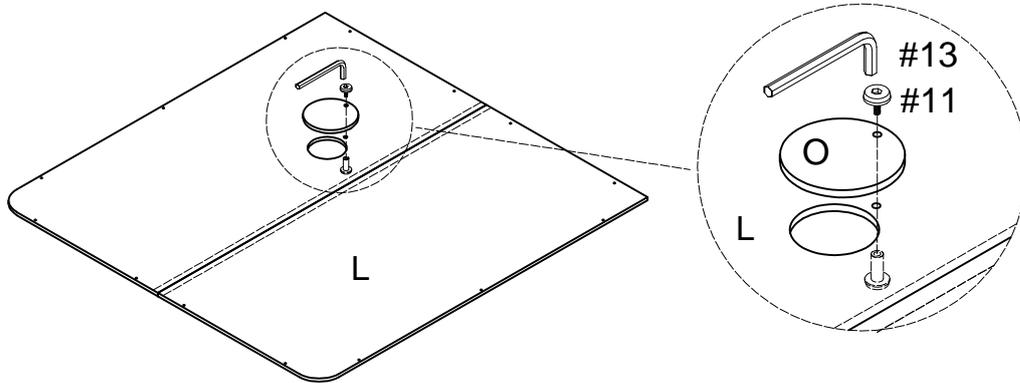

- | | | |
|-----|---|-----|
| #11 |  | x 1 |
| #13 |  | x 1 |

Step 6. Attach panels (parts B & C) to shelves (parts F & G) using cam locks (part #2), wood dowels (part #3) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.

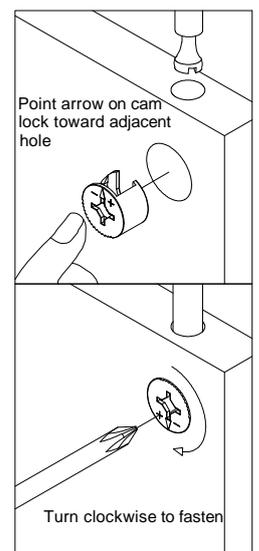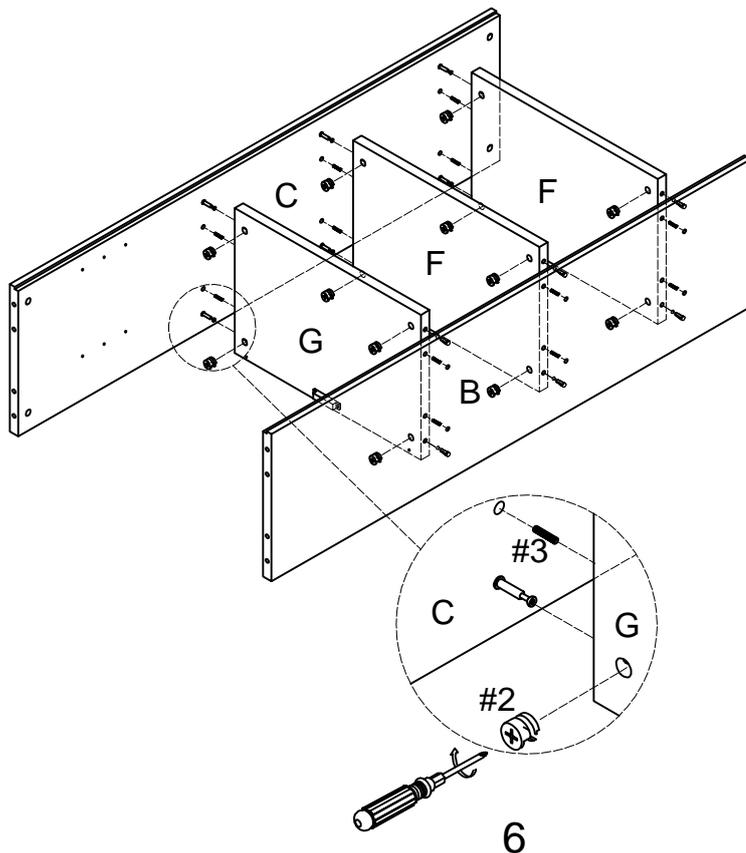

- | | | |
|----|---|------|
| #2 |  | x 12 |
| #3 |  | x 12 |

Step 7. Attach top panel (part A) to assembled unit (parts B & C) using cam locks (part #2), wood dowels (part #3) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.

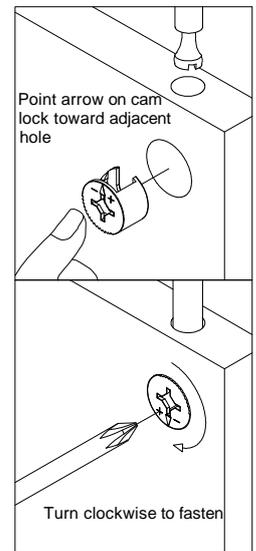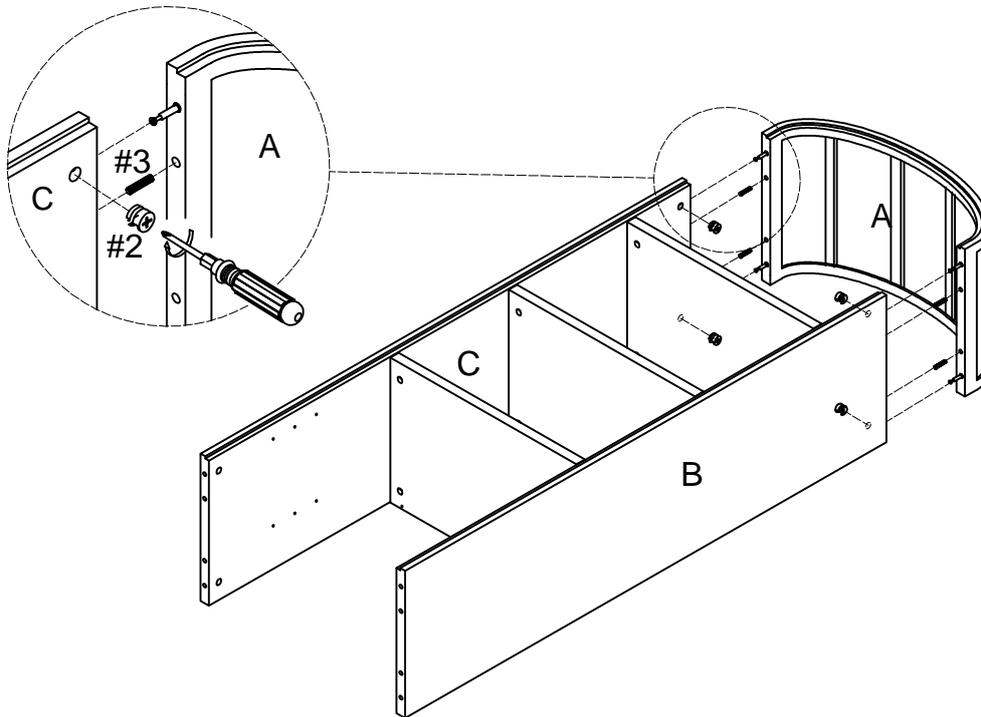

- #2  x 4
- #3  x 4


Step 8. Attach assembled unit (parts D & E) to assembled unit (parts B & C) using cam locks (part #2), wood dowels (part #3) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

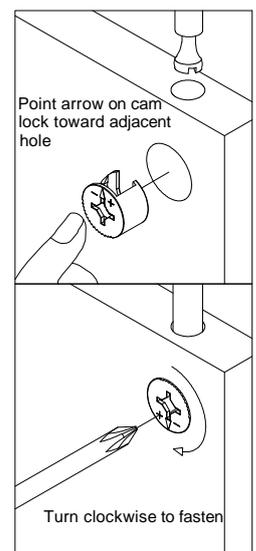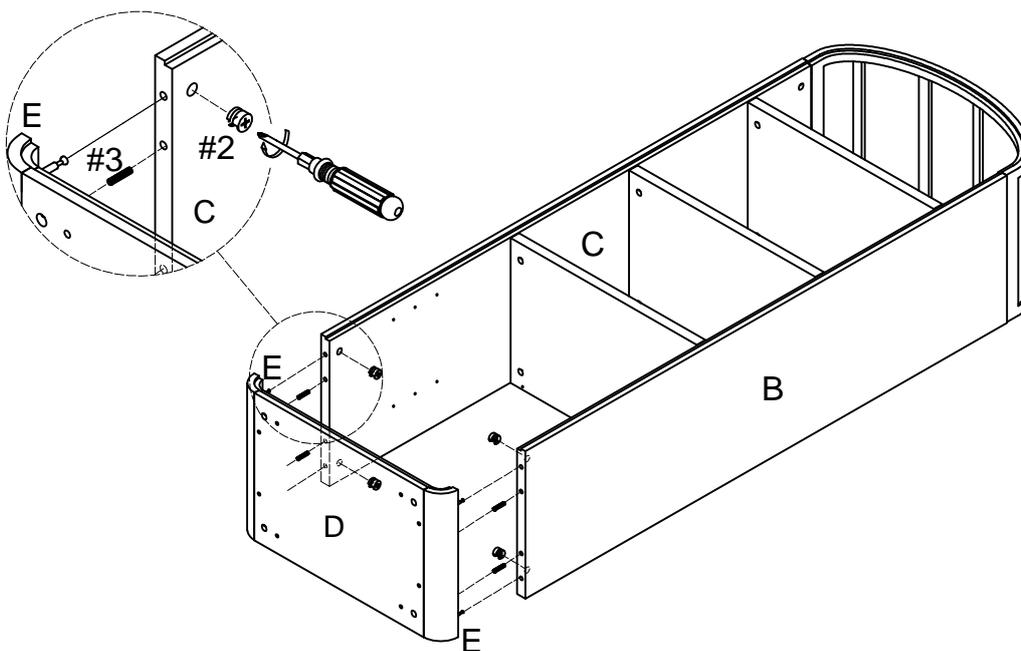


- #2  x 4
- #3  x 4

Step 9. Attach metal plates (part #9) to bottom panel (part D) using bolts (part #4) and allen wrench (part #14).

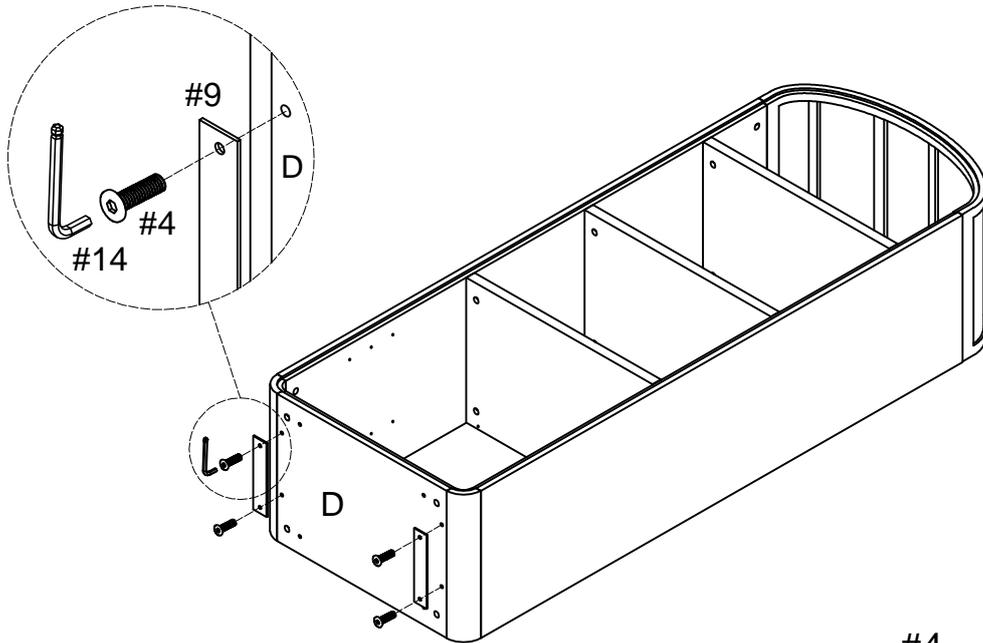


- | | | |
|-----|---|-----|
| #4 |  | x 4 |
| #9 |  | x 2 |
| #14 |  | x 1 |

Step 10. Attach legs (part N) to bottom panel (part D).

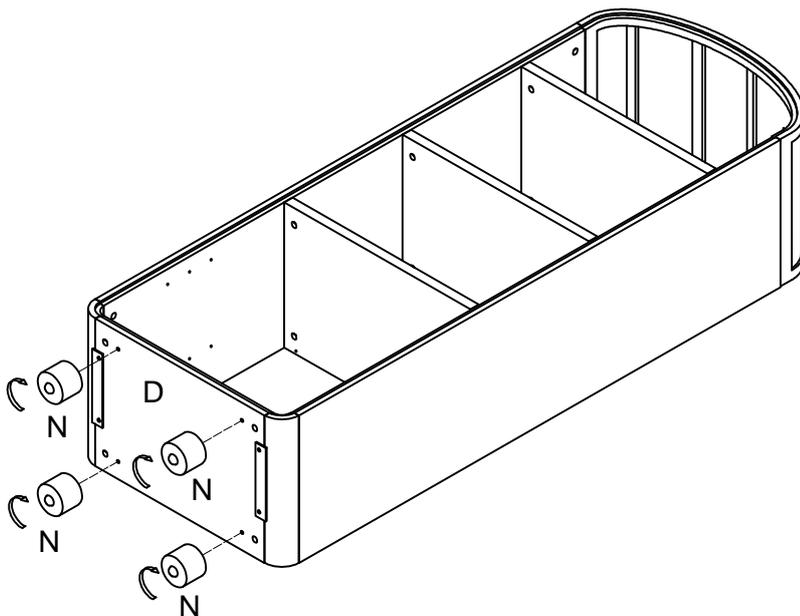


Step 11. Attach back panels (parts K & L) to assembled unit (parts A, B, C, D, F & G) using screws (part #10) and phillips head screwdriver.

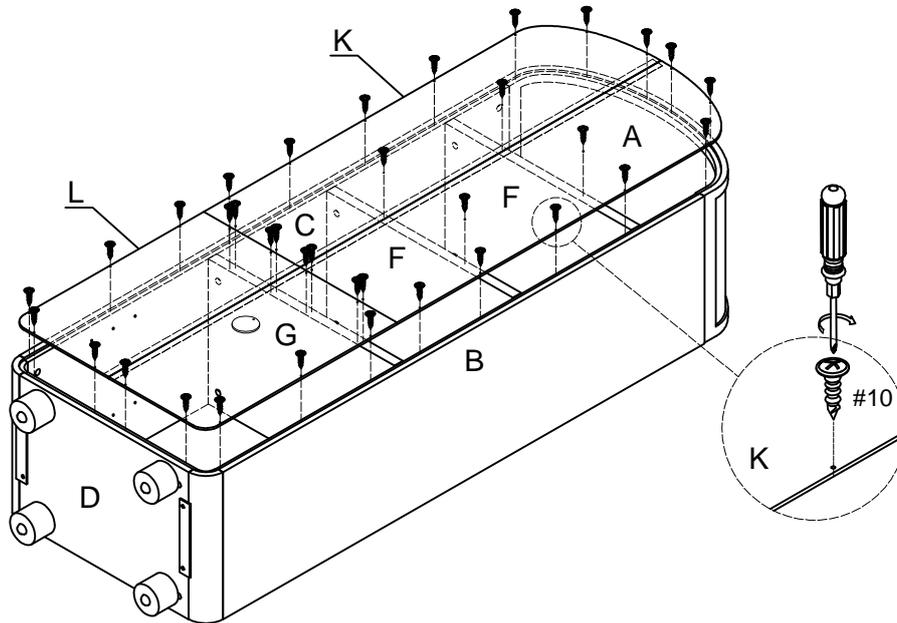

#10  x 36

Step 12. Carefully turn unit upright. Place shelf holders (part #8) into desired position and then slide adjustable shelf (part H) into place.

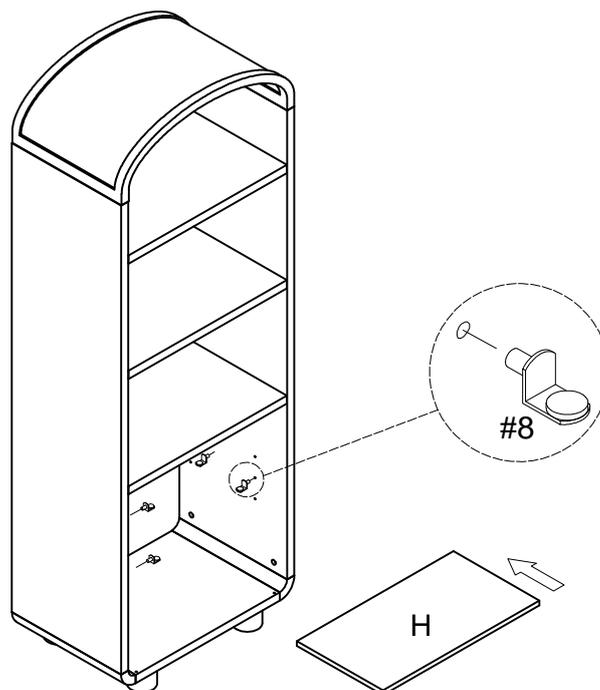

9


#8  x 4

Step 13. Attach doors (parts I & J) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of lower fixed shelf (part G).


NOTE: Be sure pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #15) must be installed to prevent tipping damage and/or injury.

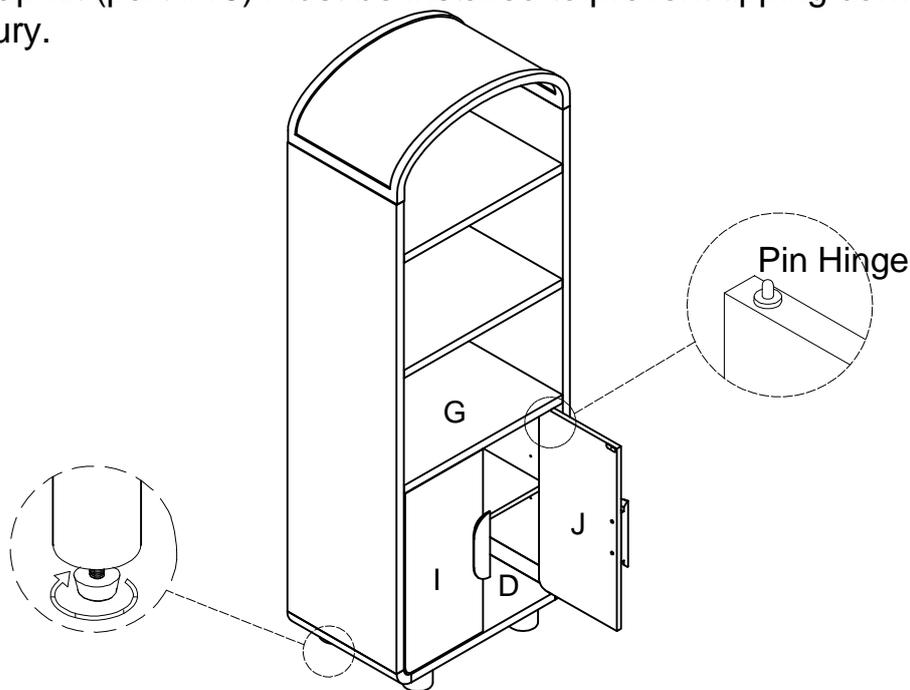

Step 14. Using cam stickers (part #12) cover all cam locks (part #2).

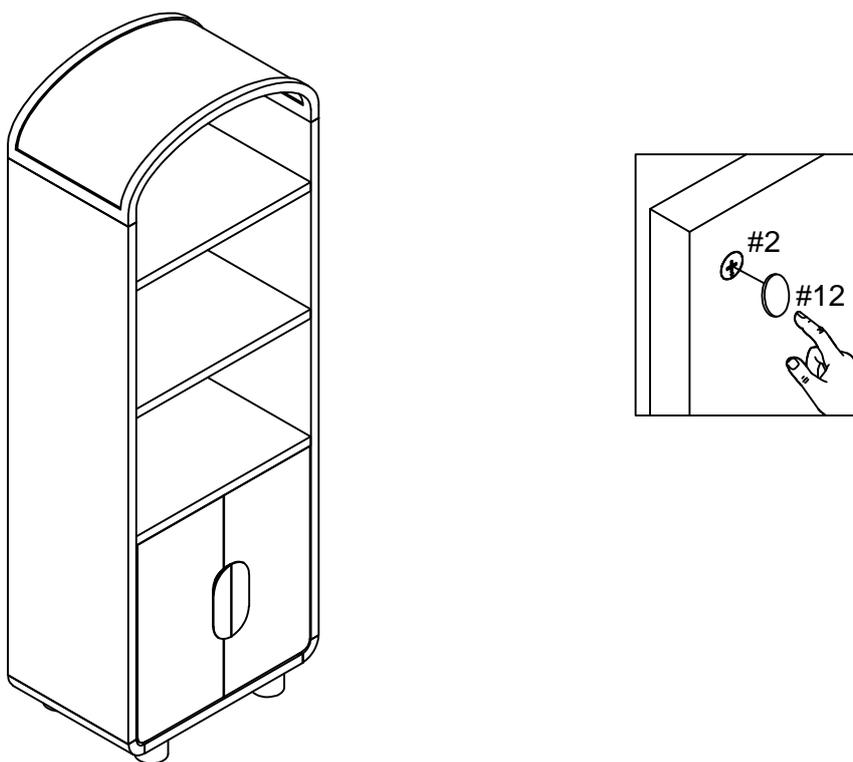

10

#12 0 x 24


#15	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

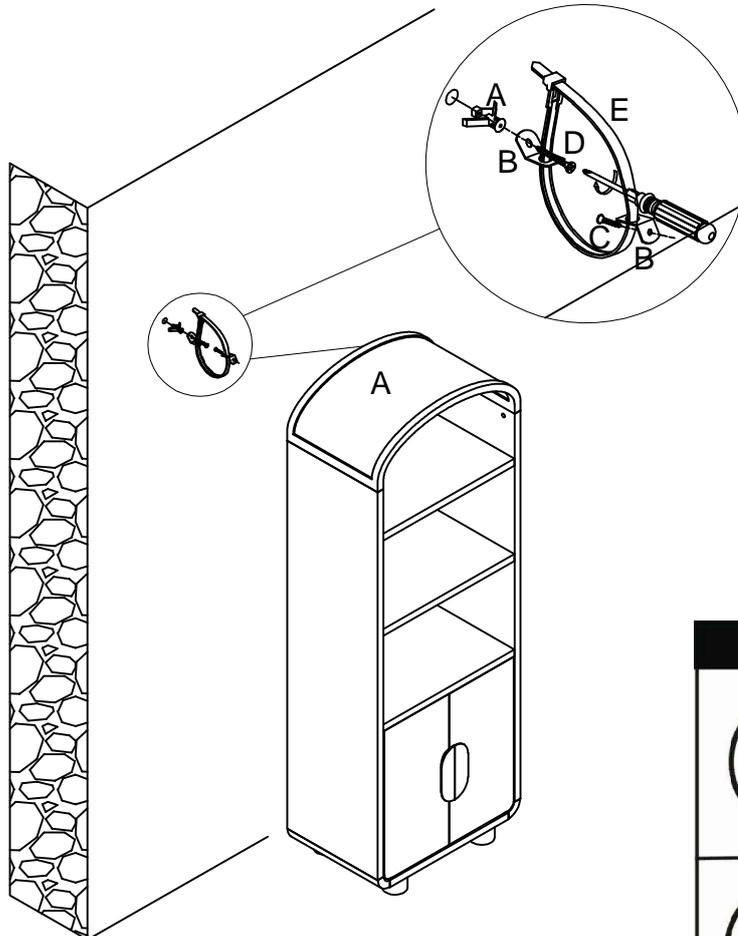

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!