


WALKER EDISON
TM

Cabinet Bookcase

SKU# WESAS41OS4

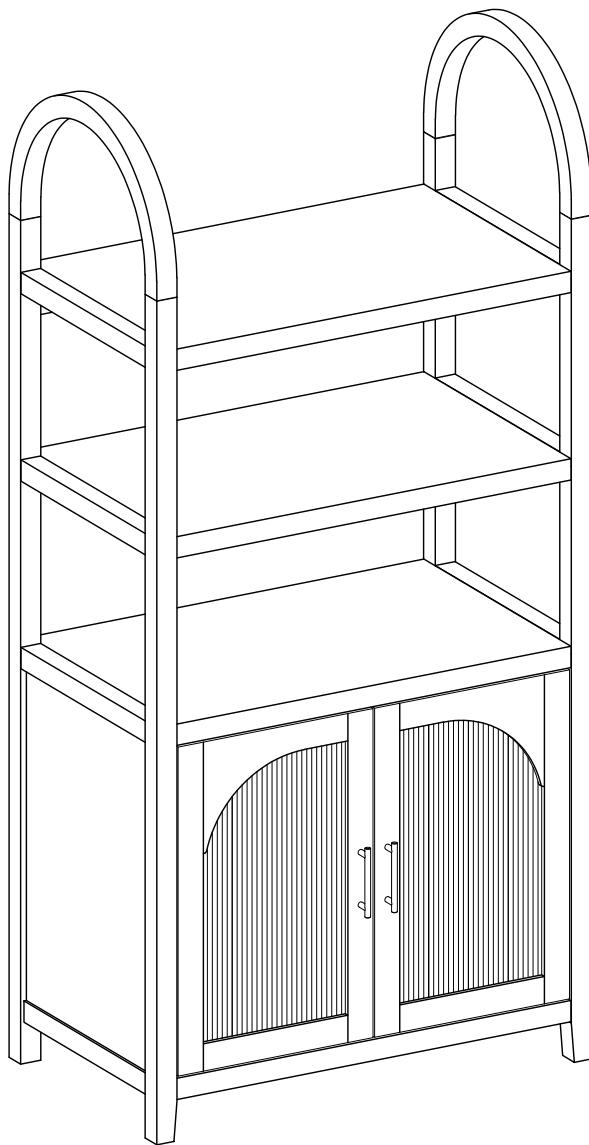


For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

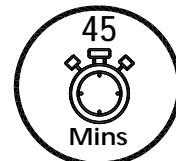

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

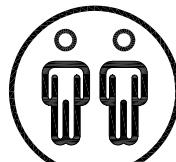

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

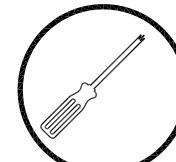


Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

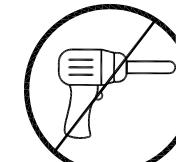

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

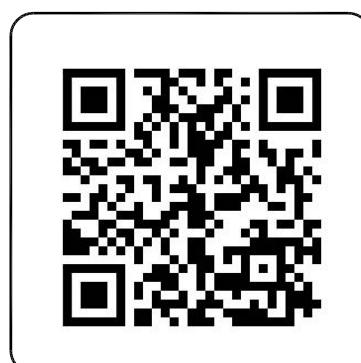




Scan to get assembly tips and help!

WE Parts List



Part Number	Description	Quantity
1	Top Panel	1
2	Bottom frame	1
3	Upper Fixed Divider	1
4	Lower Fixed Divider	1
5	Left Panel	1
6	Right Panel	1
7	Adjustable Shelf	1
8	Top Rail	1
9	Left Door	1
10	Right Door	1
11	Back Panel	1

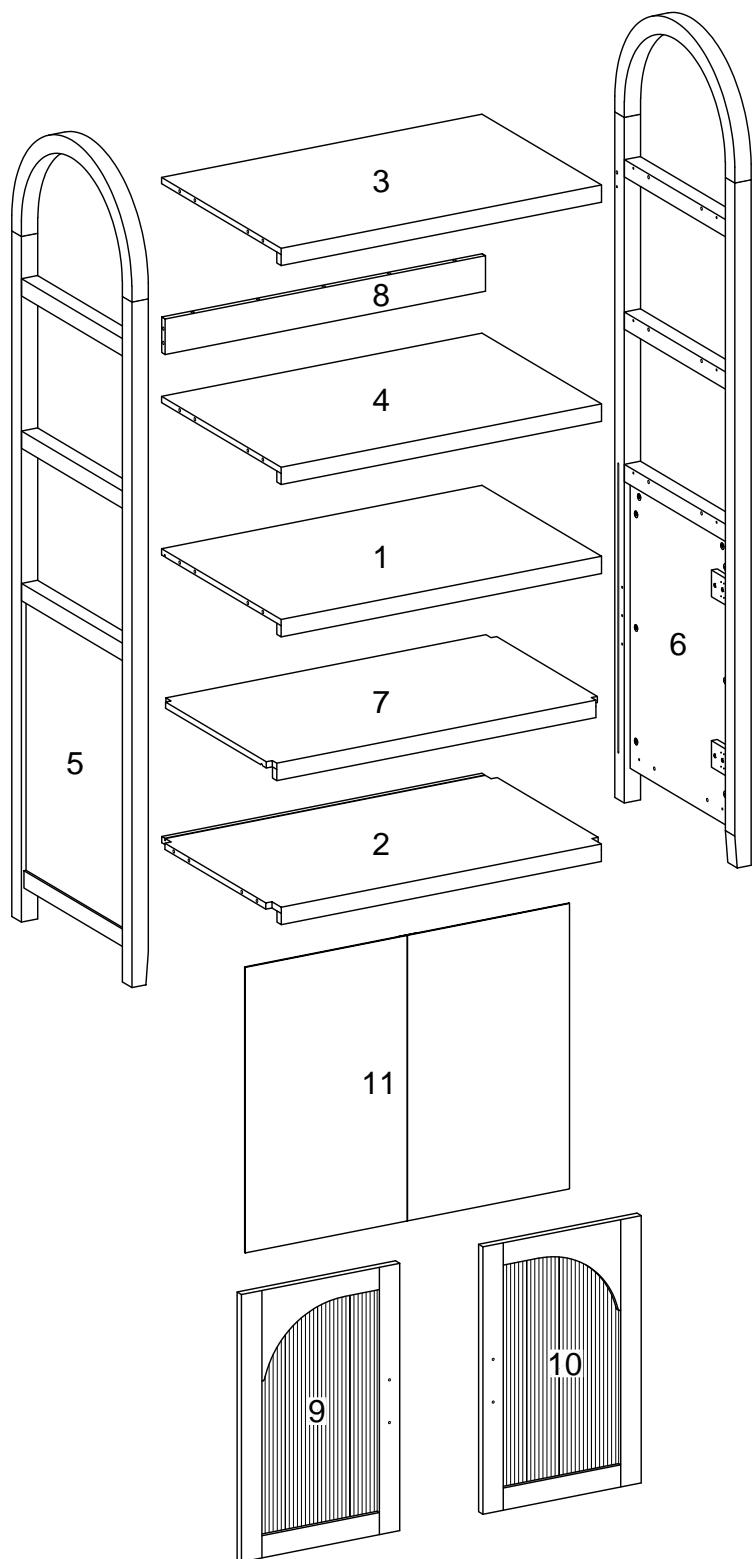

WE Hardware List

   Part	Size	Name	Quantity
A 	8x30mm	Wooden dowel	20
B 	6x35mm	Cam Bolt	21
C 	15x11mm	Cam Lock	21
D 	30mm	Sticker	37
E 	40*14.5*7mm	Door Stopper	1
F 	3.5*15mm	Screw	2
G 	16*16.5*10.5mm	Plastic Wedge	10
H 	3x17mm	Screw	10
J 	5x16mm	Shelf Support Pin	4
K 	35mm	Hinge	4
L 	3.5x14mm	Screw	24
M 	10xL127xH30mm	Handle	2
N 	5/32"x21mm	Bolt	4

  
WE Hardware List

Part	Size	Name	Quantity
P	 4x25mm	Screw	2
Q	 4x12mm	Screw	2
R	 25x150mm	Plastic strap	2
S	 8x30mm	Wall Anchor	2
T	 10g	Glue Tube	1

The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.


Step 1

Let's get started! Using a Phillips head screwdriver, screw the cam bolts (B) into the Right Panel (6) and the Left Panel (5).

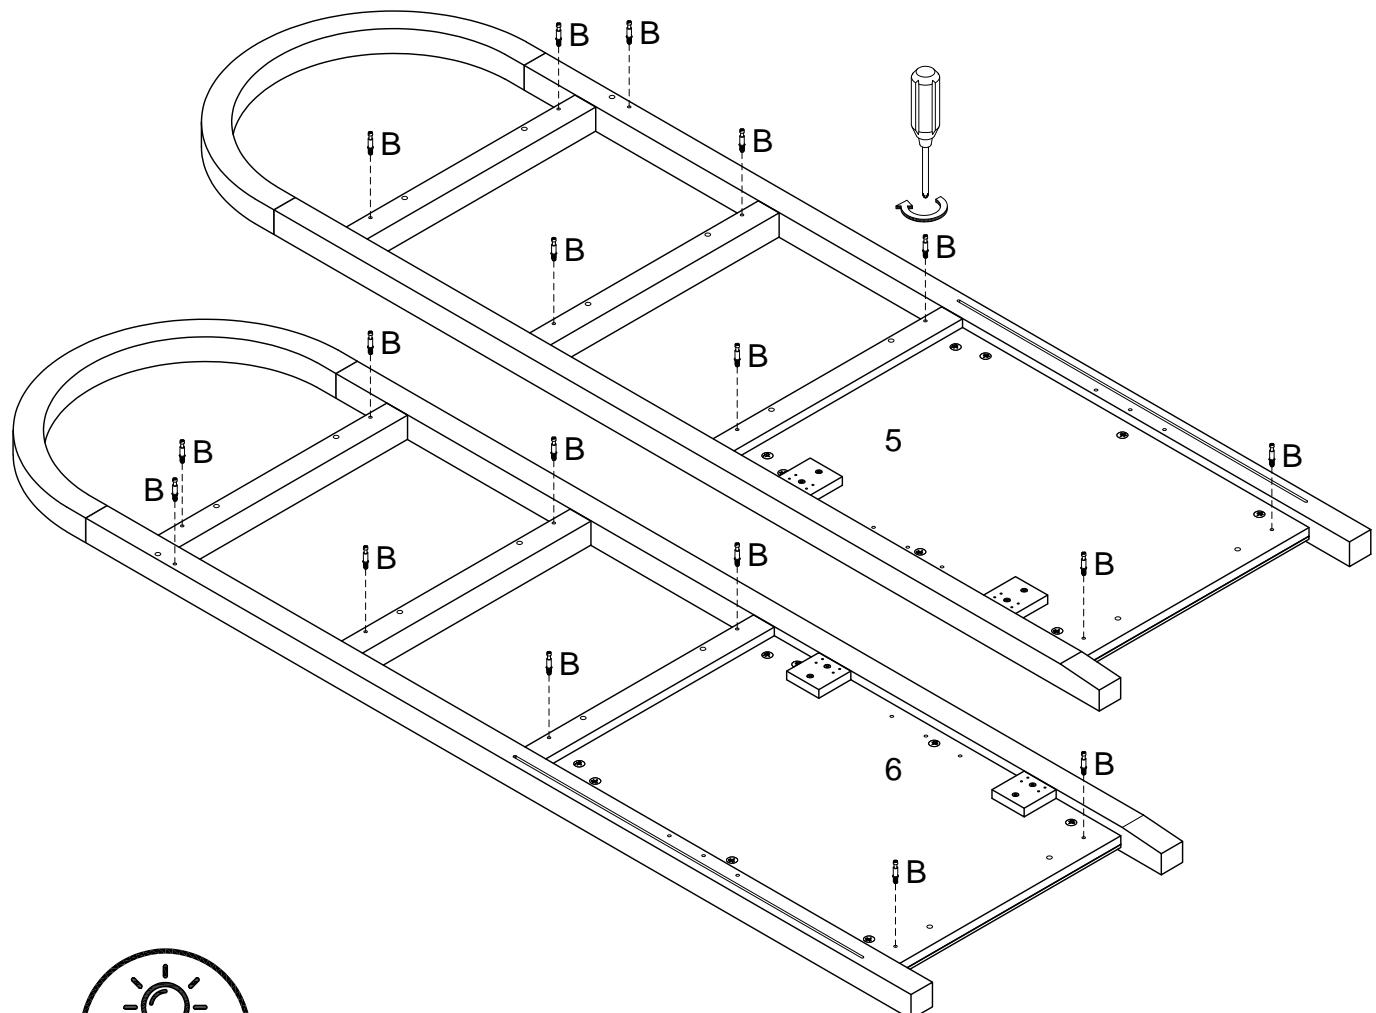




Tip

To keep your product looking its best and scratch-free, try assembling it on a soft surface like carpet or a blanket. This helps prevent any accidental scratches and keeps your furniture in top shape!

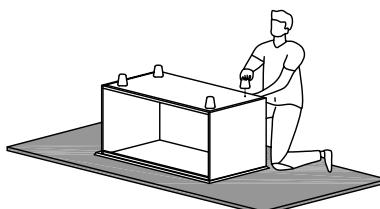

Step 2


Next, insert wooden dowels (A) into the Top Rail (8), Lower Fixed Divider (4), and the Upper Fixed Divider (3). Then, screw cam bolts (B) into the Upper Fixed Divider (3).

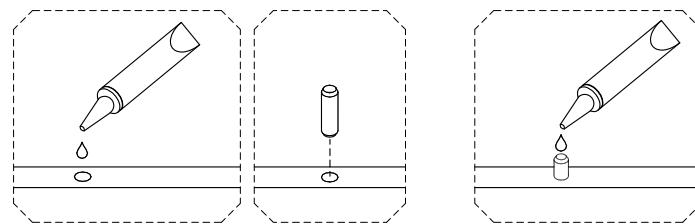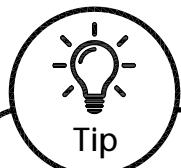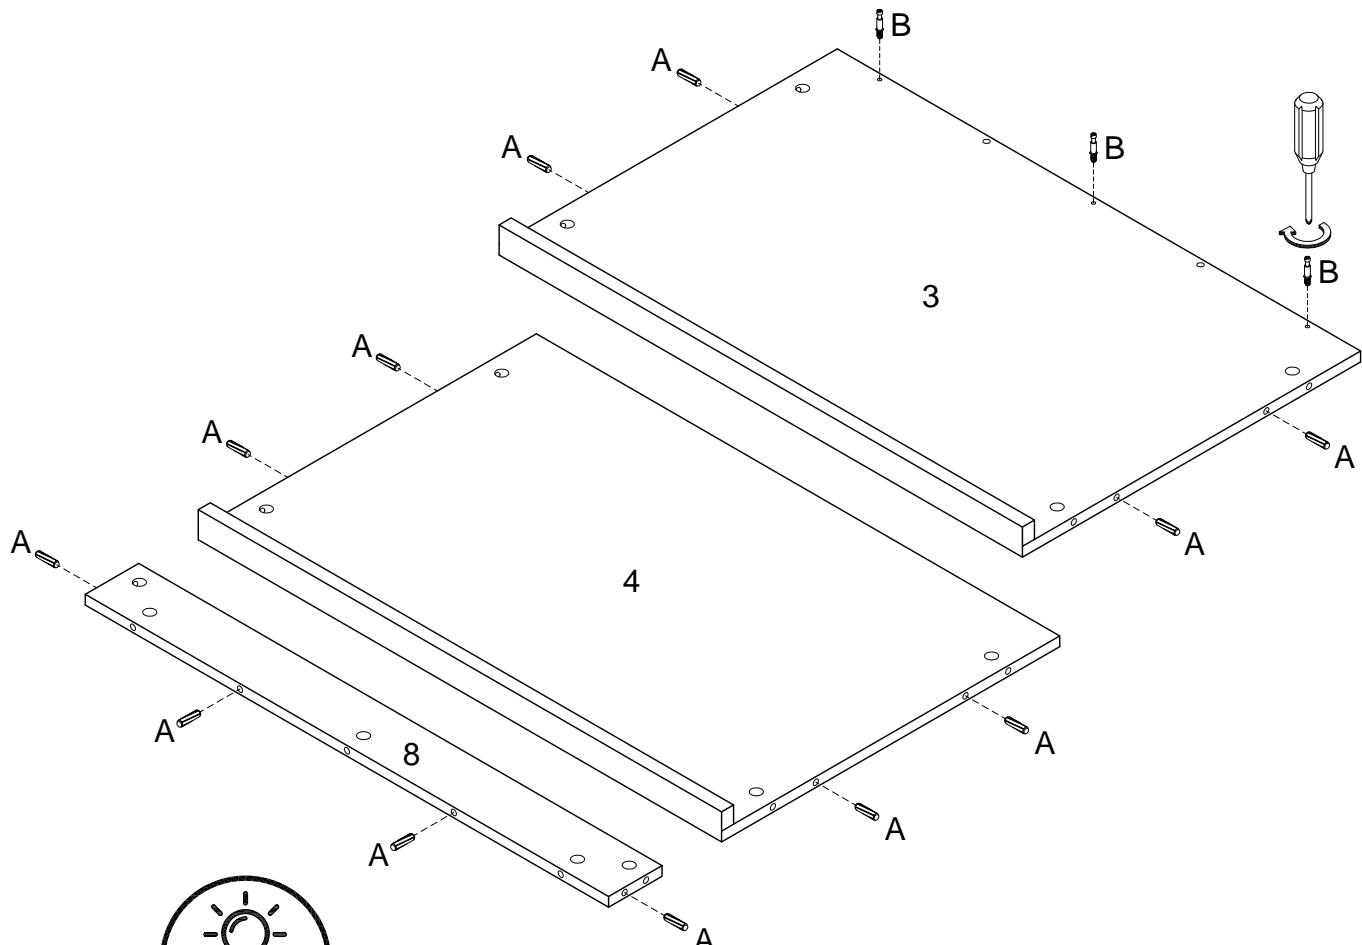

- 1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.
- 2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.



Step 3

Insert wooden dowels (A) into the Top Cabinet Panel (1) and the Bottom Frame (2). Then, using the (F) screws, attach the door stopper (E) to the Top Cabinet Panel (1).

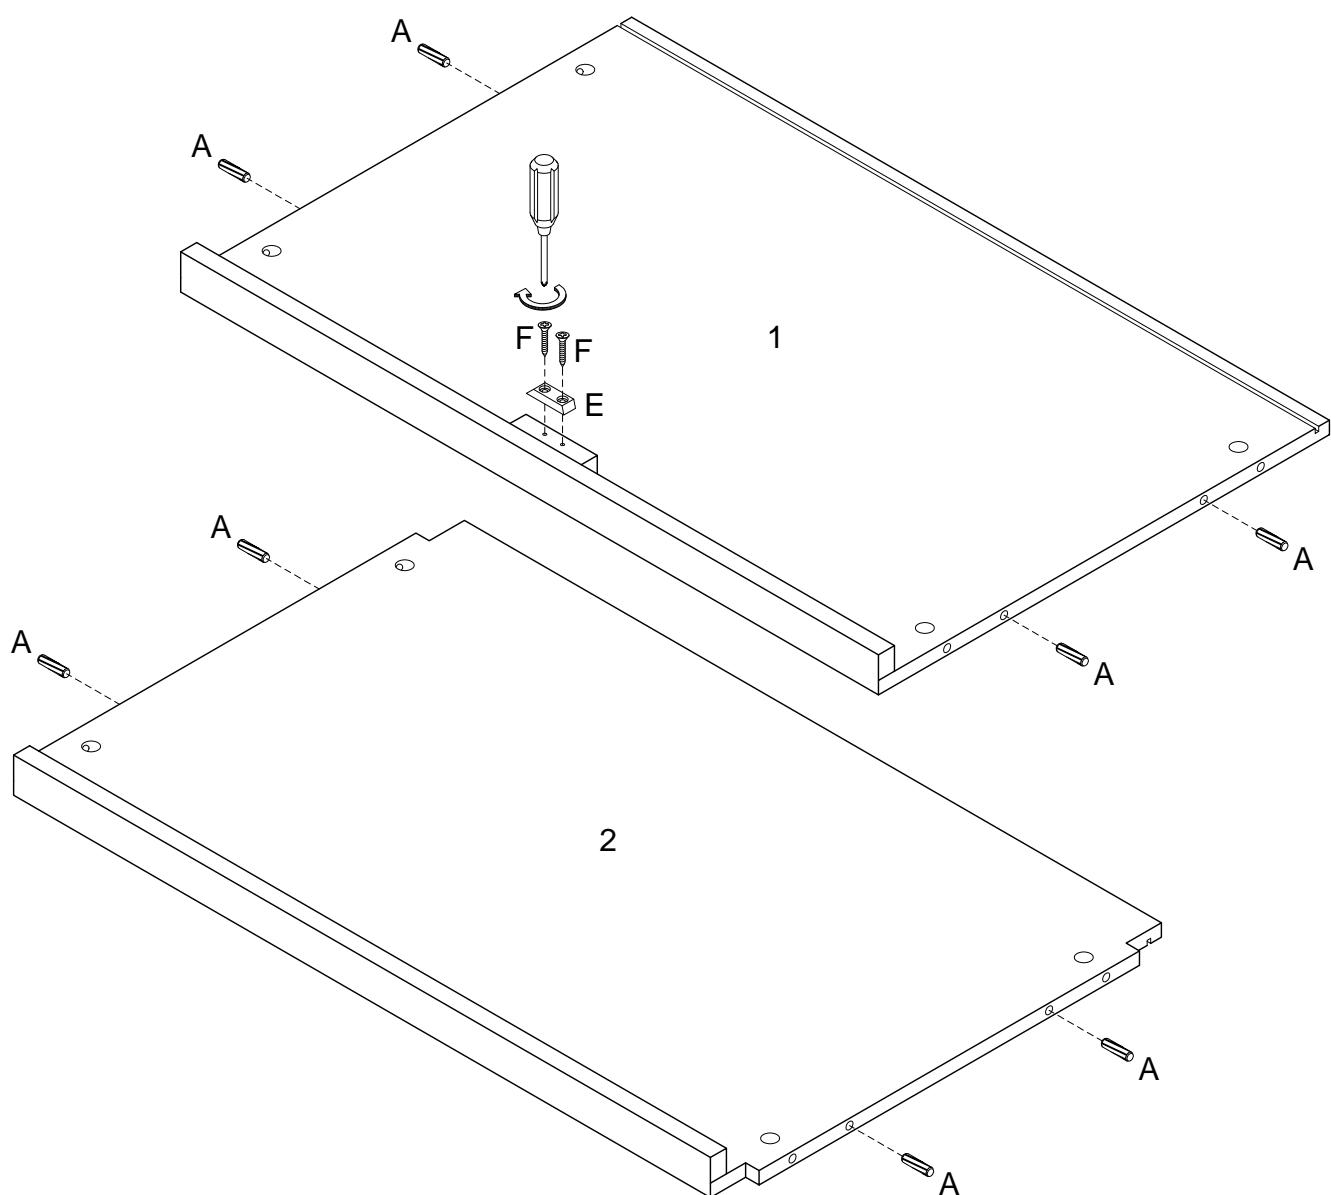


Step 4


Attach the Top Rail (8) to the Upper Fixed Divider (3) via the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver.

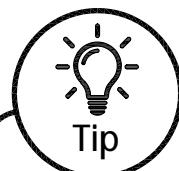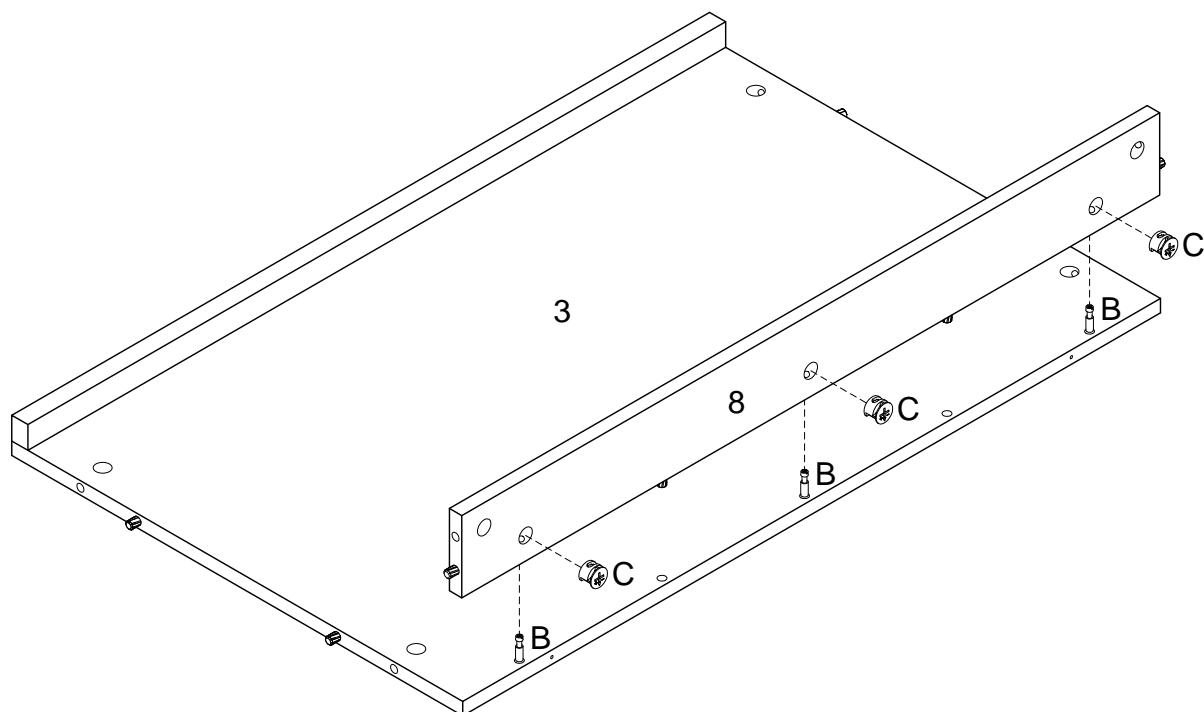


Cam Locks
Cam Locks help securely join two pieces together.
Follow these easy steps.

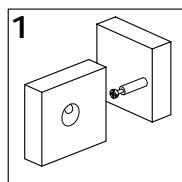

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

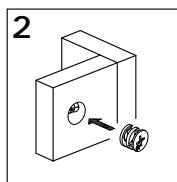


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

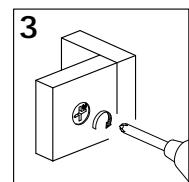

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 5

Now, attach the Upper Fixed Divider (3), Lower Fixed Divider (4), Top Cabinet Panel (1), and Bottom Frame (2) to the Left Panel (5) via the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver.

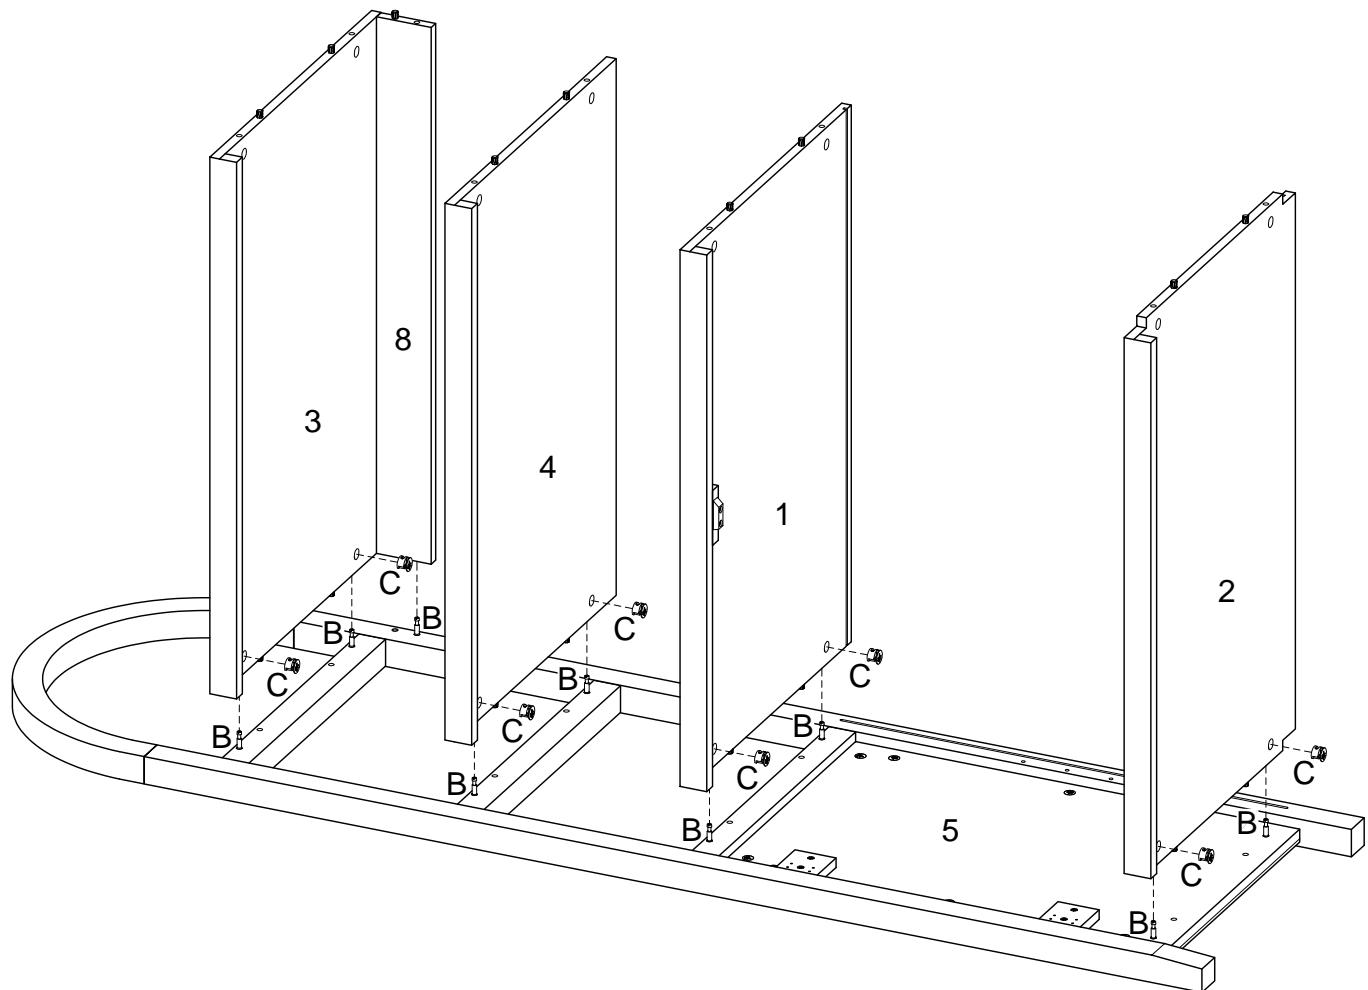


Step 6

Unfold the Back Panel (11) and slide it between the Top Cabinet Panel (1) and the Bottom Frame (2) using the grooves as a guide.

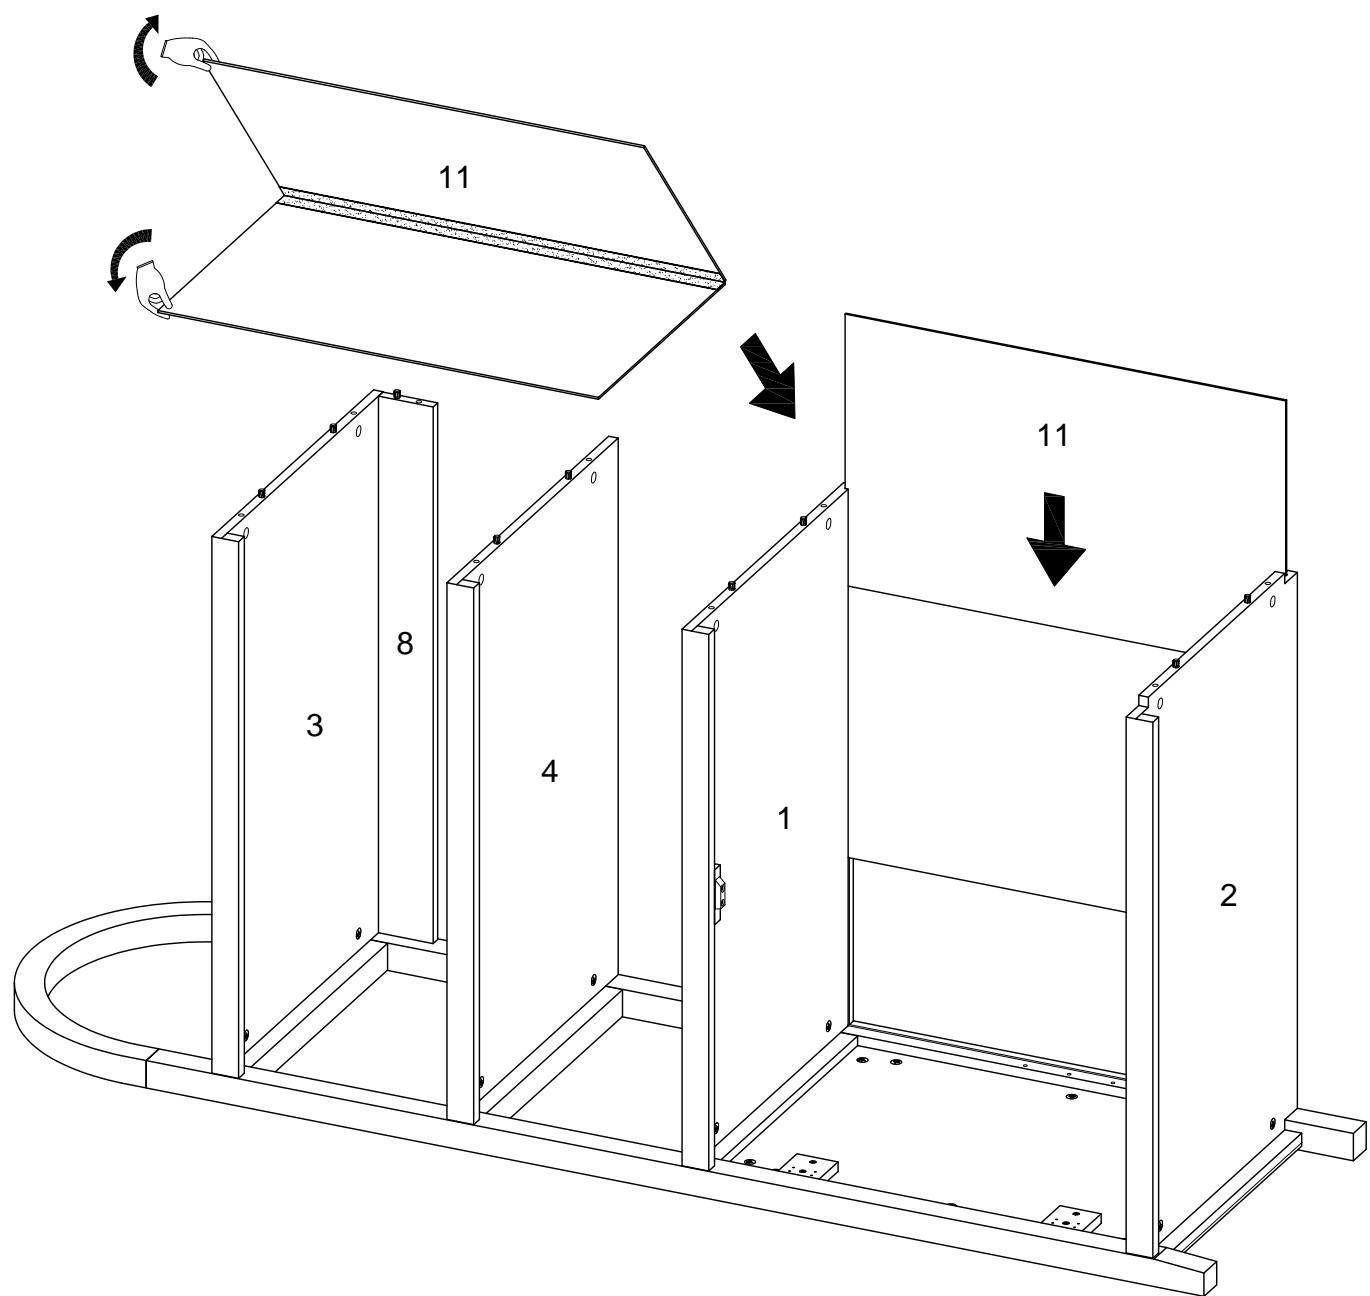


Step 7

Connect the Right Panel (6) to the Upper Fixed Divider (3), Lower Fixed Divider (4), Top Panel (1), and Bottom Frame (2) via the cam bolts. Insert cam locks (C) and tighten with a screwdriver.

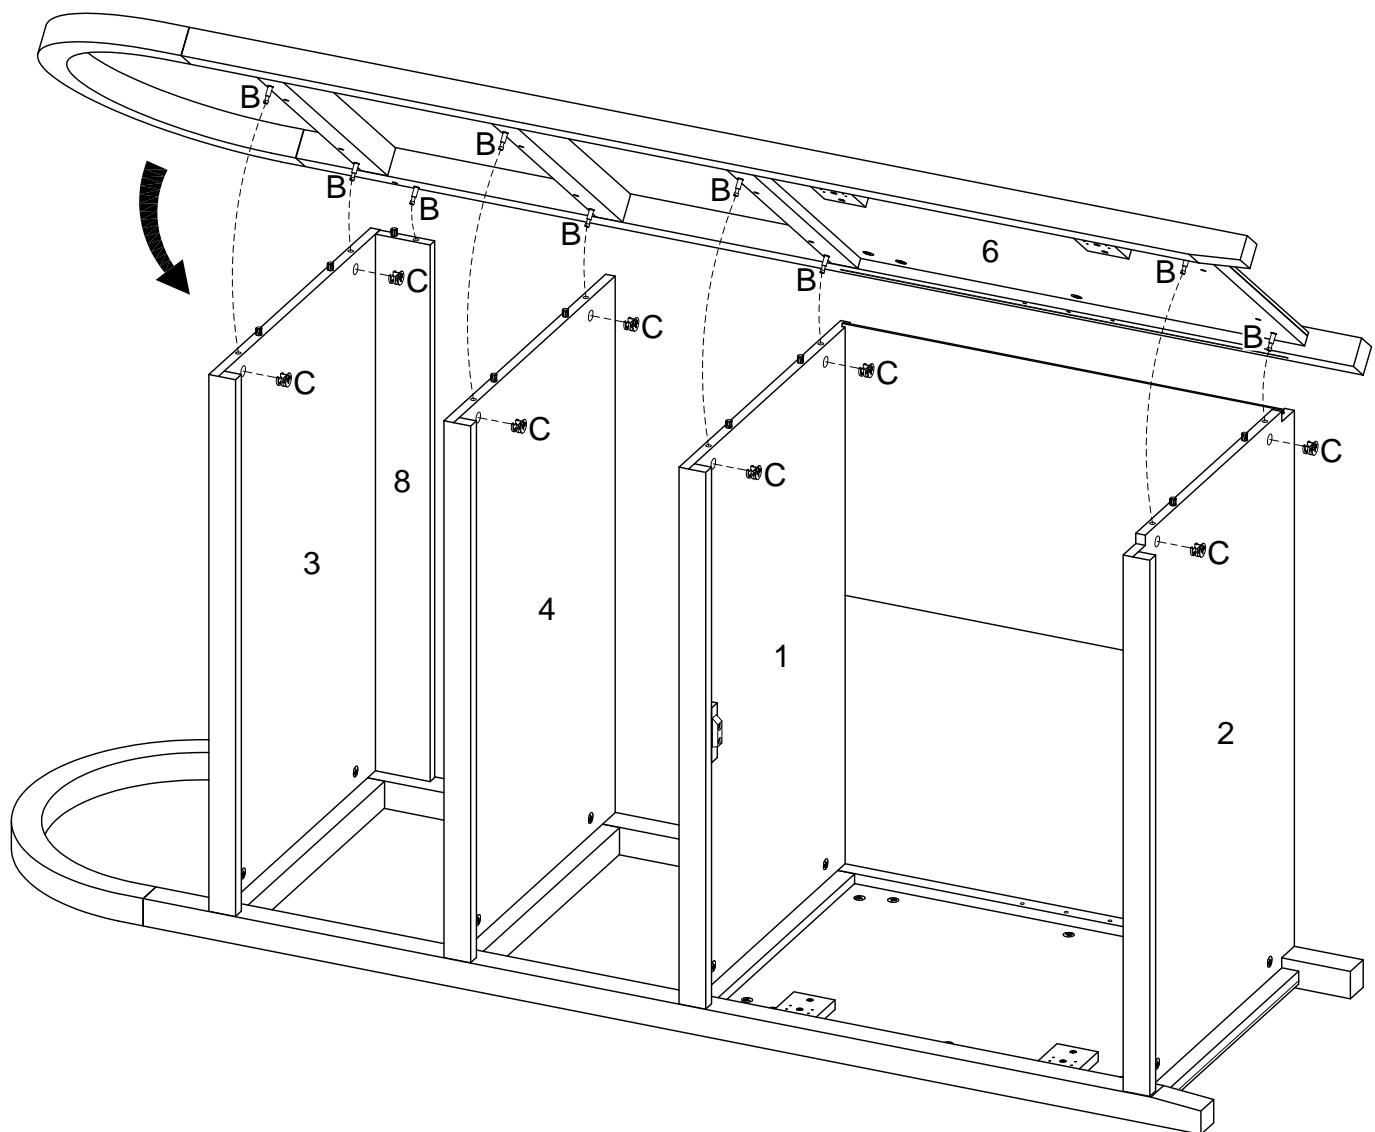


Step 8

Insert plastic wedges (G) between the Back Panel (11) and the frame of the piece. Secure with (H) screws. Then, insert cam bolts (C) into the holes in the Top Rail (8) and tighten with a screwdriver.

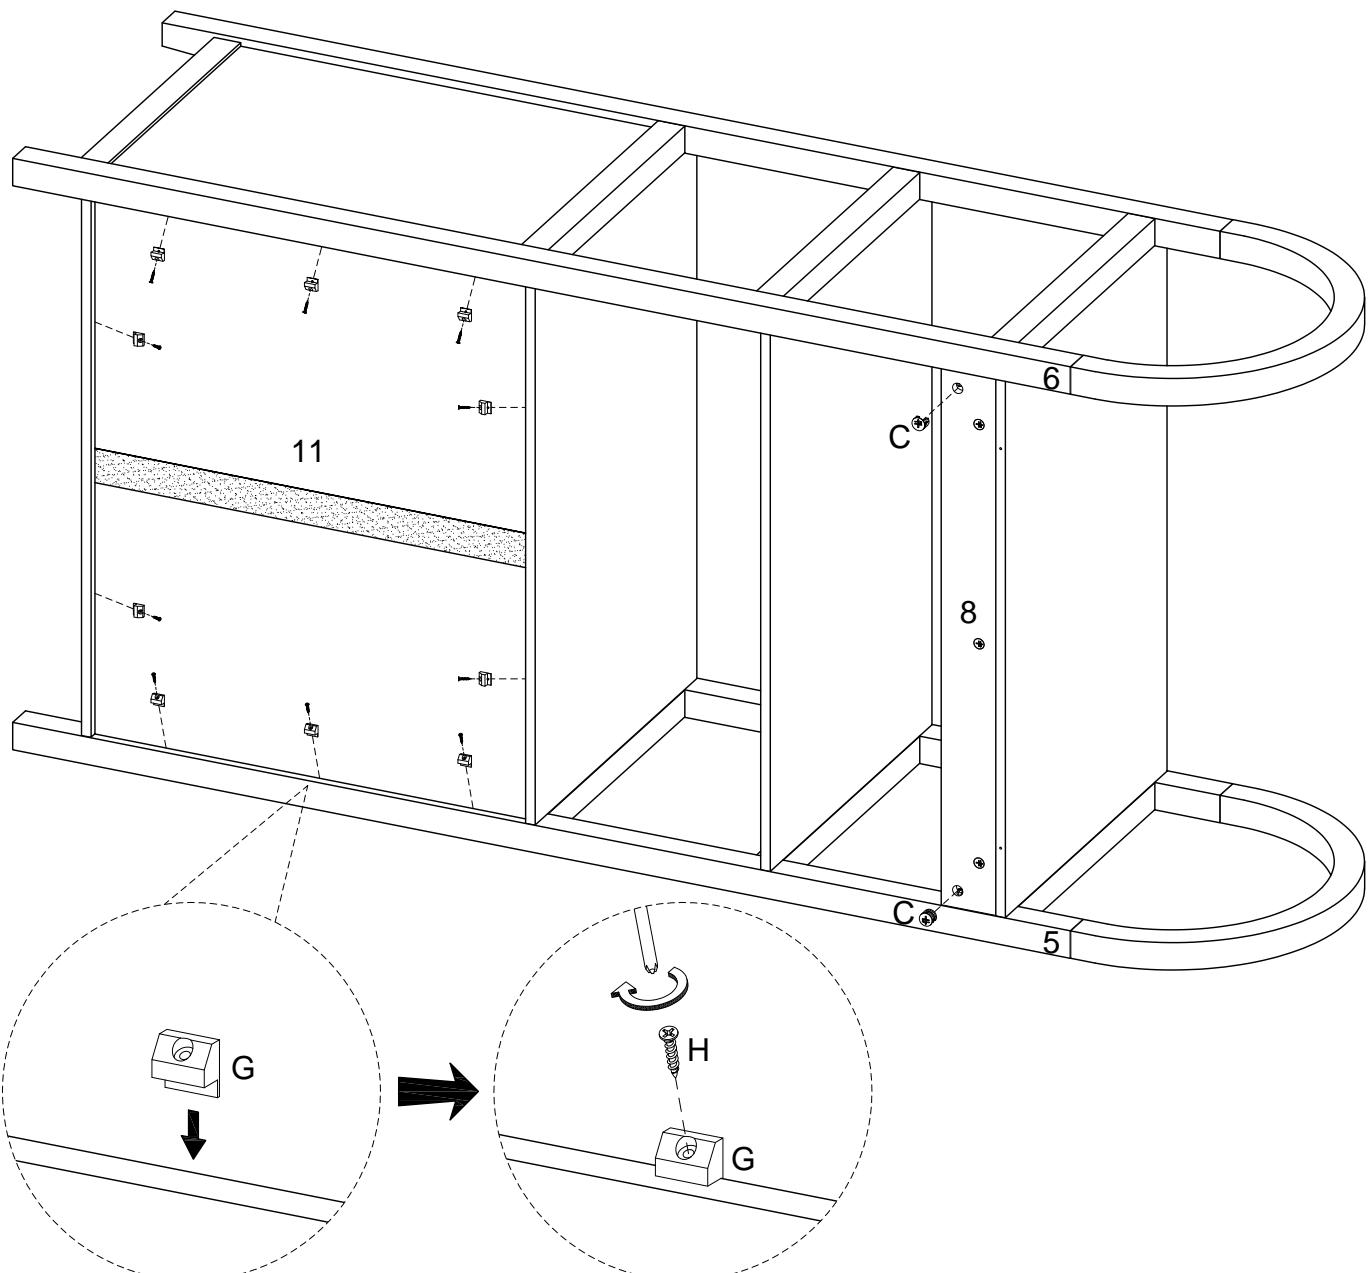




Step 9

Use the provided stickers (D) to ensure a clean finish.

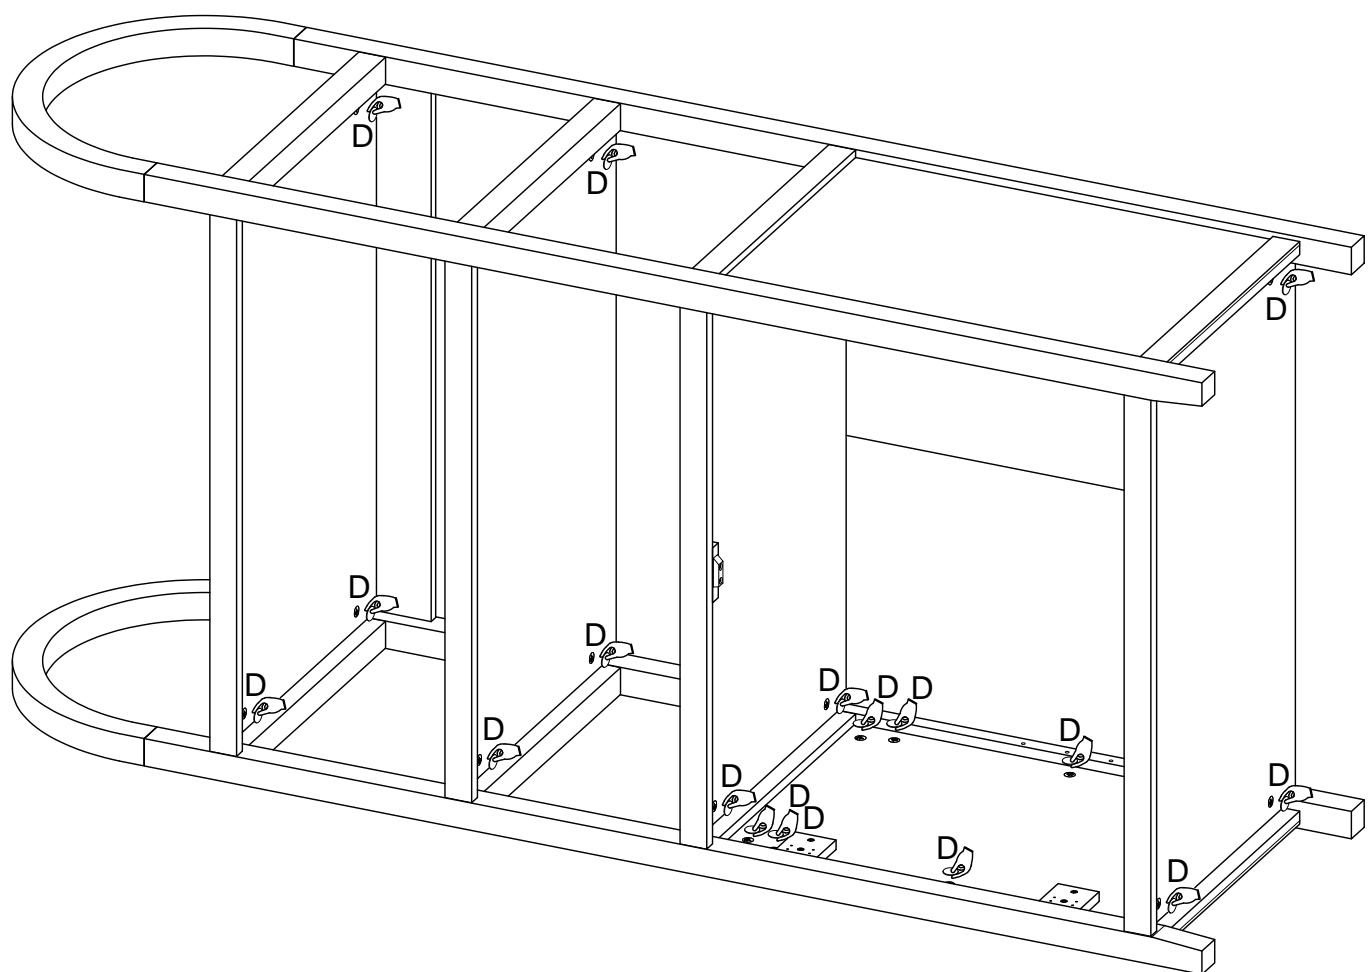


Step 10

Grab a friend and put the bookcase upright. Insert the shelf support pins (J), then insert the Adjustable Shelf (7).

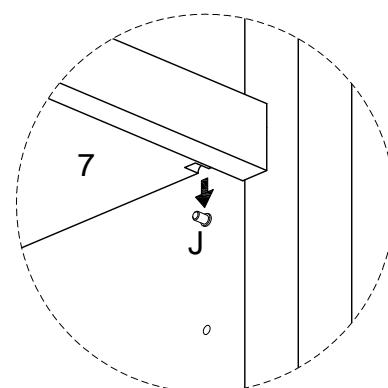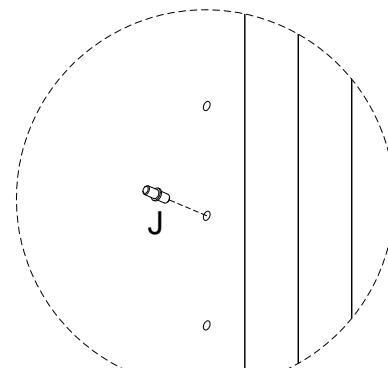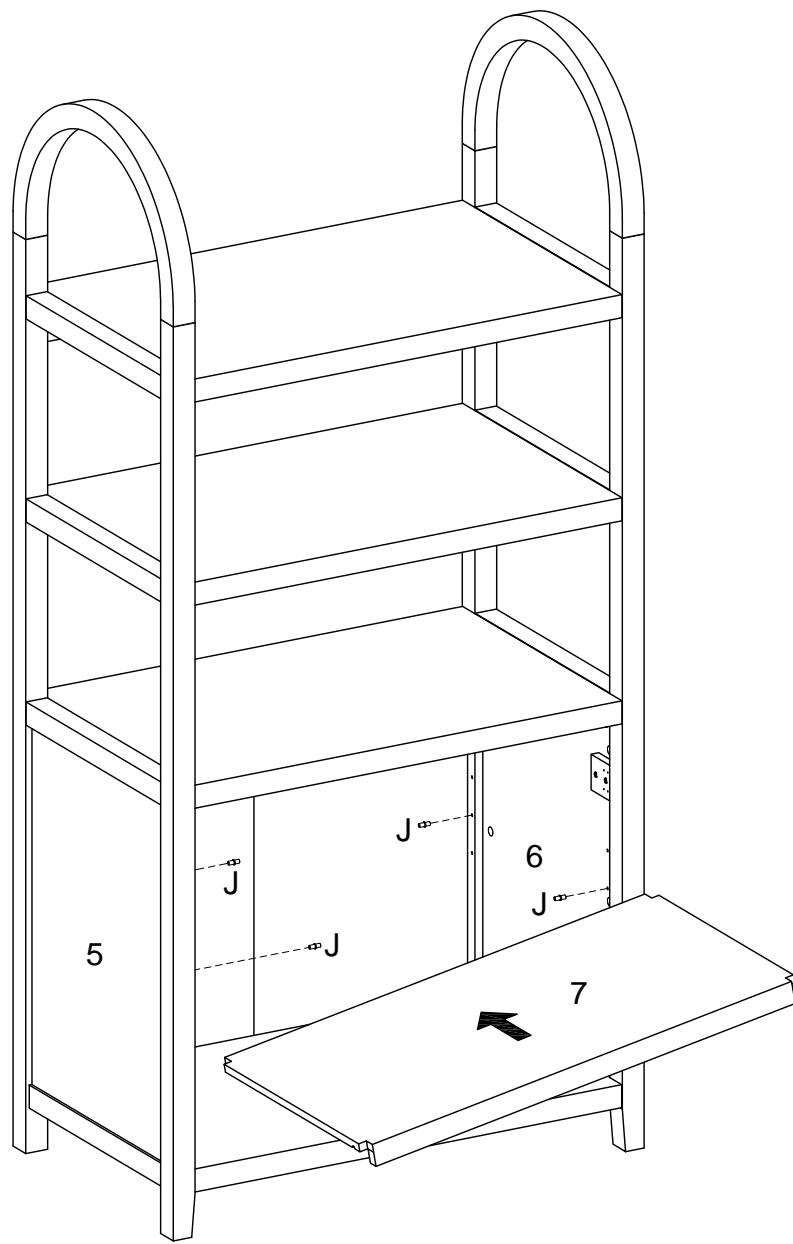


Step 11

Next, attach the hinges (K) to the Left Door (9) and Right Door (10) using the (L) screws. Make sure to also attach the handles (M) using the (N) bolts.

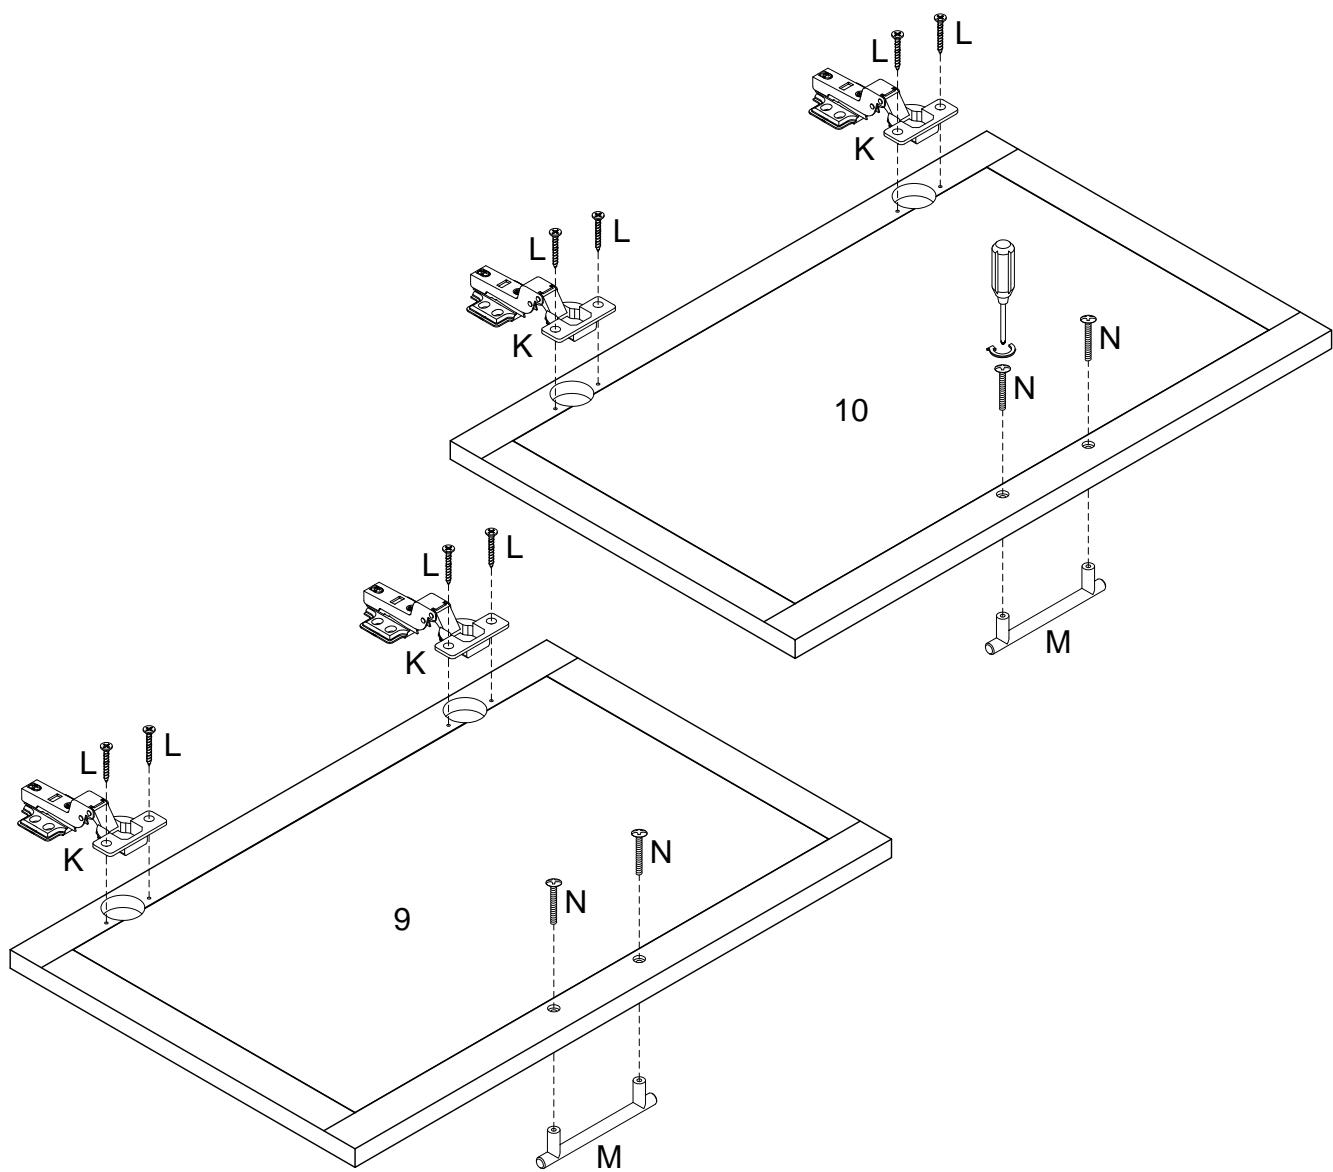


Step 12

Secure the Left Door (9) to the bookcase using the (L) screws.

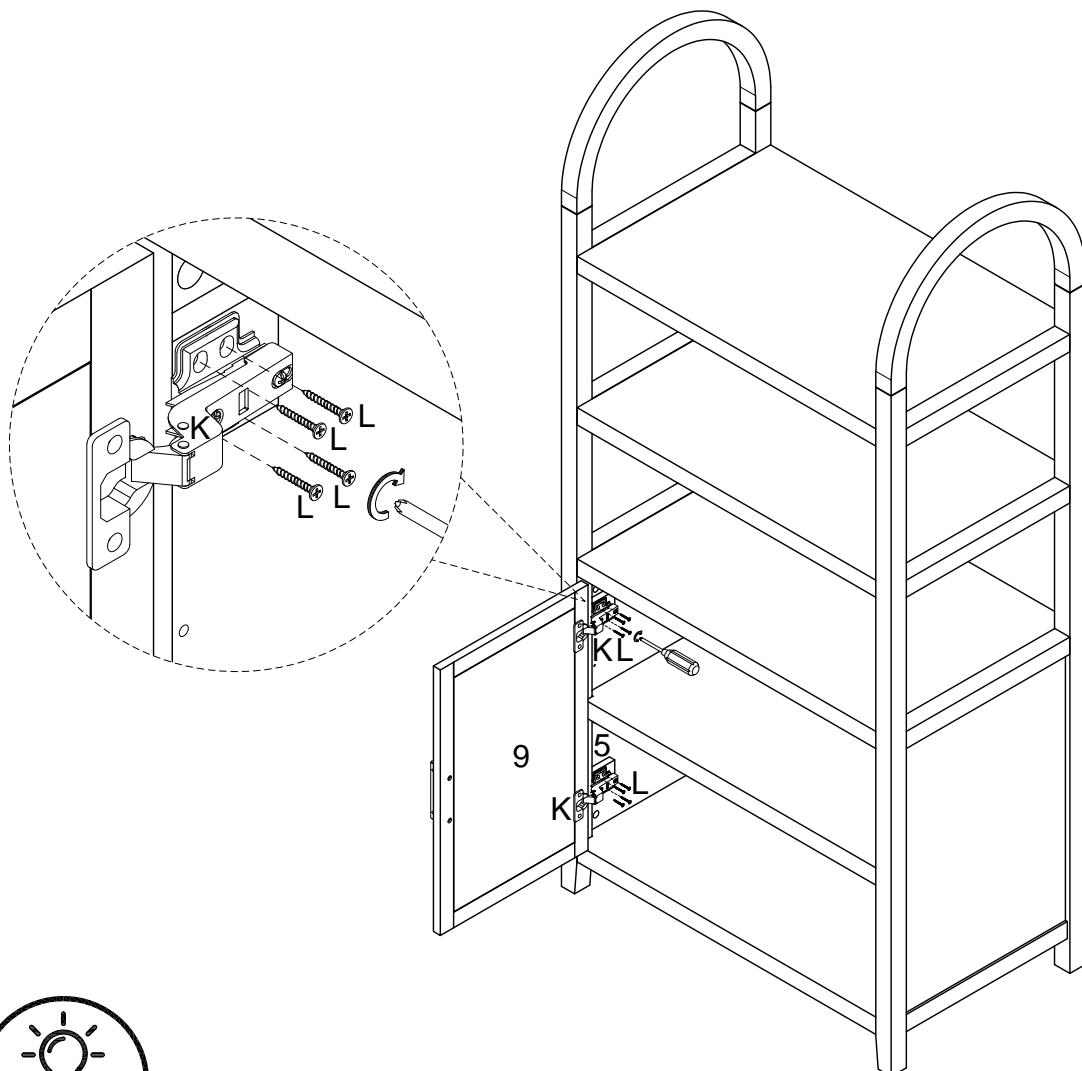


Tip


Adjusting The Cabinet Doors

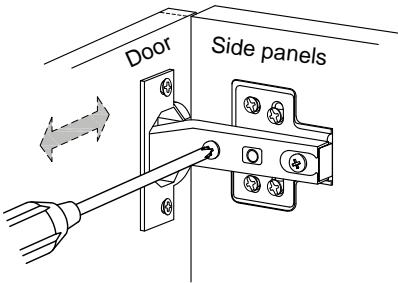

Adjust horizontal width
with this screw.

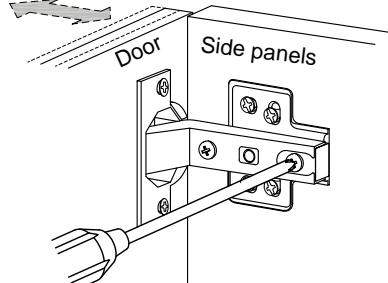


Adjust depth position
by loosening the hinge arm
mounting screw.

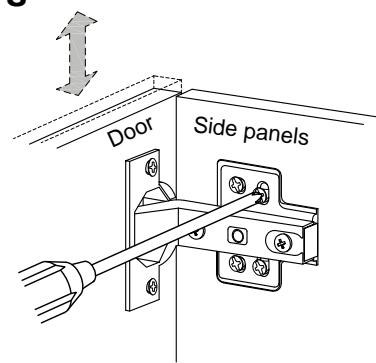

Adjust vertical height
via the screws in the
mounting plate.


Step 13

Now repeat that on the other side, and secure the Right Door (10) to the bookcase using the (L) screws.

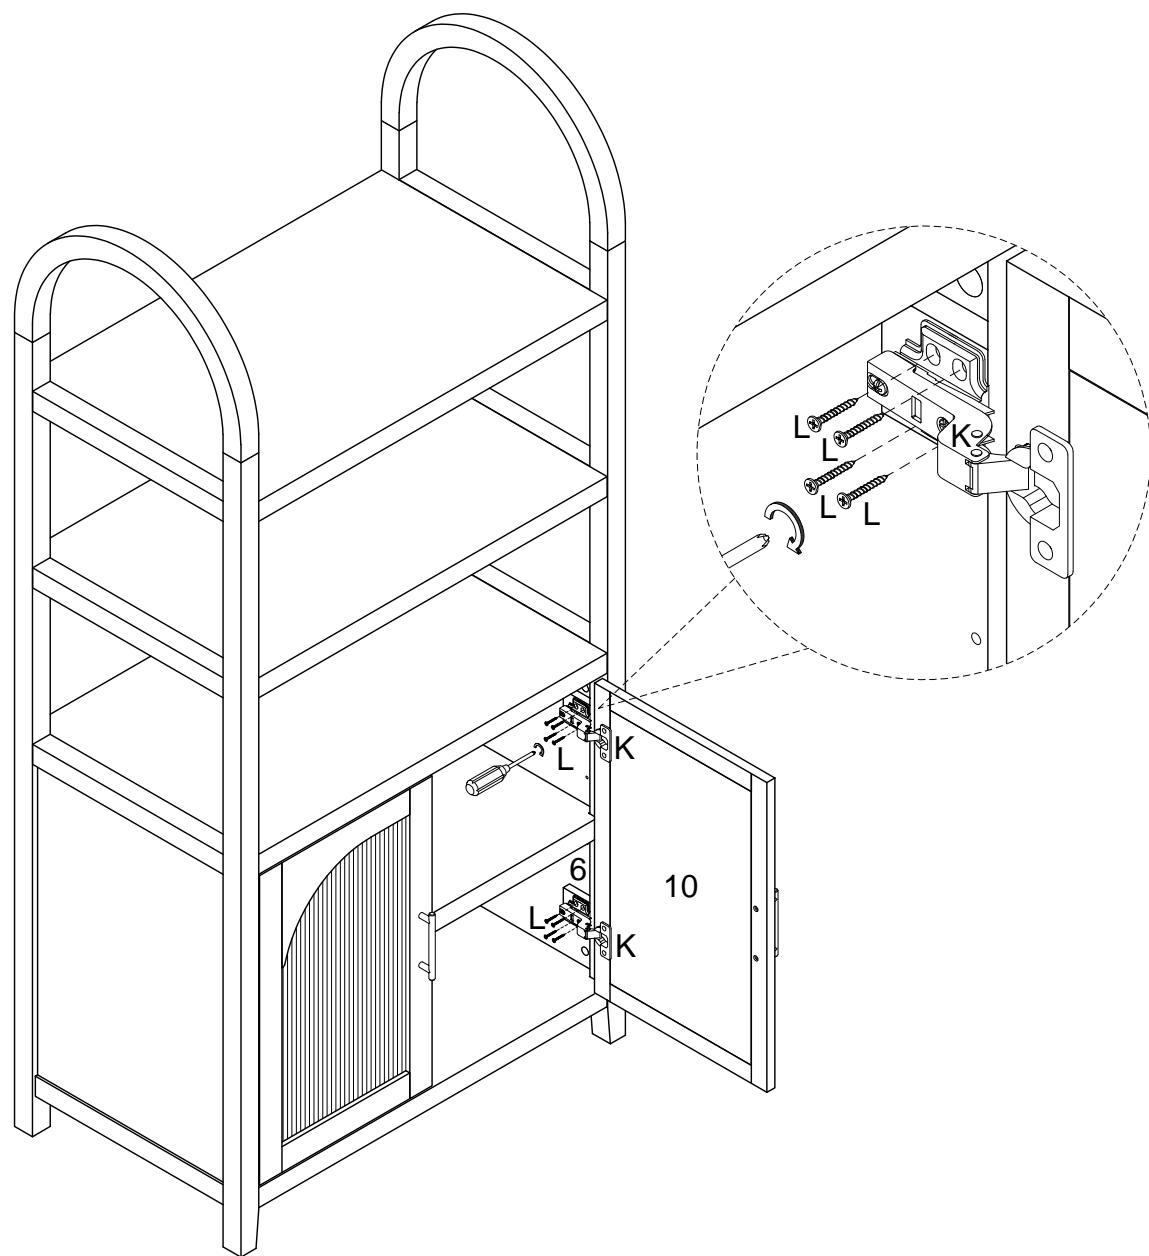



Step 14

Attach the plastic strap (R) to the Upper Fixed Divider (3) using the (Q) screws.

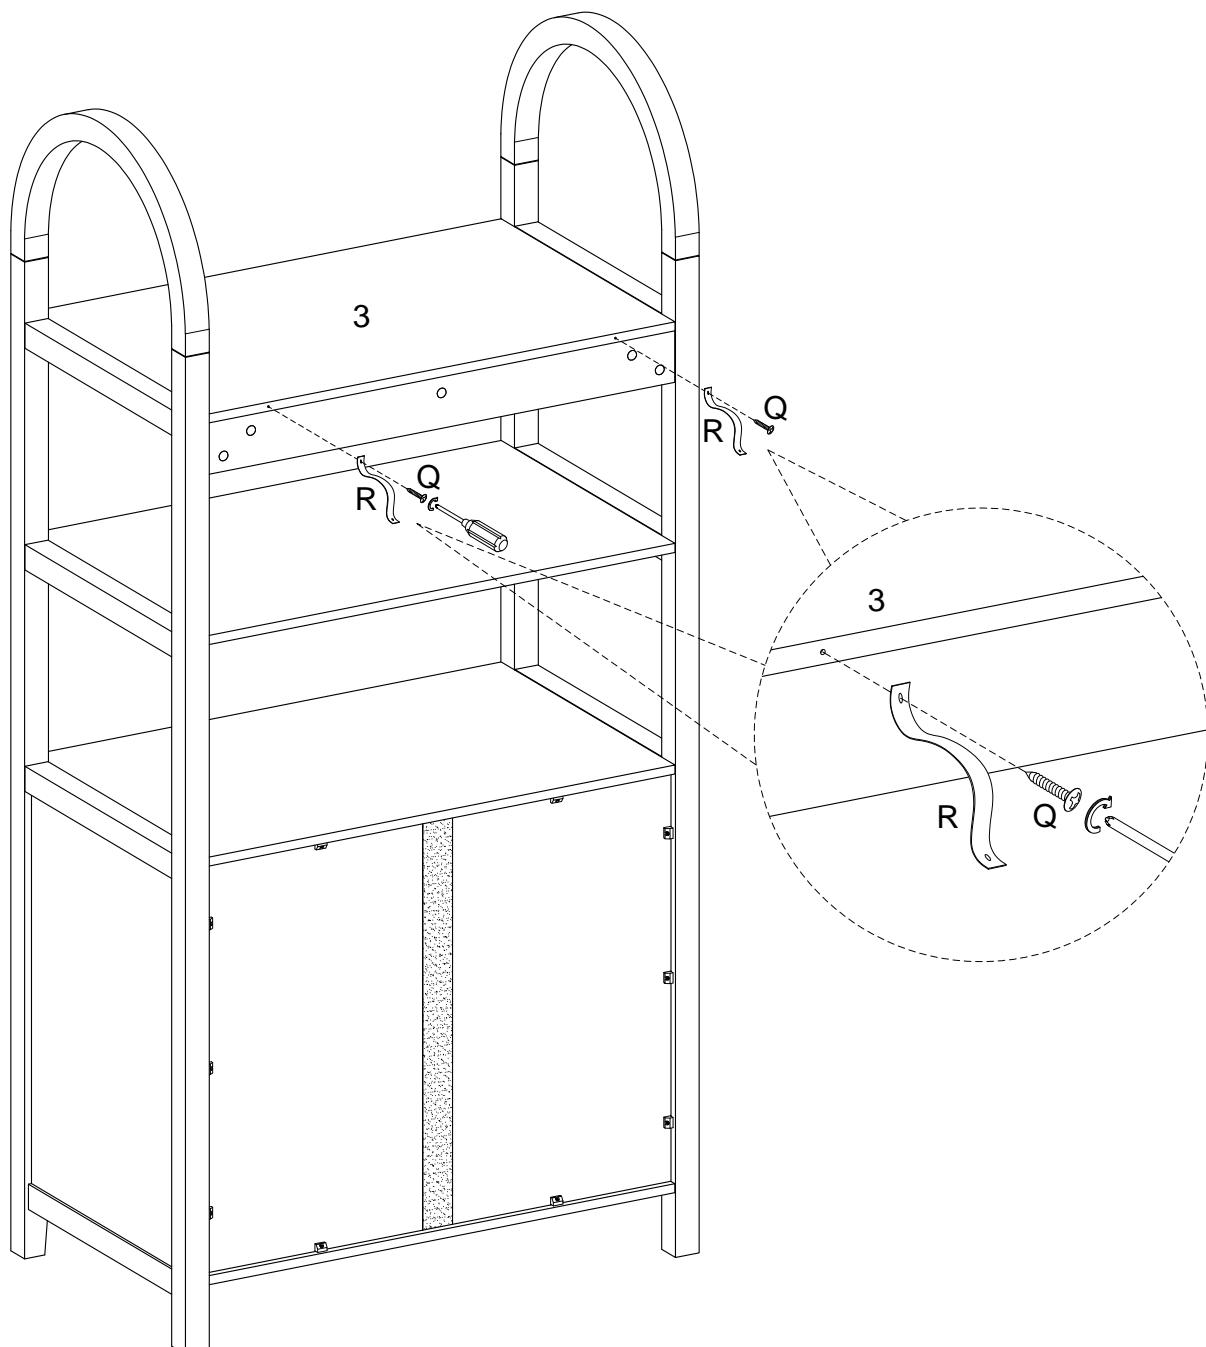

Step 15


Secure the other side of the plastic strap (R) to your wall using the (P) screw and wall anchor (S).

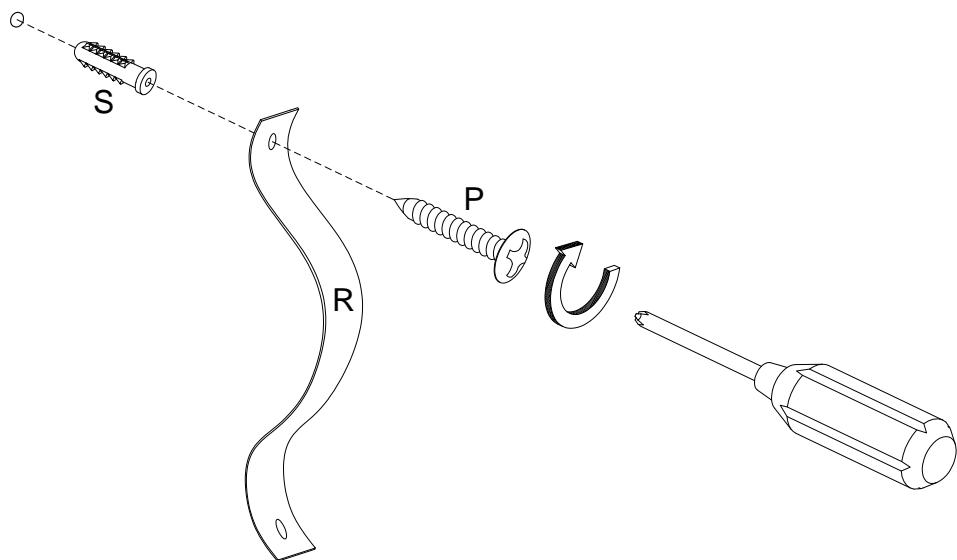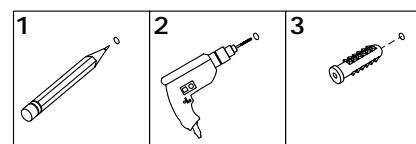

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

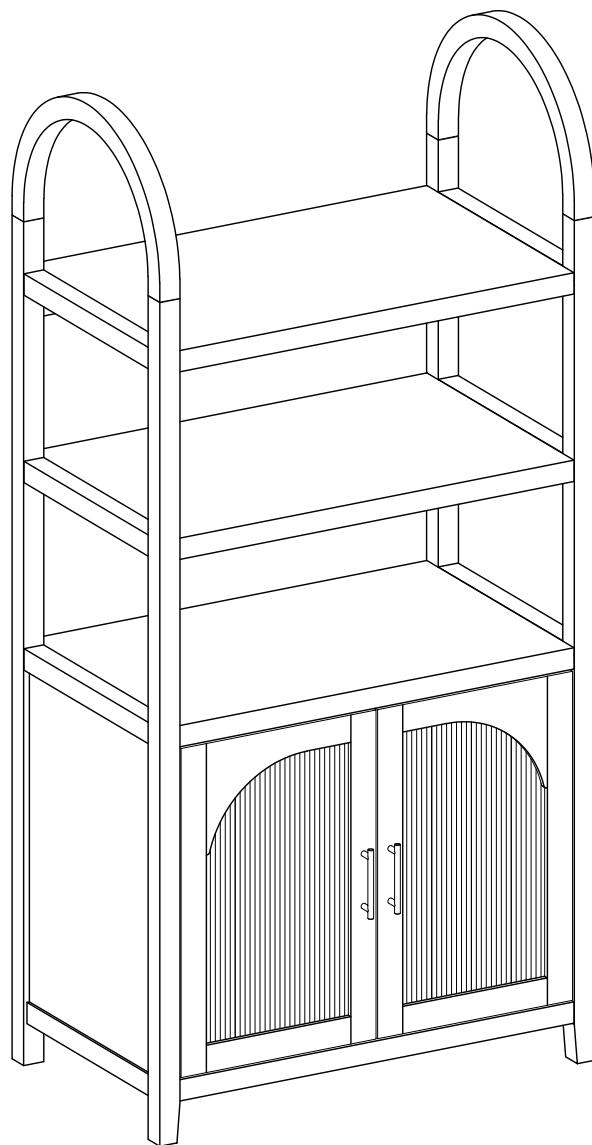

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at

walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

