


WALKER EDISON
TM

Glass Accent Cabinet

SKU# WESAS31301

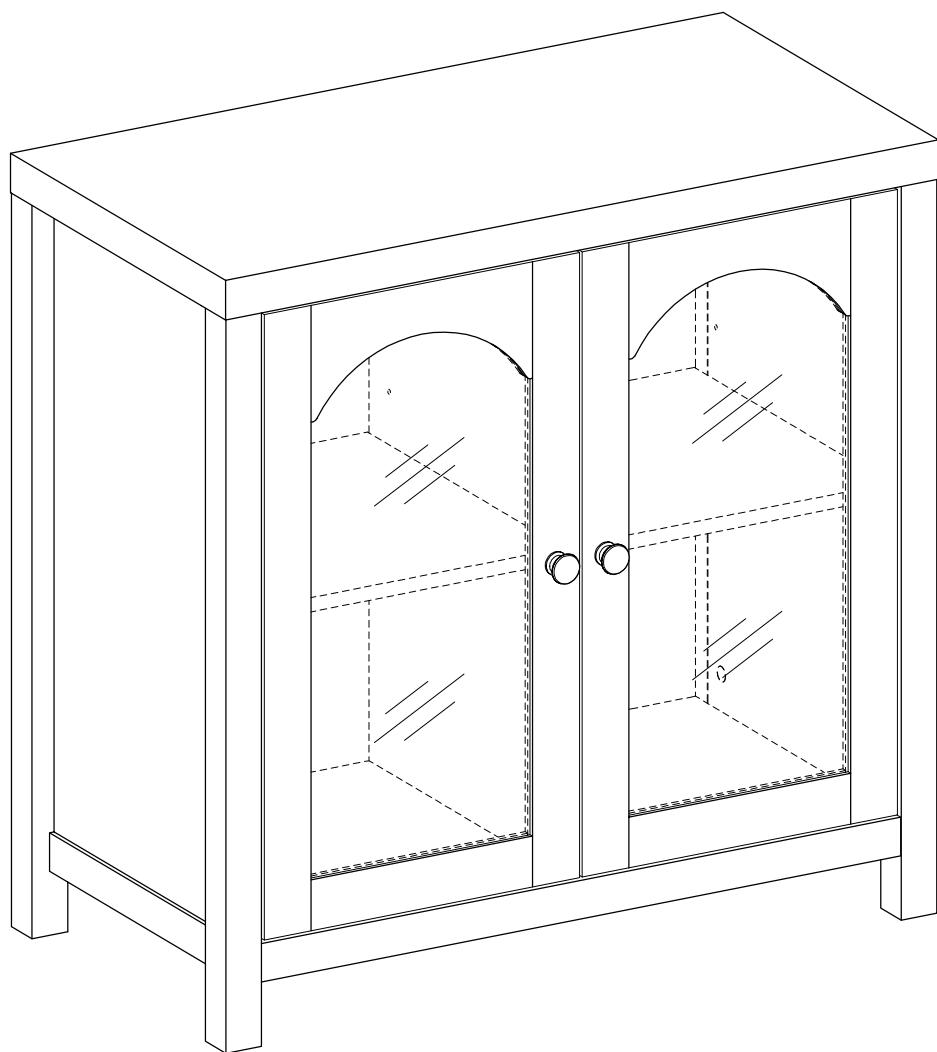

For Residential Use Only


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

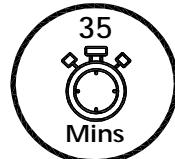

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

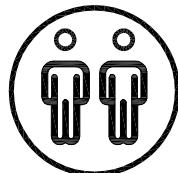

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

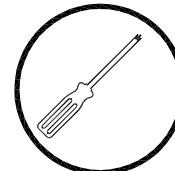


Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

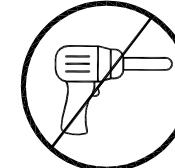

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

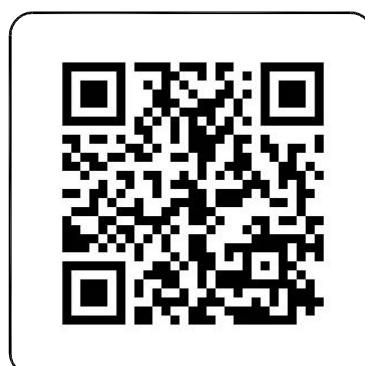



Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
1	Top Panel	1
2	Bottom Panel	1
3	Left Panel	1
4	Right Panel	1
5	Left Back Leg	1
6	Right Back Leg	1
7	Left Front Leg	1
8	Right Front Leg	1
9	Divider Panel	1
10	Adjustable Shelf	2
11	Back Panel	1
12	Front Rail	1
13	Left Door	1
14	Right Door	1

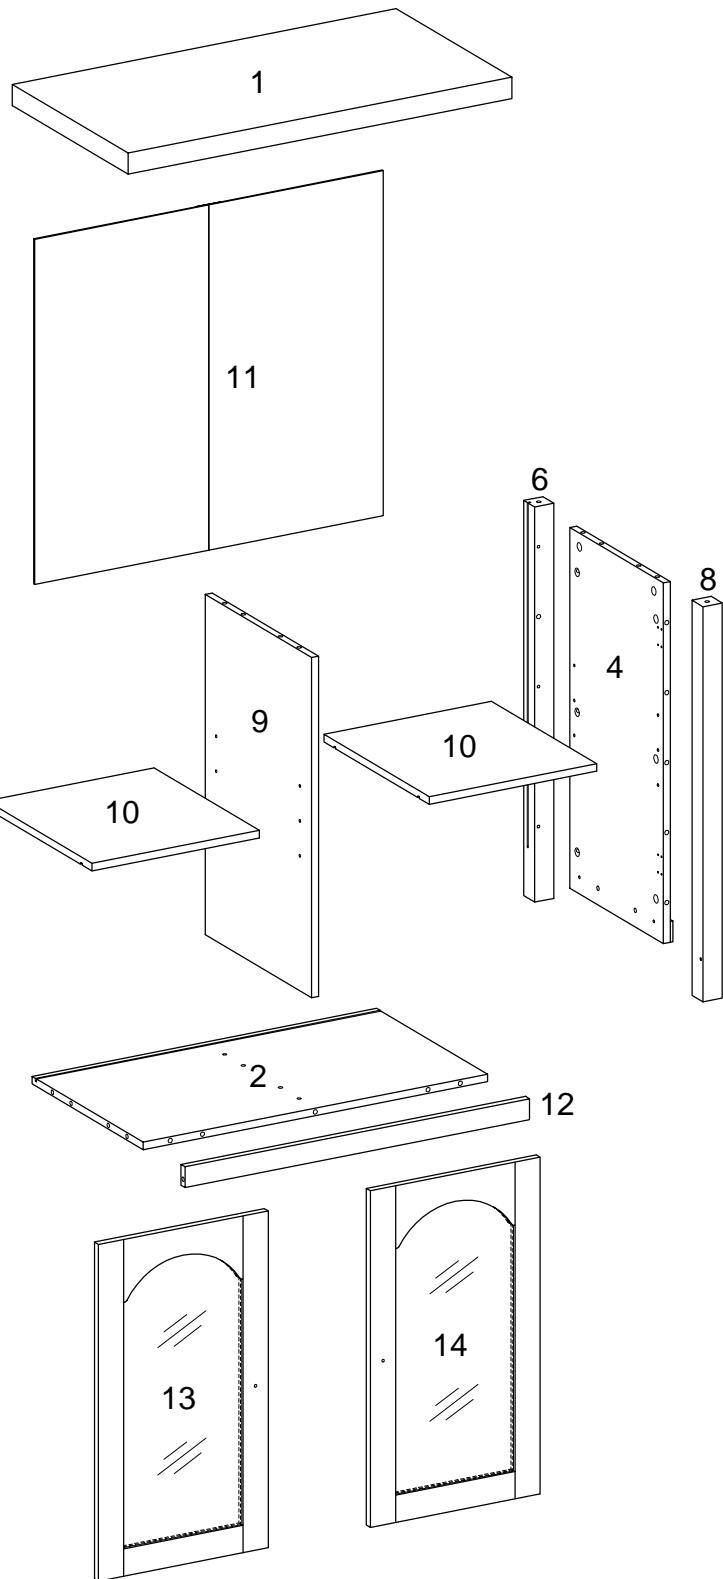

WE Hardware List

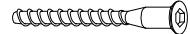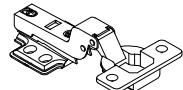  Part	Size	Name	Quantity
A	 8x30mm	Wooden dowel	26
B	 6x35mm	Cam Bolt	27
C	 15x11mm	Cam Lock	27
D	 30mm	Sticker	27
E	 6x50mm	Bolt	2
F	 M4	Hex key	1
G	 16*16.5*10.5mm	Plastic Wedge	10
H	 3x17mm	Screw	10
J	 5x16mm	Shelf Support Pin	8
K	 35mm	Hinge	4
L	 3.5x15mm	Screw	24
M	 5/32"x24x21mm	Handle	2
N	 5/32"x18mm	Bolt	2


WE Hardware List

Part	Size	Name	Quantity	
P		4x25mm	Screw	1
Q		4x12mm	Screw	1
R		25x150mm	Plastic strap	1
S		8x30mm	Wall Anchor	1
T		10g	Glue Tube	1

The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.

Step 1

Let's get started! Insert wooden dowels (A) into the Divider Panel (9) and the Bottom Panel (2).

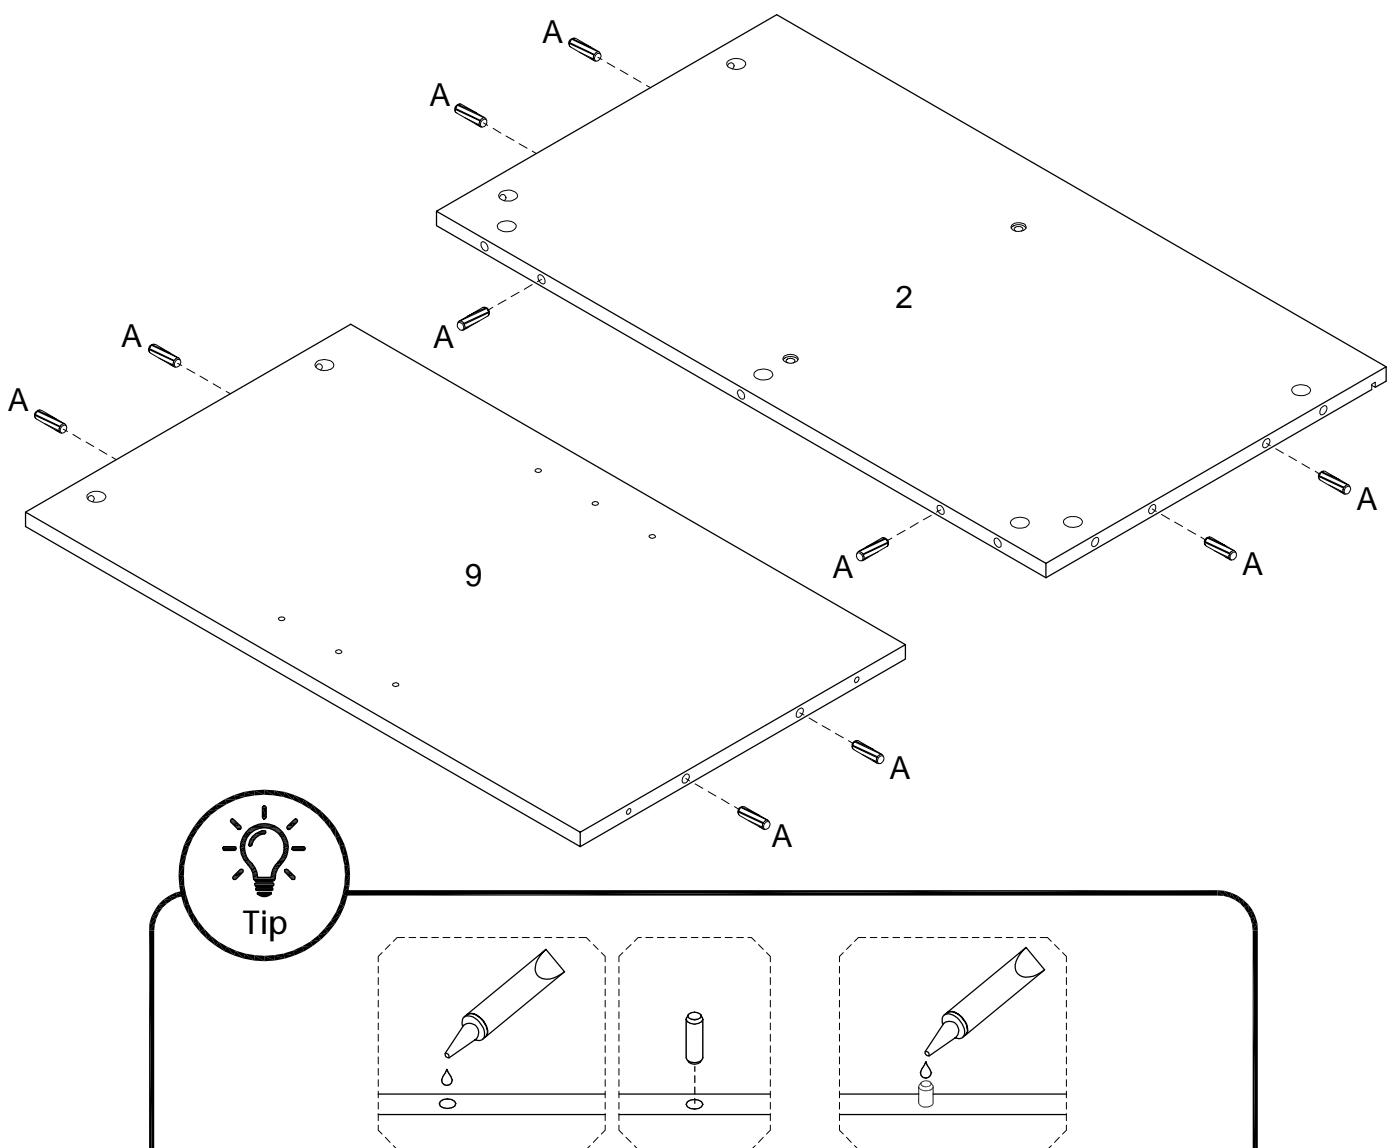


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


Step 2

Using a Phillips head screwdriver, screw the cam bolts (B) into the Front Rail (12) and the Top Panel (1).

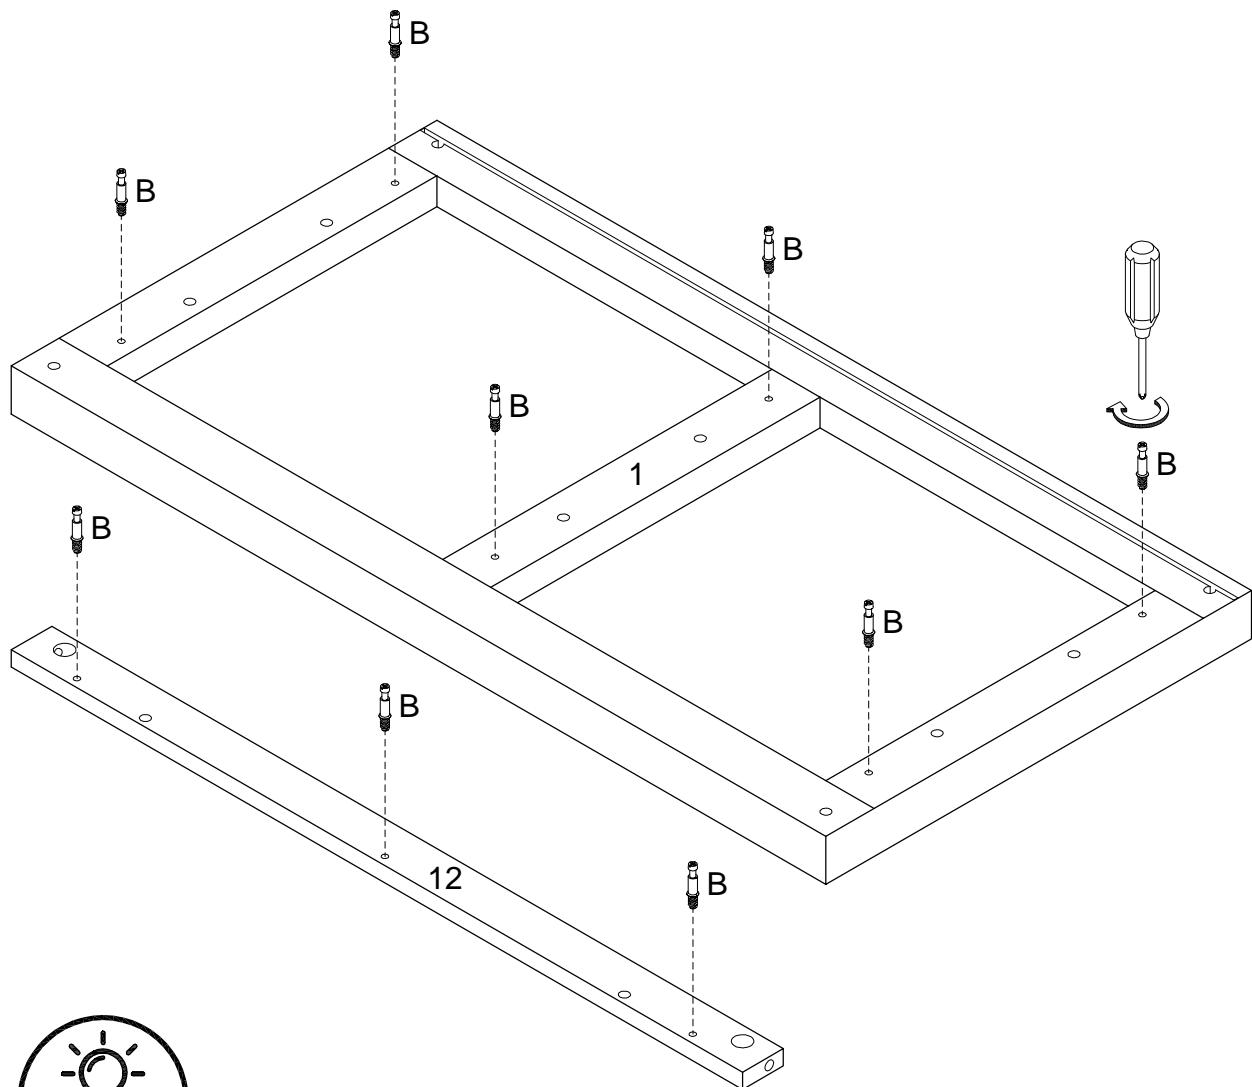


Tip

To keep your product looking its best and scratch-free, try assembling it on a soft surface like carpet or a blanket. This helps prevent any accidental scratches and keeps your furniture in top shape!

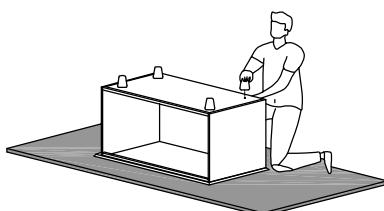


Step 3

Next, insert wooden dowels (A) and cam bolts (B) into the Right Panel (4) and the Left Panel (3).

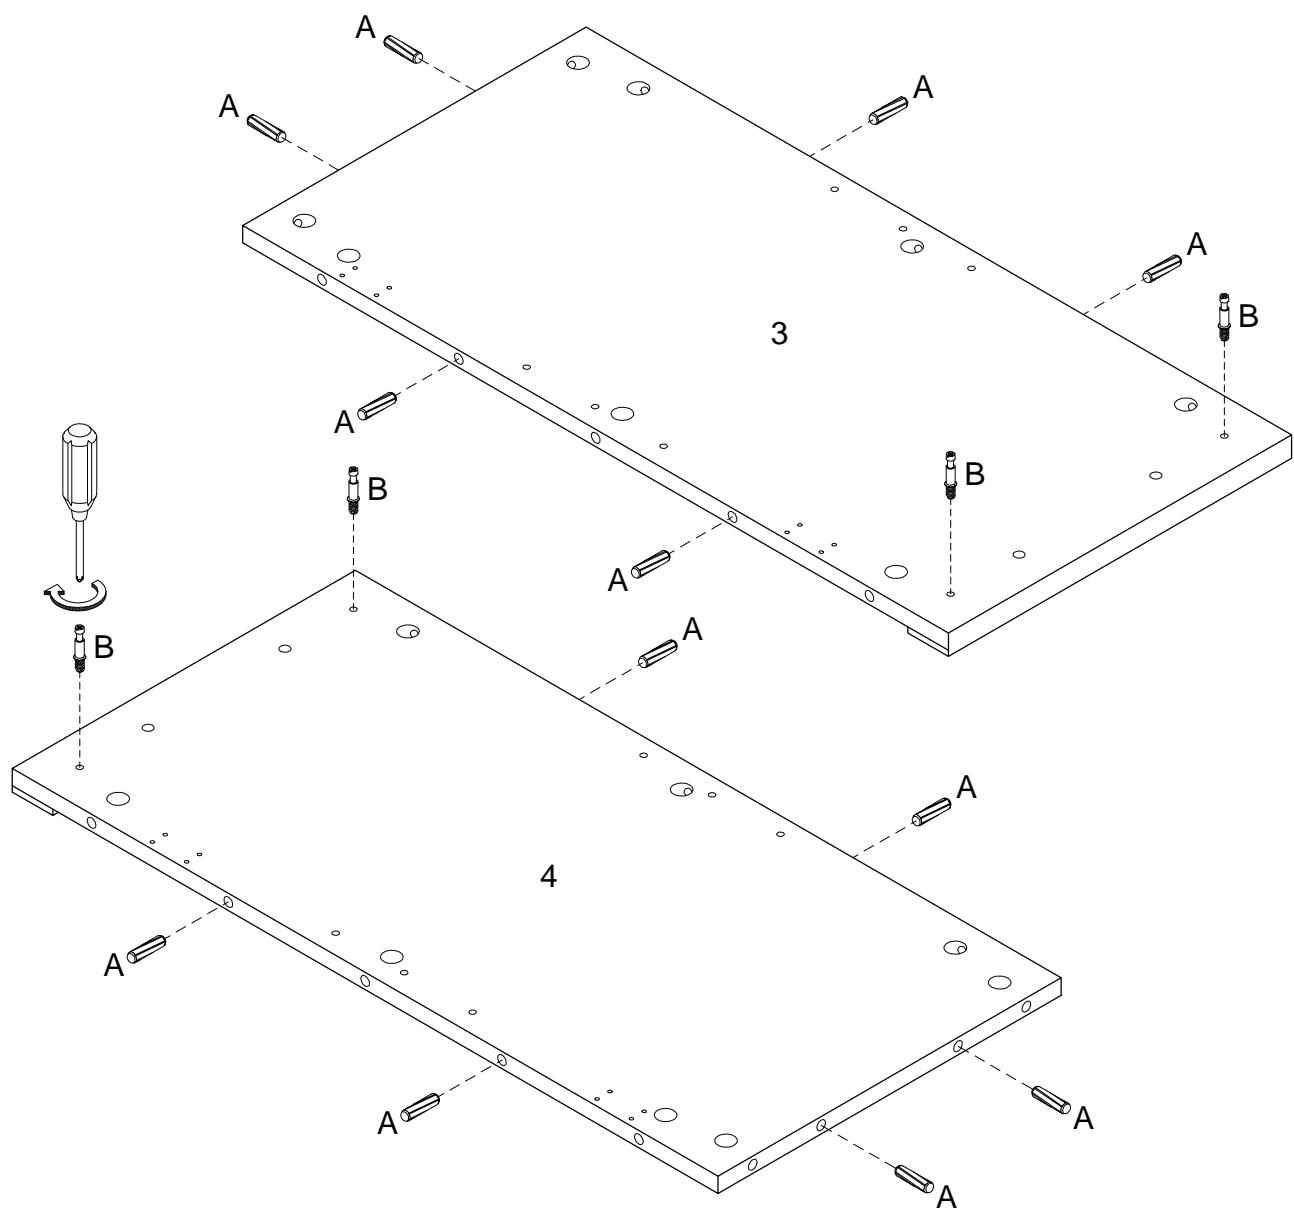



Step 4

Screw cam bolts (B) into the Right Front Leg (8), the Right Back Leg (6), the Left Front Leg (7), and the Left Back Leg (5). Then, insert a wooden dowel (A) into one side of each leg.

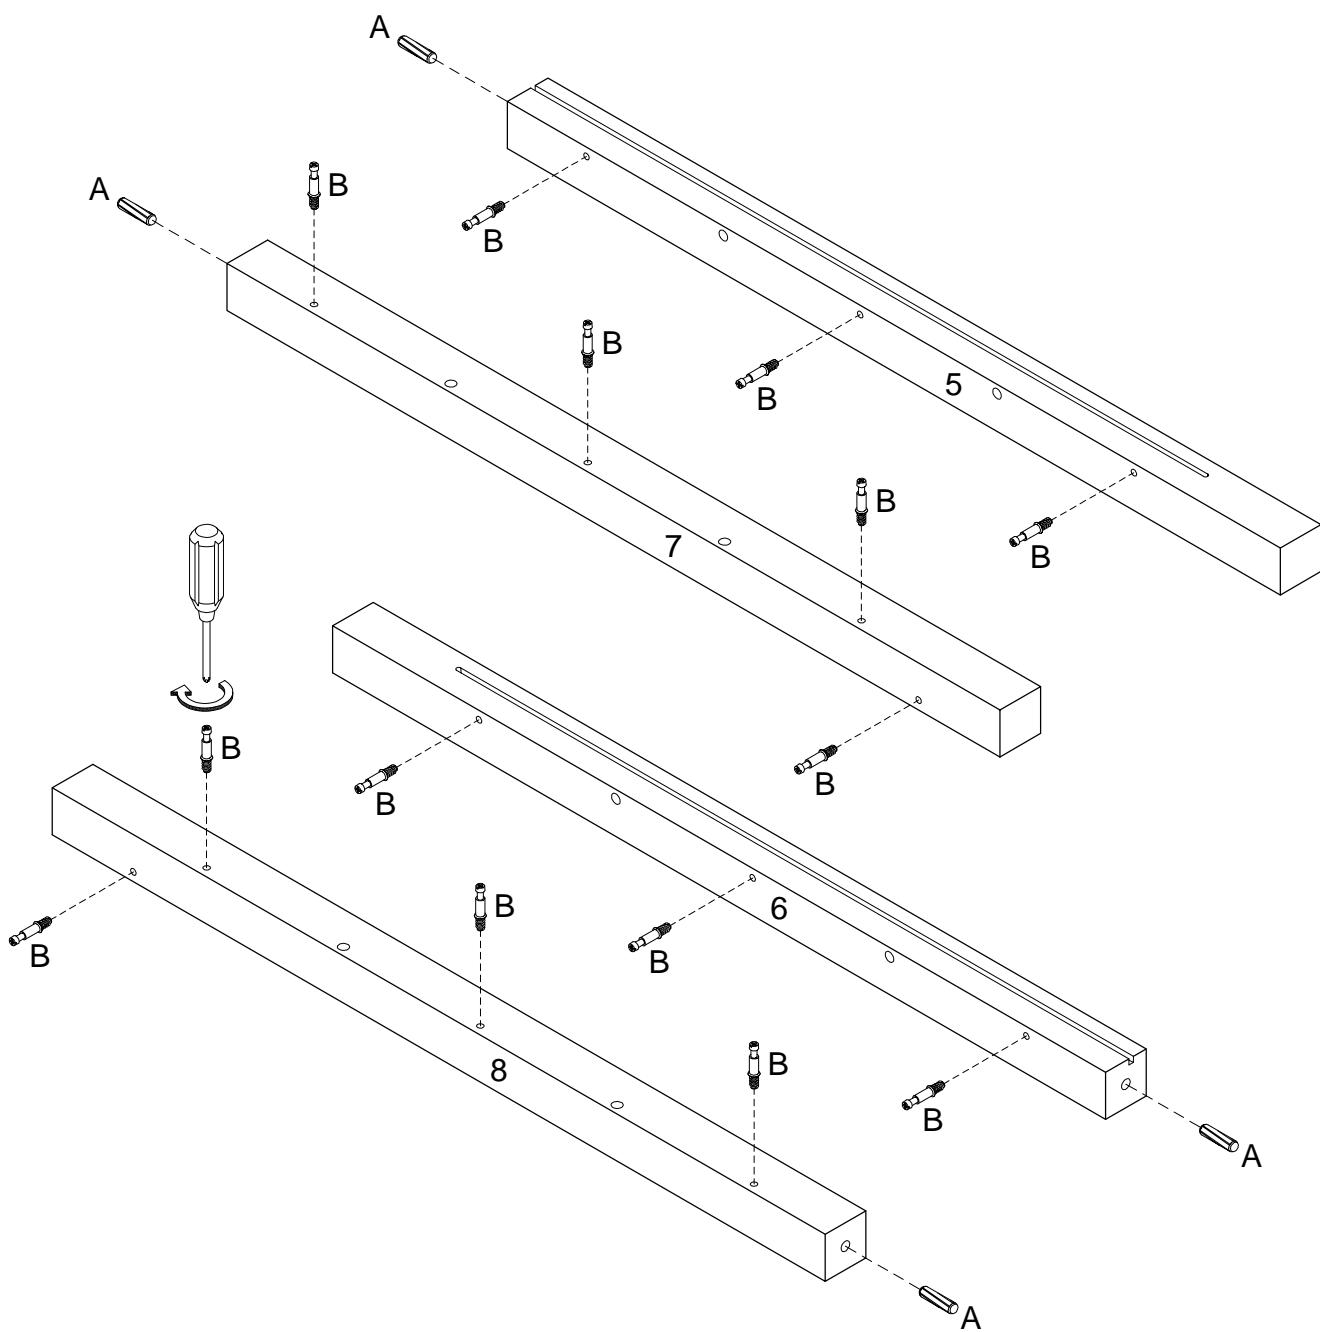


Step 5


Secure the Front Rail (12) to the Bottom Panel (2) via the cam bolts. Secure with cam locks (C) and tighten with a screwdriver.

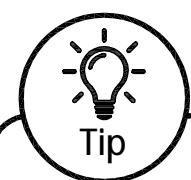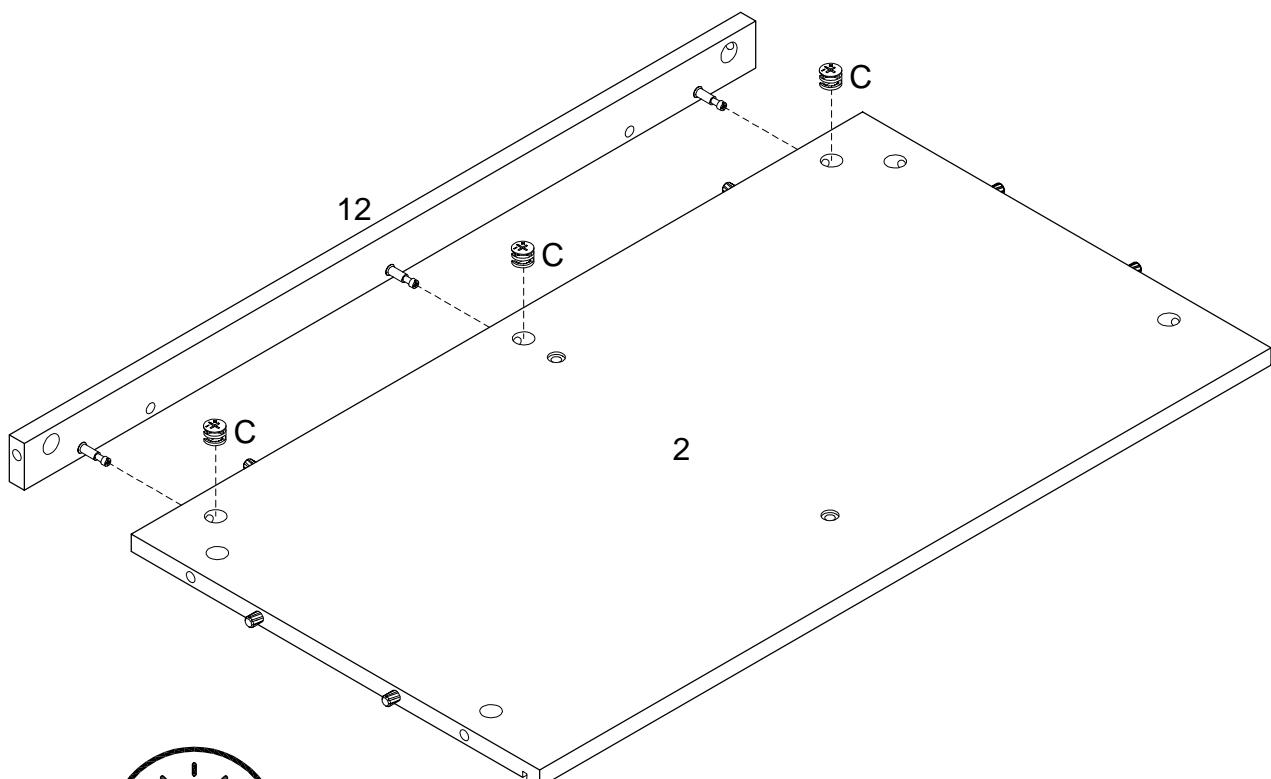


Cam Locks
Cam Locks help securely join two pieces together.
Follow these easy steps.

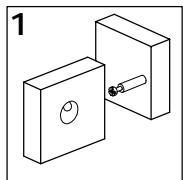

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

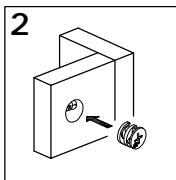


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

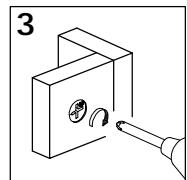

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 6

Next, attach the Left Front Leg (7) and Left Back Leg (5) to the Left Panel (3). Secure them using cam locks (C) and tighten with a screwdriver. Repeat this process on the right side by attaching the Right Front Leg (8) and Right Back Leg (6) to the Right Panel (4), then secure with cam locks (C) and tighten with a screwdriver.

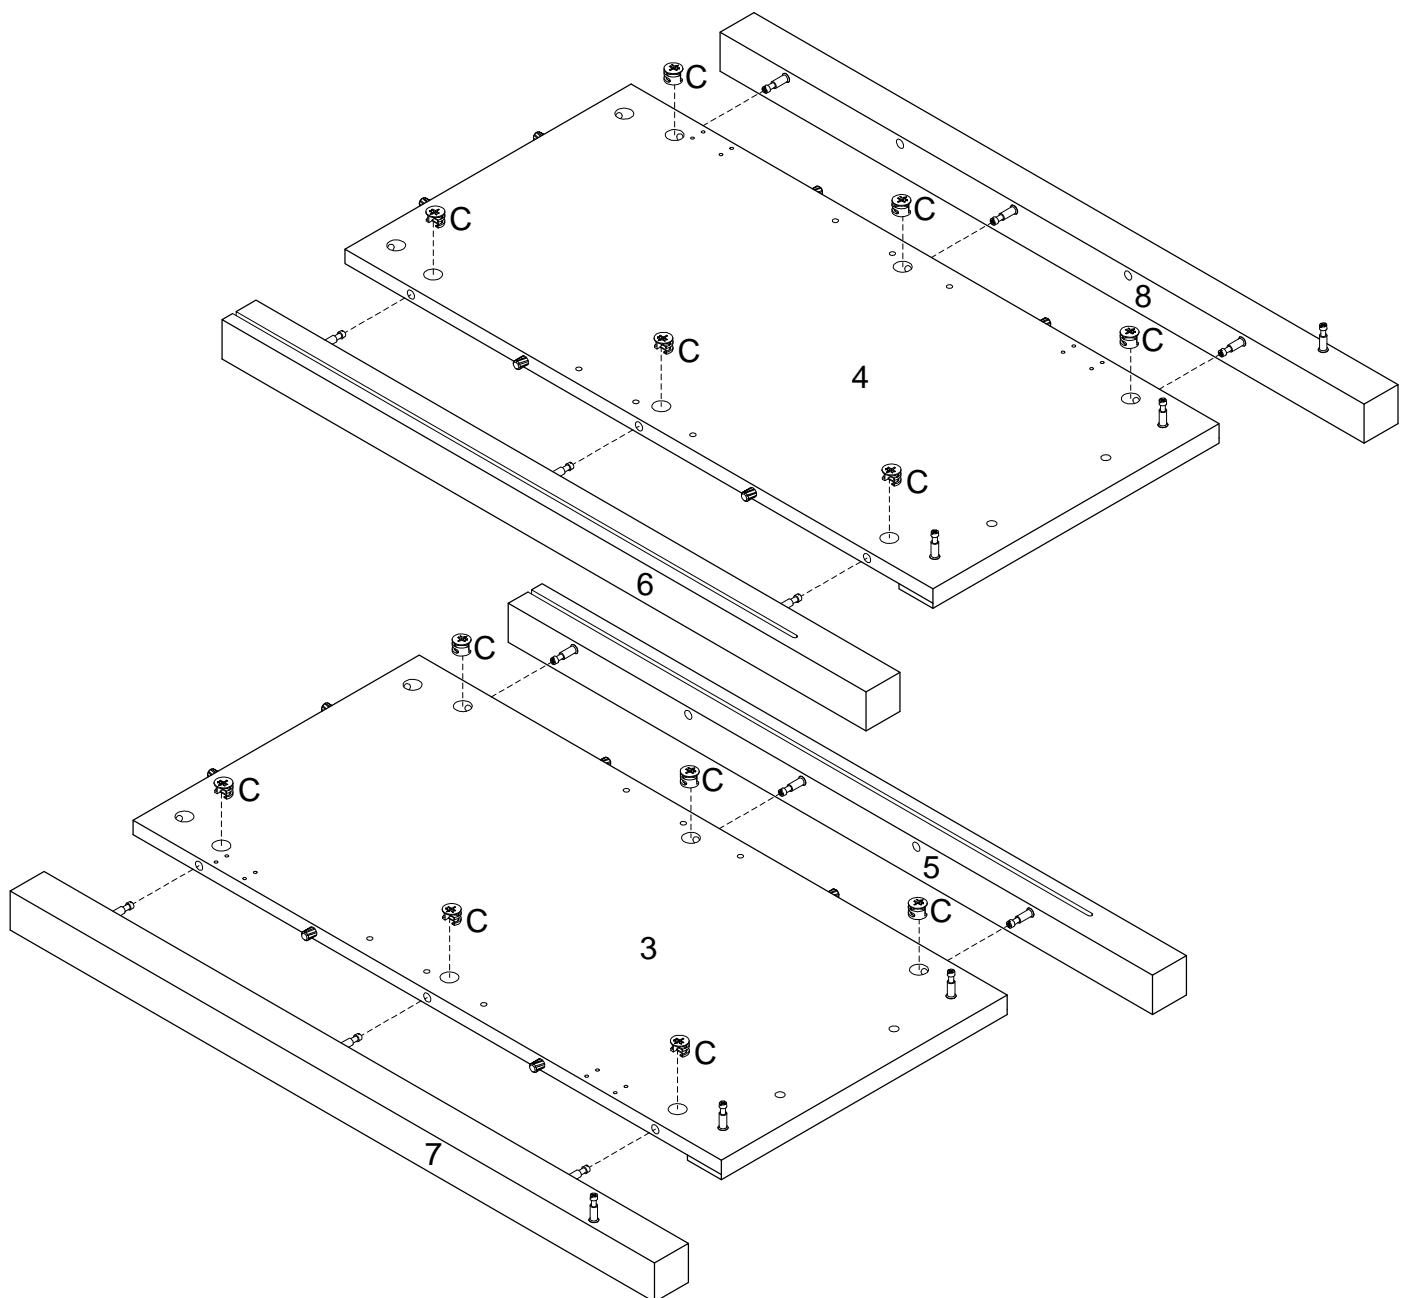


Step 7

Anchor the Divider Panel (9) to the Bottom Panel (2) using the (E) bolts. Tighten with the provided Hex Key (F).

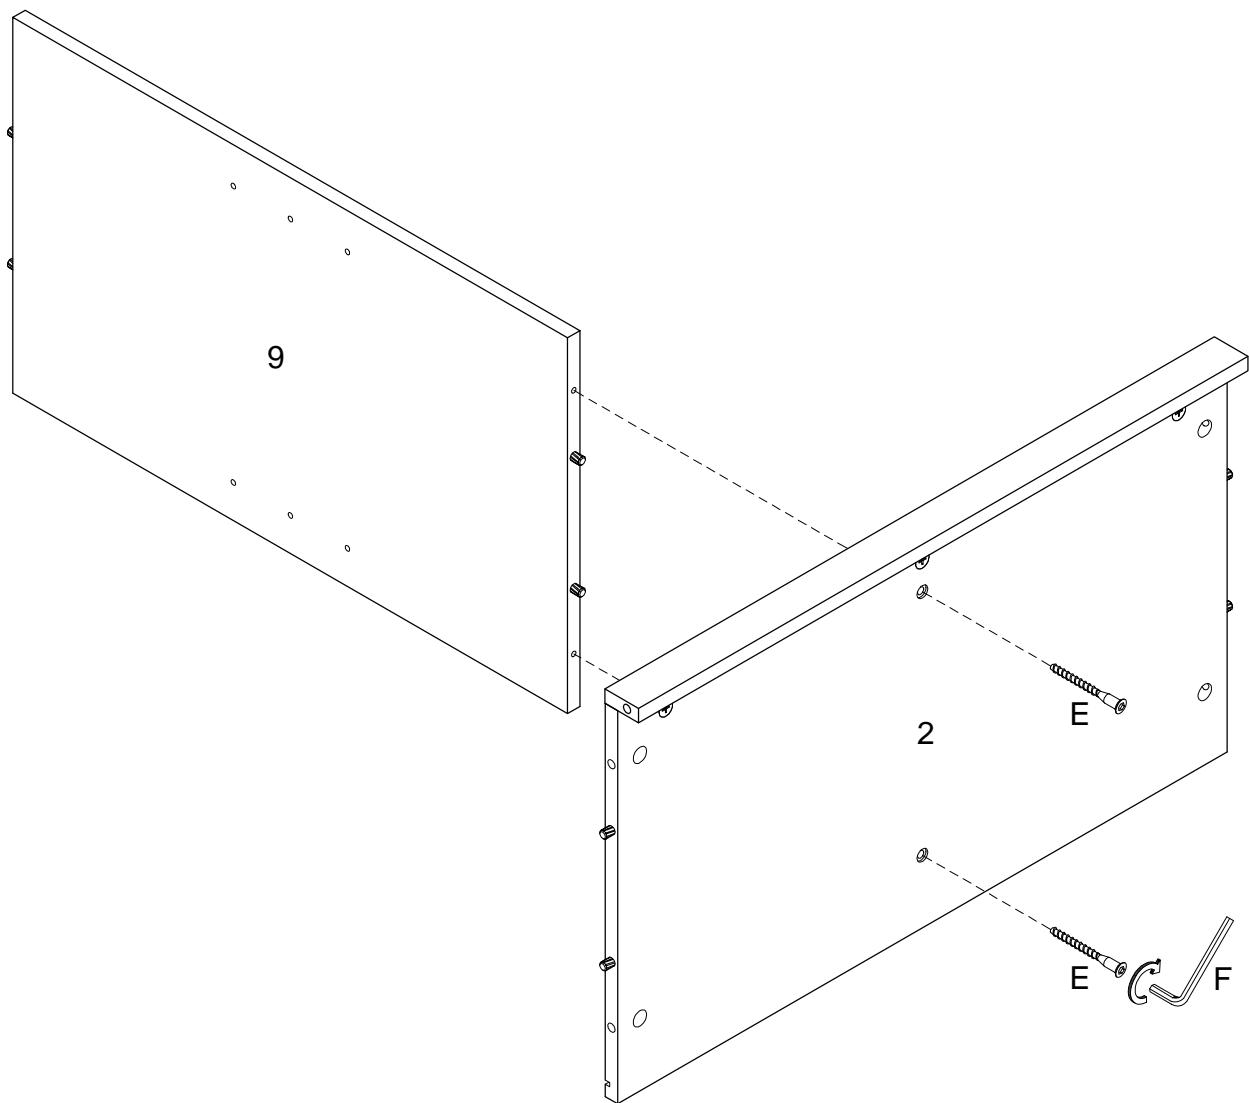


Step 8

Attach the Left Panel (3) to the Bottom Panel (2). Insert cam locks (C) and tighten with a screwdriver.

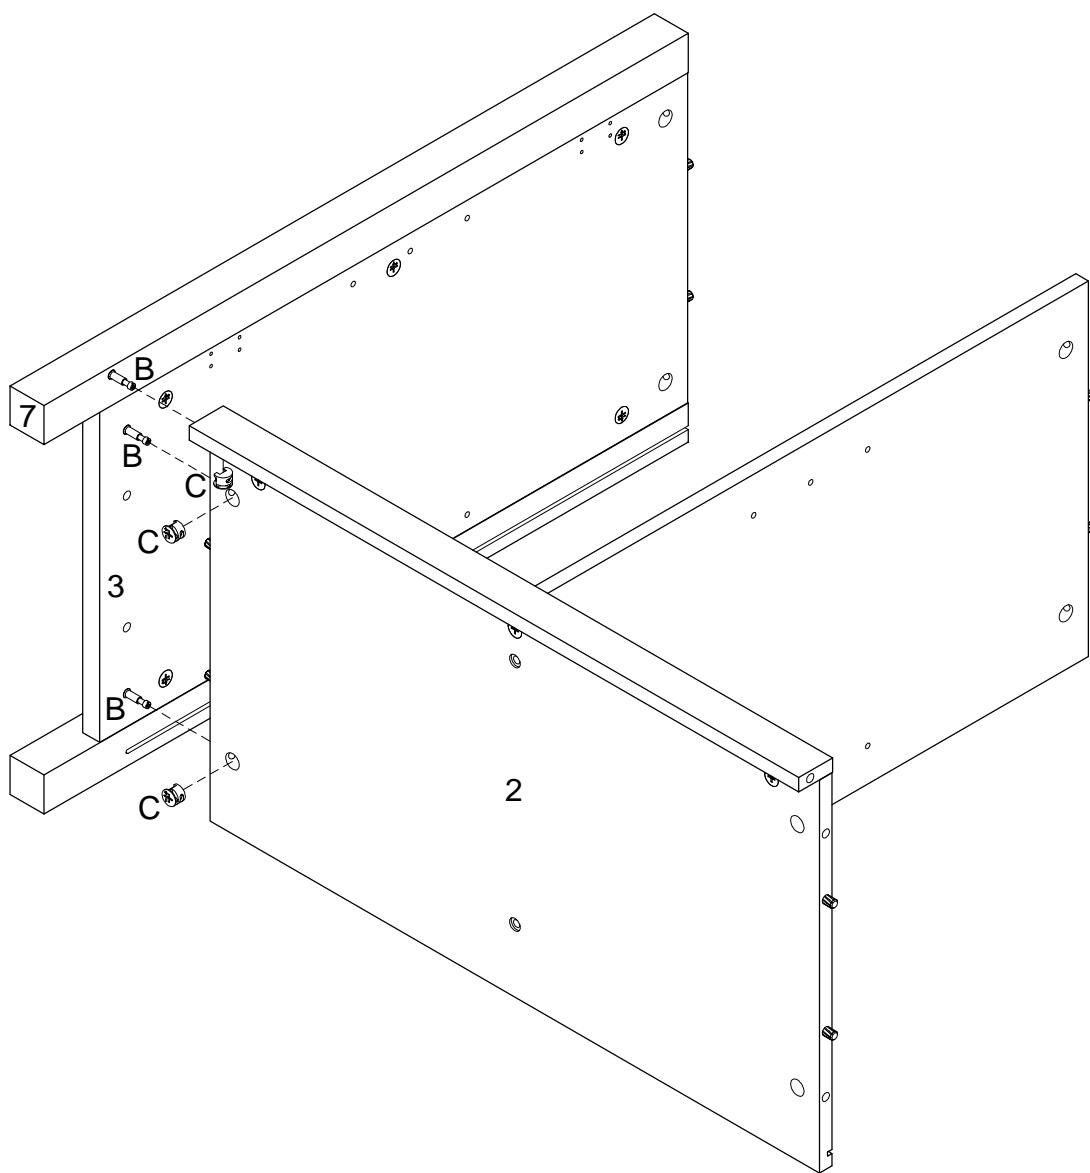


Step 9

Now, attach the Right Panel (4) to the other side of the Bottom Panel (2). Insert cam locks (C) and tighten with a screwdriver.

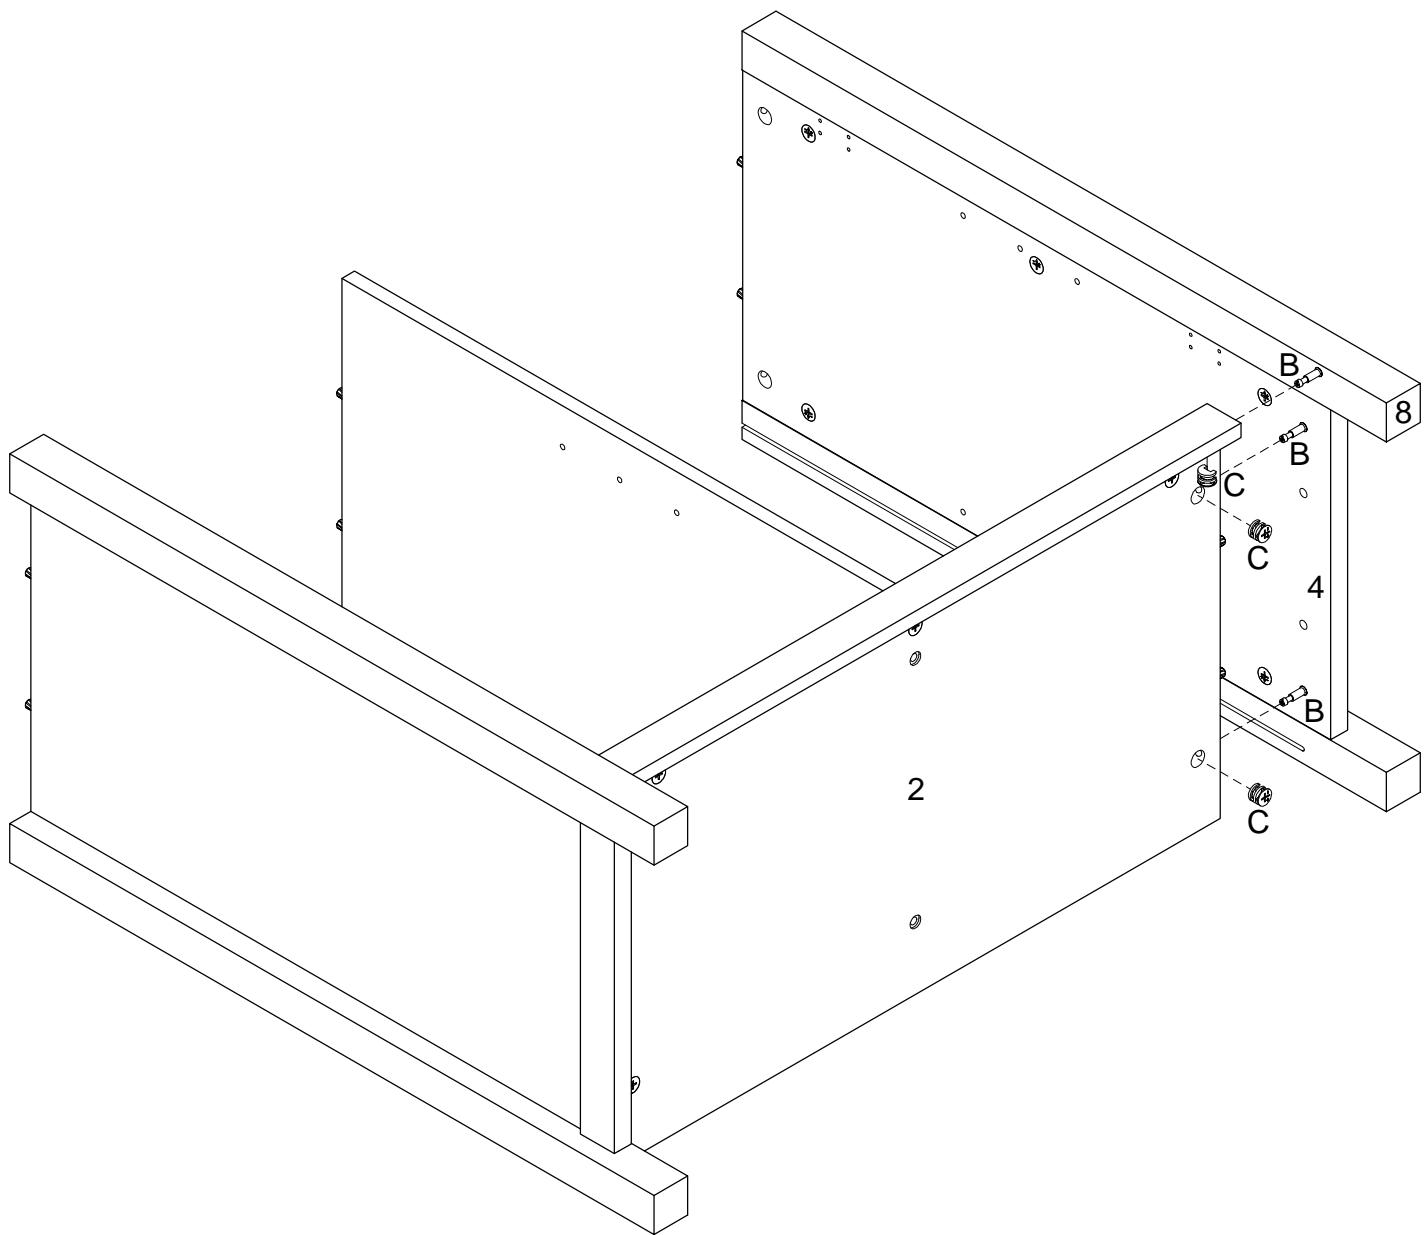


Step 10

Unfold the Back Panel (11) and slide it into place at the back of the unit, aligning it with the grooves in the Right Back Leg (6), Left Back Leg (5), and Bottom Panel (2) for proper positioning.

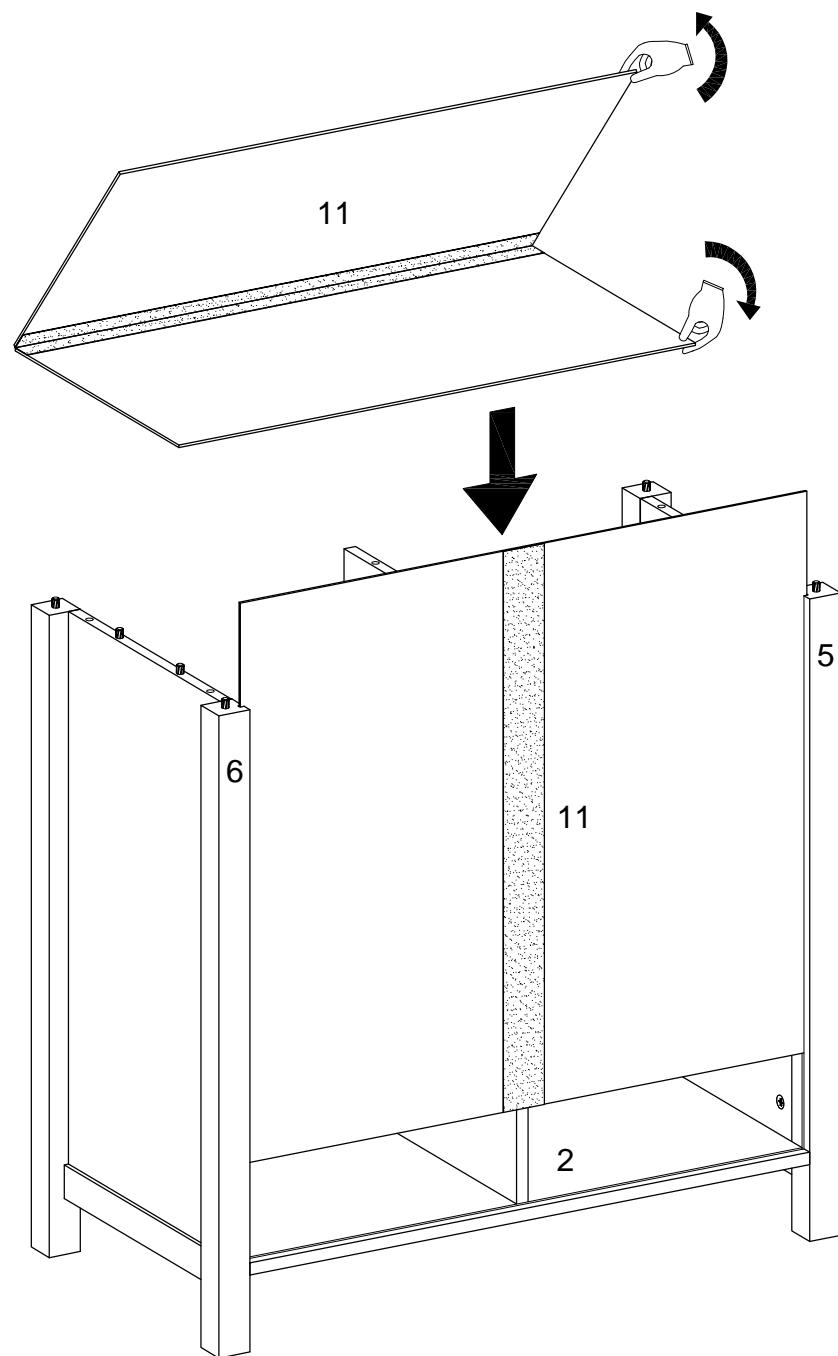


Step 11

Attach the Top Panel (1) to the frame you just built. Insert cam locks (C) and secure with a screwdriver.

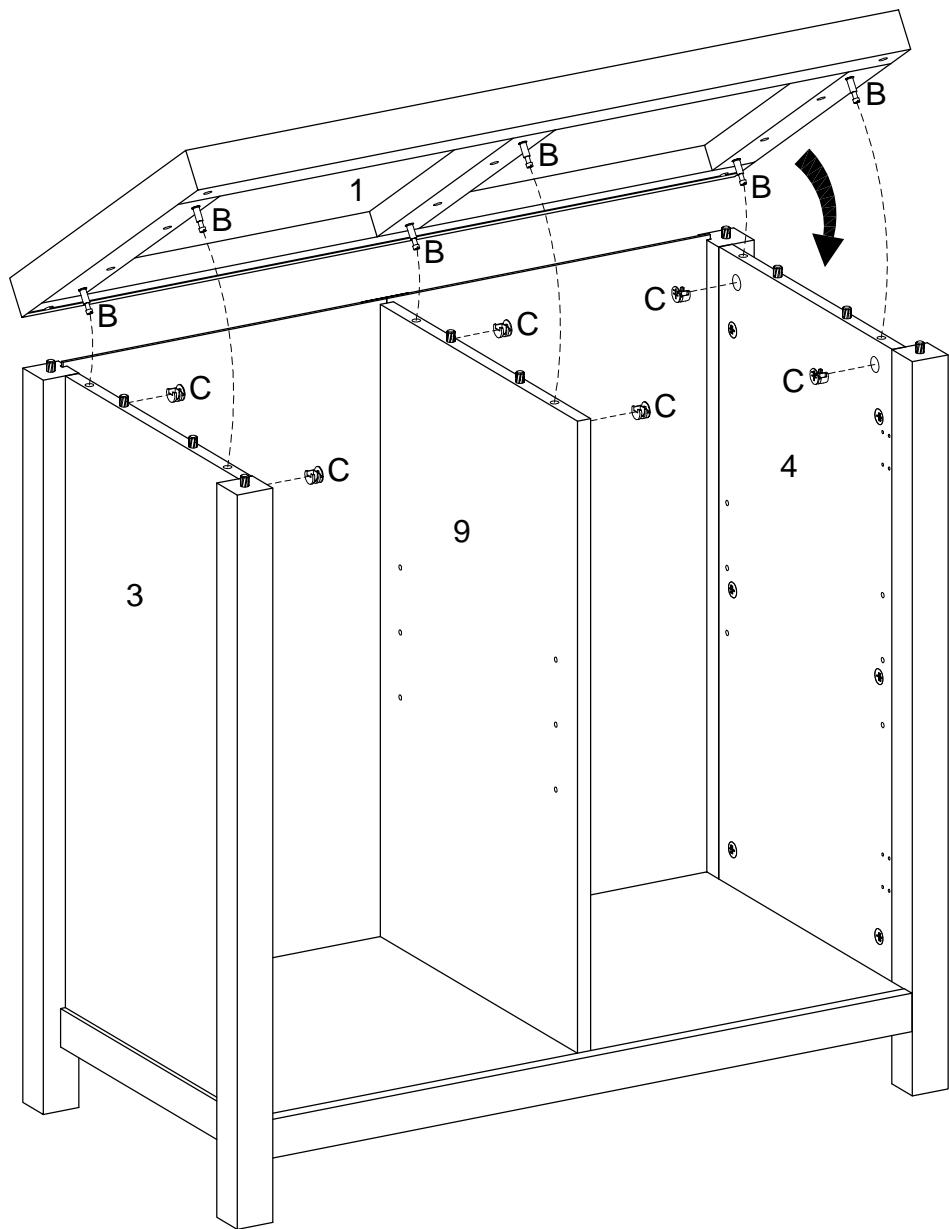


Step 12

Evenly space the plastic wedges (G) along the back panel. Secure each wedge with an (H) screw.

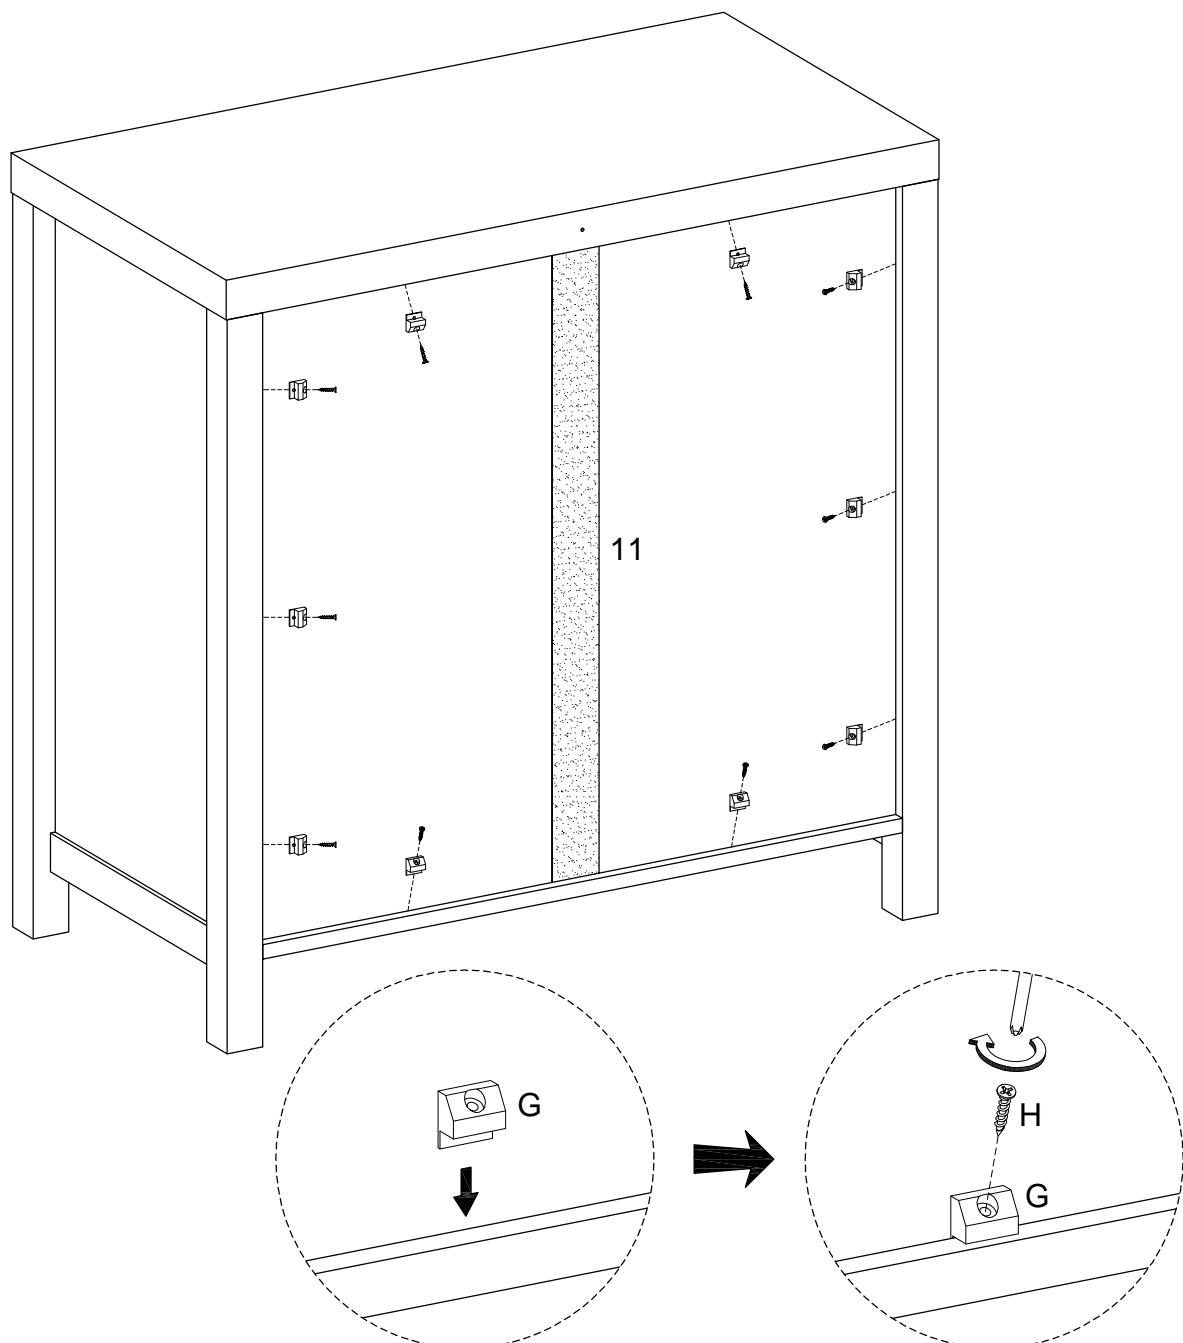


Step 13

Apply the provided stickers (D) over each cam lock for a neat and finished appearance.

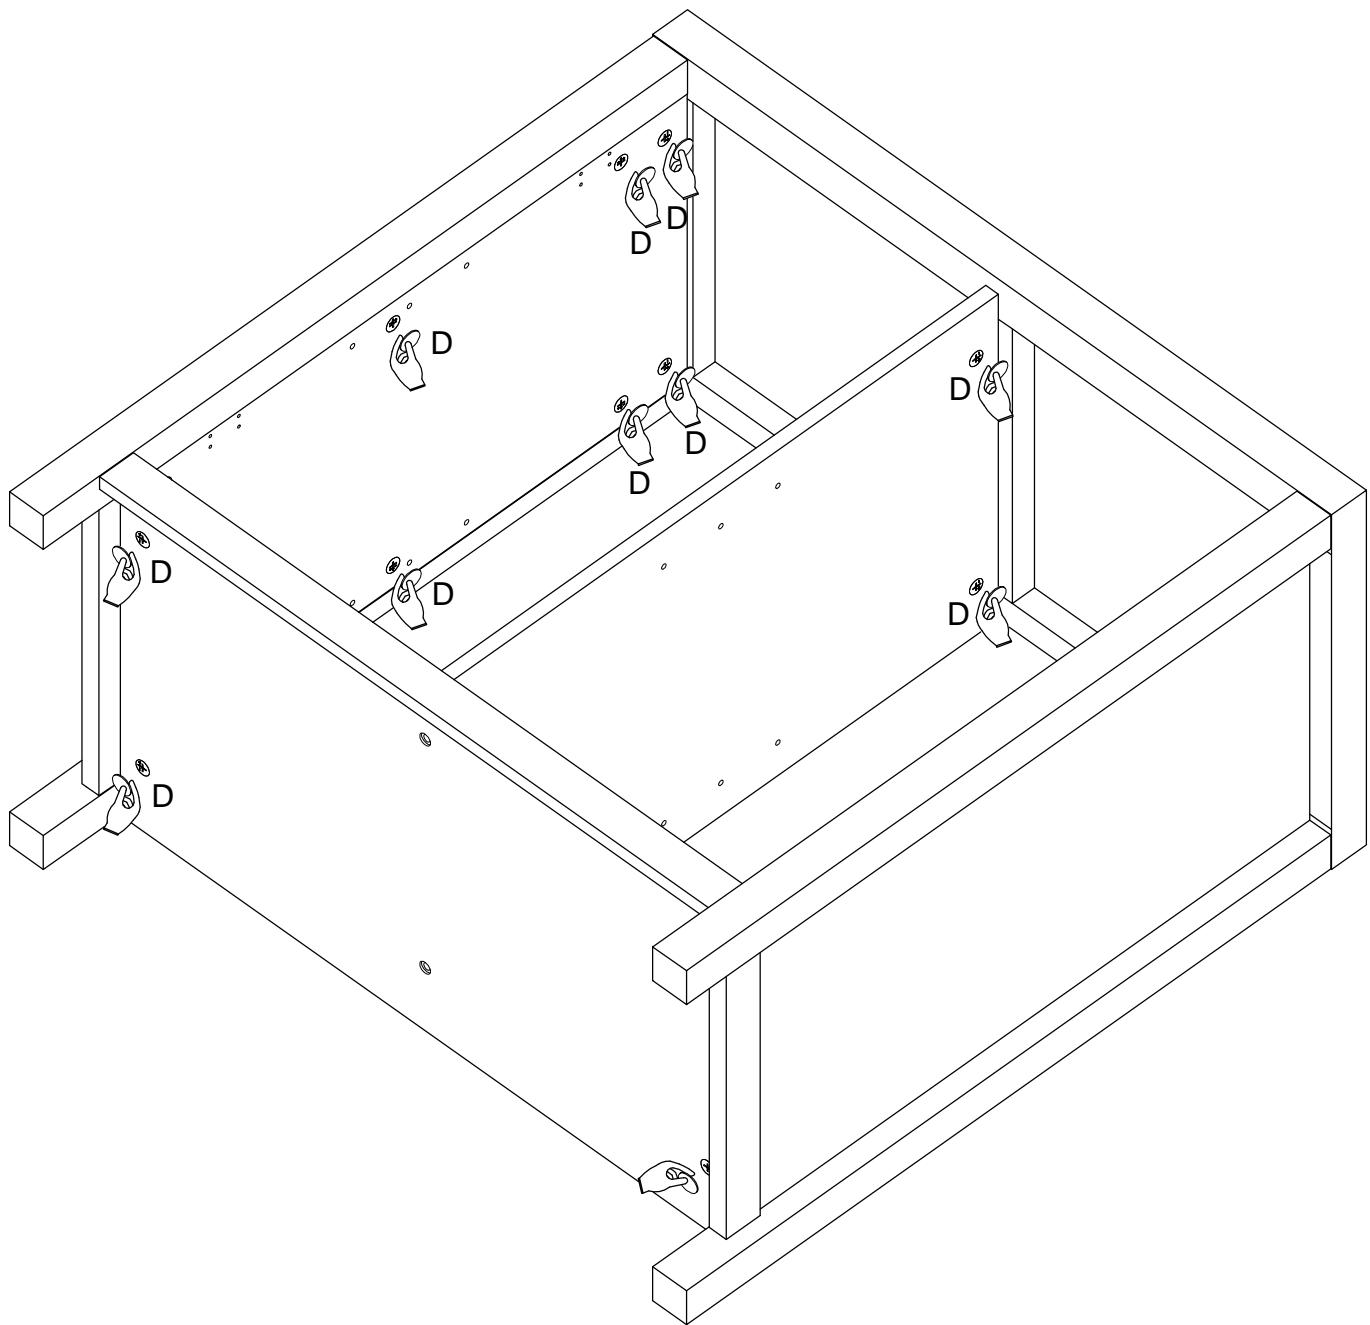


Step 14

Insert the shelf support pins (J), then slide in the Adjustable Shelves (10).

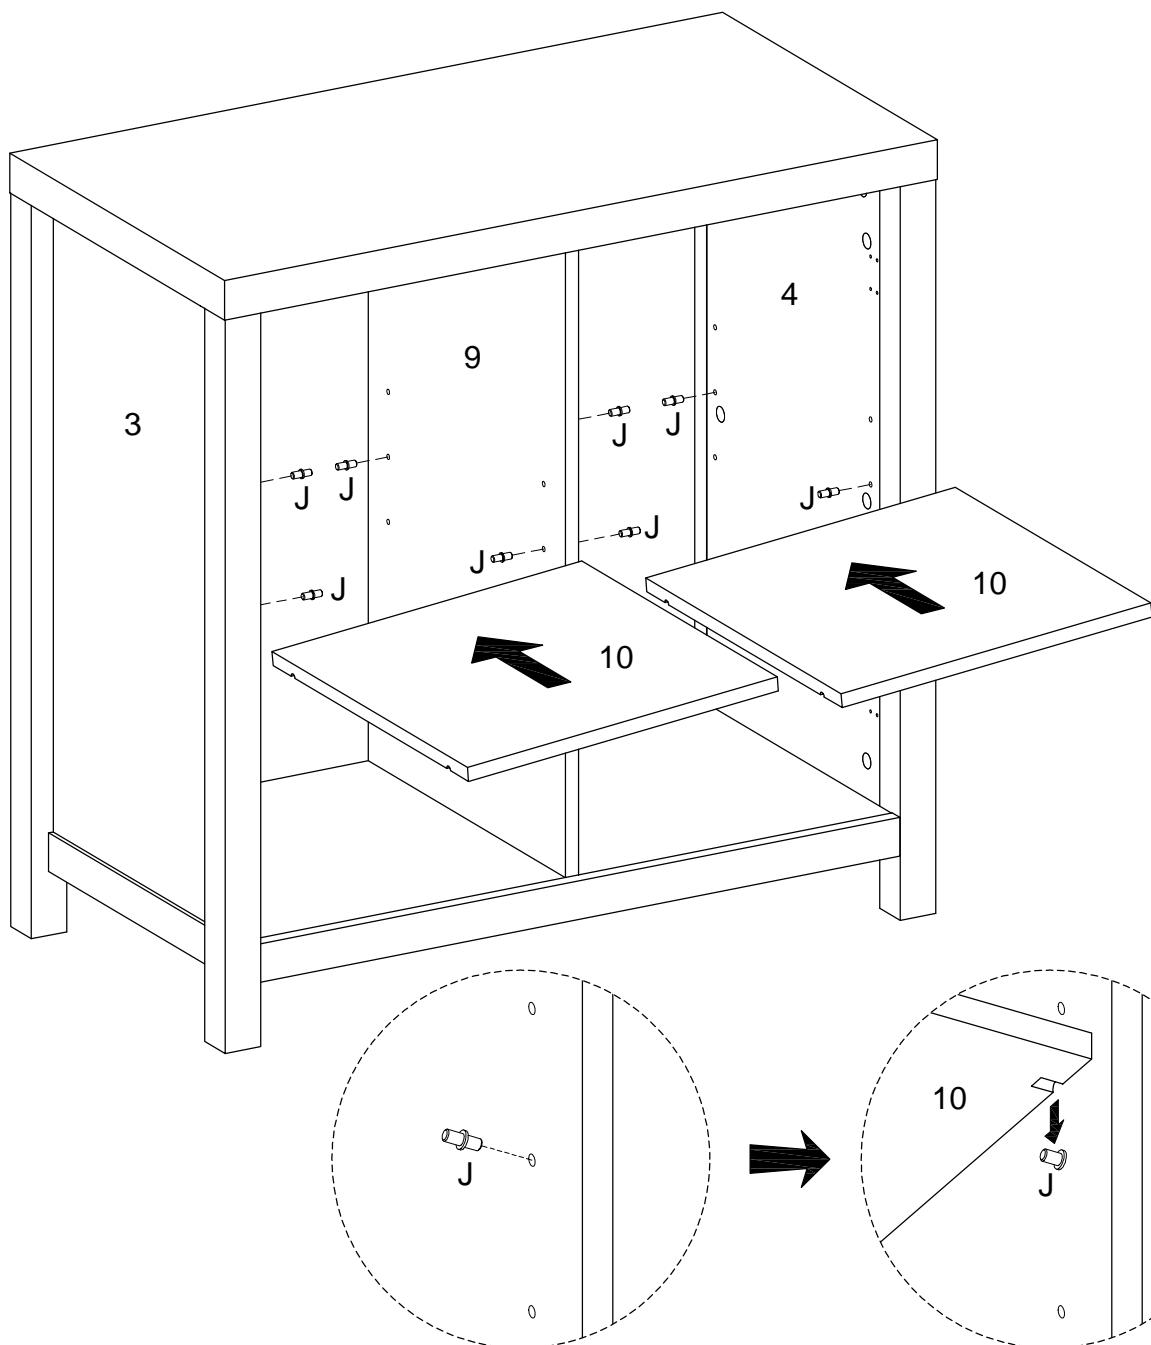


Step 15

Now, secure the hinges (K) to both the Left Door (13) and the Right Door (14) using the (L) screws. Make sure to also attach the handle (M) using the (N) bolt.

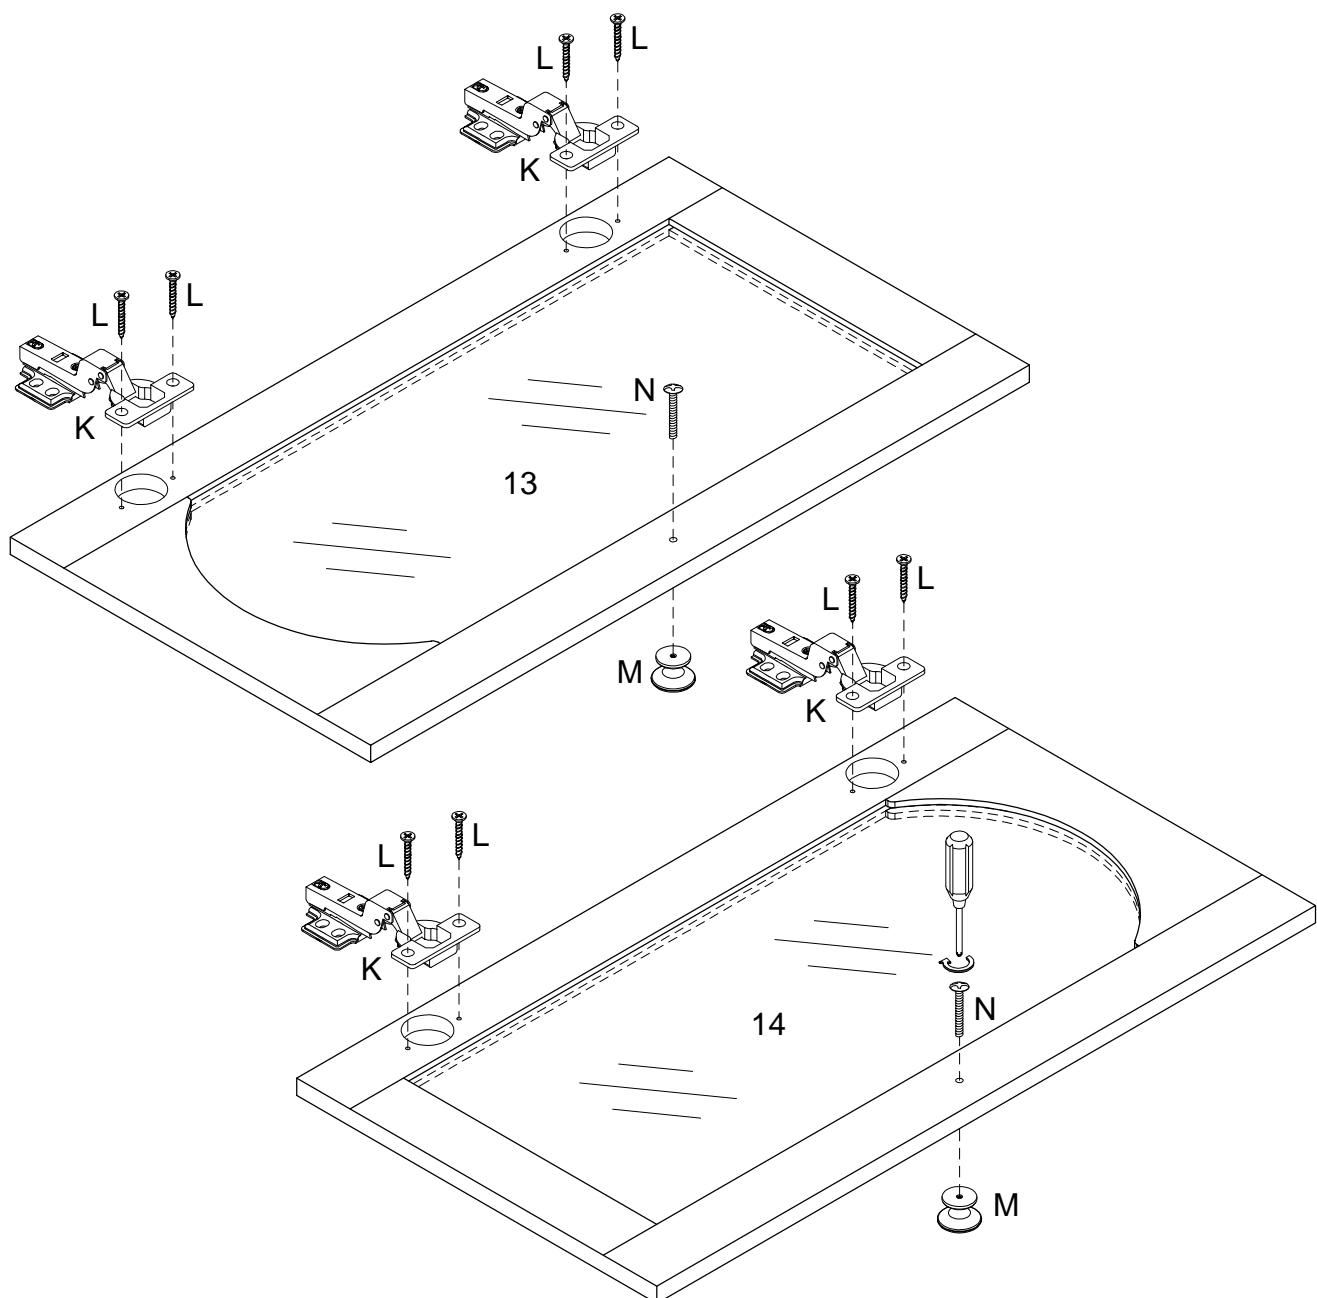


Step 16


Secure the Left Door (13) to the frame using the (L) screws and a screwdriver.

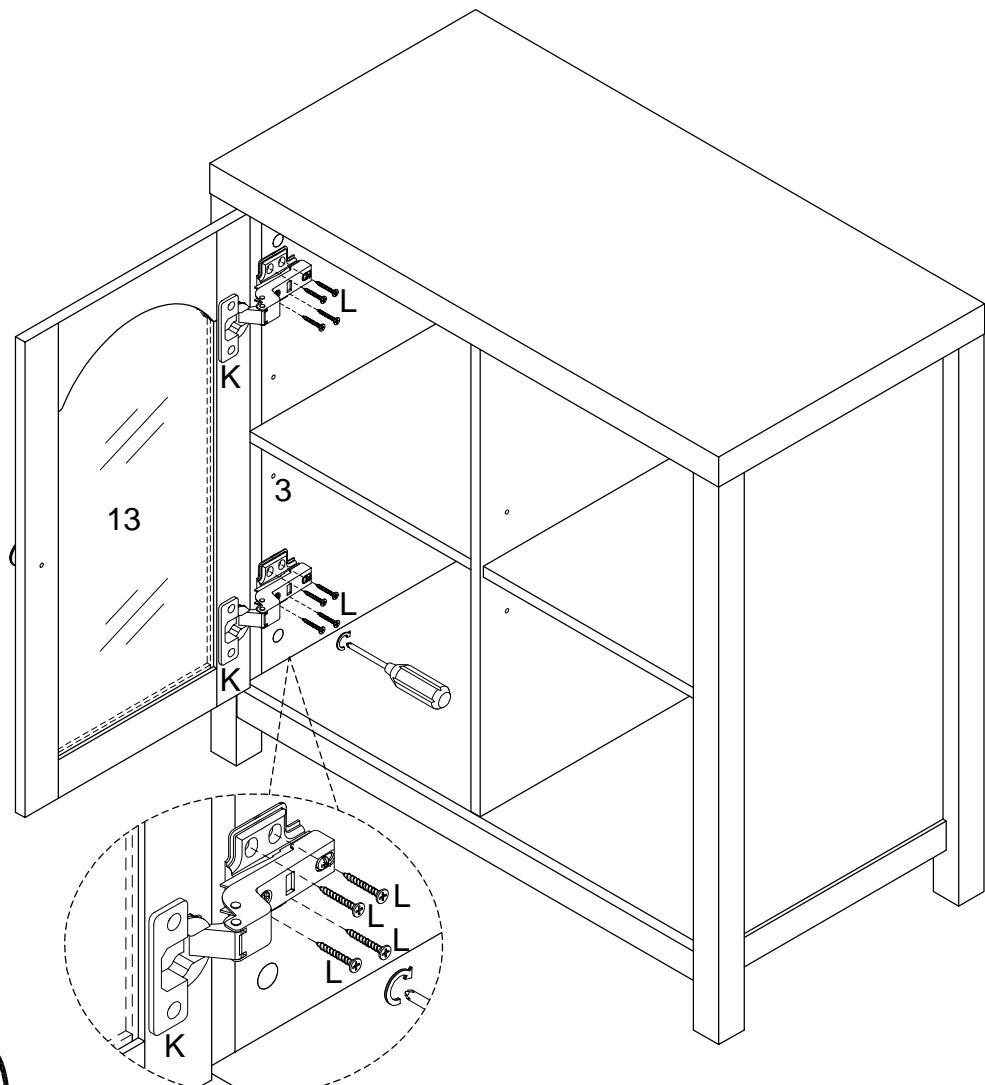


Adjusting The Cabinet Doors

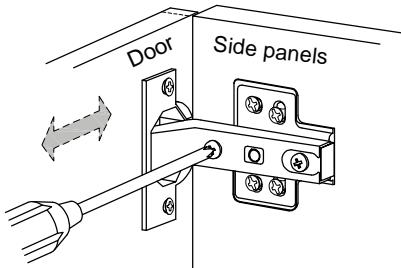

Adjust horizontal width
with this screw.

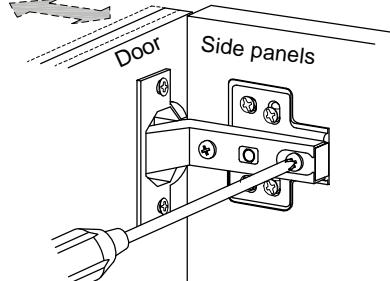


Adjust depth position
by loosening the hinge arm
mounting screw.

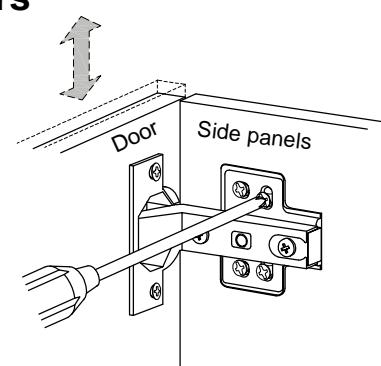

Adjust vertical height
via the screws in the
mounting plate.


Step 17

Now, repeat that for the other side! Secure the Right Door (14) to the frame using the (L) screws and a screwdriver.

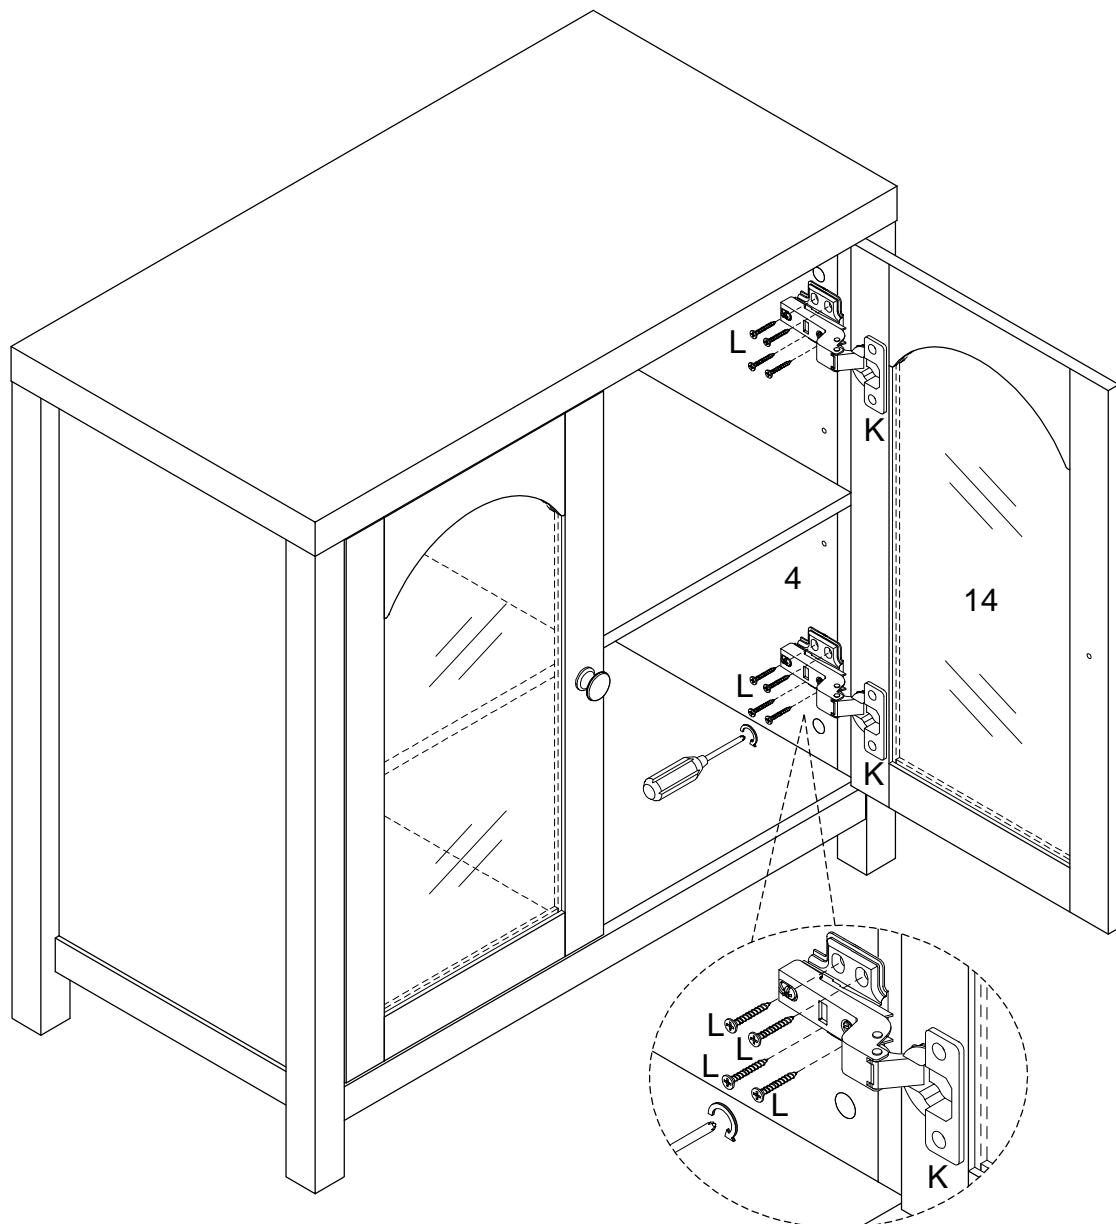



Step 18

Attach the plastic strap (R) to the back of the unit using the (Q) screw.

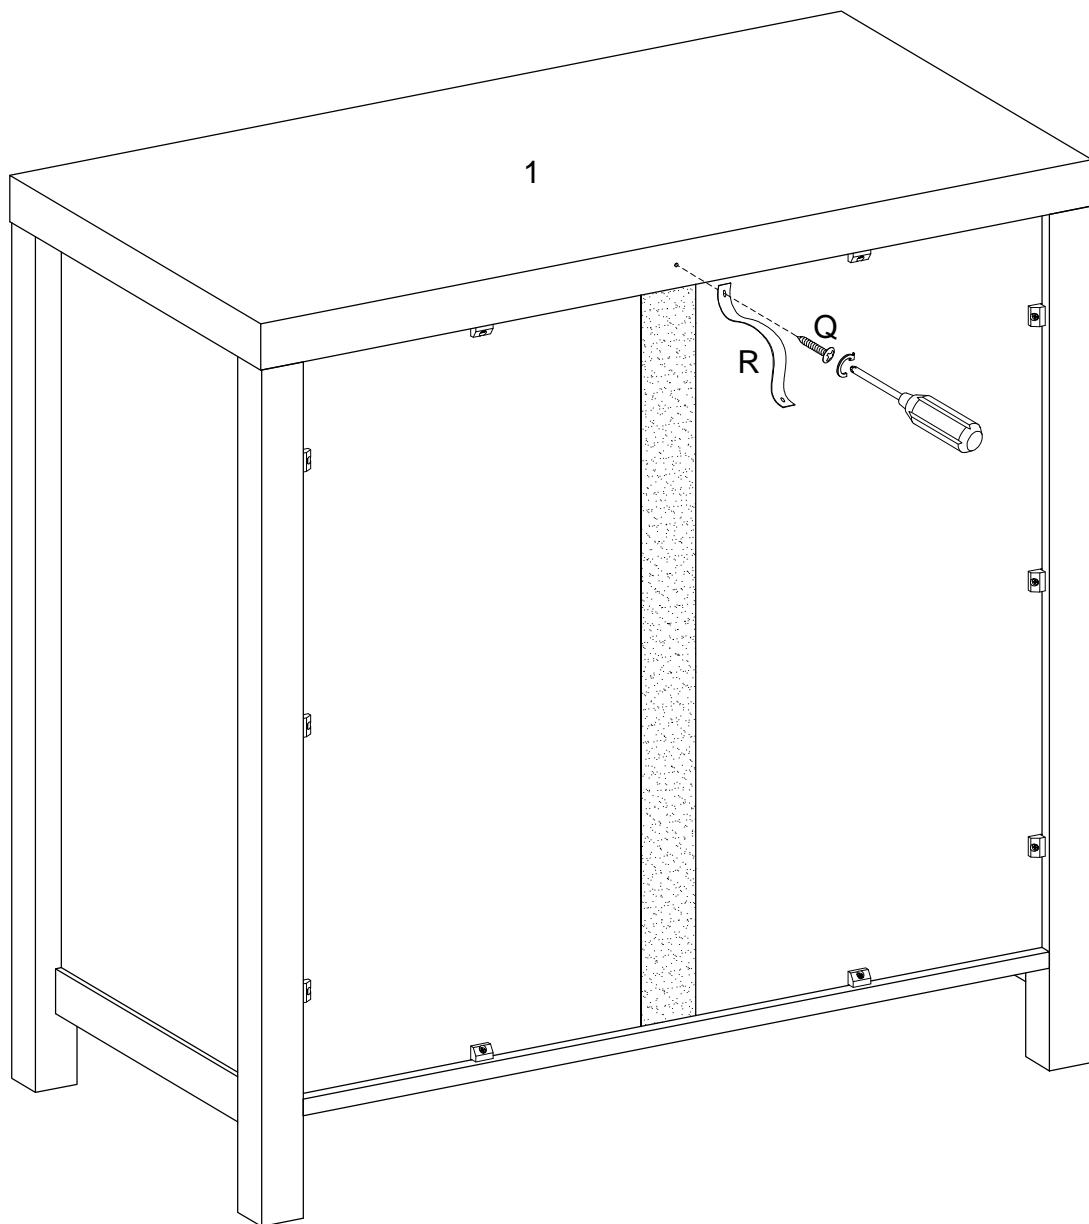

Step 19


Secure your piece to the wall using the other side of the plastic strap (R), the (P) screw, and the wall anchor (S).

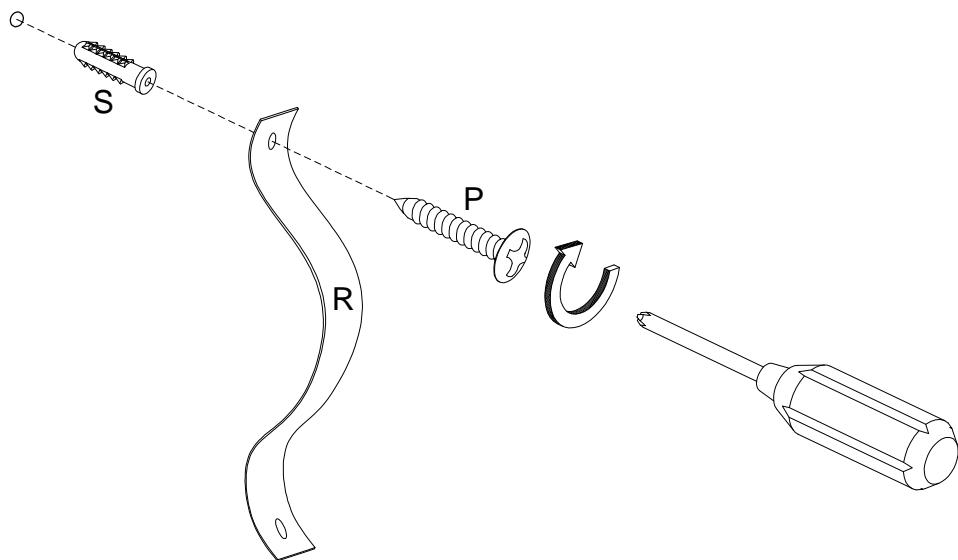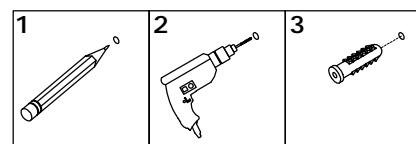

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

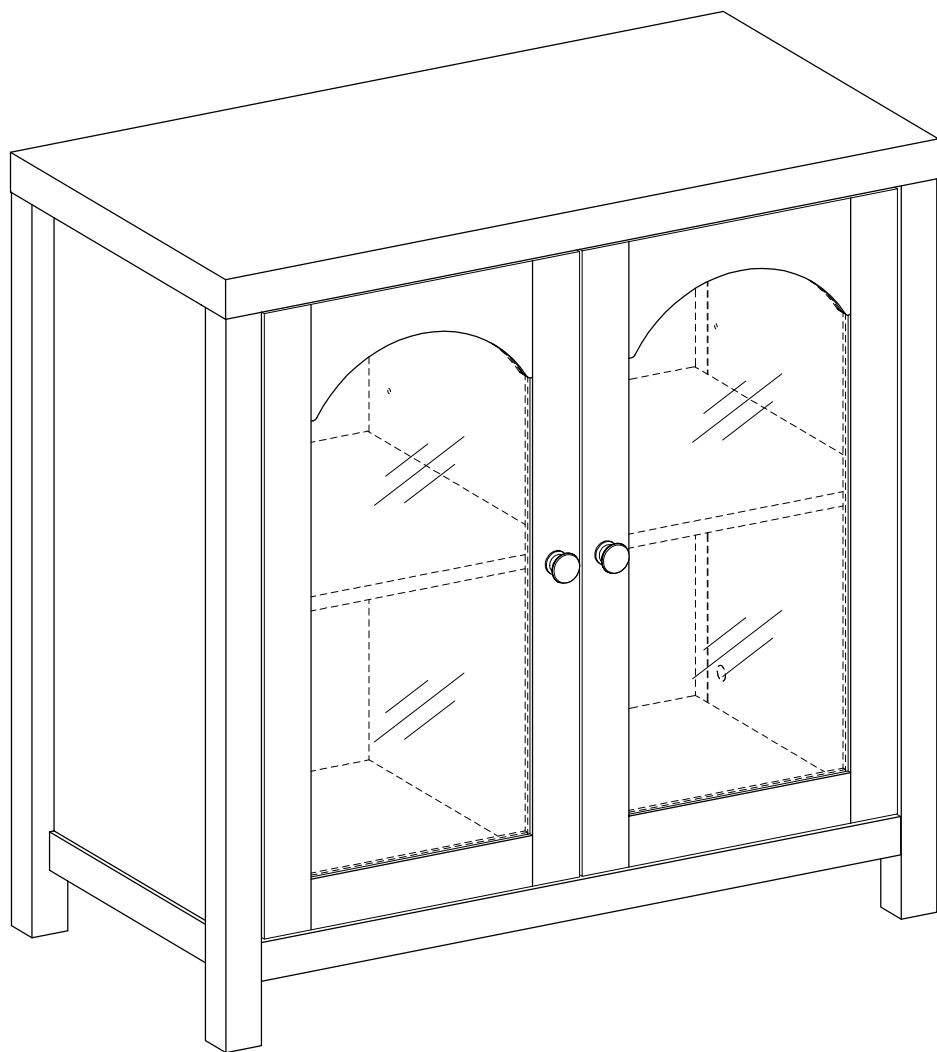

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at

walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

