



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223161Q(B1-B4)
Queen Bed

ITEM: 223161Q(B1-B4)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

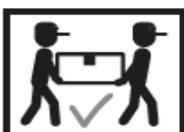


ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

 A HEADBOARD PANEL



1PC

B HEADBOARD SUPPORT



2PCS

C ADAPTER



1PC

B2 (BOX 2)

D LEFT WING



1PC

 
E RIGHT WING



1PC

B3 (BOX 3)

F FOOTBOARD PANEL



1PC

B4 (BOX 4)

G FOOTBOARD LEG



2PCS

H BED SLAT



5PCS

I BED SLAT SUPPORT WITH LEVELER



5PCS

J LEFT BED RAIL



1PC

K RIGHT BED RAIL



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS**ASSEMBLY TIPS :**

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

**WARNING !**

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION**Z-B4 (BOX 4) - HARDWARE PACK IS LOCATED IN 223161Q(B4)**

1	ALLEN WRENCH (Φ4 X 95mm- ZINC)		1PC
2	SHORT BOLT (Φ6 X 30mm - BLK)		4PCS
3	MEDIUM BOLT (Φ6 X 45mm - BLK)		17PCS
4	LONG BOLT (Φ6 X 60mm - BLK)		6PCS
5	FLAT HEAD SCREW (Φ4 X 32mm - BLK)		10PCS
6	LOCK WASHER (Φ6 - BLK)		22PCS
7	FLAT WASHER (Φ7 X 19mm X 2.0 - BLK)		22PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223161Q(B1-B4)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 1

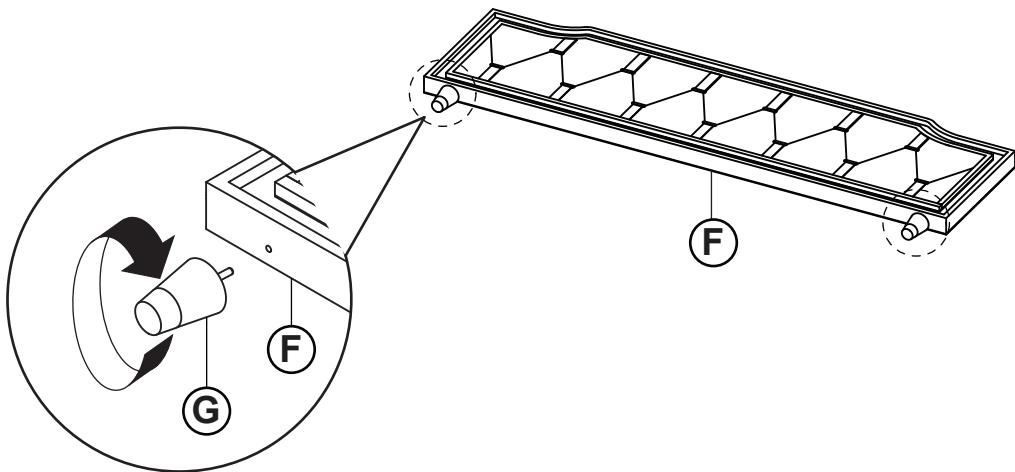


STEP 2

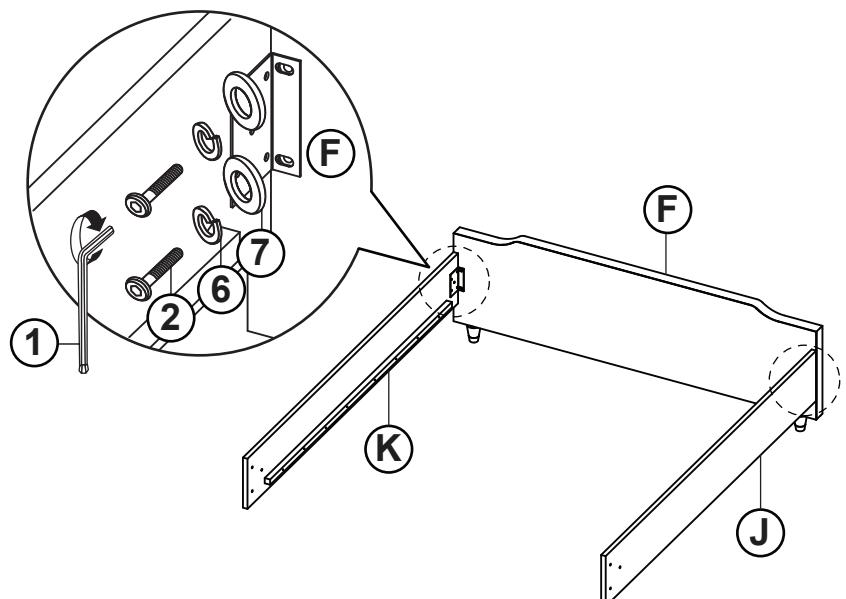

STEP 3

Hand tighten all the bolts

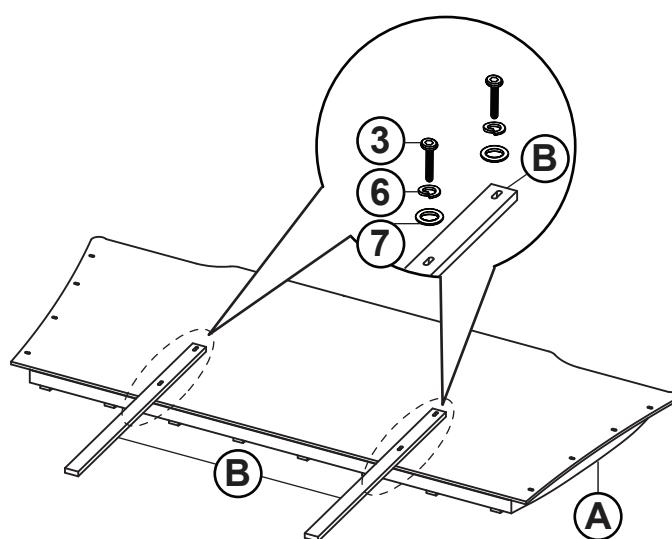


ITEM: 223161Q(B1-B4)

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


STEP 4

Hand tighten all the bolts

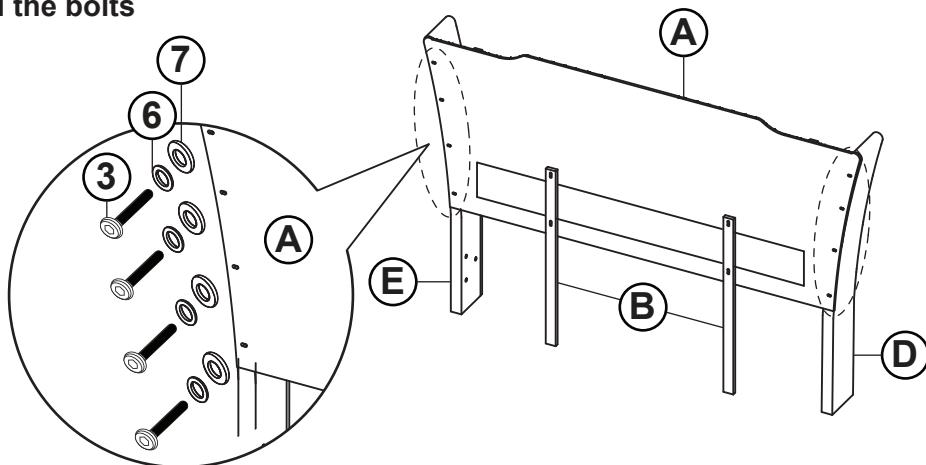


STEP 5

Fully tighten all the bolts
using Allen Wrench (1)
at Step 3,4 & 5

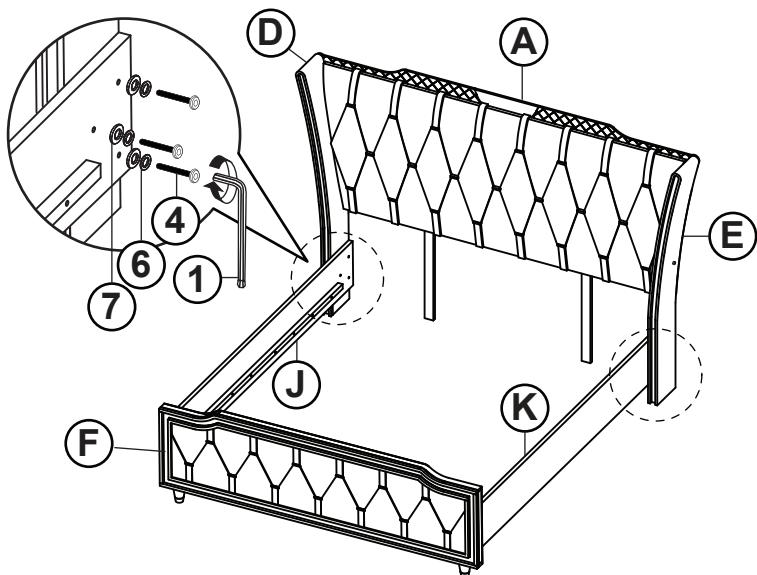

STEP 6

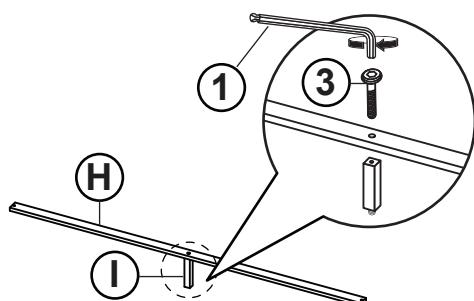


ITEM: 223161Q(B1-B4)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS



STEP 7

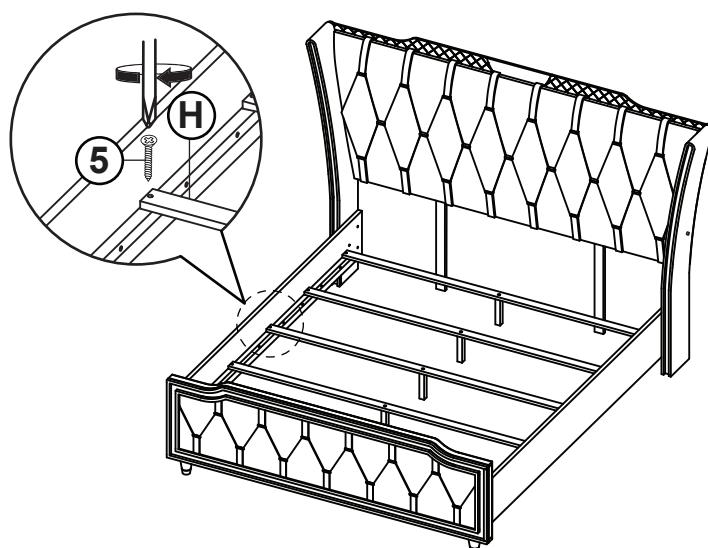

STEP 8

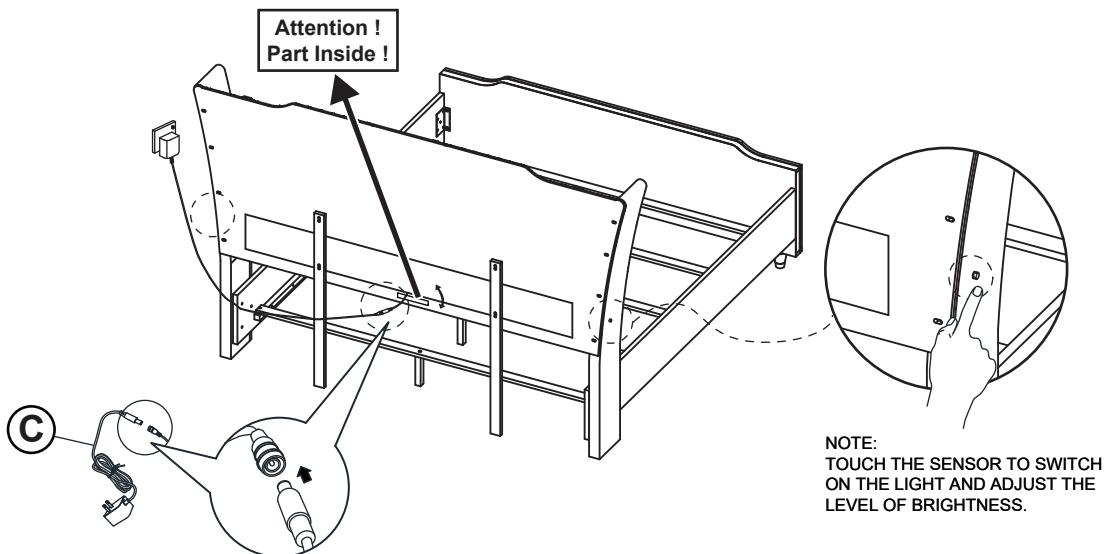


STEP 9 COMPLETE

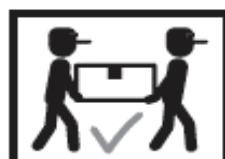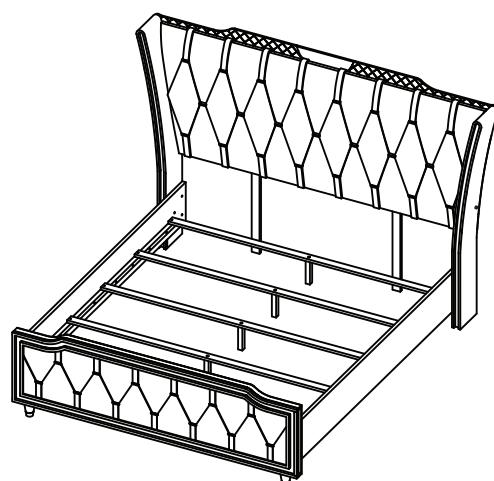

ITEM: 223161Q(B1-B4)

COASTER
FINE FURNITURE

Inner Size : 61.00"W x 80.75"D

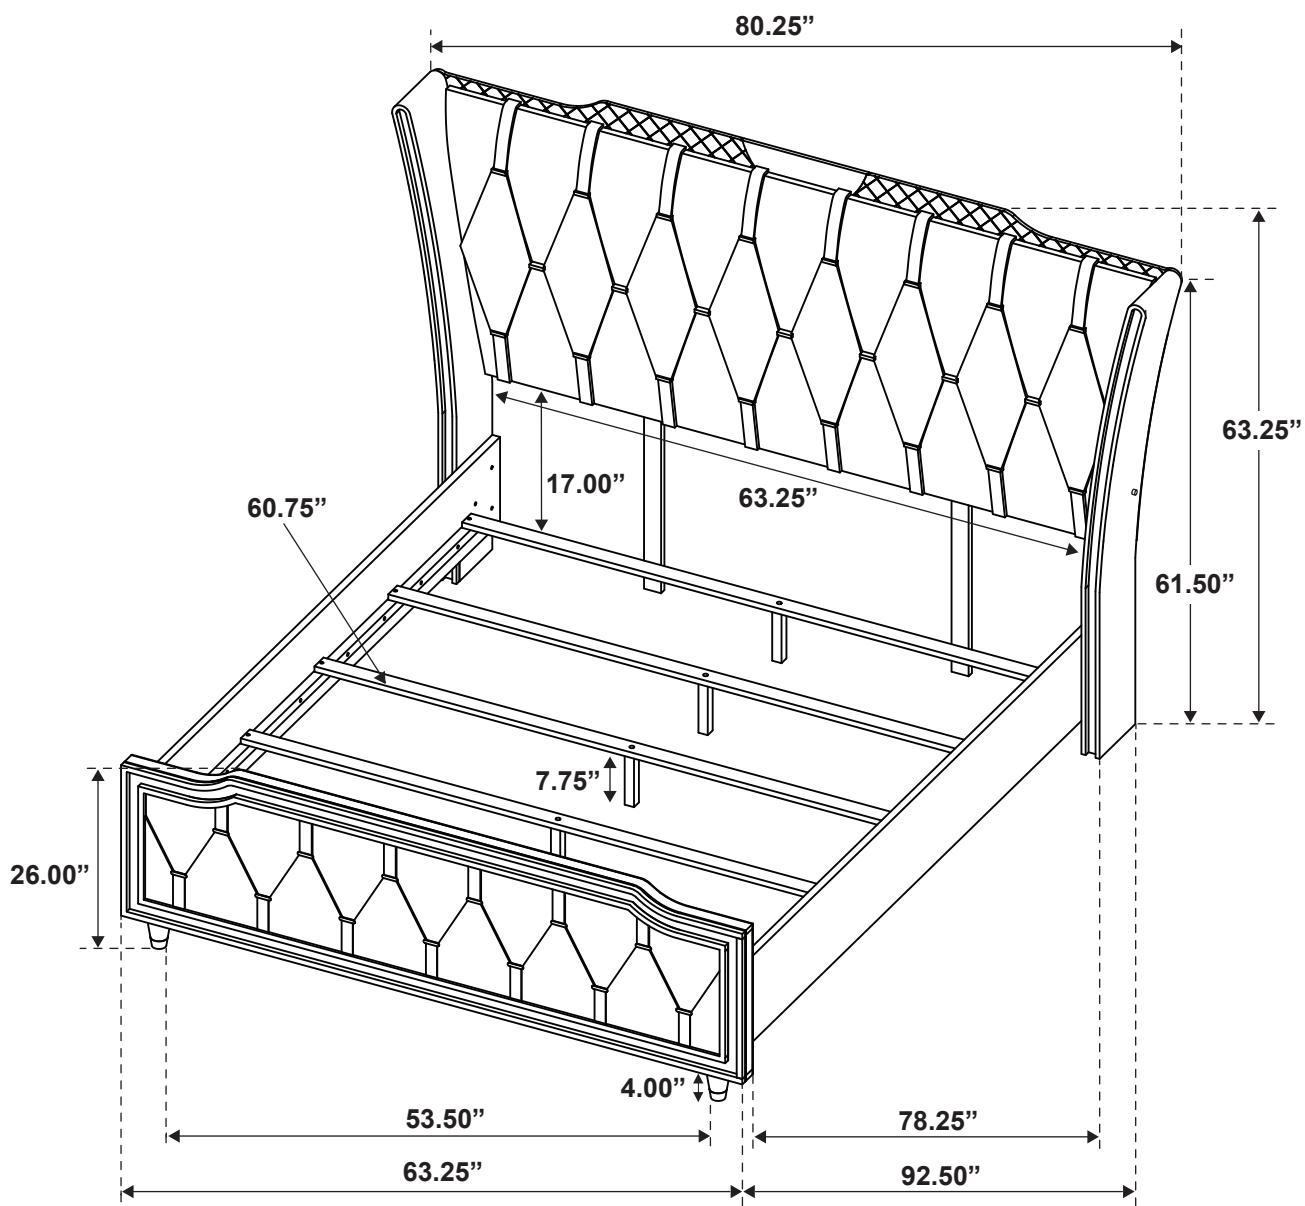

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223162
Nightstand

ITEM: 223162



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

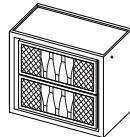

1PC

B LEG



4PCS

C GLASS TOP



1PC

D ADAPTER



1PC

E USB ADAPTER



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 223162

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


STEP 1

Lift the Glass-Top (C) gently and carefully place it at safe area before assembly begin.

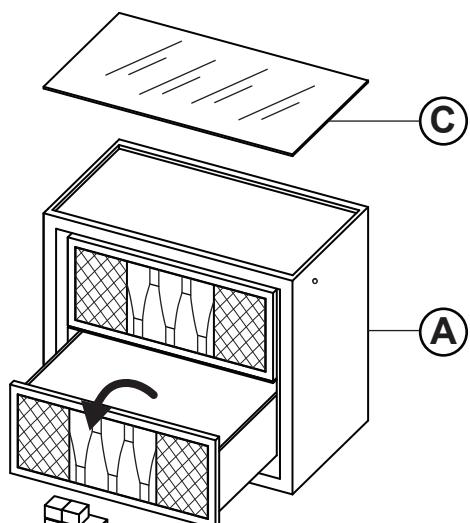


Leg (B)'s Box,
LED Adapter (D)'s Box and
USB Adapter (E)'s Box

STEP 2

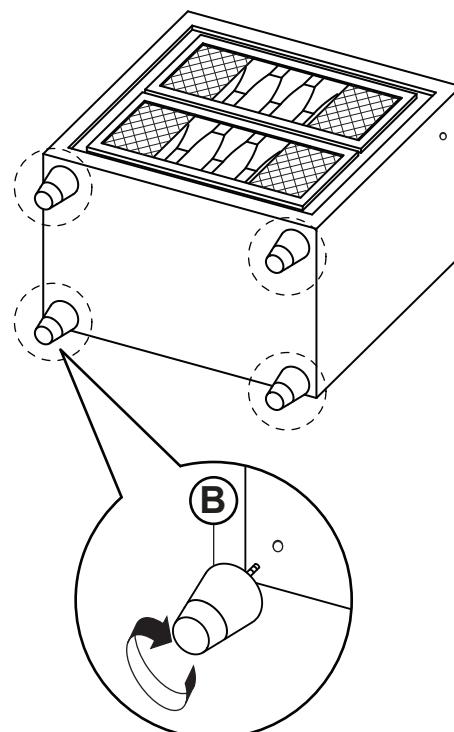

STEP 3

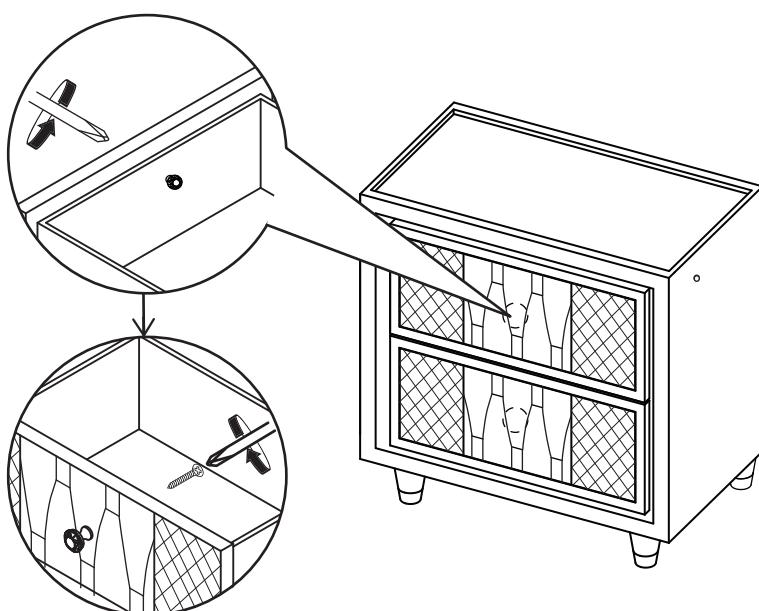


ITEM: 223162

COASTER
FINE FURNITURE


ASSEMBLY INSTRUCTIONS

STEP 4

Place the Glass-Top (C) to the Top Surface of Nightstand (A).

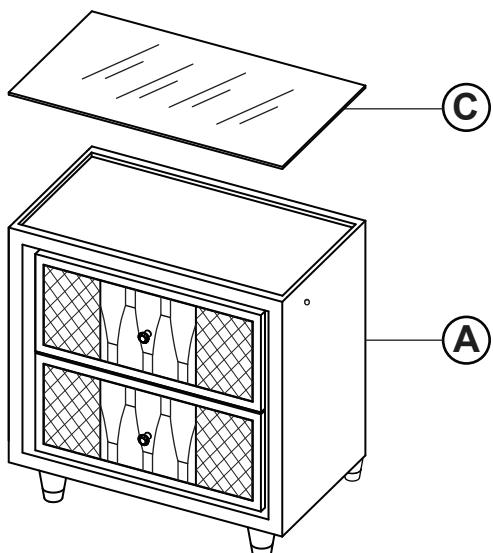


STEP 5


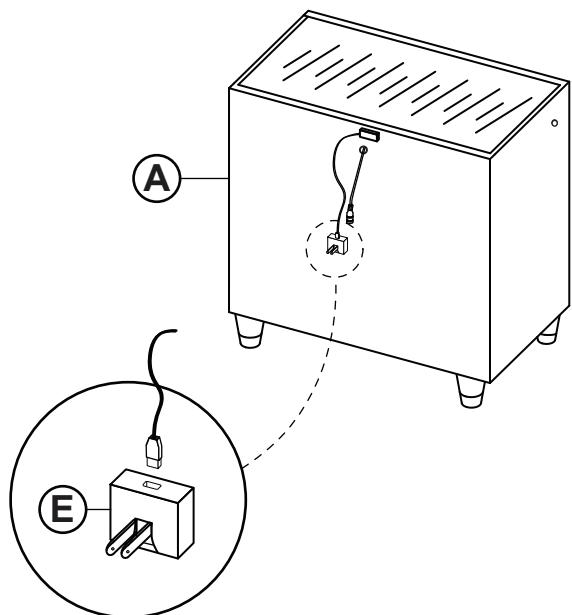


STEP 6

NOTE:
Touch the Sensor to
Switch on the Light and
Adjust the Level of Brightness.

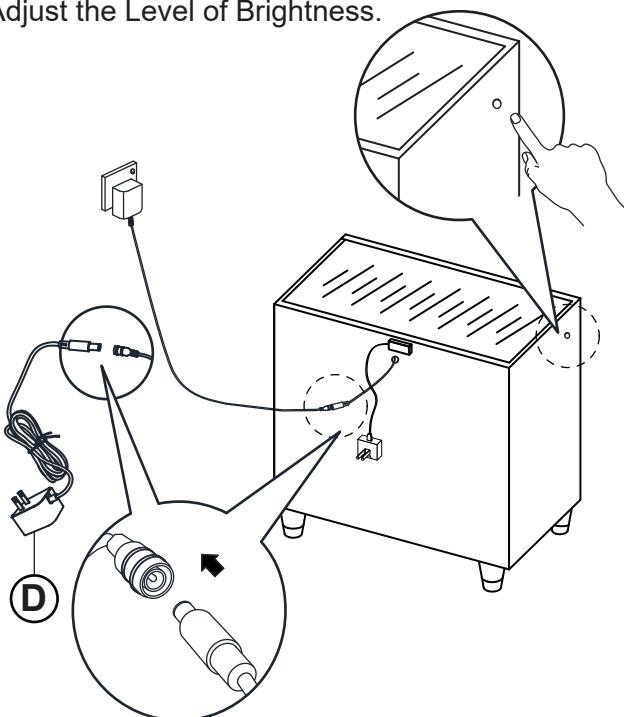

STEP 7 COMPLETE

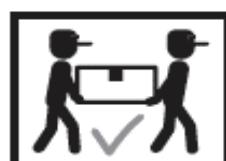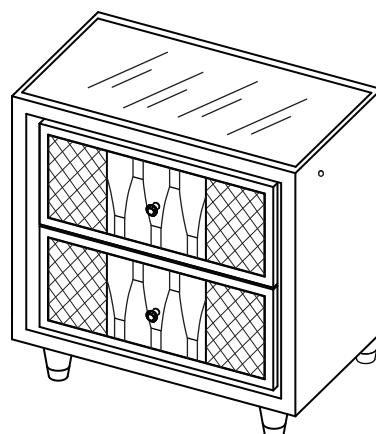

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

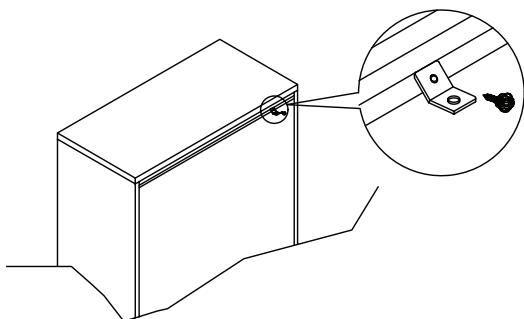



STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

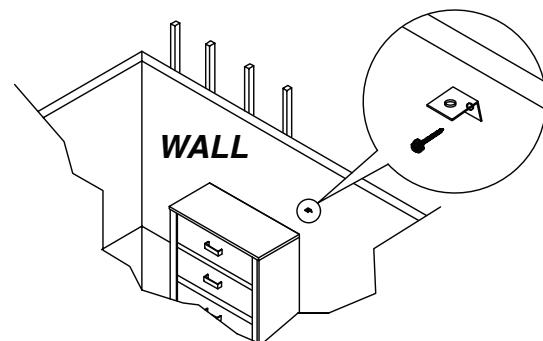

STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

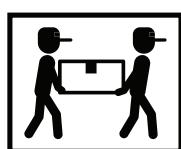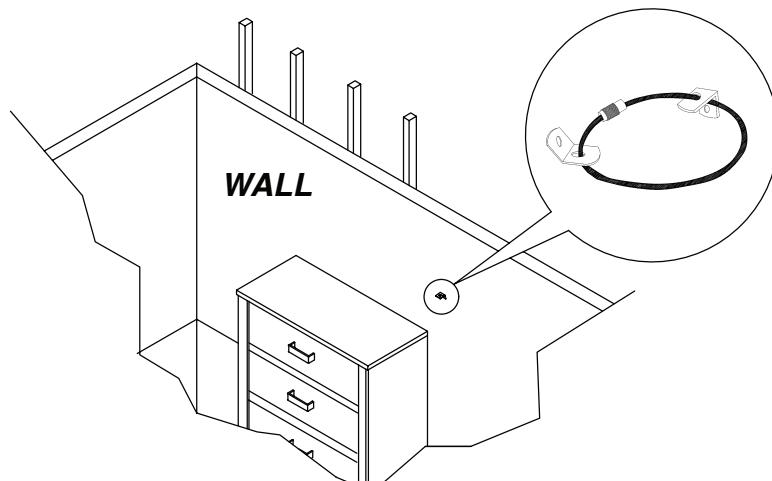

ITEM: 223162

COASTER
FINE FURNITURE

Inner Size of Drawer : 21.50"W x 12.50"D x 5.25"H x 0.25"T

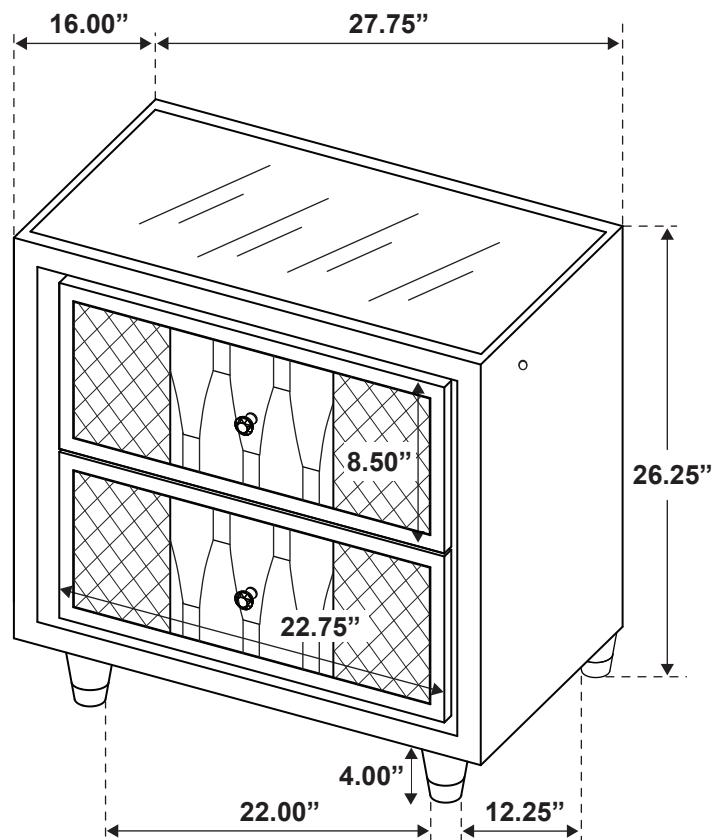

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223163FB
Dresser

ITEM: 223163FB



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A DRESSER

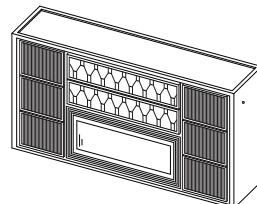


1PC

B LEG



4PCS

 C GLASS TOP



1PC

D CENTER LEG SUPPORT WITH LEVELER



1PC

E ADAPTER



1PC

F REMOTE CONTROL






1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS**STEP 1**

Lift the Glass-Top (C) gently and carefully place it at safe area before assembly begin.

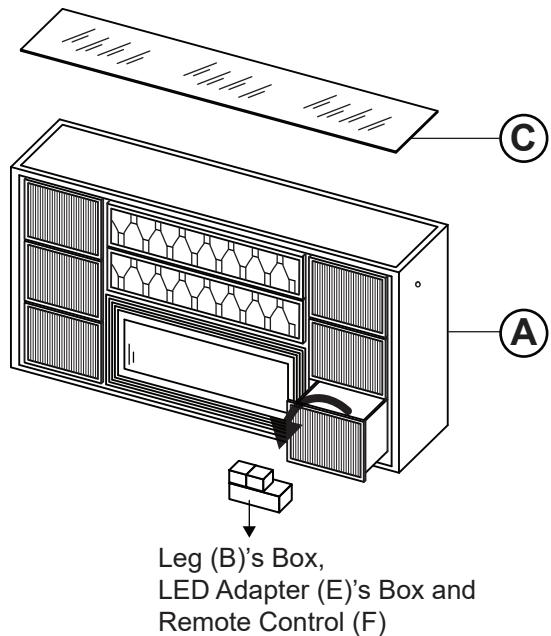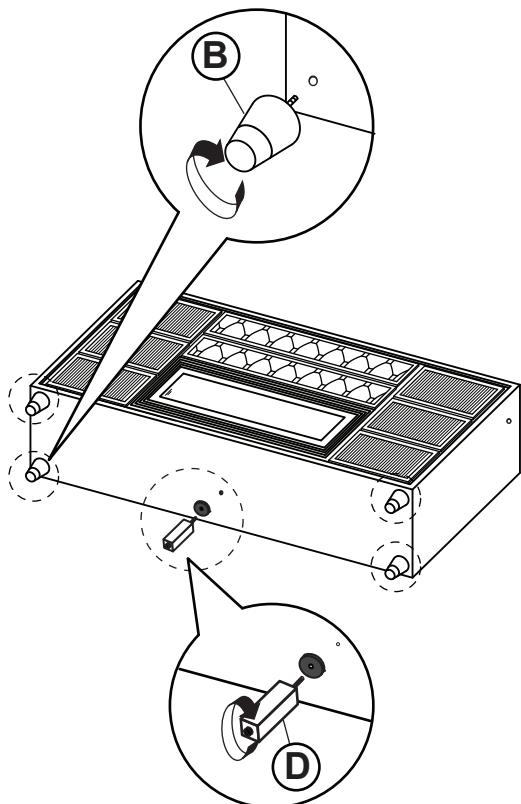
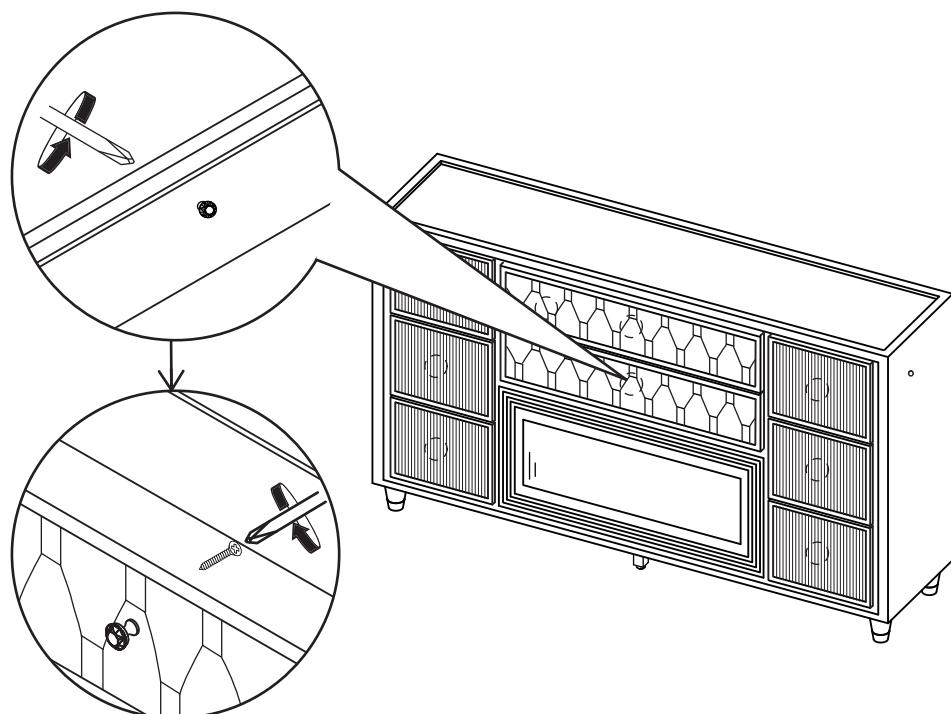
**STEP 2****STEP 3**

ASSEMBLY INSTRUCTIONS**STEP 4**

Place the Glass Top (C) to the top surface of Dresser (A).

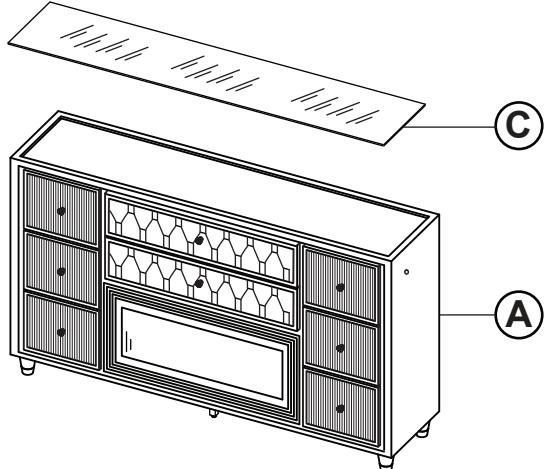**STEP 5**

NOTE:
Touch the Sensor to
Switch on the Light and
Adjust the Level of Brightness.

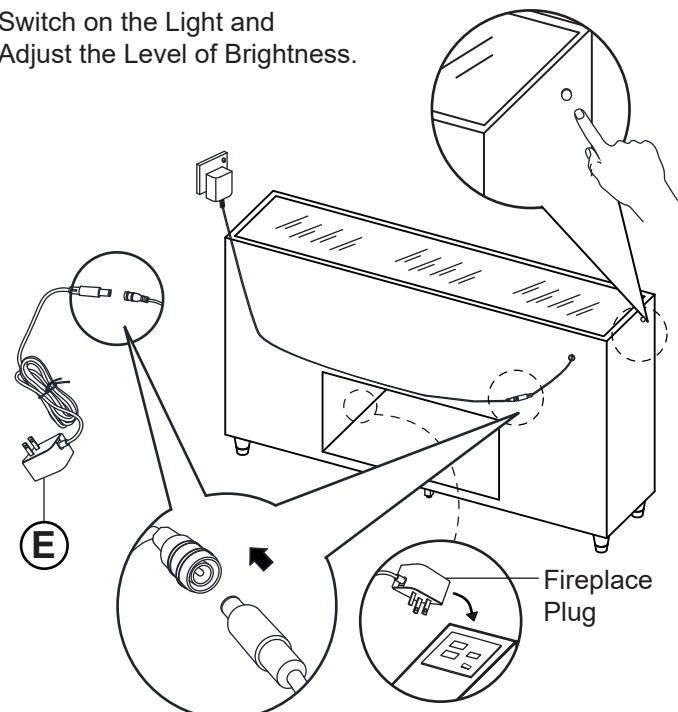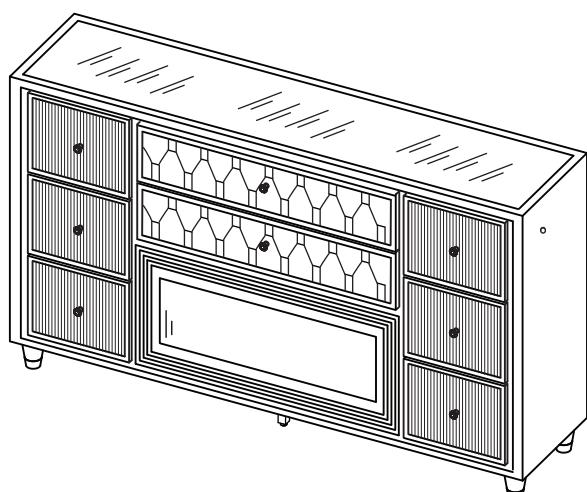**STEP 6**
COMPLETE

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT


WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

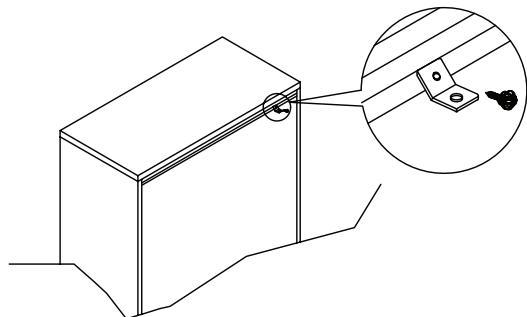



STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

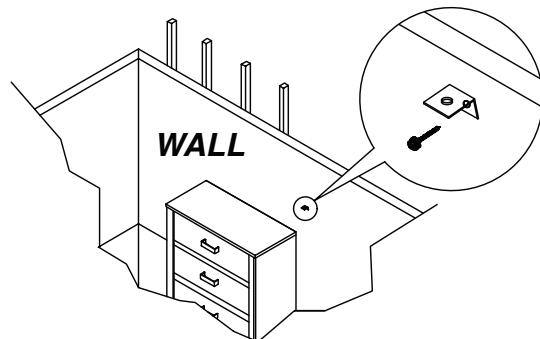

STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

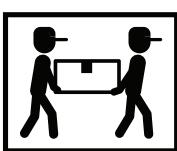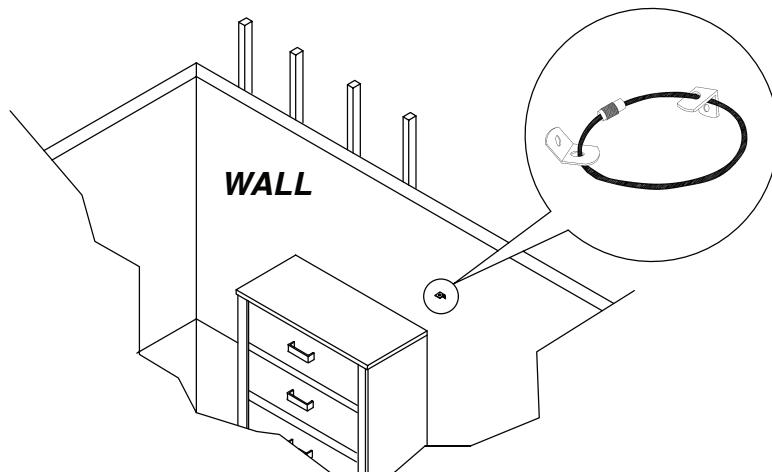

ITEM: 223163FB

The logo for Coaster Fine Furniture. It features the word "COASTER" in a bold, red, sans-serif font, with a registered trademark symbol (®) at the end. A thick red curved line arches over the top of the letters. Below "COASTER", the words "FINE FURNITURE" are written in a smaller, red, sans-serif font.

**Inner Size of Drawer A: 11.75"W x 12.50"D x 5.25"H x 0.25"TD
Inner Size of Drawer B: 31.75"W x 12.50"D x 4.25"H x 0.25"TD**

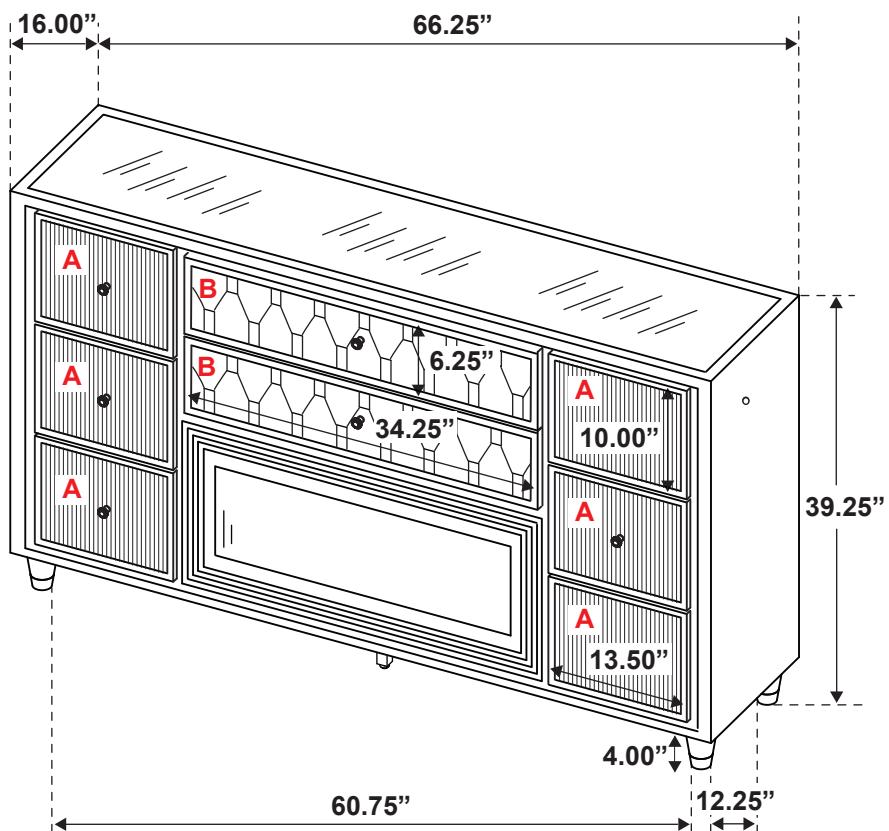

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223164
Mirror

ITEM: 223164

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

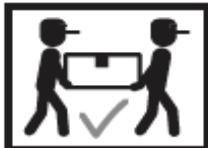

ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	MIRROR		1PC
B	MIRROR SUPPORT (PACKED WITH MIRROR)		2PCS
C	DRESSER *FROM BOX ITEM #223163FB or DRESSER *FROM BOX ITEM #223163		1PC
D	ADAPTER		1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (Φ4 X 95mm - ZINC)		1PC
2	BOLT (Φ6 X 35mm - BLK)		8PCS
3	LOCK WASHER (Φ6 - BLK)		8PCS
4	FLAT WASHER (Φ7 X 19mm X 2.0 - BLK)		8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223164

COASTER
FINE FURNITURE


ASSEMBLY INSTRUCTIONS

STEP 1

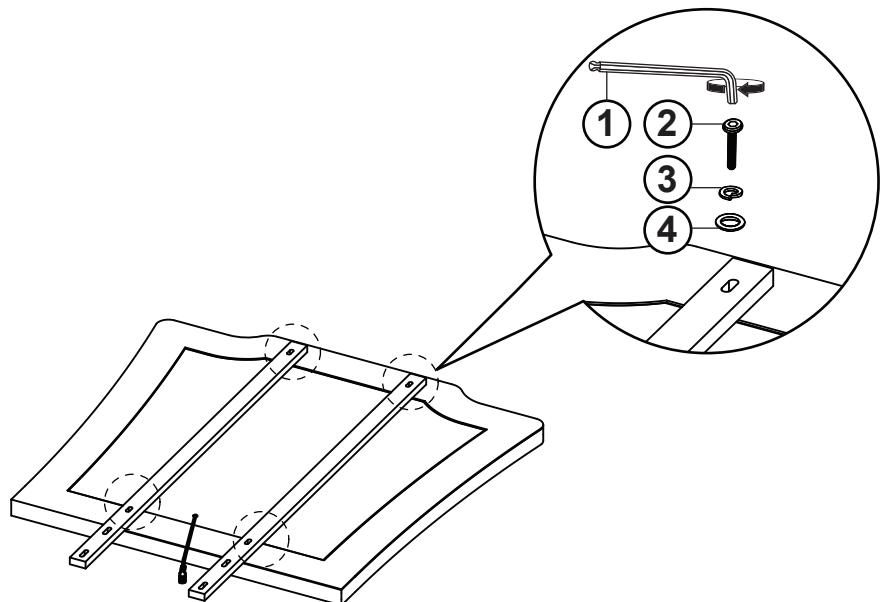

*Back View

STEP 2

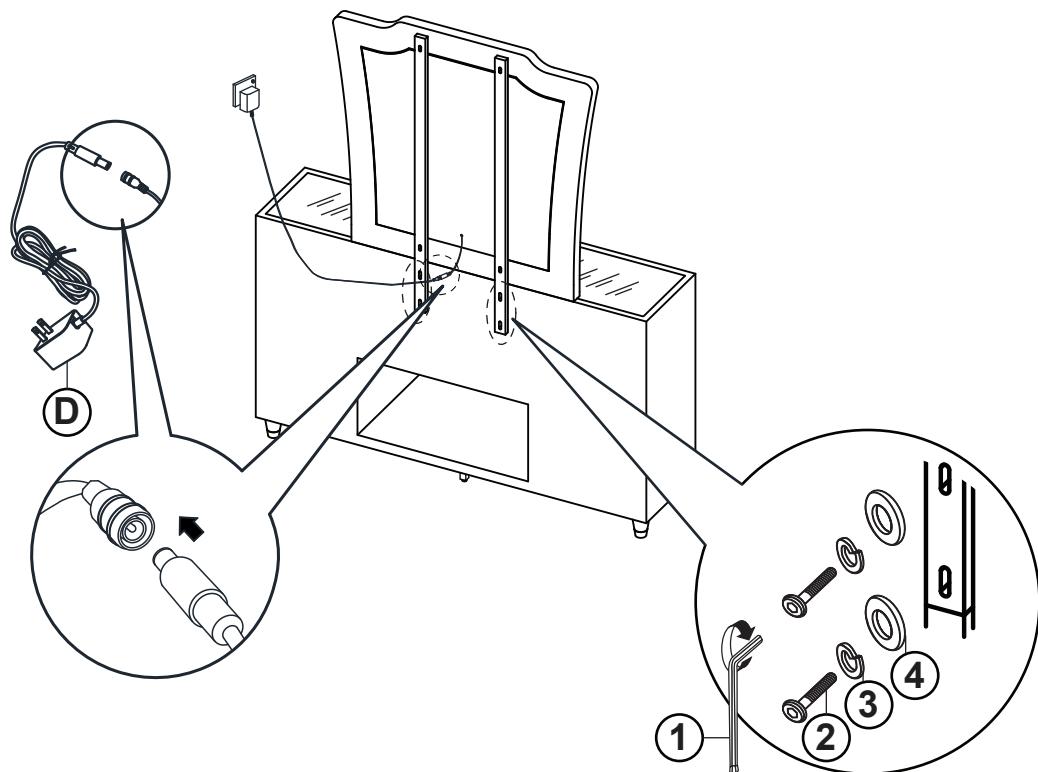


ITEM: 223164

COASTER
FINE FURNITURE



ASSEMBLY INSTRUCTIONS

STEP 3

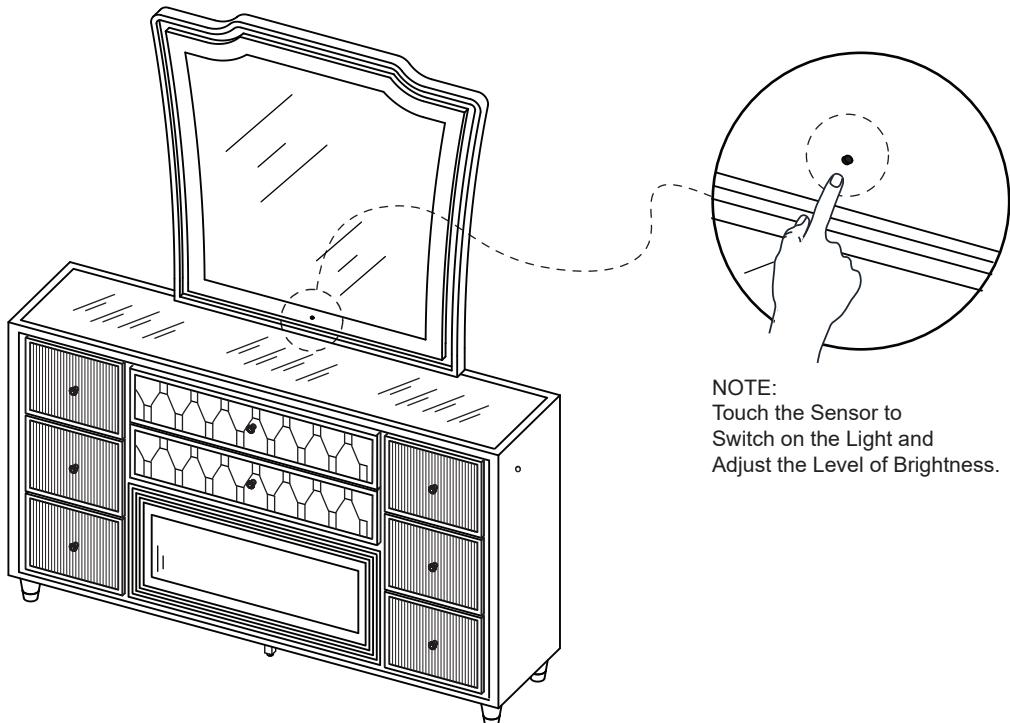


NOTE:
Touch the Sensor to
Switch on the Light and
Adjust the Level of Brightness.

STEP 4 COMPLETE

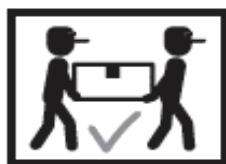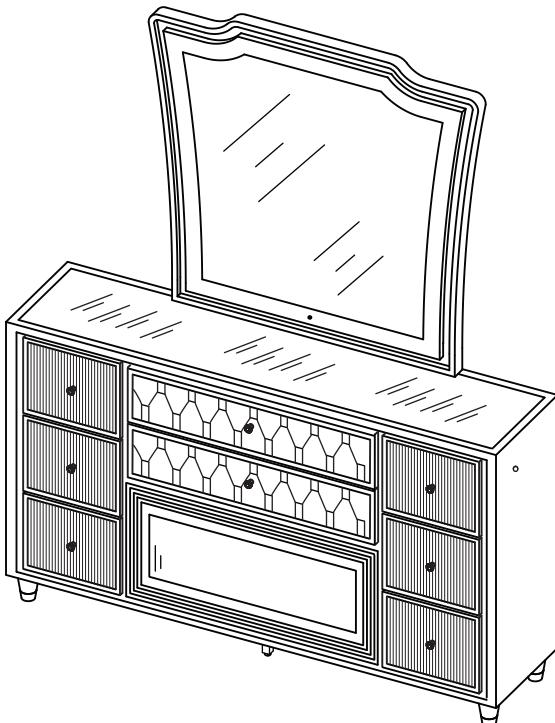

ITEM: 223164


COASTER
FINE FURNITURE

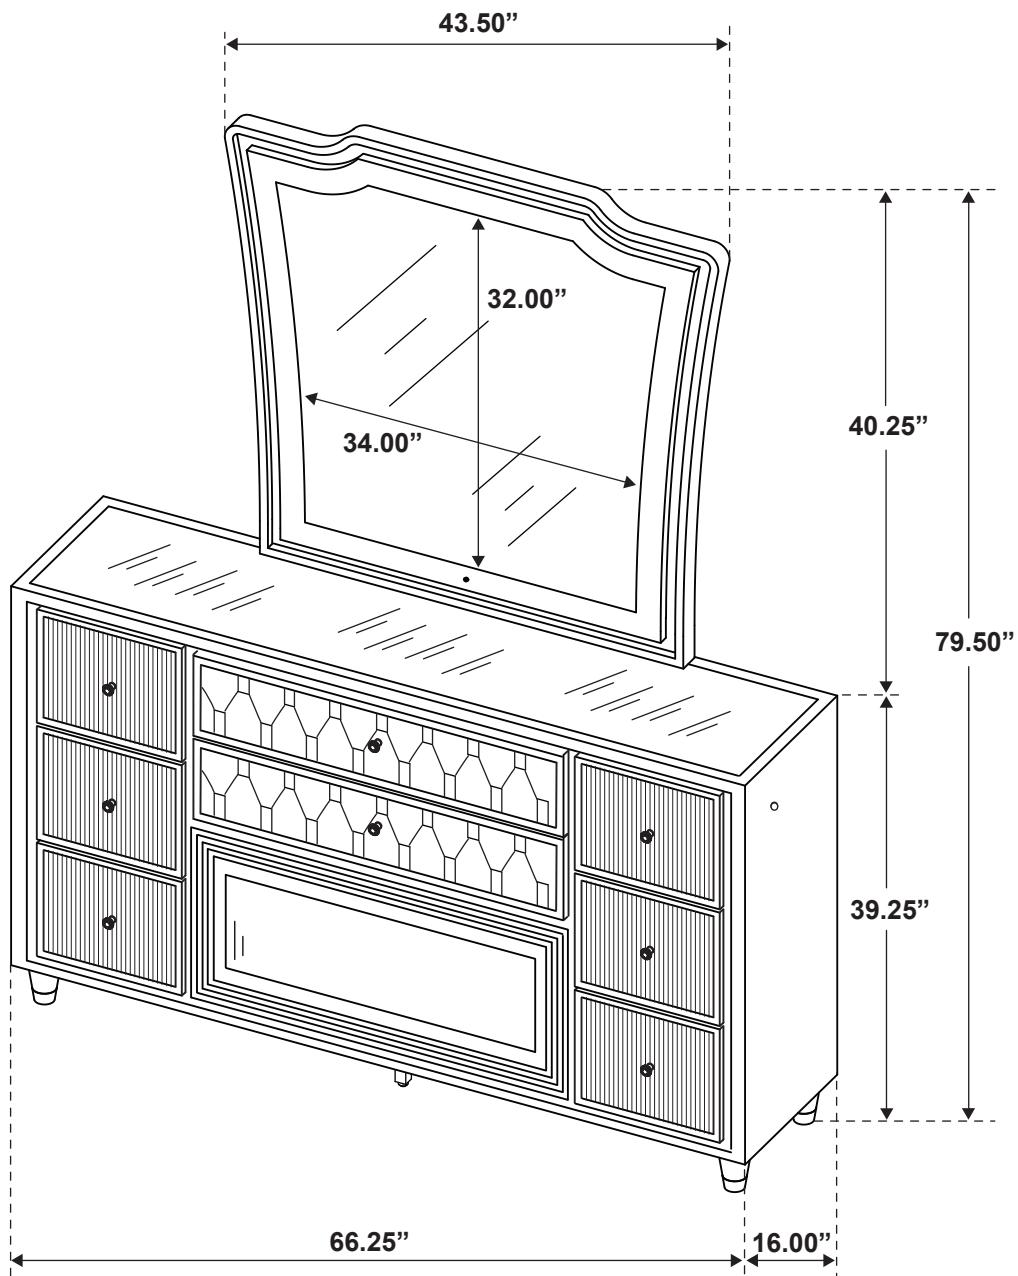

Note: Dimension tolerance $\pm 5\%$

ITEM: 223164

COASTER
FINE FURNITURE

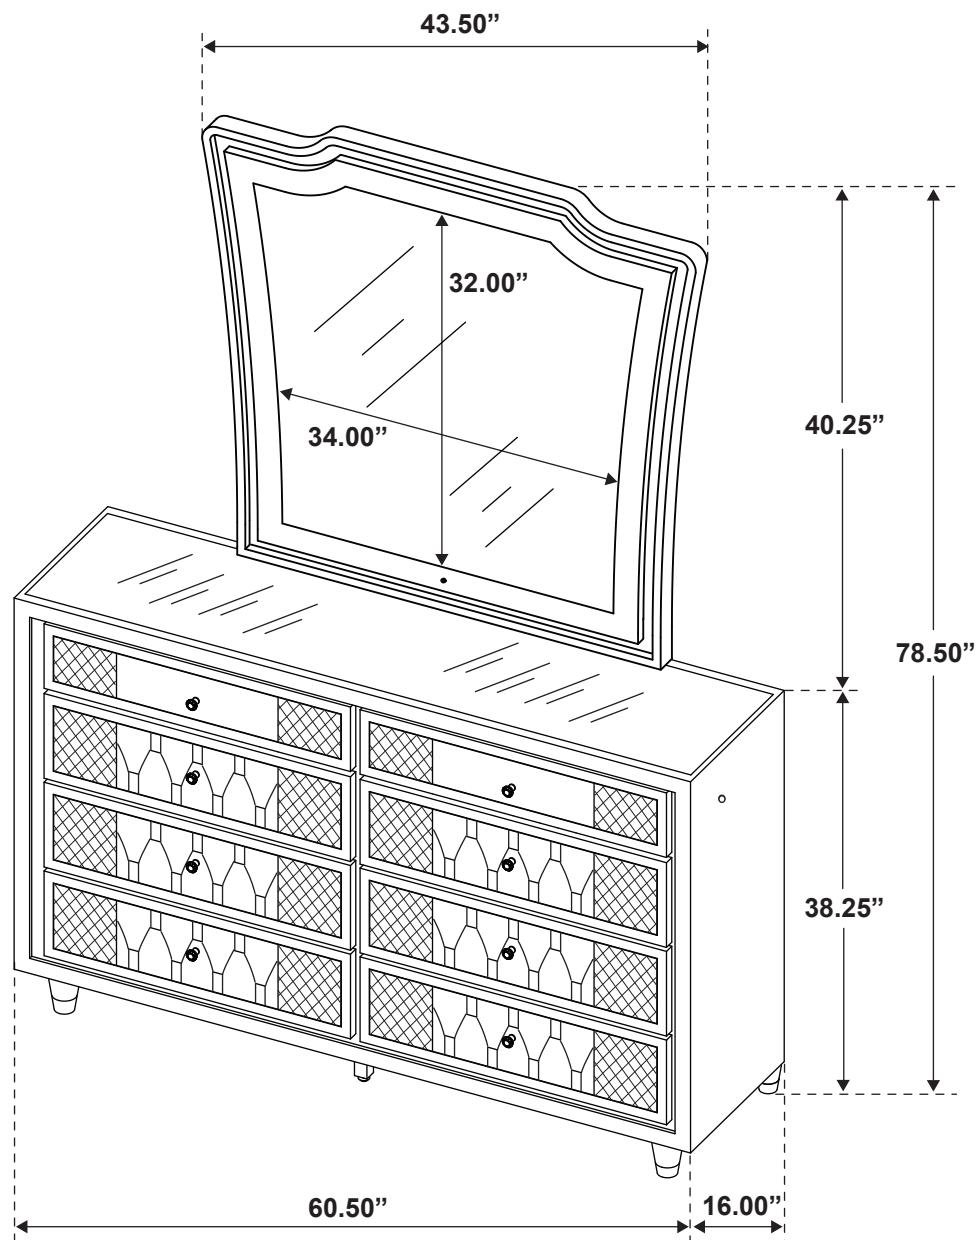

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223165
Chest

ITEM: 223165



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A CHEST

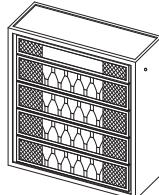


1PC

B LEG



4PCS

 C GLASS TOP



1PC

D ADAPTER



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 223165

COASTER
FINE FURNITURE


ASSEMBLY INSTRUCTIONS

STEP 1


Lift the Glass Top (C) gently and carefully place it at safe area before assembly begin.

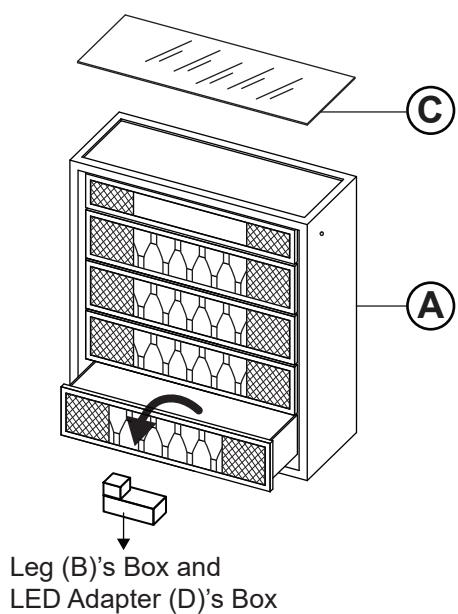

STEP 2

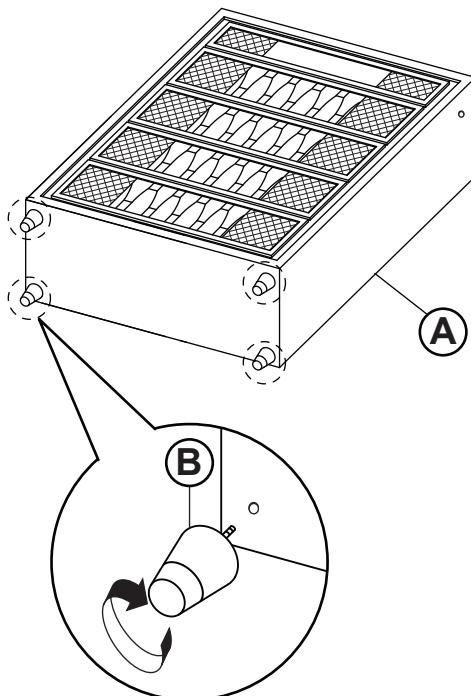

STEP 3

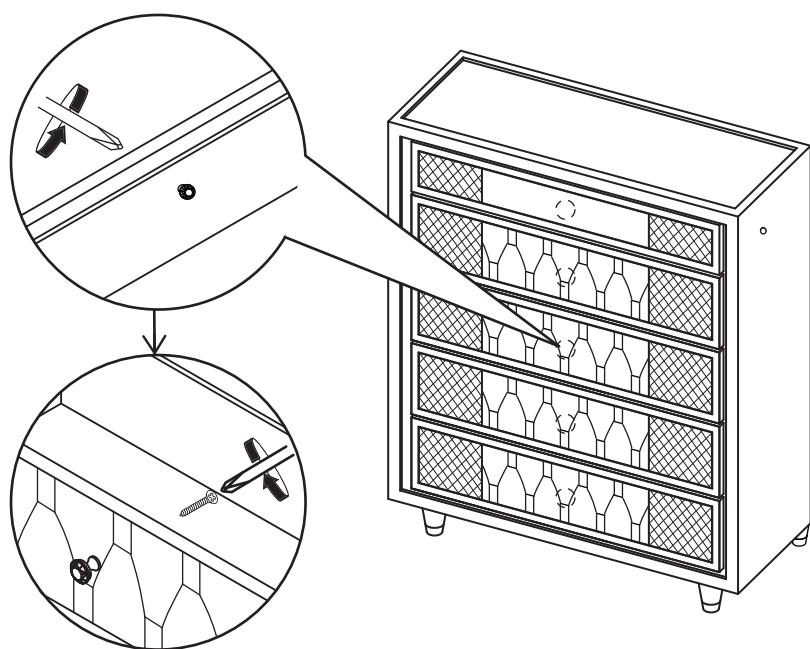


ITEM: 223165

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 4


Place the Glass Top (C) to the top surface of Dresser (A).

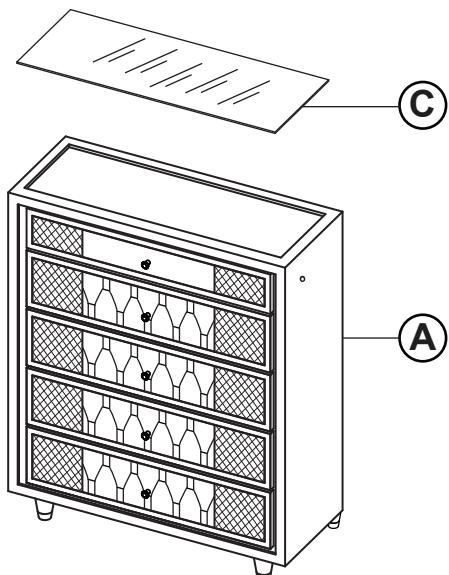


STEP 5

NOTE:

Touch the sensor to switch on the light and adjust the level of brightness.

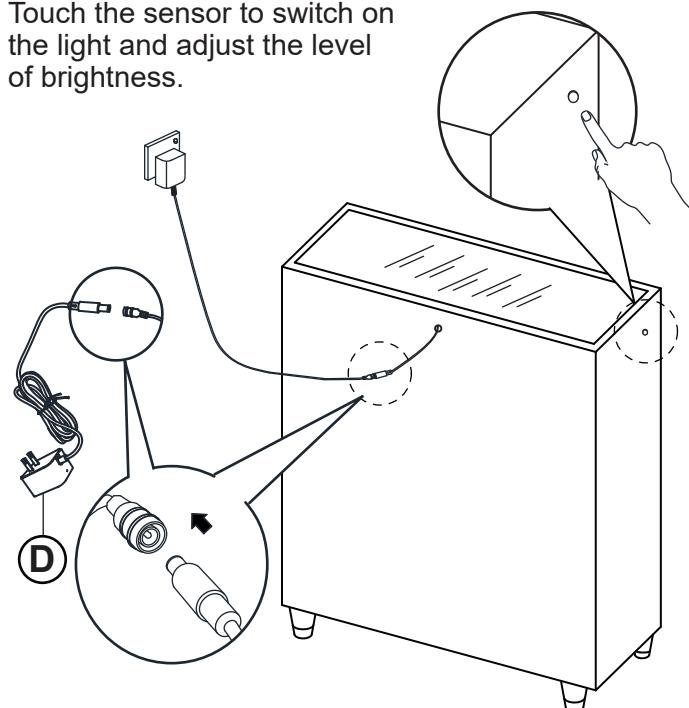

STEP 6 COMPLETE

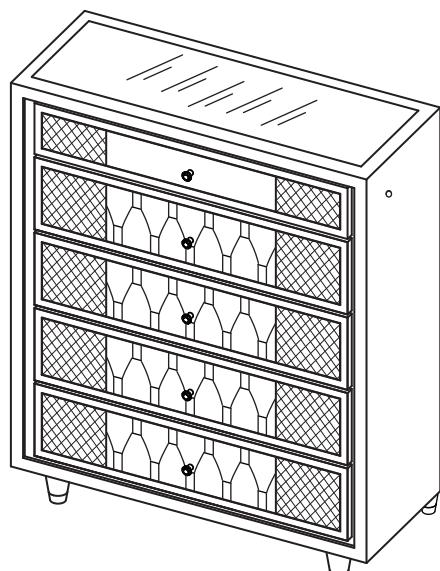

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

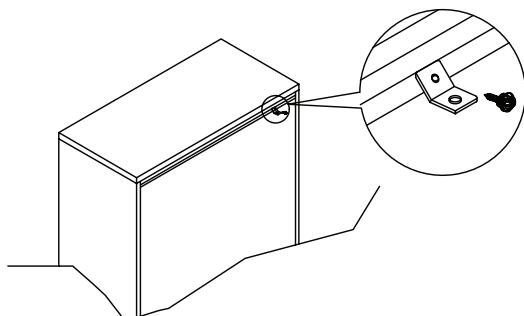



STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

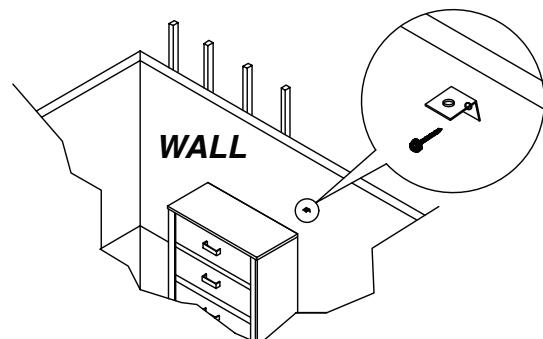

STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

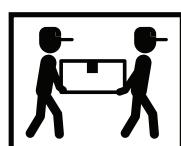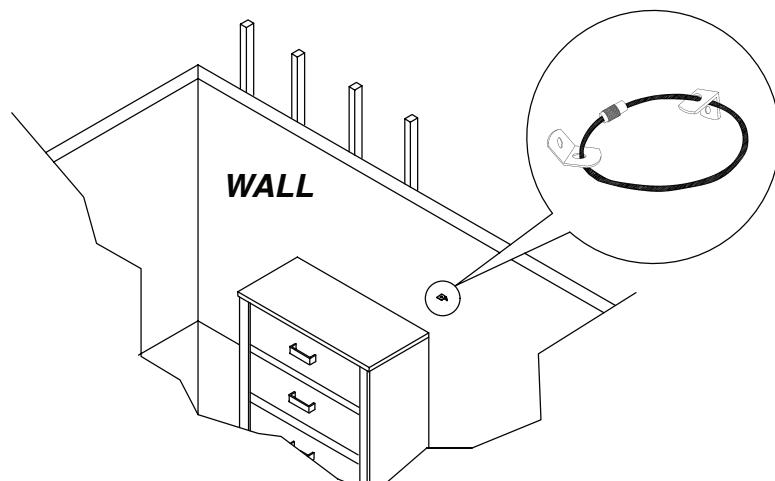

ITEM: 223165

COASTER
FINE FURNITURE

Inner Size of Drawer A: 33.75"W x 12.25"D x 2.50"H x 0.50"T
Inner Size of Drawer B: 34.00"W x 12.50"D x 5.25"H x 0.25"T

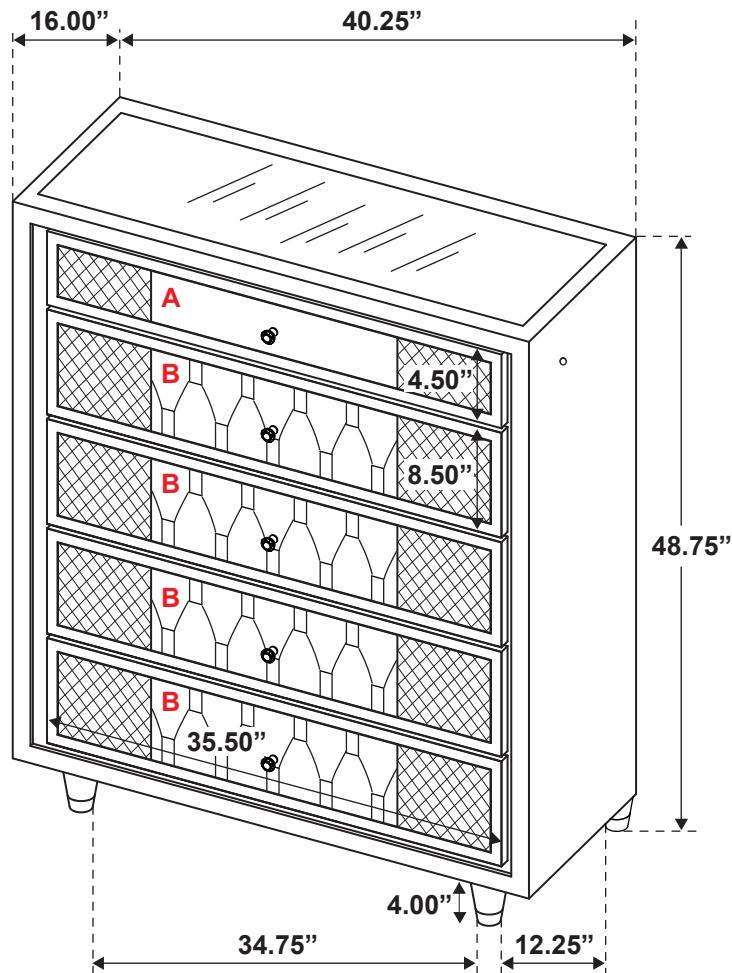

Note: Dimension tolerance $\pm 5\%$