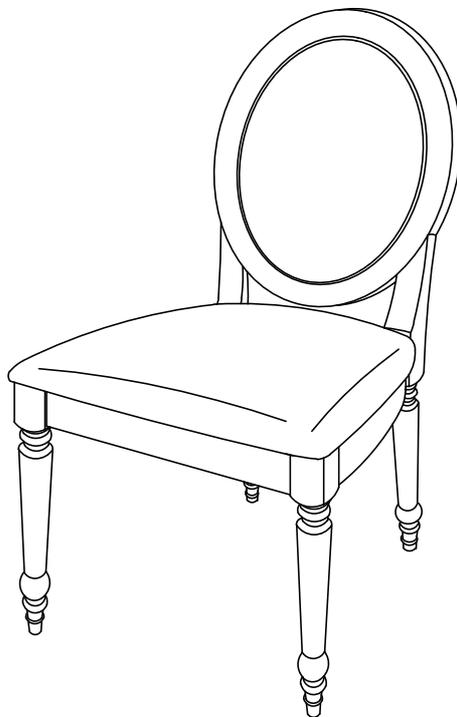


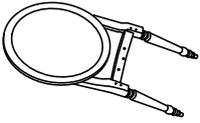
 
 
CROSLEY

FURNITURE

 
 
 
 
Dining Chair
CF503519



PART LIST

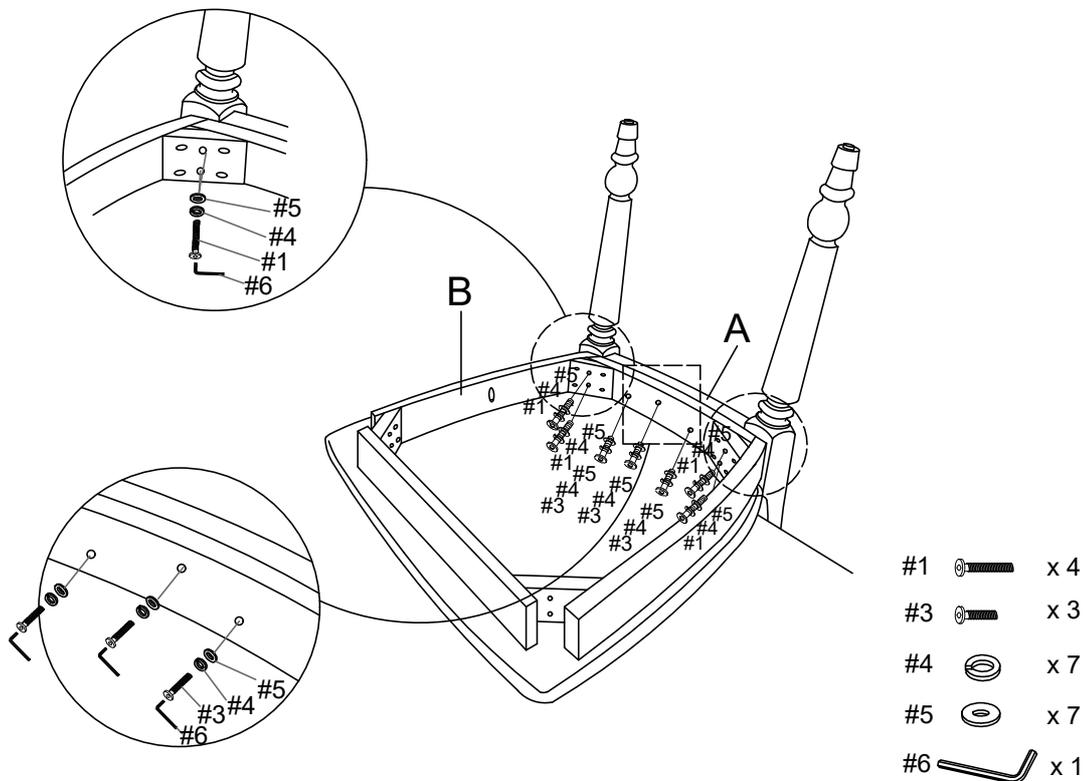
<p>A</p> 	<p>B</p> 	<p>C</p> 
<p>Back Frame 2 PCS</p>	<p>Seat 2 PCS</p>	<p>Front Leg 4 PCS</p>

HARDWARE LIST

<p>#1</p>  <p>M6 x 80mm</p>	<p>#2</p>  <p>M6 x 50mm</p>	<p>#3</p>  <p>M6 x 40mm</p>	<p>#4</p>  <p>M6</p>	<p>#5</p>  <p>M6</p>
<p>Long Bolt 8 PCS (Extra 1)</p>	<p>Medium Bolt 8 PCS (Extra 1)</p>	<p>Short Bolt 6 PCS (Extra 1)</p>	<p>Spring Washer 22 PCS (Extra 1)</p>	<p>Flat Washer 22 PCS (Extra 1)</p>
<p>#6</p>  <p>M4</p> <p>Allen Wrench 1 PC</p>				

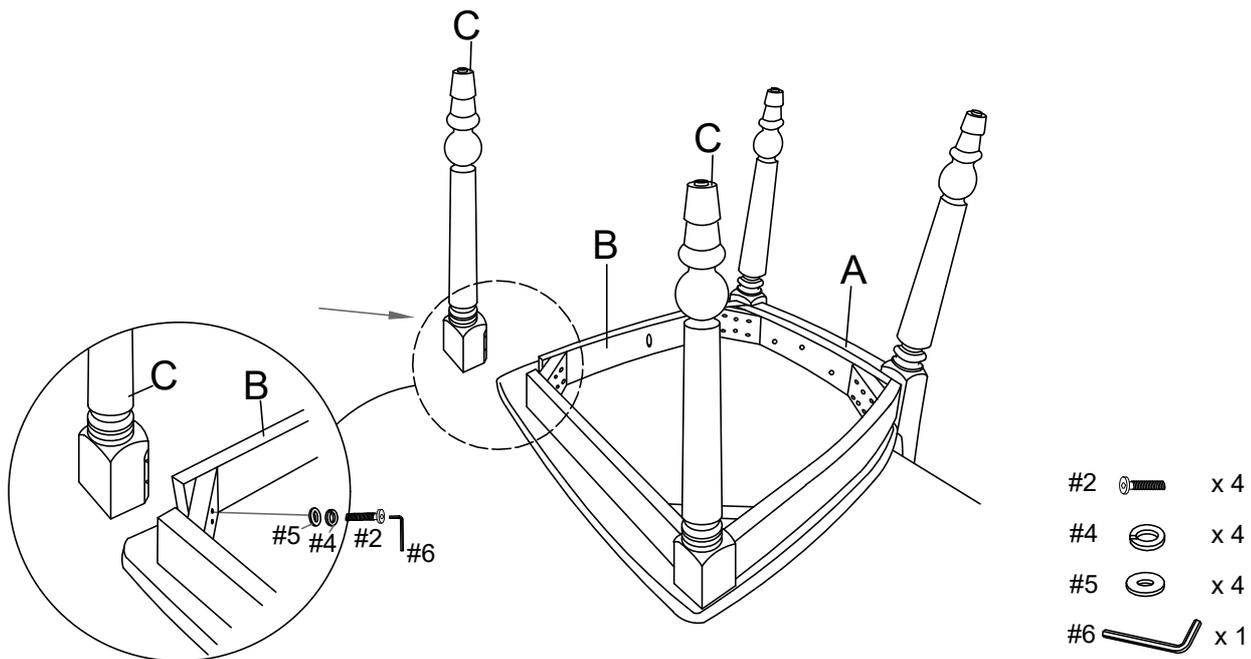
Step 1. Attach seat (part B) to back frame (part A) using long bolts (part #1), short bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.



Step 2. Attach front legs (parts C) to seat (part B) using medium bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.



Step 3. Carefully turn unit upright. Repeat steps 1-2 to assemble remaining chair.

