


CROSLEY




FURNITURE

Dining Table



CF2020

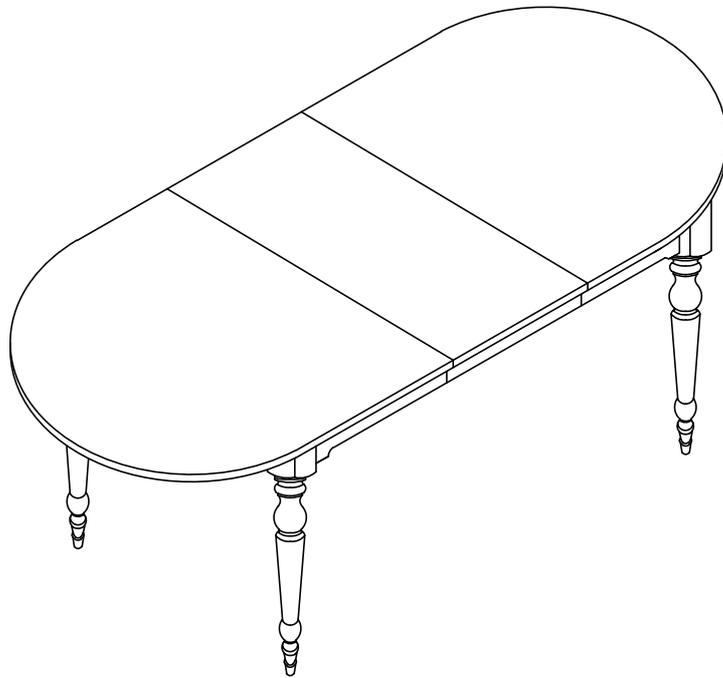

PART LIST

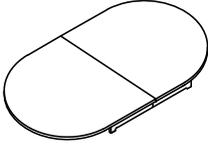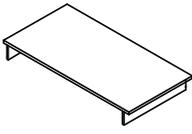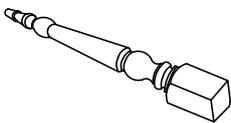
A	B	C
		
<p>Top 1 PC</p>	<p>Leaf 1 PC</p>	<p>Leg 4 PCS</p>

  HARDWARE LIST

#1	#2	#3	#4
			
<p>M8 x 60mm Bolt 8 PCS (Extra 1)</p>	<p>M8 Spring Washer 8 PCS (Extra 1)</p>	<p>M8 Flat Washer 8 PCS (Extra 1)</p>	<p>M5 Allen Wrench 1 PC</p>


ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Step 1. Before assembly remove four wood connectors (See Figure 1) and two center connectors (See Figure 2) using phillips head screwdriver. Carefully place top (part A) on a soft flat surface, such as carpet. Attach legs (part C) to top (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

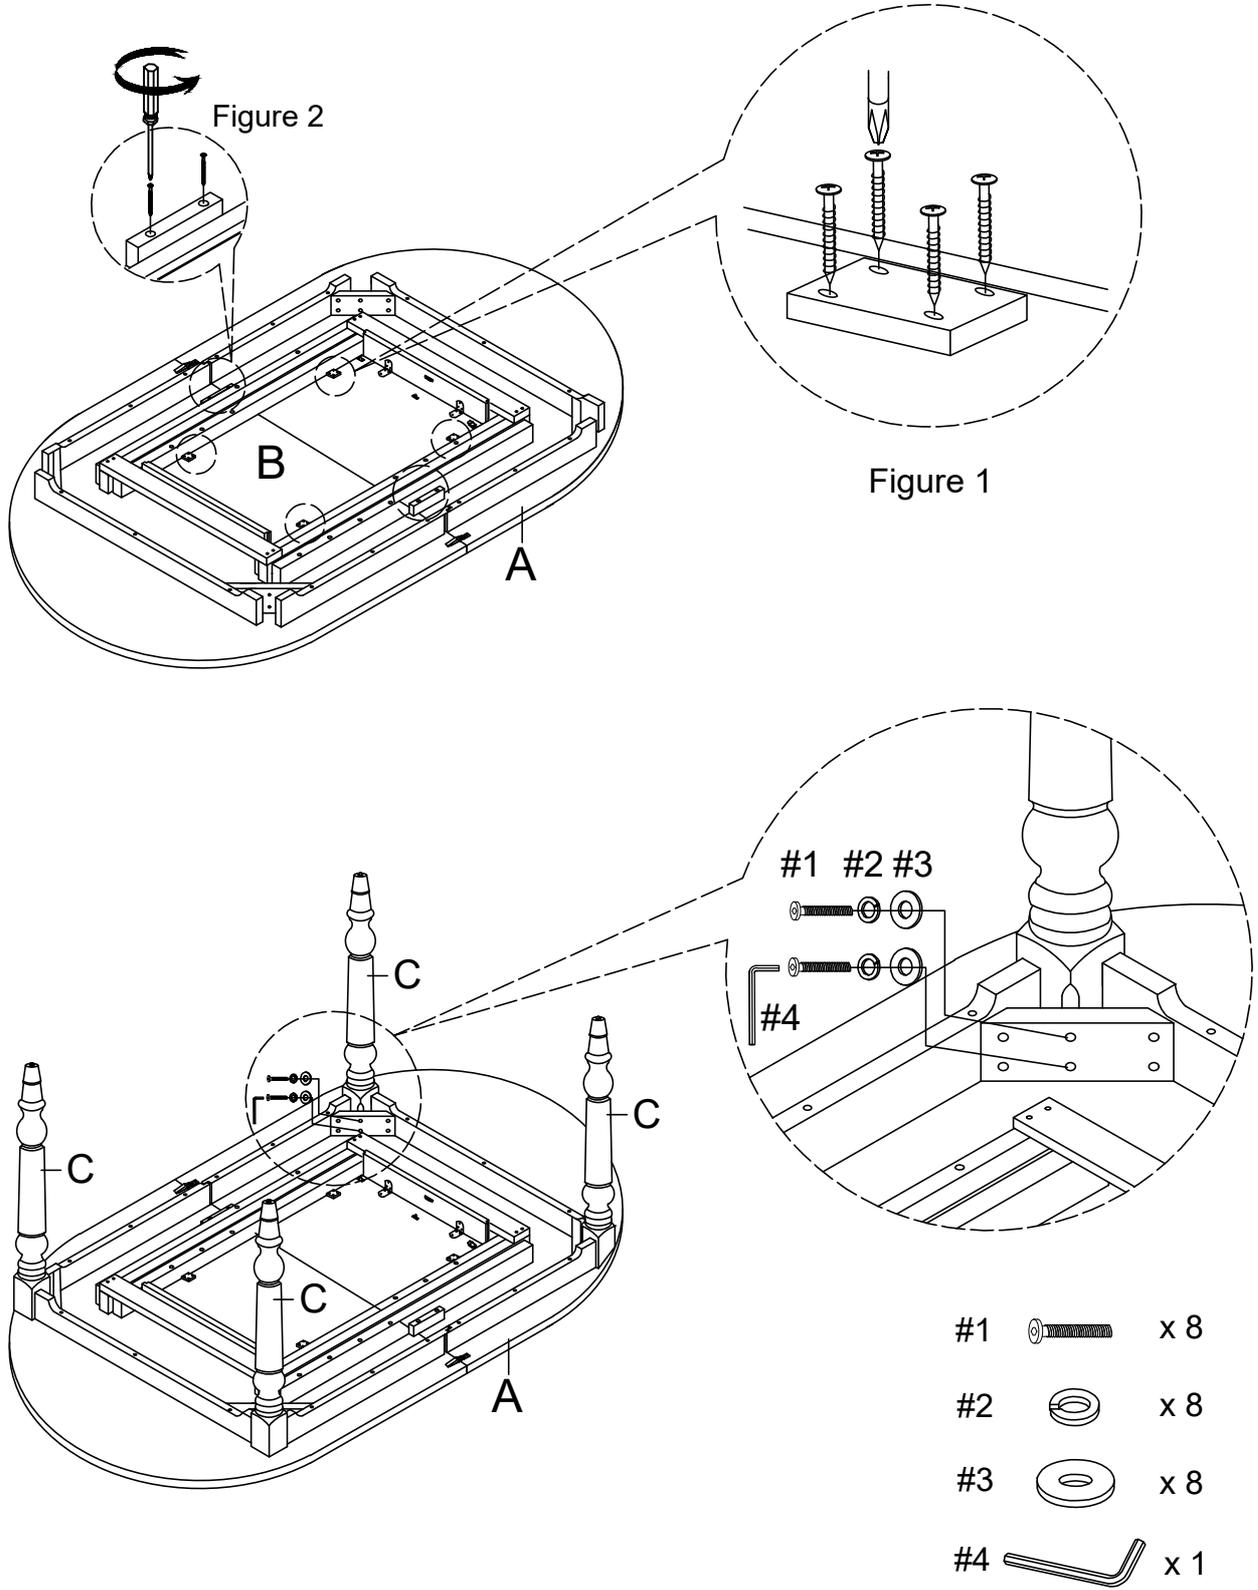


Step 2. Remove leaf (part B) then carefully turn unit upright. To insert leaf (part B), unlock the clamp locks underneath top (part A) and pull on opposite ends to separate.

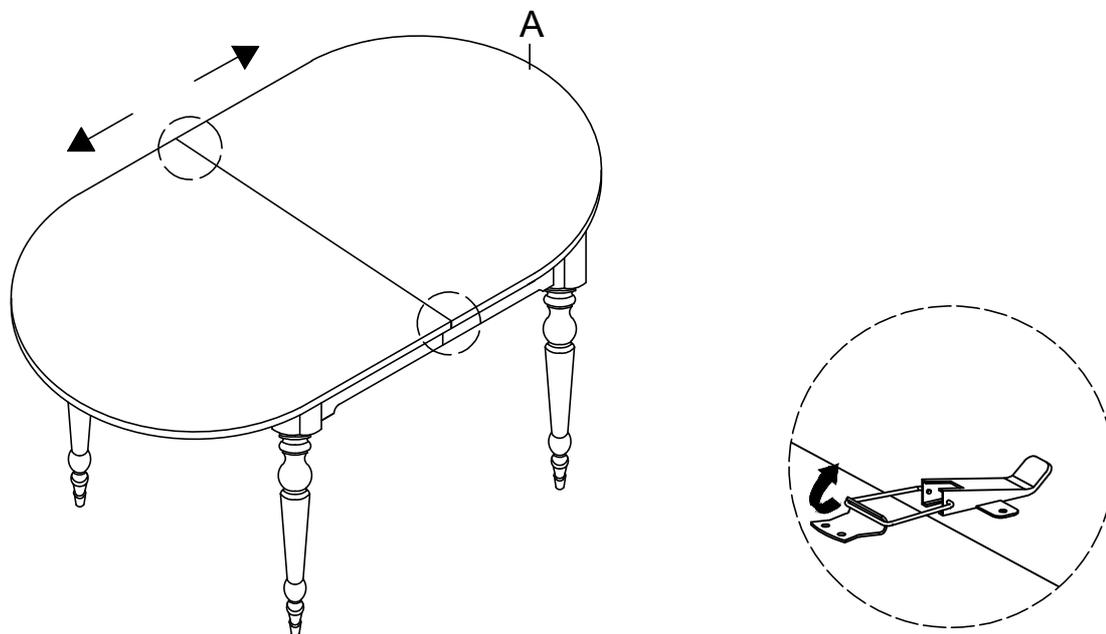


Step 3. Place leaf (part B) in position and push top (part A) from both ends to close.


Note: Ensure clamp locks line up correctly when inserting leaf (part B).

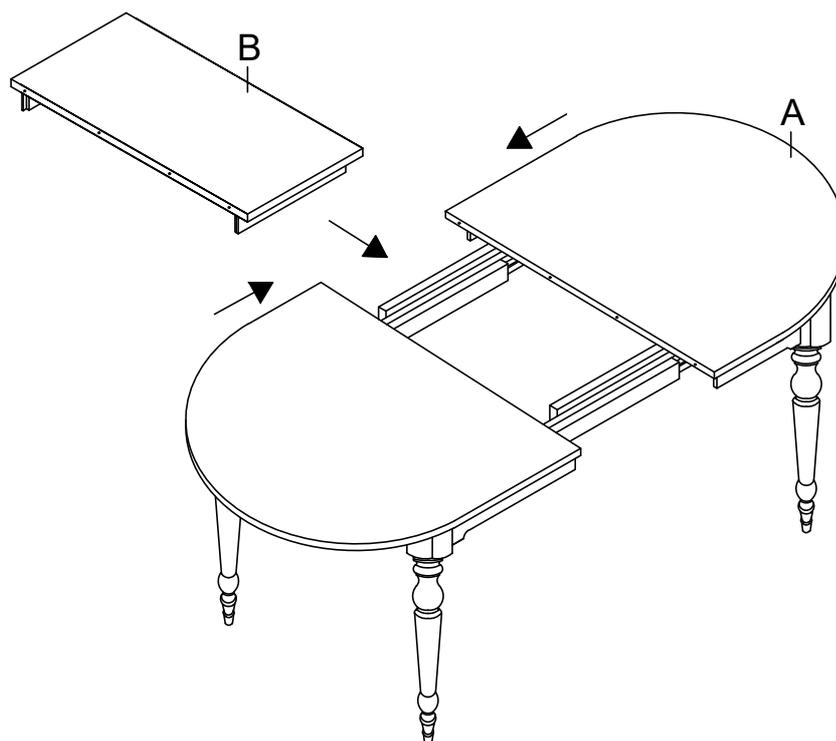


Step 4. Lock clamp locks underneath top (part A) to secure.

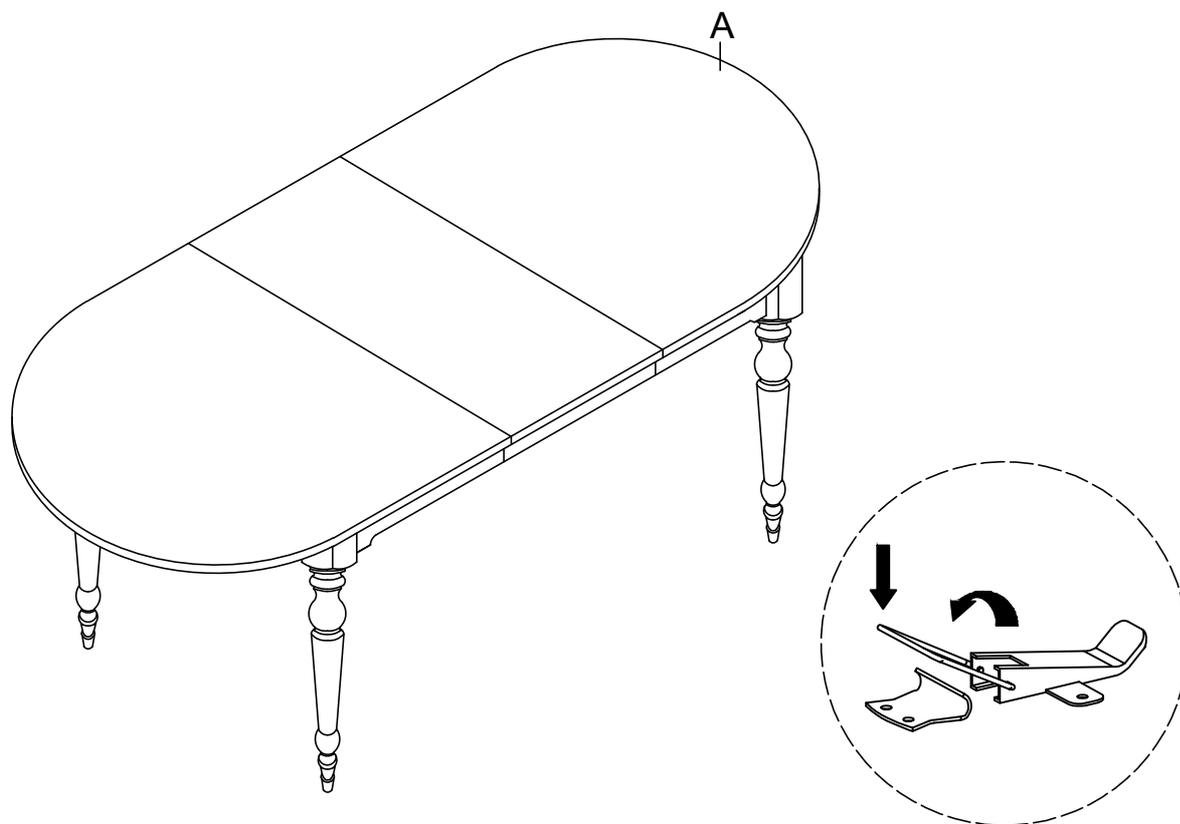


Step 5. To remove leaf (part B), unlock clamp locks underneath top (part A) and pull on opposite ends to separate.

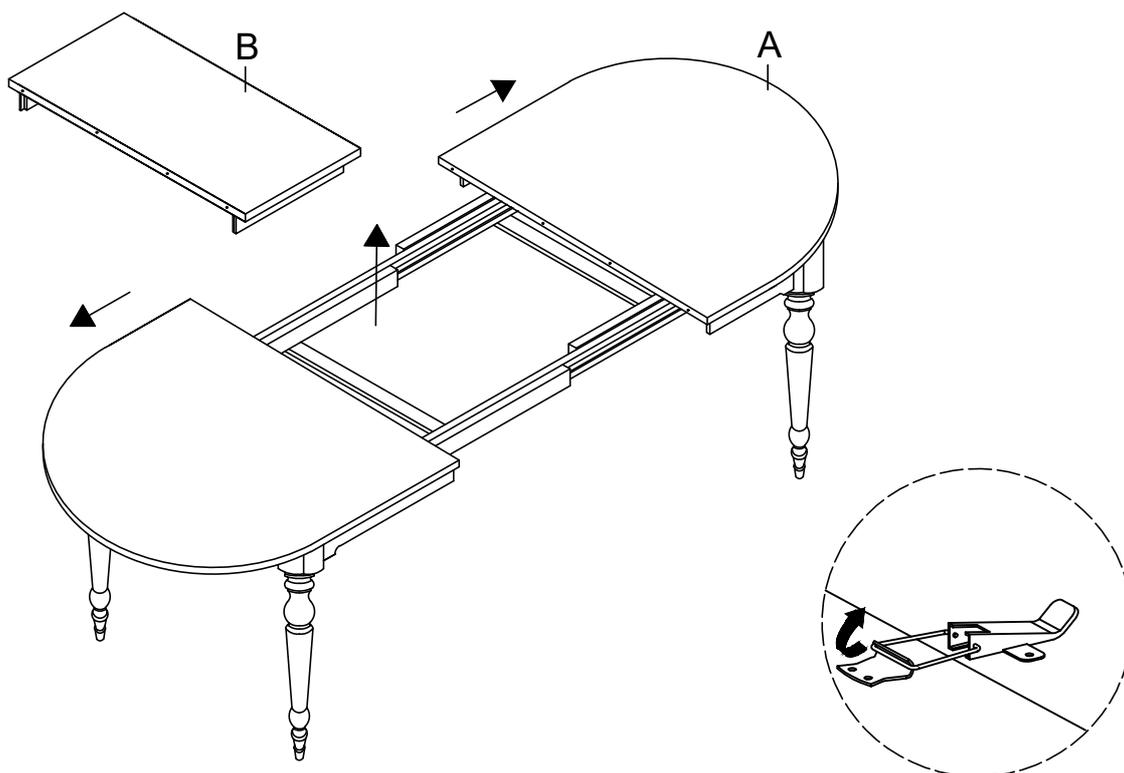

Step 6. Fold down leaf (part B) aprons (See Figure 3). Place leaf (part B) in position and push top (part A) from both ends to close.

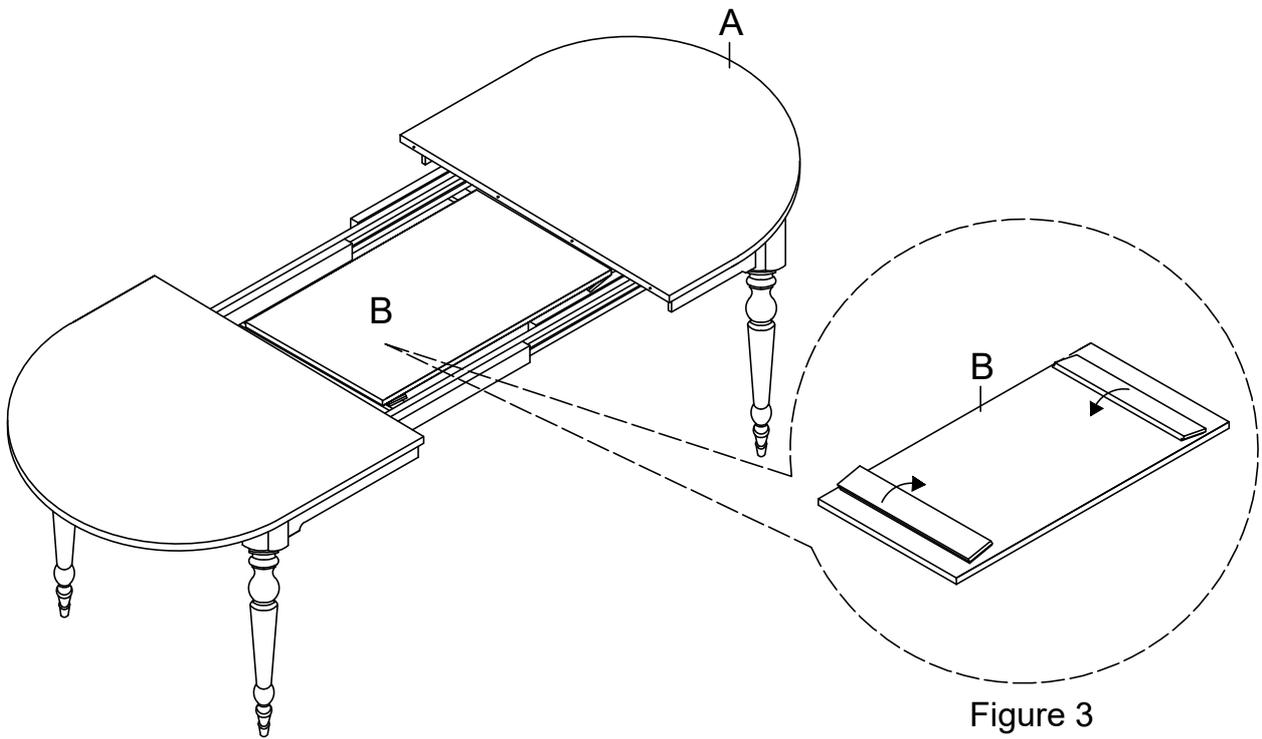

Step 7. Lock clamp locks underneath top (part A) to secure.

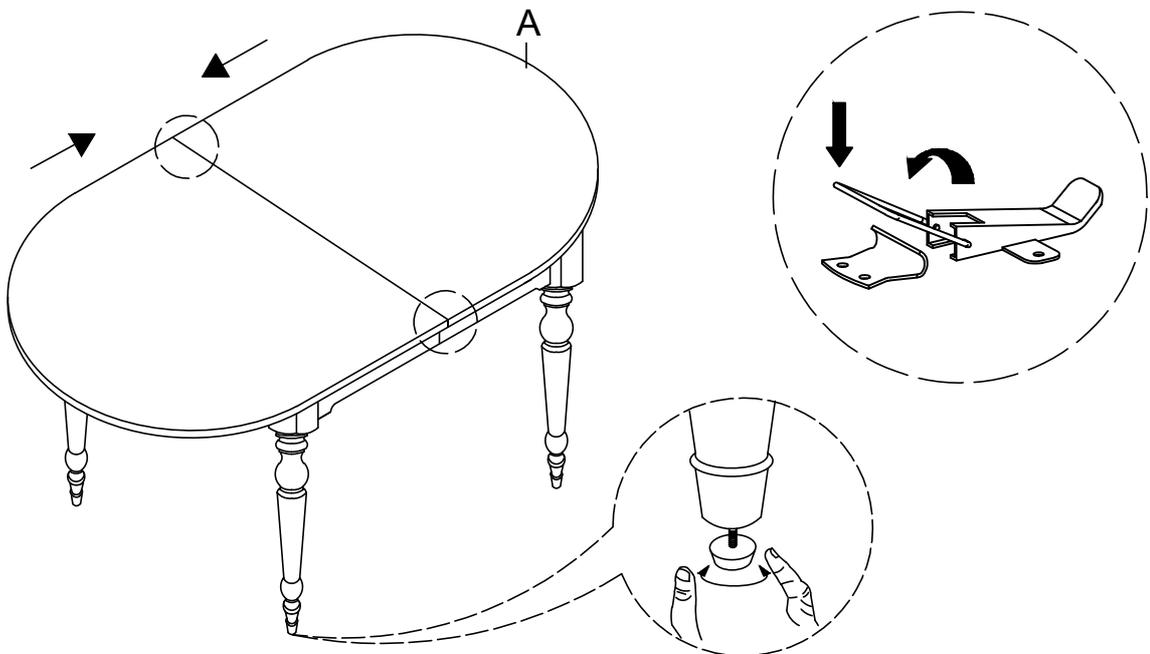

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.