


INSTRUCTION MANUAL

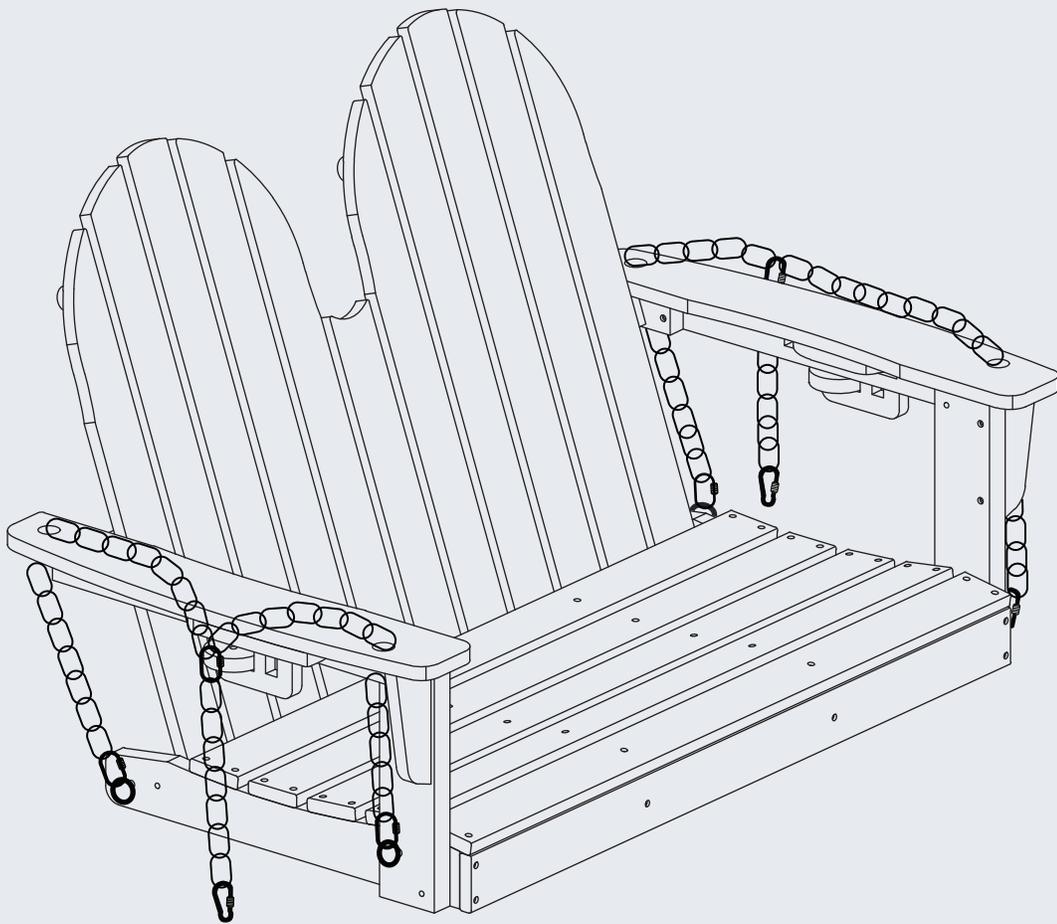

Poly Adirondack 50" Porch Swing

V1.0

NOTICE

Do not overtighten screws. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please adjust the speed slowly when you use electric drill for assembling to avoid screw slipping.

TOOLS REQUIRED



**SWING
600 LBS
CAPACITY**



**2 PERSONS
ASSEMBLY**



**UP TO 30 MIN.
ASSEMBLY**

HARDWARE

1 BOLT M6 x 30mm 2 PCS	2 BOLT M6 x 60 mm 4 PCS	3 SCREW M4 x 13 mm 4 PCS	4 SCREW M6 x 55 mm 2 PCS
5 SCREW M6 x 90mm 2 PCS	6 M6 NUT 4 PCS	7 M6 WASHER 4 PCS	8 EYE HOOK M8 x 35 mm 2 PCS
9 EYE HOOK M8 x 60 mm 2 PCS	10 CHAIN 2 PCS	11 M8 NUT 4 PCS	12 M8 WASHER 4 PCS

HARDWARE

13

SCREW
M6 x 80mm




2 PCS

PARTS

A


SWING SEAT

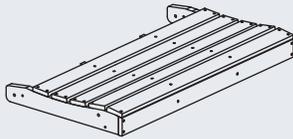

1 PC

B


BACKREST

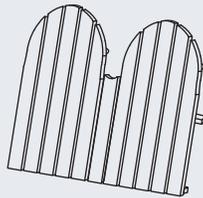

1 PC

C


LEFT ARM

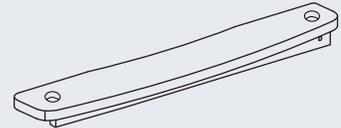

1 PC

D


RIGHT ARM

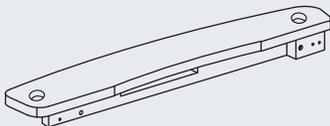

1 PC

E


LEFT LEG

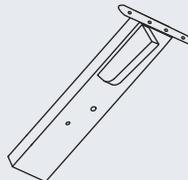

1 PC

F

RIGHT LEG

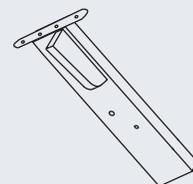

1 PC

G

 
LEFT CUP HOLDER



1 PC

H


RIGHT CUP HOLDER

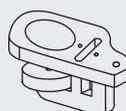

1 PC

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this swing and learn the exact position of each part to be assembled.

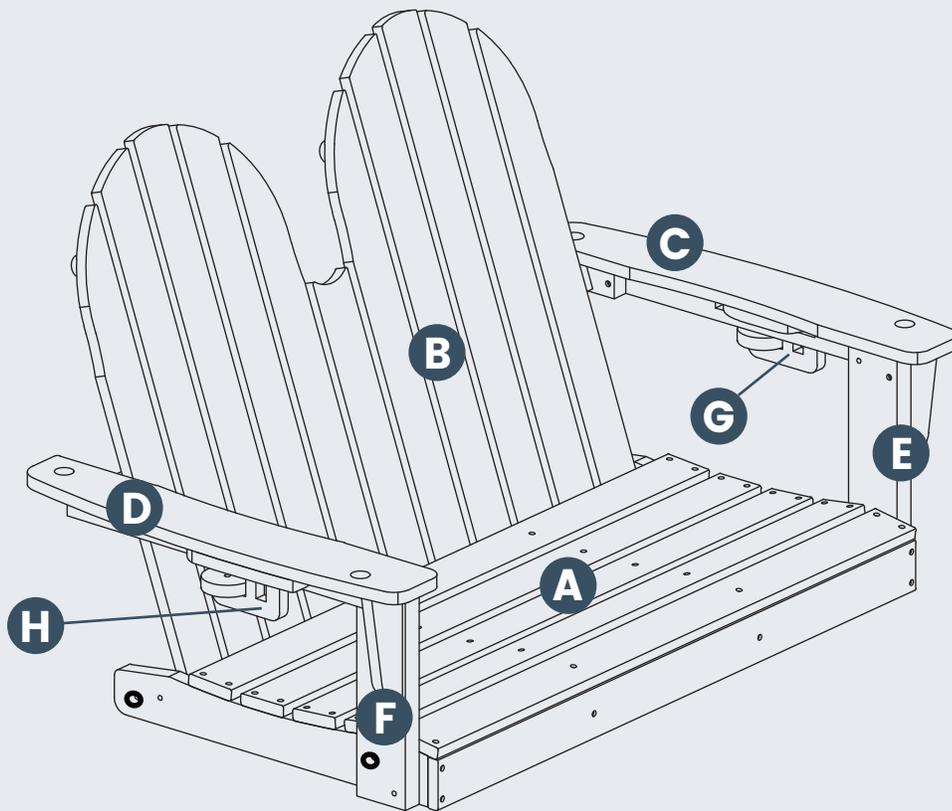


PRODUCT ASSEMBLY

1

Attach **Part G Left Cup Holder** to **Part C Left Arm** with 1 pc of **Hardware #1 Bolt**.

Do the same to attach **Part H Right Cup Holder** to **Part D Right Arm** with 1 pc of **Hardware #1 Bolt**.

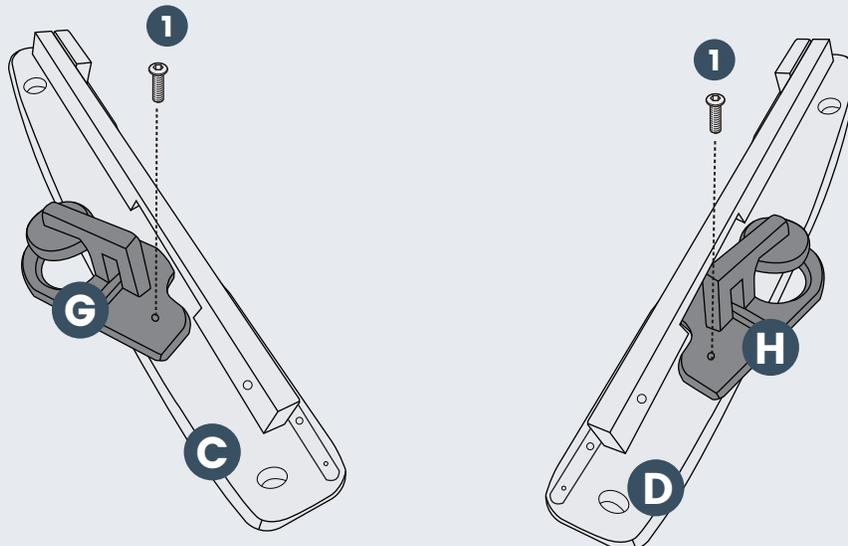


PRODUCT ASSEMBLY

2

Attach **Part F Right Leg** to **Part D Right Arm** with cup holder with 1 set of **Hardware #2 Bolt, #7 Washer** and **#6 Nut** (see image below).

Attach the steel plate to the Arm with 2 pcs of **Hardware #3 Screw**.

Do the same to attach **Part E Left Leg** to **Part C Left Arm** with cup holder.

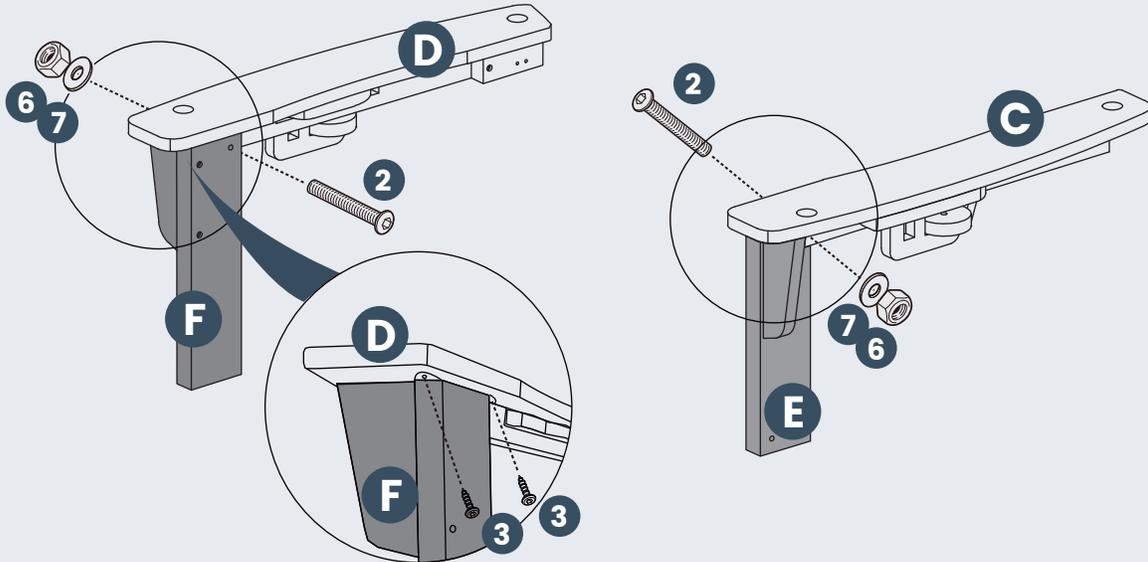


3

Attach the combined **Part C Left Arm** with cup holder and **Part E Left Leg** to **Part A Swing Seat** with 1 set of **Hardware #2 Bolt, #7 Washer** and **#6 Nut**.

Do the same to assemble **Part D Right Arm** with cup holder and **Part F Right Leg** to **Part A Swing Seat** with 1 set of **Hardware #2 Bolt, #7 Washer** and **#6 Nut**.

Attach 2 sets of **Hardware #9 Eye Hook, #12 Washer** and **#11 Nut** as below for the chains.

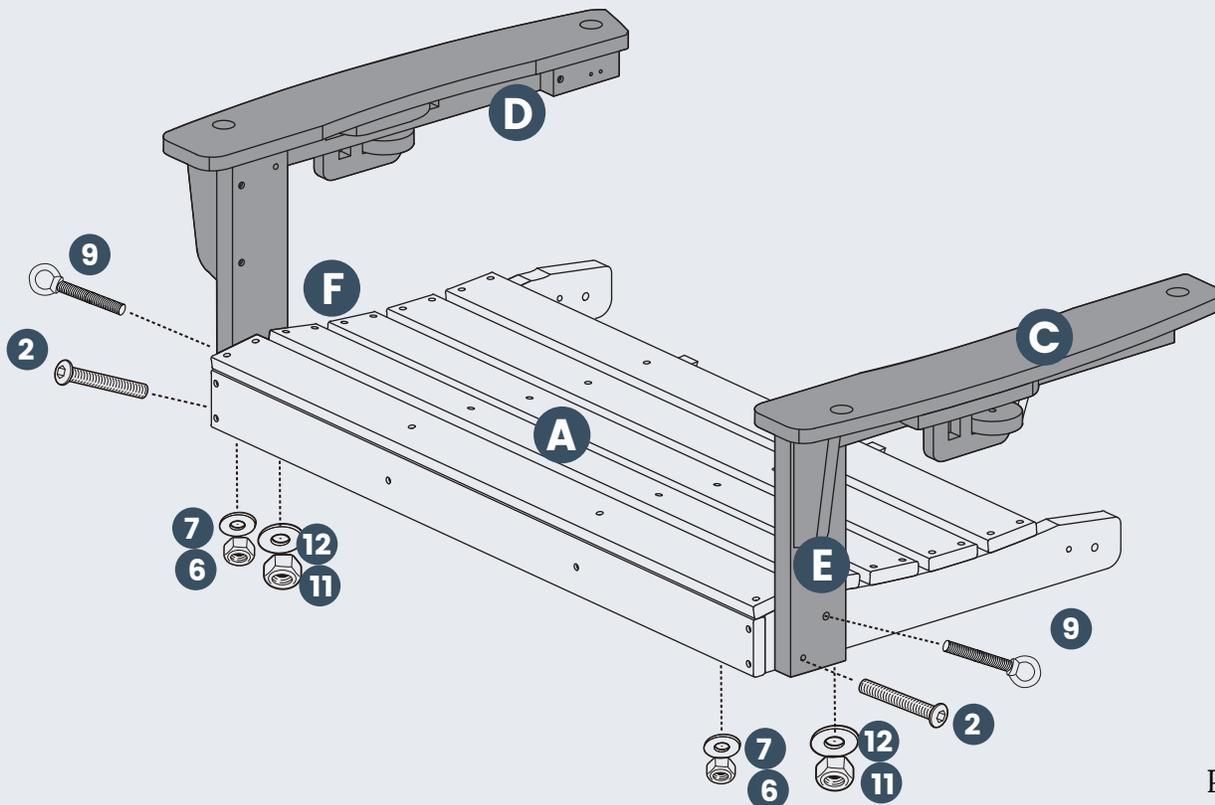


PRODUCT ASSEMBLY

4

Attach **Part B Backrest** to **Part A Swing Seat** with 2 pcs of **Hardware #13 Screw** and 2 pcs of **Hardware #4 Screw** (see image below).

Attach **Part B Backrest** to **Part C Left Arm** and **Part D Right Arm** with 2 pcs of **Hardware #5 Screw** (see image below).

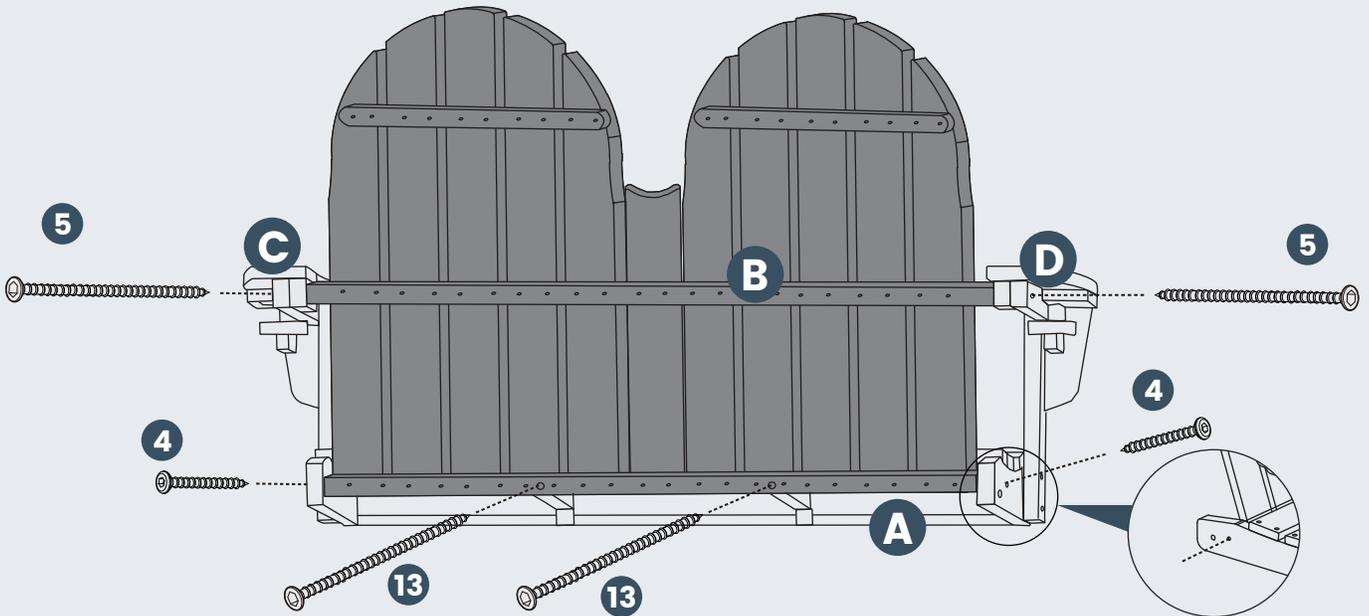


5

Attach 2 sets of **Hardware #8 Eye Hook**, **#12 Washer** and **#11 Nut** to **Part A Swing Seat** as below.

Thread the **Hardware #10 Chain** through the holes in the left armrest. Unscrew the thread lock to open the carabiner, hook it onto the front leg eyebolt, and tighten the lock to secure it. Attach the carabiner at the other end of the chain to the eyebolt on the swing seat using the same method.


Repeat these steps to install the second chain on the right side.

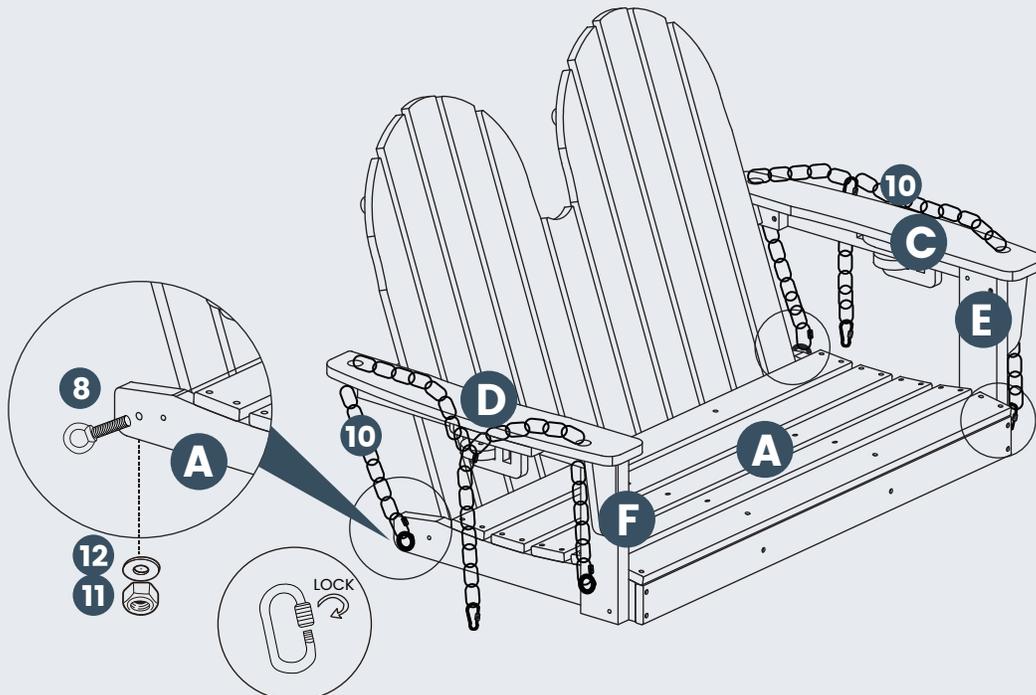

PRODUCT ASSEMBLY

6

Tighten all the screws, bolts, and nuts to ensure the swing is sturdy enough.

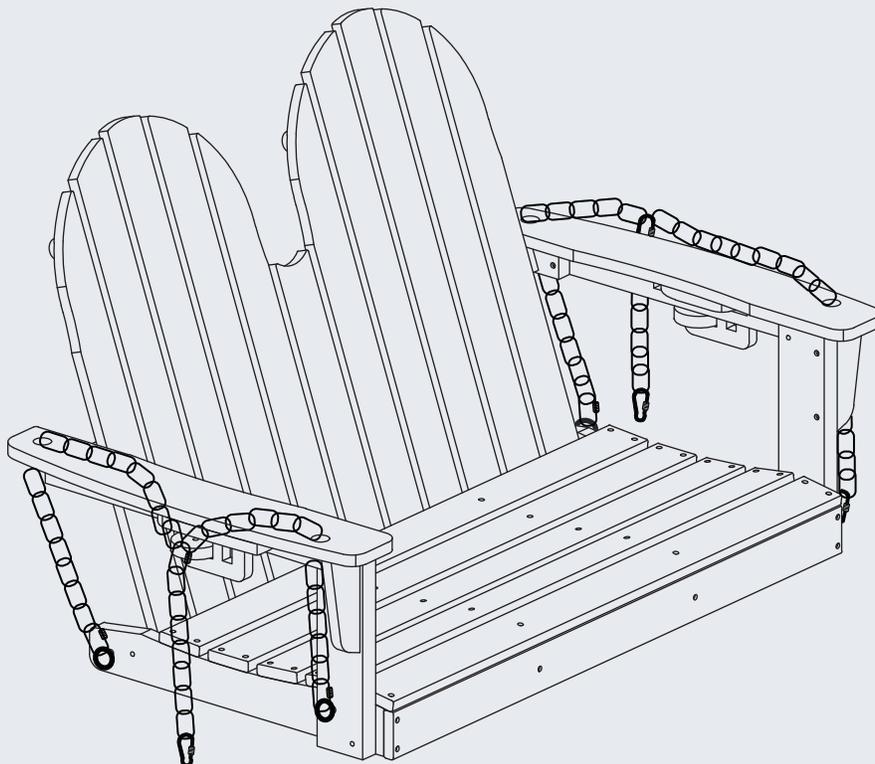

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan