
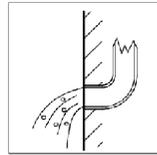


Customer Service
call our number:888-257-3857
Or E-mail:service@casainc.com


BR01067FG3

◆ Installation Condition

1. Check the accessories list to verify that all parts are complete in this package.
2. Do not disassemble the shower valve body by yourself.
3. Connect inlet pipes to supply valves.
4. Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.
5. After installation, check all joints for leakages.
6. Do not leave the rain shower system exposed to a severely corrosive environment.

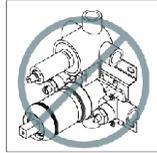


YOU MAY NEED:

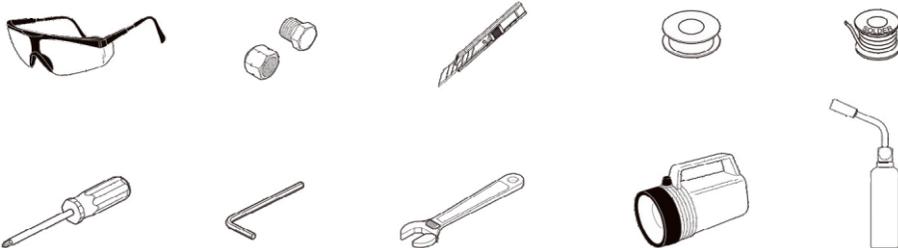


◆ Essential dimensions & water pipe line

Unit:mm/inch

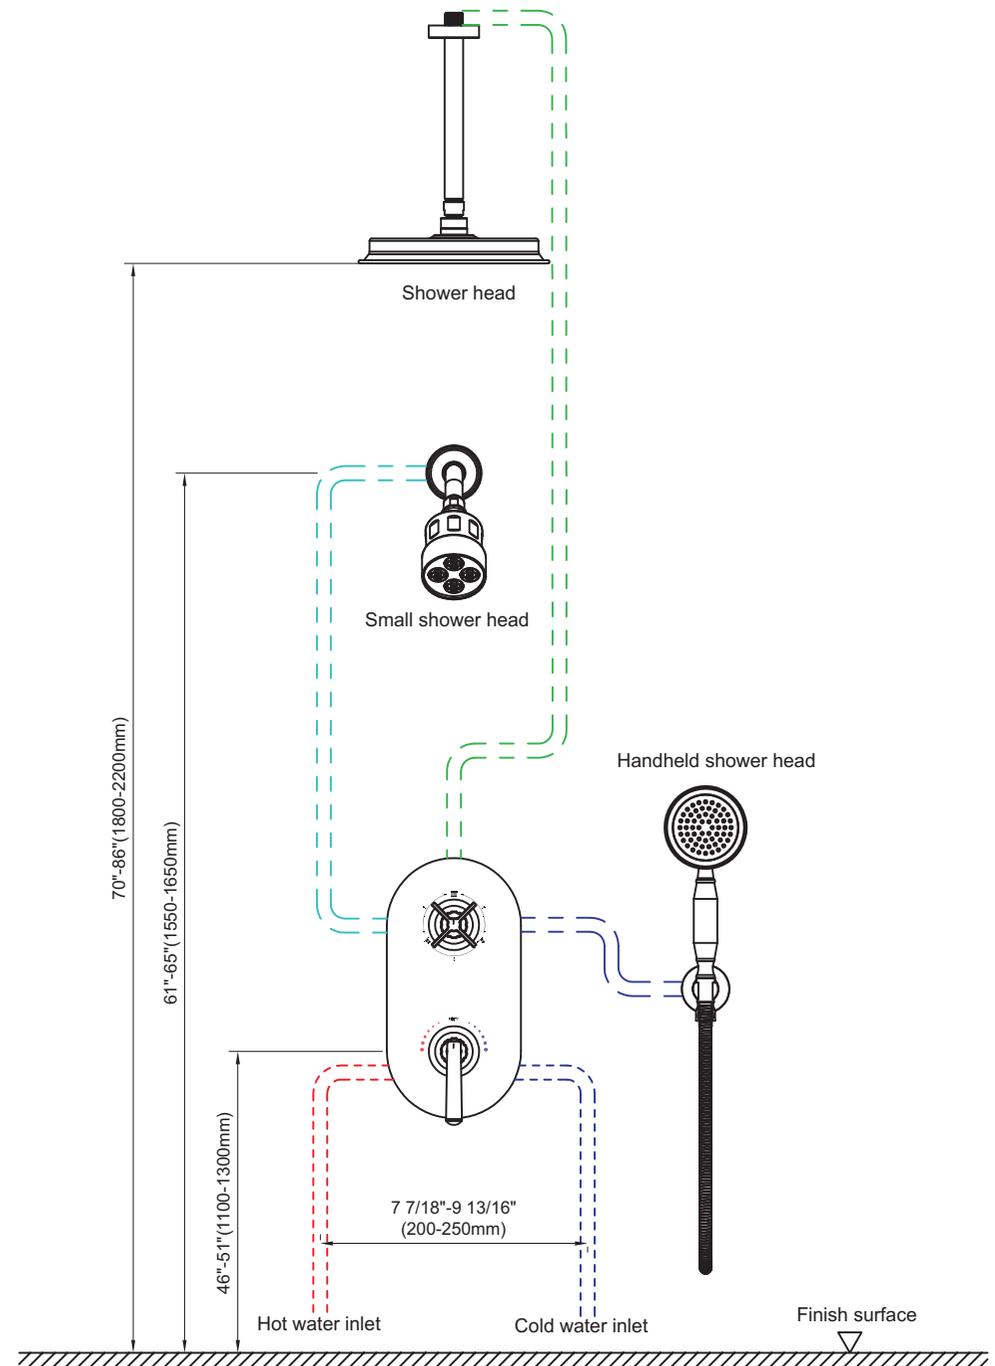


◆ three-function Rain Shower System
Accessories List

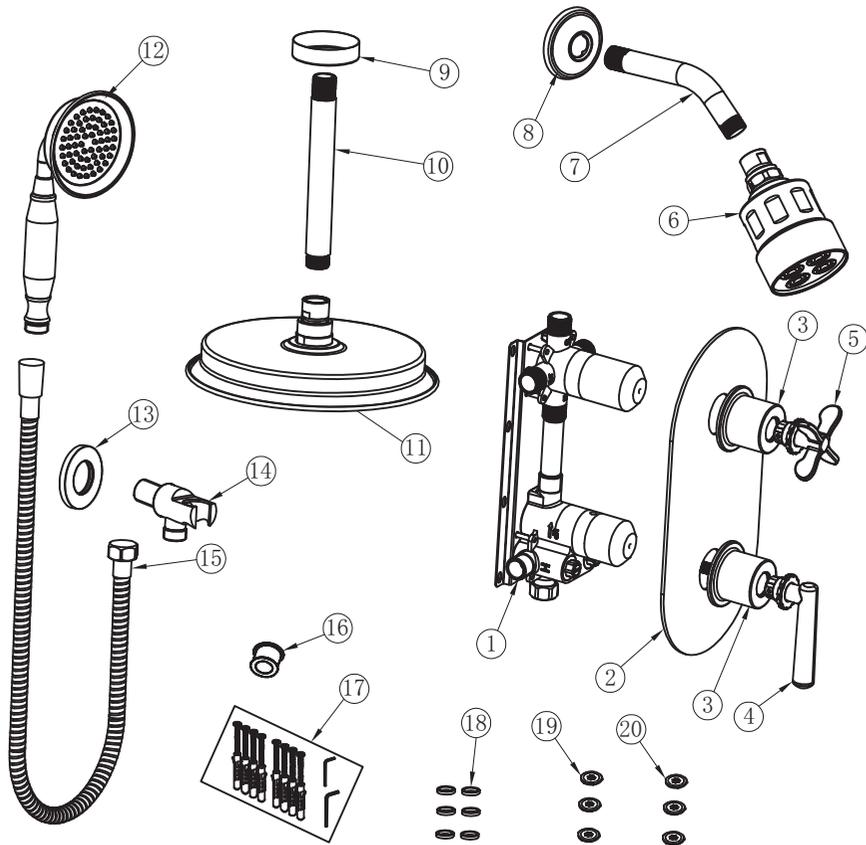

No.	Part name	Qty	No.	Part name	Qty
1	Three - function thermostatic main body	1	14	Round shower connector	1
2	Annular panel	1	15	Stainless steel hose	1
3	Panel decorative pressing sleeve	2	16	Sealing tape	1
4	Thermostatic handle	1	17	Main body parts package	1
5	Cross water - dividing handle	1	18	Gasket	6
6	4" round side spray shower	1	19	2.5GPM water - saving disc	3
7	150MM Side spray shower pipe	1	20	1.8 GPM water - saving disc	3
8	Side spray shower pipe decorative cup	1			
9	Top spray shower hanger pipe decorative cup	1			
10	Top spray shower hanging pipe	1			
11	9" classic top spray shower	1			
12	Classic hand - held shower	1			
13	Connector decorative cup	1			

◆ Installation Depth Of Shower Valve Body


Unit:mm/inch

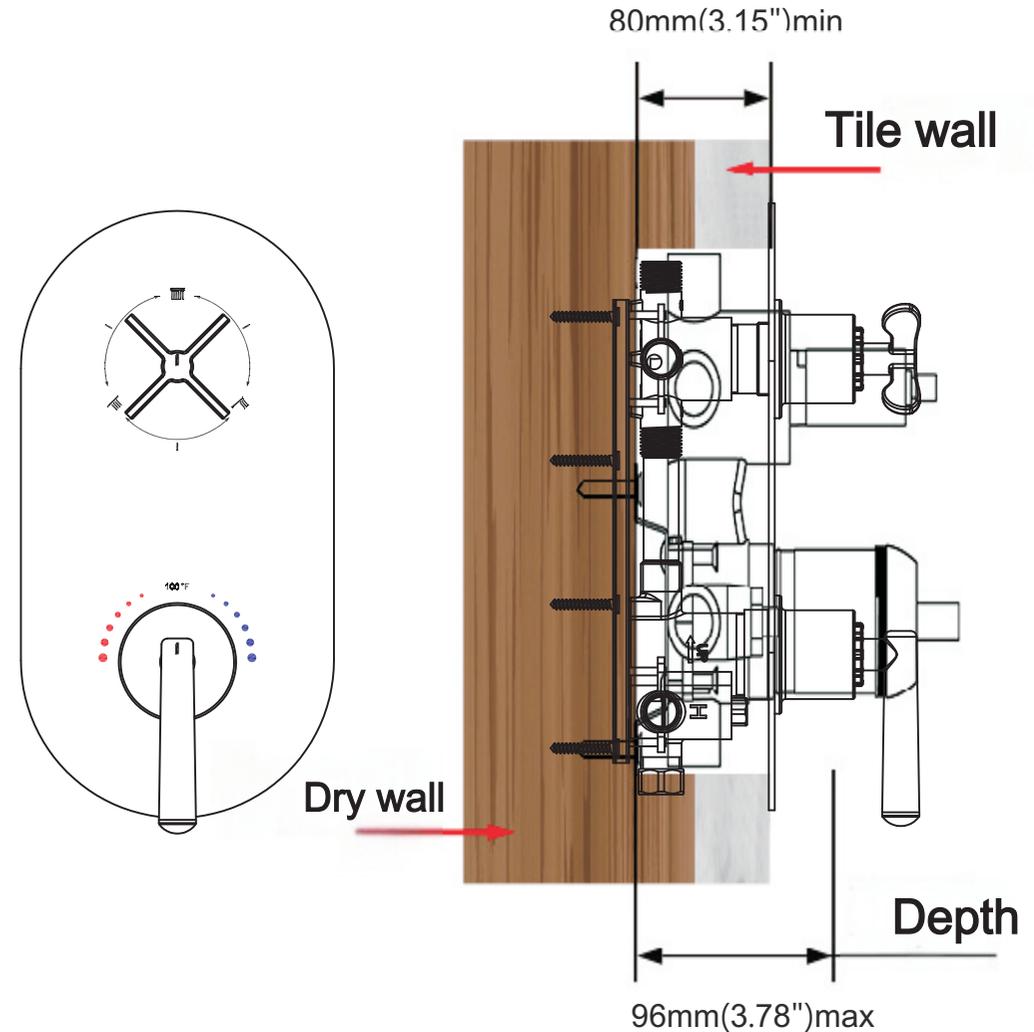

Notice:1. The installation depth of the shower valve body should be no less than 3.15"(80mm)and no more than 3.78"(96mm), including the thickness of the tile. Otherwise ,the trim plate cannot be installed.
2.The opening size of ceramic tile shall be smaller than the trim plate size.

◆ Piping Instructing Before Tiling


1.

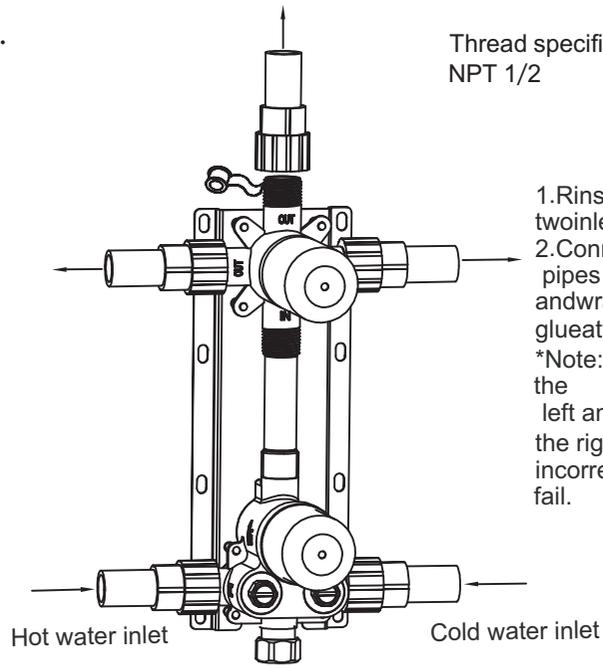

Thread specifications:
NPT 1/2


1. Rinse the sediment inside the two inlet pipes with preflushing water.
 2. Connect the inlet and outlet pipes as shown in the diagram, and wrap the joint with sealing glue at the inlet and outlet.
- *Note: The hot water inlet pipe is on the left and the cold water inlet pipe is on the right. It must not be connected incorrectly, otherwise the function will fail.

3.

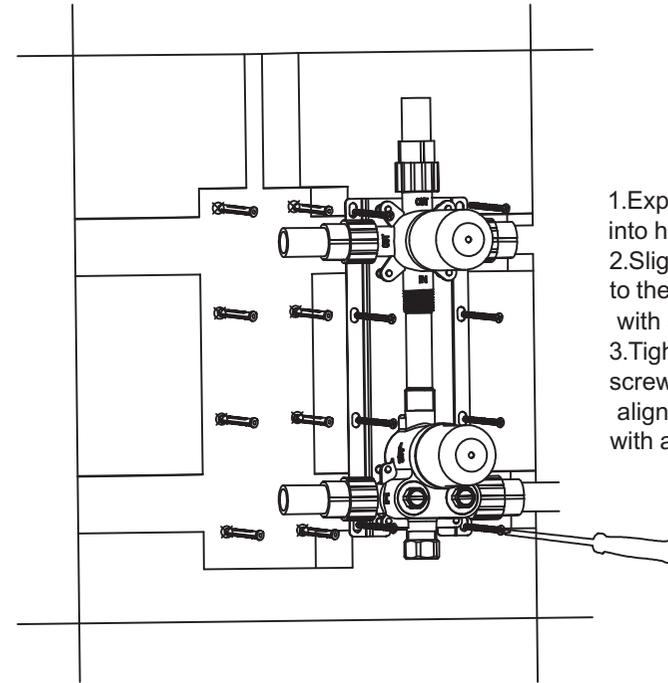


1. Expansion hose plugged into hole;
2. Slightly fix the main body to the wall with self-tapping screws;
3. Tighten the self-tapping screws after aligning the mounting box with a level.

2.

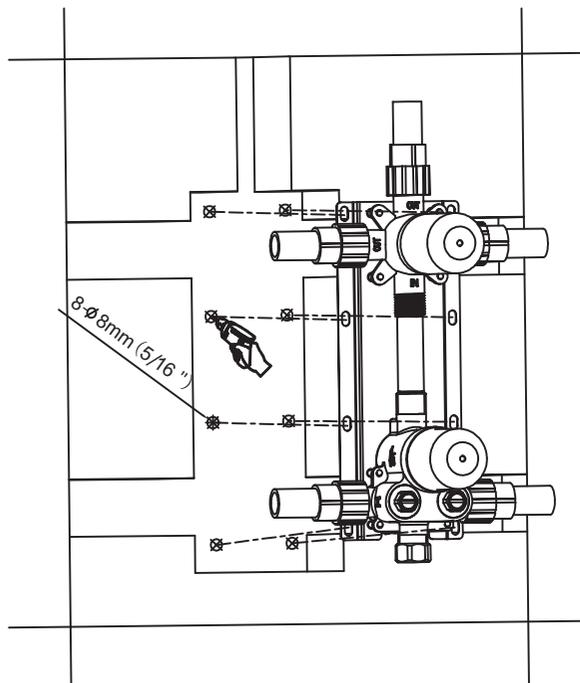

Marking the holes, and drill holes at the markings with an 8mm (5/16") drill bit.


4.

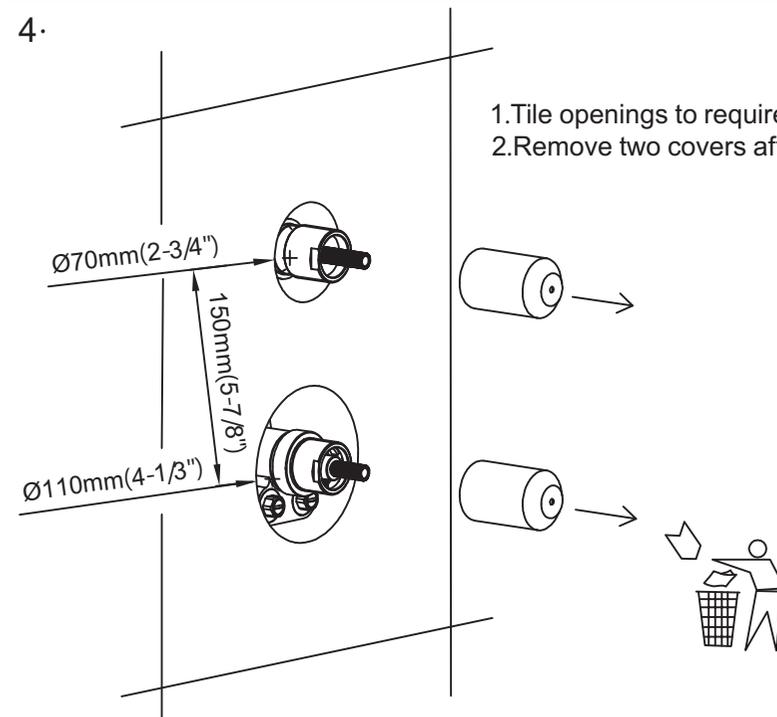

1. Tile openings to required dimensions;
2. Remove two covers after tiling the walls.




5.

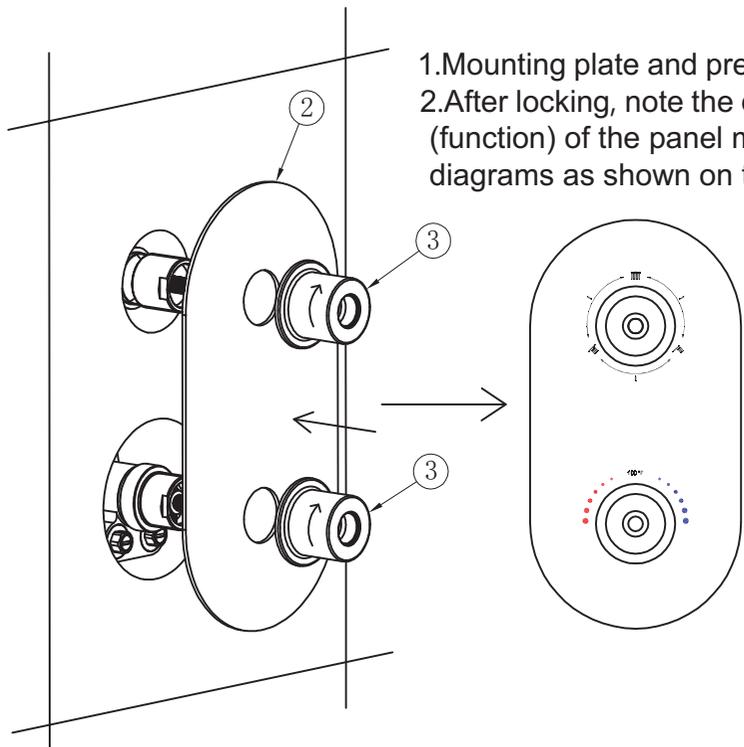


1. Mounting plate and pressure sleeve;
2. After locking, note the direction (function) of the panel marking diagrams as shown on the right.

7. Adjust handle position to control flowing pattern.

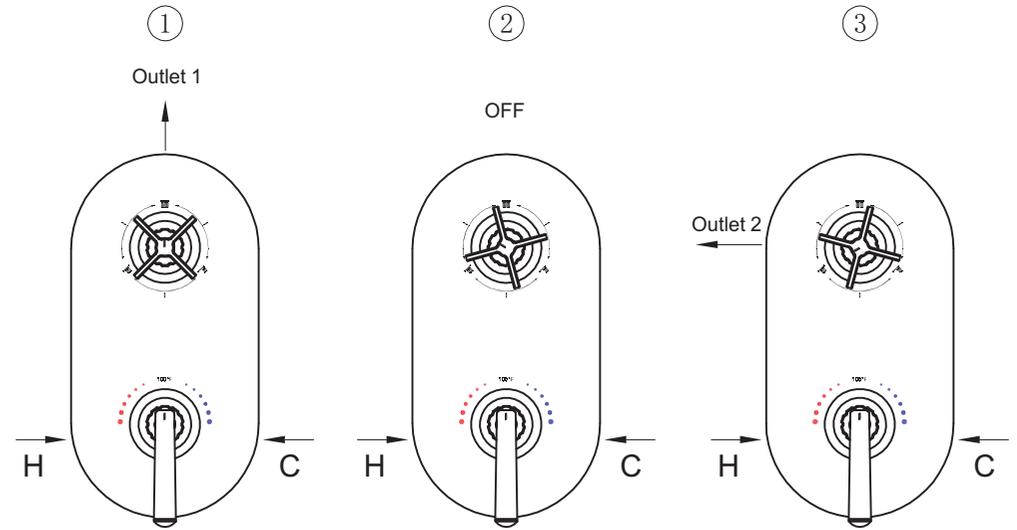

6. Handle mounting

Ensure that the marking line of the diverter valve core rod and the marking of the cross handle are vertically upward.

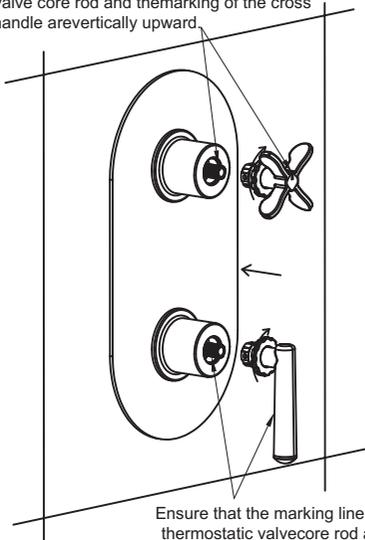


Ensure that the marking line of the thermostatic valve core rod and the handle rod are vertically downward.

Precautions for Handwheel Installation


※1. The line can't be misplaced; it should be kept in line. Otherwise, the water temperature of 100°F or 38°C will not be correct.



※2. Please ensure that the plastic locating ring (A) and handwheel locating pin (B) are kept in the same line with 100°F or 38°C. Otherwise, the water temperature will be incorrect.

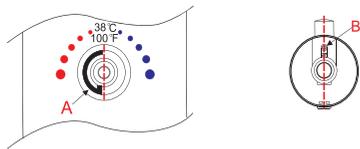


1. Align marking lines as shown;
2. Put on two handles;
3. Locking nut on handle.

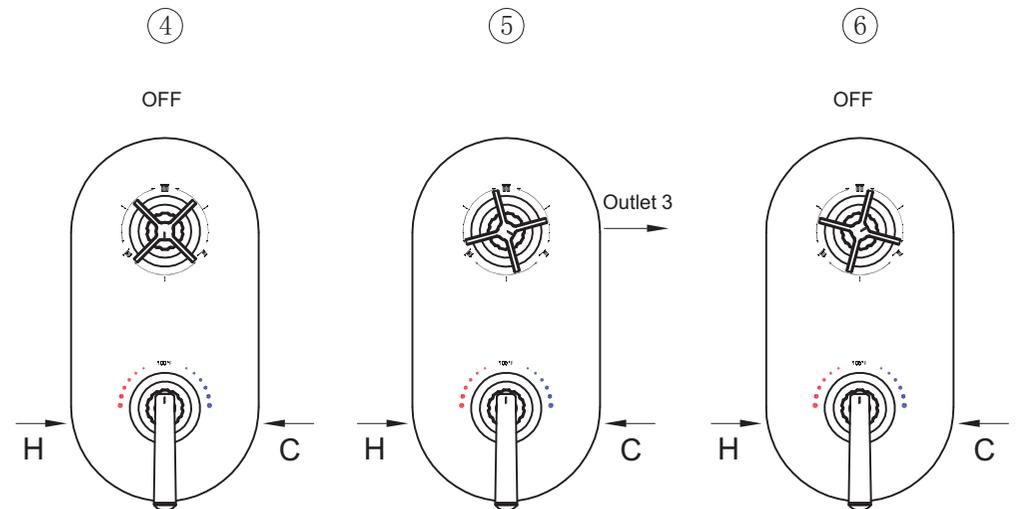


◆ Installation Of Main Shower Head And Shower Arm


8. Wrap the threads of the shower head arm with teflon tape and screw it into the wall connection as shown in the images

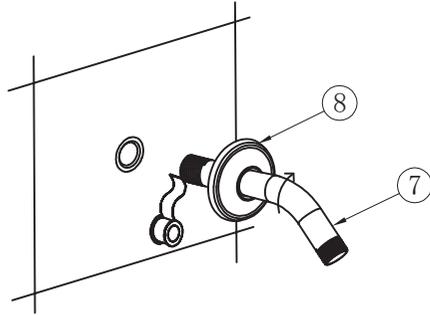


10. Wrap the threads of the shower head arm with teflon tape and screw it into the wall connection as shown in the images

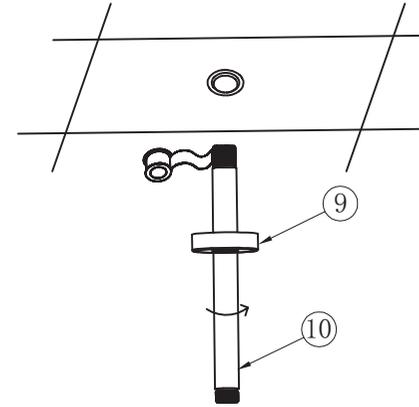

9. Wrap the threads on the opposite side of the shower arm and screw the shower head onto the arm.

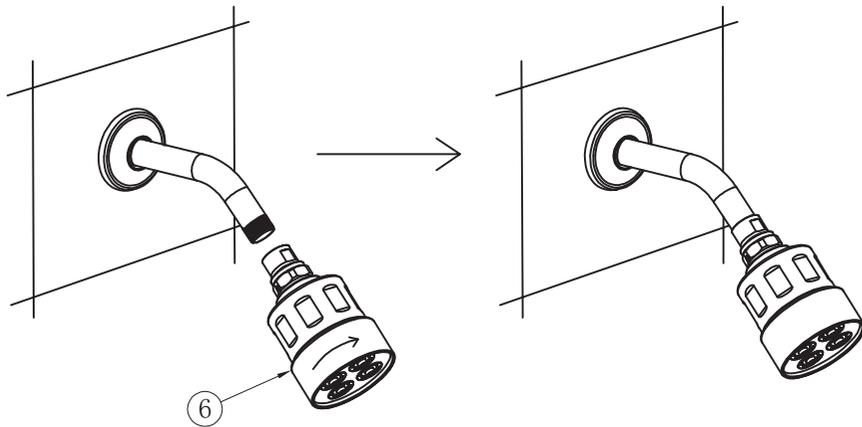


11. Wrap the threads on the opposite side of the shower arm and screw the shower head onto the arm.

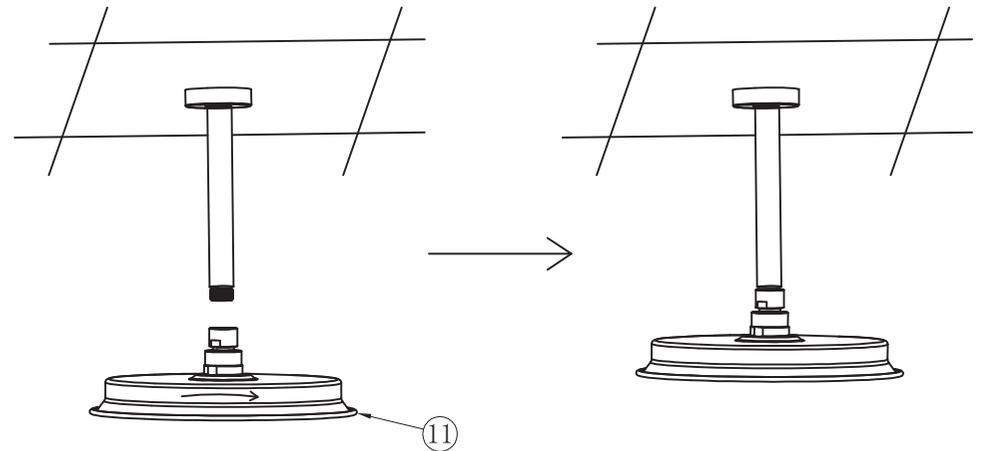


◆ The installation depth of handheld shower bracket

12.

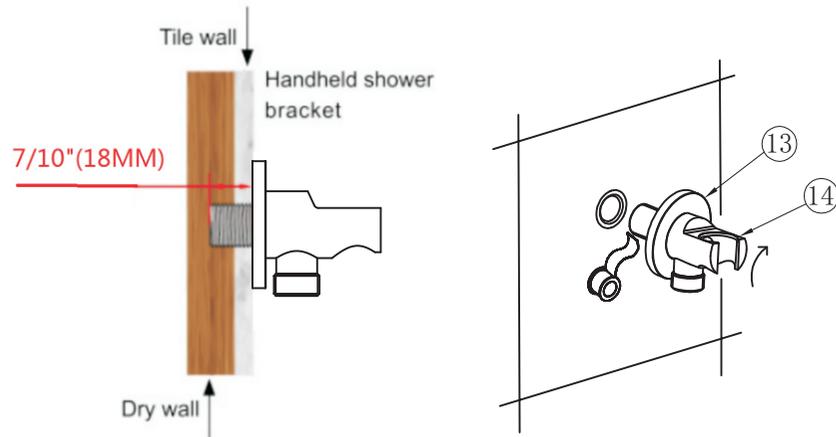

The thickness of the tile must be calculated for installation.
Connector size of male thread:USA:1/2"-14NPT.Canada:1/2"-14NPT

13.

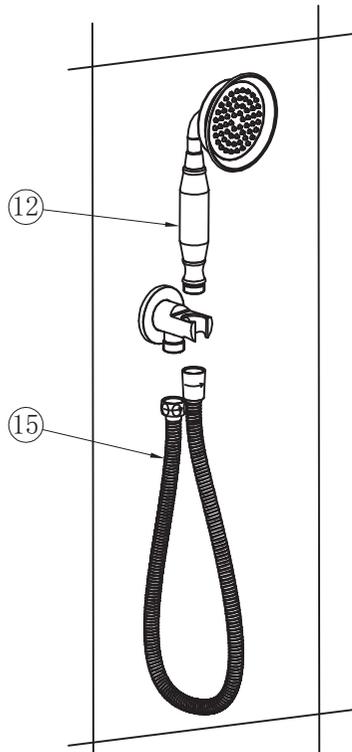


14. Finished



Do's

1. In order to keep the mixer surface bright, please clean the mixer regularly.
2. Rinse the faucet with clean water and wipe it with a soft cotton cloth.
3. Use one of the following cleaners to remove dirt from the surface:
 - a. Mild liquid cleaner.
 - b. Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely.
 - c. Polish liquid that does not cause abrasion.

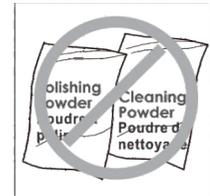

Don'ts

- a. Avoid using cleaning powder, harsh cleaning chemicals, brushes and coarse cloth to prevent scratching and friction.
- b. Do not use acid cleaners to clean the faucet as they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.