


Ceiling Fan

Installation Instruction

CONTACT INFORMATION

We want to hear your voice! Feel free to touch base if you encounter any issue when using our product(s) or want to know more about our brand.
We will be more than happy to provide top-notch pre-sales & after-sales service 24/7.

Installation Special Reminder

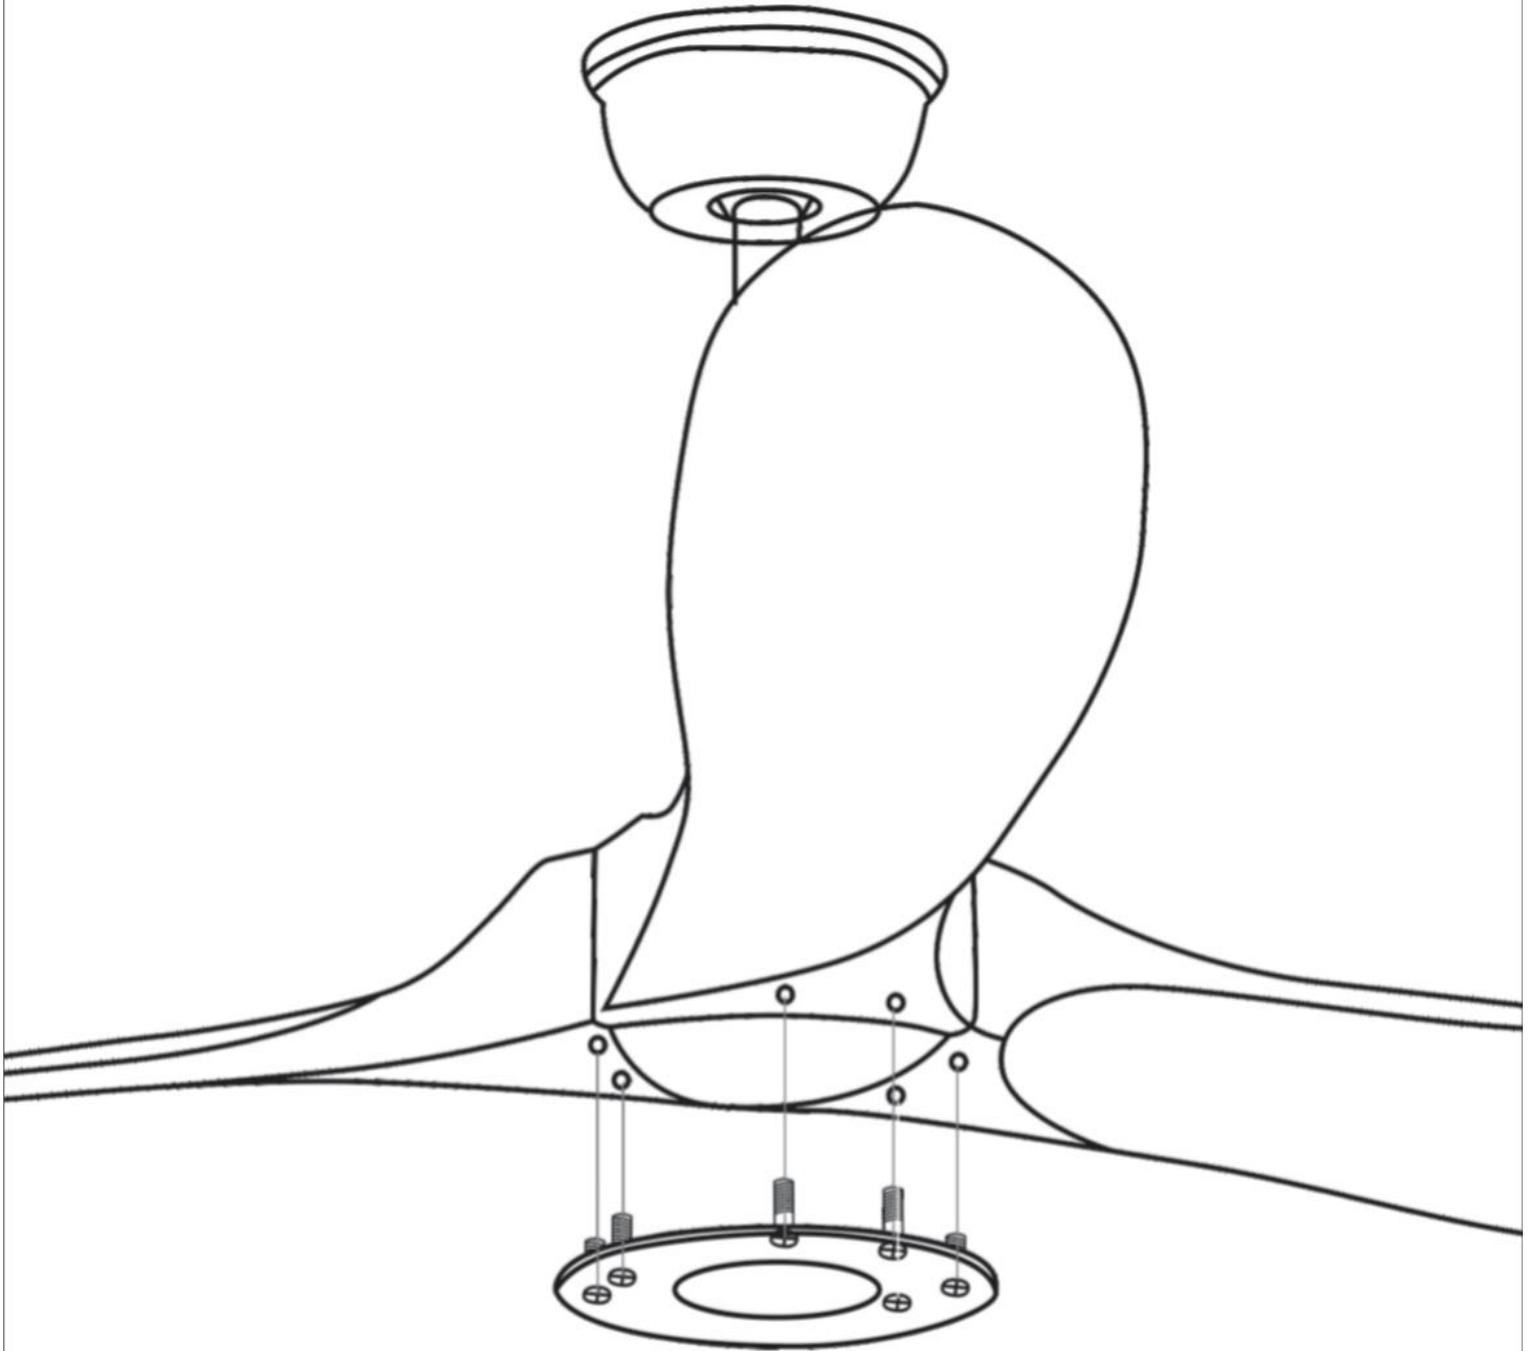

Before installing the fan blade, make sure that the iron ring (red) is covered. On the fan blade, tighten the screws.

Don't fix fan blades with screw directly. Because screw is long, if you fix fan blades with screws directly, it will break the copper core of motor .



SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.

SAFETY INFORMATION	01
PRE-INSTALLATION	02
INSTALLATION INSTRUCTION	04
OPERATION INSTRUCTION	07
SPECIFICATIONS	08
TROUBLESHOOTING	09




SAFETY INFORMATION



- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.


Installation Location

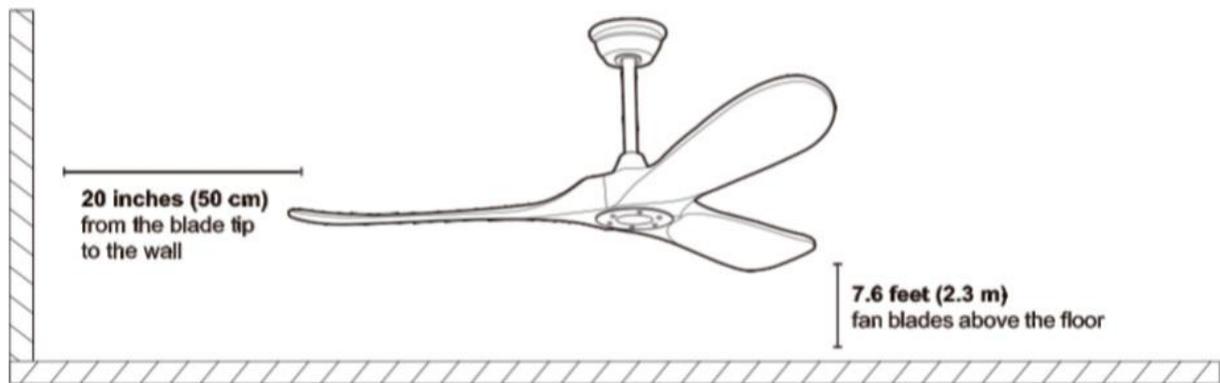

- Do not install the fan with wet hands.
- Do not insert foreign objects between the rotating fan blades.
- Do not bend the fan blades when installing or cleaning the fan.
- Do not disassemble or modify this product or use non-original parts without permission.
- Keep children away from your working area.
- Properly dispose of the fan's packaging material.
- Make sure the ceiling fan is firmly secure to the ceiling. Double check all connections before you restore power.
- Turn off the fan and wait for the blades to stop completely before performing any maintenance or cleaning.

PRE-INSTALLATION

Tools Required (Not Included)

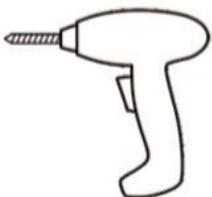

Power Drill




Screwdriver



Step Ladder




Wire Stripper

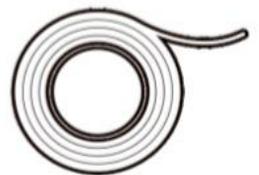

Electrical Tape



Parts List

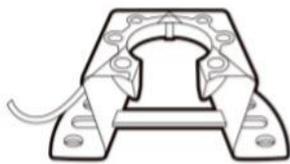


Mounting Bracket X 1



Canopy X 1




Iron Ring X 1

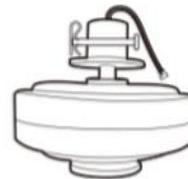

Motor X 1




Coupling Cover X 1

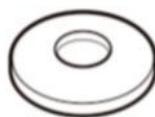


Canopy Cover X 1



Blade Screw X 7

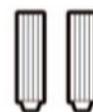


Aircraft Cap X 2

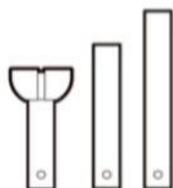

Downrod X




Remote Bracket Screw X 2

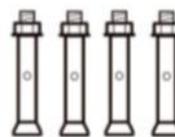

Expansion Bolt X 4




Self-tapping Screw X 4

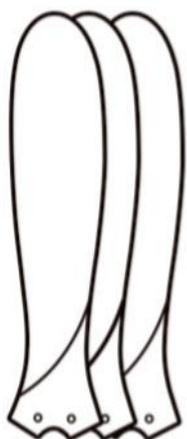


Fan Blade X 3



Remote Control Bracket X 1

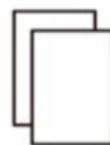

Balance Kit X 2

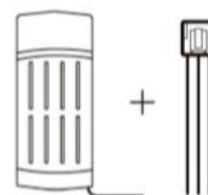

Receiver + Power cord X 1




Remote Control X 1




INSTALLATION INSTRUCTION

Step 1: Mounting Bracket Installation

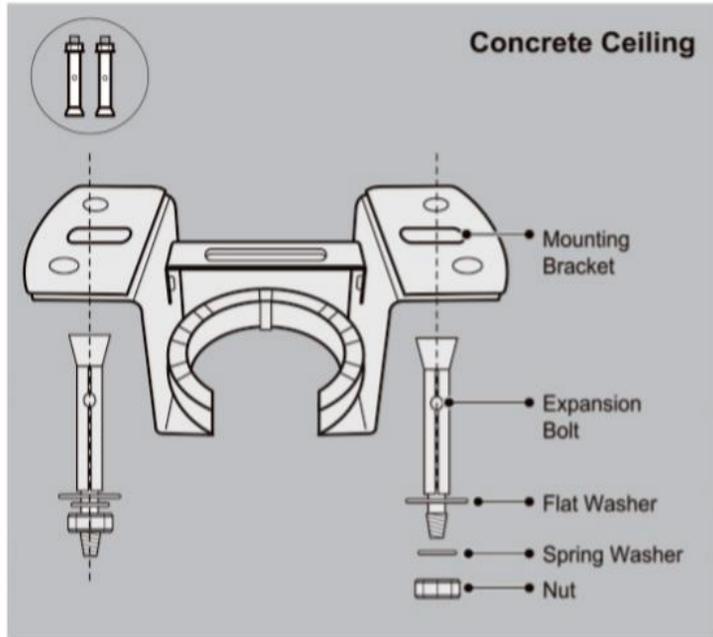


1. Drill holes with electric drill ($\phi 8$ mm).
2. Use expansion screws to fix the mounting bracket to the ceiling.

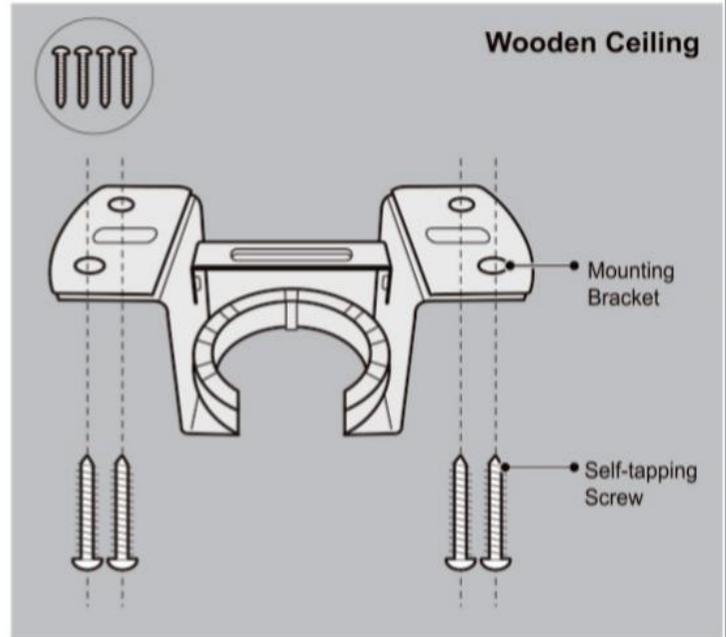

Fasten the mounting bracket to the ceiling with self-tapping screws.


Step 2: Fan Blade Installation

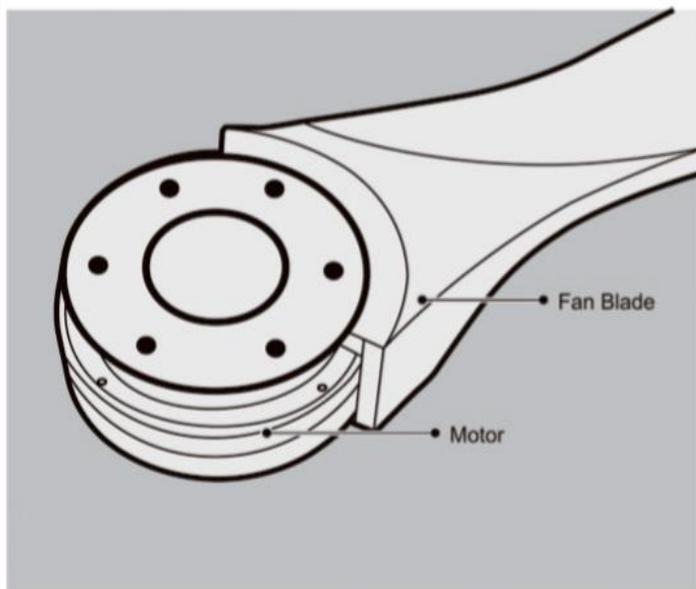

1. Clamp the fan blade under the triangular cover and fix the fan blade to the motor with screws and gaskets.

Note:


- The fan blade needs to be aligned with the "center" position of the screw hole group.
- Do not lock the screws when installing the blades and then tighten all the screws after all the fan blades are installed.

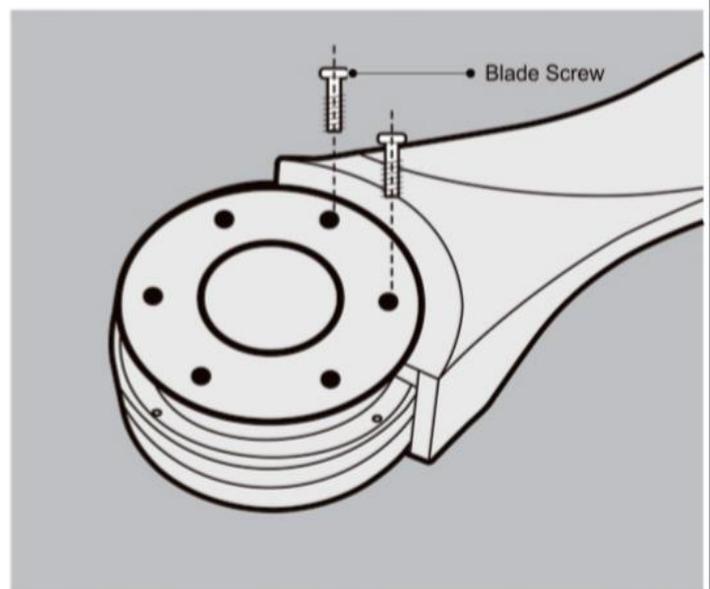


2. Loosen the screws of the upper triangular cover of the motor with an electric drill.




Step 3: Downrod Installation

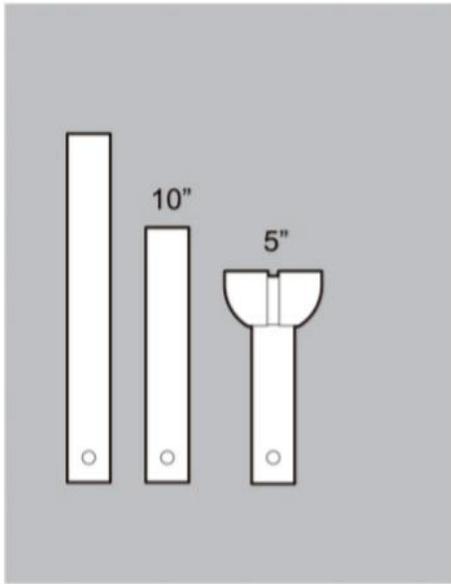


- 1 The height of the 42" boom is (5"/10"/14")
- The height of the 52" boom is (5"/10"/18")

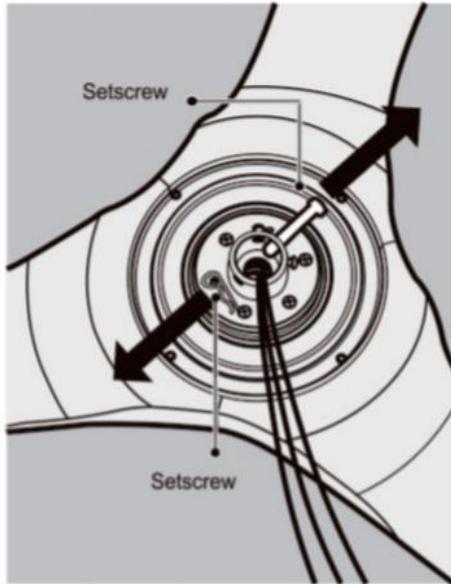


- 2 Take out clevis pin on the motor.

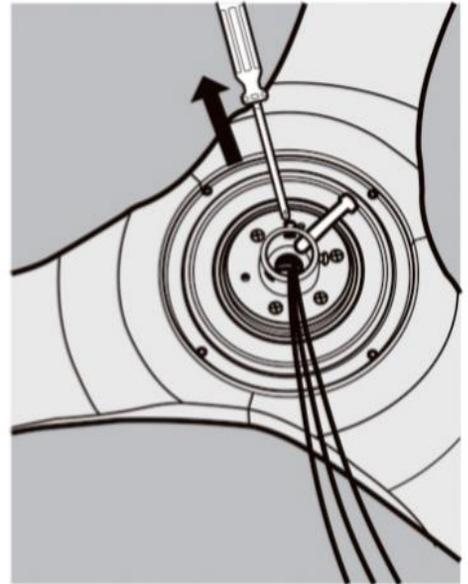

- 3 Loosen the screws on the motor, and do not take them out completely.

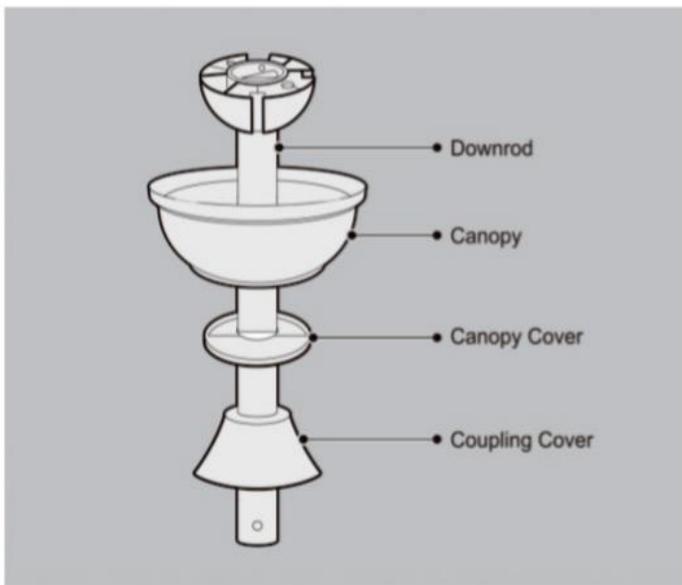


- 4 Assemble the canopy, canopy cover and coupling cover to the downrod in turn.

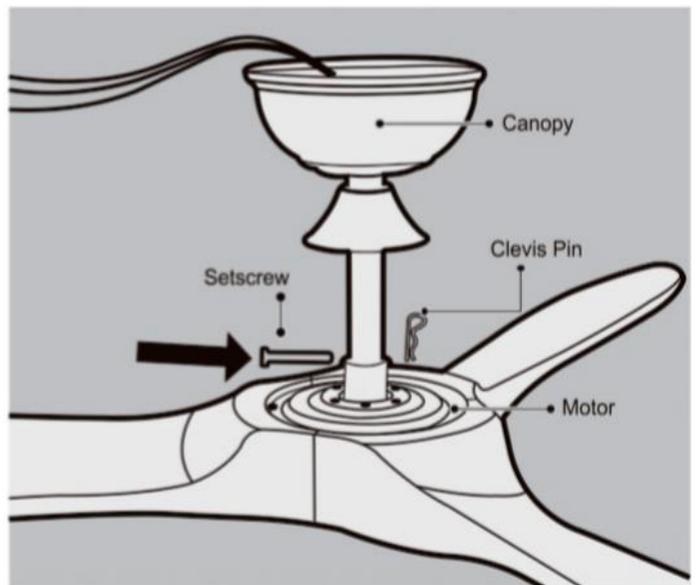


- 5 Thread the motor wire through the lower pull rod, lock the setscrew with the clevis pin, and tighten the motor screw.



Step 4: Installation of the Assembled Fan

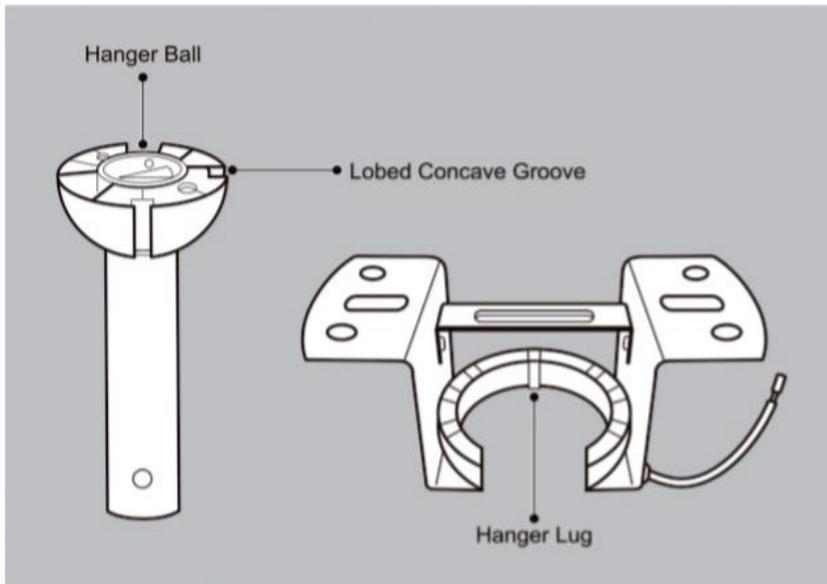


1 Lift the assembled fan onto the mounting bracket.

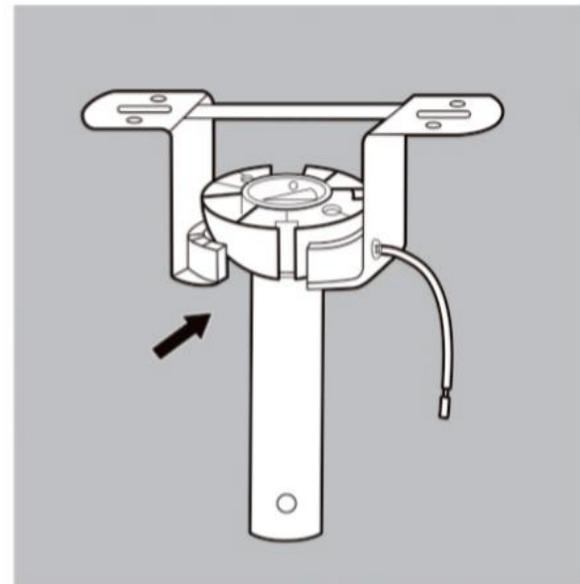


2 Ensure the concave groove of the hanger ball is positioned on the hanger lug of the mounting bracket.

Step 5: Wiring Instruction


⚠ Shut off the power to the fuse box or circuit breaker before wiring.

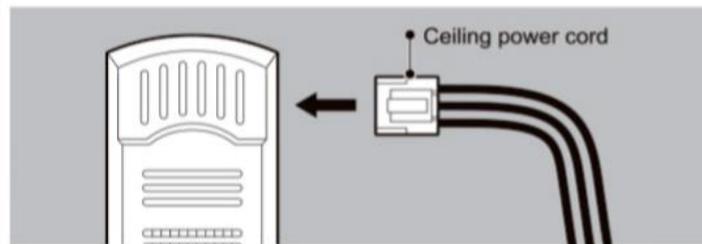


1 Connect the ceiling power cord to the receiver.

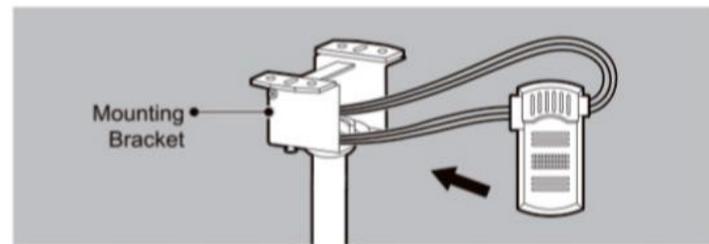

3 Put the receiver into the mounting bracket.

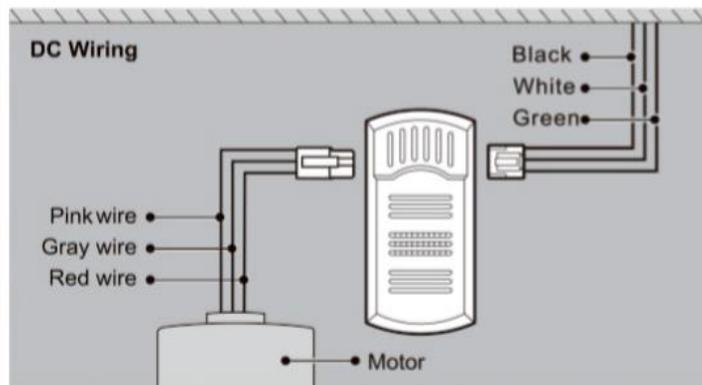

2 The receiver is connected to the motor power cord and the ceiling power cord respectively.

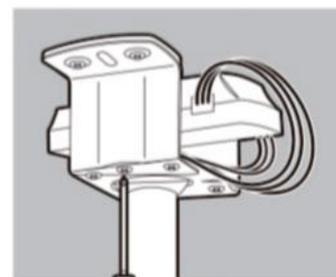

4 Cover the receiver and power cord and tighten the screws.



5 Decorative cover on, rotate tighten

Note:

Connect wires color to color, plug to plug.





OPERATION INSTRUCTION

Control Method

The diagram shows a vertical remote control with the following labels and functions:

- Button reminder light** and **Wind Speed/timing**: Located at the top, indicated by a small circle and a bar graph.
- Light ON/OFF**: A lightbulb icon with the text "Turn on/off".
- FAN ON/OFF**: A fan icon with the text "Stop".
- Speed of the Fan (1-6)**: Six numbered buttons (1-6) for fan speed control.
- Timing Control (The Fan)**: A button labeled "Timing switch 2H - 4H - 6H".
- Direction of the Fan (Forward/Reverse)**: A button labeled "F/R Long Press Bell 3 sounds".


An inset box shows a detailed view of the button layout:

- Top row: Light ON/OFF (lightbulb icon), Fan ON/OFF (fan icon).
- Second row: Speed UP (upward arrow), Timer UP (clock icon).
- Third row: Speed DOWN (downward arrow), Timer DOWN (clock icon).
- Bottom row: Fan OFF (power icon), Forward/Reverse (Long Press) (fan icon with two arrows).


Code Matching of Remote Controller:
 Learning code matching mode is used between emitter and receiver. Turn off the power for 10 seconds, then press and hold the light and Fan stop button of the remote control at the same time with your left hand, Immediately turn on the power with your right hand, hear the two beeps of Didi, release your left hand, and successfully learn the code.

Note : Sensing Distance: 33 ft - 49 ft (10 m - 15 m) Direction of the fan / Reverse Switch

Reversible Function

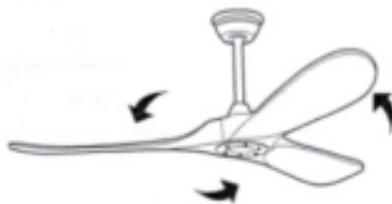

Summer (Forward):
A downward airflow creates a cooling effect.

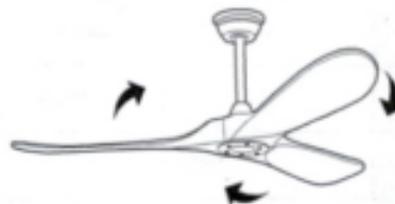

Winter (Reverse):
An upward airflow increases the indoor temperature.

PS: If you want to change the fan's rotation direction, please press the button while the fan is running.



Timing Control


1H: The fan will automatically shut off after 1 hour.

4H: The fan will automatically shut off after 4 hours.

8h: The fan will automatically shut off after 8 hours.

Close the Timing Control: Press the button "FAN ON/OFF"

SPECIFICATIONS

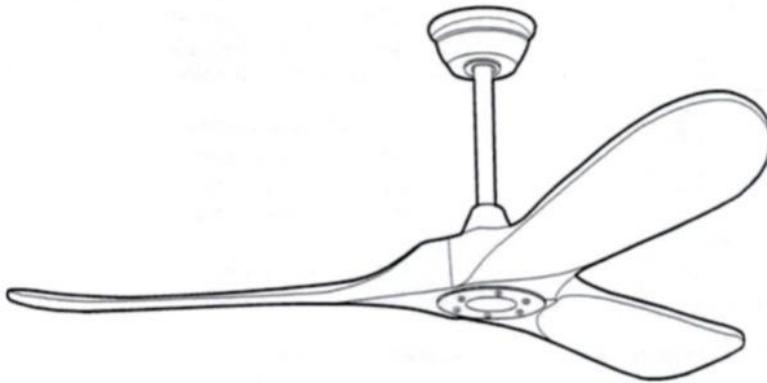

Product Name	Ceiling Fan				
Rated Voltage	100V-240V				
Size	42-inch	52-inch	60-inch	70-inch	88-inch
Motor Power	35W	35W	40W	45W	50W
Control Method	Remote Control				
Fan Blade	3 solid wood fan blades				



TROUBLESHOOTING

If there is a problem with the fan during use, please check the following tips for solutions. If the problem still cannot be solved, please contact our after-sales team.

The Fan Does Not Respond to the Remote Control.

- Check that all wire connections are correct and secure.
- Verify that the power is turned on and reaching the receiver.
- Verify that the batteries of the remote control are installed with the correct polarity, making sure to install the + (positive) end of the batteries on the solid end and the - (negative) end on the spring.

The Fan Makes a Humming Noise.

- Make sure the controls you use are supplied with your fan.
- Make sure all accessories are securely fastened. Loose parts often cause a vibrating noise or buzzing sound.
- Disassemble the fan and reinstalling it can sometimes remedy this resonant vibrating noise.

The Fan Makes a Repetitive Ticking Noise.

- Check for obstructions in the rotor path.
- Make sure mounting hardware at the ceiling is firmly fastened.
- Make sure all other hardware and blade attachments are tight.
- Give the fan a "Break in Period" of a few hours to a few days, then repeat the steps above.

The Fan Wobbles.

- Make sure the mounting plate and hardware at the ceiling are firmly fastened.
- Make sure all screw fittings on the fan are tight.
- If necessary, use the self-tapping screws provided to further secure the bracket to the joist.