

Assembly Instructions

Caution: You must read these Assembly Instructions before you proceed

Care & Maintenance



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- To obtain the longest lifespan of your outdoor product minimizing exposure to direct sunlight is recommended.



- Children should not climb or jump on the furniture.



- Do not write on furniture without a padded barrier to protect the surface.



- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



- Not for commercial use. For residential use only.




- Stains may be removed with mild soap solution and damp cloth.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.







Please look in the Seat Panel for hardware packs.

CLUB CHAIR

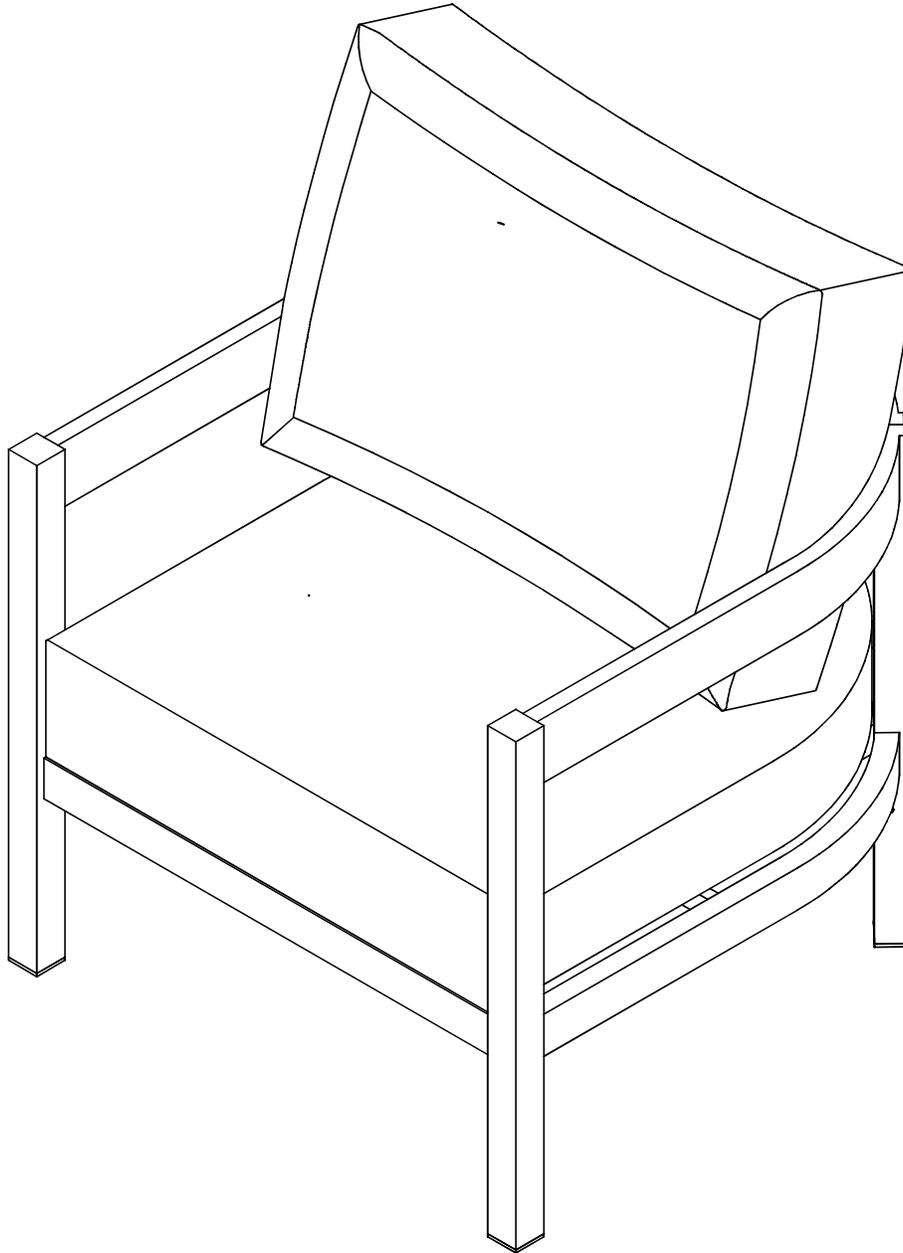

Caution: This Club chair is NOT a TOY.
Keep your child / children at bay during the assembly process.
Whenever lifting or moving the Club chair and to prevent any damage to it,
two adults may be needed to execute these actions.

   Part List

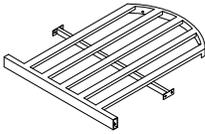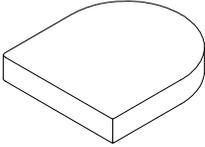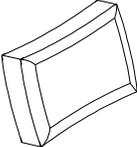
Label	Picture	Description	Qty
A		Left Arm Panel	1
B		Right Arm Panel	1
C		Backrest Panel	1
D		Seat Panel	1
E		Seat Cushion	1
F		Back Cushion	1

Hardware


No.	Picture	Description	Qty
①		Bolt (M6x35mm)	3
②		Bolt (M6x20mm)	13
③		Umbrella nut (M6x30mm)	5
④		Washers (M6x1mm)	11
⑤		Allen Wrench	2

Assembly Preparation


Before Beginning Assembly:

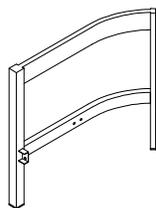


Ax1

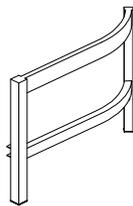


Bx1

 


Cx1

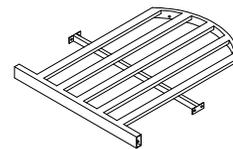

Dx1

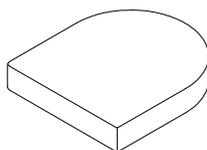

Ex1

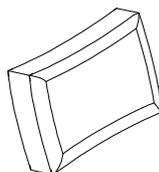

Fx1

- | | | |
|---|---|-----|
| ① |  | x3 |
| ② |  | x13 |
| ③ |  | x5 |
| ④ |  | x11 |
| ⑤ |  | x2 |



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Overview

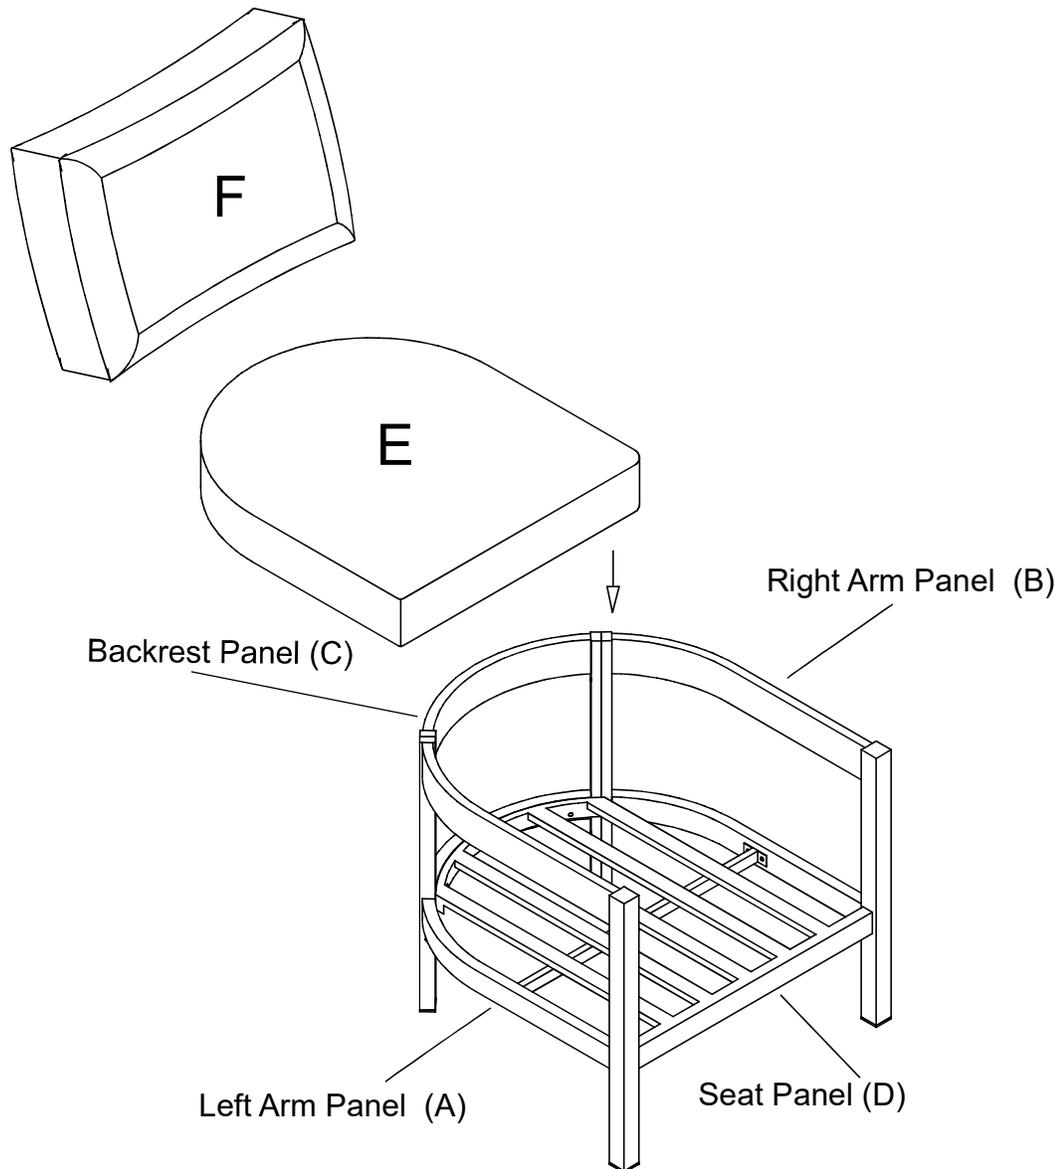

FRONT FACING


This Club chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Club chair, the above picture to assemble to help you put the various parts into perspective. Please read through the instructions here below to familiarise the parts and steps before assembly.

Step 1

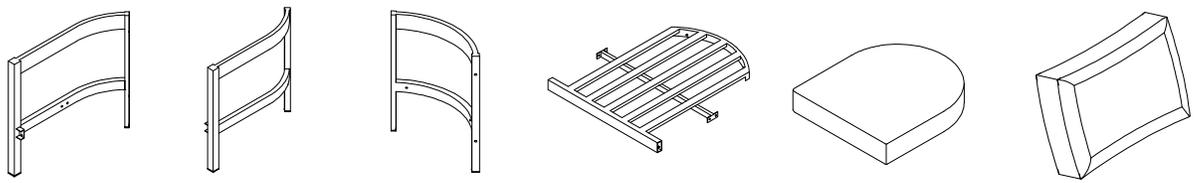

Unpack and place all parts on a clean, non-marring surface.

Step 2

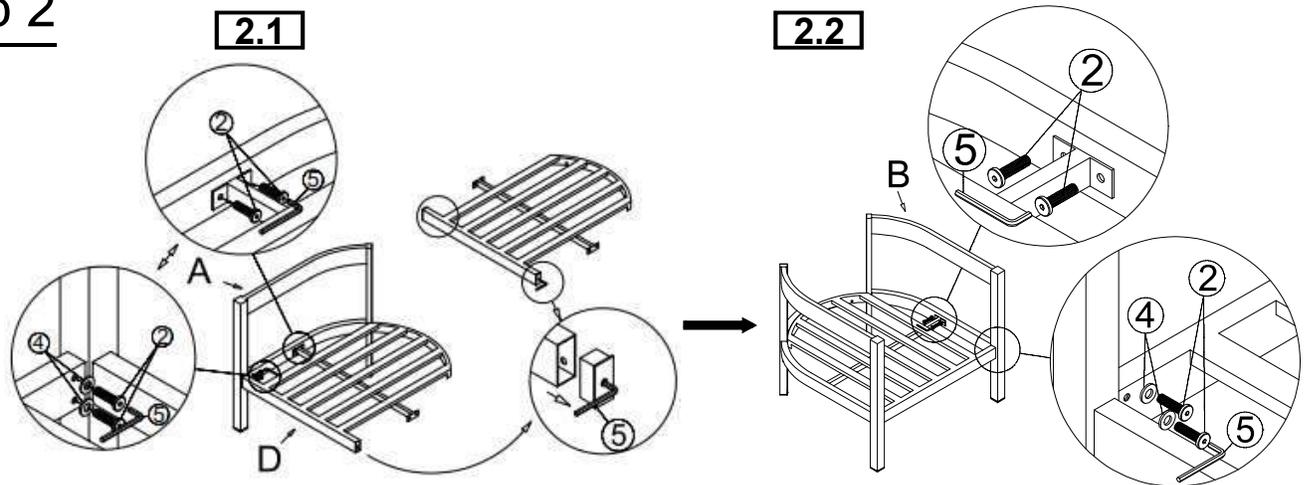


Place the Left Arm Panel (A) and Seat Panel (D) upright as shown in the picture above onto a clean, soft surface to avoid any scratches or damage to the product.

2.1: Attach Left Arm Panel (A) to the Seat Panel (D) using Bolt (②) and Washers (④) with Allen Wrench (⑤).

Note: Please remove the plastic button on the seat as shown in the picture.

2.2: Attach Right Arm Panel (B) to the Seat Panel (D) using Bolt (②) and Washers (④) with Allen Wrench (⑤). **Do not fully tighten the and Bolts.**


Step 3

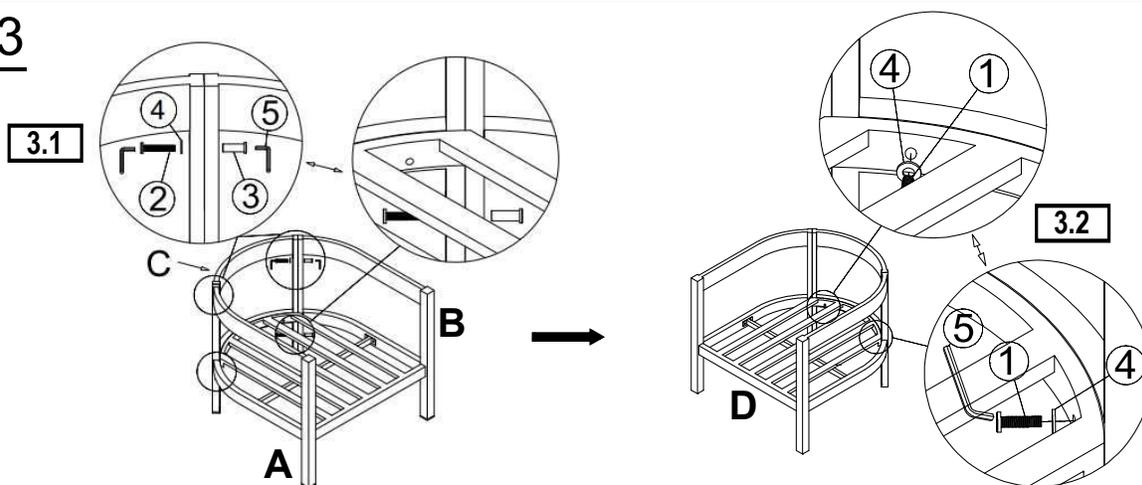

3.1 :Attach Backrest (C) to the Left Arm Panel (A) Right Arm Panel (B) Using Bolt (②) Umbrella nut (③) Washers (④) with Allen Wrench (⑤).

3.2 :Attach Backrest (C) to the Seat Panel (D) Using Bolt (①) Washer (④) with Allen Wrench (⑤). **Do not fully tighten the Bolts.**

Step 4

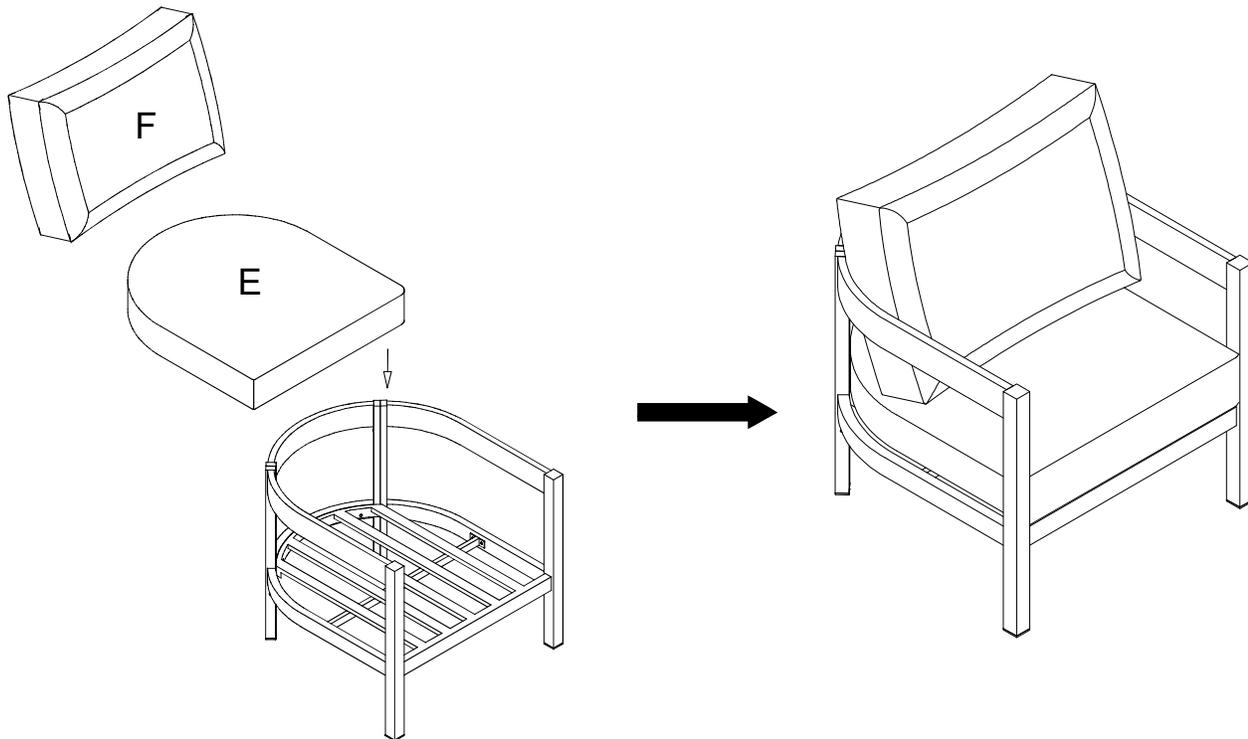

Inspect the Club chair and make sure all parts are adequately connected.

Then EXERT pressure, floorwards onto the Club chair with both hand

This pressure will help align all parts at all joints.

In a sequential manner, tighten all Bolts and Screws at all joints.

Adjust the Levellers until the Club chair is level with the ground.

To adjust the Levellers, get assistance from an adult partner to lift/lean and hold the Club chair while you are working.

CAUTION : When tightening these screws and bolts, tighten sequentially.

DO NOT tighten any screw or bolt fully and then move towards the next one. This could cause the frame to warp.

WARNING!! IF THE CLUB CHAIR SEATE IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Put Seat cushion (E) and Back cushion (F) to the Club chair as show above.

Your Club chair is ready for use.

This Club chair can only be used on a flat, level surface.