

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

706588
Coffee Table

ITEM: 706588



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC	B	LEG PANEL		2PCS
C	CROSSBAR		1PC	D	COVER CAP		2PCS

HARDWARE IDENTIFICATION

1	BOLT (\varnothing 5/16" x 45MM - RBW)		8PCS	3	FLAT WASHER (\varnothing 5/16" - RBW)		8PCS
2	LOCK WASHER (\varnothing 5/16" - RBW)		8PCS	4	ALLEN WRENCH (M4 x 60MM - RBW)		1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **706588**

ASSEMBLY INSTRUCTIONS

STEP 1

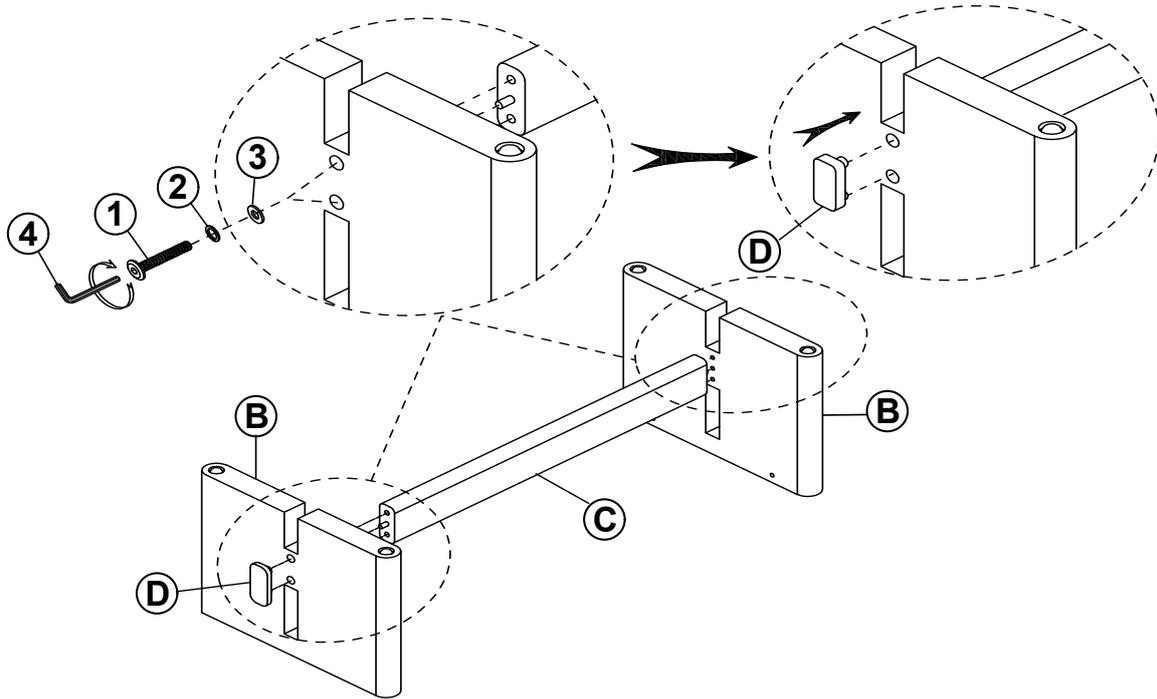


STEP 2

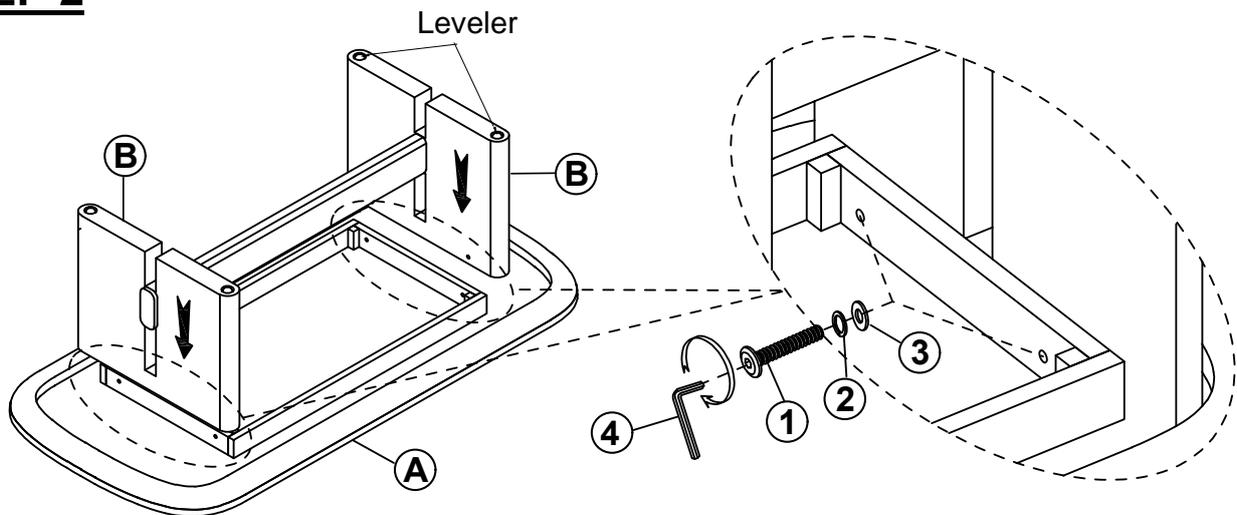


STEP 3

COMPLETE

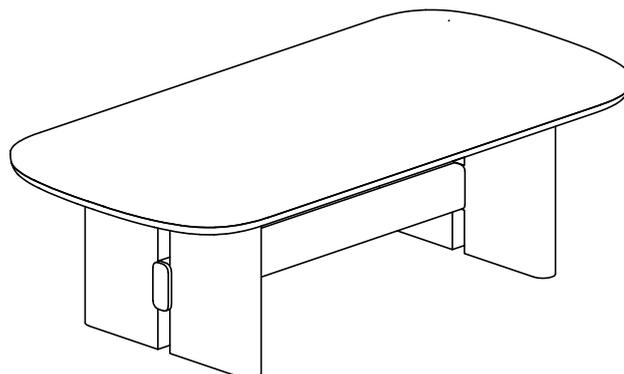

ITEM: **706588**

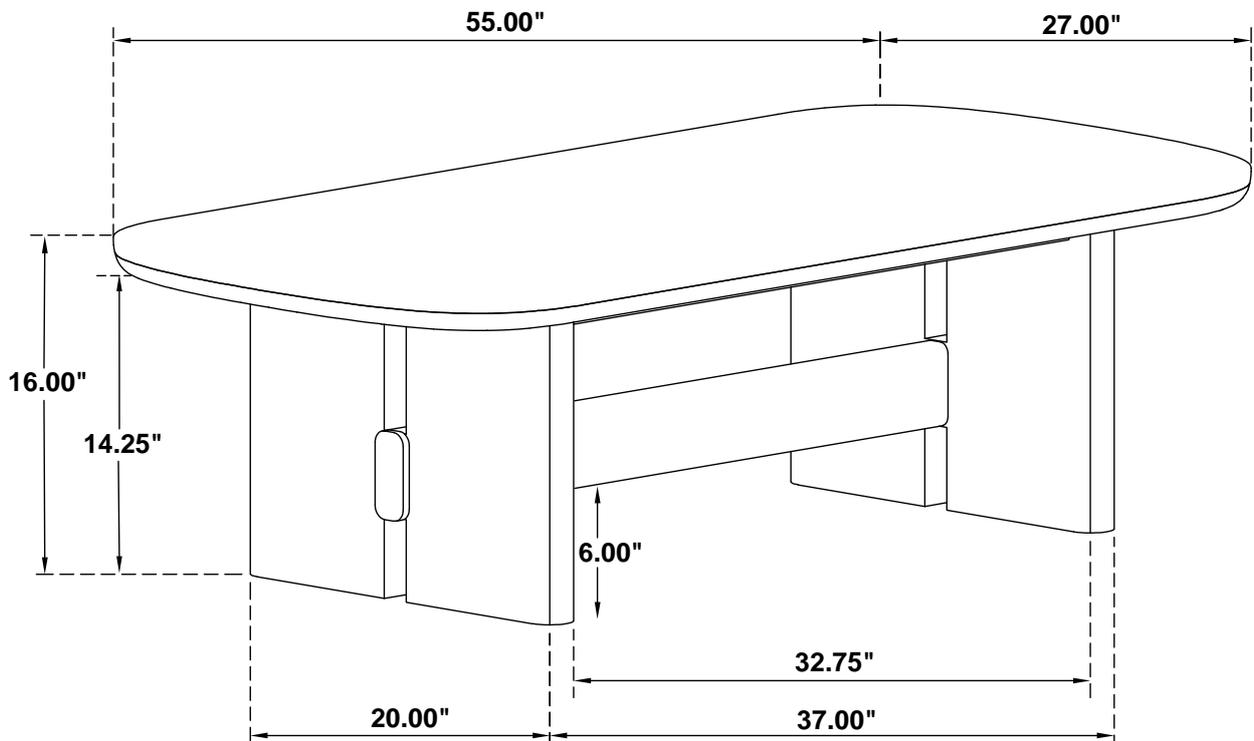

Note: Dimension tolerance $\pm 5\%$