


ASSEMBLY INSTRUCTION

ITEM NO.N711P410389

CABINET

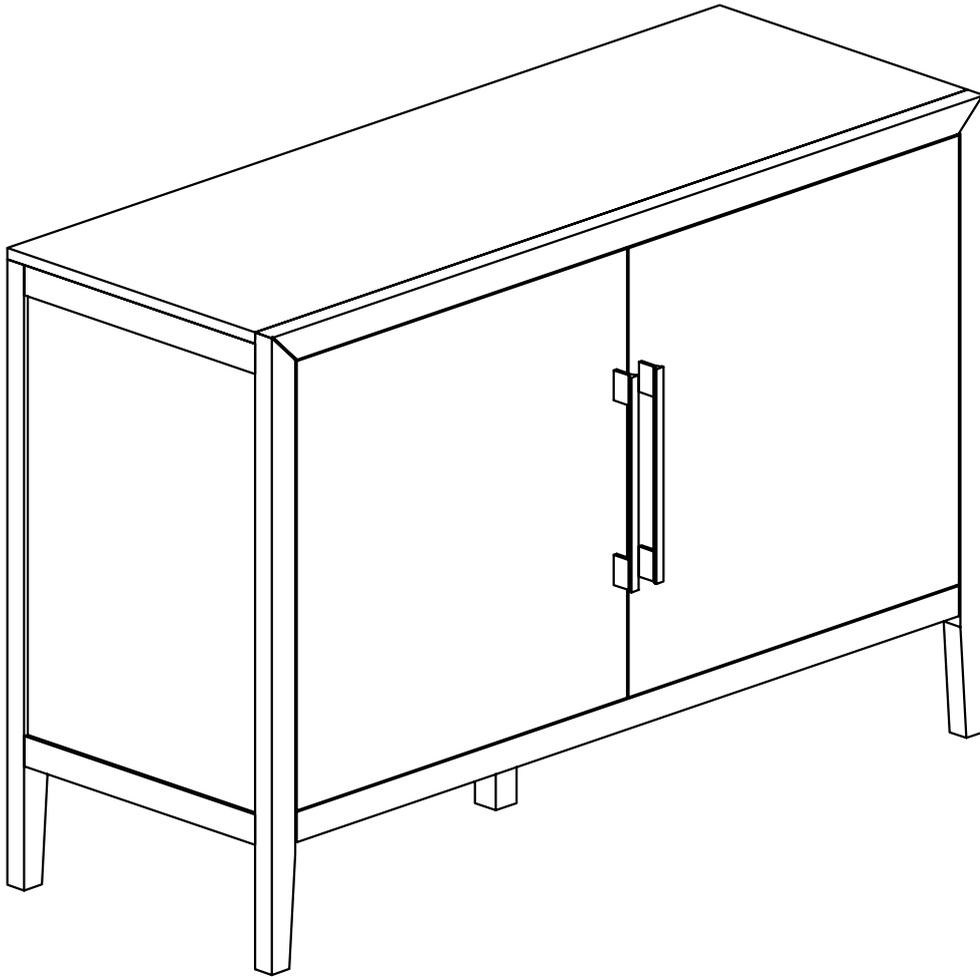

 WARNING	
	<p>This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.</p>

ASSEMBLY INSTRUCTION

ITEM NO. **N711P410389**

Please read these instructions fully before starting assembly:


1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO. N711P410389

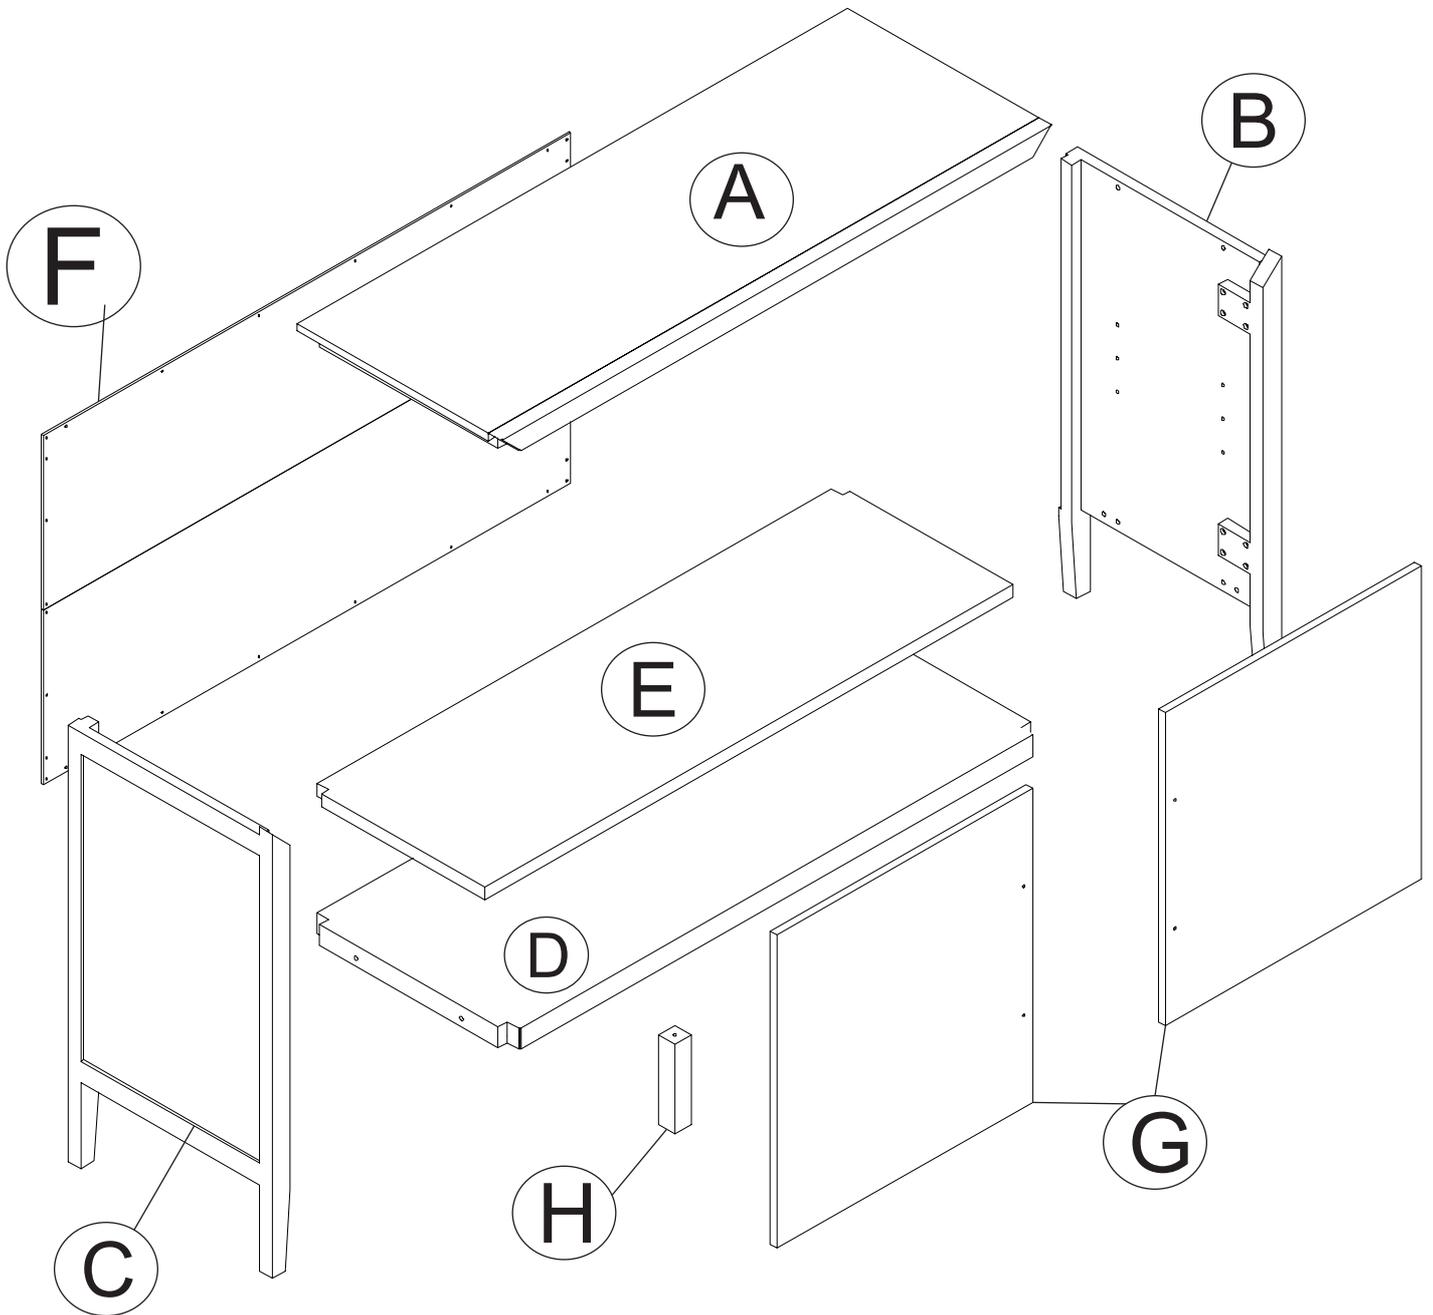


ASSEMBLY INSTRUCTION

ITEM NO. N711P410389


Part List

A

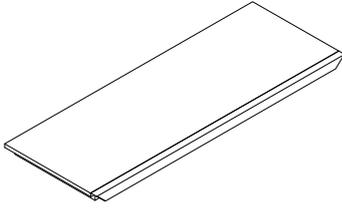


TOP (1 pc)

 B




RIGHT SIDE PANEL (1 pc)

 C




LEFT SIDE PANEL (1 pc)

D

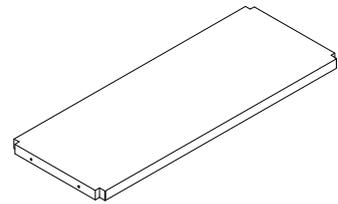

BOTTOM (1 pc)

E

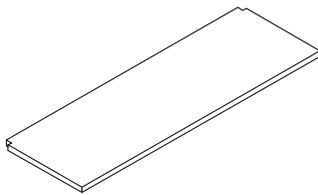


SHELF (1 pc)

F




BACK PANEL (1 pc)

G

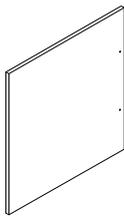

DOORS (2 pcs)

 H










SUPPORT BOTTOM (1 pc)

ASSEMBLY INSTRUCTION

ITEM NO. N711P410389

    
Hardware List
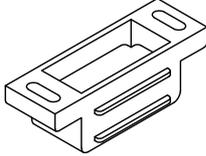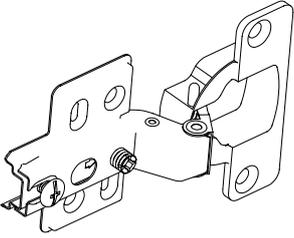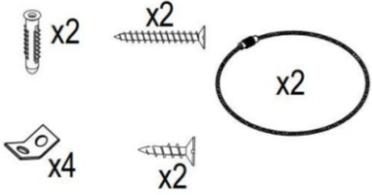
<p>①</p>  <p>Magnetic Door Catch (2 pcs)</p>	<p>②</p>  <p>Flat screw (28pcs) M3 x 15 mm</p>	<p>③</p>  <p>Wooden Dowel (4 pcs) Ø 8 x 30 mm</p>
<p>④</p>  <p>Bolt (8 pcs) 1/4" x 38mm</p>	<p>⑤</p>  <p>Spring Washer (8 pcs) Ø6 x 12mm</p>	<p>⑥</p>  <p>Flat Washer (8 pcs) Ø6 x 16mm</p>
<p>⑦</p>  <p>Allen Key (1 pc) K4 x 80mm</p>	<p>⑧</p>  <p>Full overlay Hinge (4 pcs)</p>	<p>⑨</p>  <p>Patch Support Shelf (4 pcs) Ø 6 x 9 mm</p>
<p>⑩</p>  <p>Mushroom Screw (16pcs) M3 x 15</p>	<p>⑪</p>  <p>Bolt of Handle (4 pcs) M4 x 22</p>	<p>⑫</p>  <p>Handle (2 pcs) 12 x 25 x 285</p>
<p>⑬</p>  <p>Antitip Kit (2 Sets)</p>		

ASSEMBLY INSTRUCTION


ITEM NO. N711P410389

STEP 1:

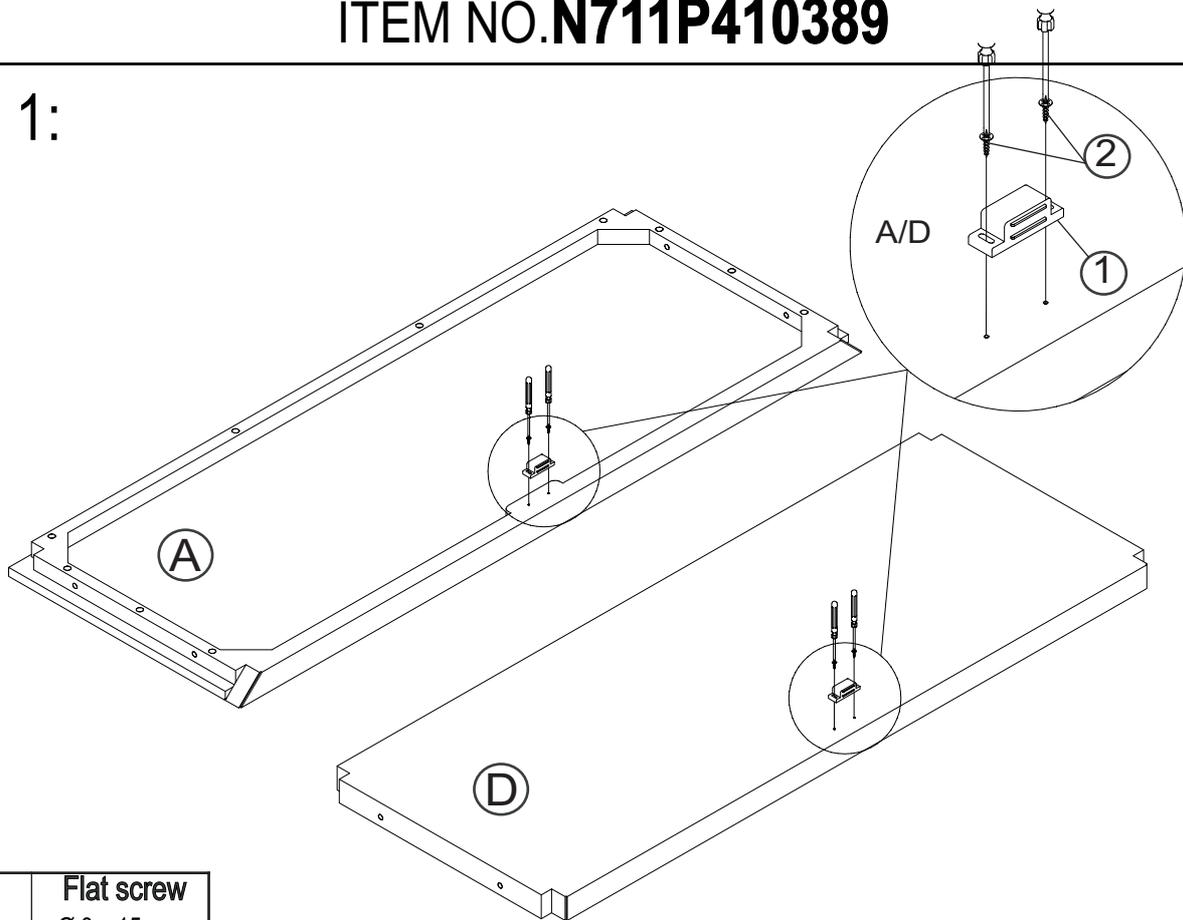

Magnetic Door Catch ① x 2	Flat screw Ø 3 x 15 mm ② x 4
----------------------------------	--

STEP 2:

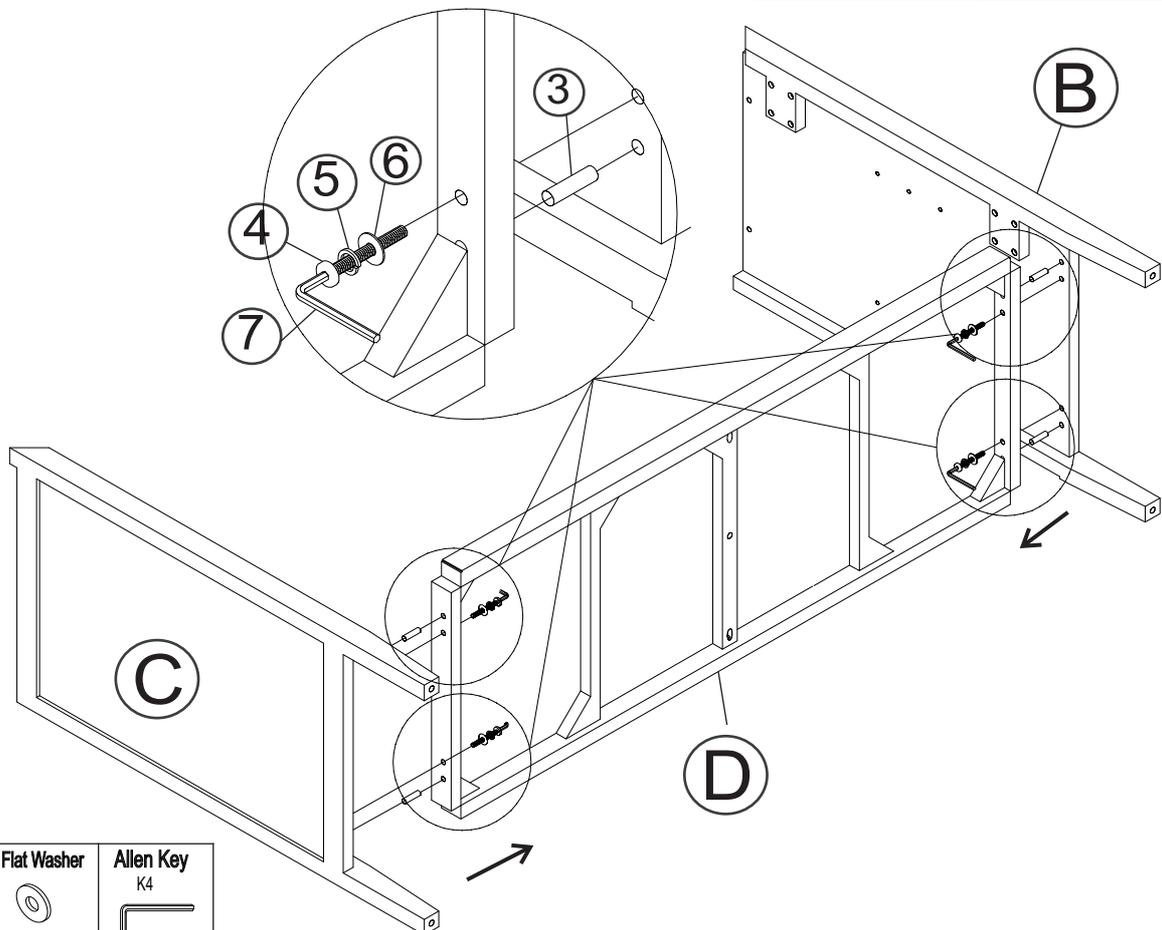


Wooden Dowel Ø 8 x 30 mm ③ x 4	Long Bolt Ø 1/4" x 38 mm ④ x 4	Spring Washer ⑤ x 4	Flat Washer ⑥ x 4	Allen Key K4 ⑦ x 1
--	--	----------------------------	--------------------------	------------------------------


ASSEMBLY INSTRUCTION

ITEM NO. N711P410389

STEP 3:

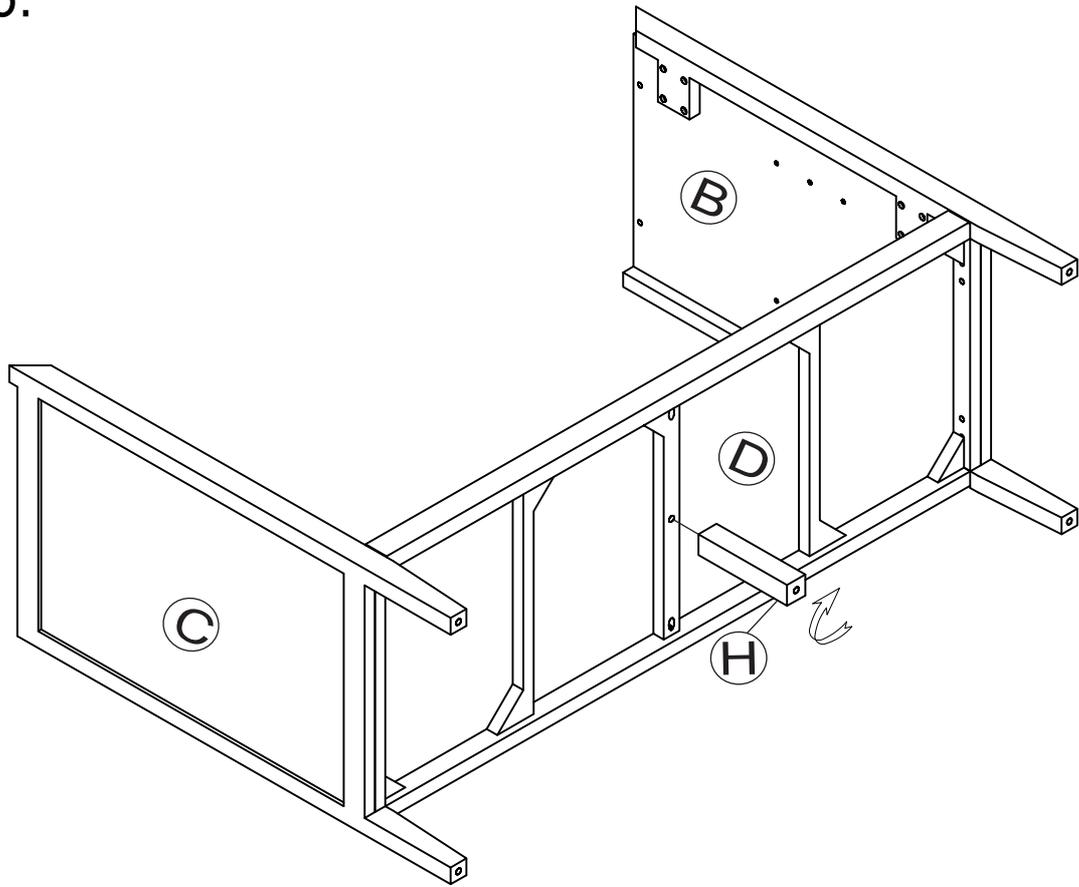


STEP 4:

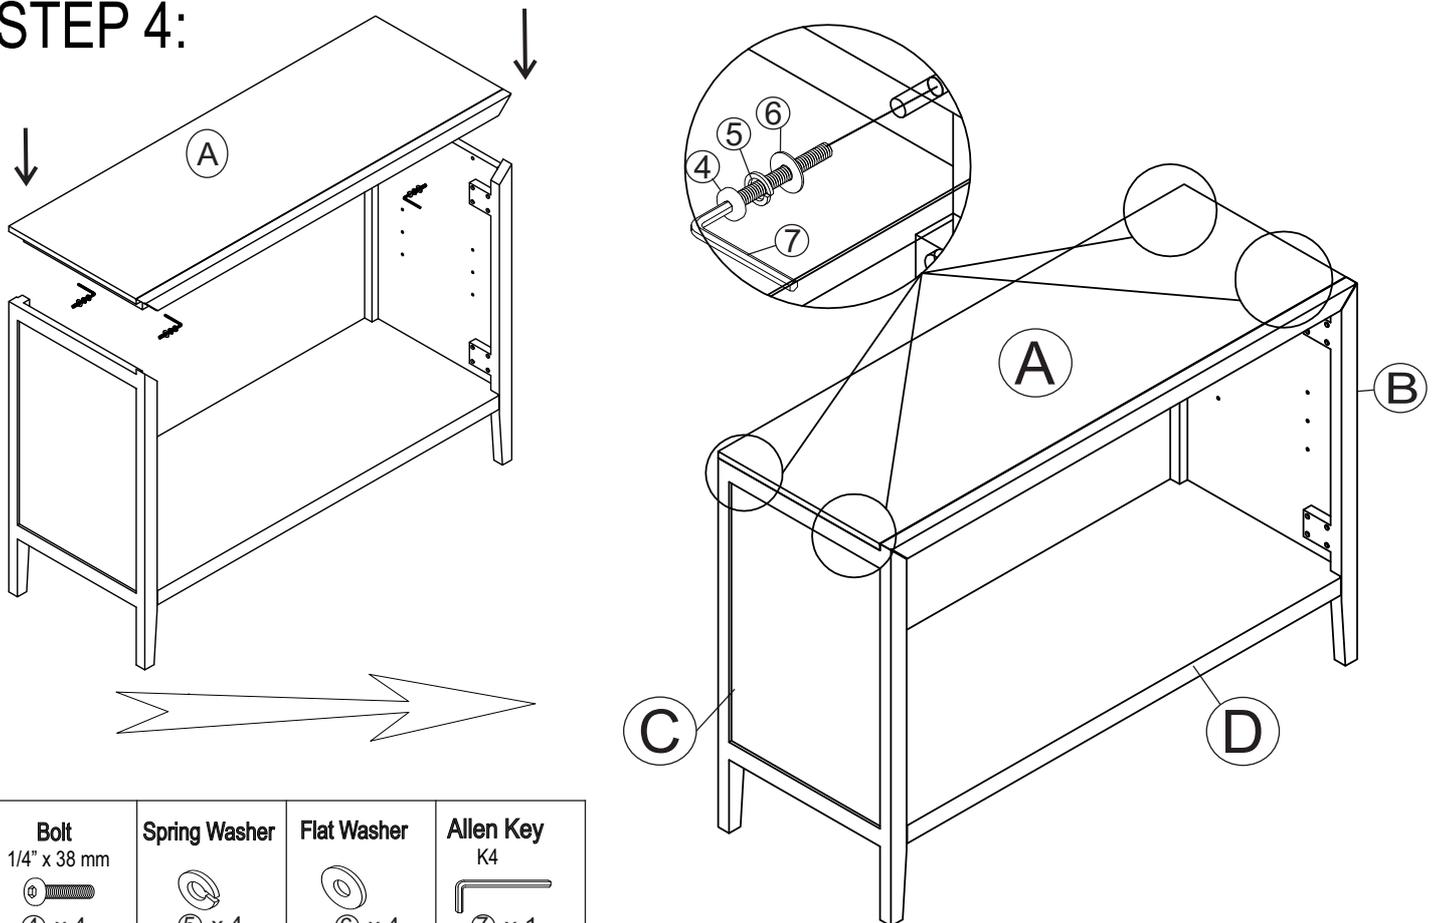

ASSEMBLY INSTRUCTION


ITEM NO. N711P410389

STEP 5:

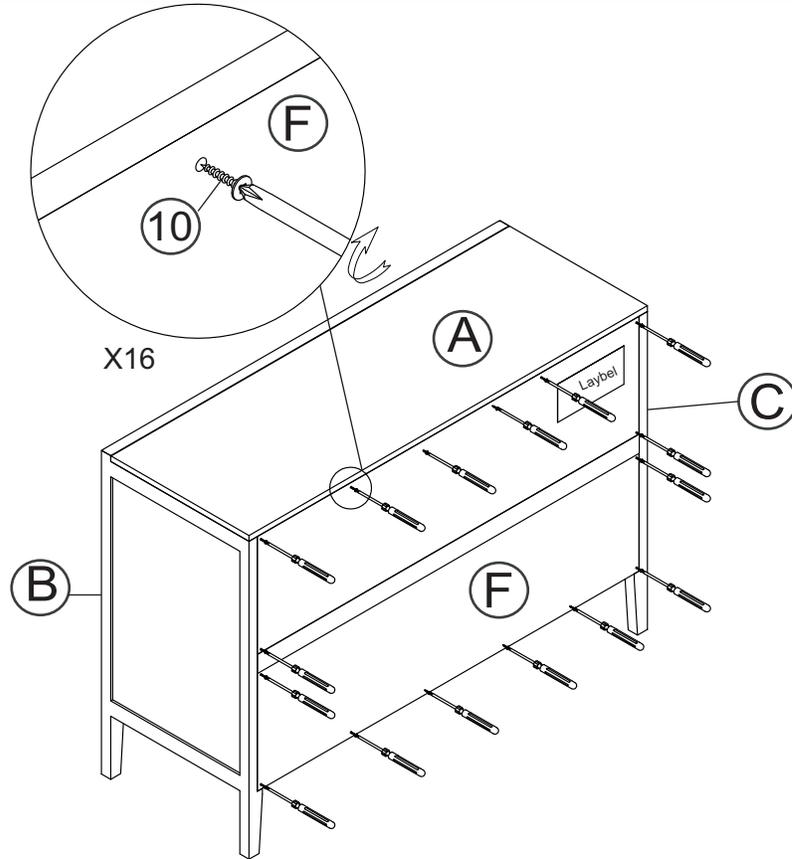


Mushroom screw

 Ø 3 x 15 mm



10 x 16

STEP 6:

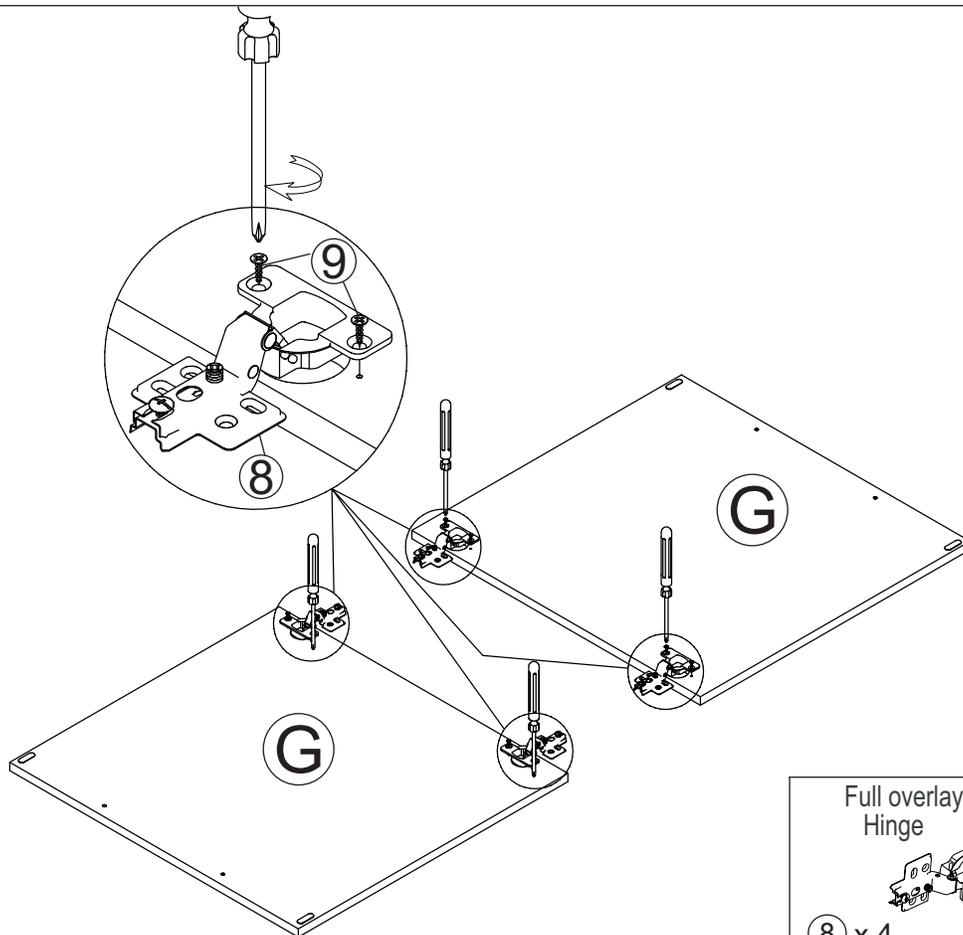


Full overlay
Hinge



8 x 4

Flat screw

 Ø 3 x 15 mm




2 x 8

ASSEMBLY INSTRUCTION

ITEM NO.N711P410389

STEP 7:

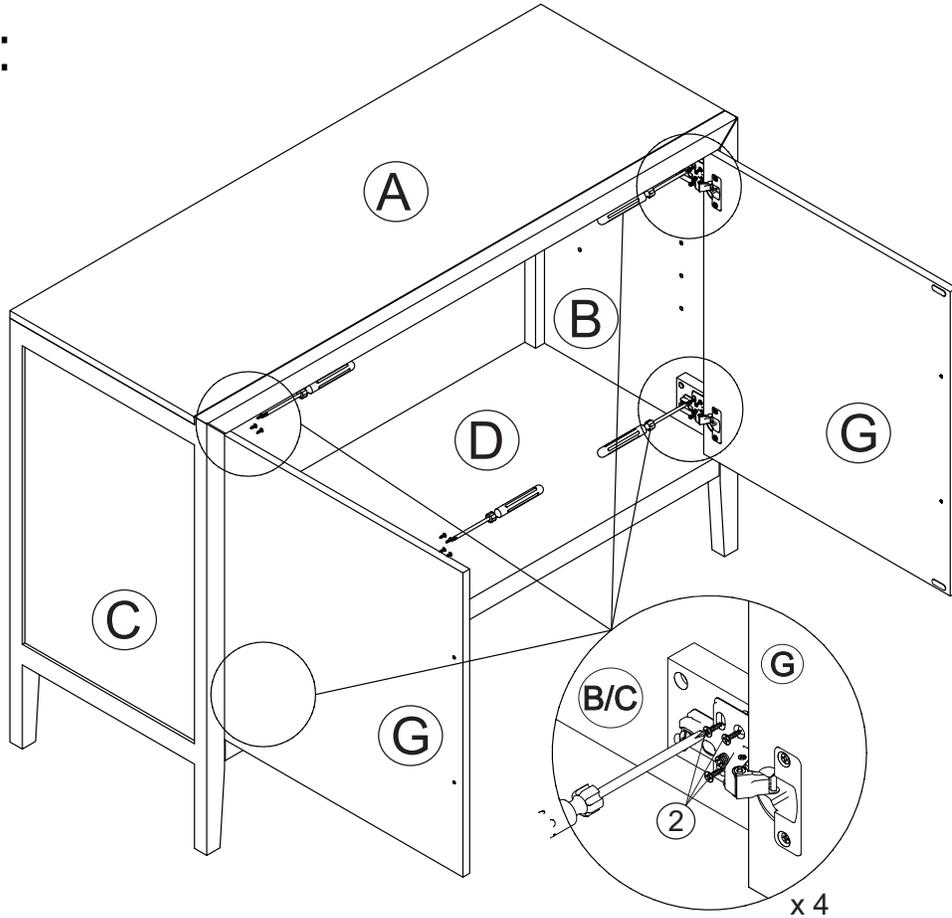


Flat screw

Ø 3 x 15 mm



② x 16

STEP 8:

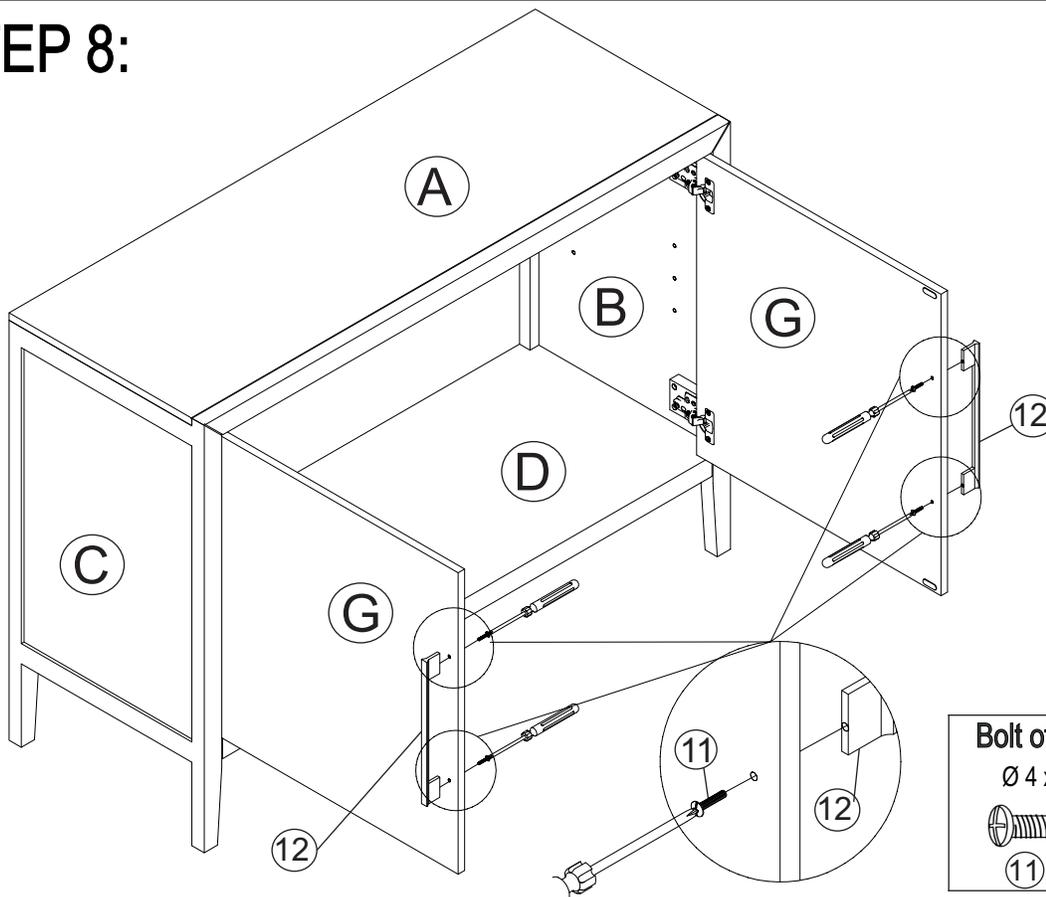

Bolt of Handle

Ø 4 x 22 mm



⑪ x 4

Handle




⑫ x 2


ASSEMBLY INSTRUCTION

ITEM NO. N711P410389

STEP 9:

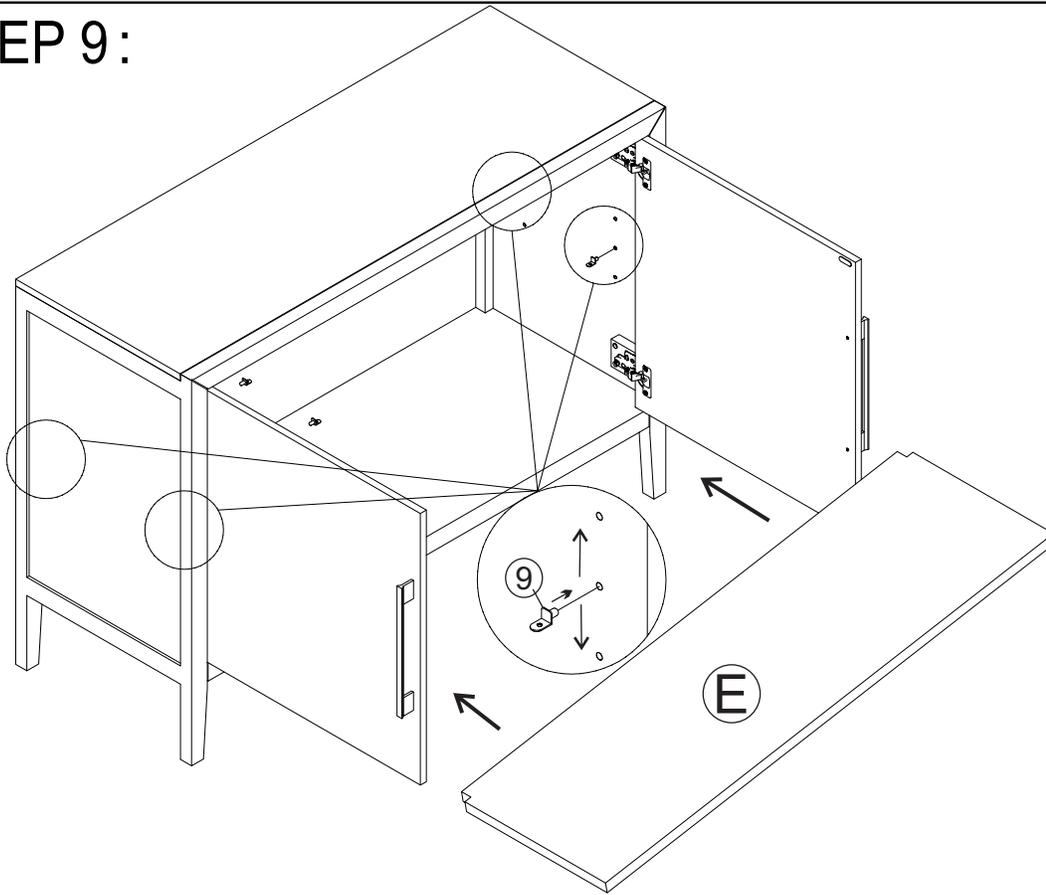

Patch support Shelf
Ø 6 x 9 mm
9 x 4


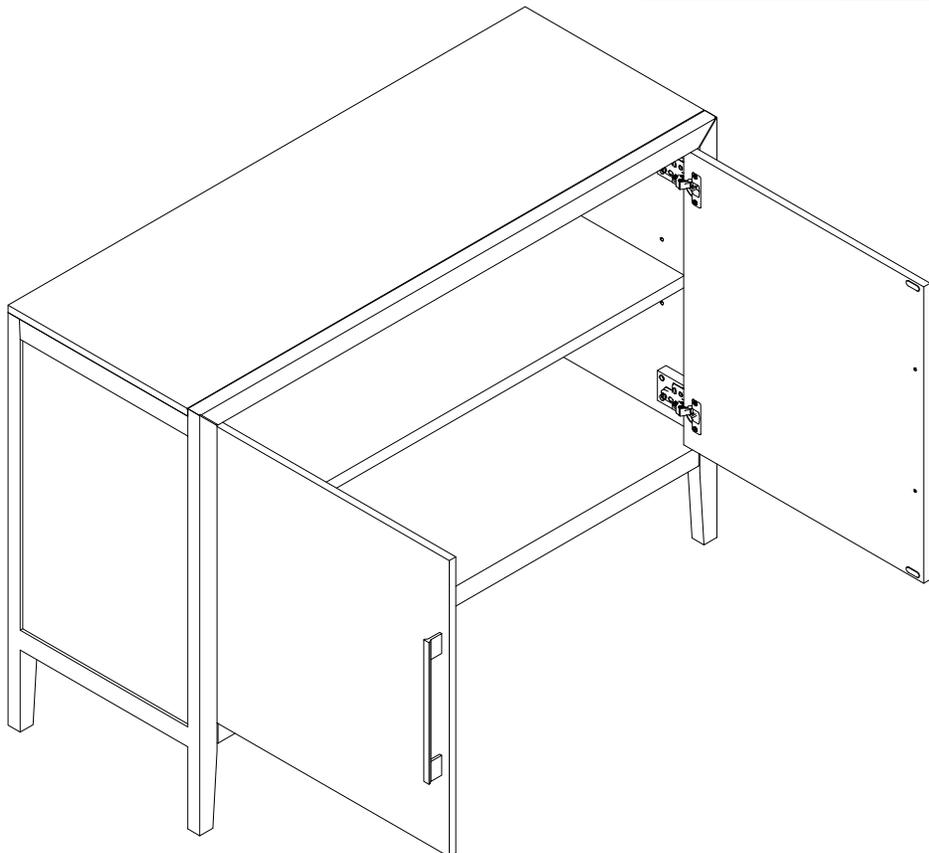


Finished!



ASSEMBLY INSTRUCTION

ITEM NO.N711P410389

STEP 10

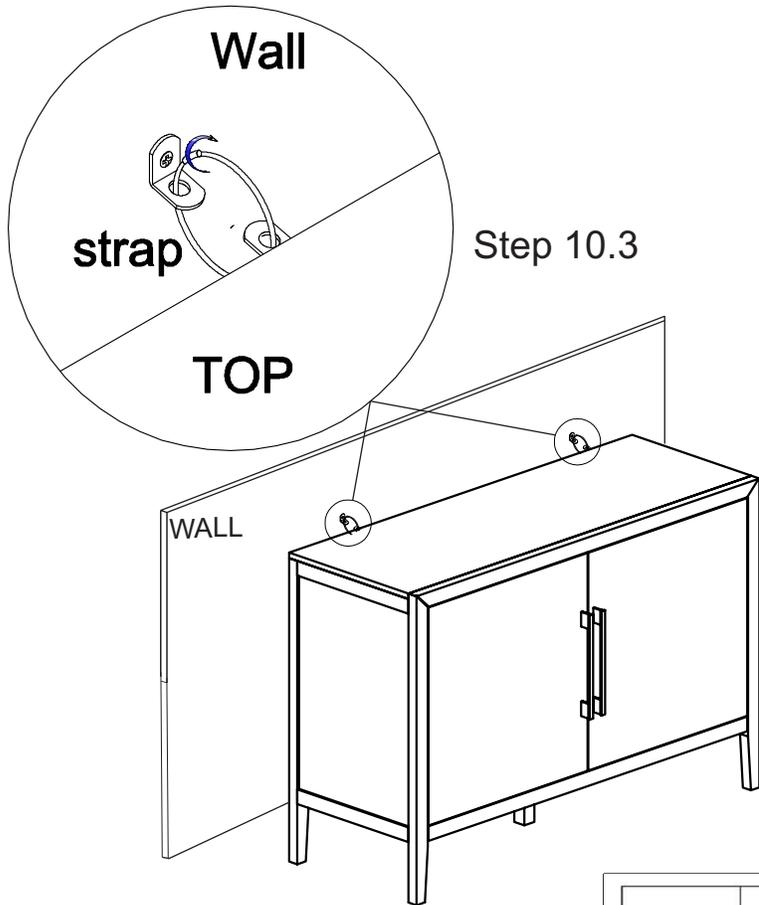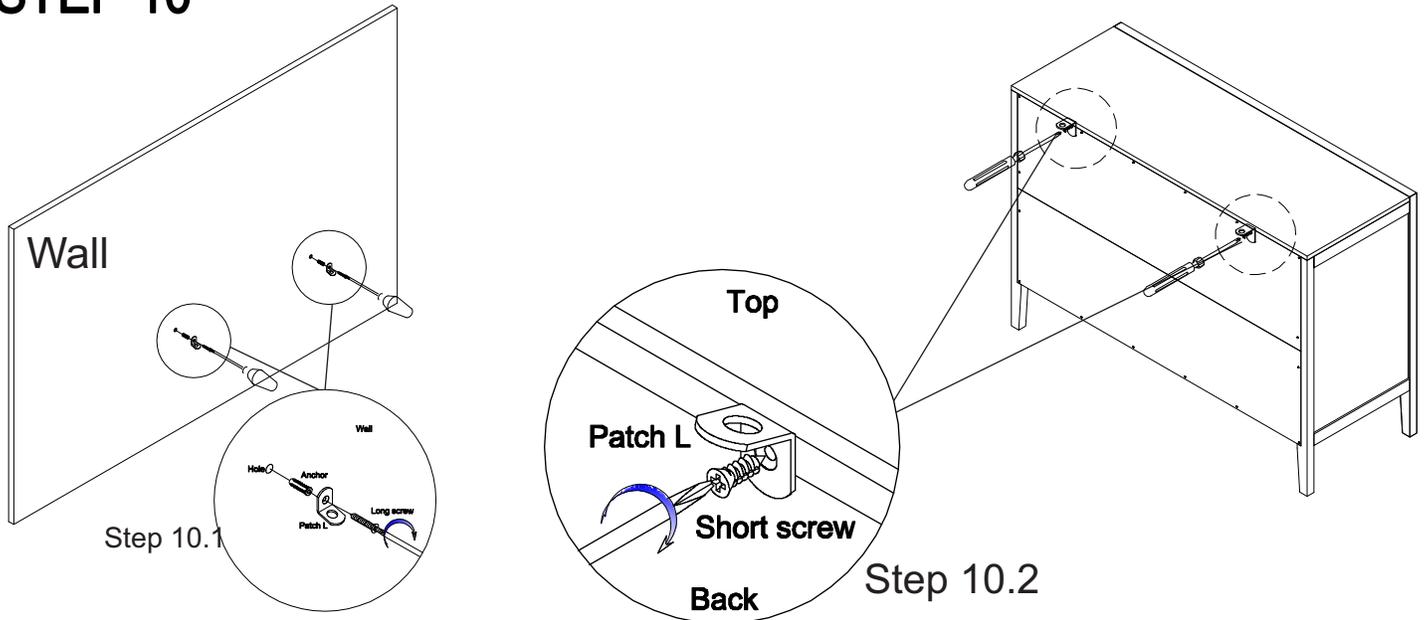

13 ANTITIP KIT =2SETS

  				
2 pcs	4 pcs	2 pcs	2 pcs	2 pcs


ASSEMBLY INSTRUCTION

ITEM NO. N711P410389


Is your cabinet door looking crooked or unevenly spaced?

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet and doors. Follow the instructions below:

If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

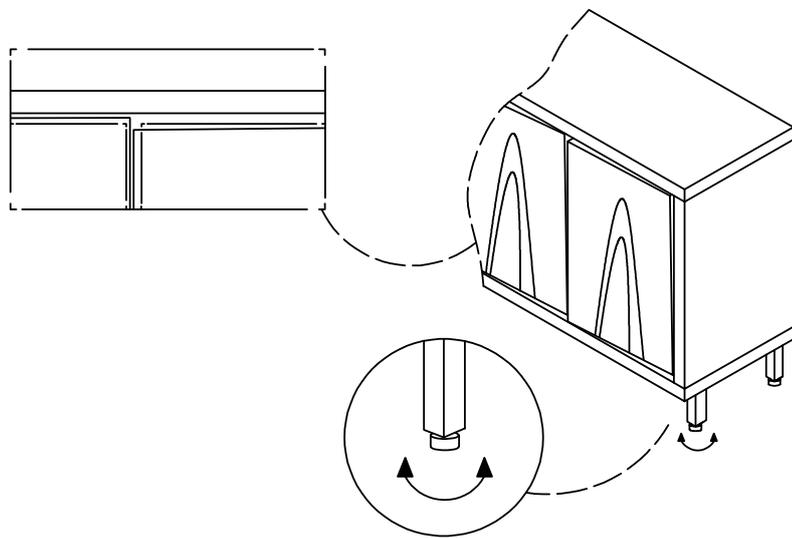

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

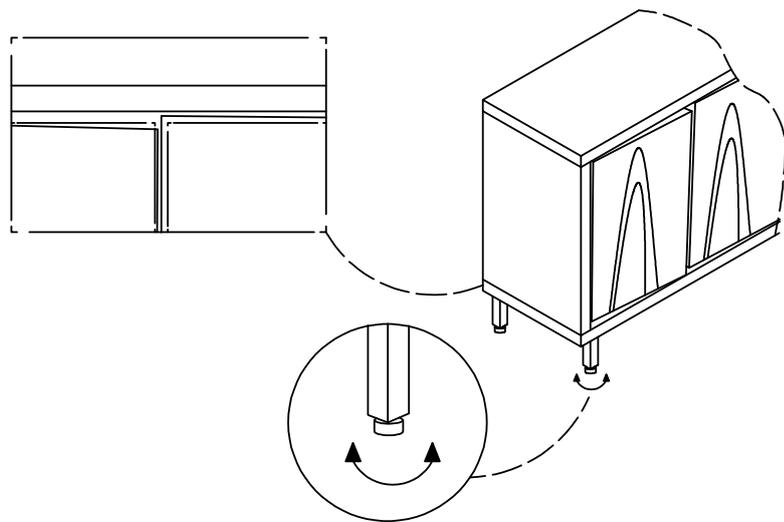


ASSEMBLY INSTRUCTION

ITEM NO. N711P410389

Is your cabinet door looking crooked or unevenly spaced?



Then you've come to the right place. Follow the illustrations below to get your cabinet door aligned and ready for action,

If your door is too low or too high...

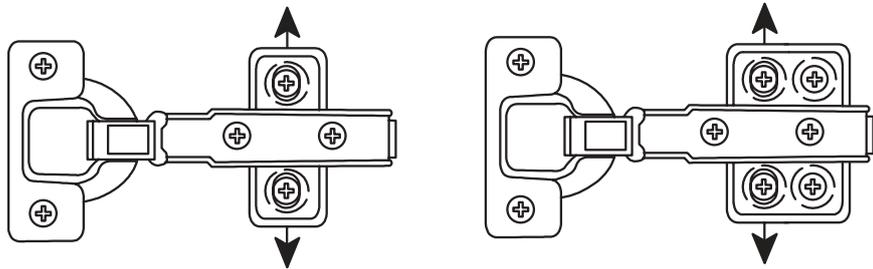


Loosen the height screws, then move the door up or down to make it level.

If the space between your doors is off...

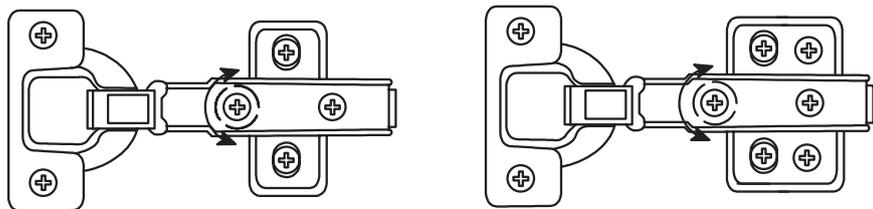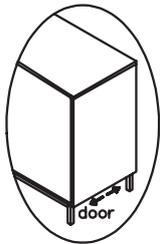

Loosen the side-to-side screws, then screw counter-clockwise to make the gap wider or clockwise to close any gaps.

If you need to adjust the depth of the doors...

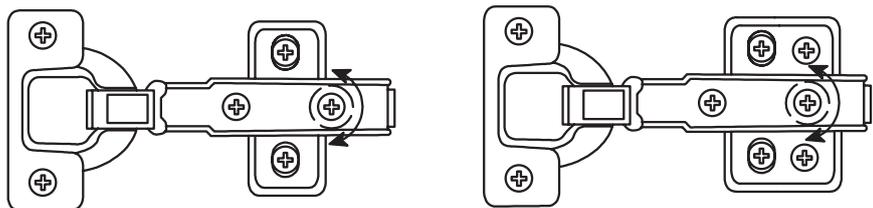

Adjust the in-and-out screws until the door is aligned with the side of the cabinet.