

4-TIER EGGSHELL WATER FOUNTAIN WITH LED LIGHTS GSI-781

Review all assembly and care information before using this product.
 Save this manual for future reference.


**Select a smooth, level surface to place the fountain.
 Assemble components on a soft, clean surface
 to avoid scratching or damaging the finish.**



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.




2-PERSON
 ASSEMBLY
 RECOMMENDED

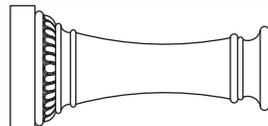No.	PARTS	QTY.
A	 Pedestal	1
B	 Large Tier	1
C	 Electric Submersible Pump	1
D	 LED Lights (may be built into pump)	1
E	 Column	1
F	 Third Tier	1
G	 Second Tier	1
H	 Topper	1
I	 AC Adapter	1



NOTE: The water tubing is built into the topper. Take care when handling the water tube; detaching the water tube from the decorative top will damage the fountain and void the product warranty.

ASSEMBLY

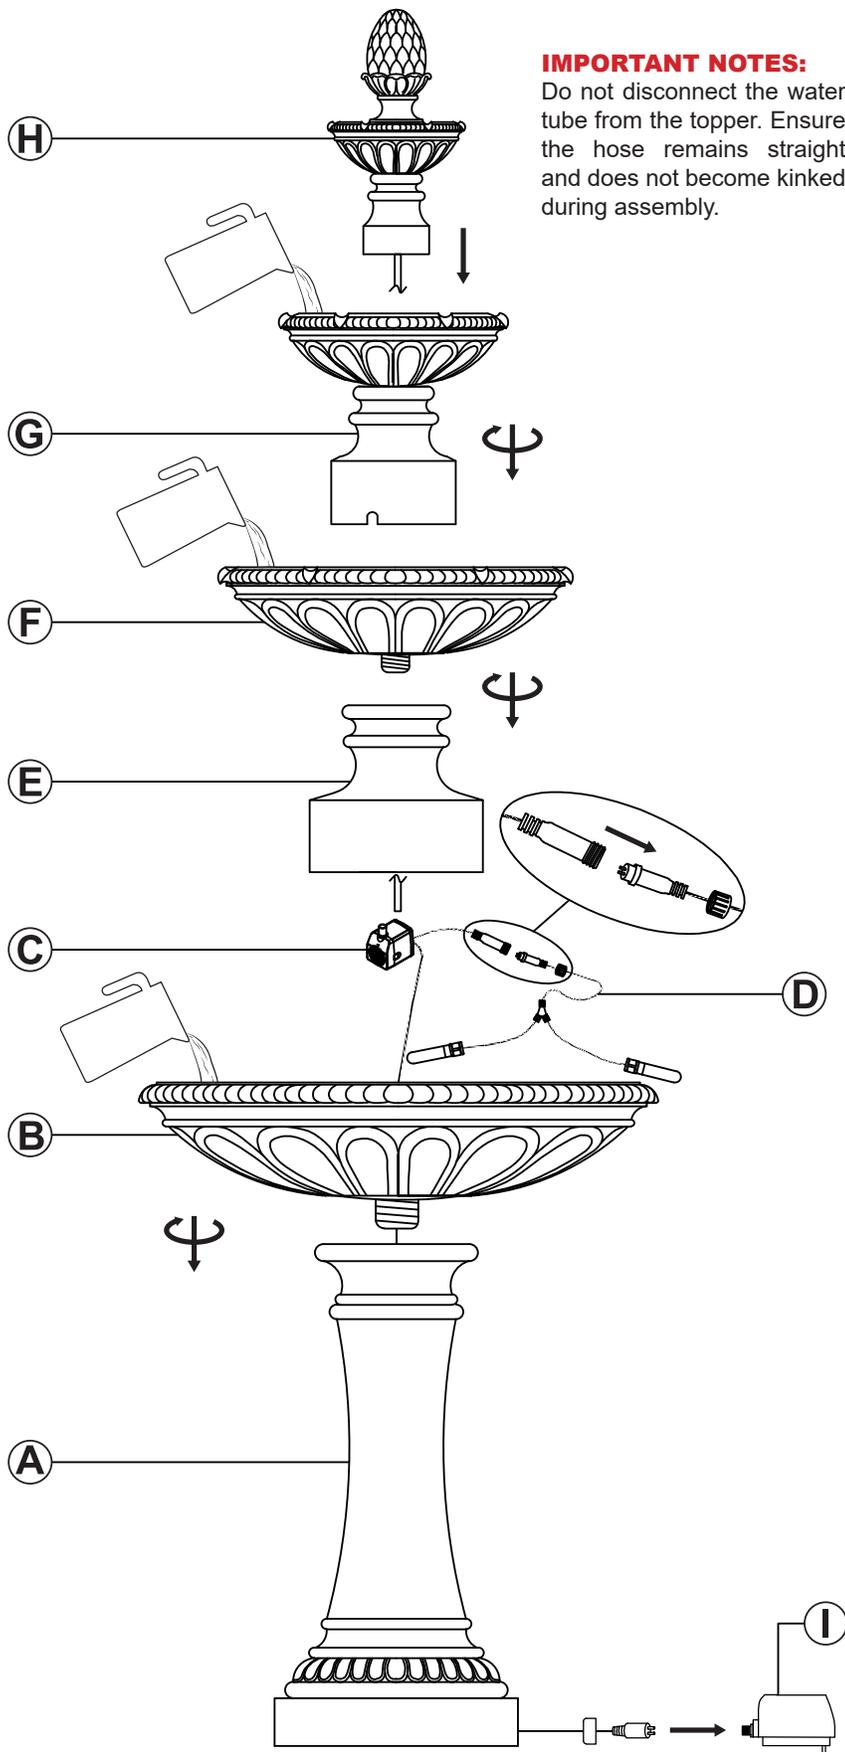

IMPORTANT NOTES:

Do not disconnect the water tube from the topper. Ensure the hose remains straight and does not become kinked during assembly.

1. Align Large Tier (B) with Pedestal (A), twist to lock in place.
2. Place the Electric Submersible Pump (C) into Large Tier (B). Run the long power cord through the tube in the large tier, through the pedestal, and under the groove in the bottom of the pedestal.
3. Connect LED Lights (D) to Electric Submersible Pump (C). Press the rubber base on the bottom of the lights into the metal clips in the bottom of the large tier.
4. Run the water tube that is built into Topper (H) through Second Tier (G) and twist to lock the pieces together.
5. Connect Second Tier (G) to Third Tier (F), twist to lock pieces together.
6. Connect Third Tier (F) to Column (E), twist to lock.
7. With assistance, firmly connect the pump to the water tube.
8. Ensuring the light cords are safely within the grooves on the bottom of the large column, place the assembled tiers onto Large Tier (B), twist to lock.
9. Firmly connect the AC Adapter (I) to the pump power cord.
10. Fill all tiers with enough water to keep the pump fully submerged during operation.
11. Plug the power cord into a properly grounded GFCI outlet.


IMPORTANT NOTES:

When first plugged in, there may be air trapped in the pump. It may take several minutes for trapped air to escape, allowing water to flow.

If the water is not flowing evenly, the fountain may not be level. Place the included shims between tiers and/or beneath the pedestal to help level the fountain; adjust as needed.

⚠ IMPORTANT SAFETY INFORMATION ⚠

- Fountains may splash or leak; always protect surfaces that can be damaged by water. Do not use fountain in areas that can be damaged if water splashes or leaks.
- Use a drip loop on the power cord to prevent water from reaching electrical outlets (see diagram).
- Keep fountain out of reach of children and pets.
- Make sure the power cord is away from traffic areas.
- Keep power cord away from all heat sources. Do not use electrical cords in areas with high temperatures.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Always unplug the power supply before cleaning and maintaining the fountain and the pump.

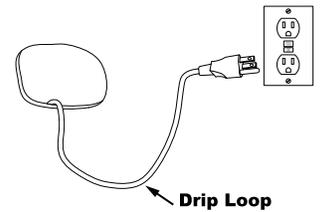

Drawing is for visual reference only, power cord access and adapter vary by fountain.

Care & Maintenance

- For outdoor use only. Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Some climates and weather conditions increase water evaporation, requiring water to be added more frequently. Frequently check water levels during times of high temperatures, wind, and long-term exposure to direct sunlight to ensure the pump does not run dry.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required. Tap water is okay to use, but avoid heavily chlorinated water as it may damage the pump and cause the finish to peel.
- Periodically change the water to keep the water, fountain, and pump clean. Remove scale and buildup regularly.
DO NOT use bleach, chlorine, abrasive cleaners, or pressure washers.
- Take care when handling the pump; only pick it up by the body of the pump, never the power cord.
- During freezing weather, drain the fountain, disconnect the pump, and store indoors to prevent cracking, pump damage, or lighting malfunctions.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

Troubleshooting

- If water is not flowing within several moments of the fountain being plugged in, the pump may have air bubbles in it, which can prevent water from circulating properly and can cause excess pump noise.
- Ensure that the pump is fully submerged underwater; add water as necessary.
- Inspect tubing for obstructions, remove trapped air from the pump housing, and adjust the flower control as needed.
- Ensure the AC adapter, pump, and light connections are secure, the cord is not damaged, and the outlet is functioning properly.

If you experience issues with assembly or the product was damaged during transit, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

Any modification to the product or failure to follow recommended care will void the product warranty.

⚠ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.