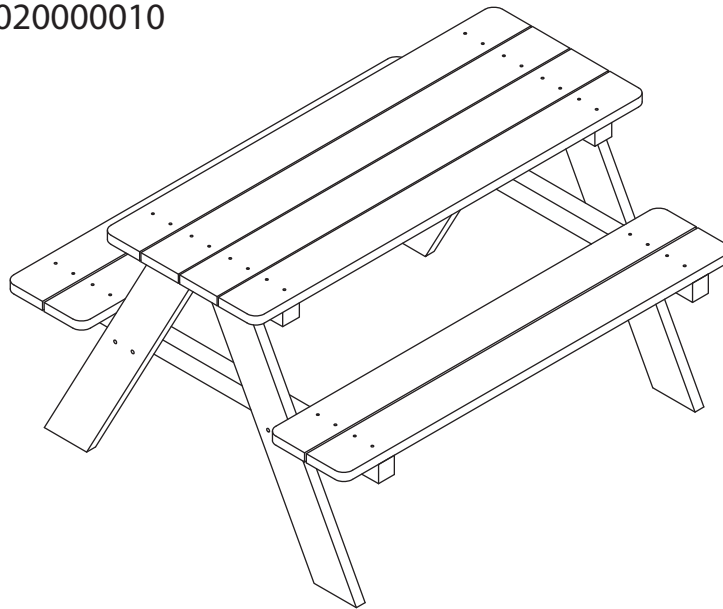




Kids Picnic Table TB0020000010



Care & Maintenance:

This is an Unfinished, Solid Fir Wood Kids Picnic Table. It is **HIGHLY RECOMMENDED** that you treat the table with a **WEATHERPROOF COATING** (stain or paint) before use, and continue once every year, to increase the life expectancy and maintain the look of the table. Please consult with your local hardware store on the weatherproof coating options for the chair.

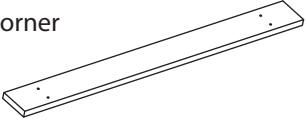
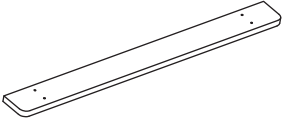
 
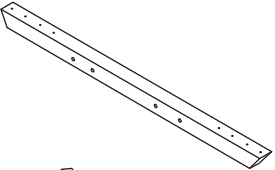
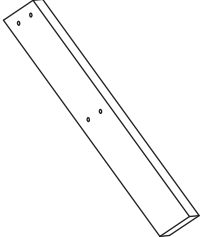
- Cover the table during harsh weather to keep it from weathering.
- Rinse any panels with water to clean.


 
WARNING: THIS PRODUCT IS FOR ADULT ASSEMBLY ONLY!



1 Year Limited Warranty

For customer support please
e-mail: service@merryproducts.com

Weight Capacity: 100 lbs


Kids Picnic Table Components		
Straight Corner A1		2 pcs
Round Corner A2		6 pcs
Table Top Support B		2 pcs
Seat Support C		2 pcs
Leg D		4 pcs

Kids Picnic Table Hardware		
a	 ø3.5x45	32 pcs
b	 ø6x45	16 pcs

 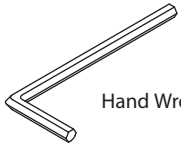
Tools Recommended	Tools Supplied
 Screwdriver	 Hand Wrench

Note - Read all instructions before starting.
 - Do not completely tighten any bolts until the unit is fully assembled and sitting on a level surface.

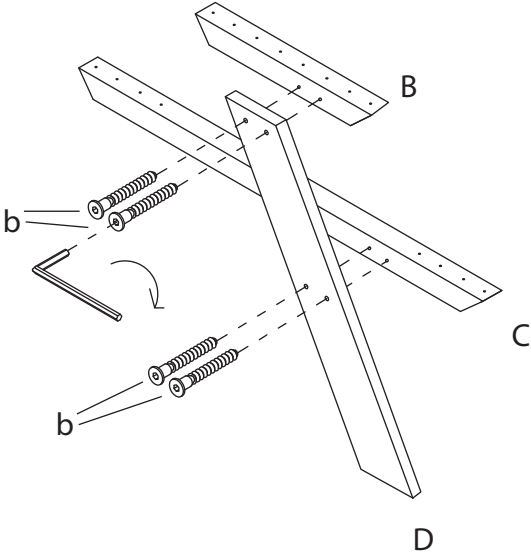
Step 1



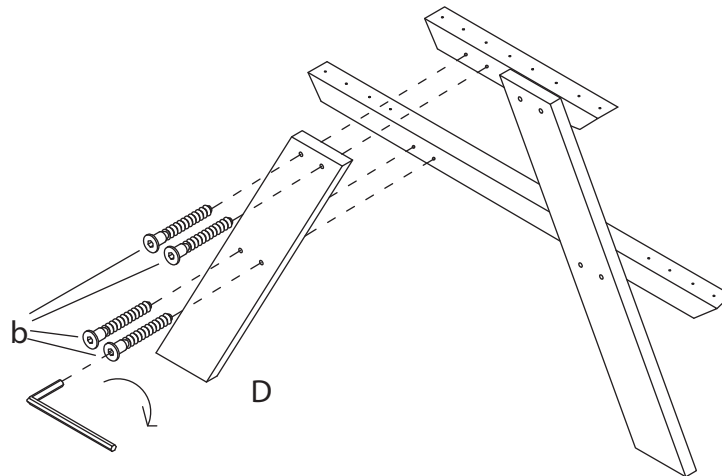Step 2




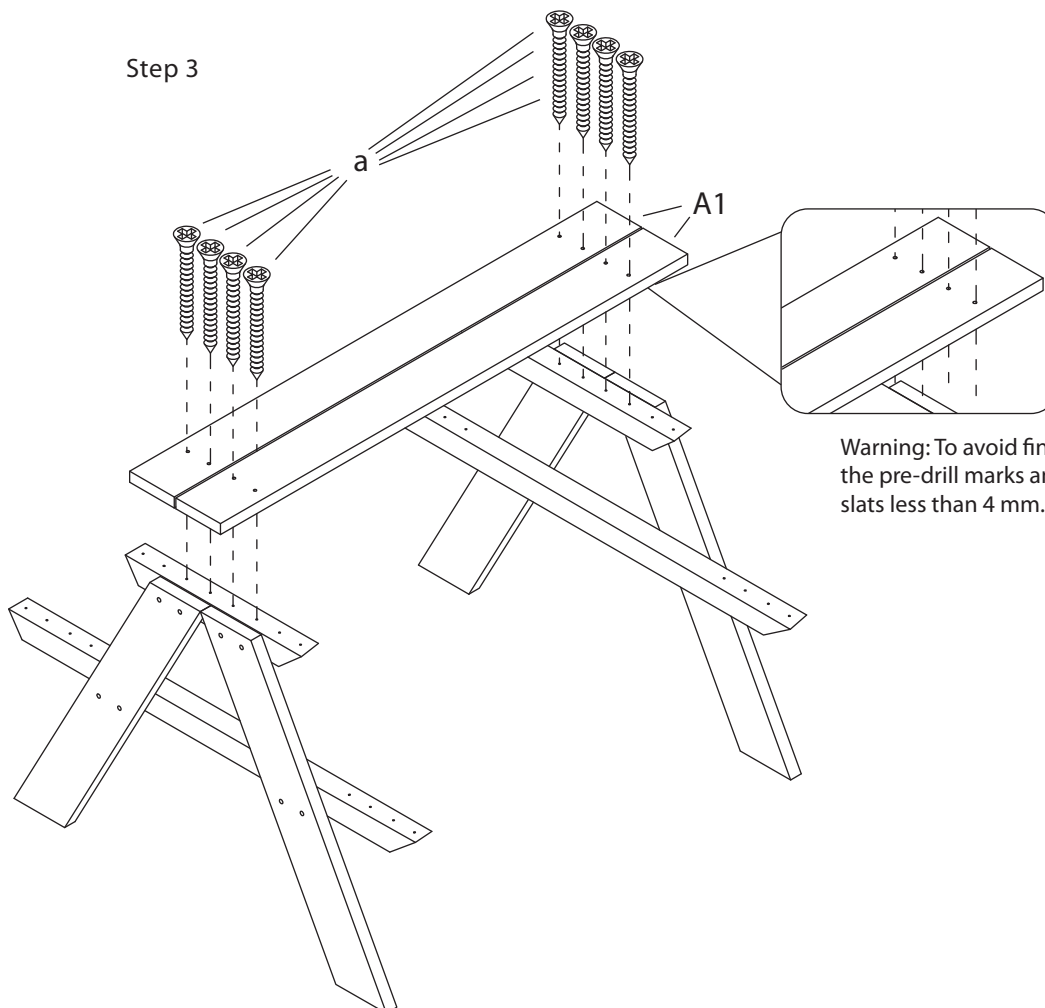Step 3




Warning: To avoid finger entrapment please following the pre-drill marks and ensure the gap between slats less than 4 mm.

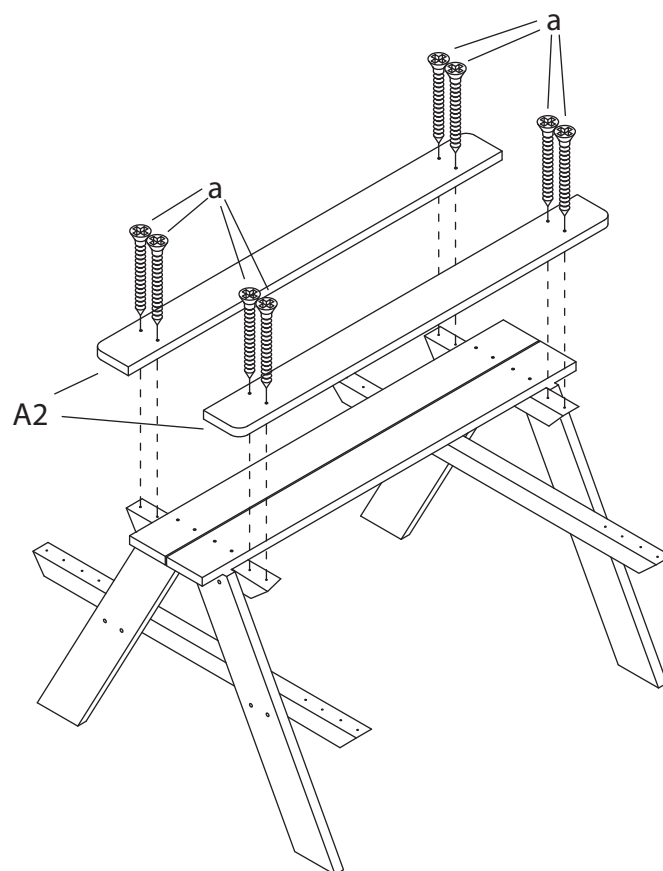Step 4



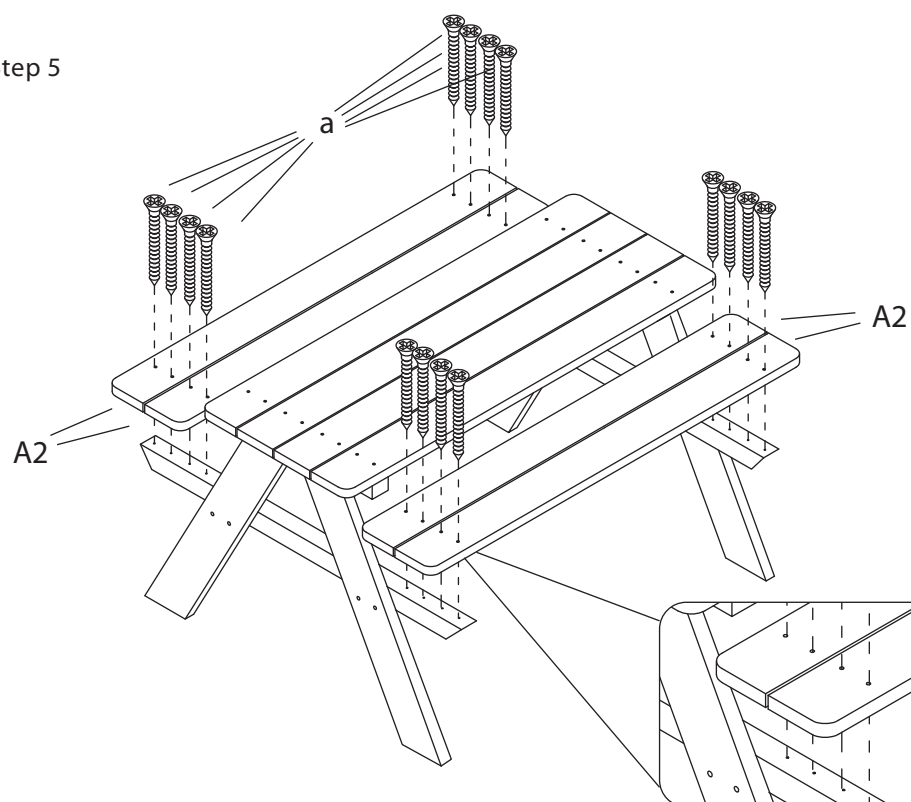Step 5



Rounded corners must go towards the outside.

Warning: To avoid finger entrapment please following the pre-drill marks and ensure the gap between slats less than 4 mm.